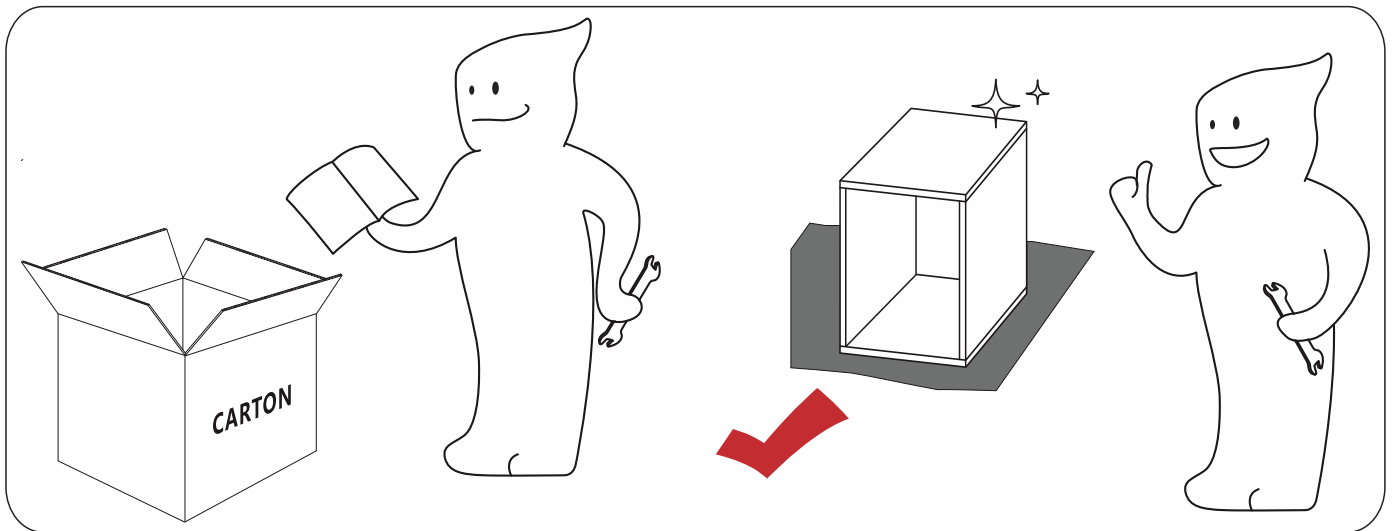
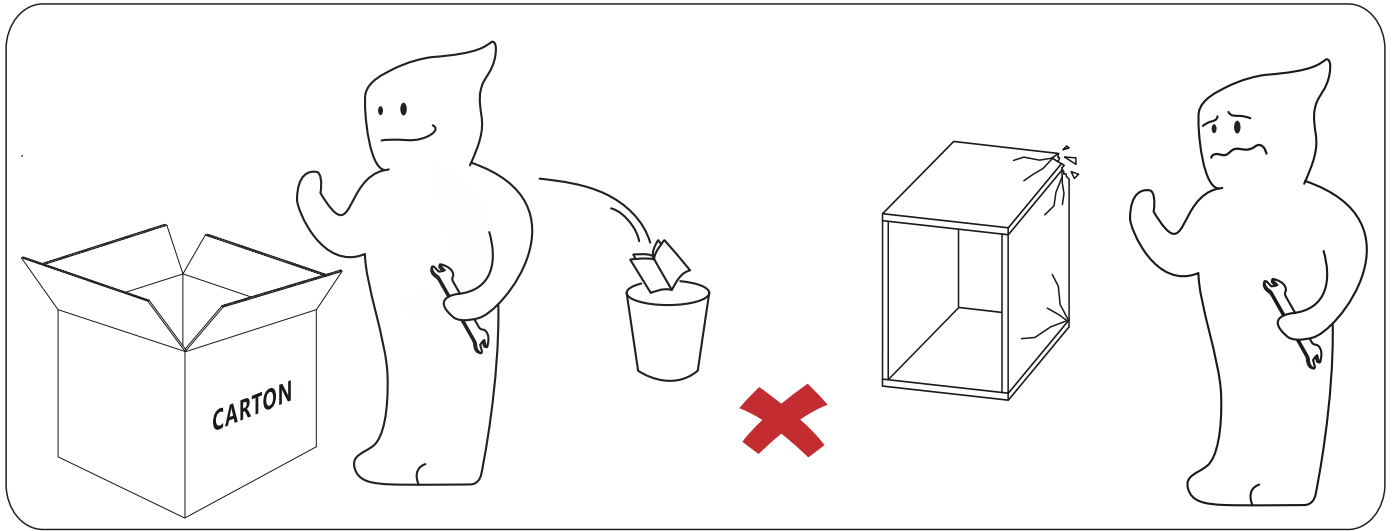


Upholstered Platform Bed with Tufted Wingback Headboard





Please follow the instruction manuals and use a pad to protect the product during your assembly.



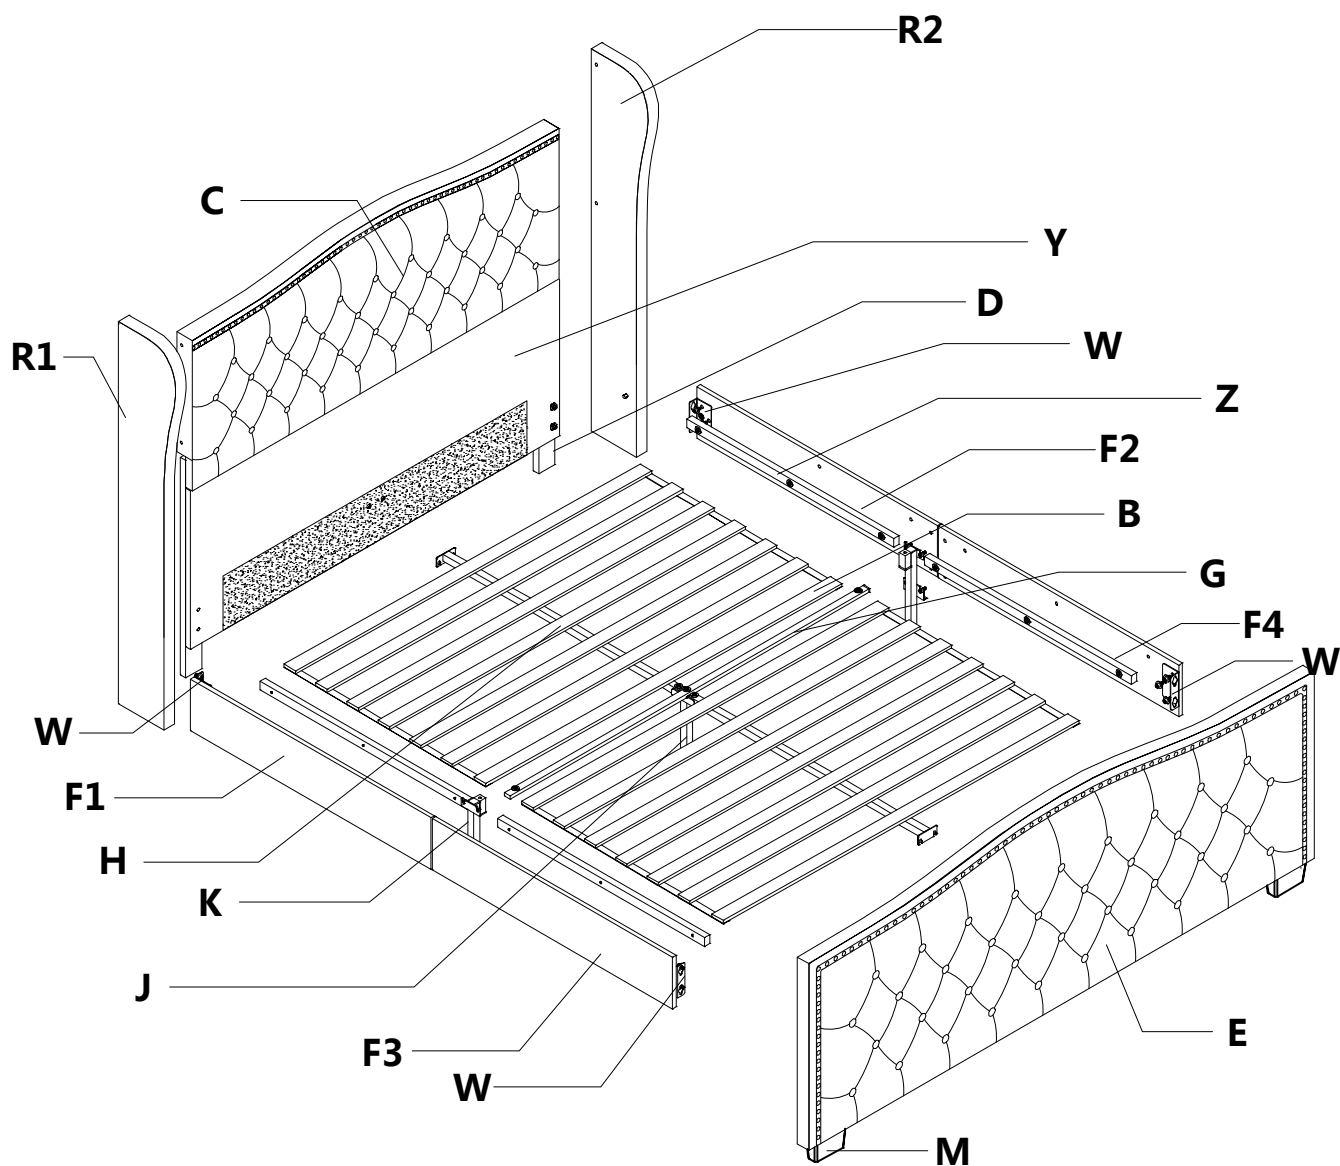
Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

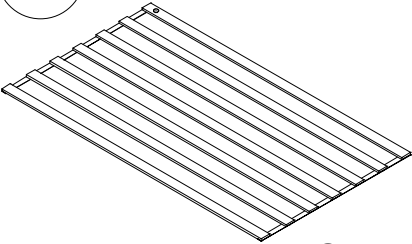
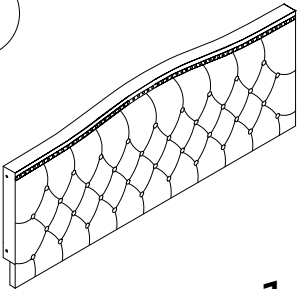

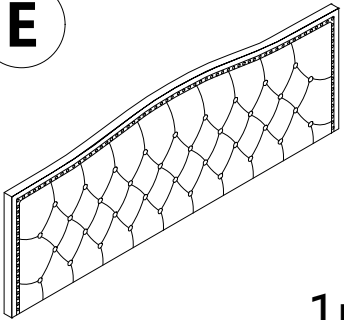
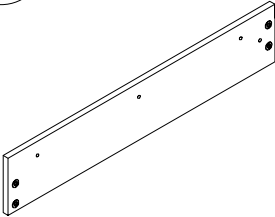
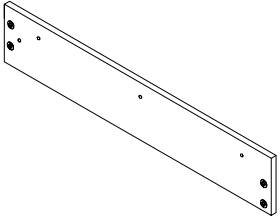
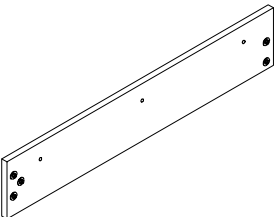
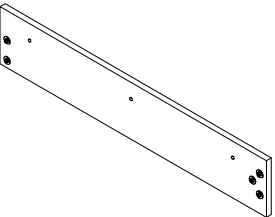
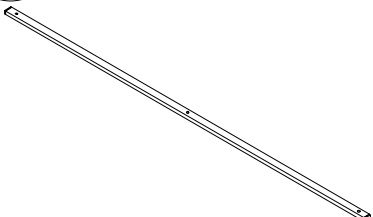
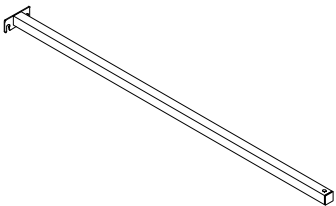


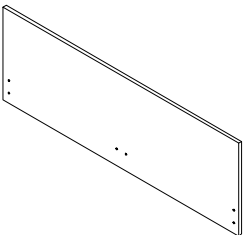
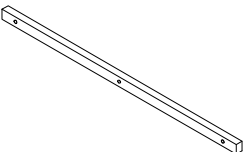


For easier and better assembly, **2** or more adults are required.

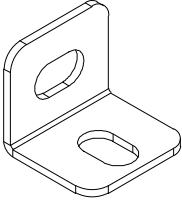


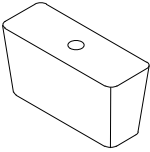

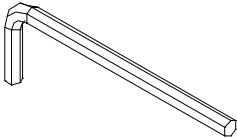
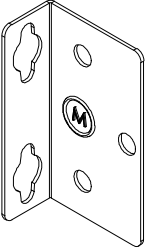
ASSEMBLY INSTRUCTIONS



BED FRAME PARTS LIST

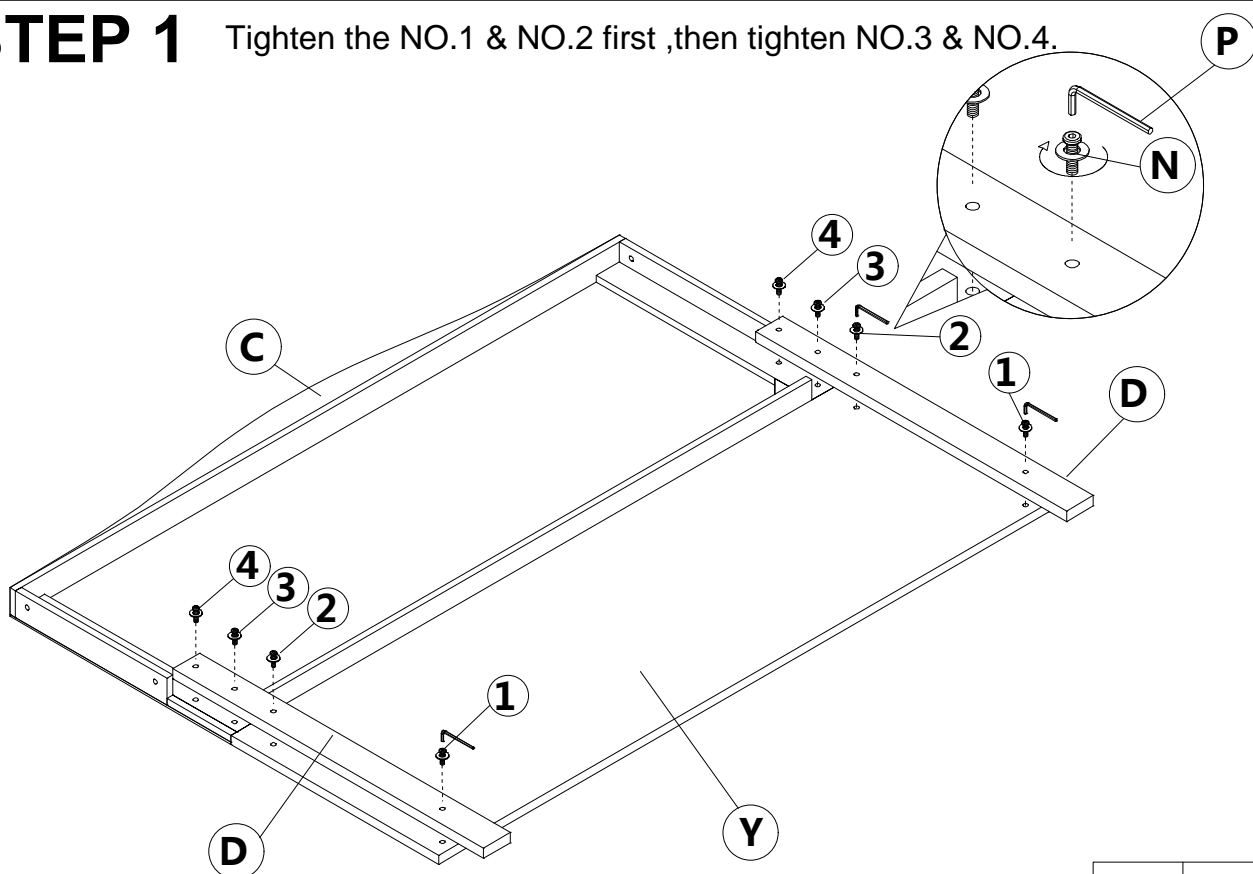
<p>B</p>  <p>2pcs</p>	<p>C</p>  <p>1pc</p>	<p>D</p>  <p>2pcs</p>
<p>E</p>  <p>1pc</p>	<p>F1</p>  <p>1pc</p>	<p>F2</p>  <p>1pc</p>
<p>F3</p>  <p>1pc</p>	<p>F4</p>  <p>1pc</p>	<p>G</p>  <p>1pc</p>
<p>H</p>  <p>2pcs</p>	<p>R1</p>  <p>1pc</p>	<p>R2</p>  <p>1pc</p>
<p>Y</p>  <p>1pc</p>	<p>Z</p>  <p>4pcs</p>	



FITTING PARTS LIST

<div data-bbox="132 230 220 315">I</div>  <div data-bbox="469 539 555 593">1pc</div>	<div data-bbox="590 230 678 315">J</div>  <div data-bbox="927 539 1013 593">1pc</div>	<div data-bbox="1048 230 1136 315">K</div>  <div data-bbox="1361 533 1469 586">2pcs</div>
<div data-bbox="132 618 220 703">M</div>  <div data-bbox="440 925 549 978">2pcs</div>	<div data-bbox="590 618 678 703">N</div>  <div data-bbox="571 925 1002 987">M8 X40mm 33pcs+1pc</div>	<div data-bbox="1048 618 1136 703">P</div>  <div data-bbox="1029 925 1477 987">M8 Spanner 1pc</div>
<div data-bbox="116 1014 204 1099">W</div>  <div data-bbox="451 1317 560 1370">4pcs</div>		

ASSEMBLY INSTRUCTIONS

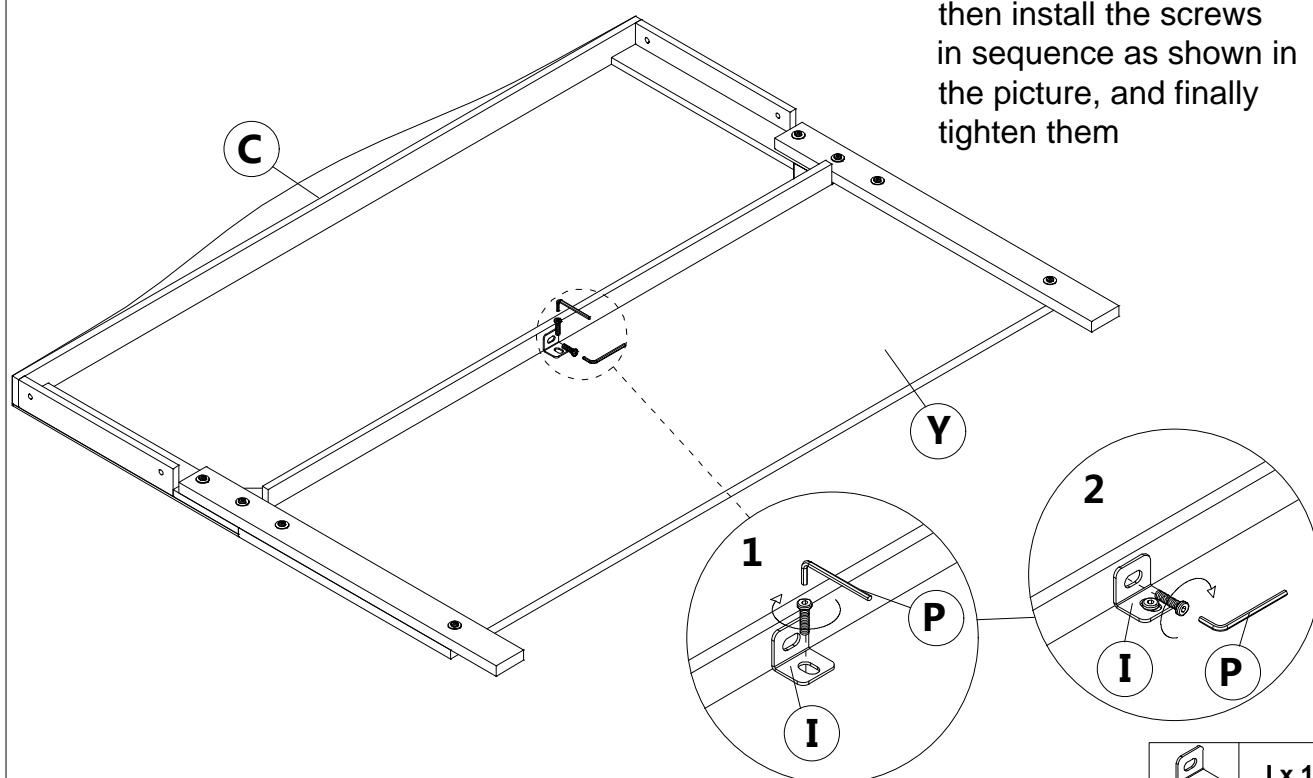
STEP 1 Tighten the NO.1 & NO.2 first ,then tighten NO.3 & NO.4.





	N x 8pcs
	P x 1pc

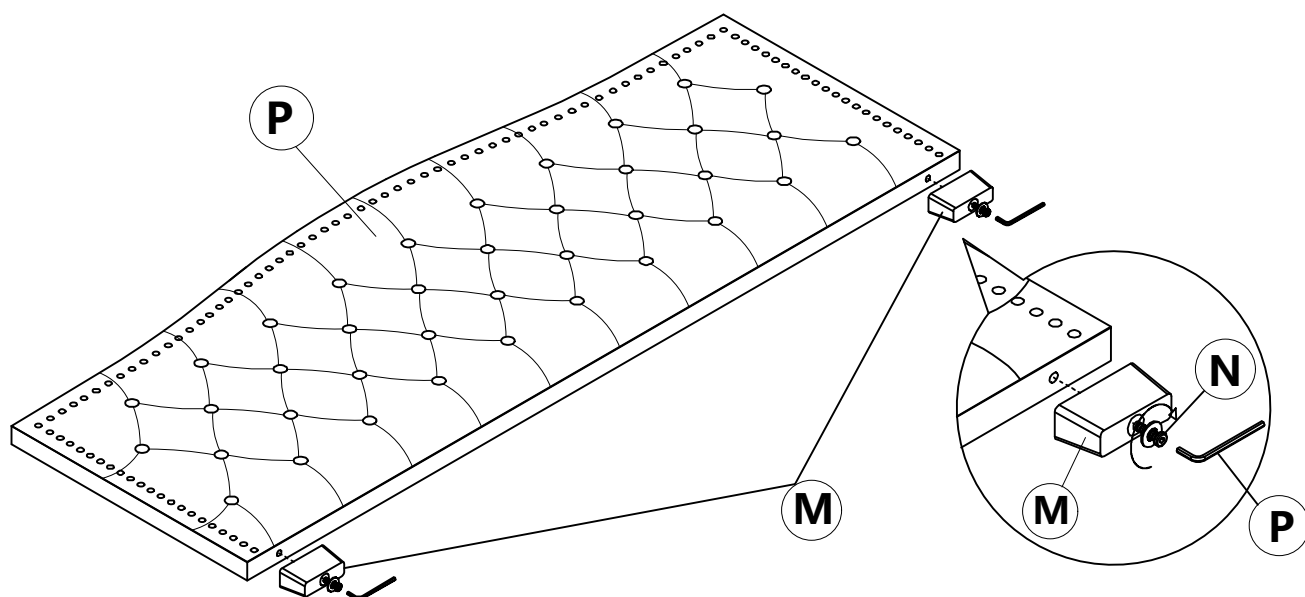
STEP 2



First loosen the screws, then install the screws in sequence as shown in the picture, and finally tighten them



	I x 1pc
	P x 1pc

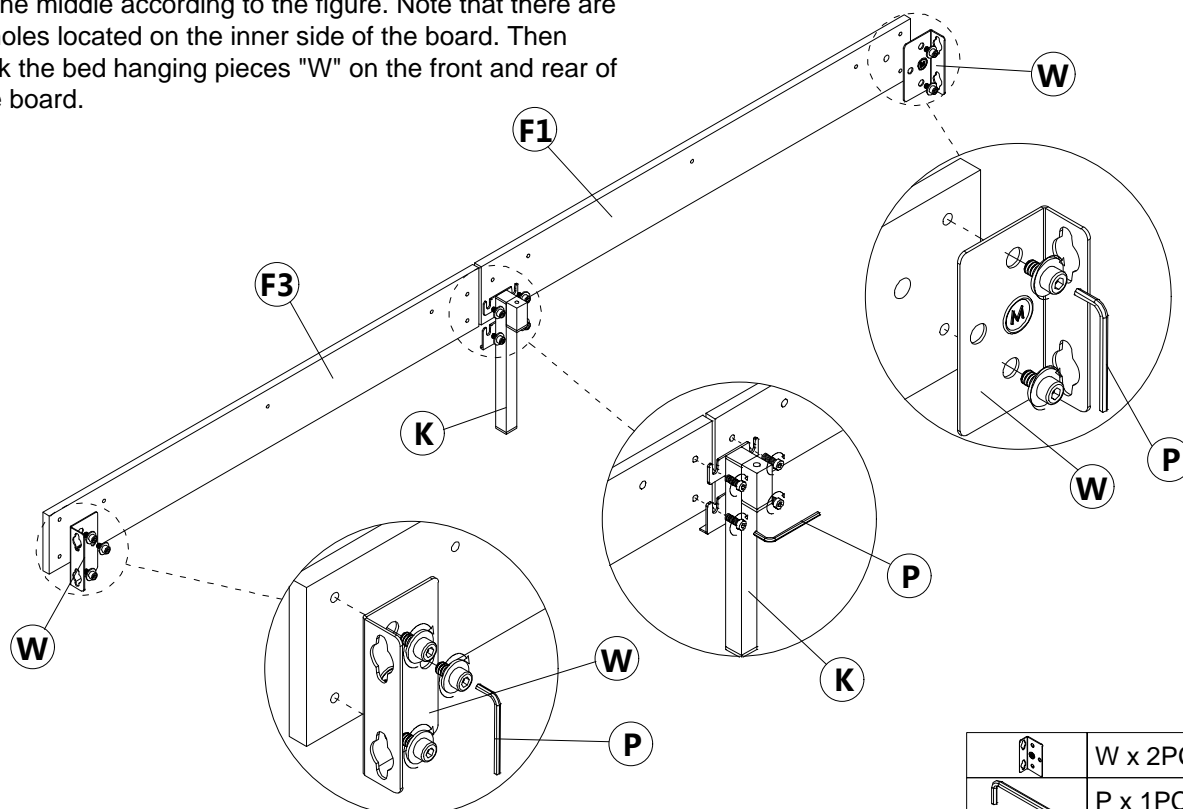
STEP 3





	N x 2pcs
	P x 1pc

STEP 4

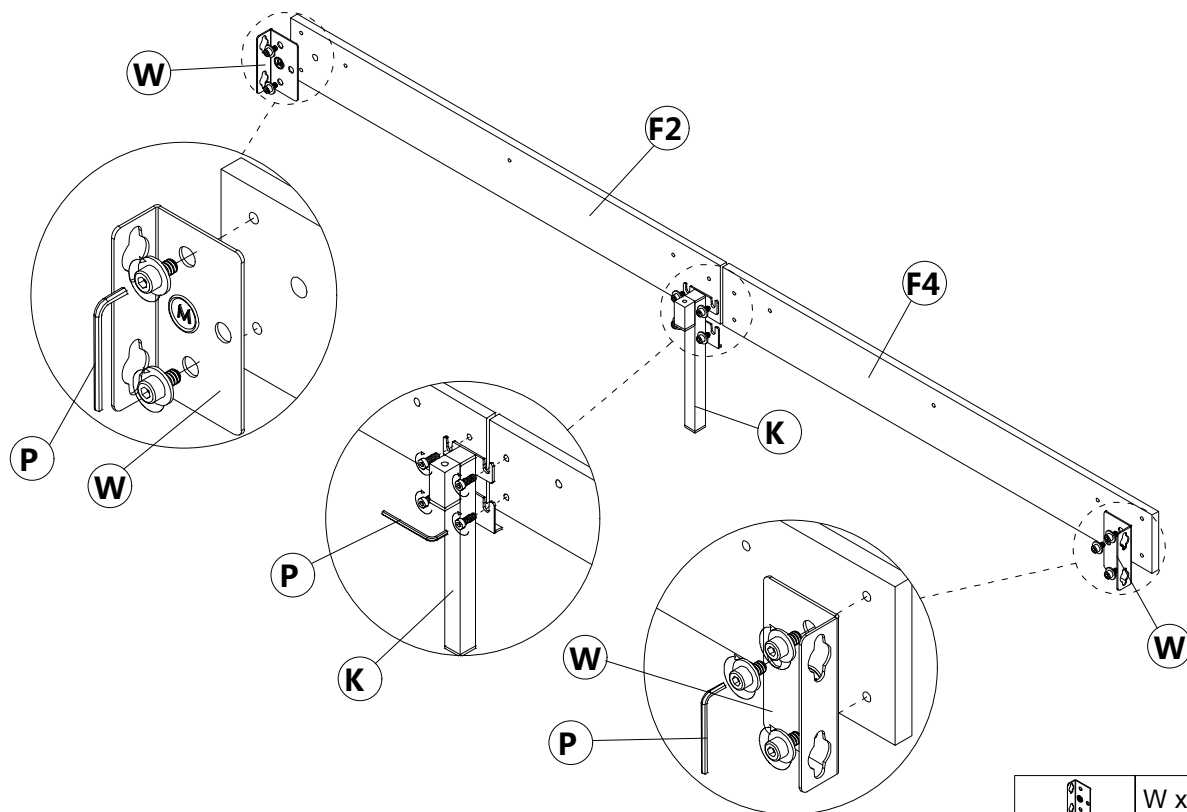
Take out parts "F1" and "F3", and lock the iron frame foot "K" in the middle according to the figure. Note that there are 2 holes located on the inner side of the board. Then lock the bed hanging pieces "W" on the front and rear of the board.



	W x 2PCS
	P x 1PC

STEP 5

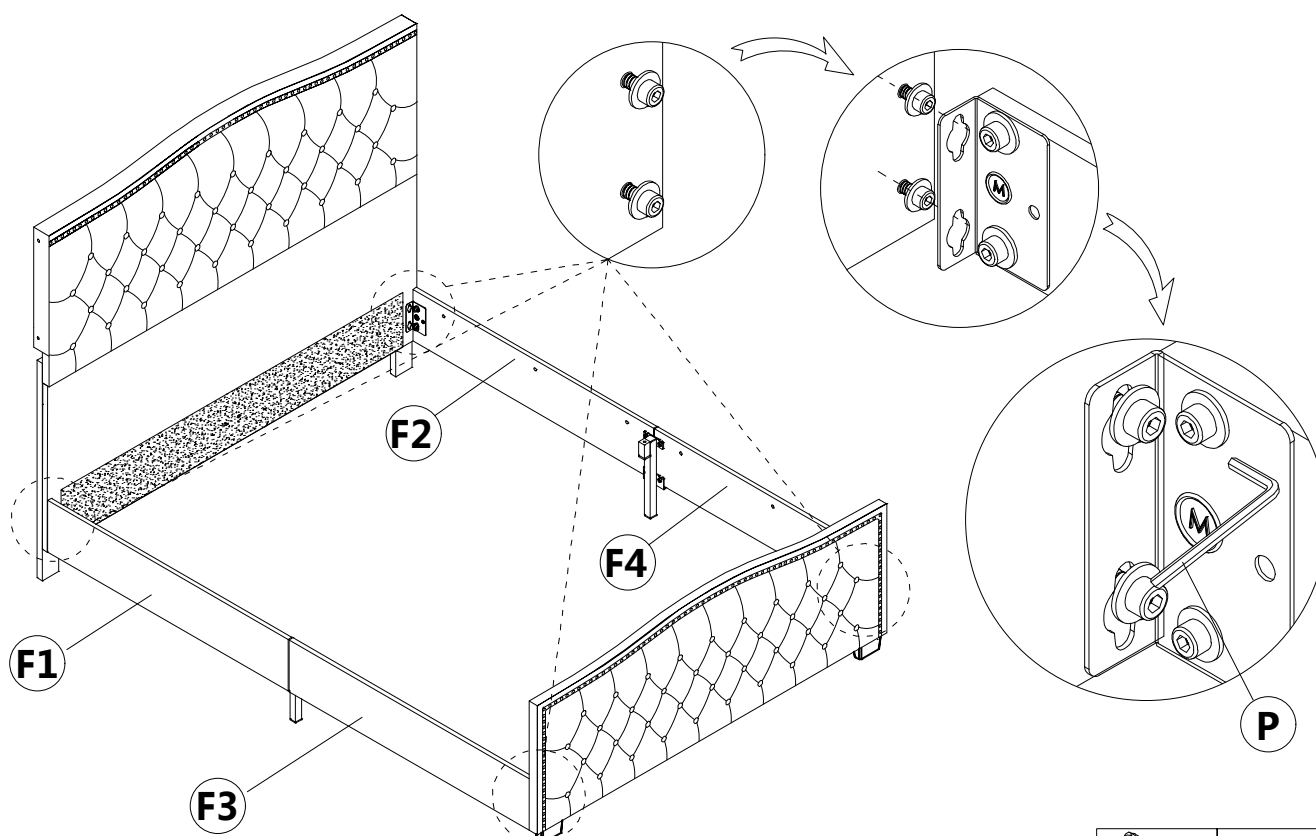
Same as Step 4



	W x 2PCS
	P x 1PC

STEP 6

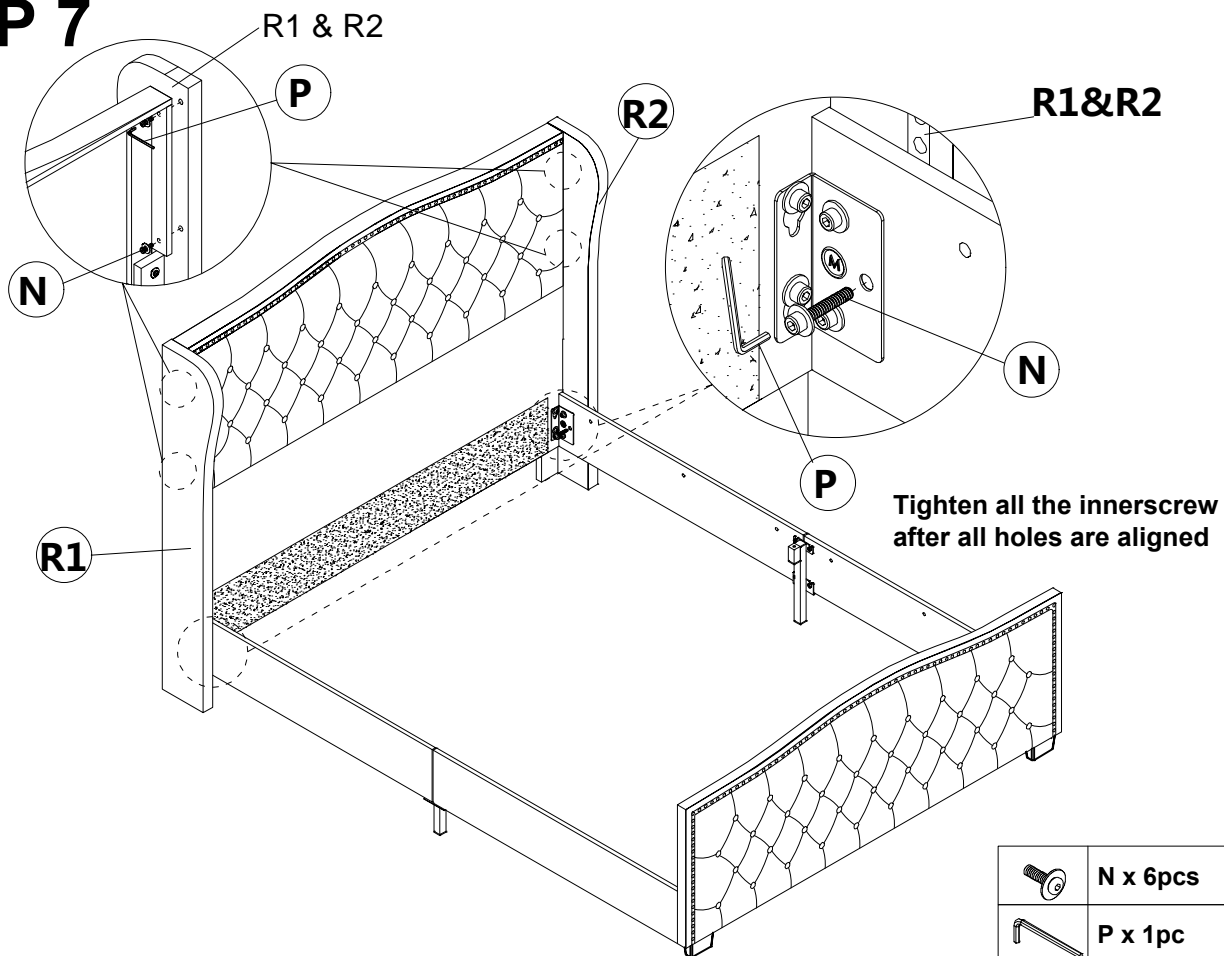
Loosen the screw of headboard side leg and both sides of footboard, then hang the bracket on and tighten innerscrew.



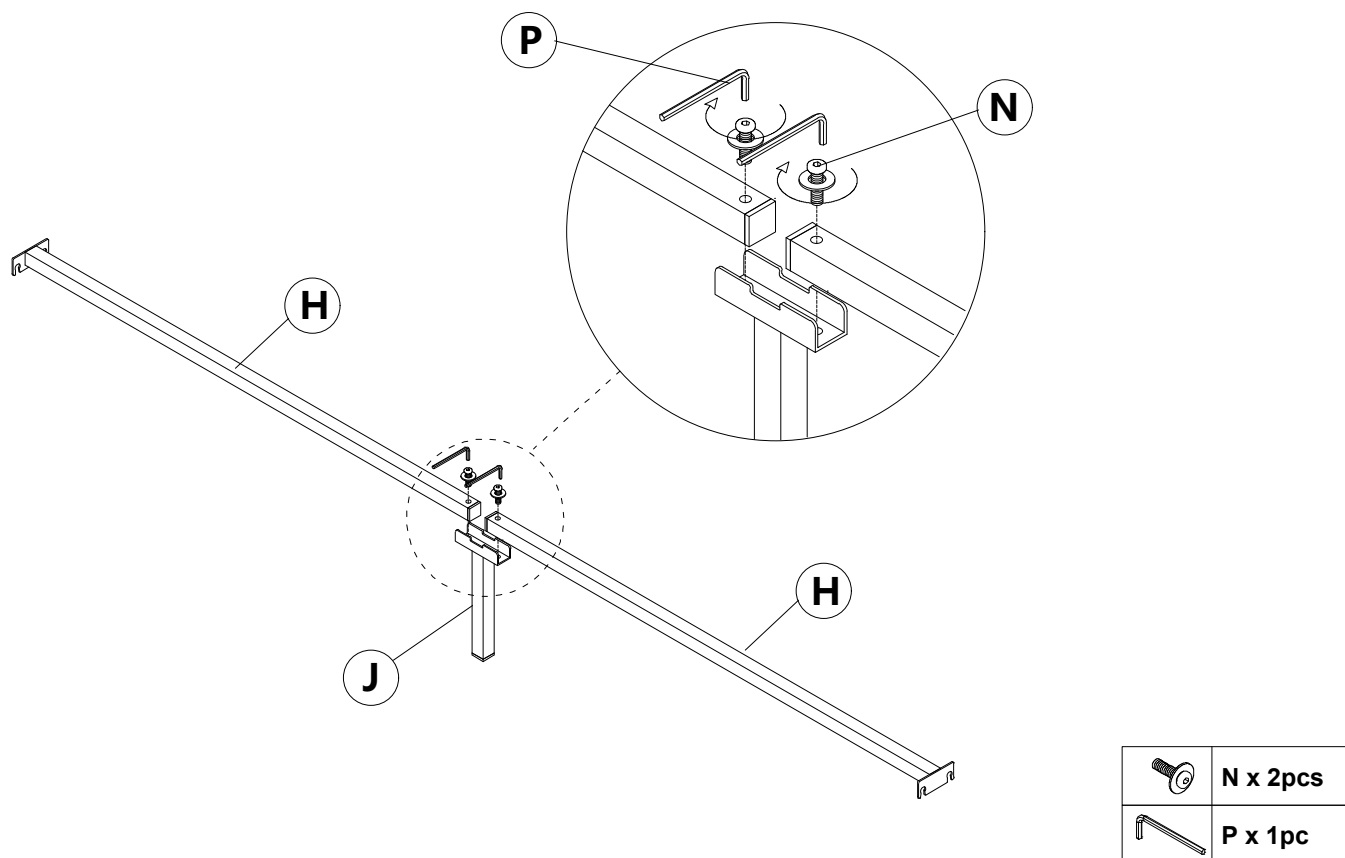
	P x 1PC
--	---------

ASSEMBLY INSTRUCTIONS

STEP 7

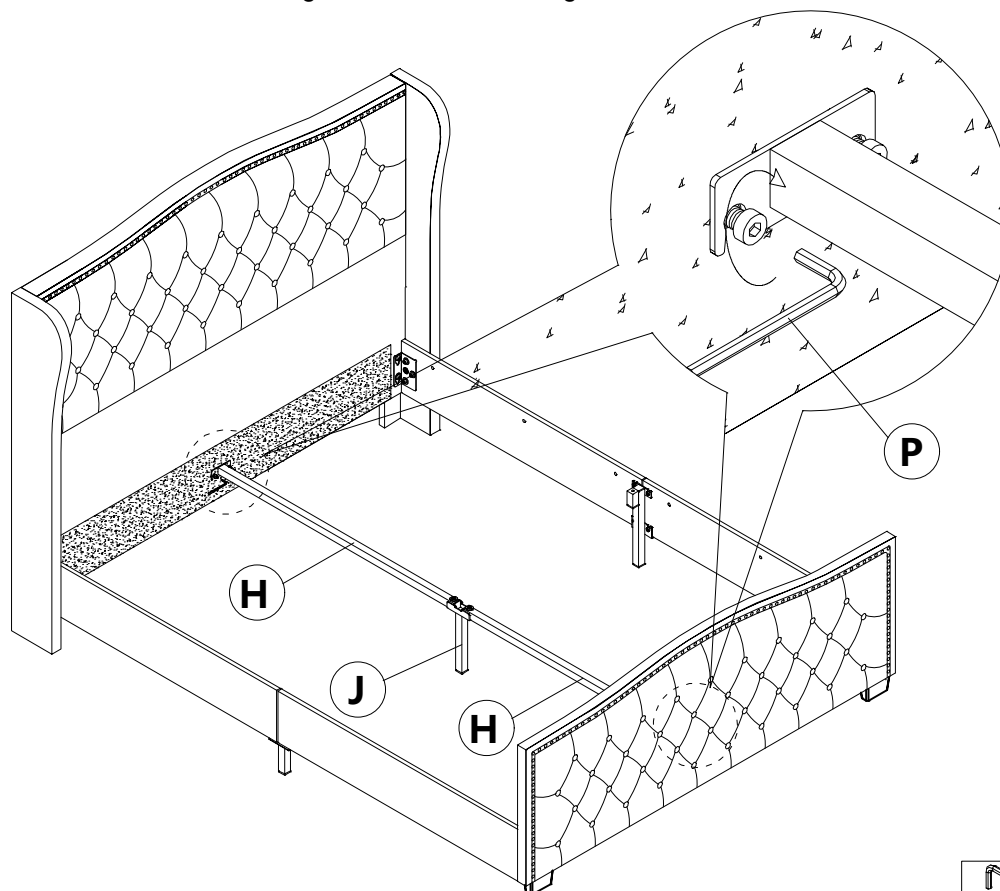



STEP 8



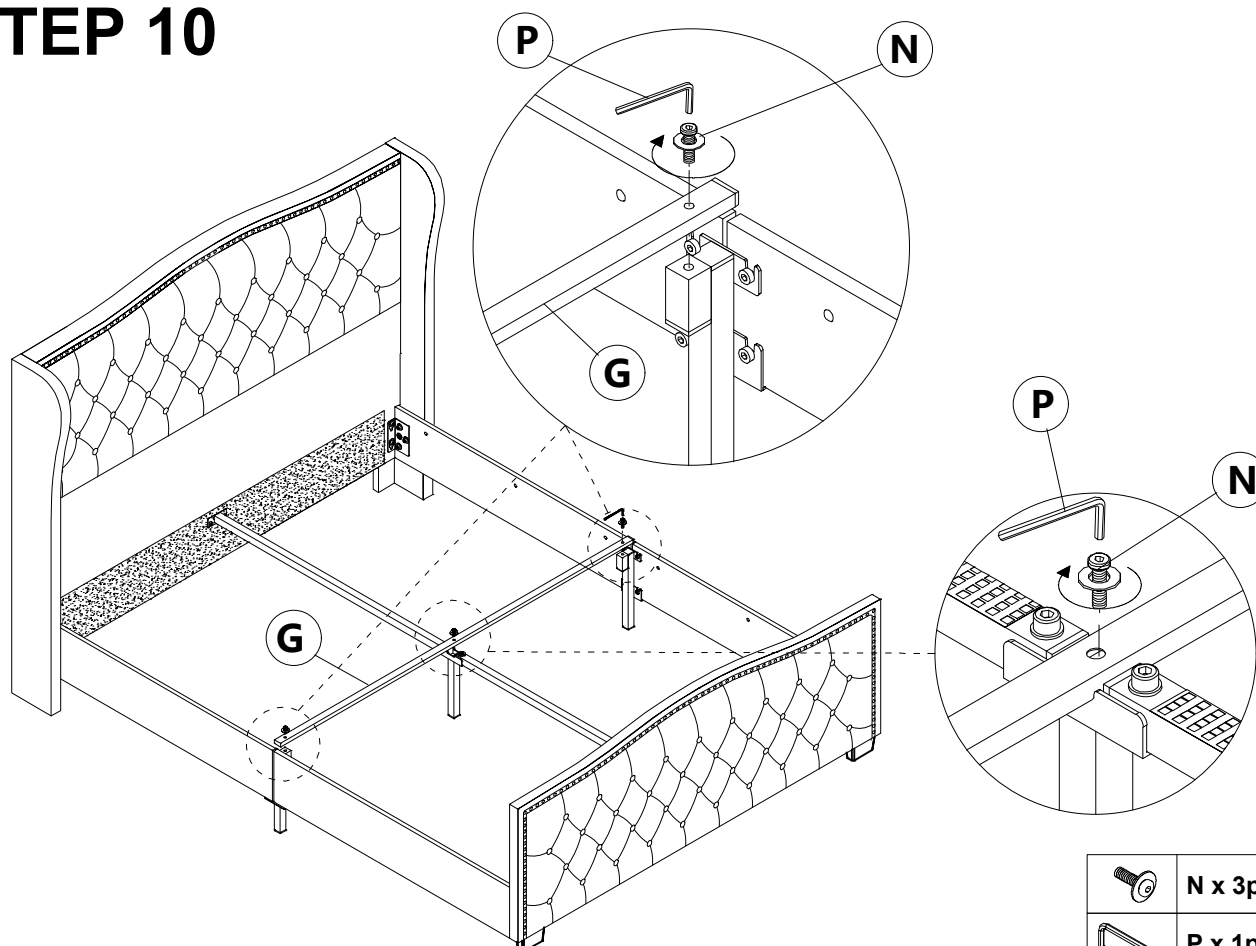
STEP 9



Loosen the screw in the middle of the footboard, then hang the bracket on and tighten the innerscrew.



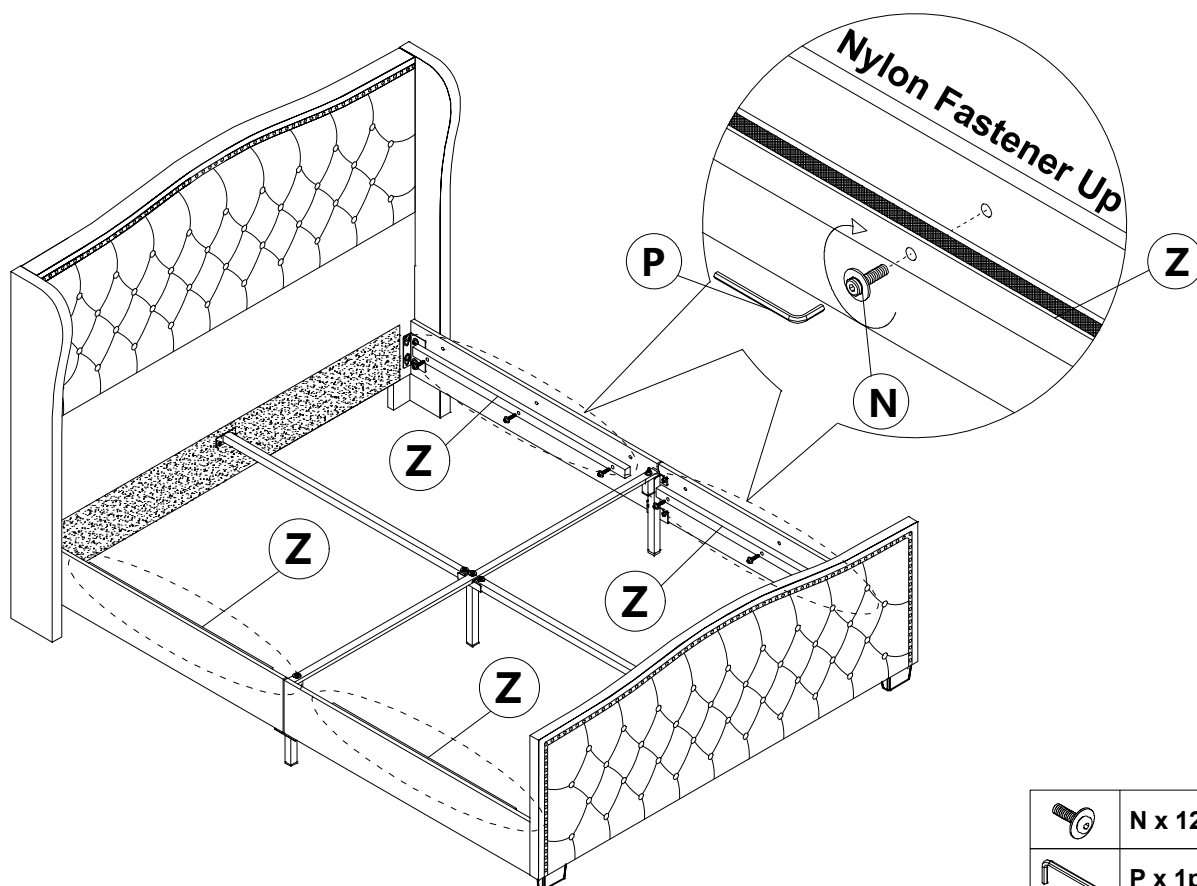
 P x 1PC

STEP 10



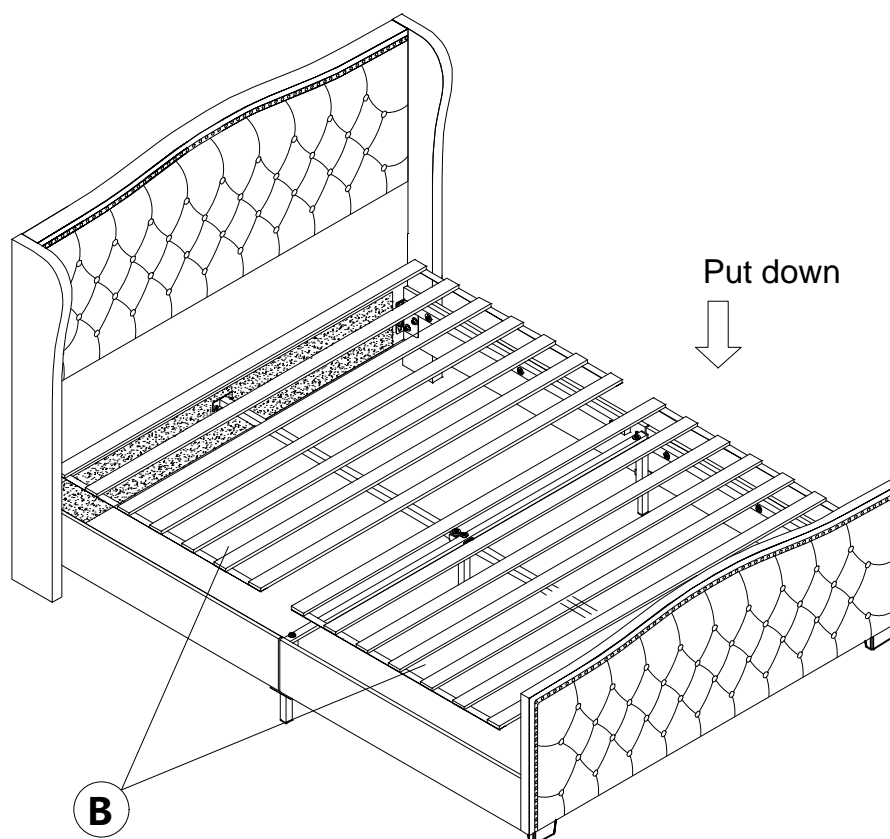
 N x 3pcs
 P x 1pc

STEP 11



	N x 12pcs
	P x 1pc

STEP 12



STEP 13



Installation Complete