


Assembly Instructions

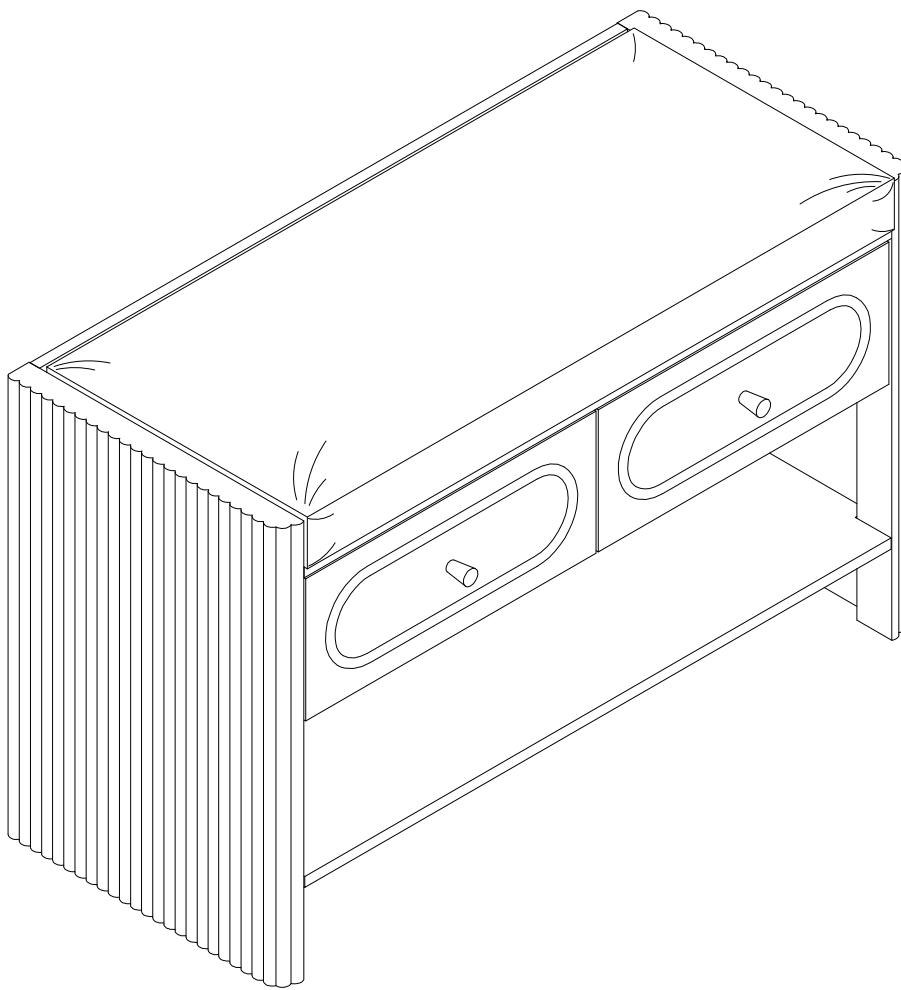


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

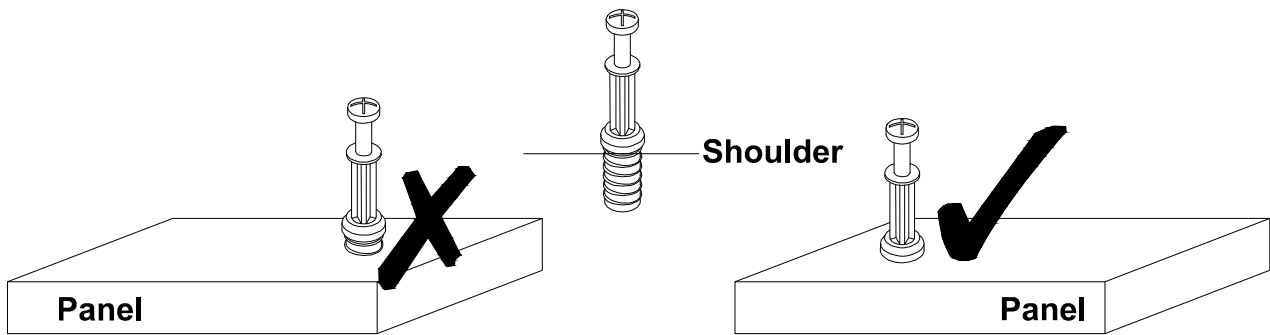

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

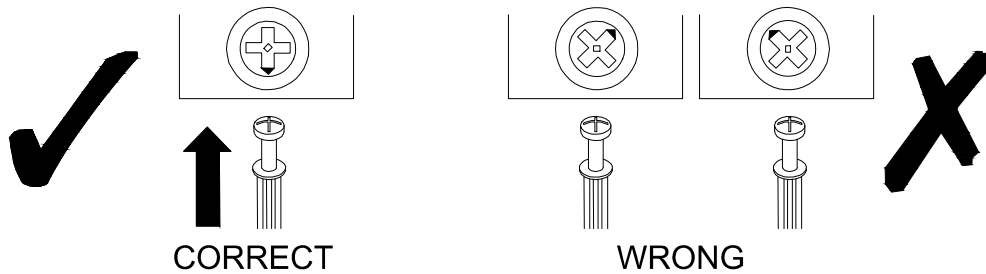

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

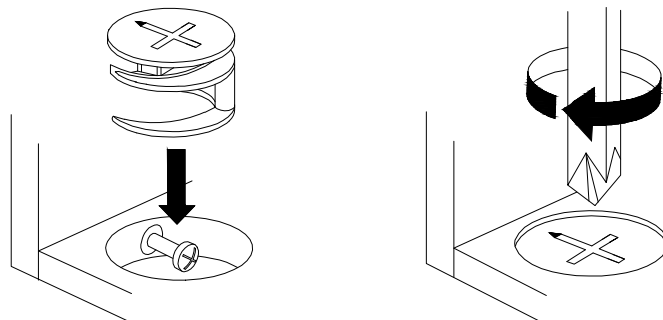


Turn cam lock clockwise to tighten.

Before Assembly


Tips Before Your Start

How to separate the drawer slider:

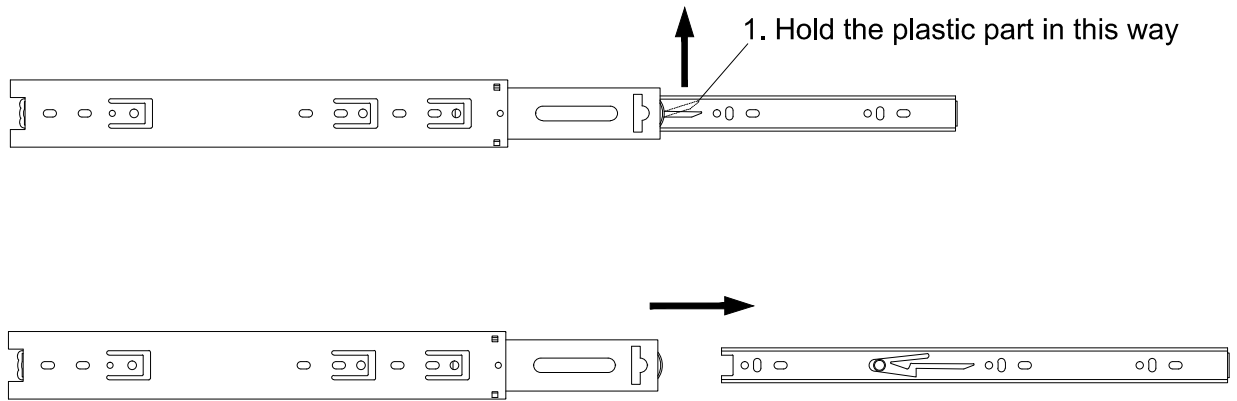


2. Pull out the inner slider for drawer box fixing

Drawer Front Alignment

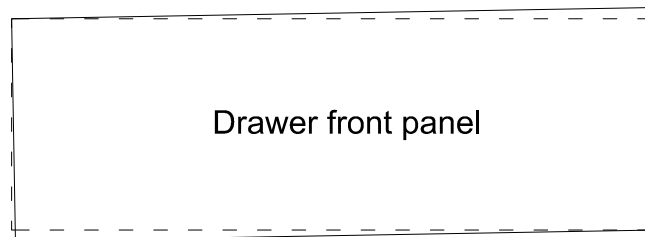



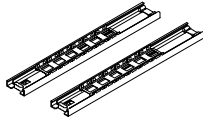

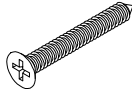






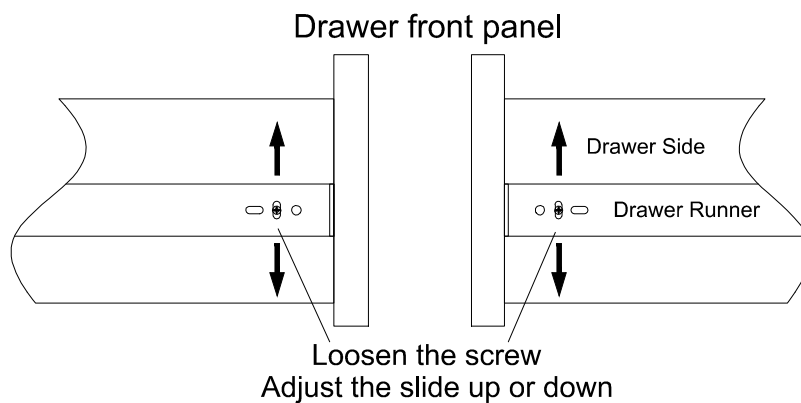If the drawer front panel is NOT level after being assembled, then...




Loosen the screws on the left and right hand side, then adjust the drawer slide up or down, until the drawer fronts are even/level, then tighten the screws.



Part List

<p>No. A Quantity:38 Pcs Cam Lock Dowel 8*28mm</p> 	<p>No. B Quantity:38 Pcs Cam φ15</p> 	<p>No. C Quantity:38 Pcs Sticker Ø20</p> 	<p>No. D Quantity:12 Pcs Dowel 6*30mm</p> 
<p>No. E Quantity:2 Sets Drawer Slider 10"</p> 	<p>No. F Quantity:16 Pcs Screw M3.5*12mm</p> 	<p>No. G Quantity:8 Pcs Screw M4*30mm</p> 	<p>No. H Quantity:2 Pcs Screw M4*16mm</p> 
<p>No. I Quantity:4 Pcs Foot Pad Ø12*5</p> 	<p>No. J Quantity:2 Pcs Handle Ø20*23mm</p> 	<p>No. K Quantity:1 Sets Anti-falling Parts</p> 	

Product structure

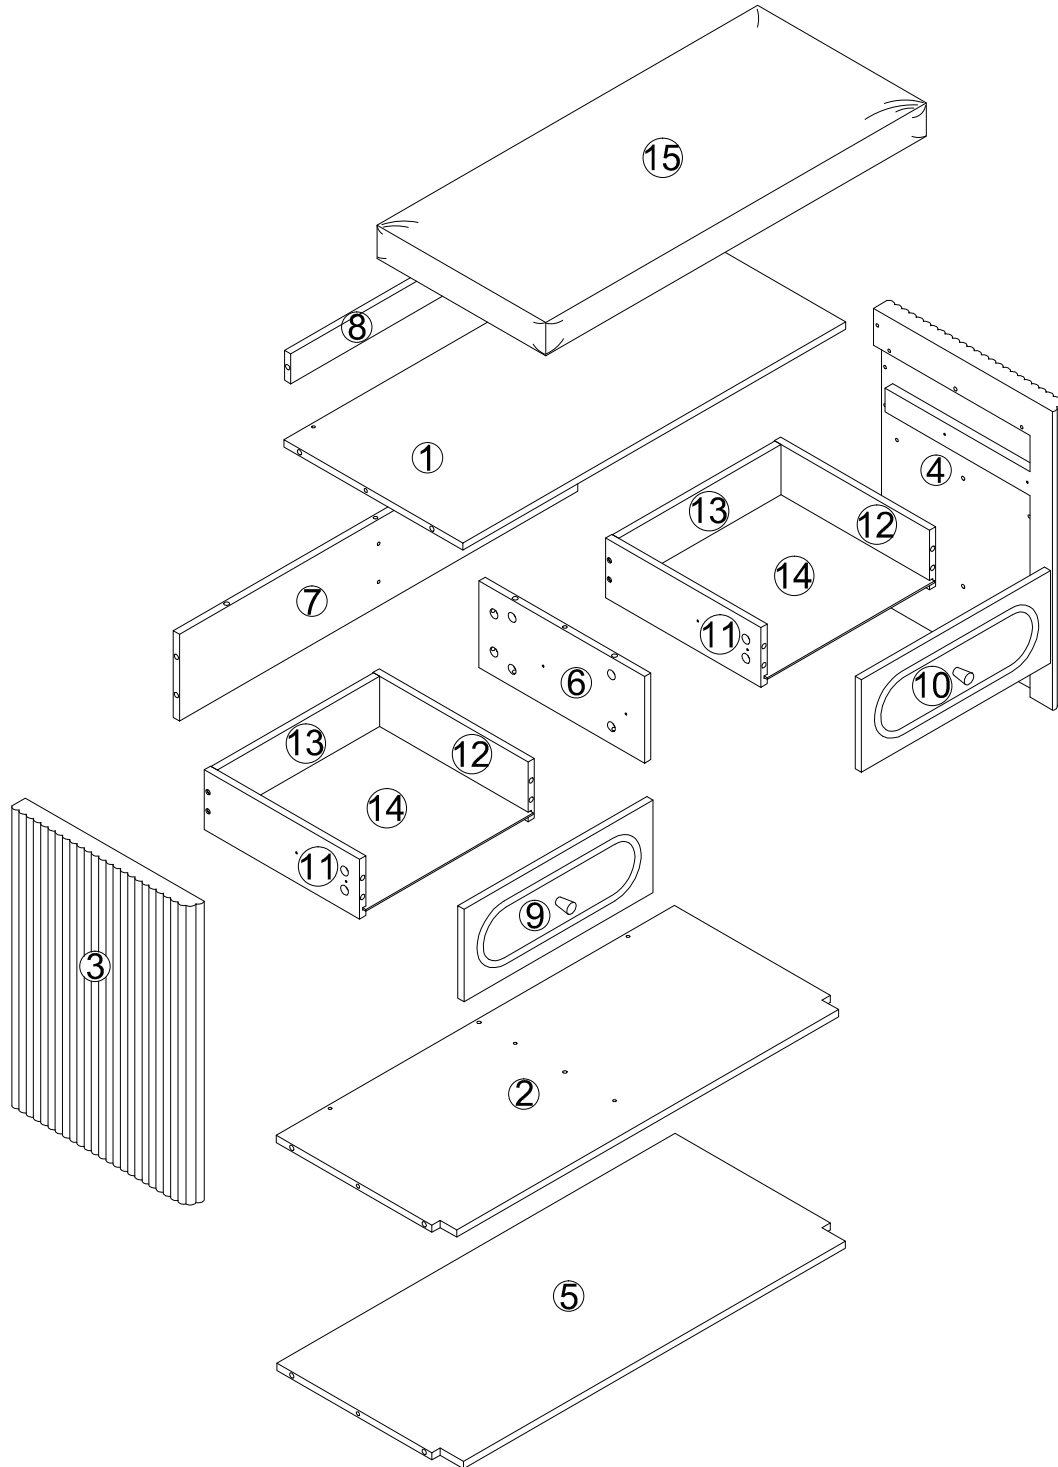




STEP 1

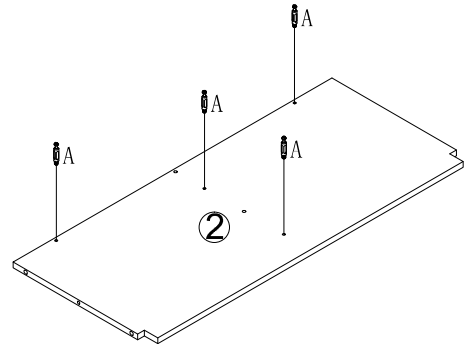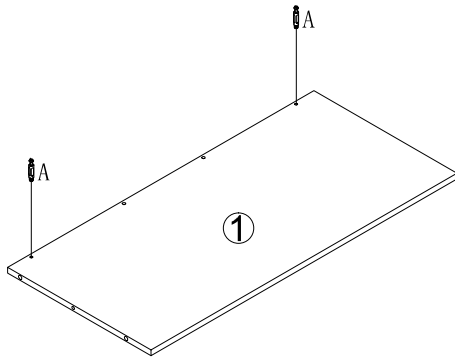

No. A
Quantity: 6 Pcs
8*28 mm



STEP 2

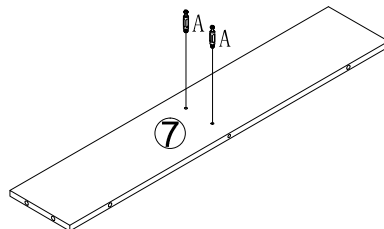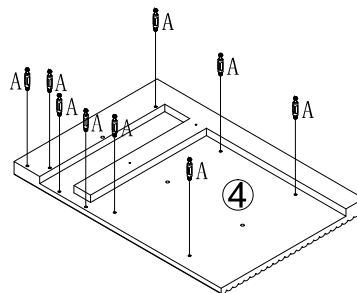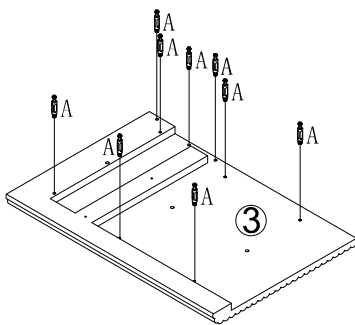





No. A
Quantity: 20 Pcs
8*28 mm




STEP 3



The first screw hole should correspond with the board location hole

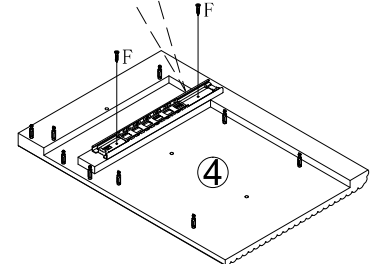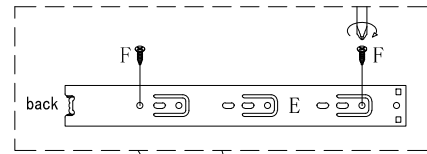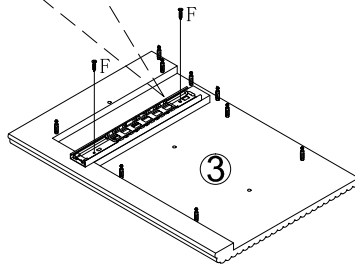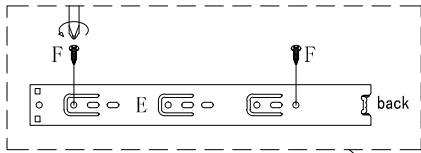

No. E
Quantity: 1 Sets
10"





No. F
Quantity: 4 Pcs
M3.5*12mm





STEP 4




The first screw hole should correspond with the board location hole

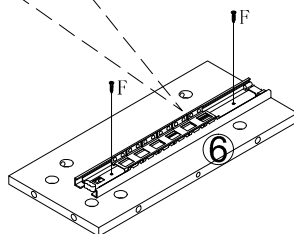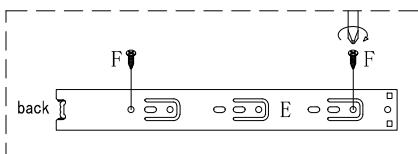

Flip to the other side.

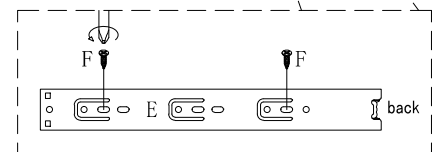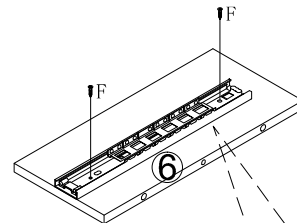


No. E
Quantity: 1 Sets
10"



No. F
Quantity: 4 Pcs
M3.5*12mm




STEP 5

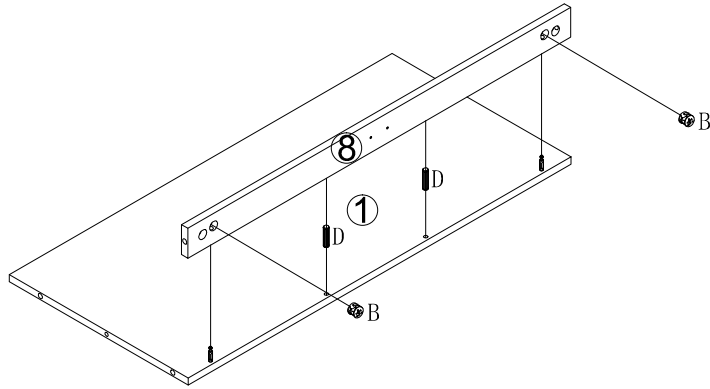


No. B
Quantity: 2 Pcs
Ø15



No. D
Quantity: 2 Pcs
6*30mm




STEP 6

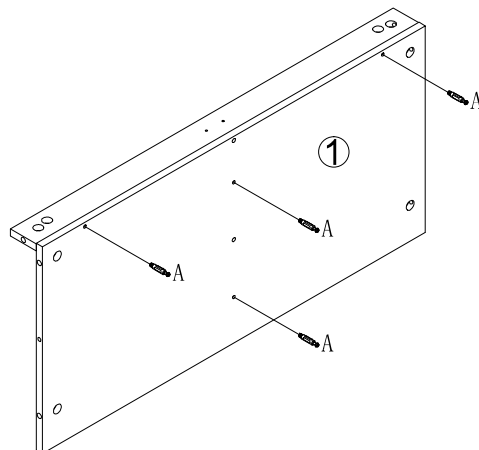

No. A
Quantity: 4 Pcs
8*28 mm



STEP 7

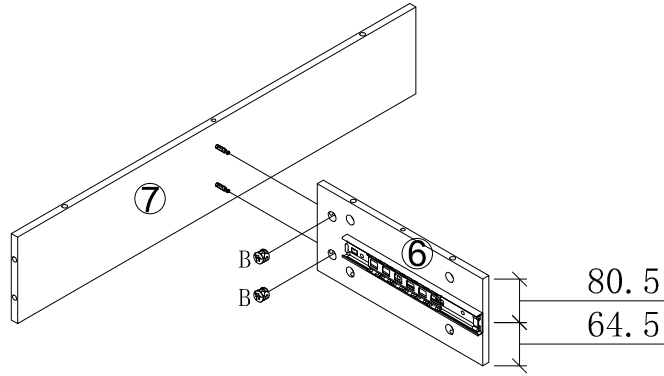


Note: When installing, please pay attention that the size of the slide rail is different from top to bottom. It should be assembled strictly according to the installation diagram direction otherwise it will lead to assembly failure.

No. B
Quantity: 2 Pcs
Ø15



STEP 8

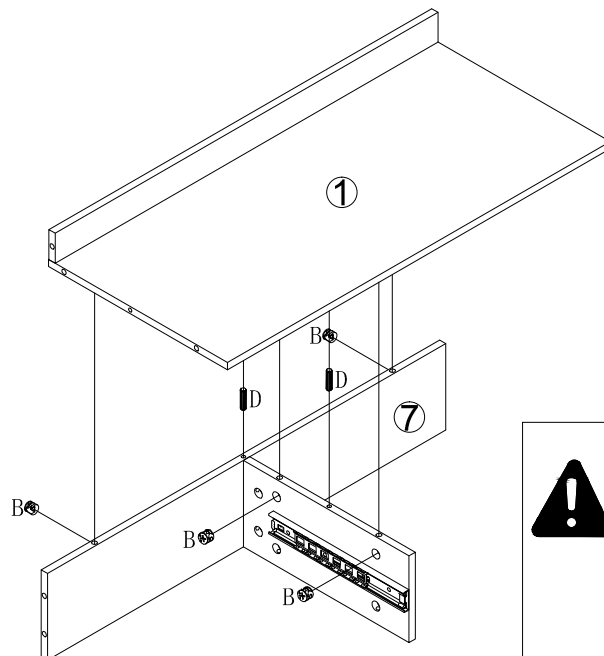


Note: When installing, please pay attention that the size of the slide rail is different from top to bottom. It should be assembled strictly according to the installation diagram direction otherwise it will lead to assembly failure.


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
6*30mm




STEP 9

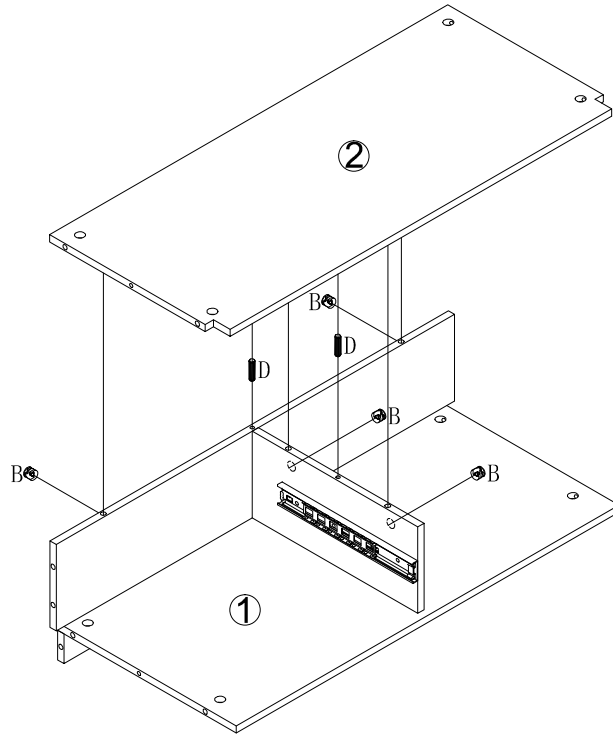


No. B
Quantity: 4 Pcs
Ø15



No. D
Quantity: 2 Pcs
6*30mm




STEP 10

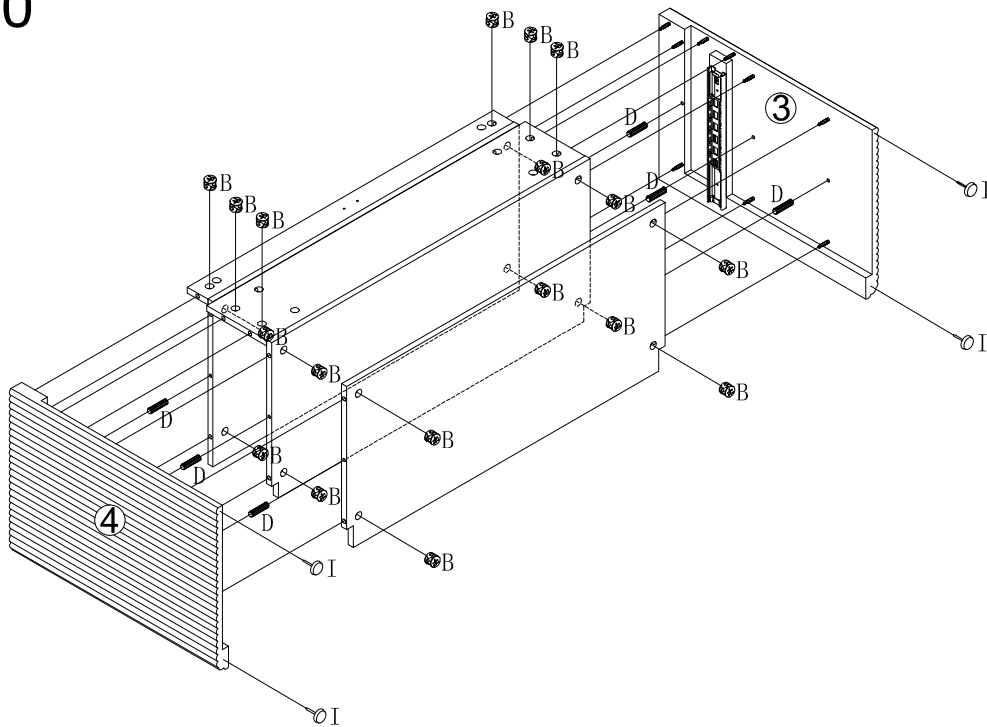

No. B
Quantity: 18 Pcs
Ø15





No. D
Quantity: 6 Pcs
6*30mm



No. I
Quantity: 4 Pcs



STEP 11

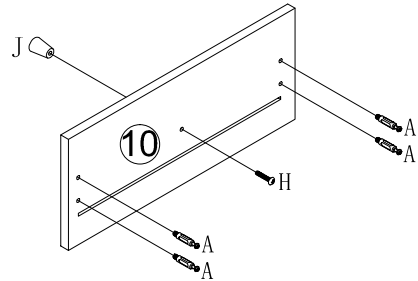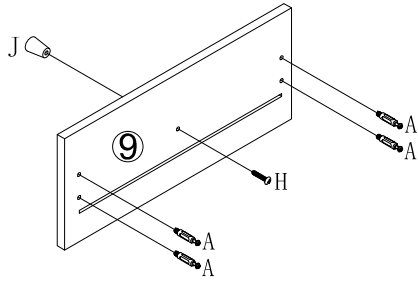

No. A
Quantity: 8 Pcs
8*28 mm




No. H
Quantity: 2 Pcs
M4*16mm



No. J
Quantity: 2 Pcs




STEP 12

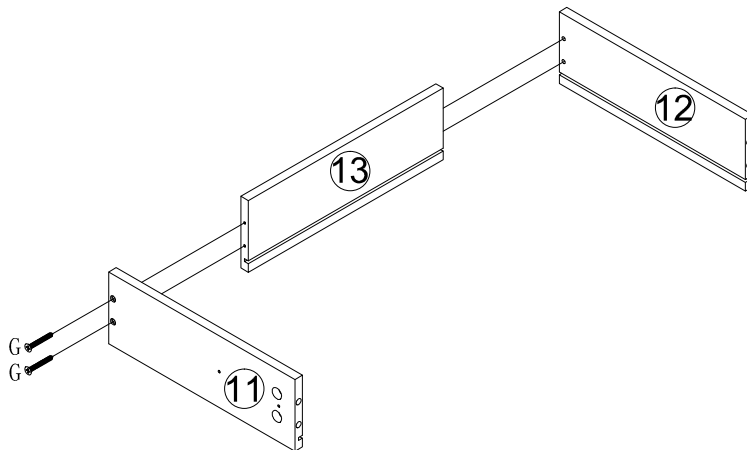


x2

No. G
Quantity: 8 Pcs
M4*30mm





STEP 13

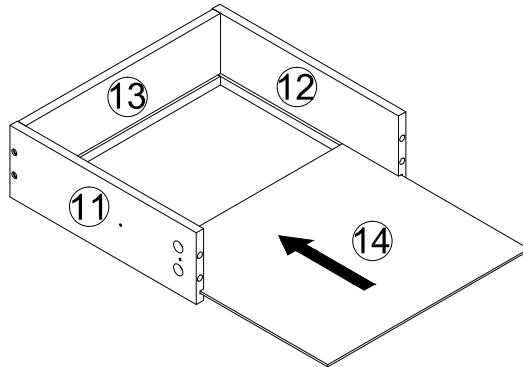

×2

STEP 14

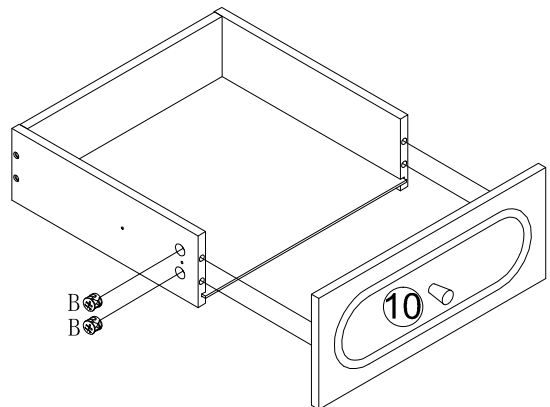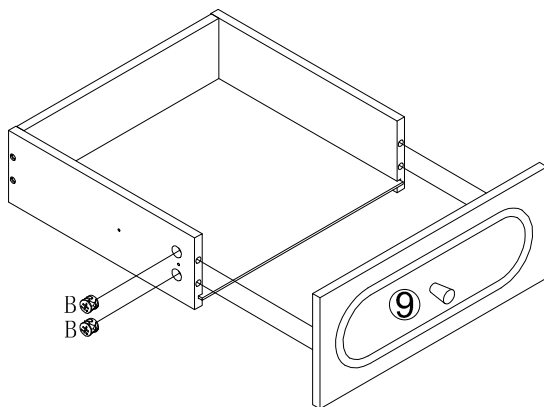



No. B
Quantity: 8 Pcs
Ø15




STEP 15



The first screw hole should corresponded with the board location hole

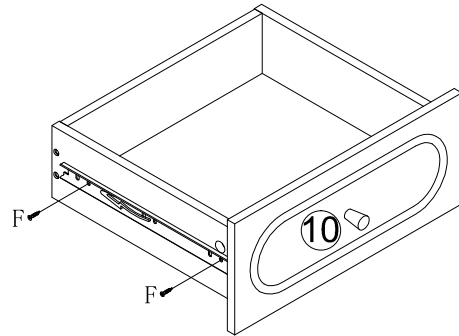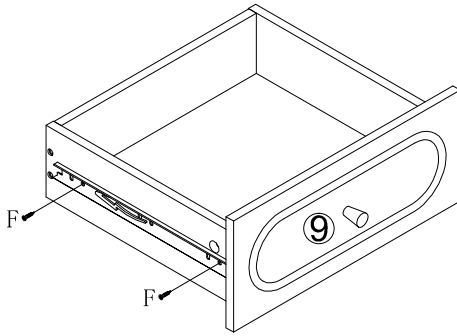


No. E
Quantity: 2 Sets
10"




No. F
Quantity: 8 Pcs
M3.5*12mm




STEP 16

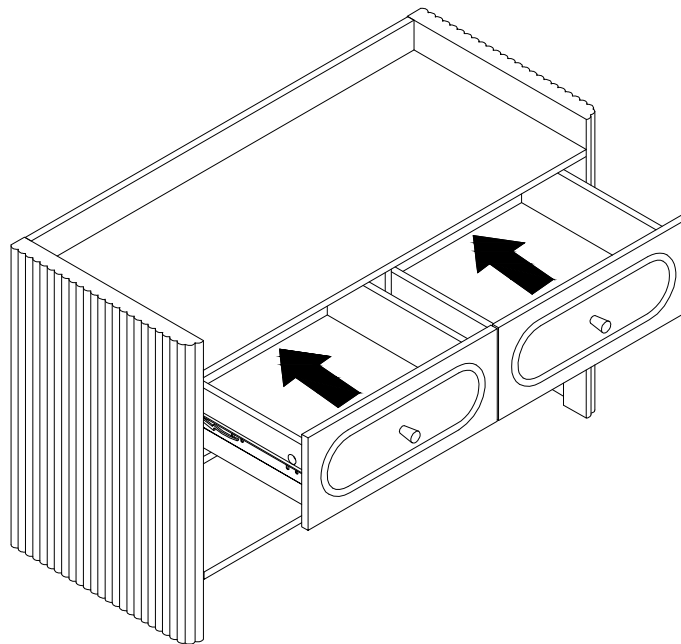

STEP 17

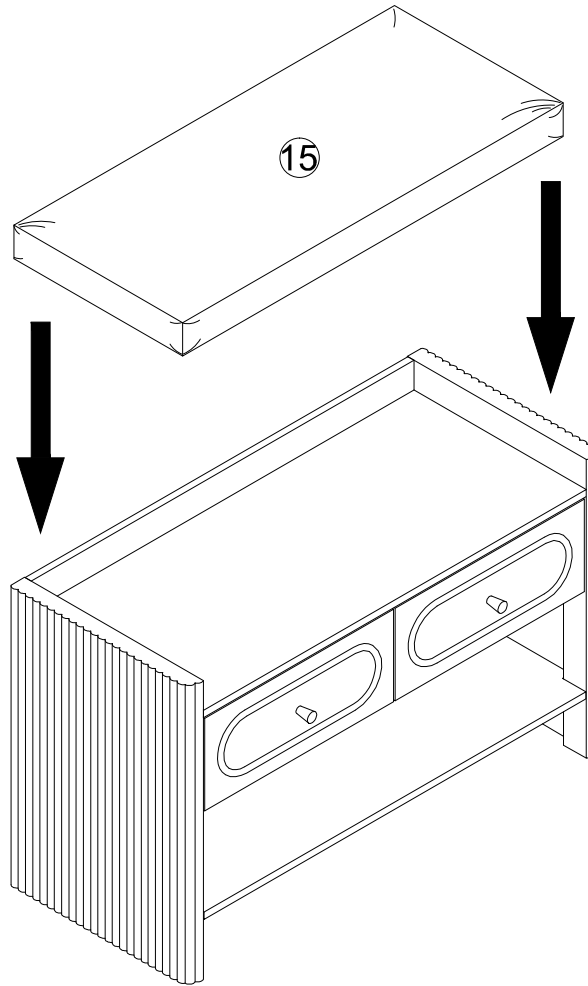

STEP 18

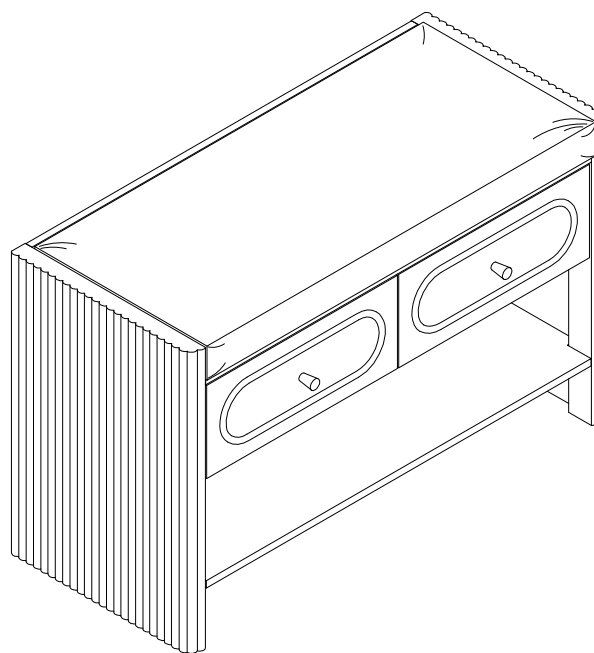

STEP 19

