


Assembly Instructions

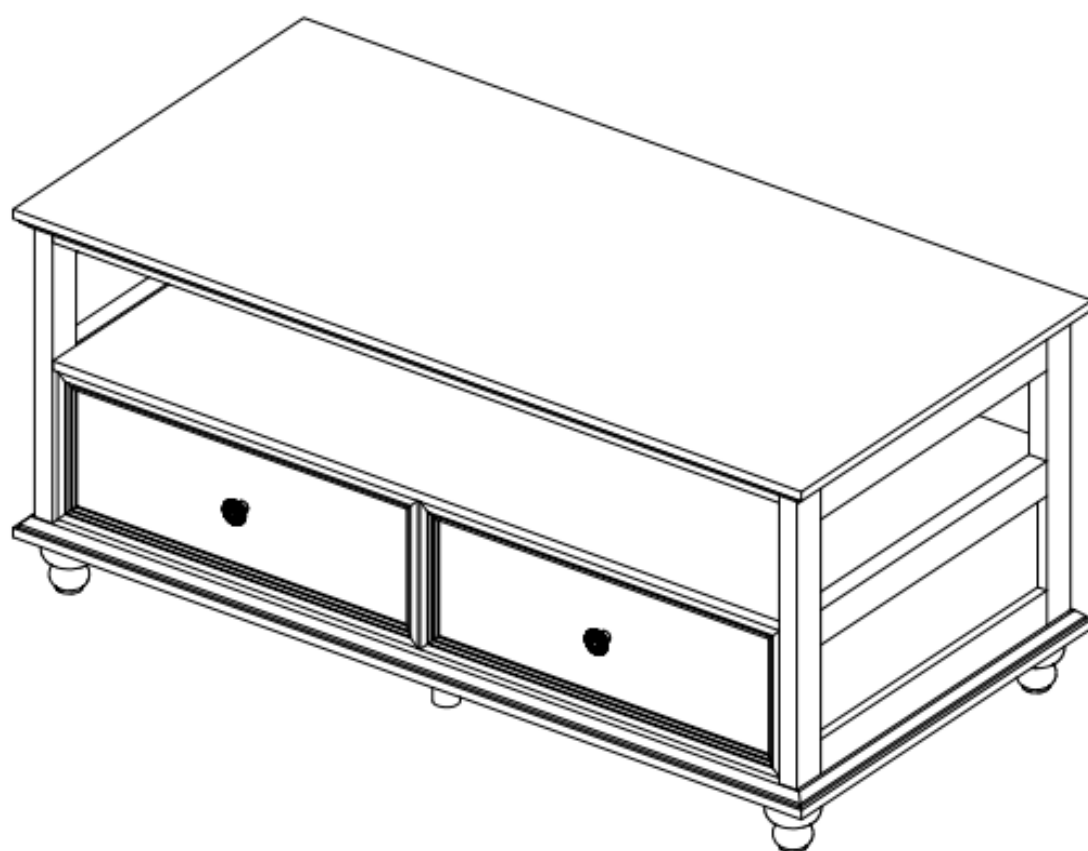

BEFORE STARTING

Before Using Product

Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

Make sure all parts are included.

Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.

For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

WARNING

Do not allow children to climb on unit.

Avoid sharp objects or corrosive chemicals to prevent damage to the product.

During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.


Please make sure that all objects are removed before moving the assembled unit.

The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.










Be careful when using power tools to assemble your furniture.

Power tools may strip or damage the parts.








PART LIST

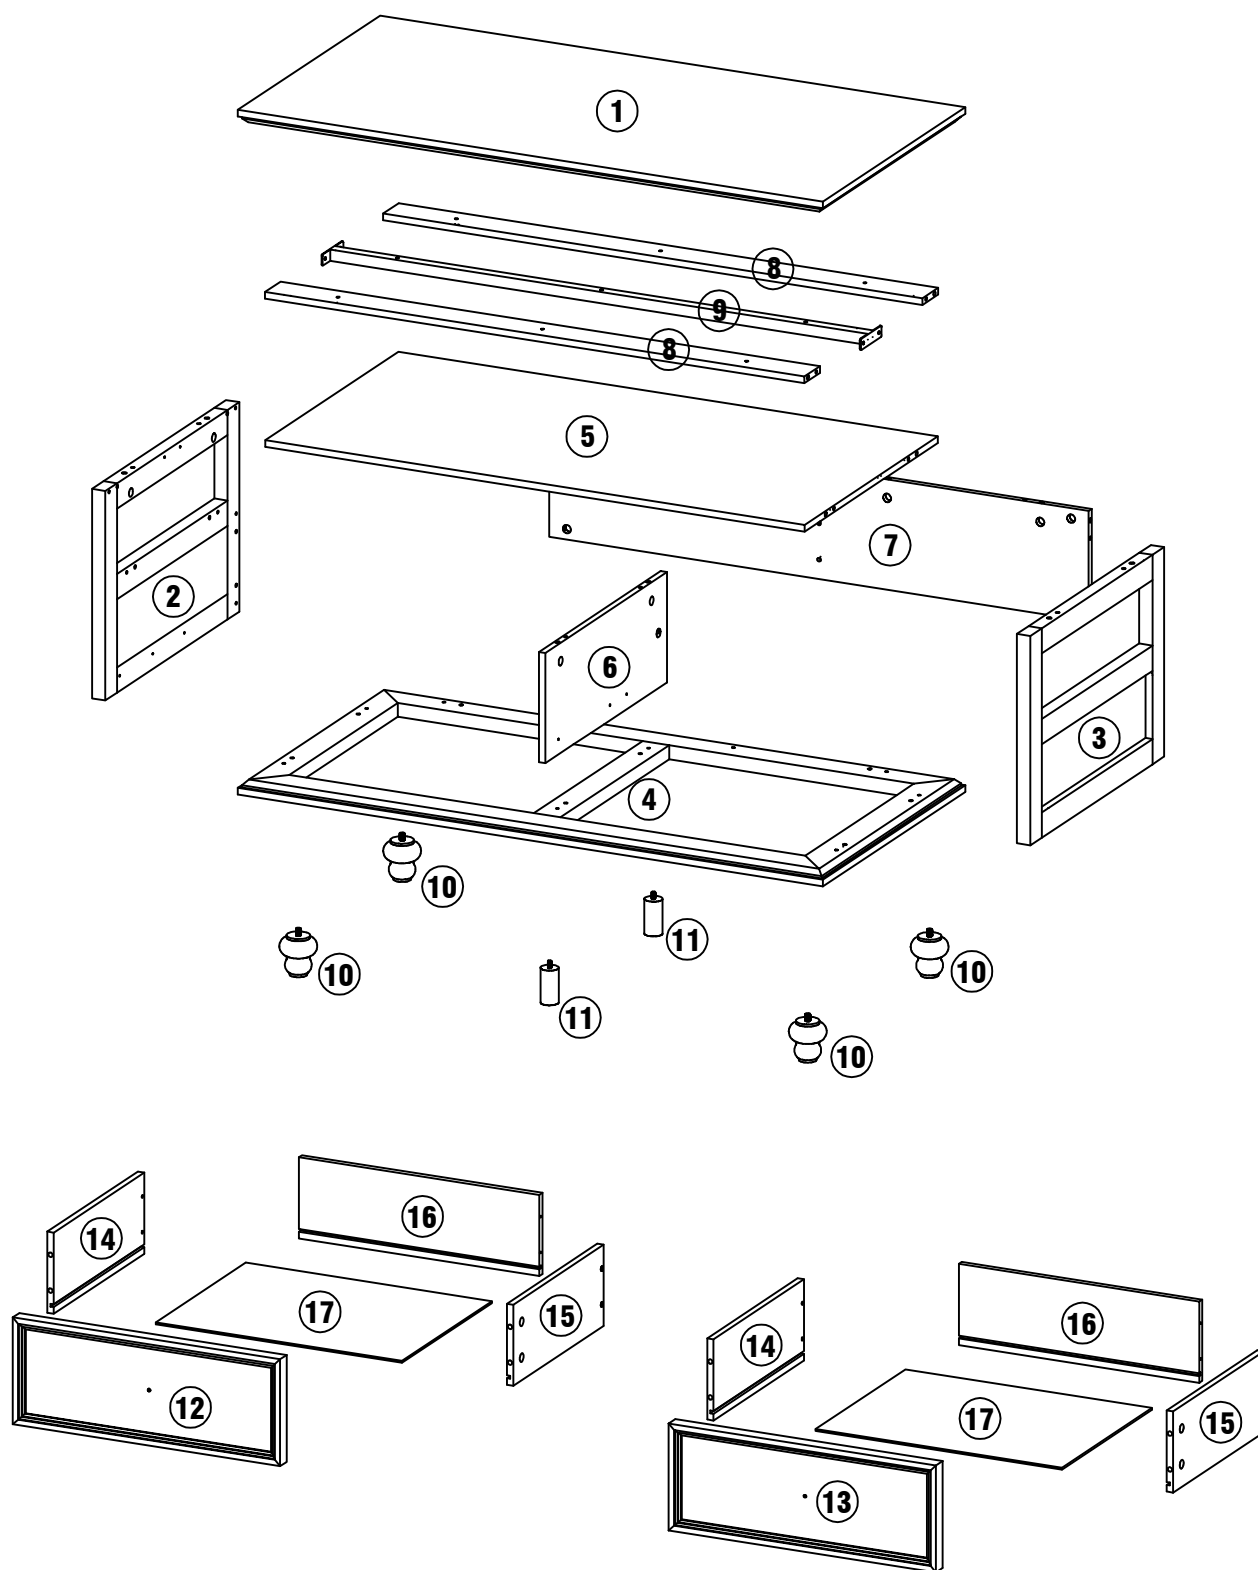

PART LIST

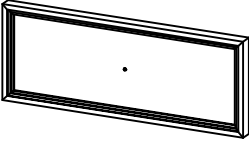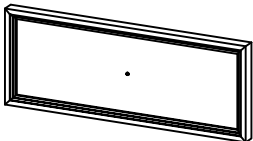①  1 pc	②  1 pc	③  1 pc
④  1 pc	⑤  1 pc	⑥  1 pc
⑦  1 pc	⑧  2 pcs	⑨  1 pc
⑩  4 pcs	⑪  2 pcs	⑫  1 pc
⑬  1 pc	⑭  2 pcs	⑮  2 pcs
⑯  2 pcs	⑰  2 pcs	

HARDWARE LIST

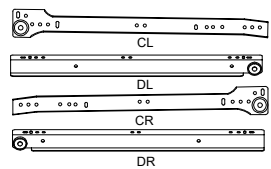
A X30+2  Ø6X30MM	B X31+1  Ø6X40MM	C X31+1  Ø15X10MM
D X24+2  Ø3X11MM	E X10+1  Ø4X50MM	F X2 
G X17+1  Ø4X35MM	H X4  Ø3.5X14MM	I X2  M4X12MM
J X2 		



Bolt




Connecting piece

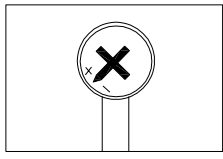


X

Adjust connecting piece direction until it is properly lined up with the hole.

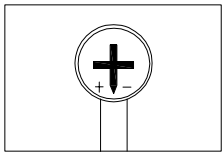


+


Insert bolt when connecting piece direction is properly lined up.

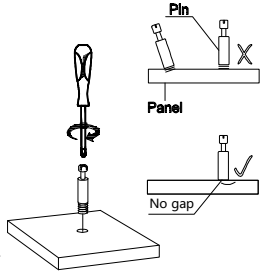


1. 90° vertical installation in place

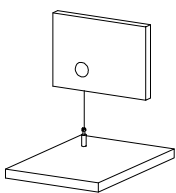

2.


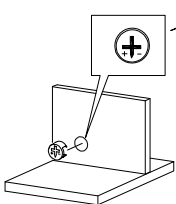


3.

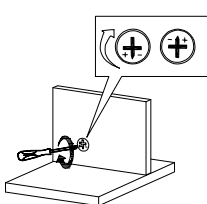



4.

STEP 1

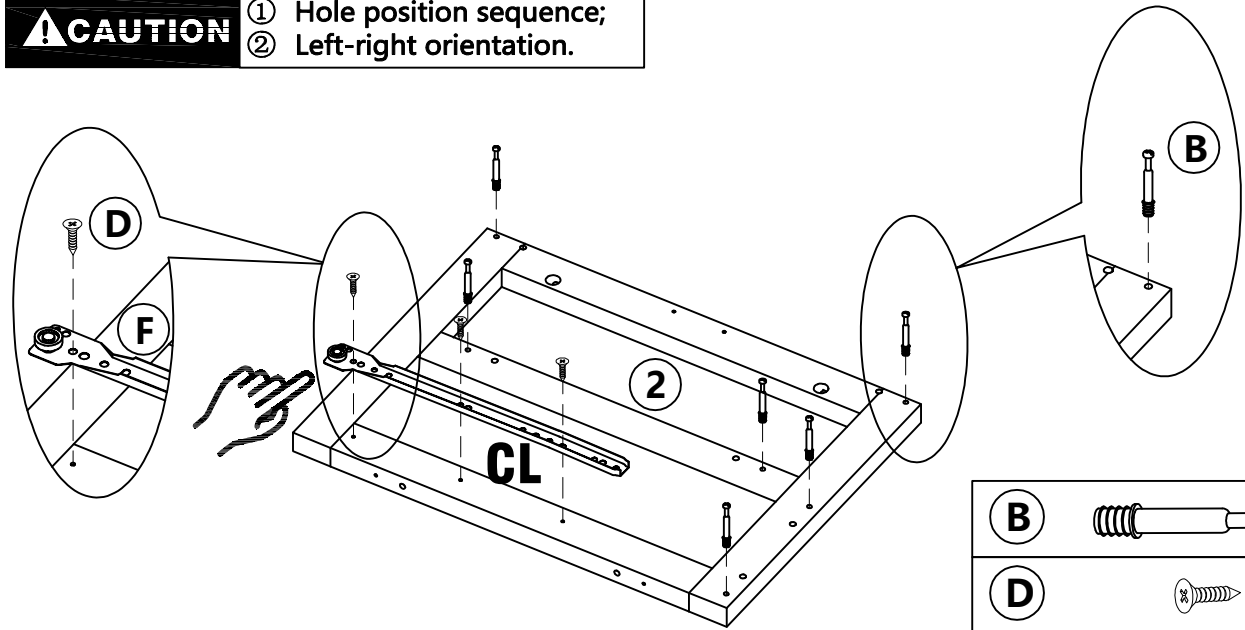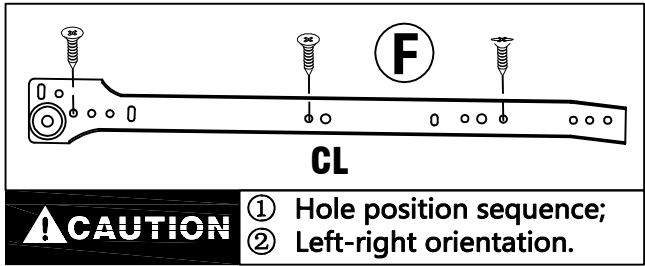


B		X6
D		X3
F		X1

STEP 2

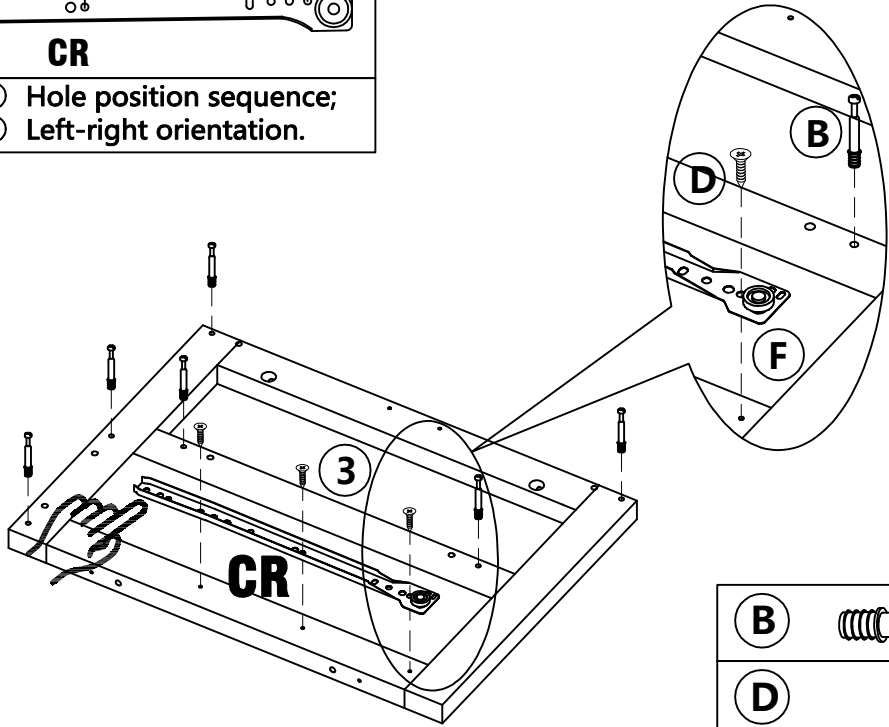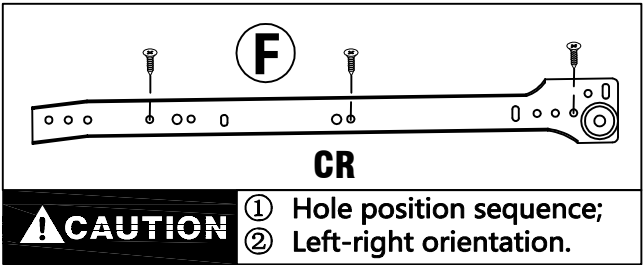


B		X6
D		X3
F		X1

STEP 3

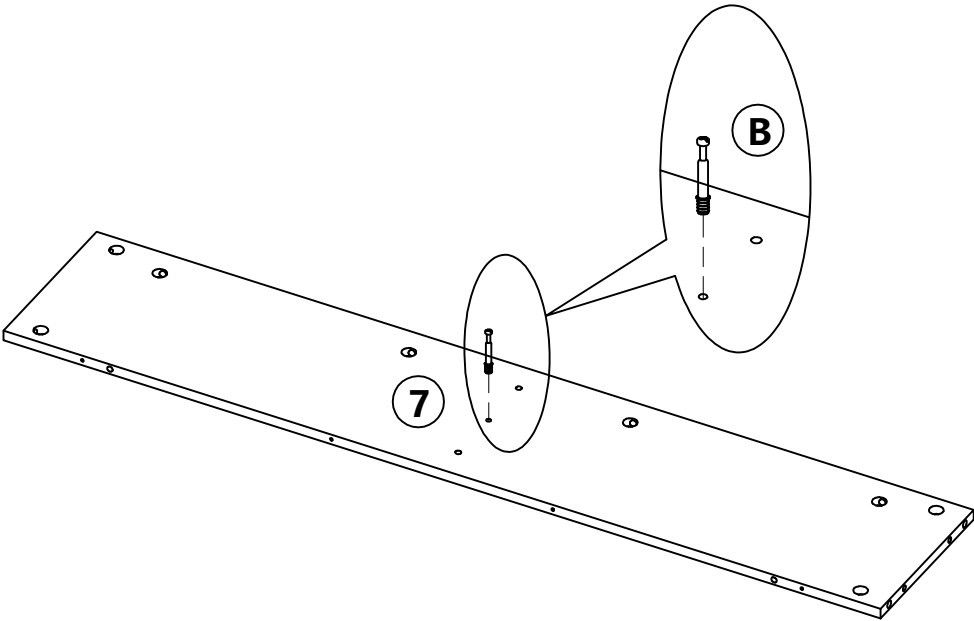


B



X1

STEP 4




CR

⚠ CAUTION

① Hole position sequence;

② Left-right orientation.




CL

⚠ CAUTION

① Hole position sequence;


② Left-right orientation.

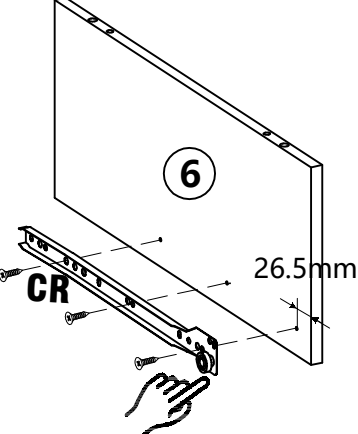

6

26.5mm


CR

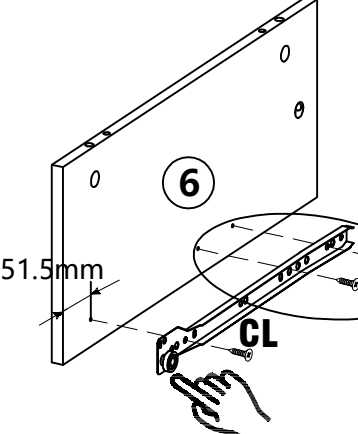

6

51.5mm

CL

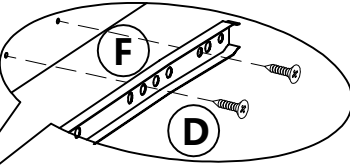

D




F

D





X6


F




X1


STEP 5

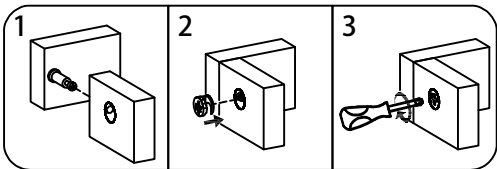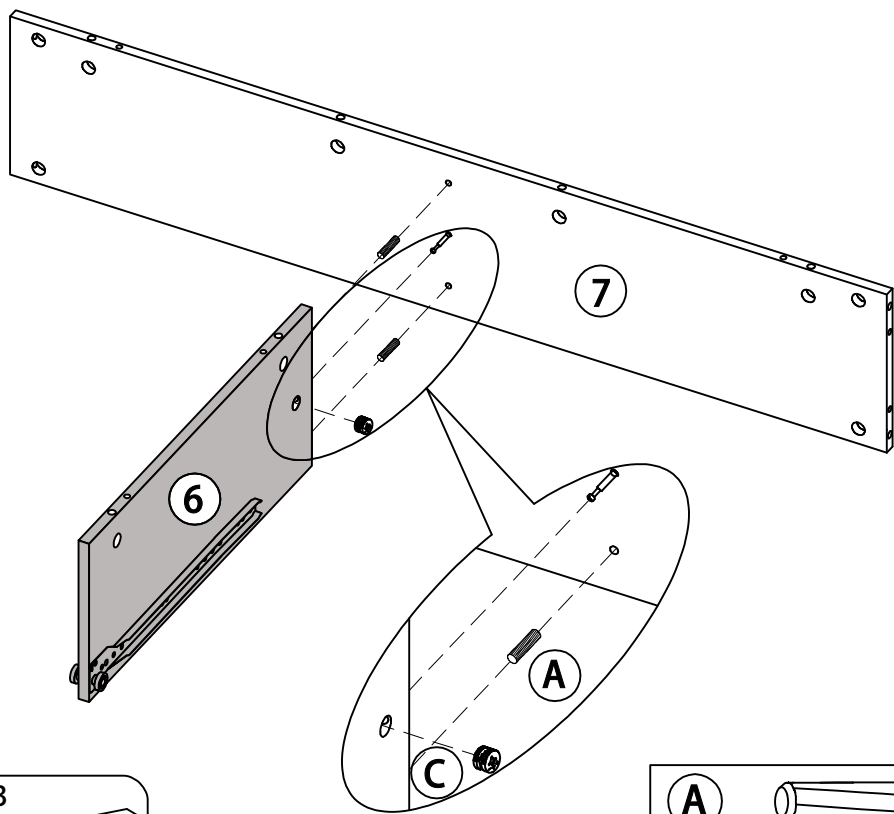



A		X2
C		X1

STEP 6

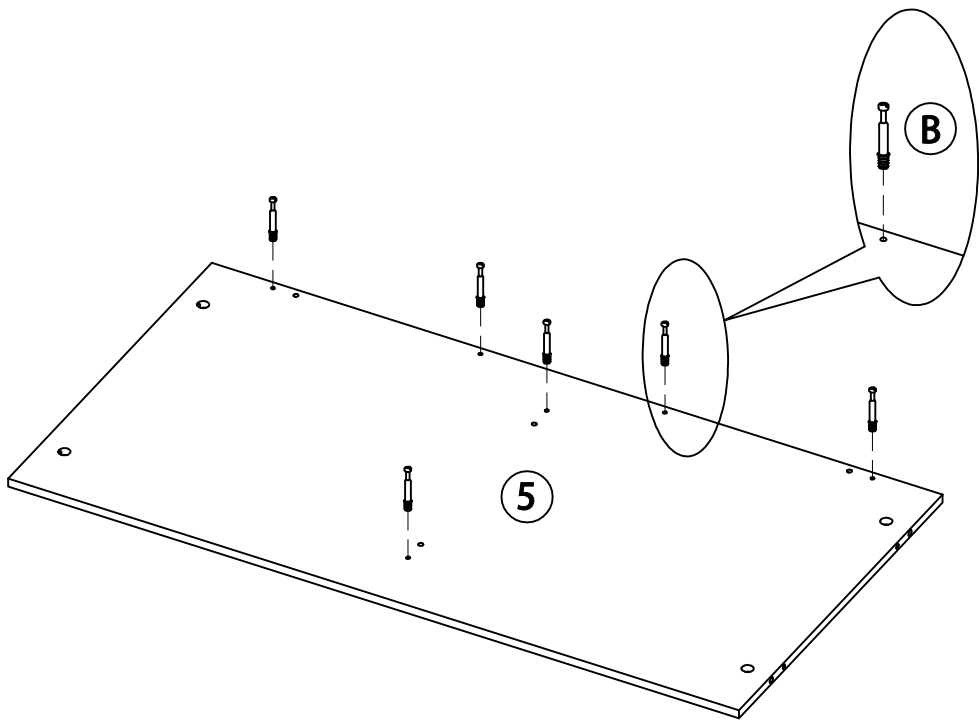



B		X6
---	---	----

STEP 7

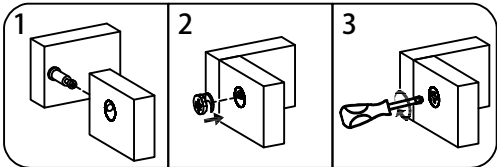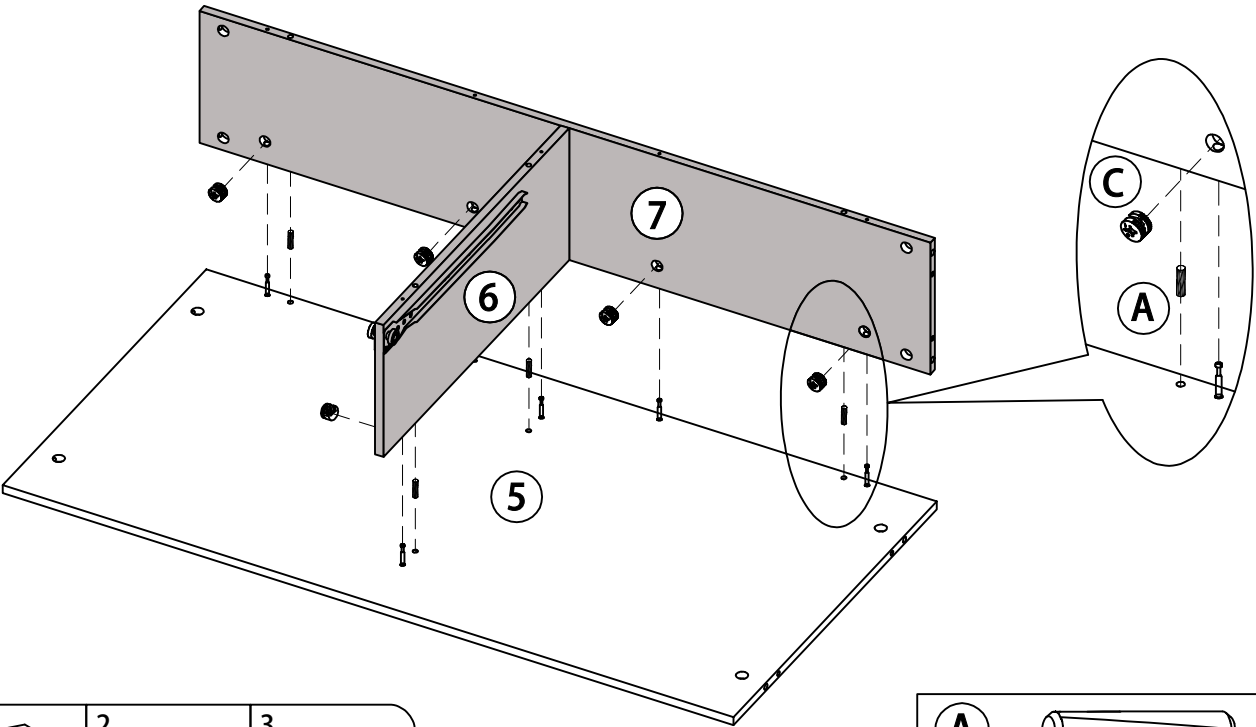


A		X4
C		X6

STEP 8

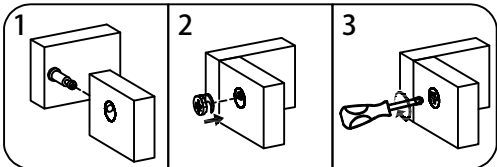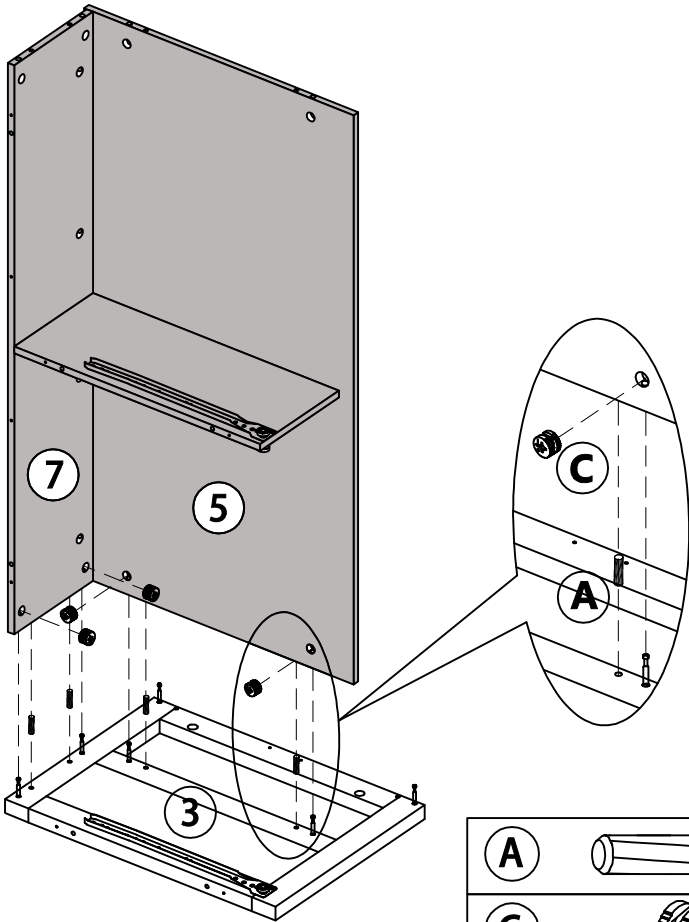


A		X4
C		X4


STEP 9

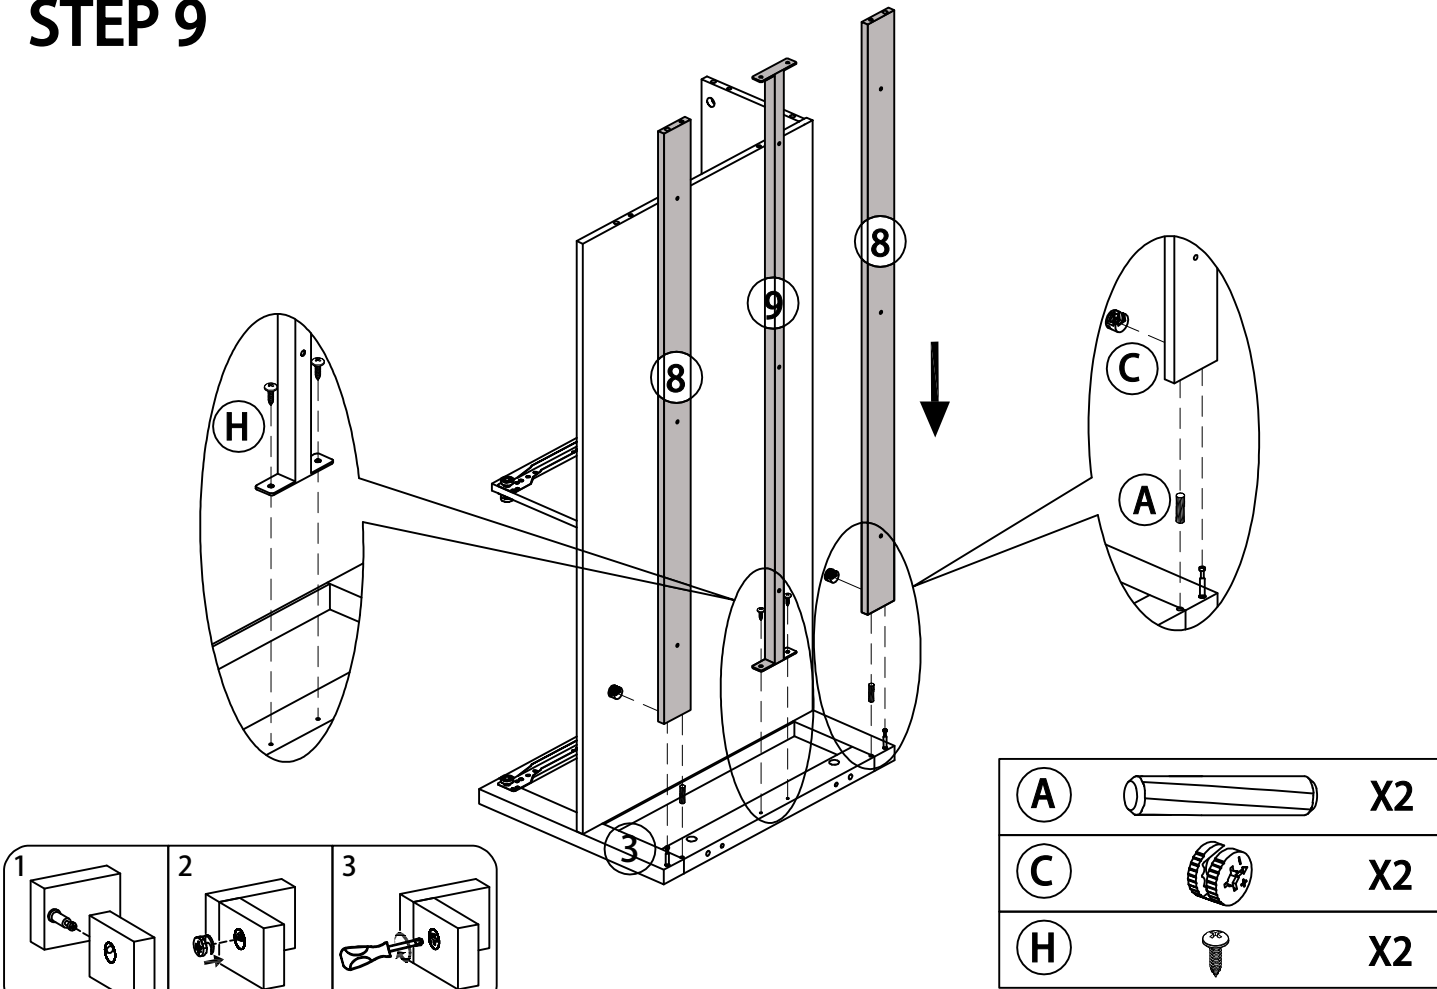


STEP 10

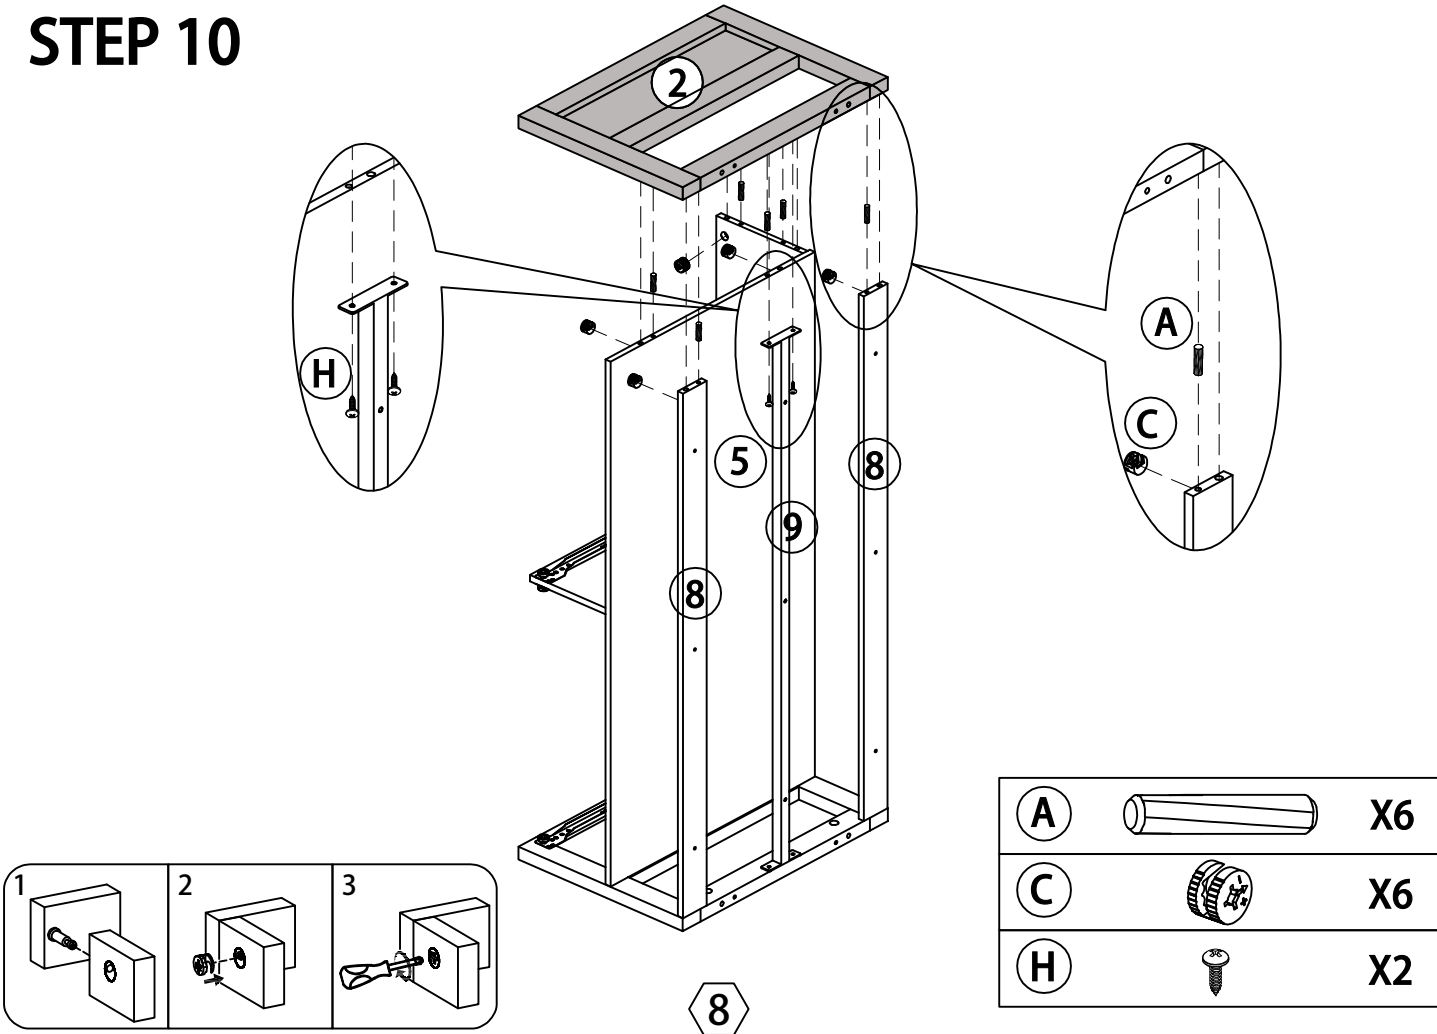


STEP 11

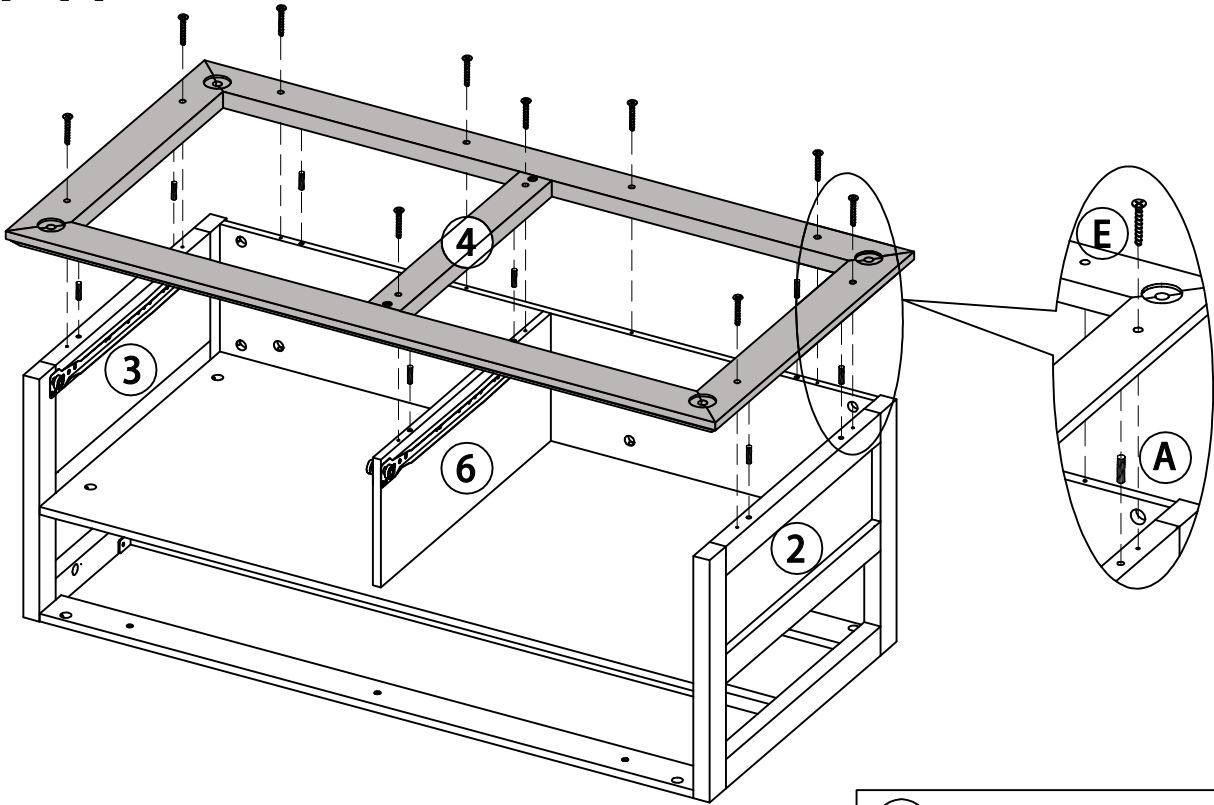

A		X8
E		X10

STEP 12

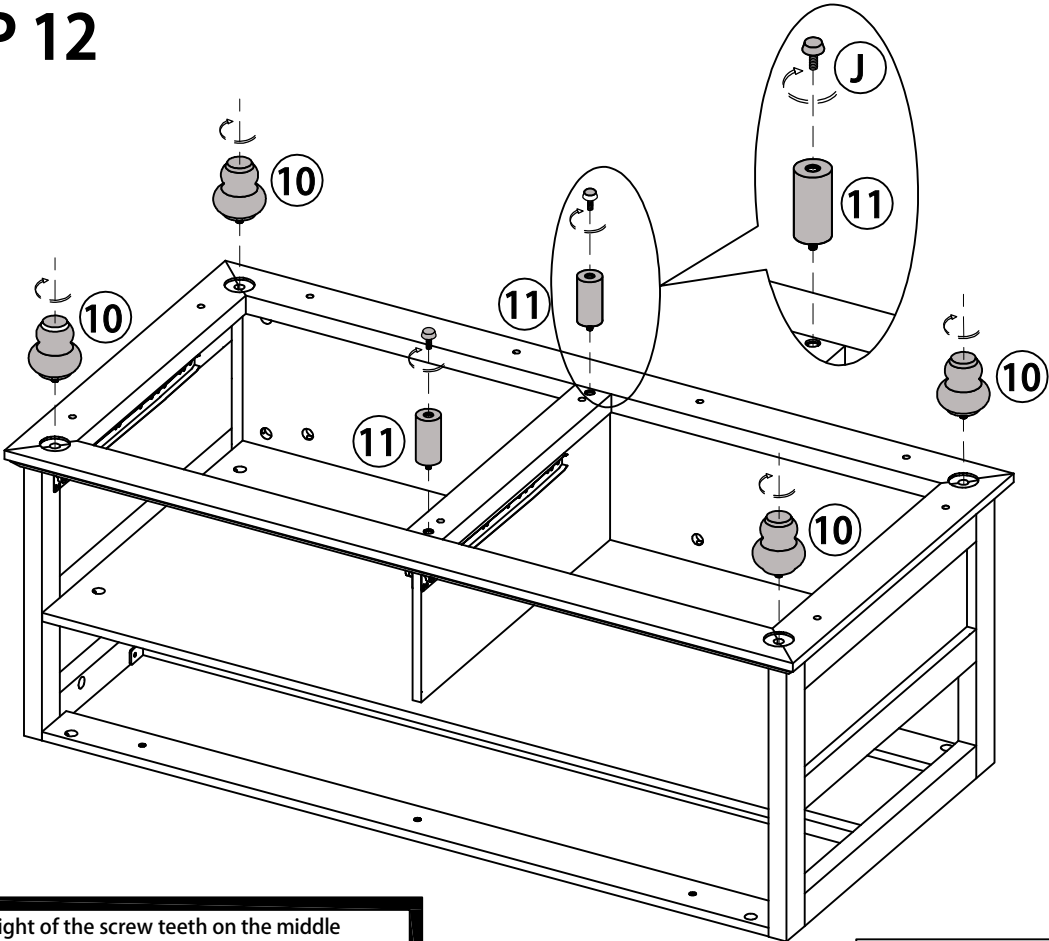



Adjust the height of the screw teeth on the middle feet appropriately to ensure the product remains perfectly level and more fit the ground.

9



J		X2
---	---	----

STEP 13

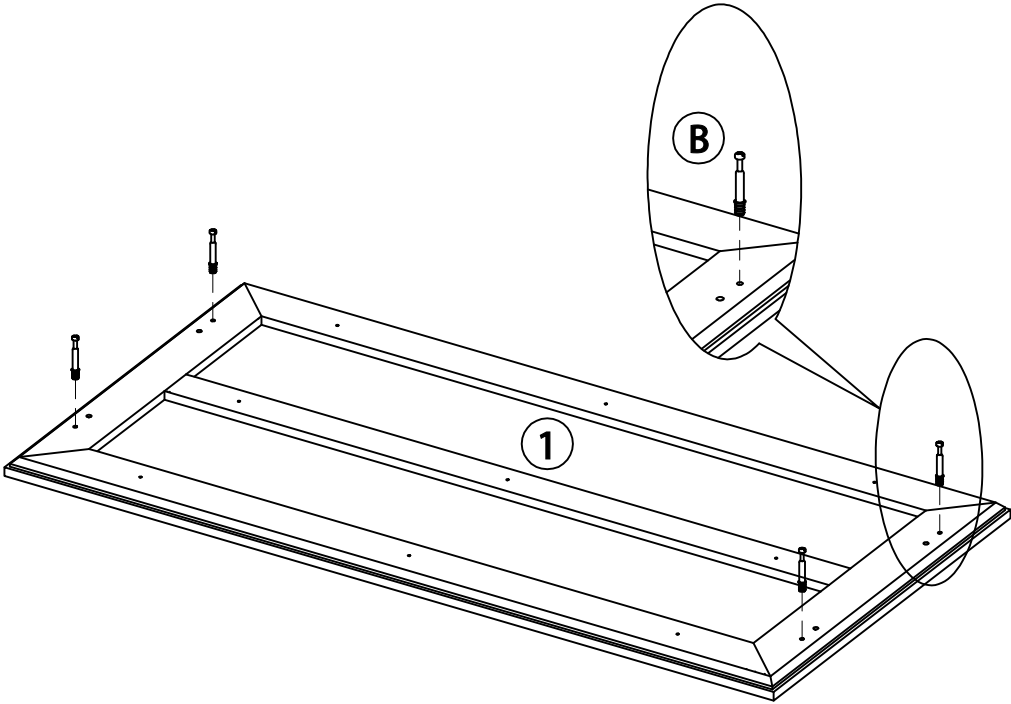


B		X4
----------	--	-----------


STEP 14

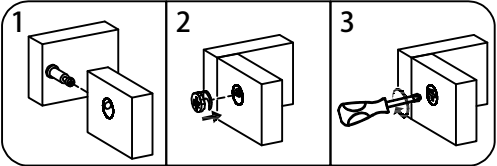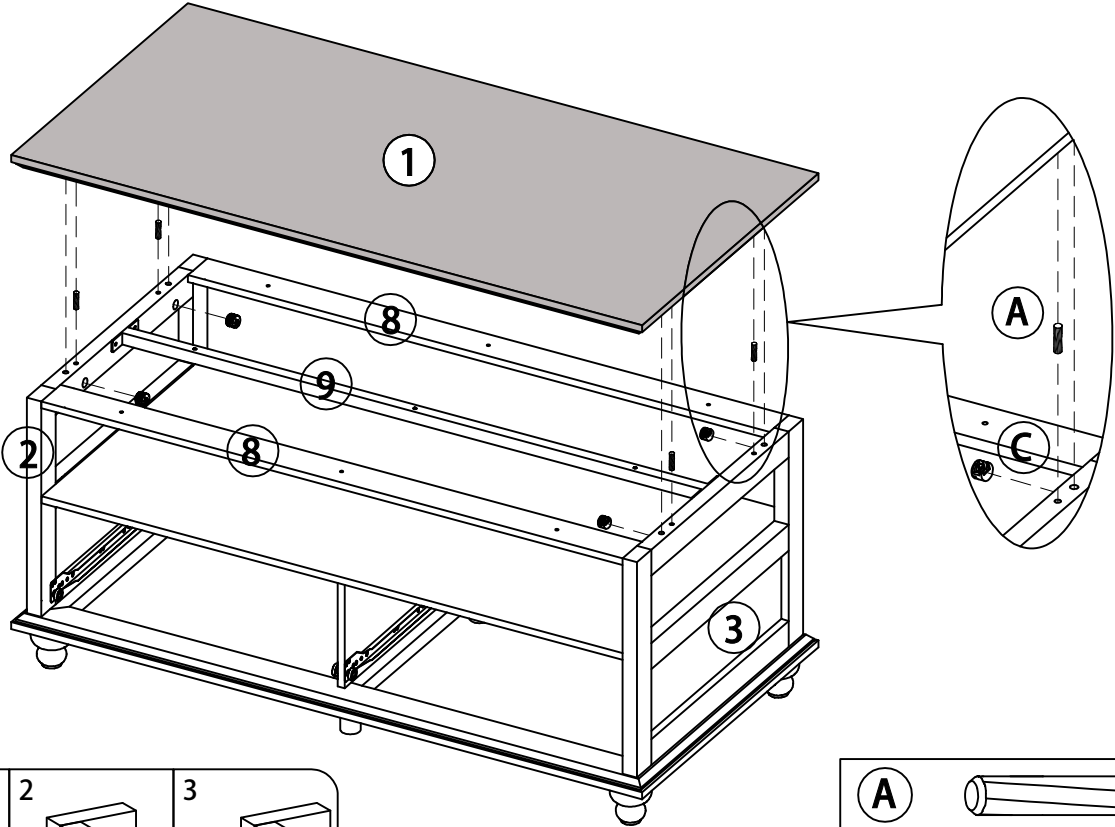


10


A		X4
C		X4


STEP 15

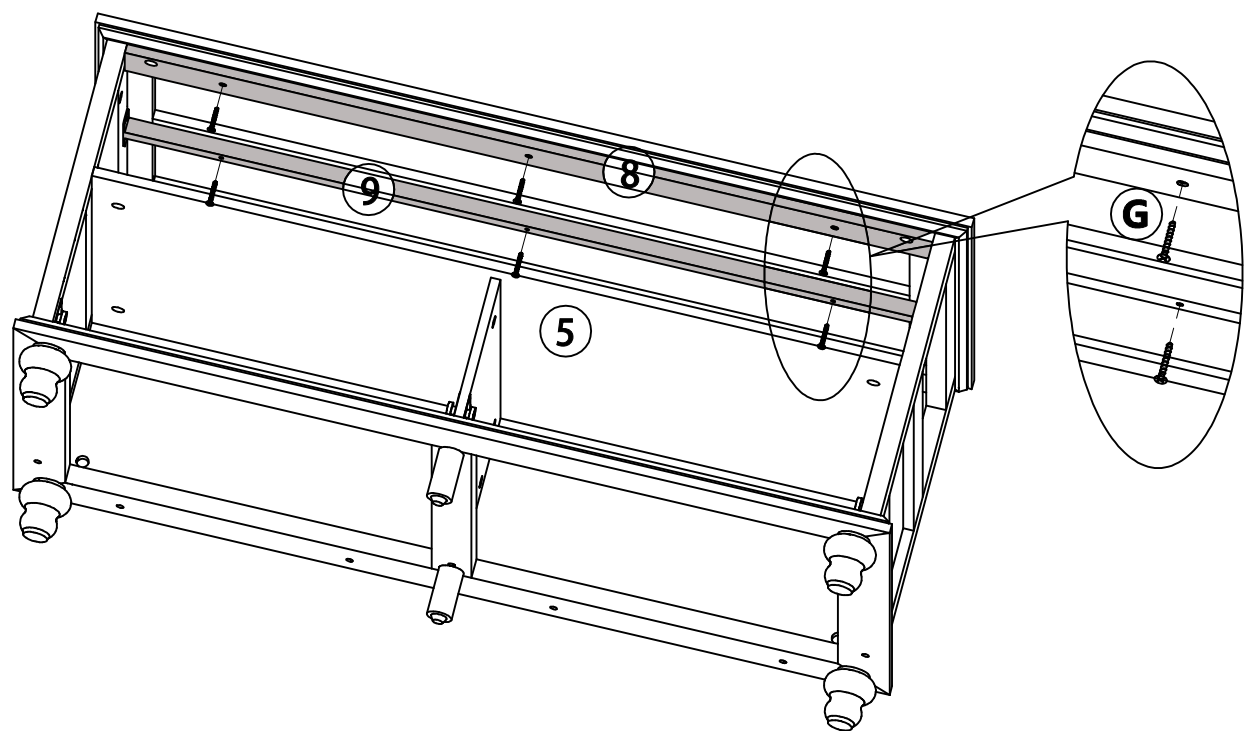



G  **X6**

STEP 16

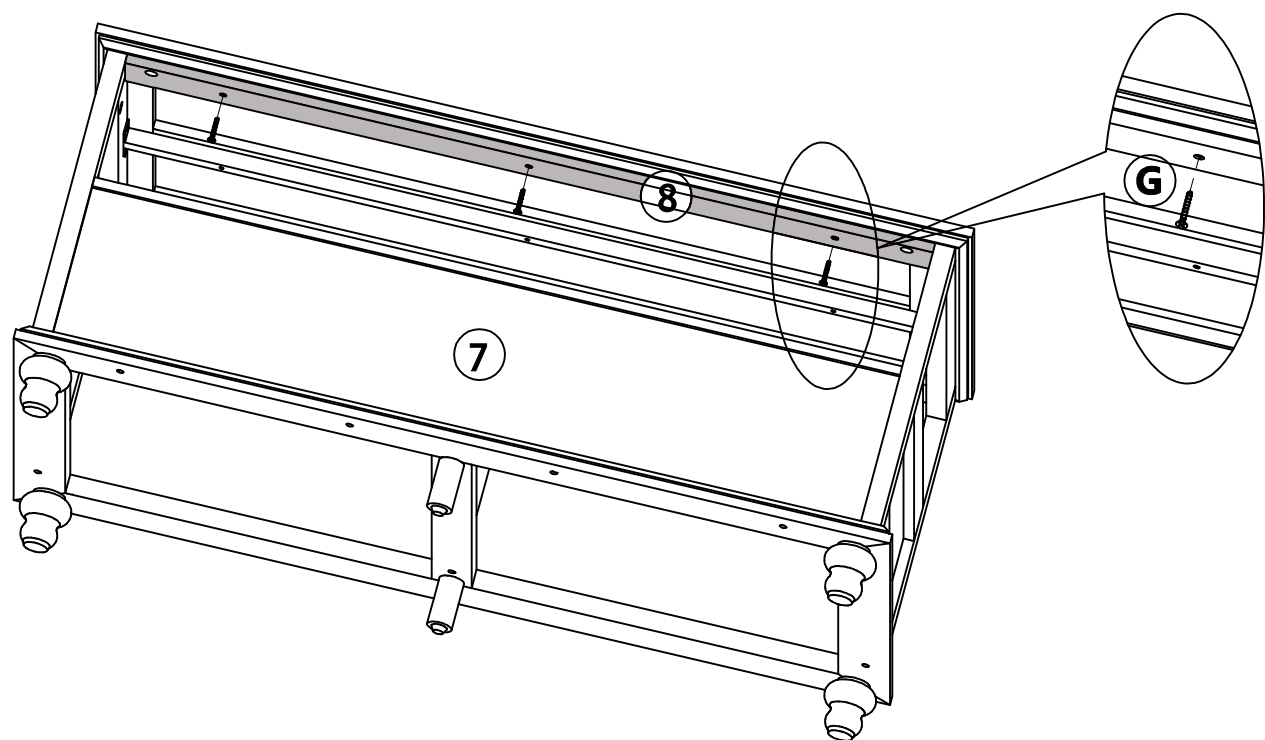


G  **X3**


STEP 17

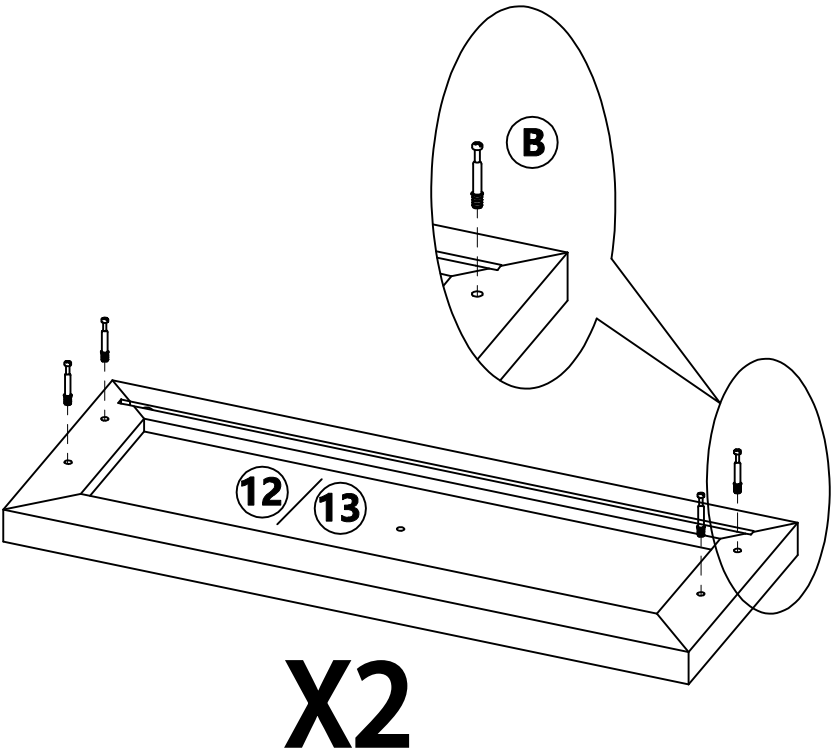


STEP 18

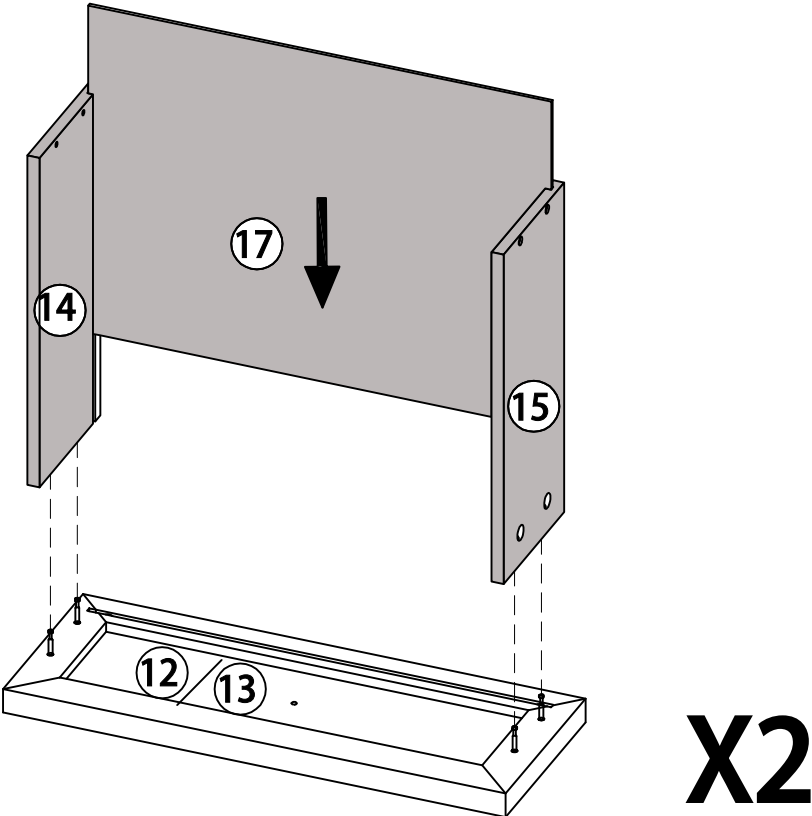


STEP 19

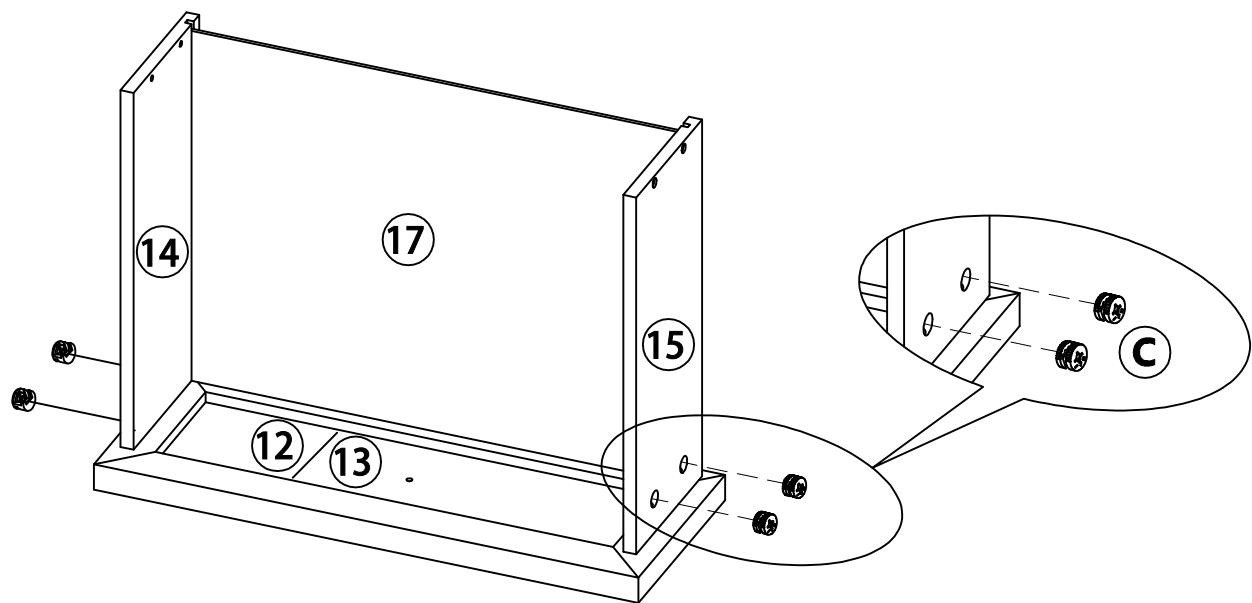

X2

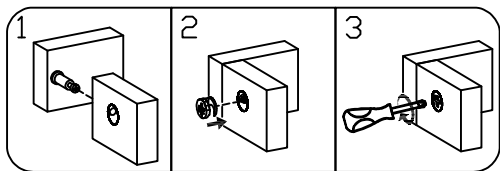


STEP 20



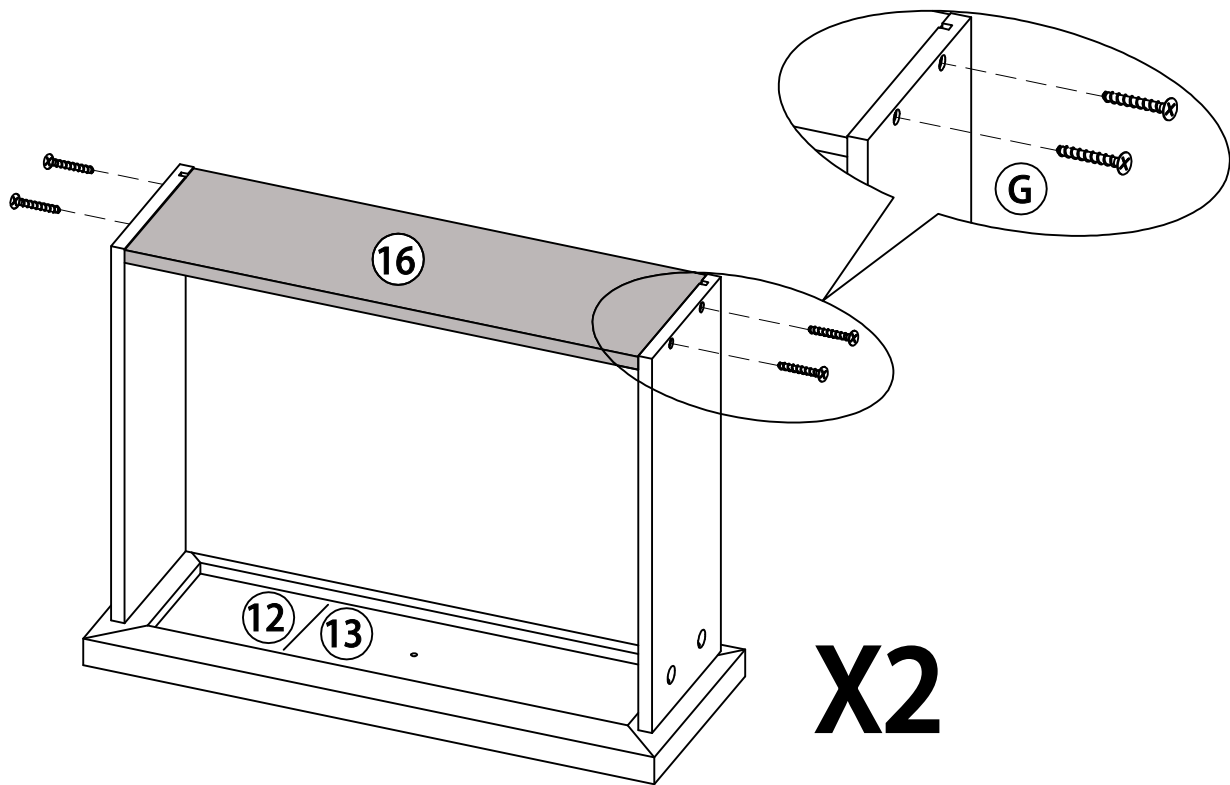


X2

13




STEP 21

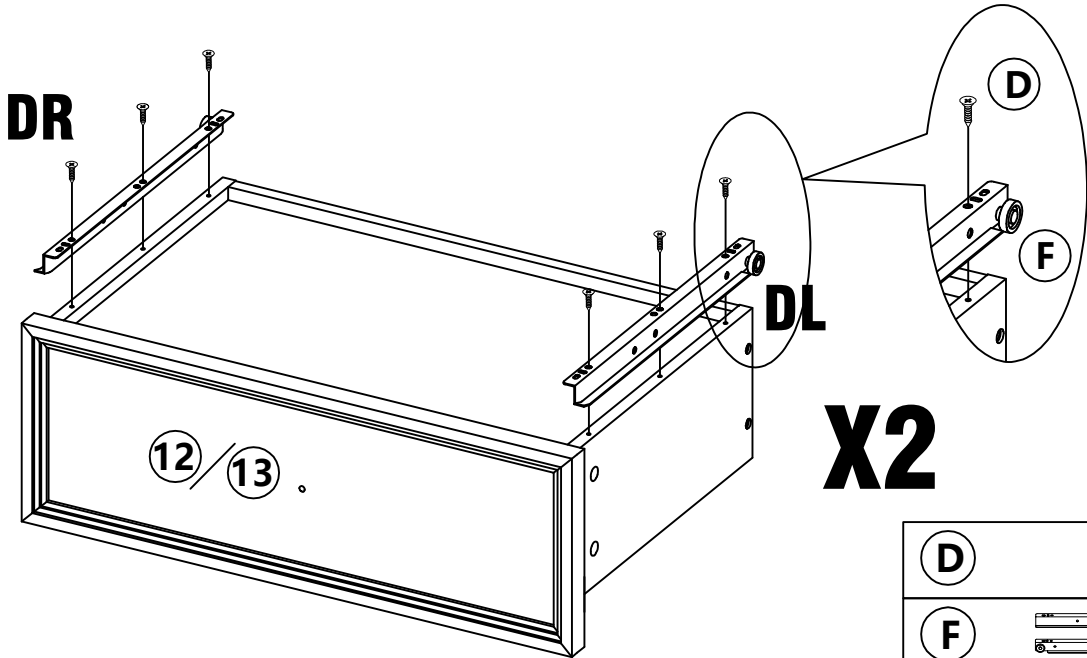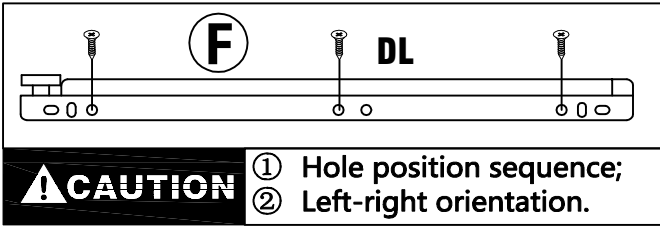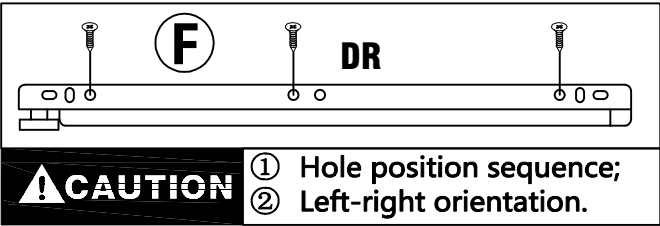


D		X12
F		X2

STEP 22

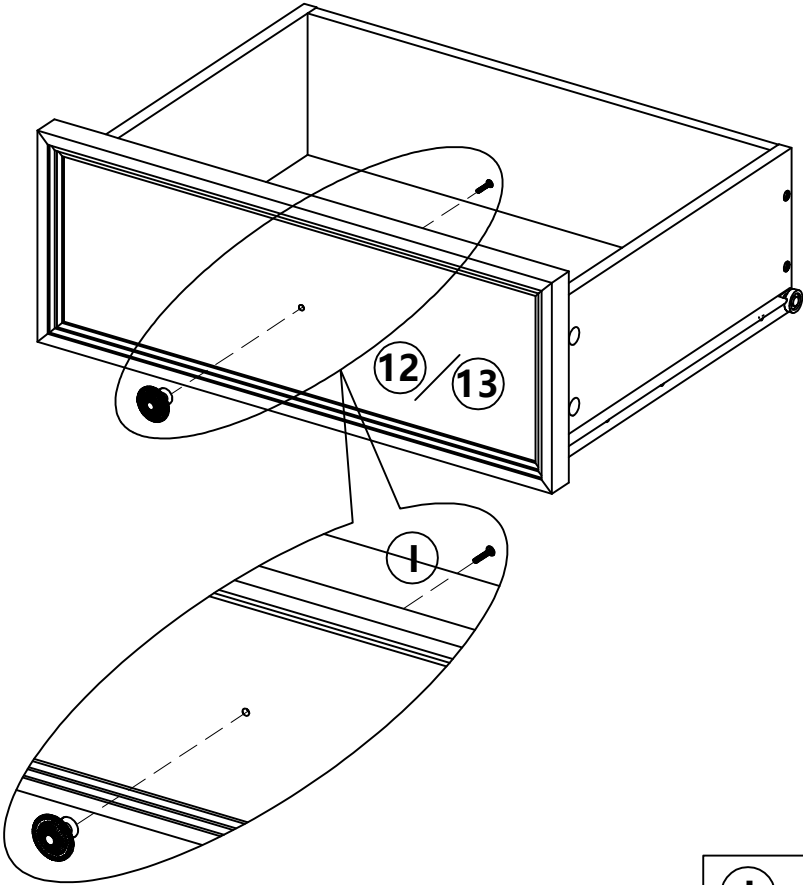

I		X2
----------	--	-----------

STEP 23

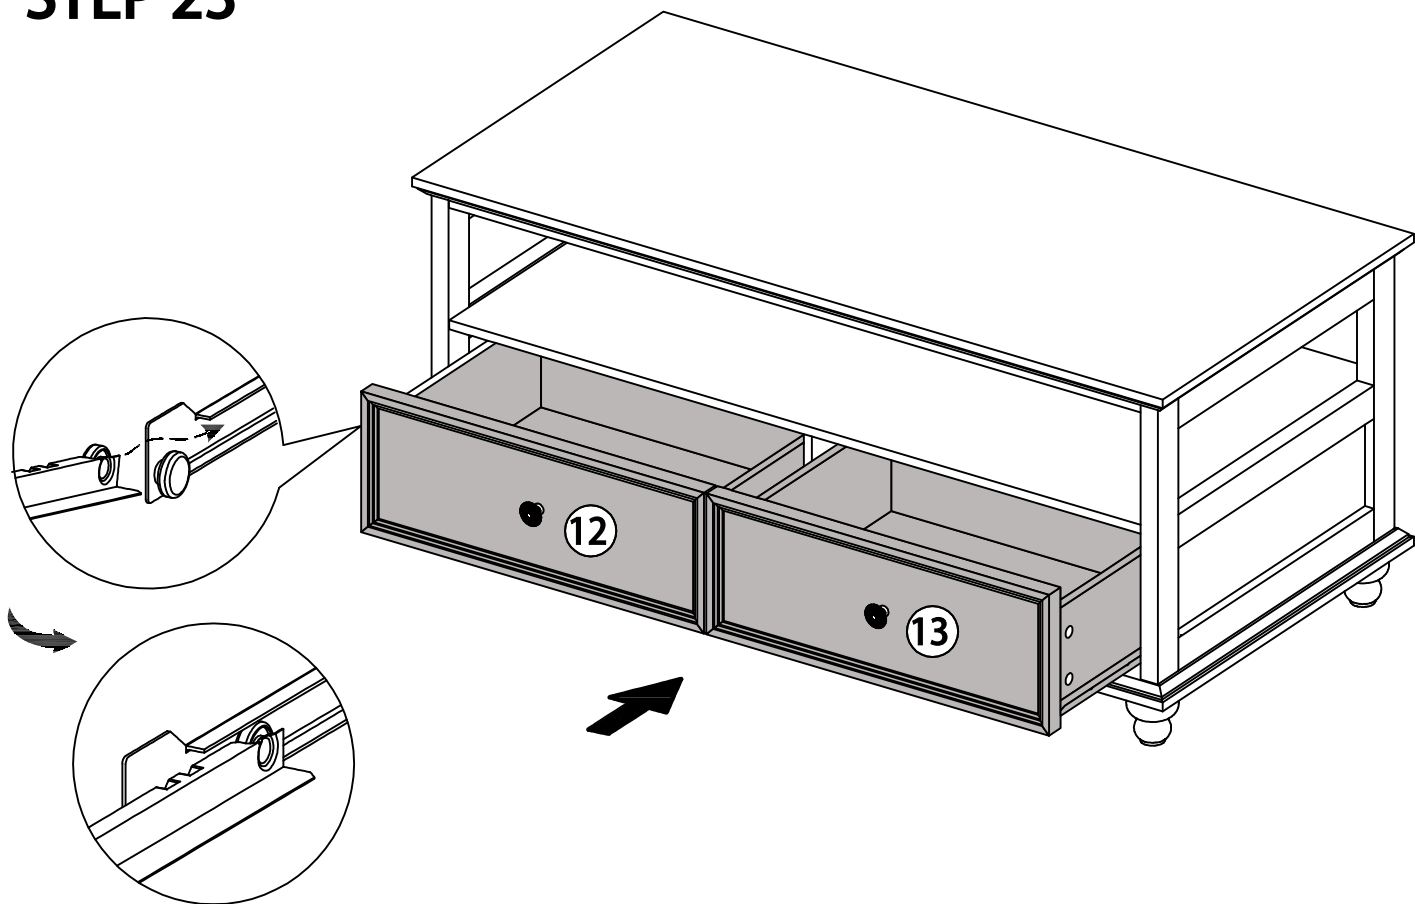

STEP 24

