











ASSEMBLY INSTRUCTION

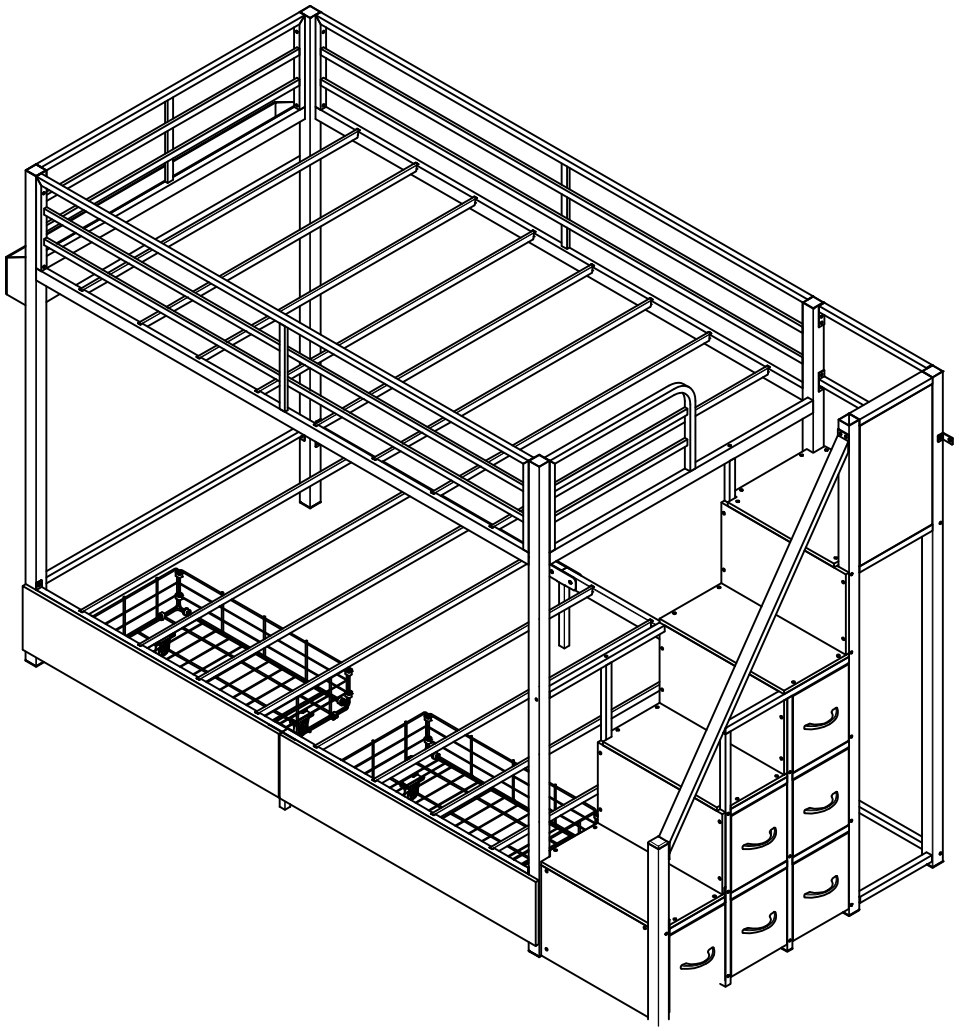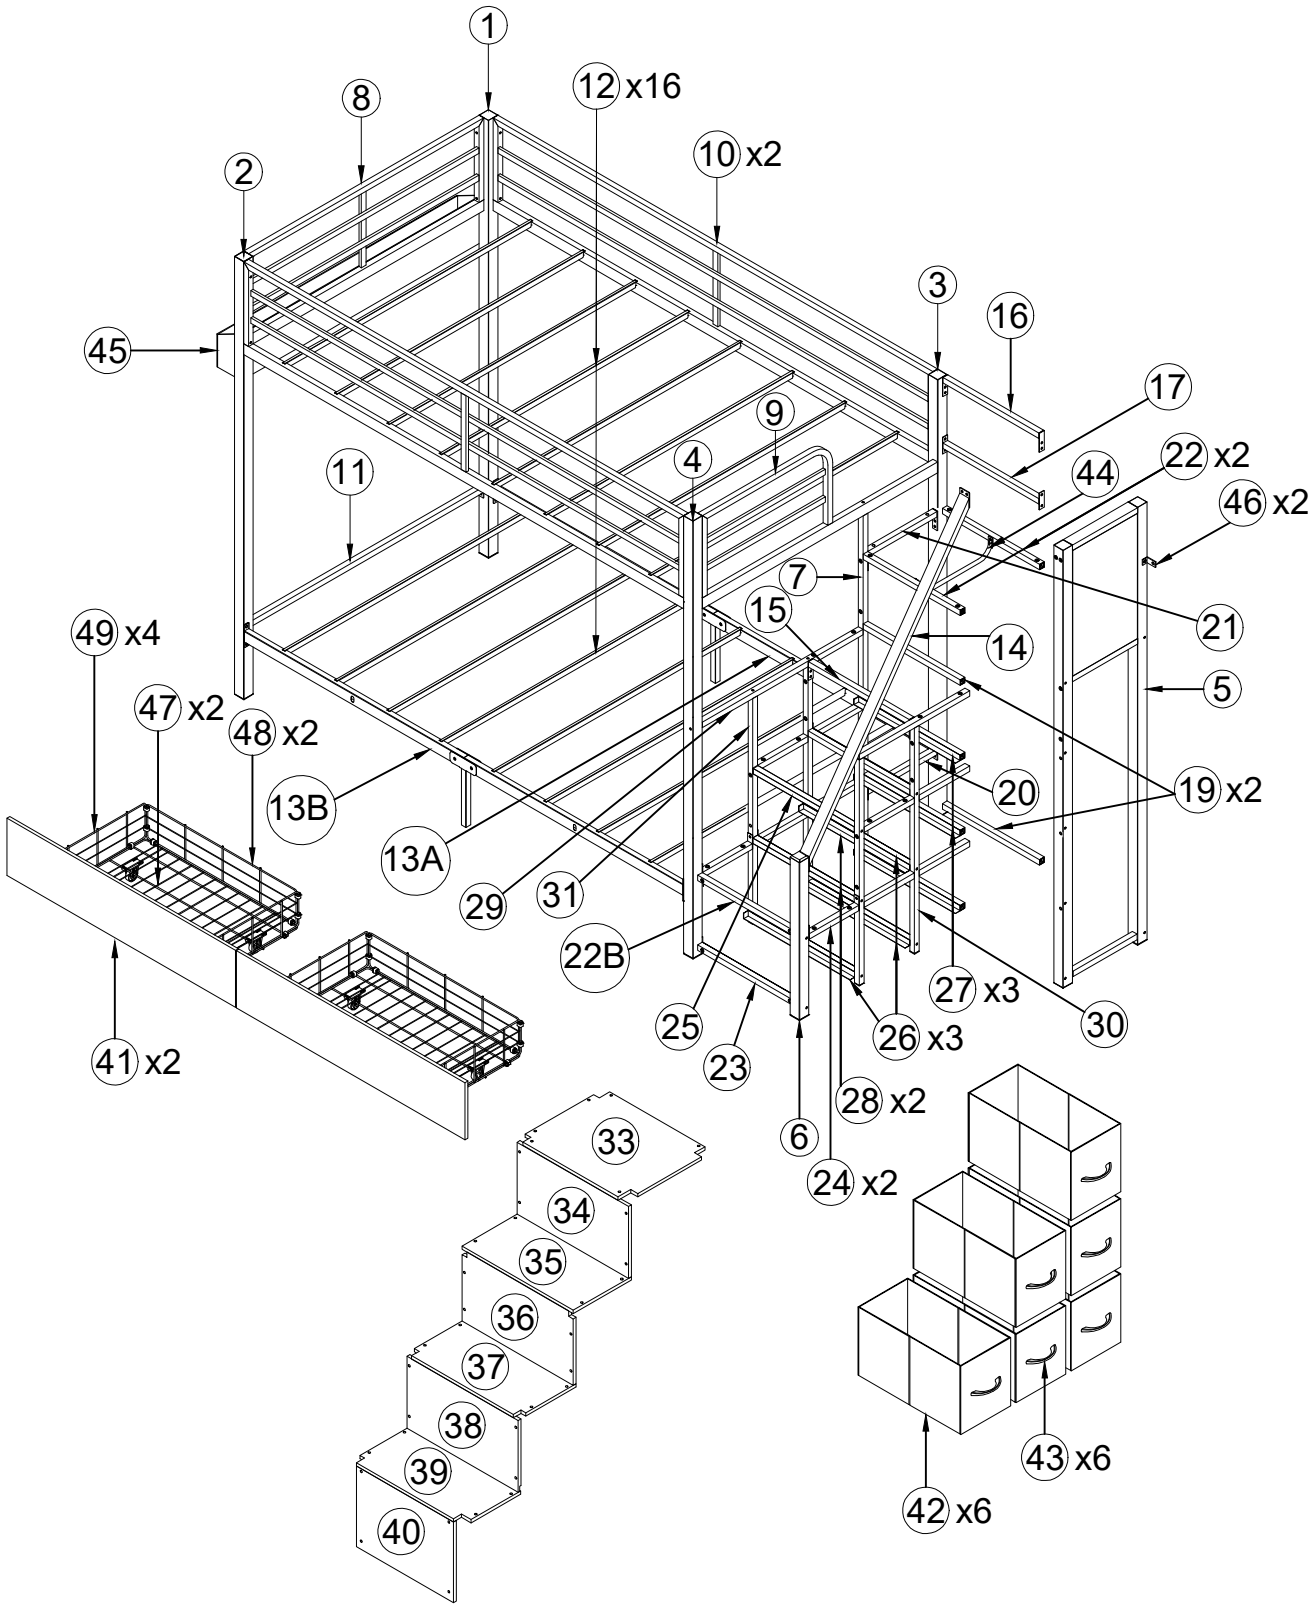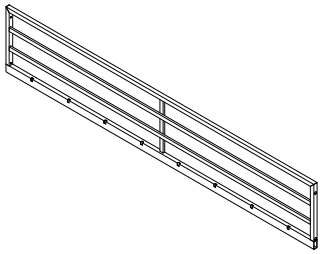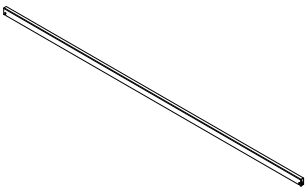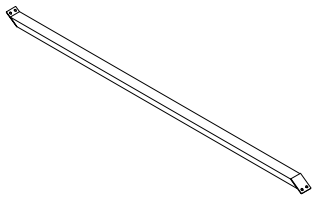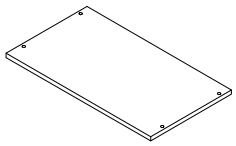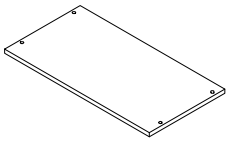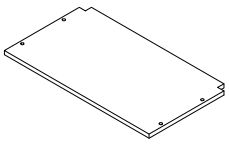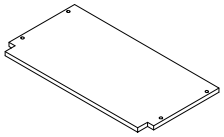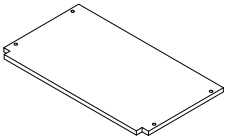

ASSEMBLY INSTRUCTION

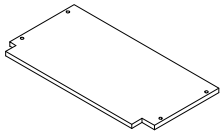


Part List Box 1

1 x1 Pc  Leg	2 x1 Pc  Leg	3 x1 Pc  Leg
4 x1 Pc  Leg	5 x1 Pc  Leg	7 x1 Pc Leg
10 x2 Pcs  Railings	12 x16 Pcs  Slats	14 x1 Pc  Handrail
34 x1 Pc  Wooden Plank	35 x1 Pc  Wooden Plank	36 x1 Pc  Wooden Plank
37 x1 Pc  Wooden Plank	38 x1 Pc  Wooden Plank	39 x1 Pc  Wooden Plank


Part List Box 1

45 x1 Pc

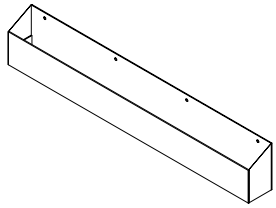

Fabiric Basket

45A x1 Pc

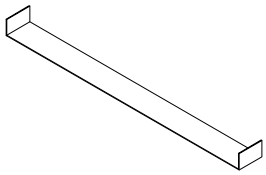

Bottom Fabiric Basket


Part List Box 2

6 x1 Pc




Leg

8 x1 Pc

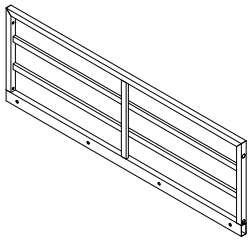


Bed Head Railing

9 x1 Pc

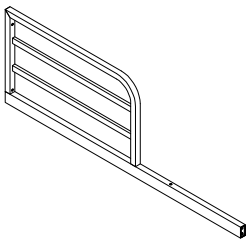


Bed End Railing

11 x1 Pc

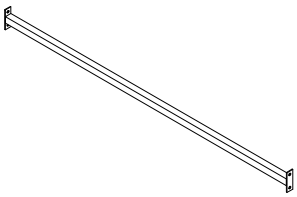


Headboard Rail

13A x1 Pc

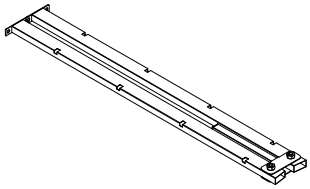


Right Side Rail

13B x1 Pc

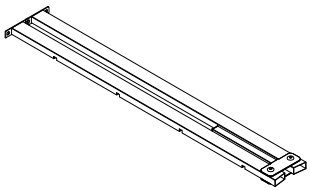


Left Side Rail

15 x1 Pc

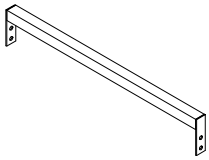


Rails

16 x1 Pc

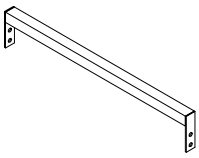
















Rails

17 x1 Pc

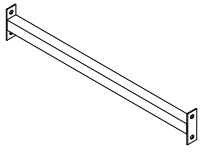


Rails

Part List Box 2

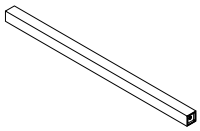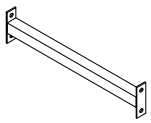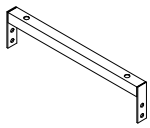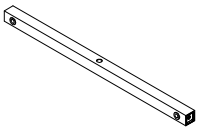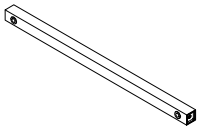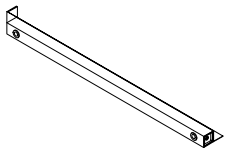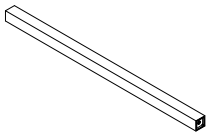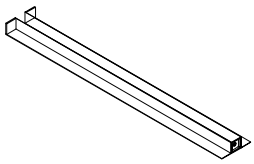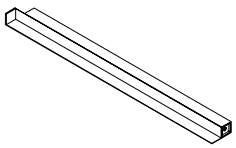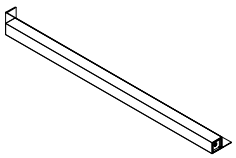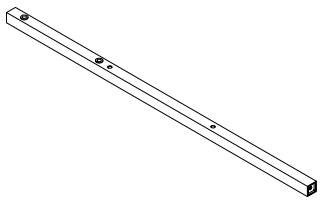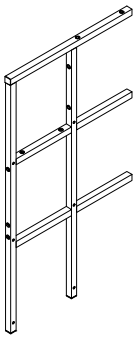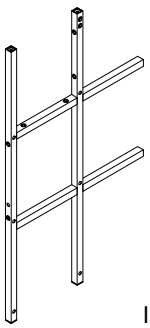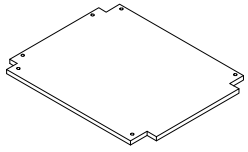19 x2 Pcs  Rails	20 x1 Pc  Rails	21 x1 Pc  Rails
22 x2 Pcs  Rails	22B x1 Pc  Rails	23 x1 Pc  Rails
24 x2 Pcs  Rails	25 x1 Pc  Rails	26 x3 Pcs  Rails
27 x3 Pcs  Rails	28 x2 Pcs  Rails	29 x1 Pc  Rails
30 x1 Pc  Iron Frame	31 x1 Pc  Iron Frame	33 x1 Pc  Wooden Plank


Part List Box 2

40 x1 Pc

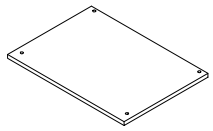


Wooden Plank

41 x2 Pcs

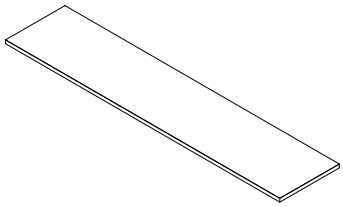


Drawers Panels

42 x6 Pcs

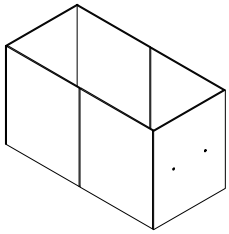

Fabiric Drawers

42A x6 Pcs

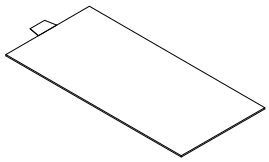


Bottom Drawers

43 x6 Pcs




Handle

44 x1 Pc

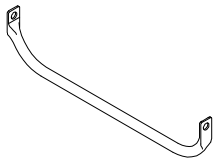


Handle

46 x2 Pcs




Anti-Overturning

47 x2 Pcs

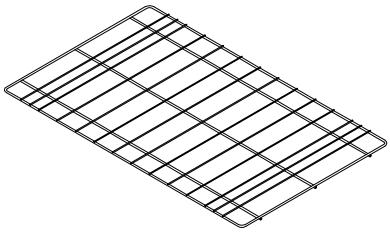


Bottom Of Drawer

48 x2 Pcs

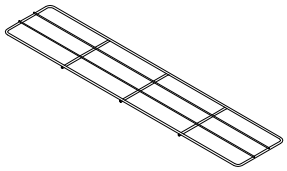







Back Of Drawer

49 x4 Pcs

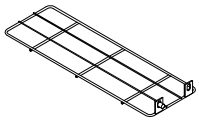


Side Of Drawer


Hardware List

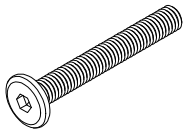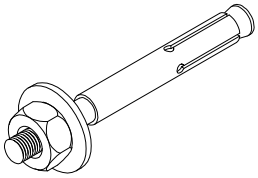A x2 Pcs  Bolts M8x55mm	B x52 Pcs  Bolts M6x15mm	C x70 Pcs  Bolts M6x30mm
D x18 Pcs  Bolts M6x55mm	F x2 Pcs  Alen key	M x8 Pcs  Wheels
Q x12 Pcs  Lock	I x12 Pcs  Screw M4x15mm	J x2 Pcs  M6x60mm
K x1 Pc  Wrench	L x2 Pcs  Bolts M6x20mm	N x10 Pcs  Bolts M6x10mm


STEP 1

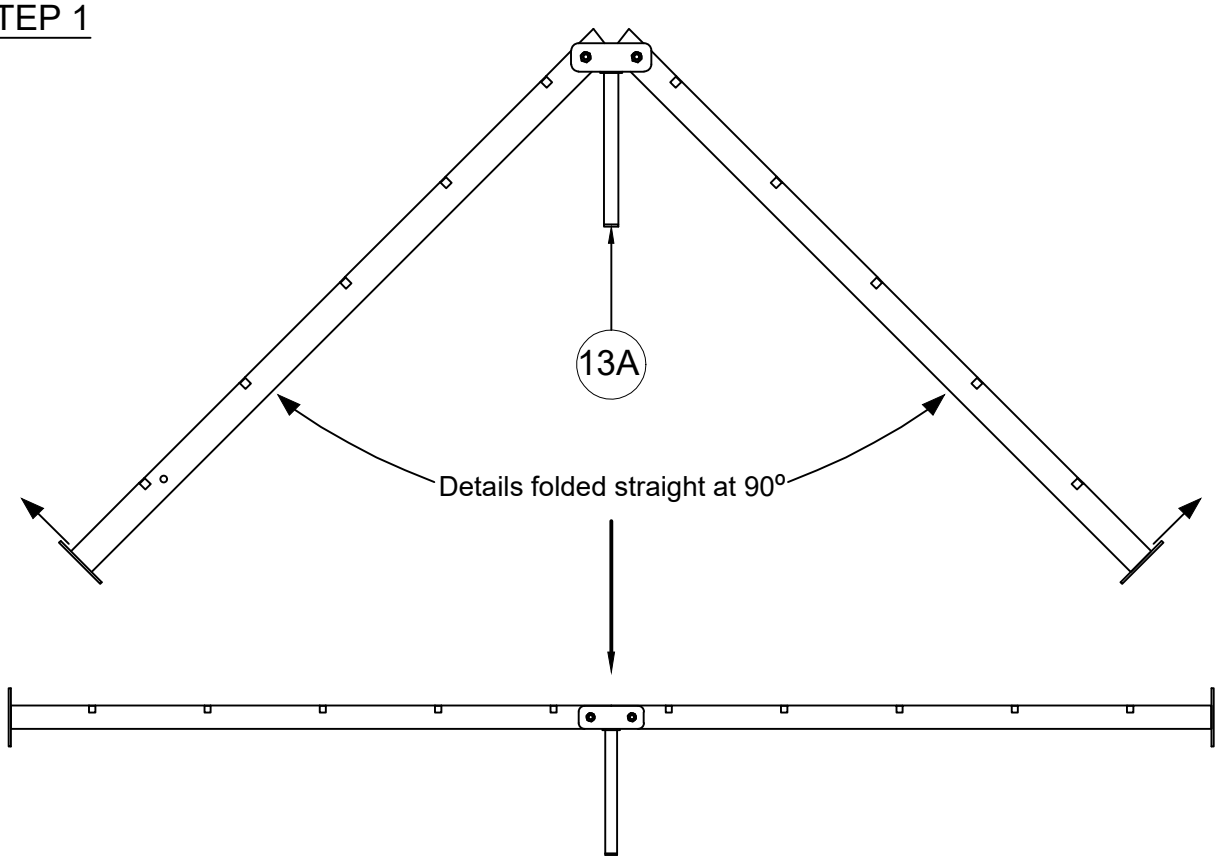
13A
Details folded straight at 90º

STEP 2

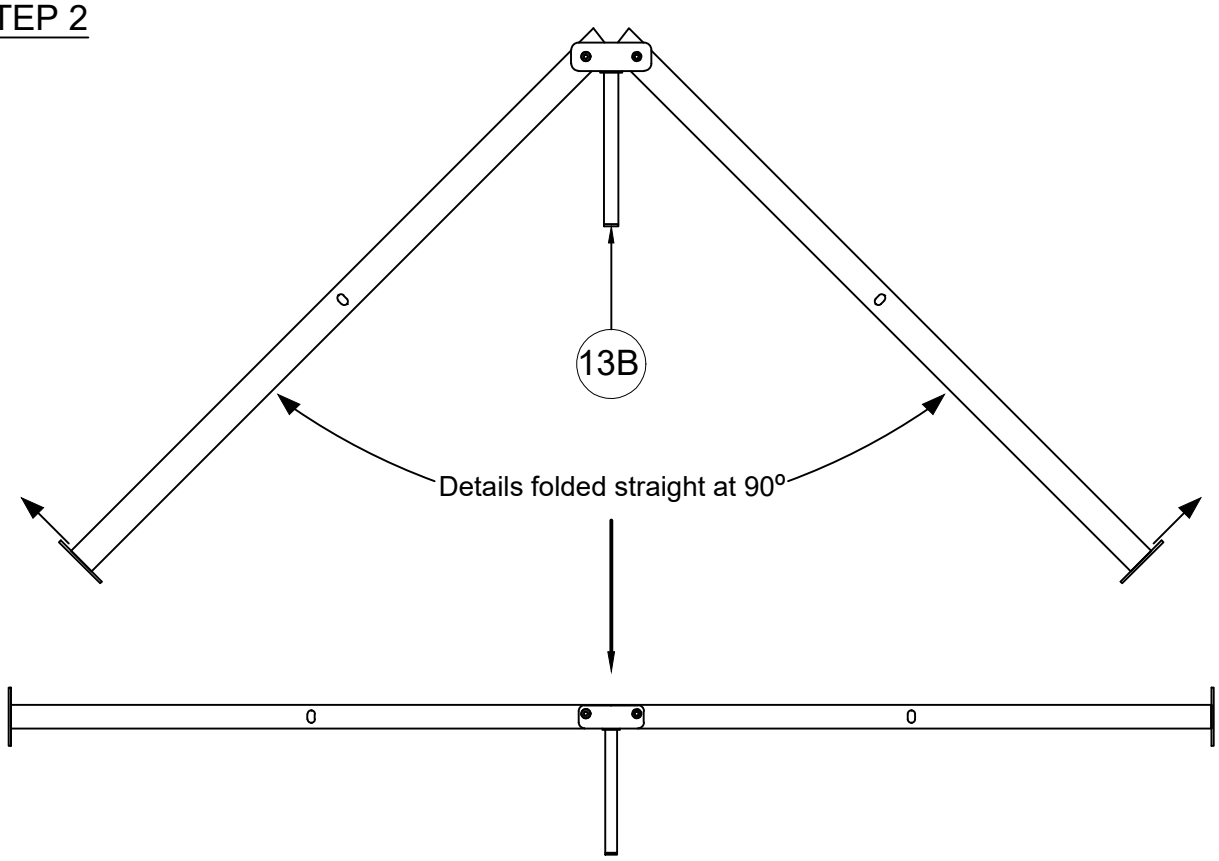

13B
Details folded straight at 90º

STEP 3

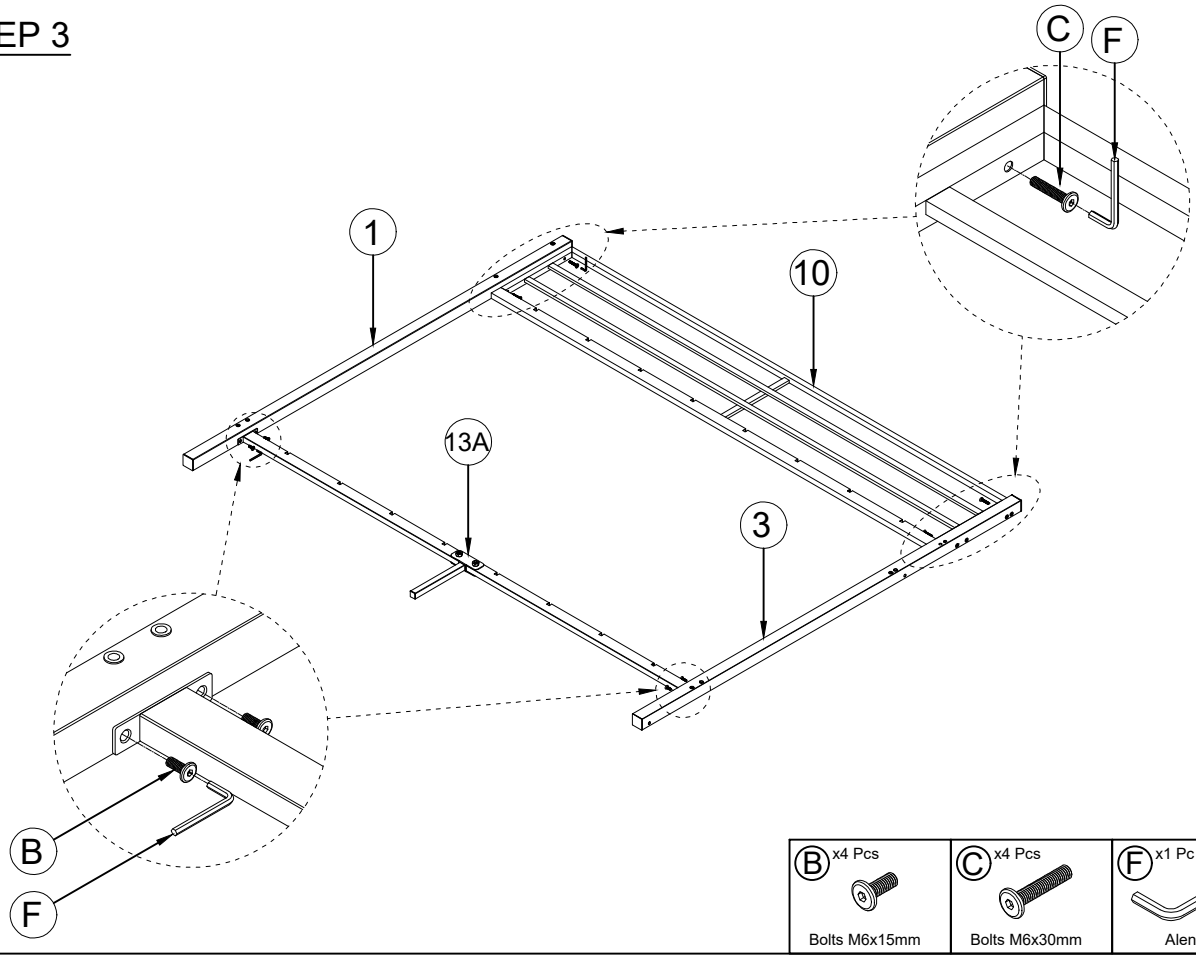


B x4 Pcs	C x4 Pcs	F x1 Pc
Bolts M6x15mm	Bolts M6x30mm	Alen key

STEP 4

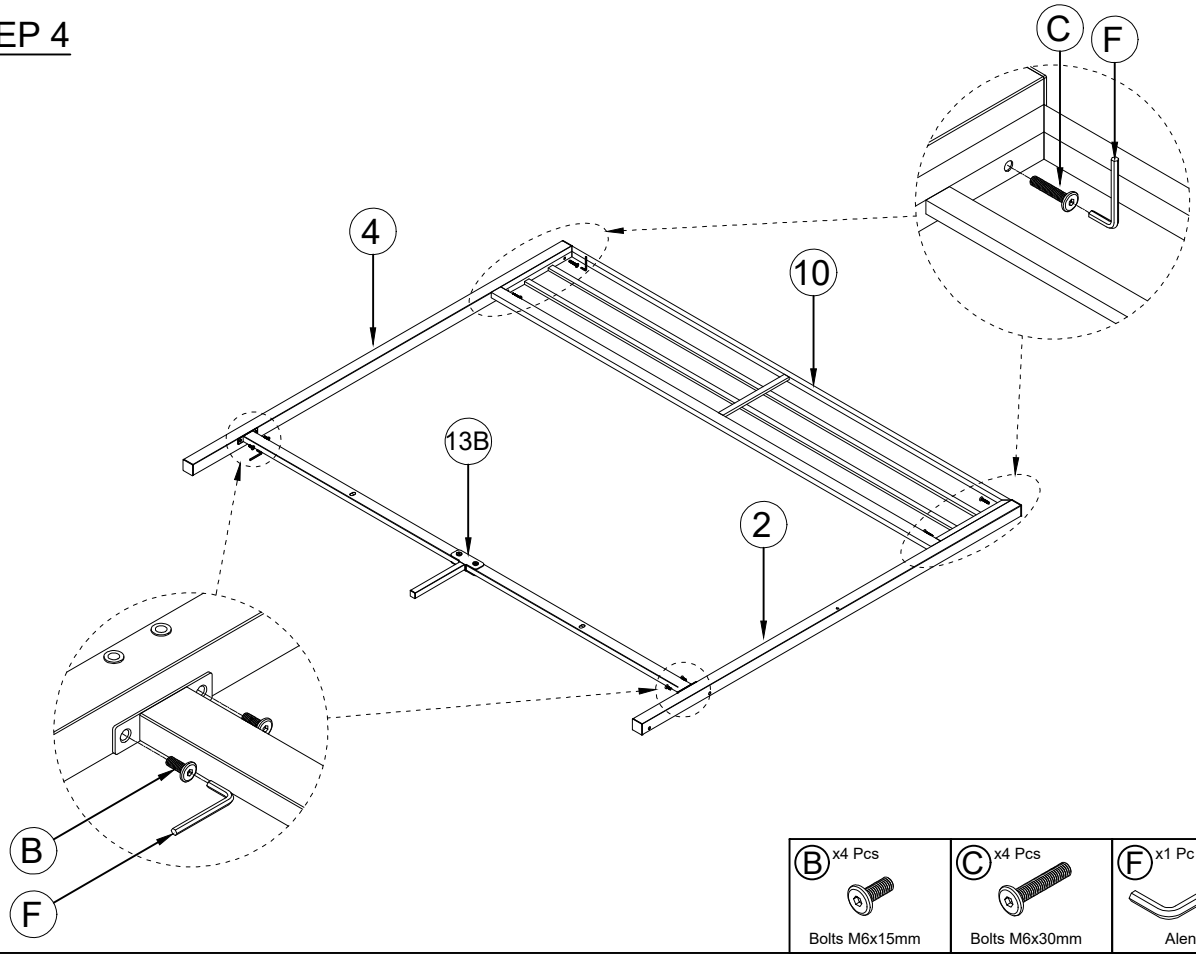


B x4 Pcs	C x4 Pcs	F x1 Pc
Bolts M6x15mm	Bolts M6x30mm	Alen key

STEP 5

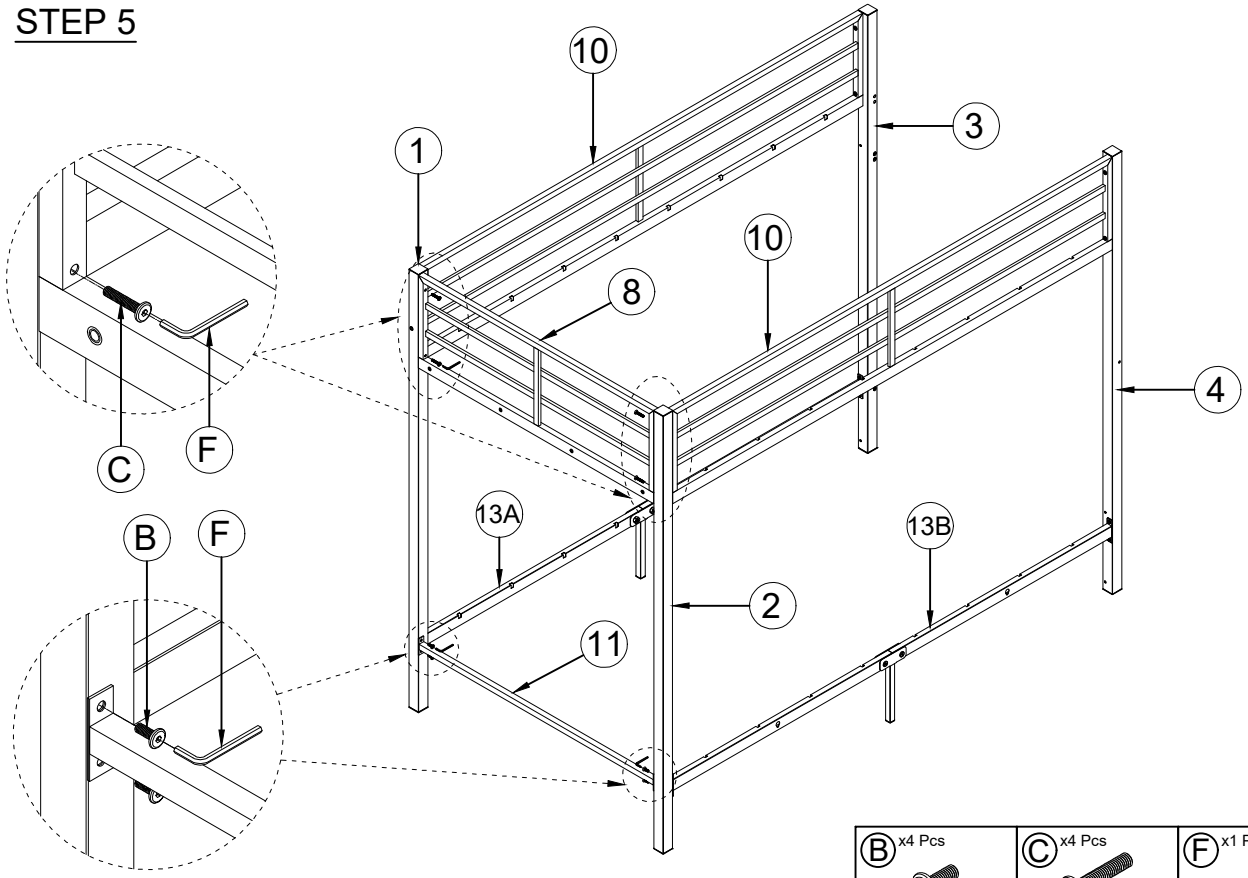


B x4 Pcs	C x4 Pcs	F x1 Pc
Bolts M6x15mm	Bolts M6x30mm	Alen key

STEP 6

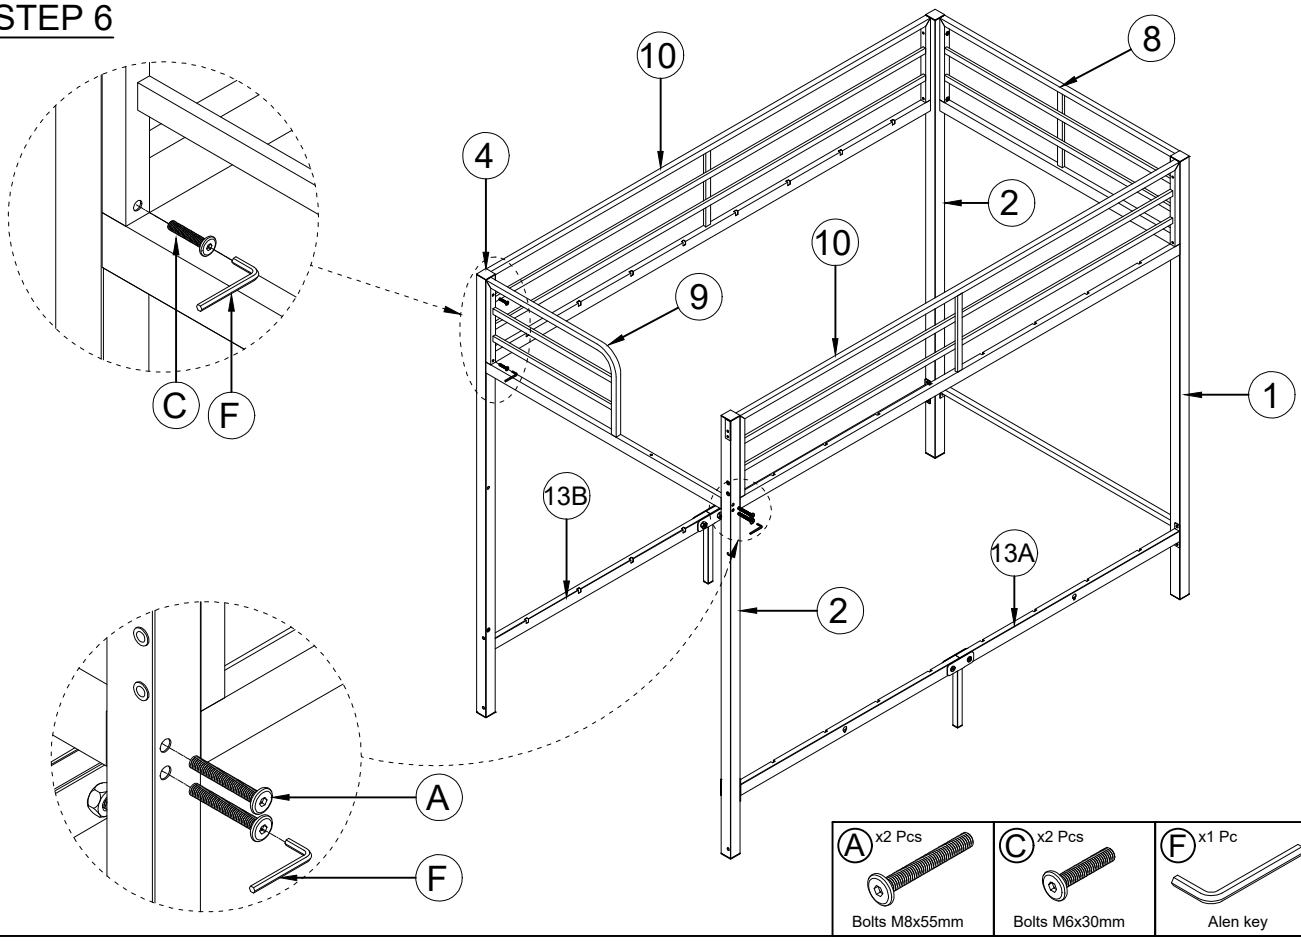


A x2 Pcs	C x2 Pcs	F x1 Pc
Bolts M8x55mm	Bolts M6x30mm	Alen key

STEP 7

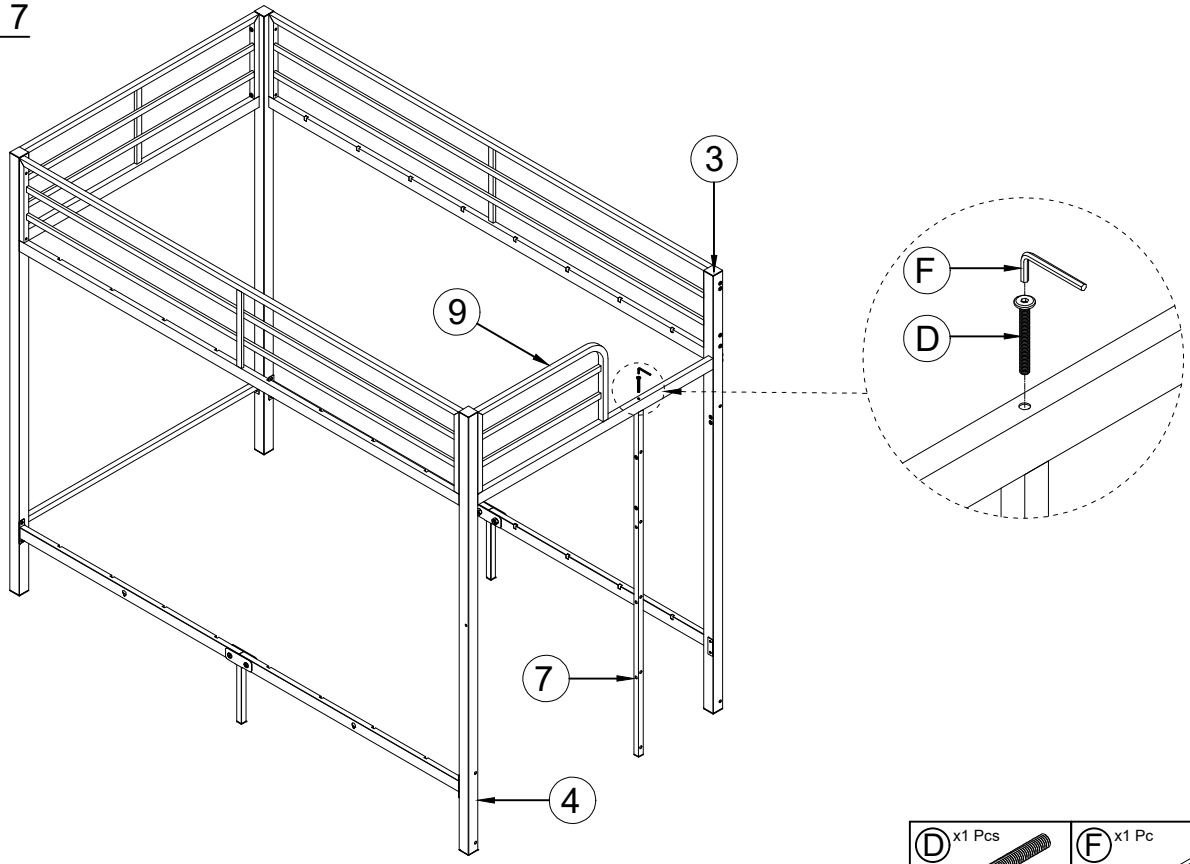


D x1 Pcs	F x1 Pc
Bolts M6x55mm	Alen key

STEP 8

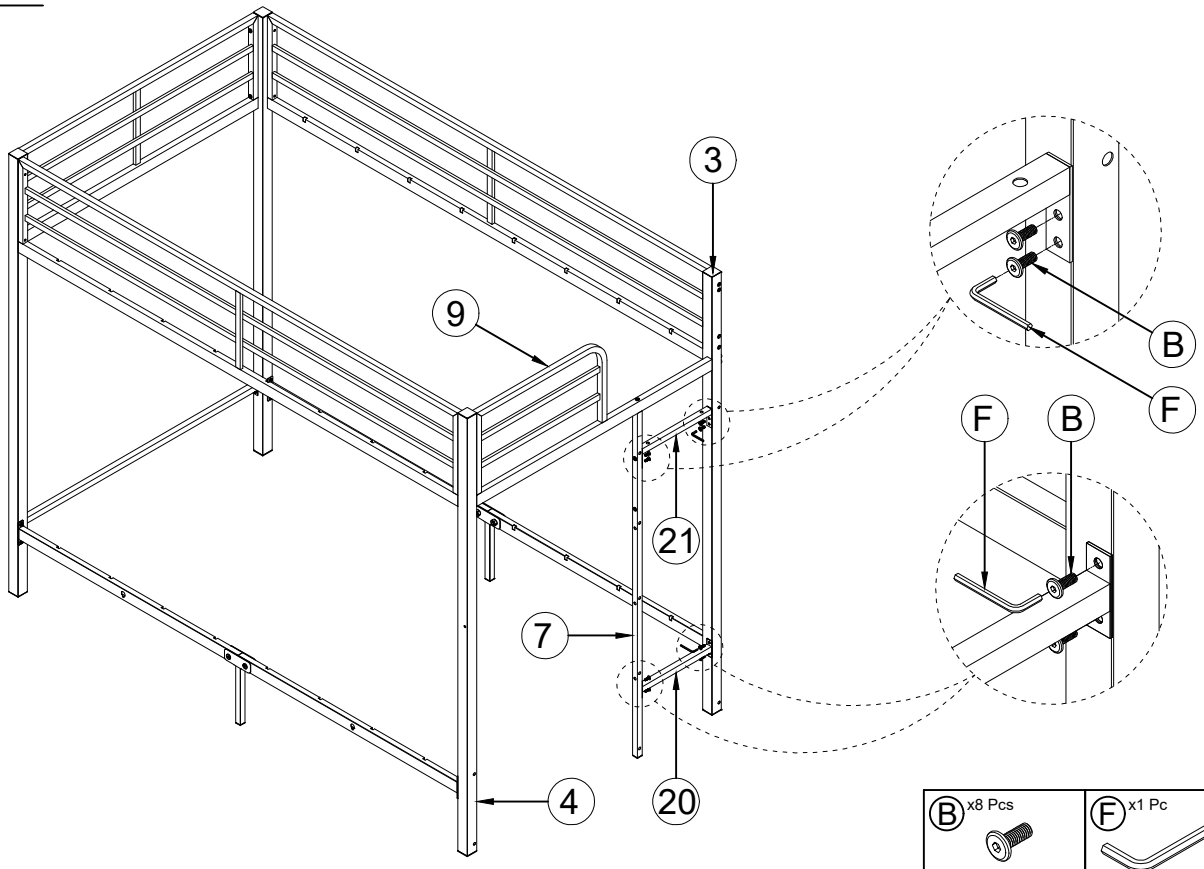


B x8 Pcs	F x1 Pc
Bolts M6x15mm	Alen key

STEP 9

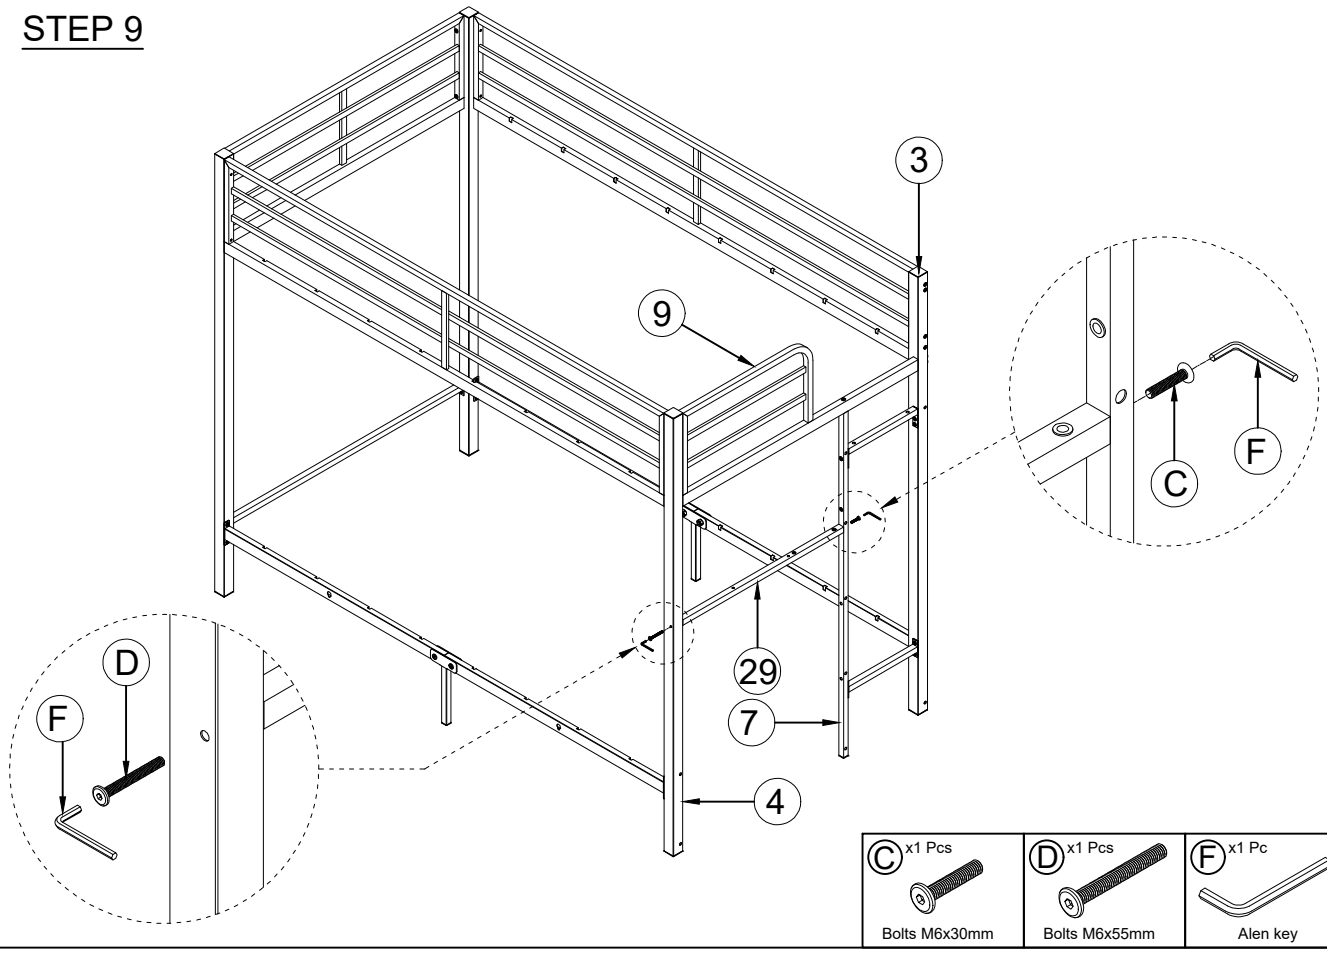


Ⓒ x1 Pcs	Ⓓ x1 Pcs	Ⓕ x1 Pc
Bolts M6x30mm	Bolts M6x55mm	Alen key

STEP 10

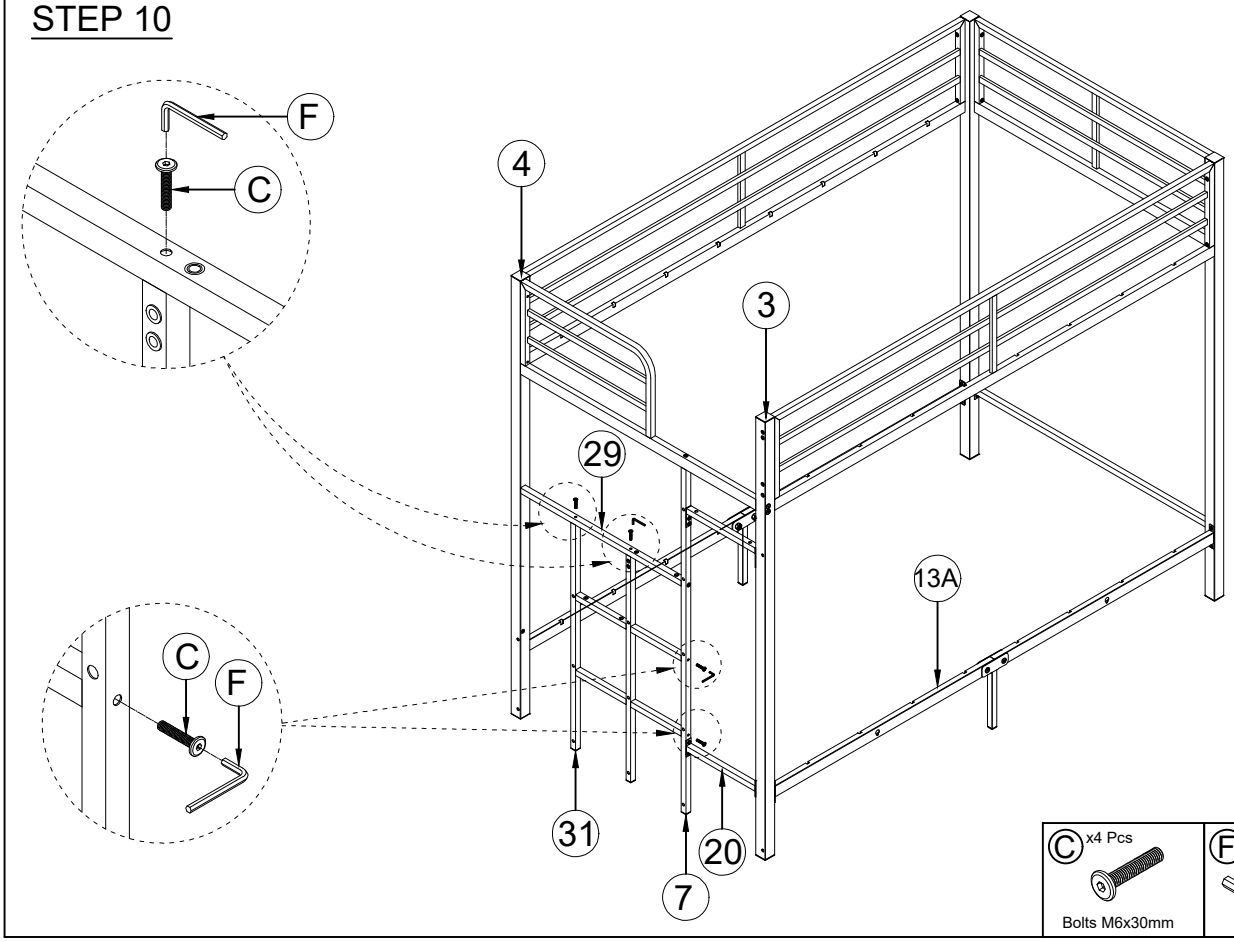


Ⓒ x4 Pcs	Ⓕ x1 Pc
Bolts M6x30mm	Alen key

STEP 11

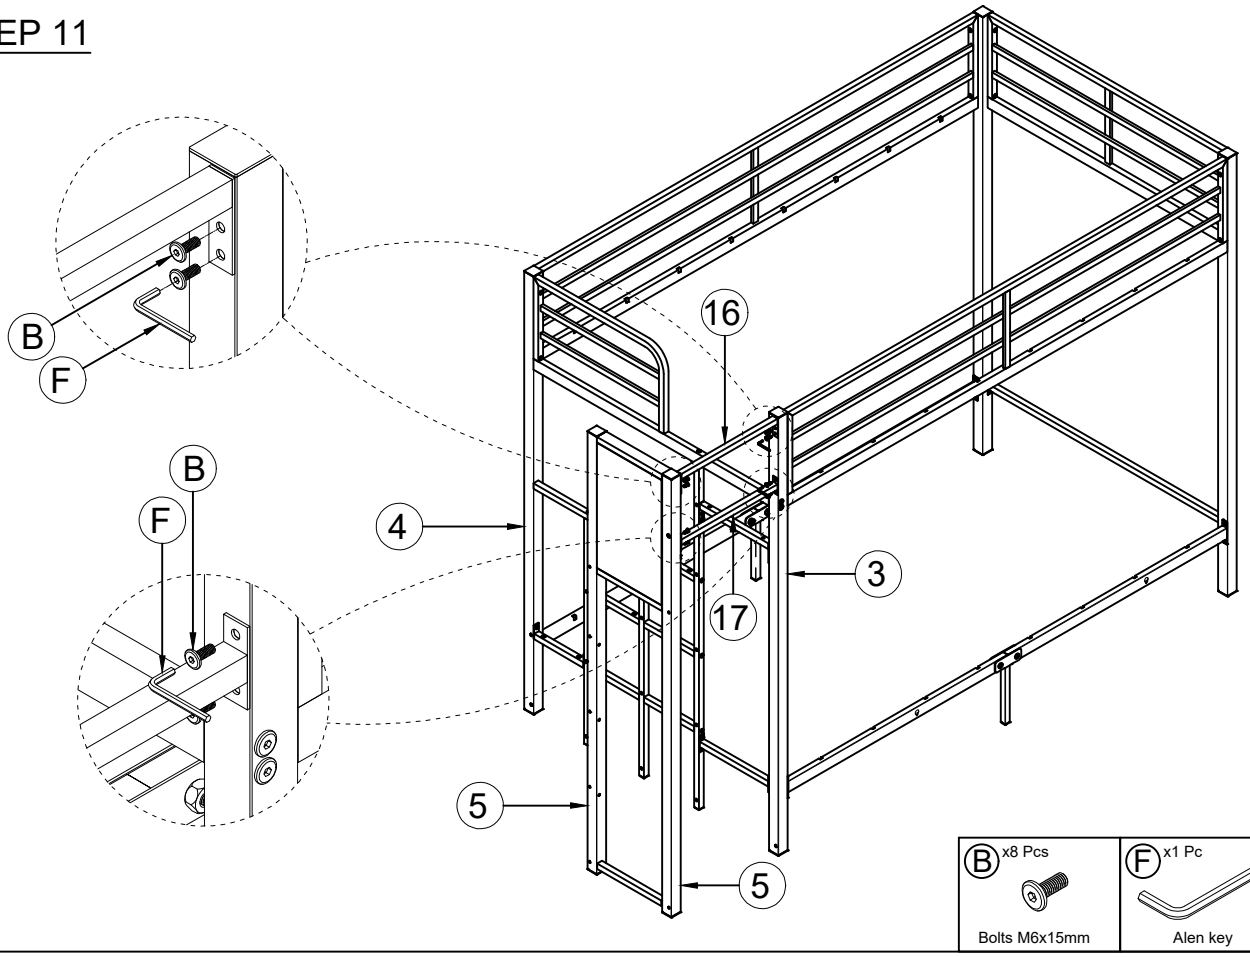


B x8 Pcs	F x1 Pc
Bolts M6x15mm	Alen key

STEP 12

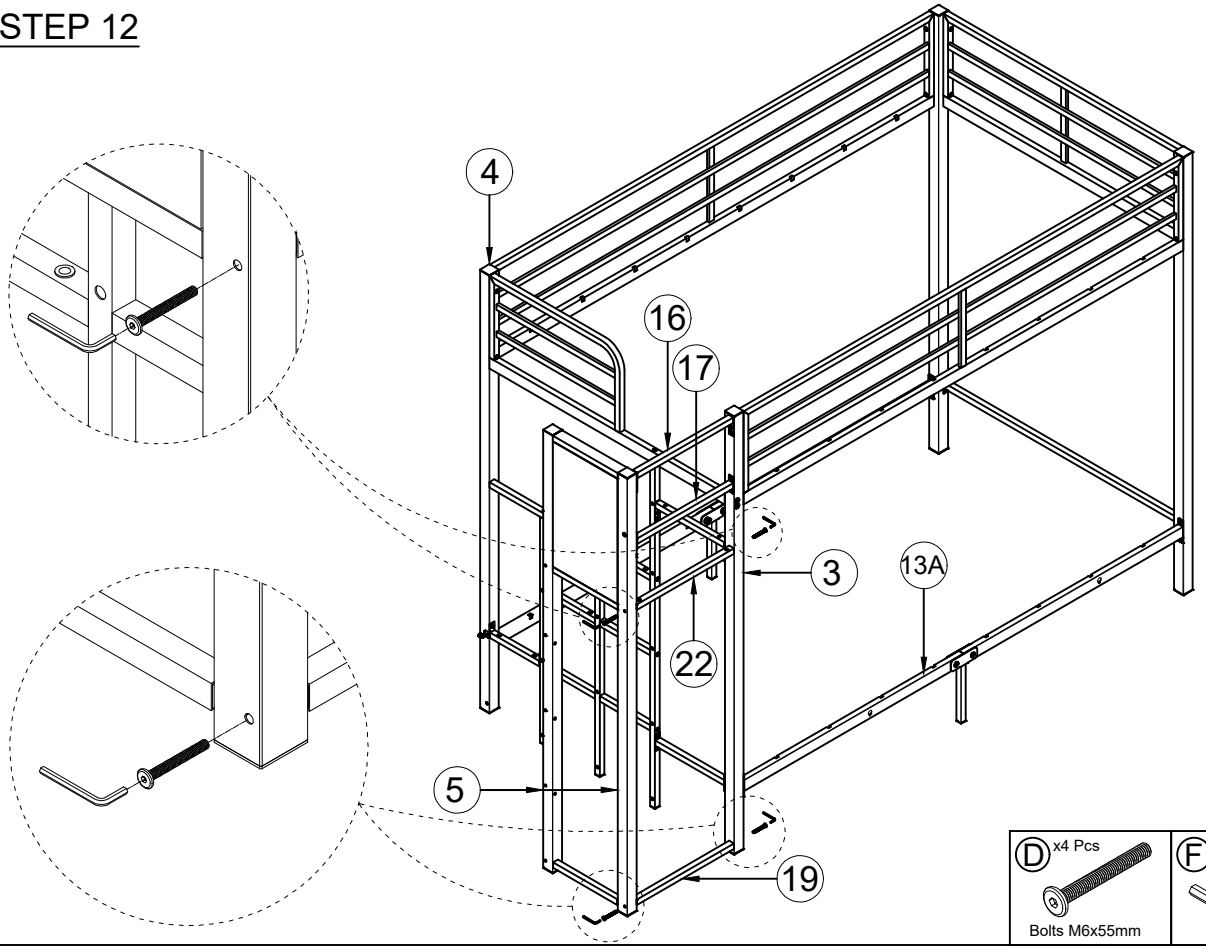


D x4 Pcs	F x1 Pc
Bolts M6x55mm	Alen key

STEP 13

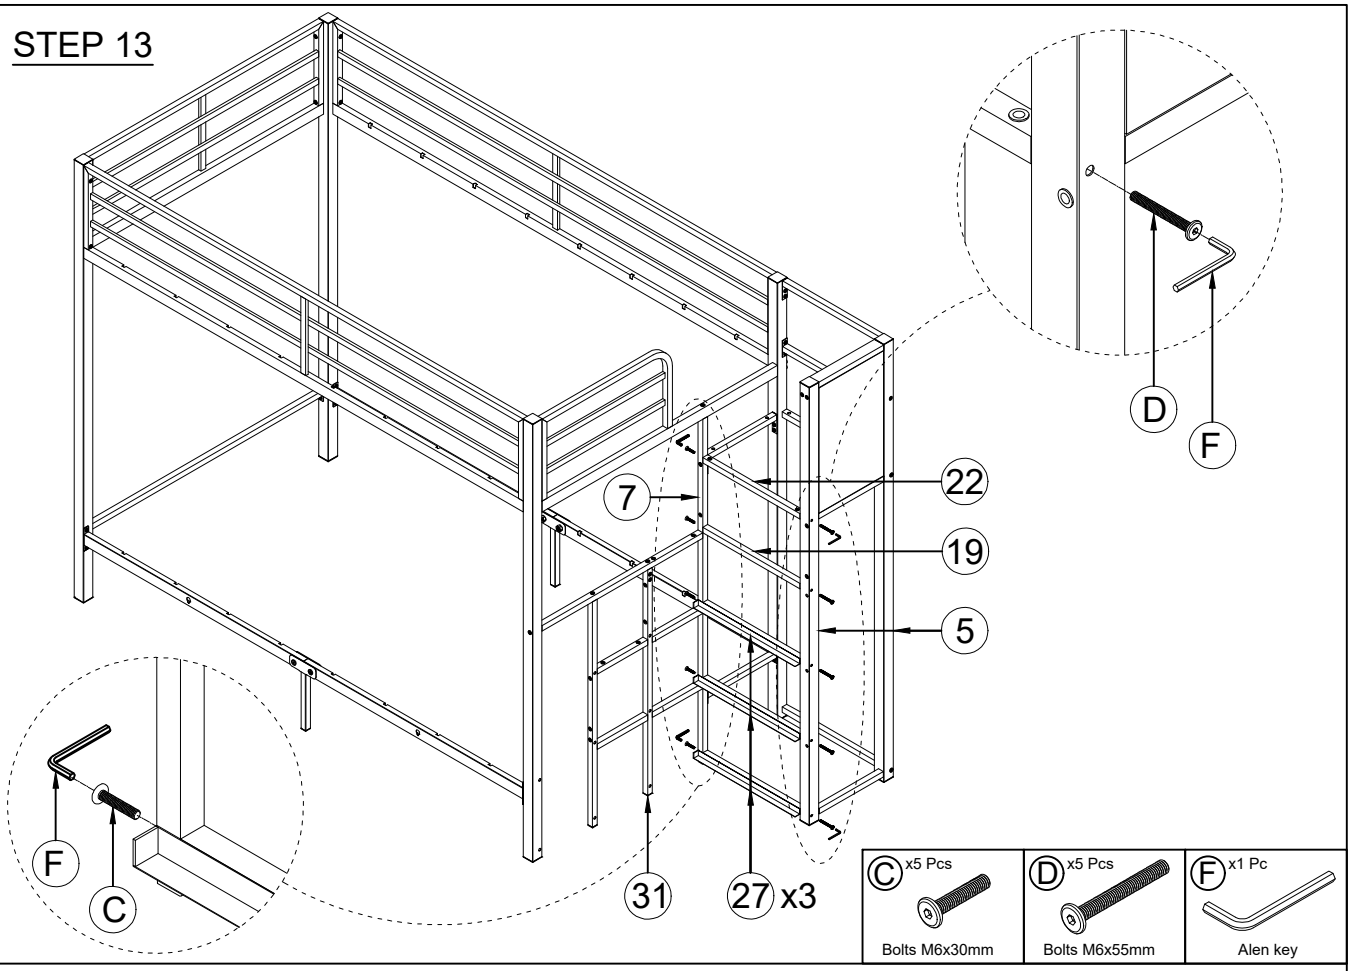


Ⓒ x5 Pcs	Ⓓ x5 Pcs	Ⓕ x1 Pc
Bolts M6x30mm	Bolts M6x55mm	Alen key

STEP 14

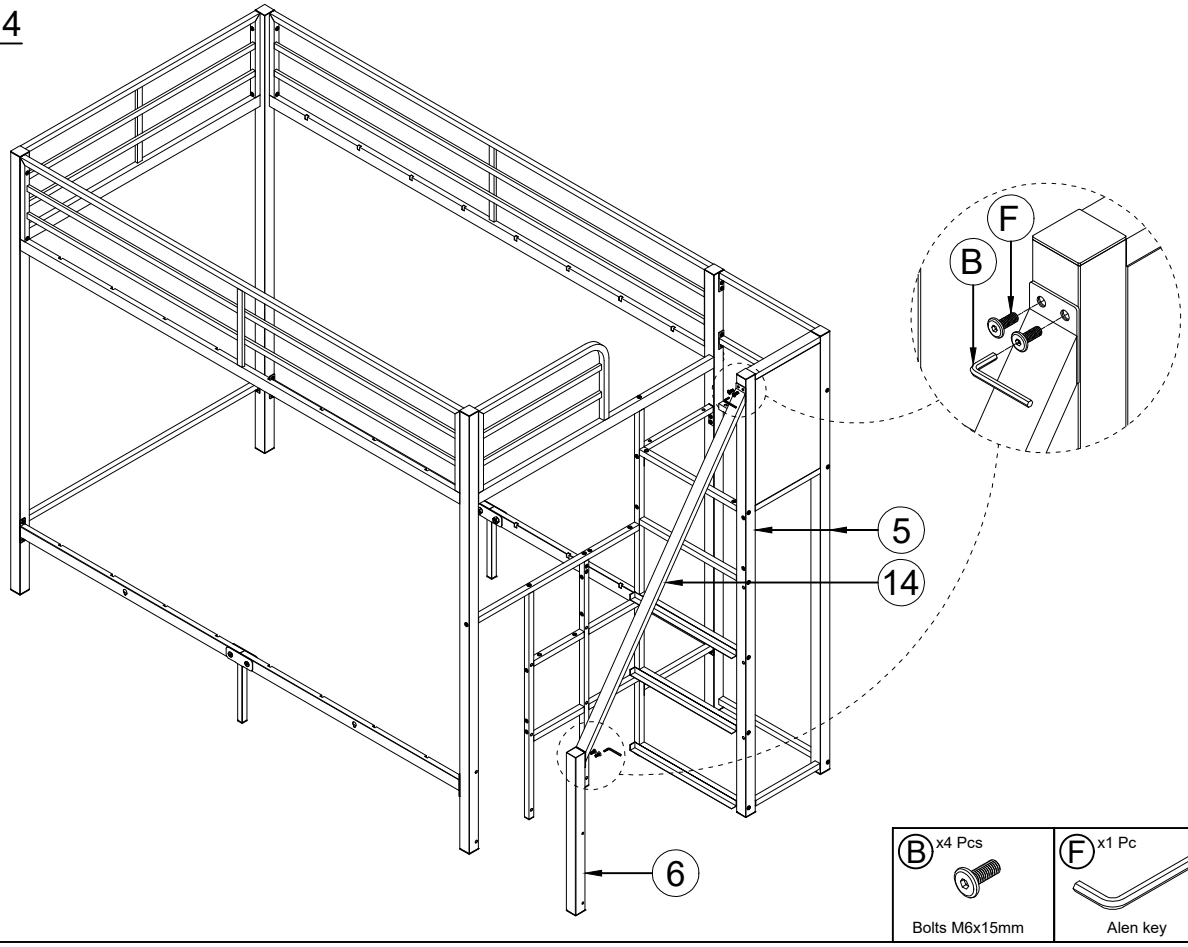


Ⓑ x4 Pcs	Ⓕ x1 Pc
Bolts M6x15mm	Alen key

STEP 15

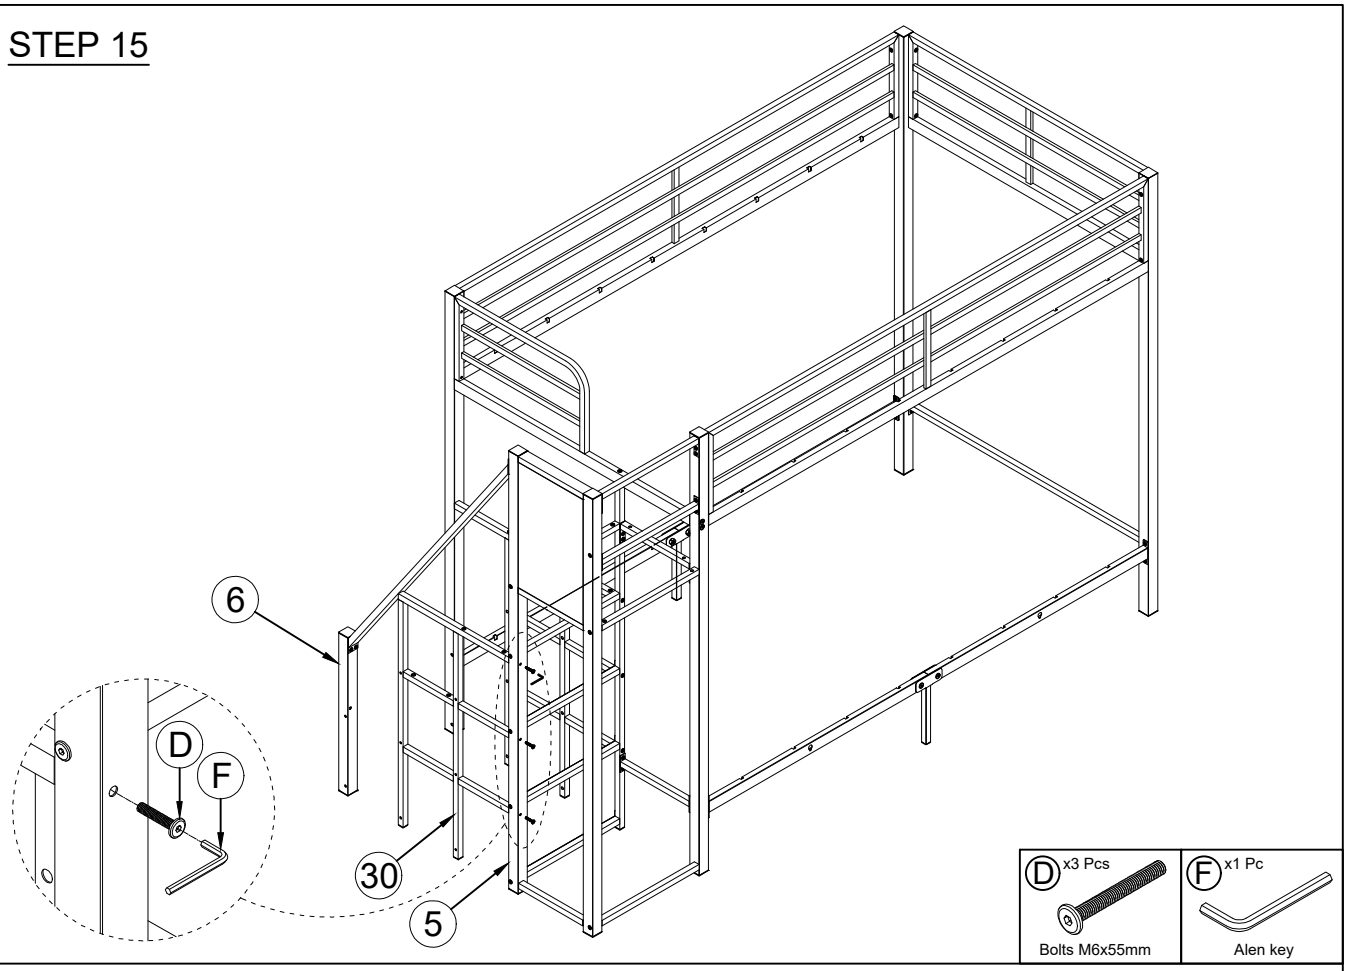


D x3 Pcs	F x1 Pc
Bolts M6x55mm	Alen key

STEP 16

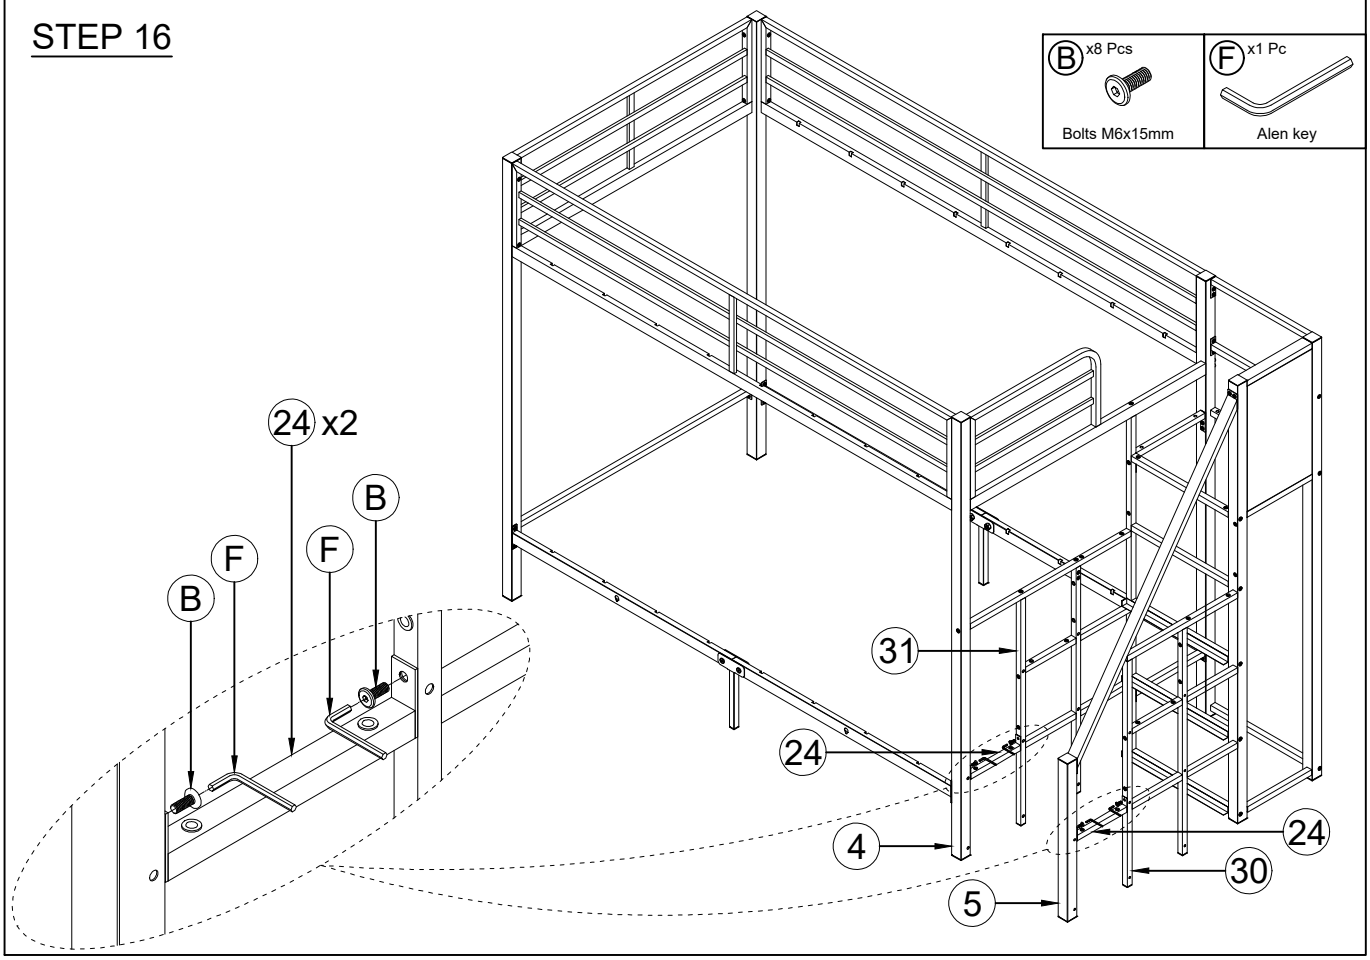


B x8 Pcs	F x1 Pc
Bolts M6x15mm	Alen key

STEP 17

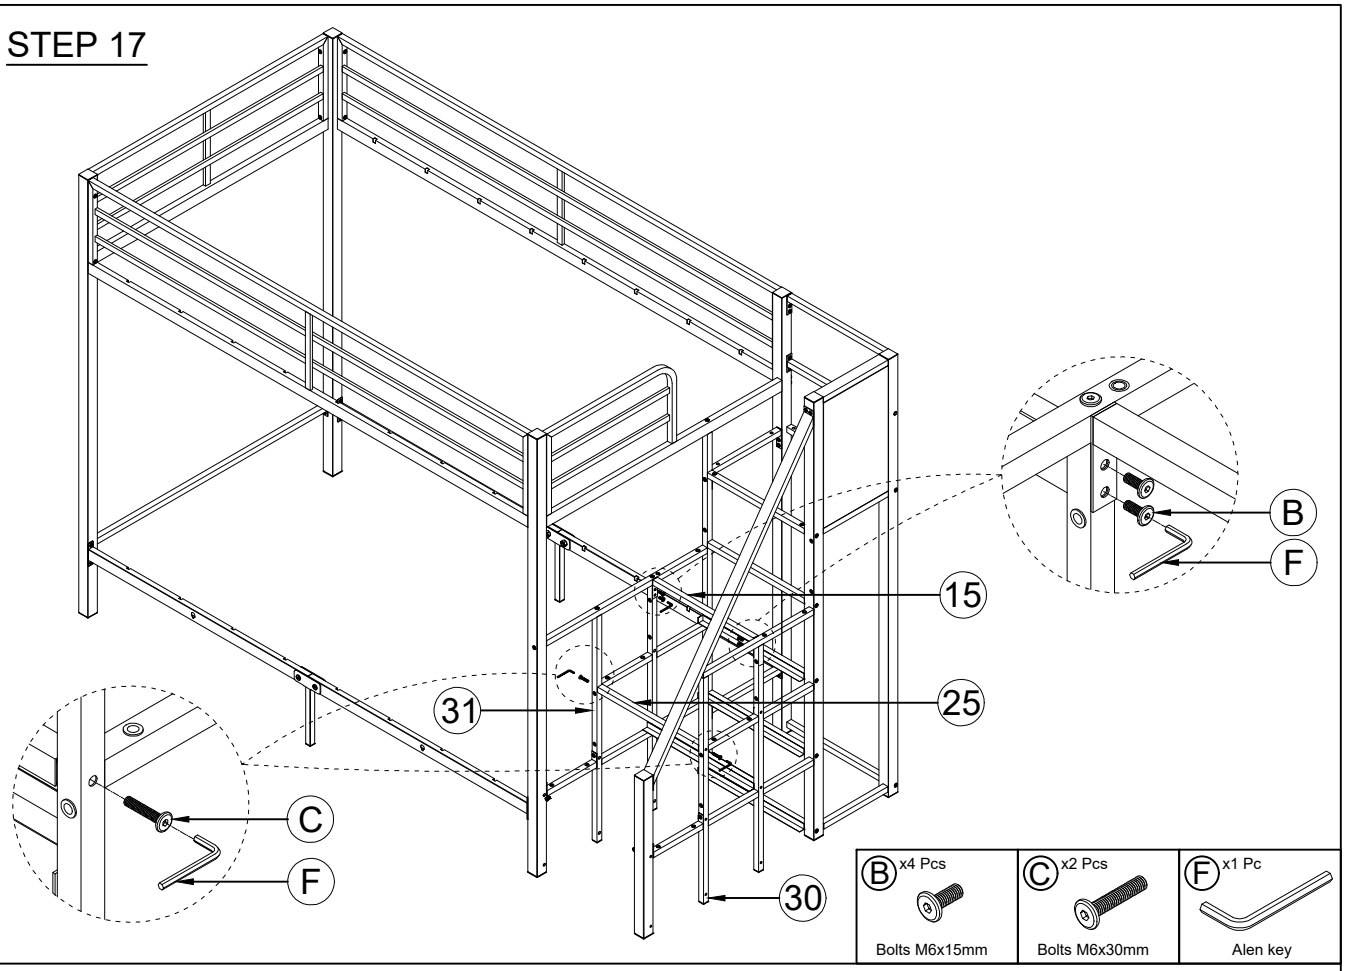


B x4 Pcs	C x2 Pcs	F x1 Pc
Bolts M6x15mm	Bolts M6x30mm	Alen key

STEP 18

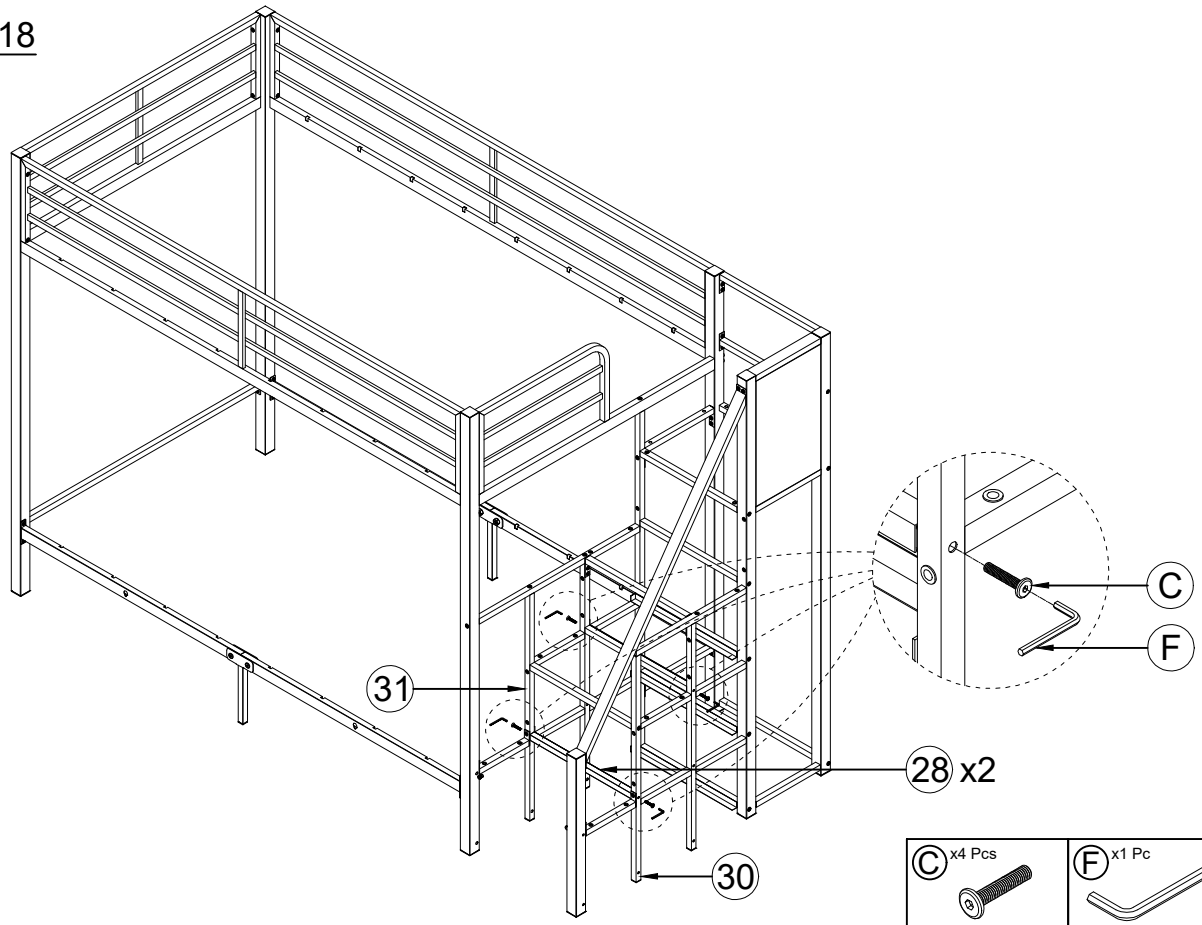


C x4 Pcs	F x1 Pc
Bolts M6x30mm	Alen key


STEP 19

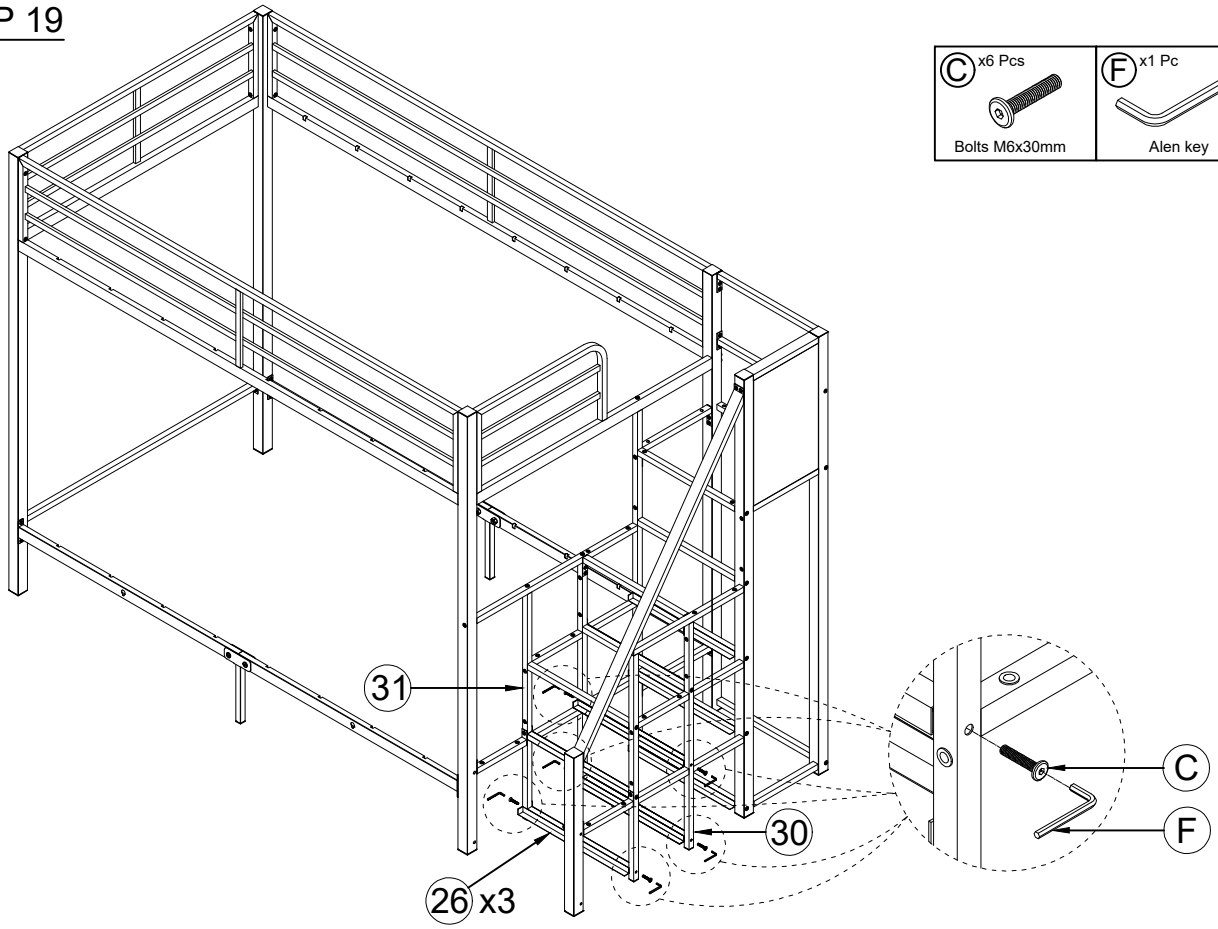

STEP 20

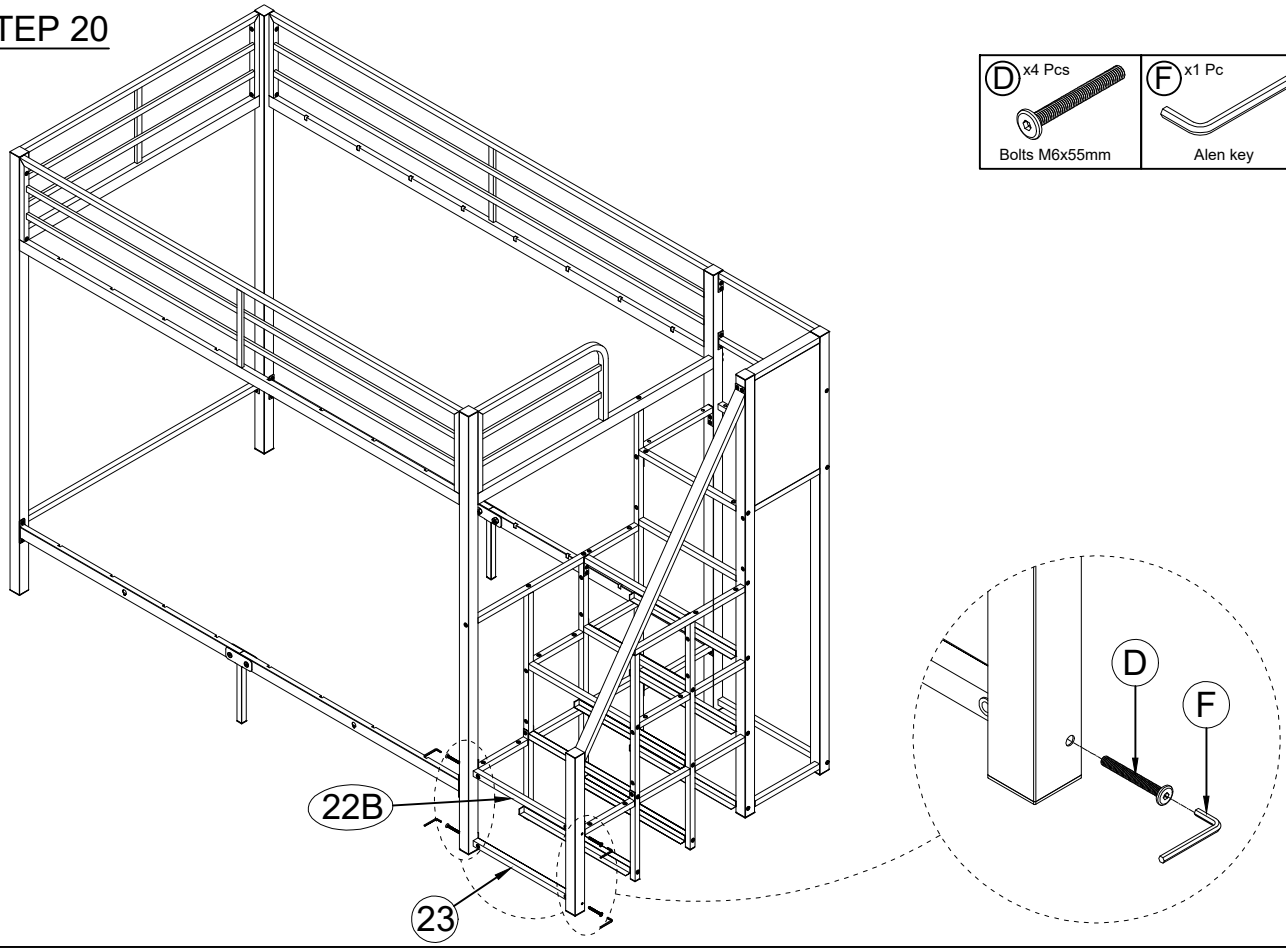


STEP 21

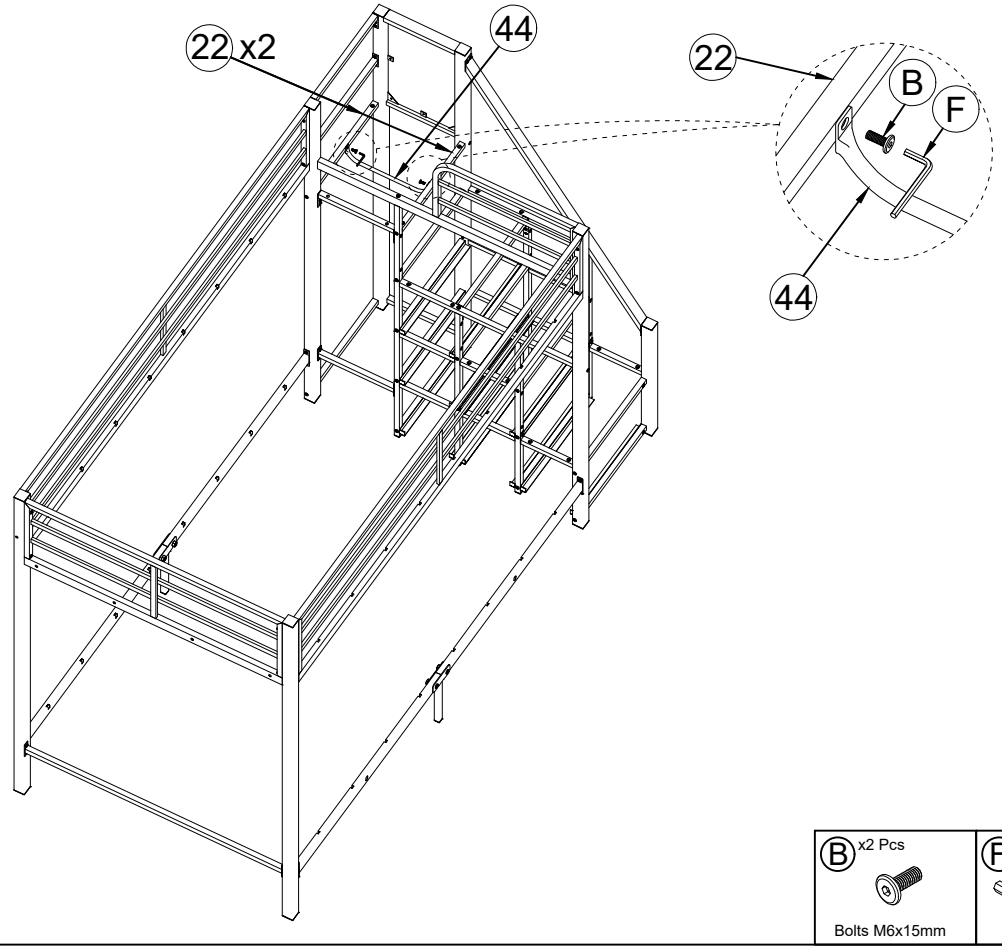


B x2 Pcs	F x1 Pc
Bolts M6x15mm	Alen key

STEP 22

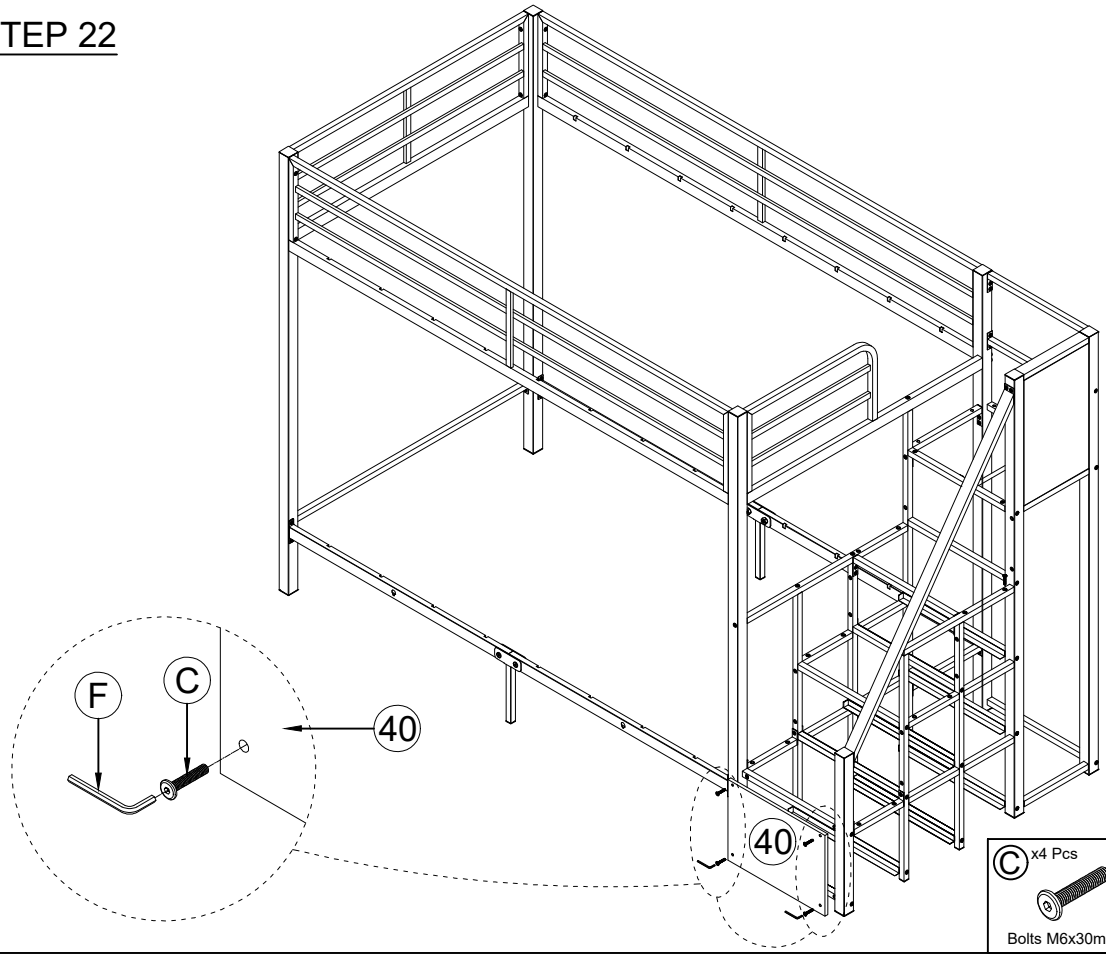

C x4 Pcs	F x1 Pc
Bolts M6x30mm	Alen key


STEP 23

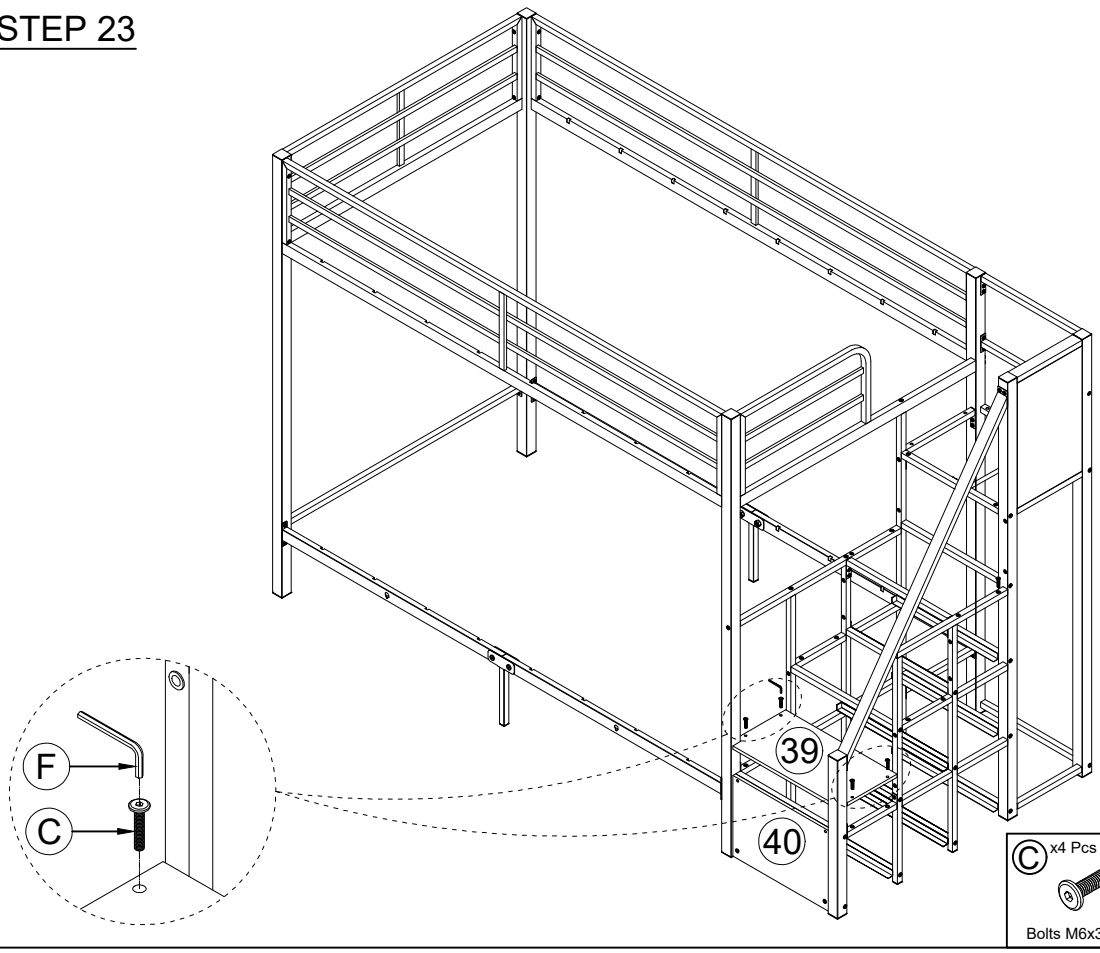

Ⓒ x4 Pcs	Ⓕ x1 Pc
Bolts M6x30mm	Alen key


STEP 24

The subsequent planks are assembled similarly.
Please see page 2 for the exact placement of the planks.

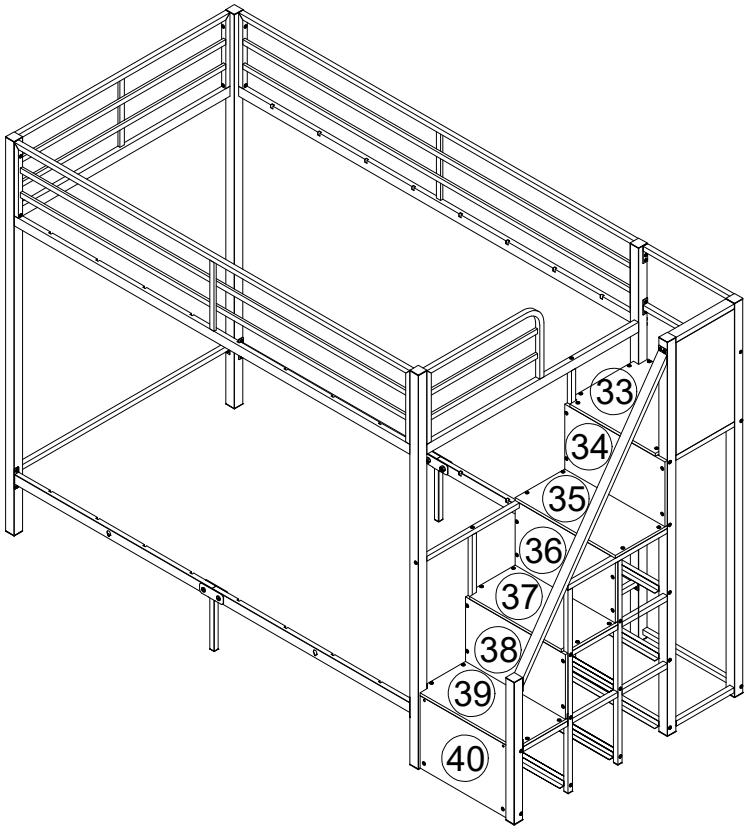


Ⓒ x26 Pcs	Ⓕ x2 Pcs
Bolts M6x30mm	Alen key

STEP 25

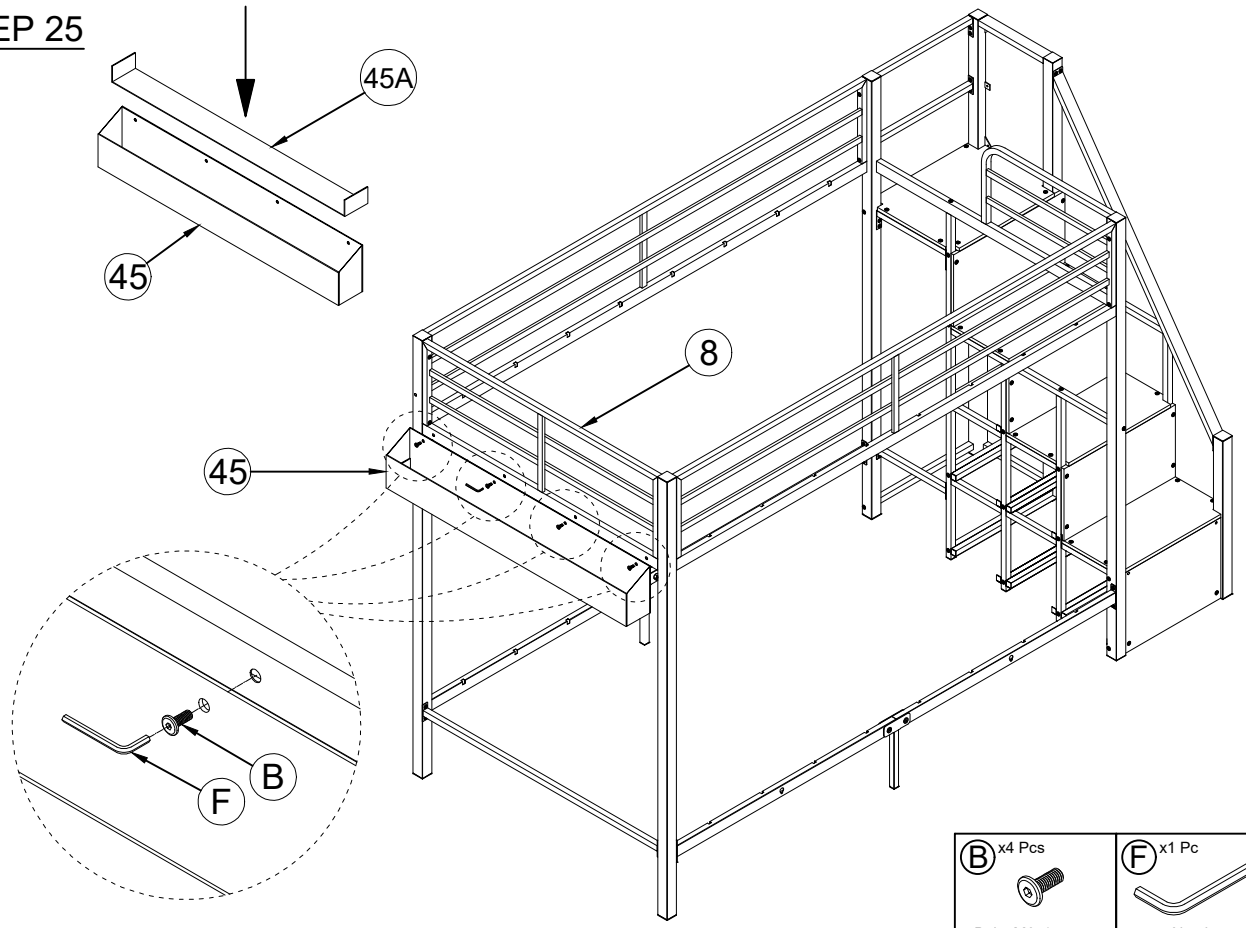



B x4 Pcs	F x1 Pc
Bolts M6x15mm	Alen key

STEP 26

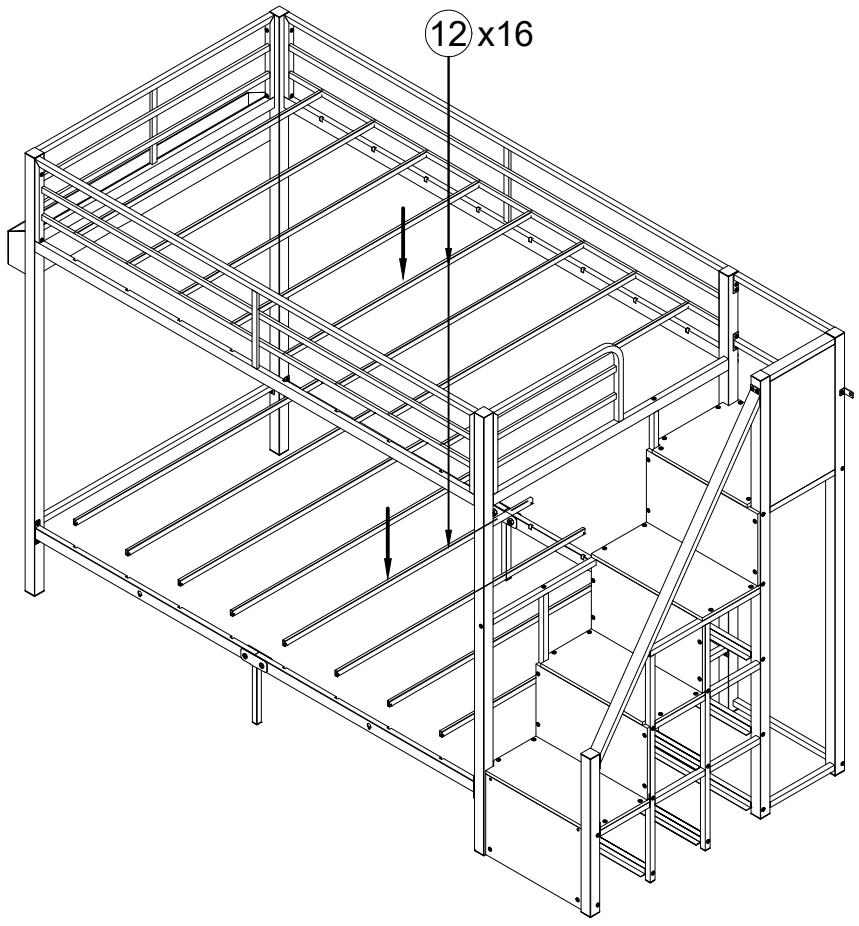


STEP 27

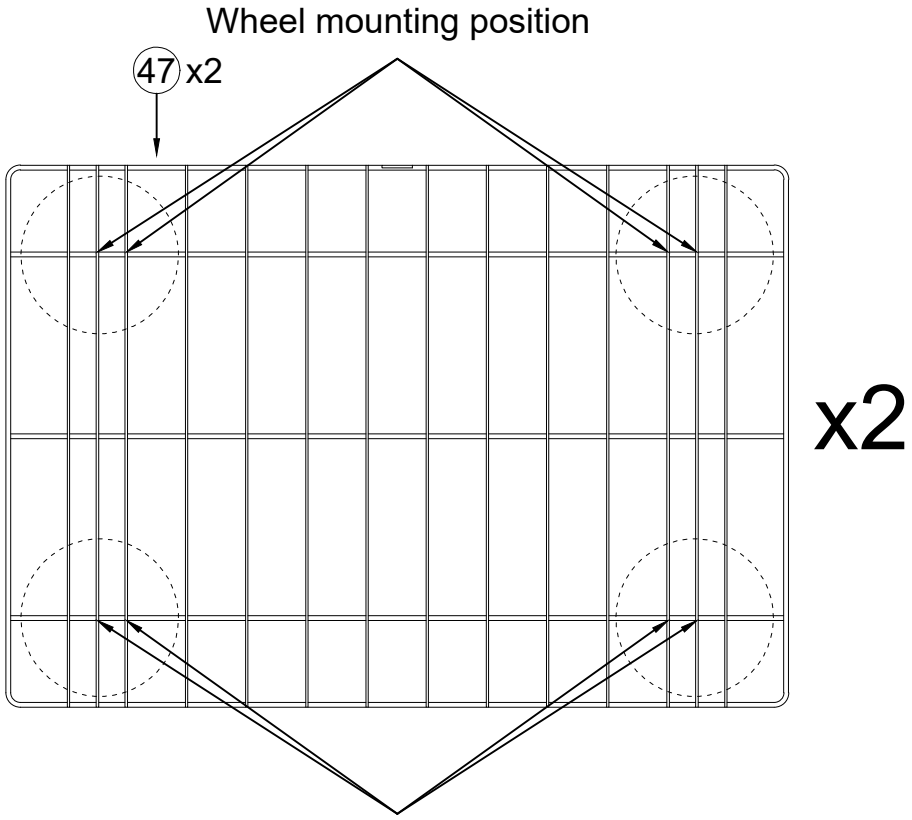


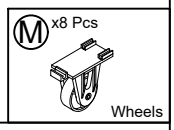


STEP 28

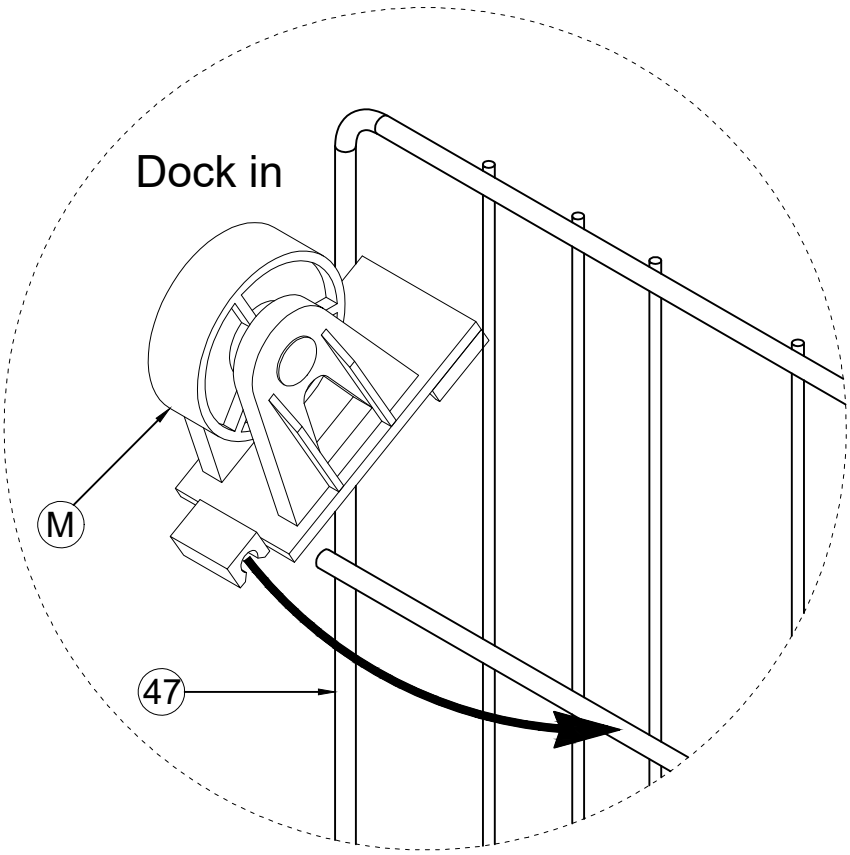

STEP 29

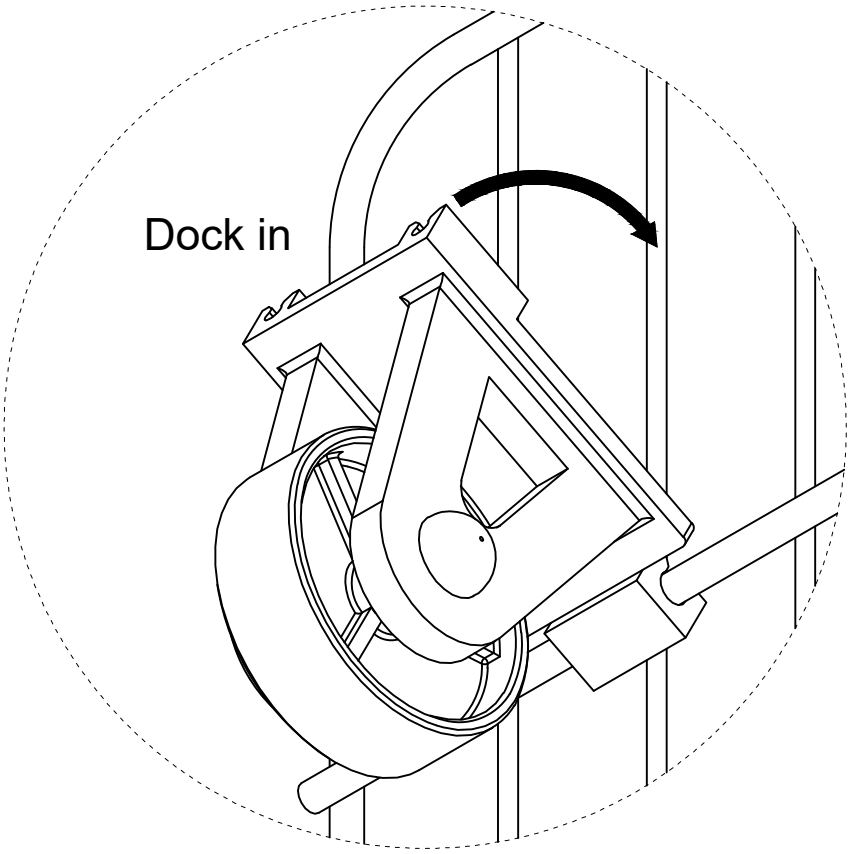


STEP 30

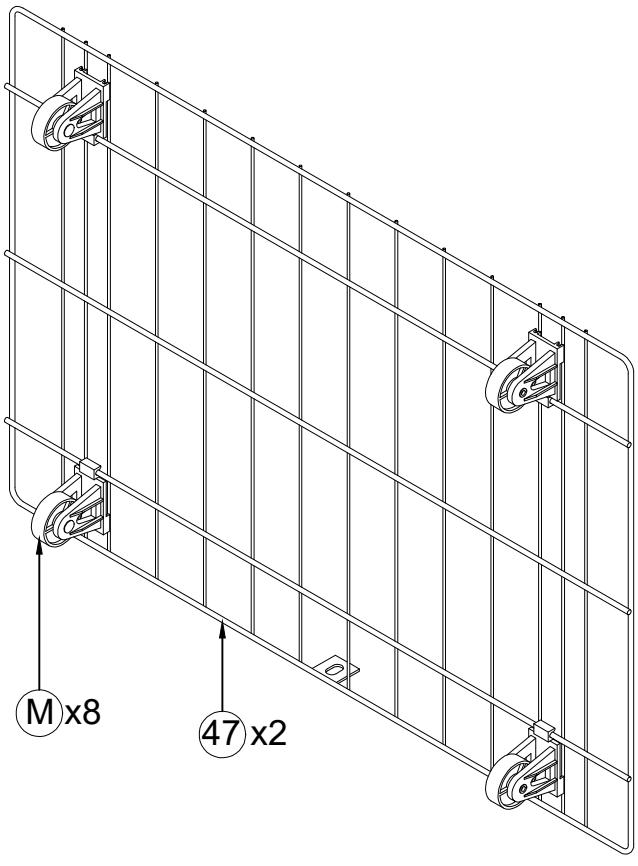


x2

STEP 31


Detailed assembly instructions Q

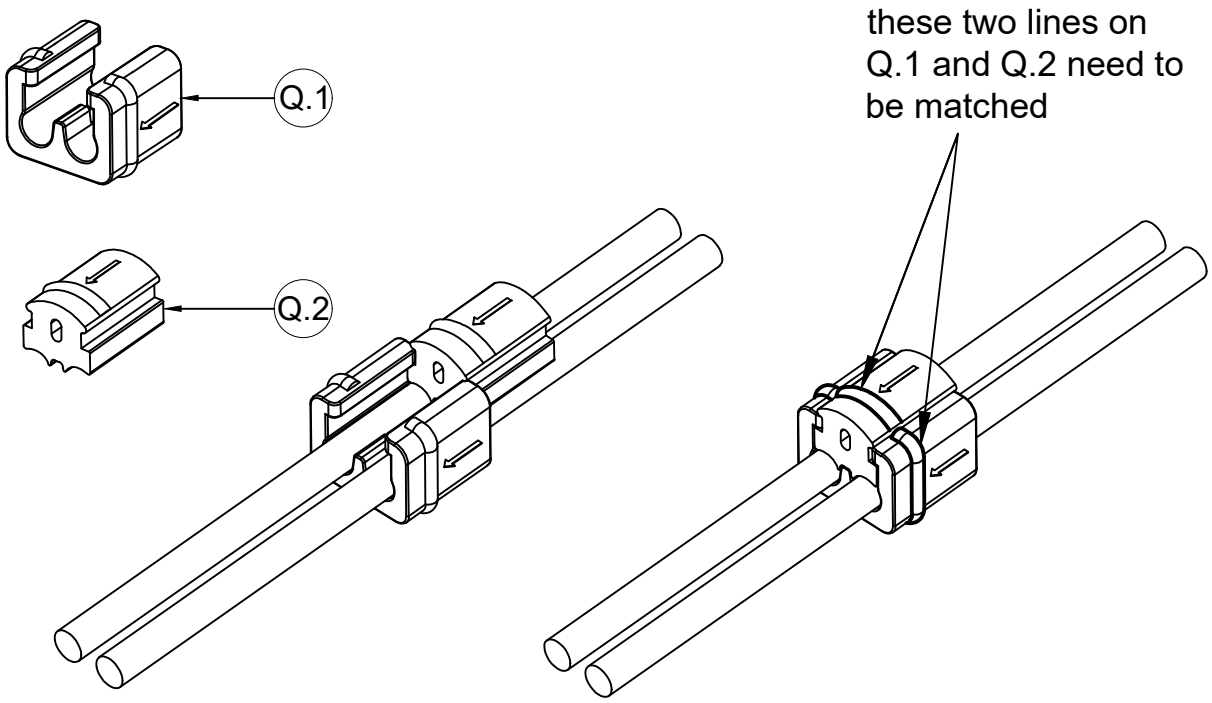

STEP 32

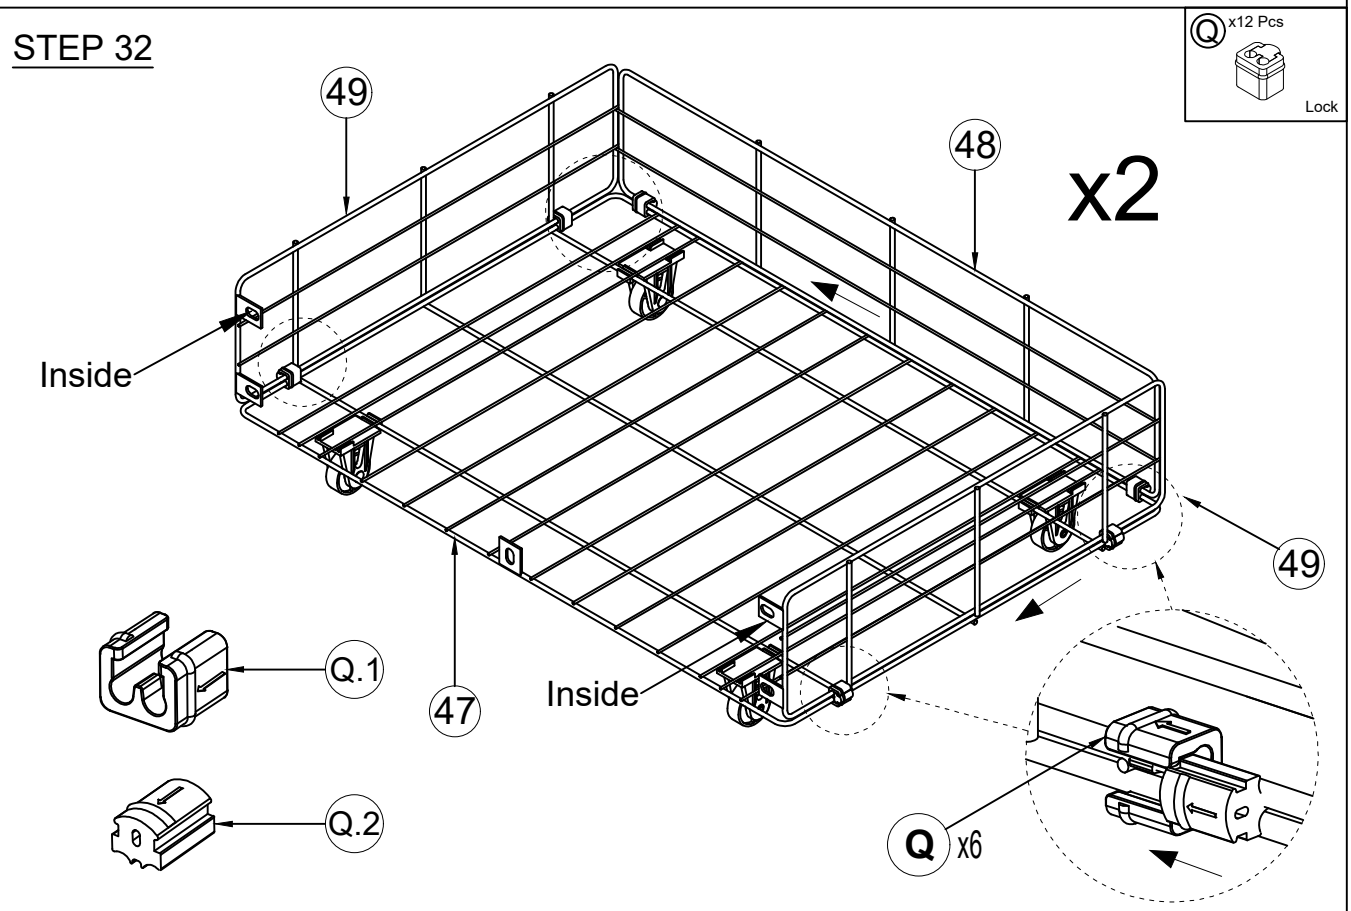

STEP 33

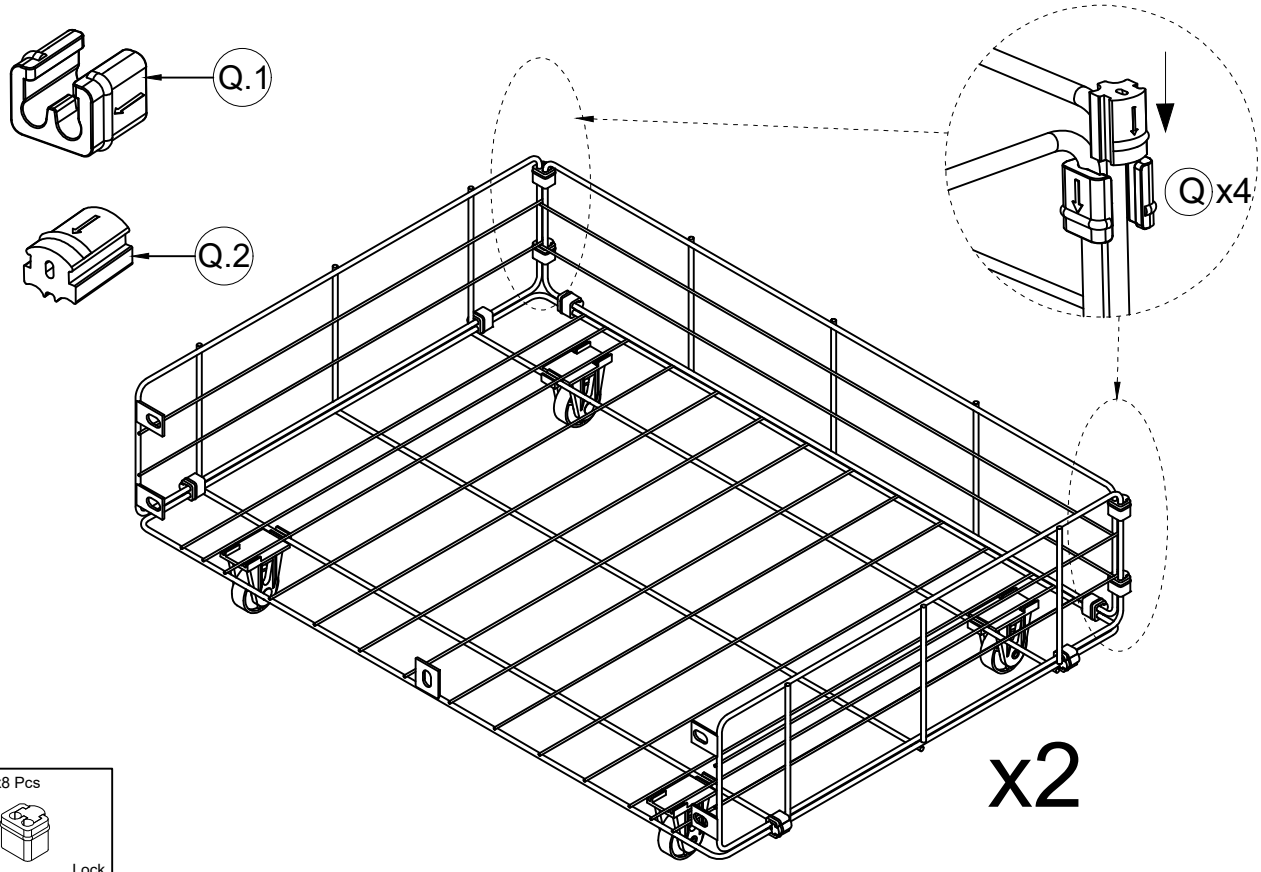


Q x8 Pcs

Lock


STEP 34

N x10 Pcs	L x2 Pcs	F x1 Pc
Bolts M6x10mm	Bolts M6x20mm	Alen key

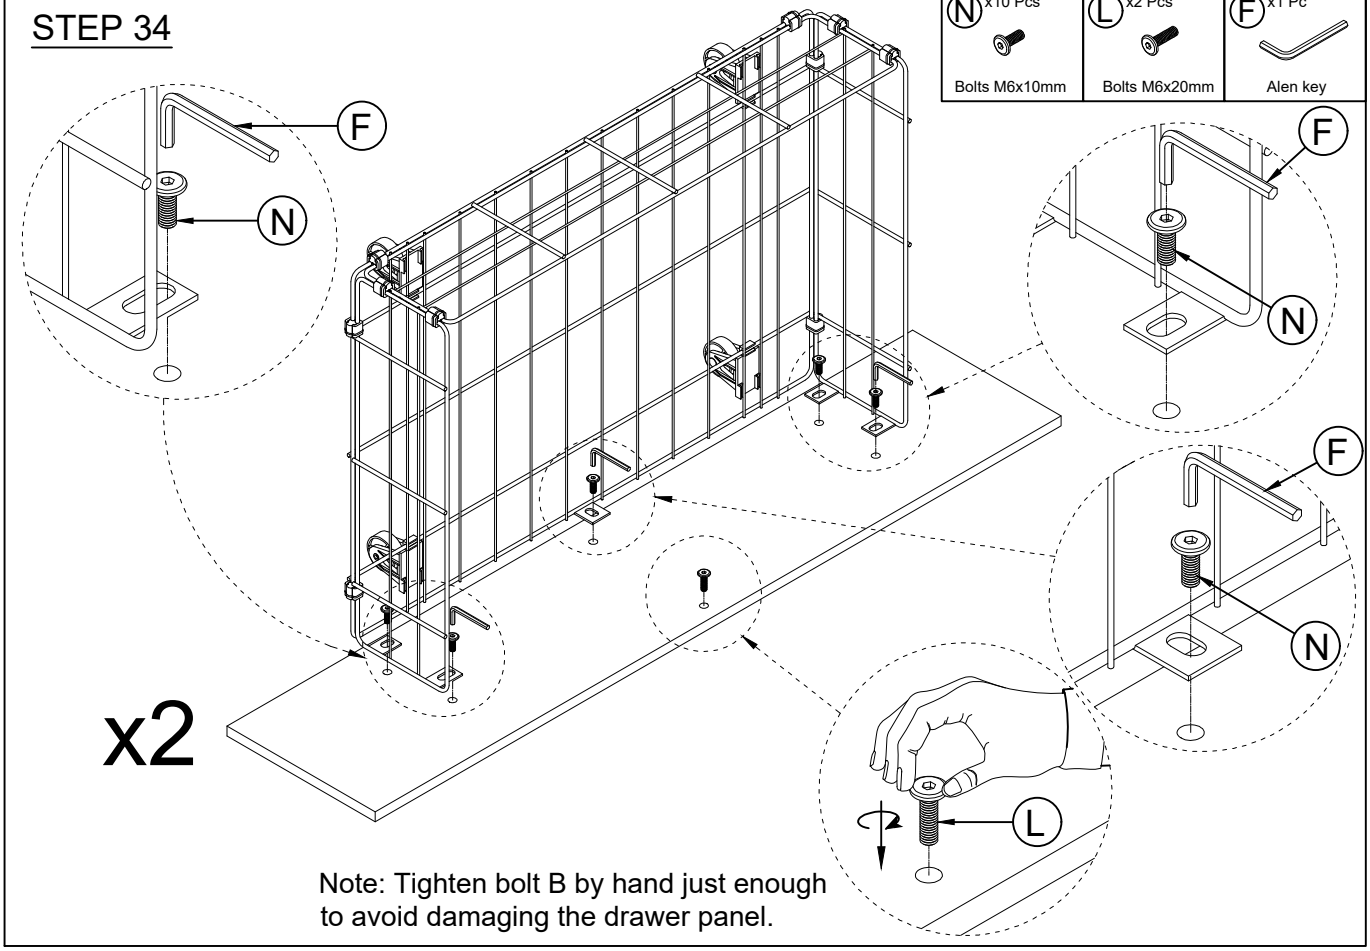


Note: Tighten bolt B by hand just enough to avoid damaging the drawer panel.


STEP 35

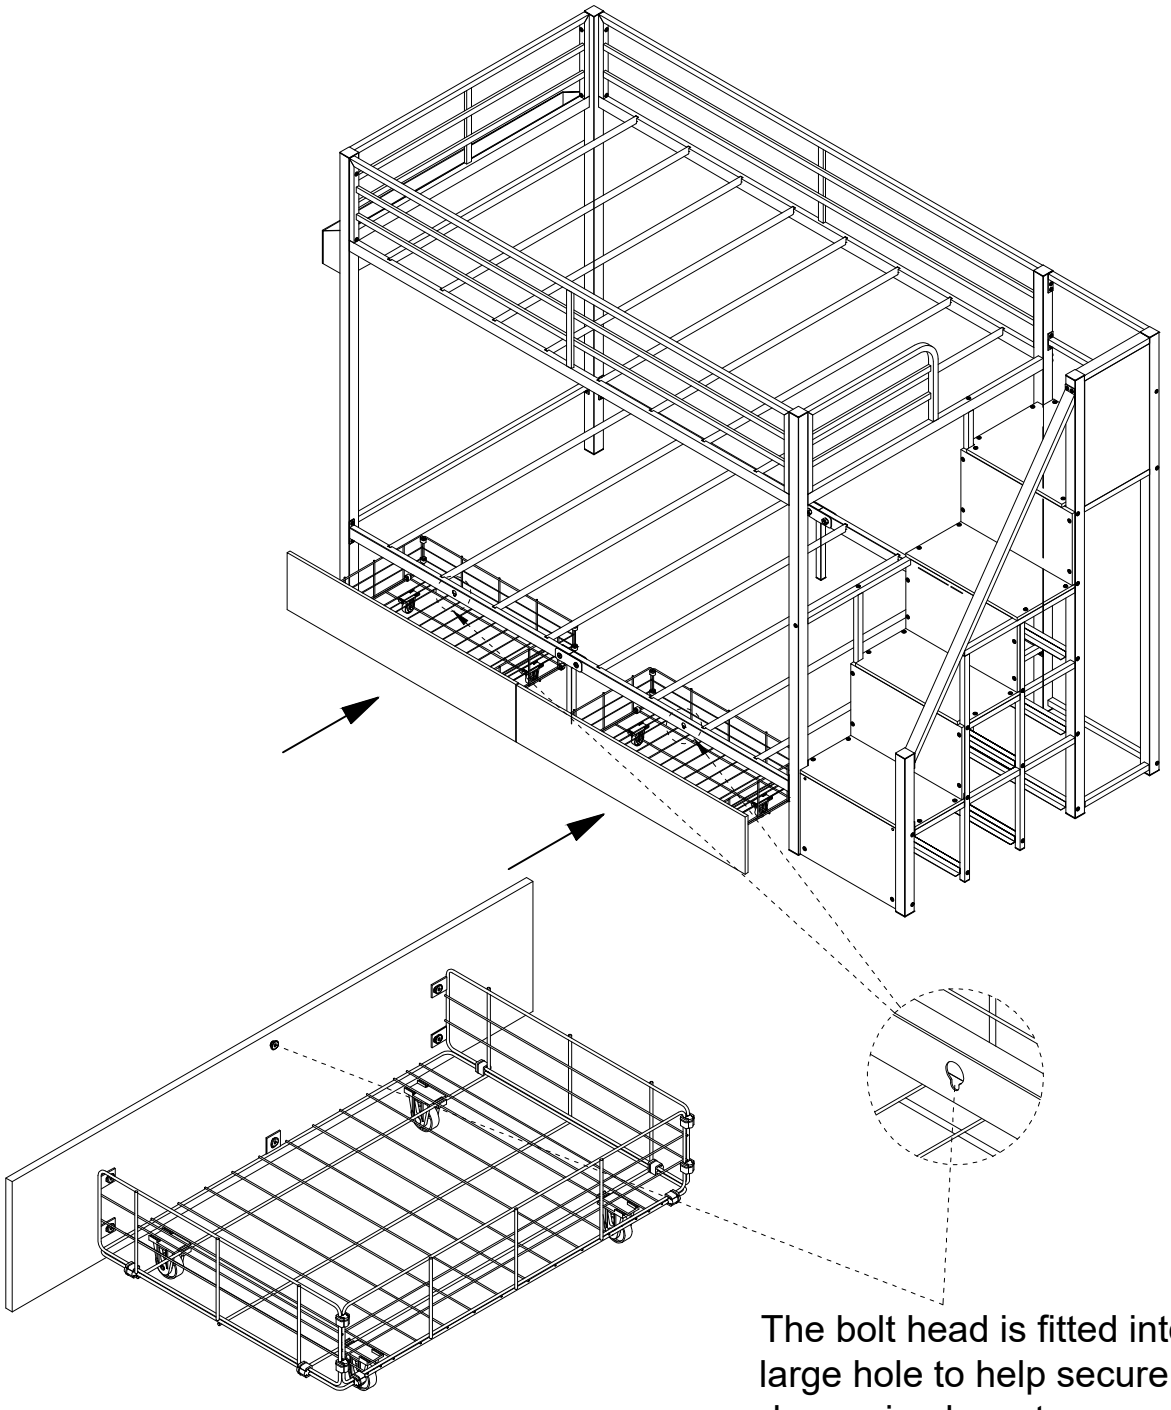


The bolt head is fitted into the large hole to help secure the drawer in place, to open the drawer, simply lift and pull it out.

STEP 36

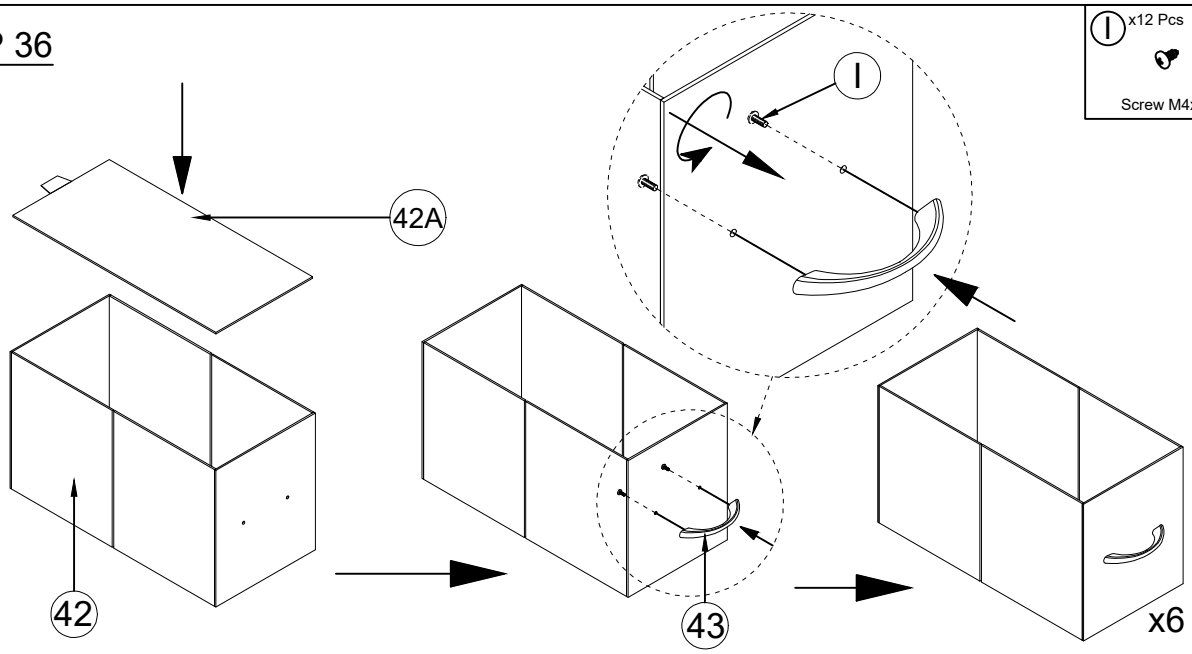

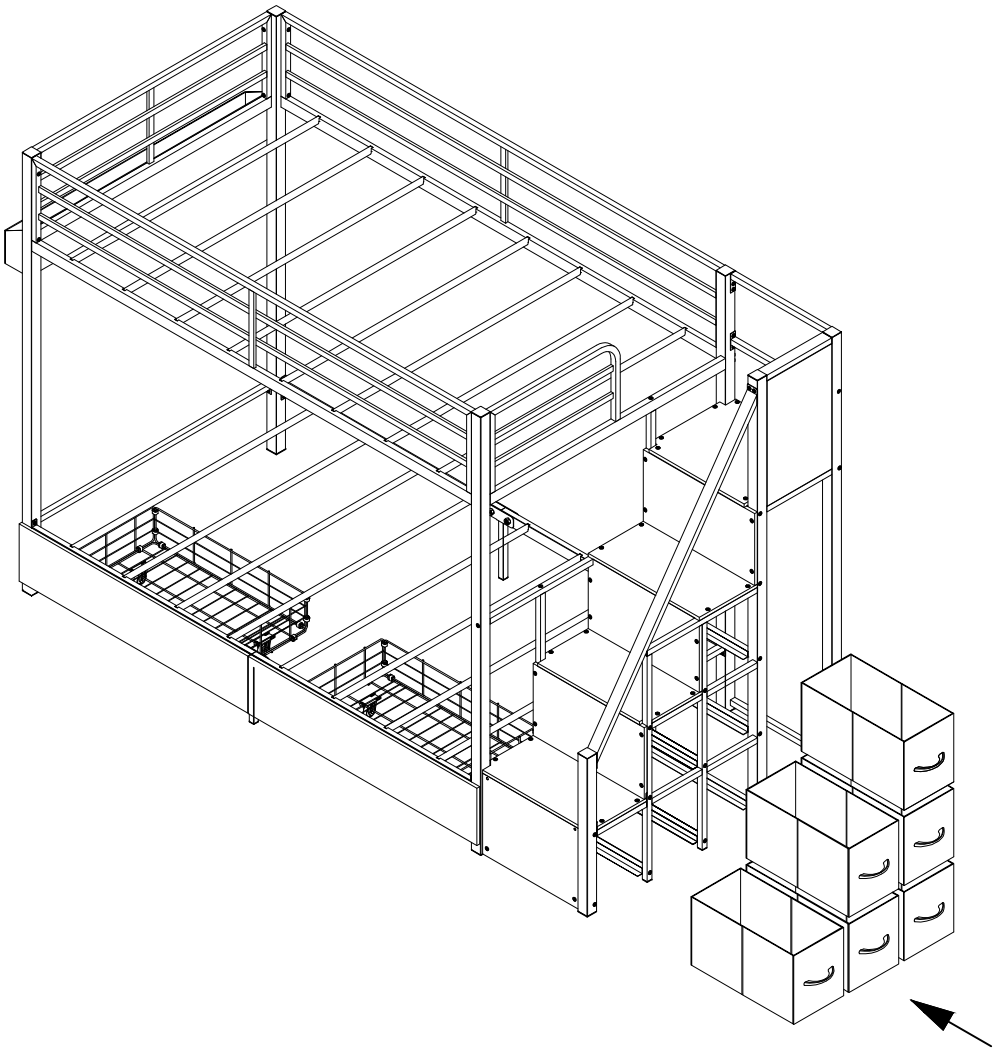


STEP 37

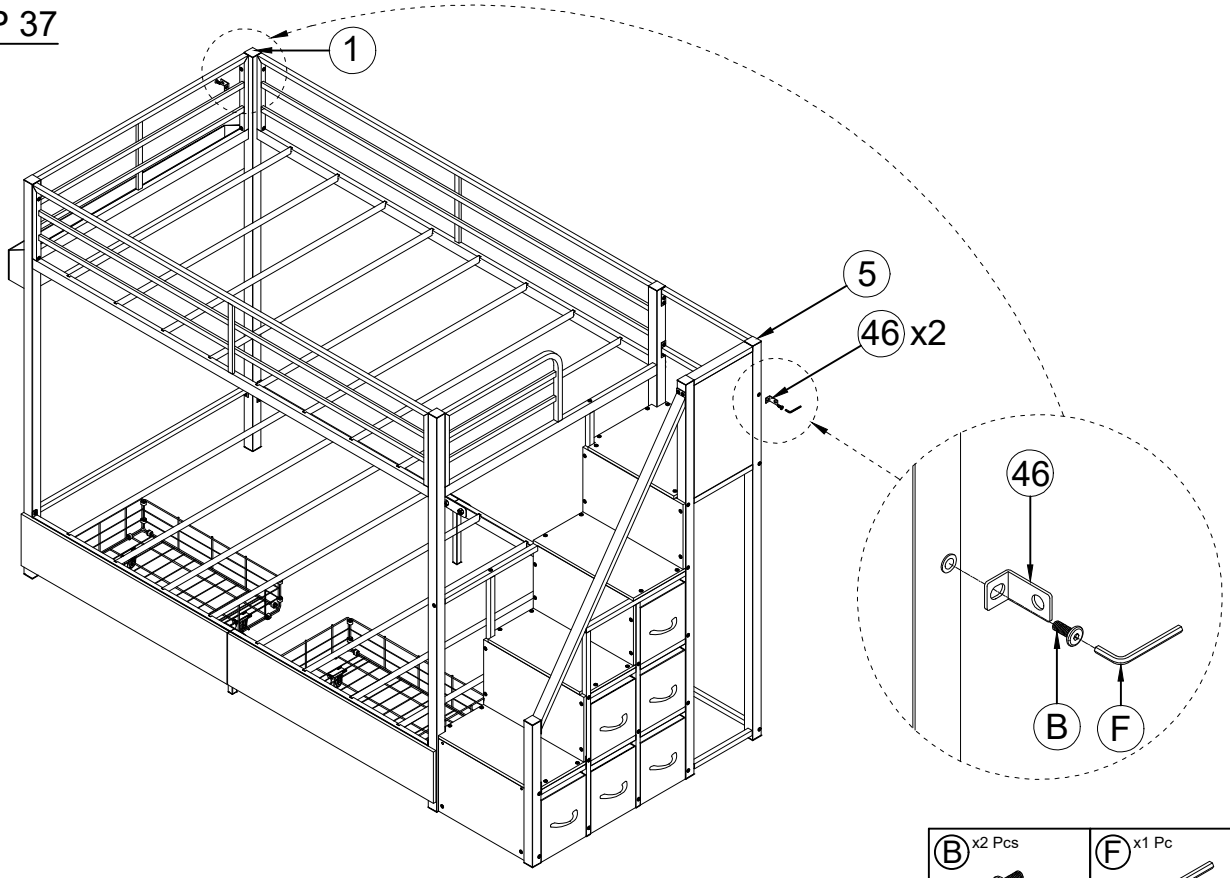



B x2 Pcs	F x1 Pc
Bolts M6x15mm	Alen key

STEP 38


Mark the 2 anti-Overturning (parts 46), then lift the bed to one side and drill with an 8mm drill bit 8cm deep.

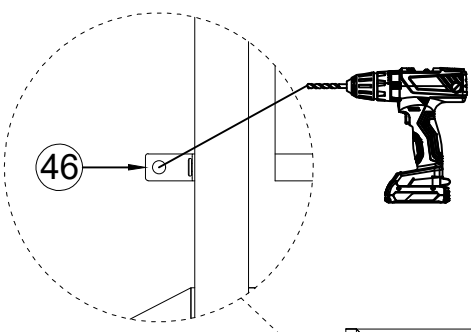

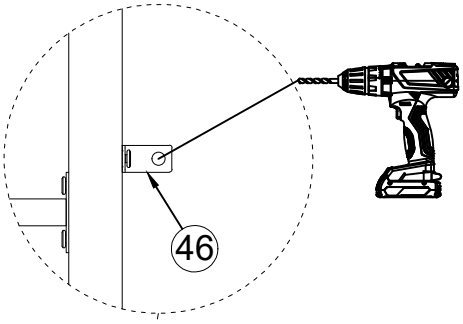


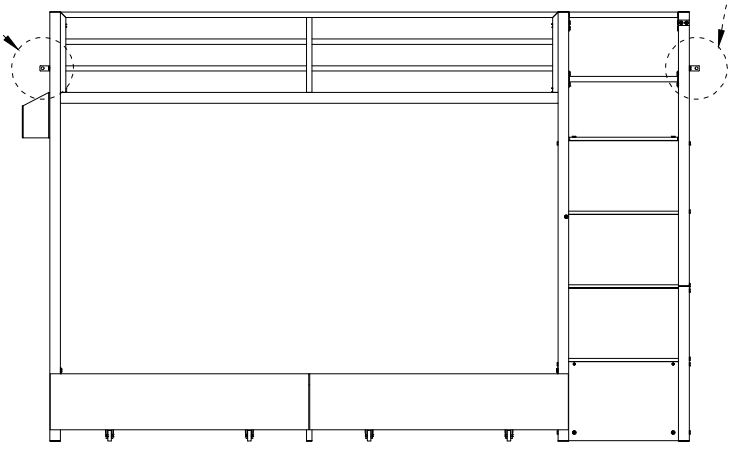


STEP 39

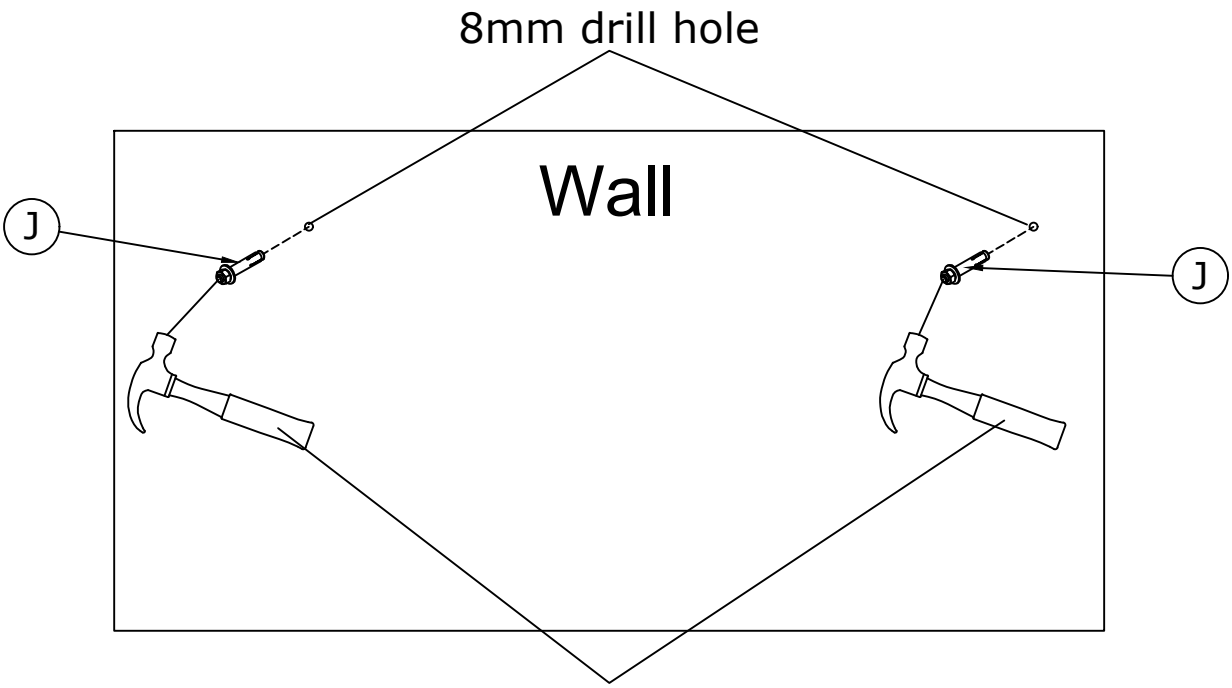


Use a hammer to drive the expanding anchor (J) hook into the 8mm drilled hole.

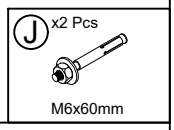


STEP 40

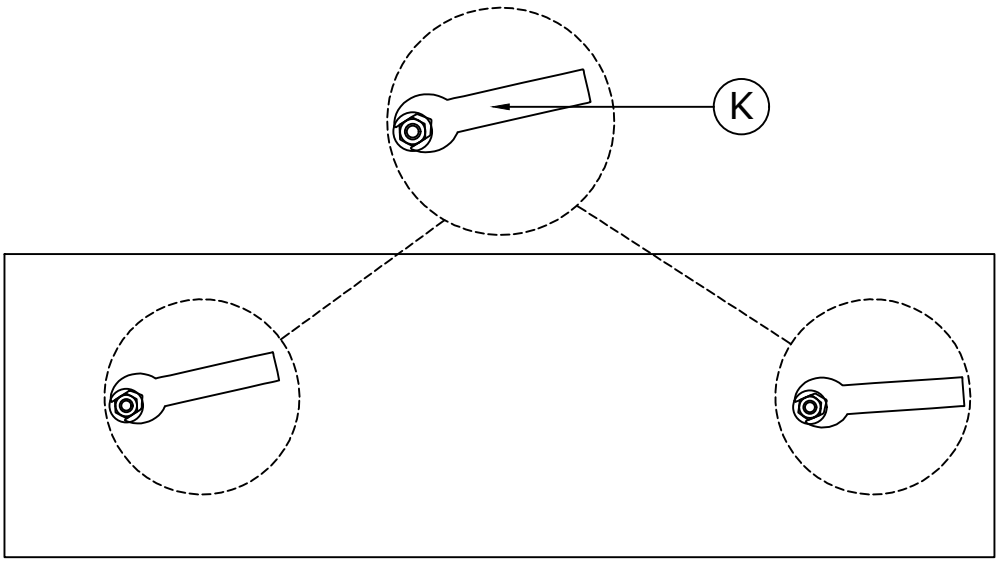

Use wrench (K) to tighten the nuts on the expanding anchor (J) that was just installed, then remove the nuts and washers.

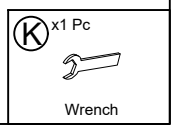

STEP 41

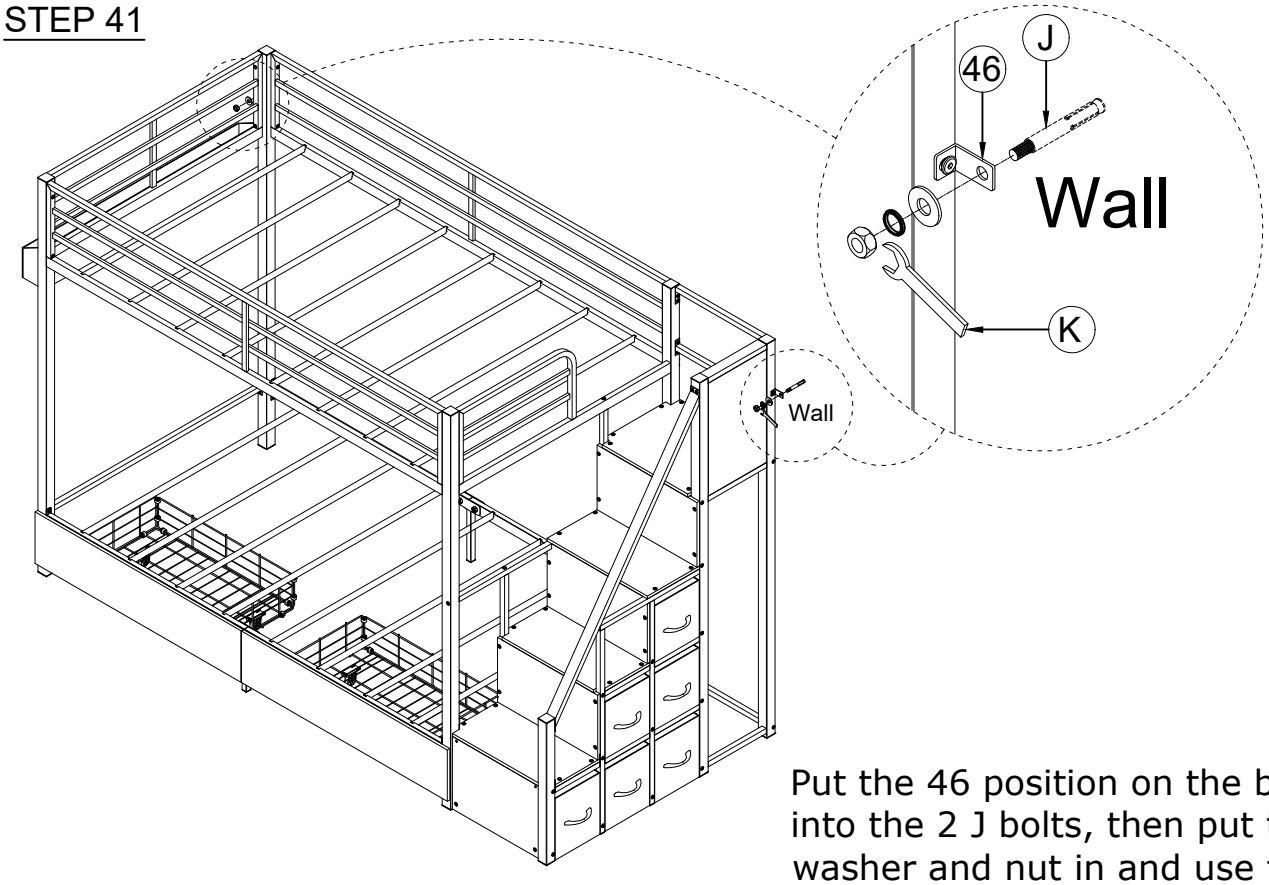

Put the 46 position on the bed into the 2 J bolts, then put the washer and nut in and use the K wrench to tighten it.

COMPLETE

