



ASSEMBLY INSTRUCTIONS

HOUSE BED WITH 2 DRAWERS

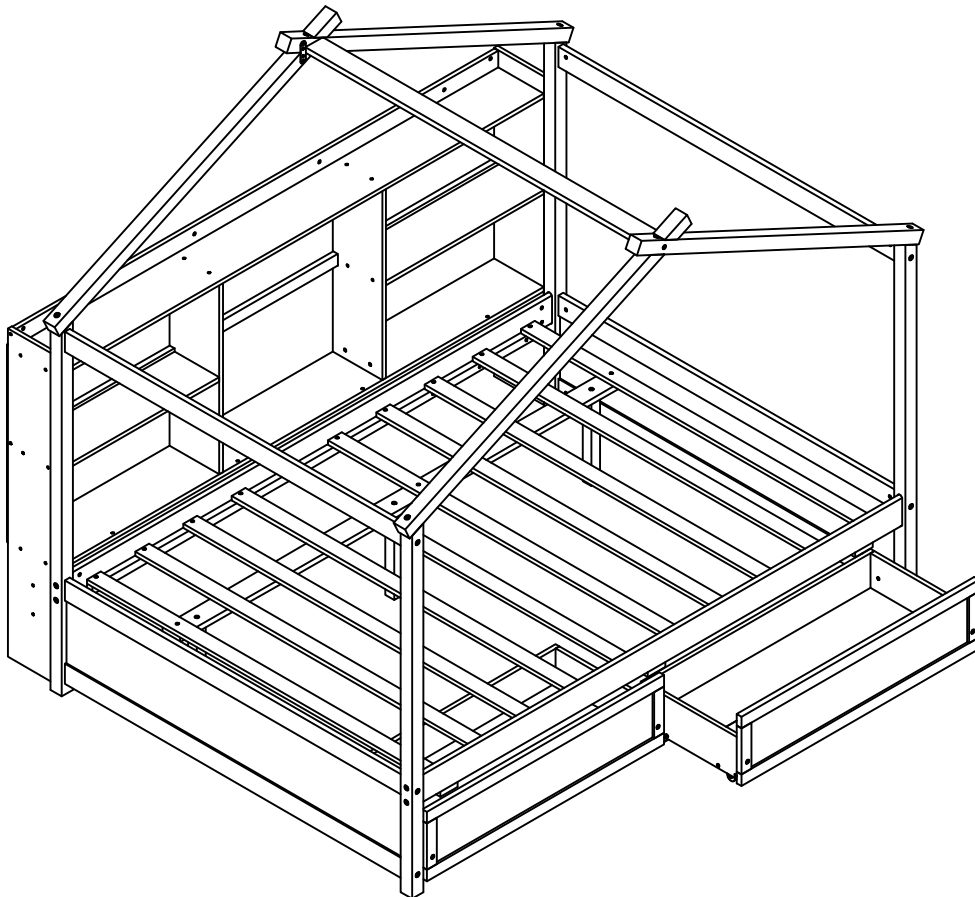










WF304947/WF304948

Detail View

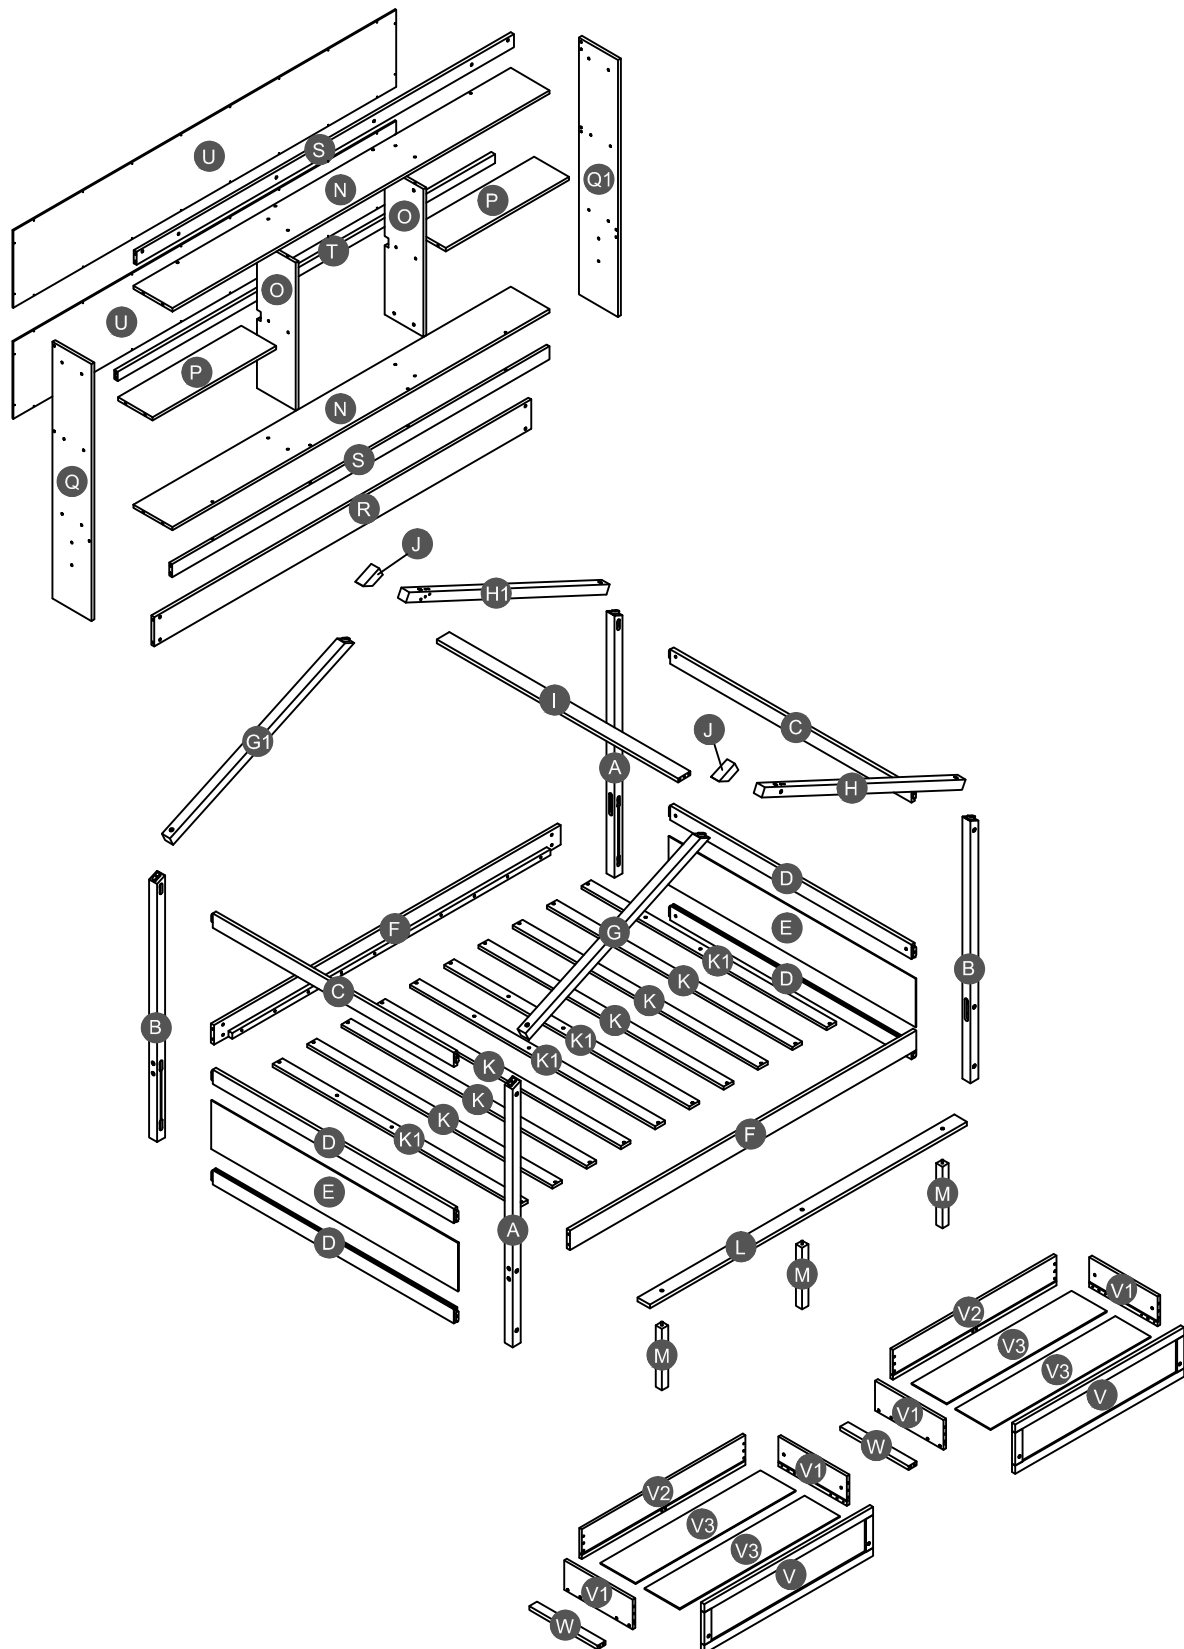









Part List

WF304947 - Hardware inside





A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	E  Side panel HB/FB - 2pcs
F  Side rail - 2pcs	H  Upper (Right Front) - 1pc	H1  Upper (Right Back) - 1pc
I  Upper horizontal bar - 1pc	L  Lower support slat - 1pc	N  Top + Bottom panel - 2pcs
R  Lower horizontal bar - 1pc	S  Horizontal bar (Back) - 2pcs	T  Divider horizontal bar (Back) - 1pc
U  Back panel - 2pcs	V1  Left / right drawer panel - 4pcs	V2  Back drawer panel - 2pcs
W  Support drawer - 2pcs		

Part List


WF304948

C  Upper horizontal bar HB/FB - 2pcs	D  Lower horizontal bar HB/FB - 4pcs	G  Upper (Left Front) - 1pc
G1  Upper (Left Back) - 1pc	J  Block - 2pcs	K  Slats - 6pcs
K1  Slats - 4pcs	M  Leg support - 3pcs	O  Divider panel - 2pcs
P  Shelf panel - 2pcs	Q  Side panel (Left) - 1pc	Q1  Side panel (Right) - 1pc
V  Front drawer - 2pcs	V3  Drawer bottom - 4pcs	

Hardware List WF304947


1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (36pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (8pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (14pcs)
4  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (50pcs)	5  $1/4" \times 15 \text{ (9.5mm)}$ Horizontal-Hole bolts (72pcs)	6  $(\varnothing 12) 1/4" \times 65 \text{mm}$ Hex-Head bolts (8pcs)
7  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	8  $\varnothing 4 \times 30 \text{mm}$ Wood screws (46pcs)	9  $75 \times 20 \times 2 \text{ mm}$ Metal bracket (2pcs)
10  $\varnothing 10 \times 20 \text{mm}$ Wood dowel (8pcs)	11  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (64pcs)	12  $70 \times 35 \times 19 \text{ mm}$ Drawer stopper (3pcs)
13  $40 \times 18 \times 18 \times 2 \text{mm}$ Metal bracket (4pcs)	14  $100 \times 20 \times 54 \text{mm}$ Wheels (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

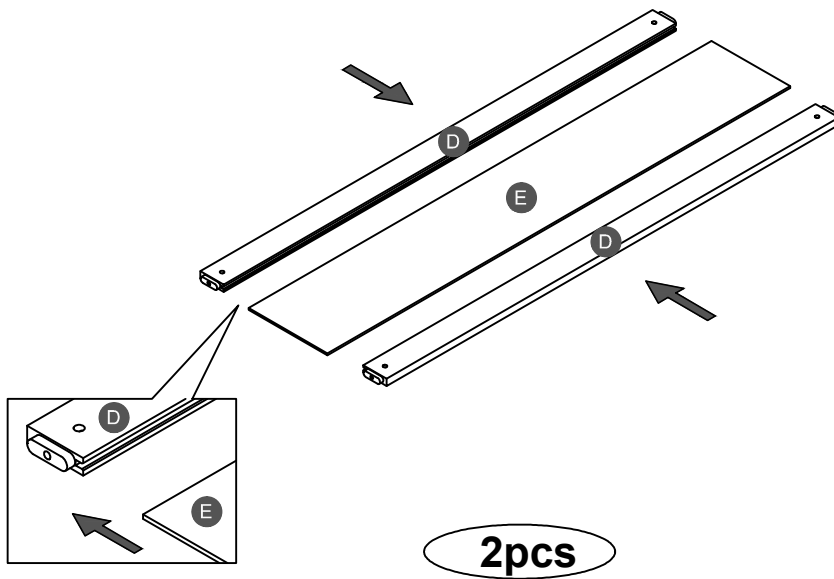


STEP 2:

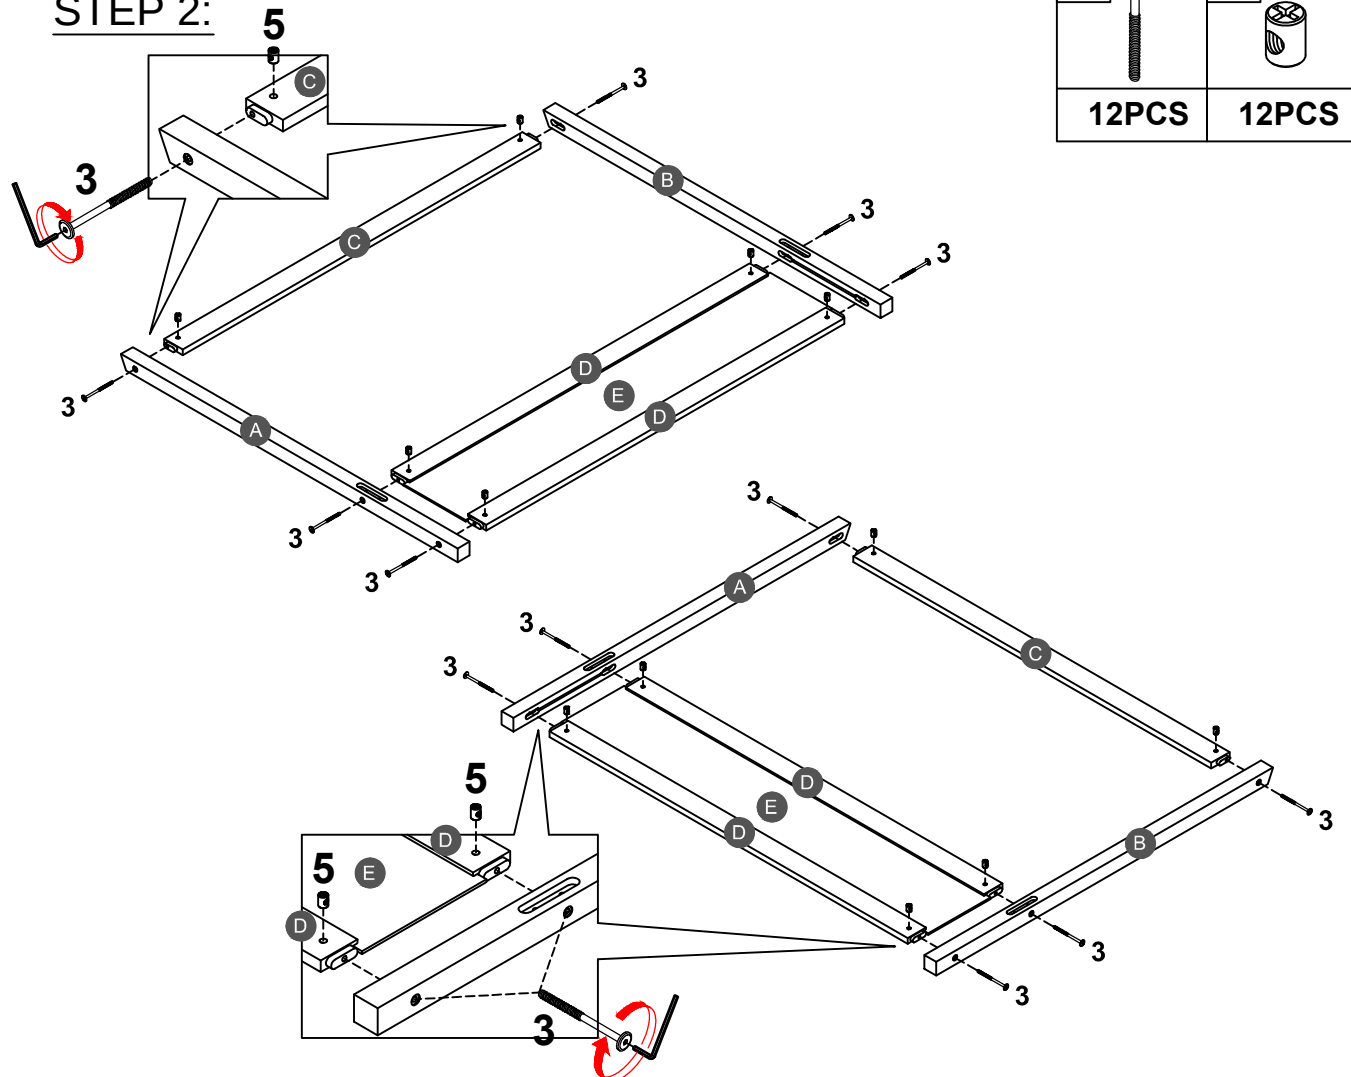

STEP 3:


8	12
	
6PCS	3PCS

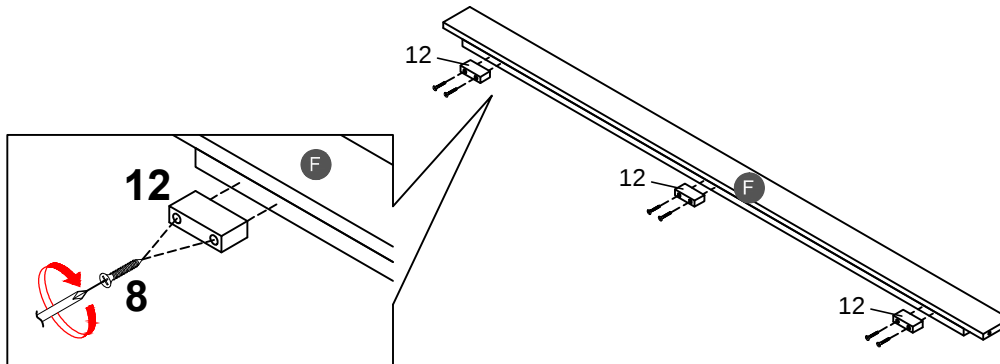


Drawer stopper (12) with lower side rail front (F) by using screw (8).

STEP 4:


2	5
	
8PCS	8PCS

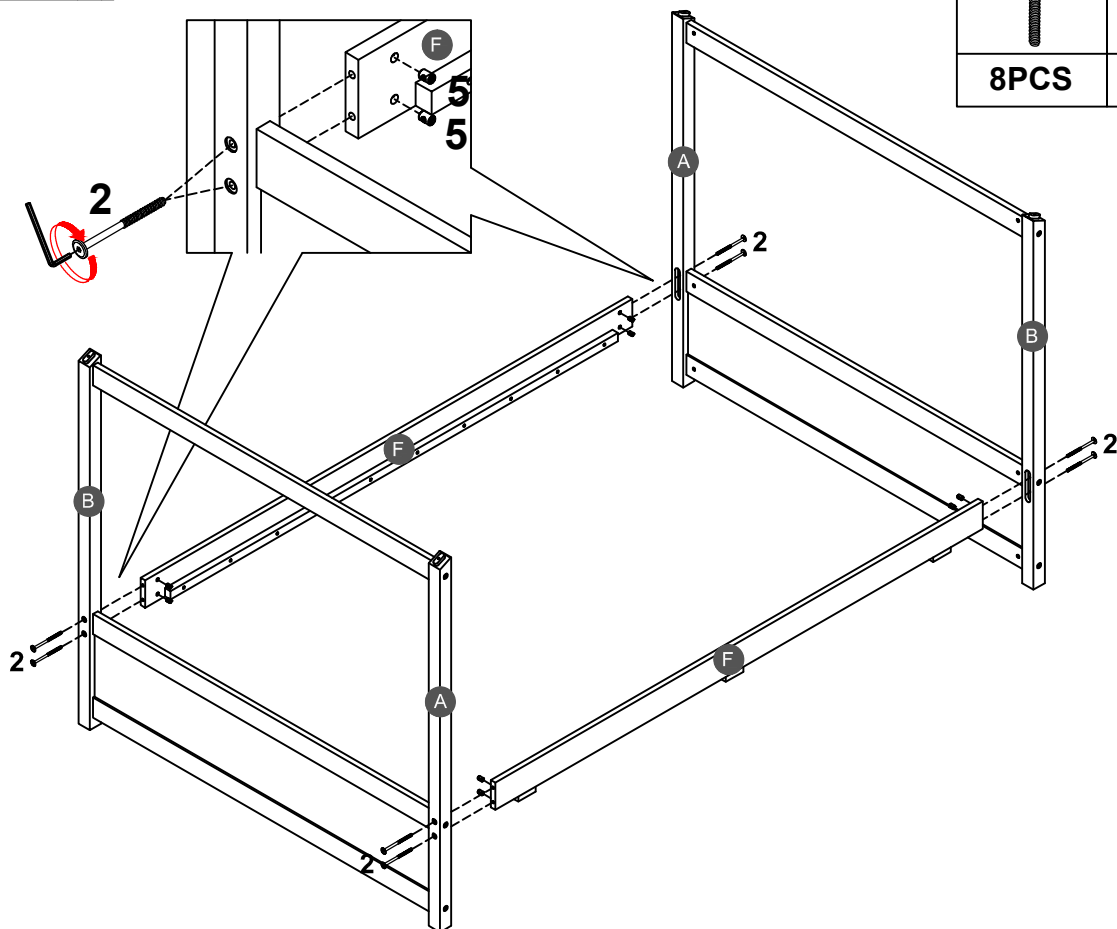


STEP 5:

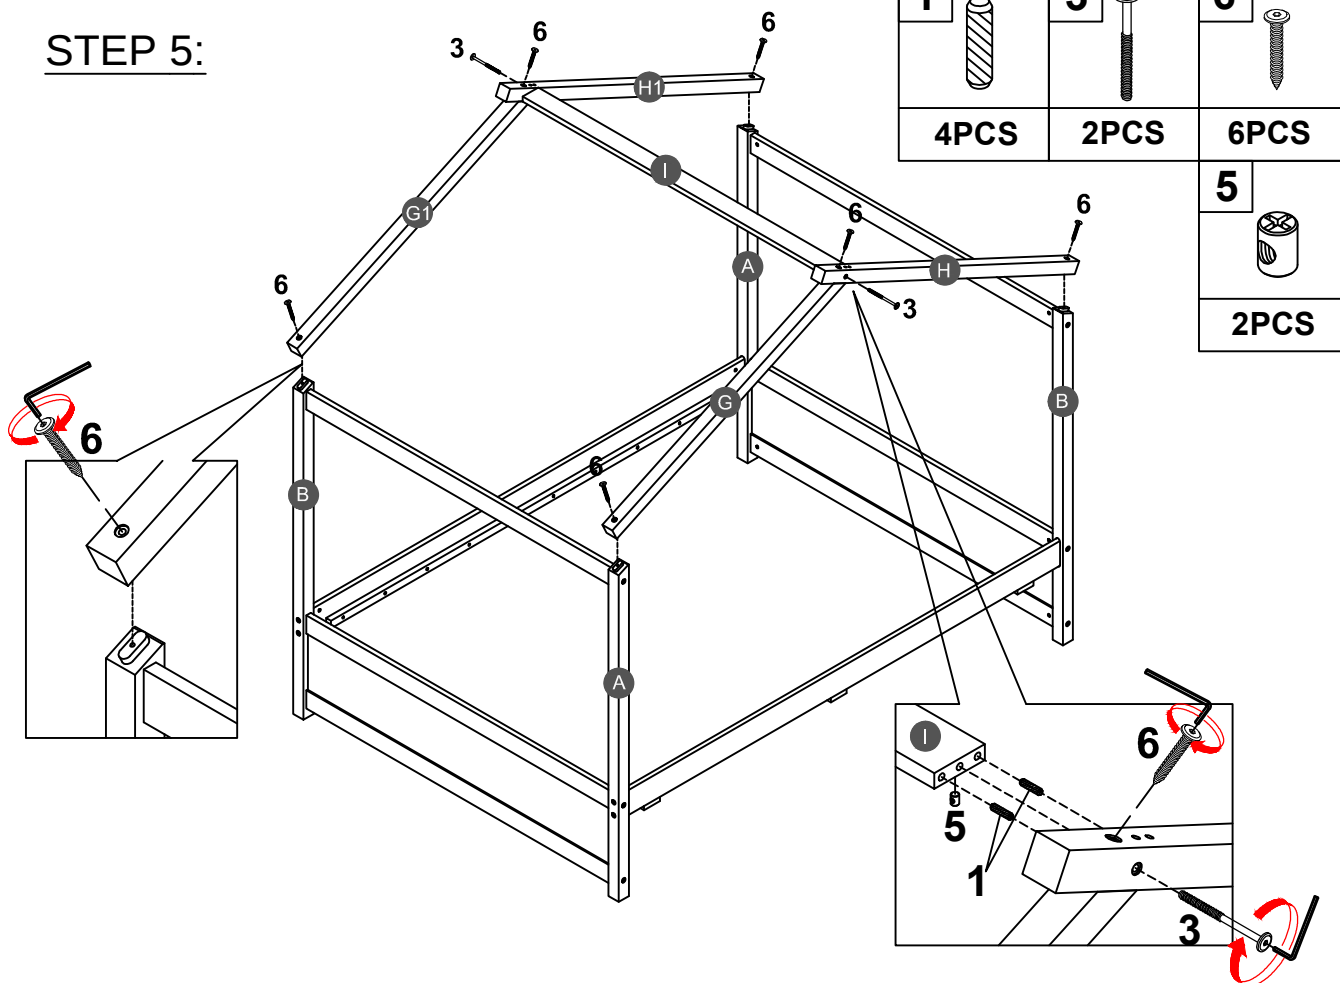

STEP 6:

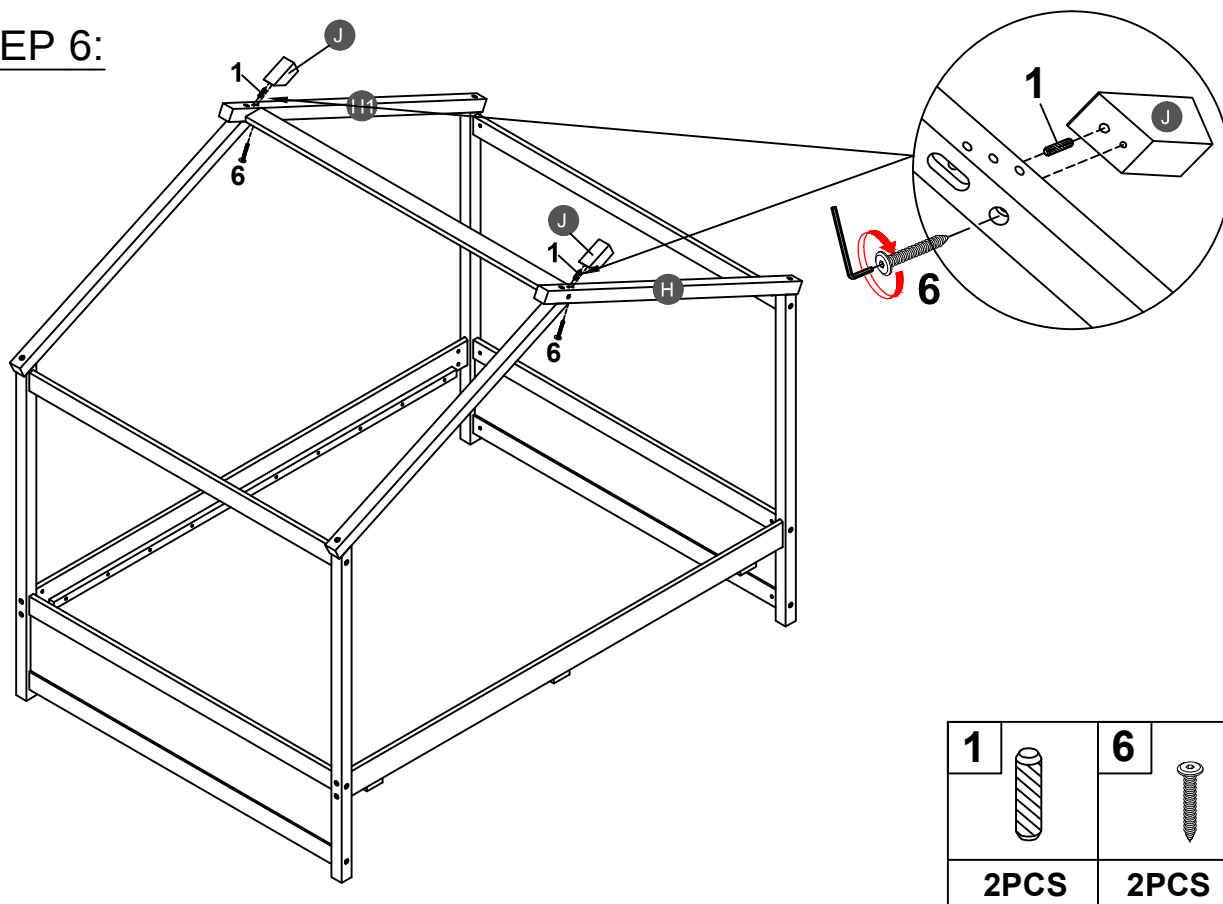


STEP 7:

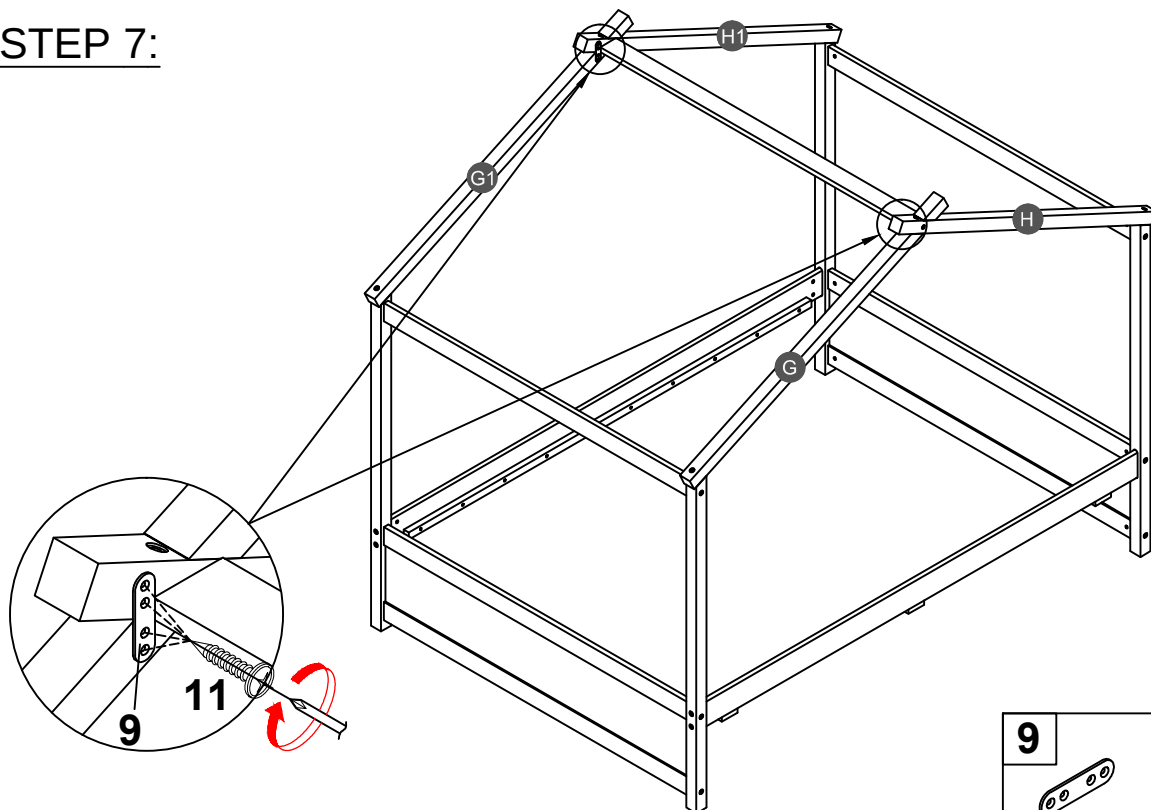

9		11	
2PCS		8PCS	


STEP 8:

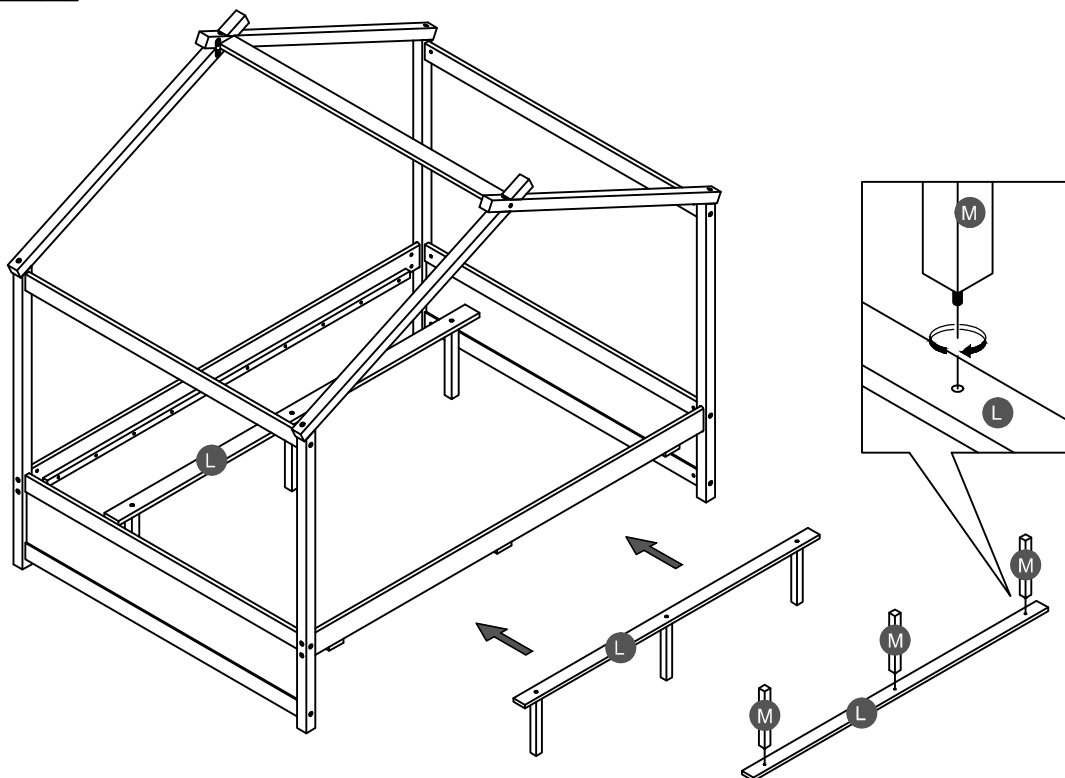

Assembling leg support (M) with lower support slat (L) later rotate, Move support slat inside Full bunkbed.

STEP 9:

24PCS

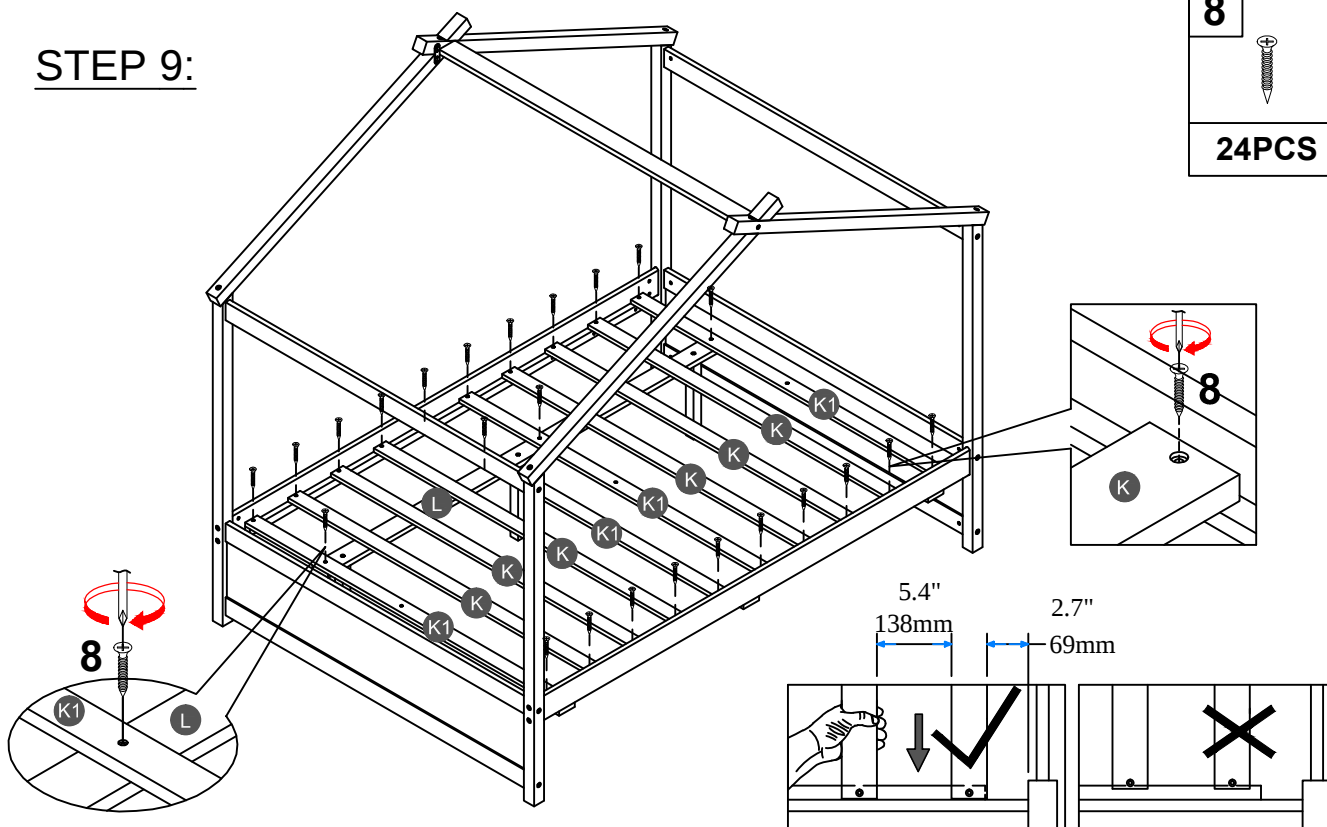

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.


STEP 10:




8PCS



8PCS

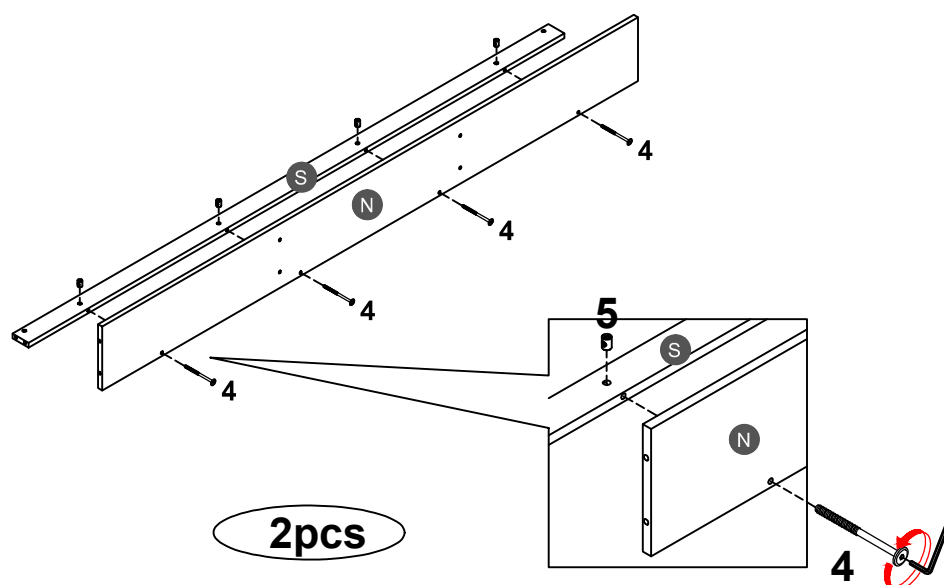


STEP 11:

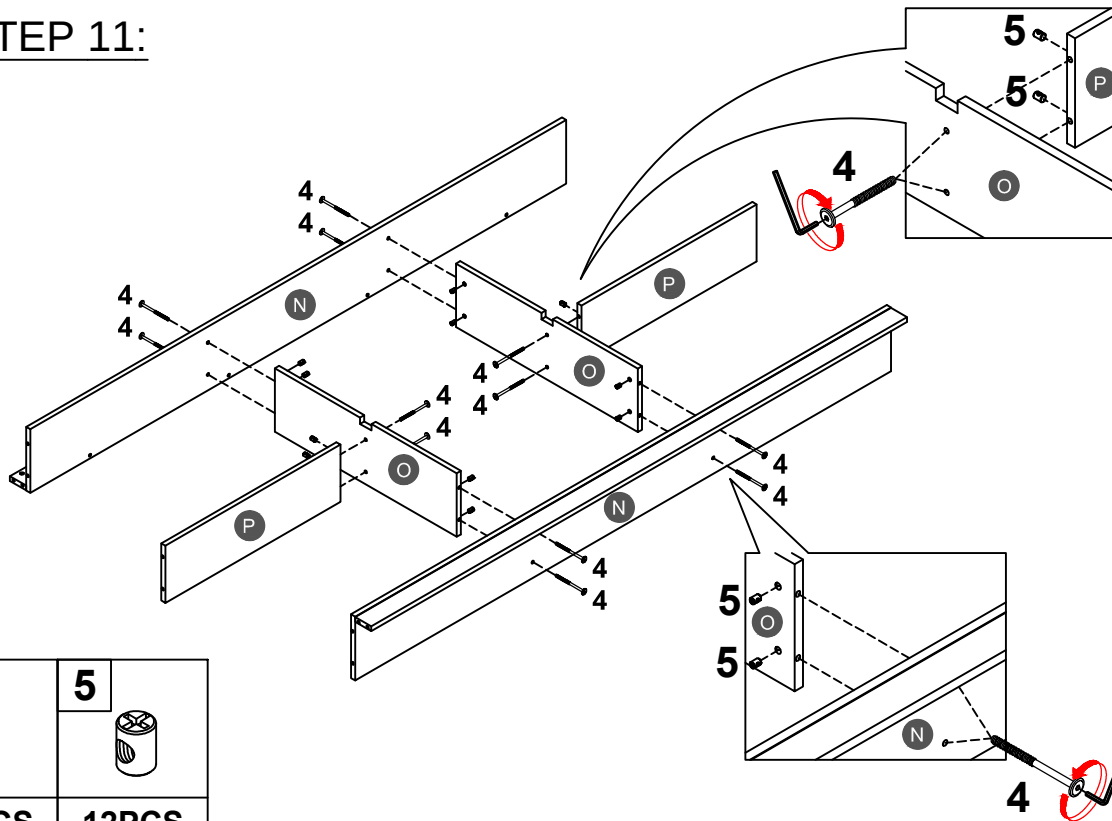

4	5
	
12PCS	12PCS

STEP 12:

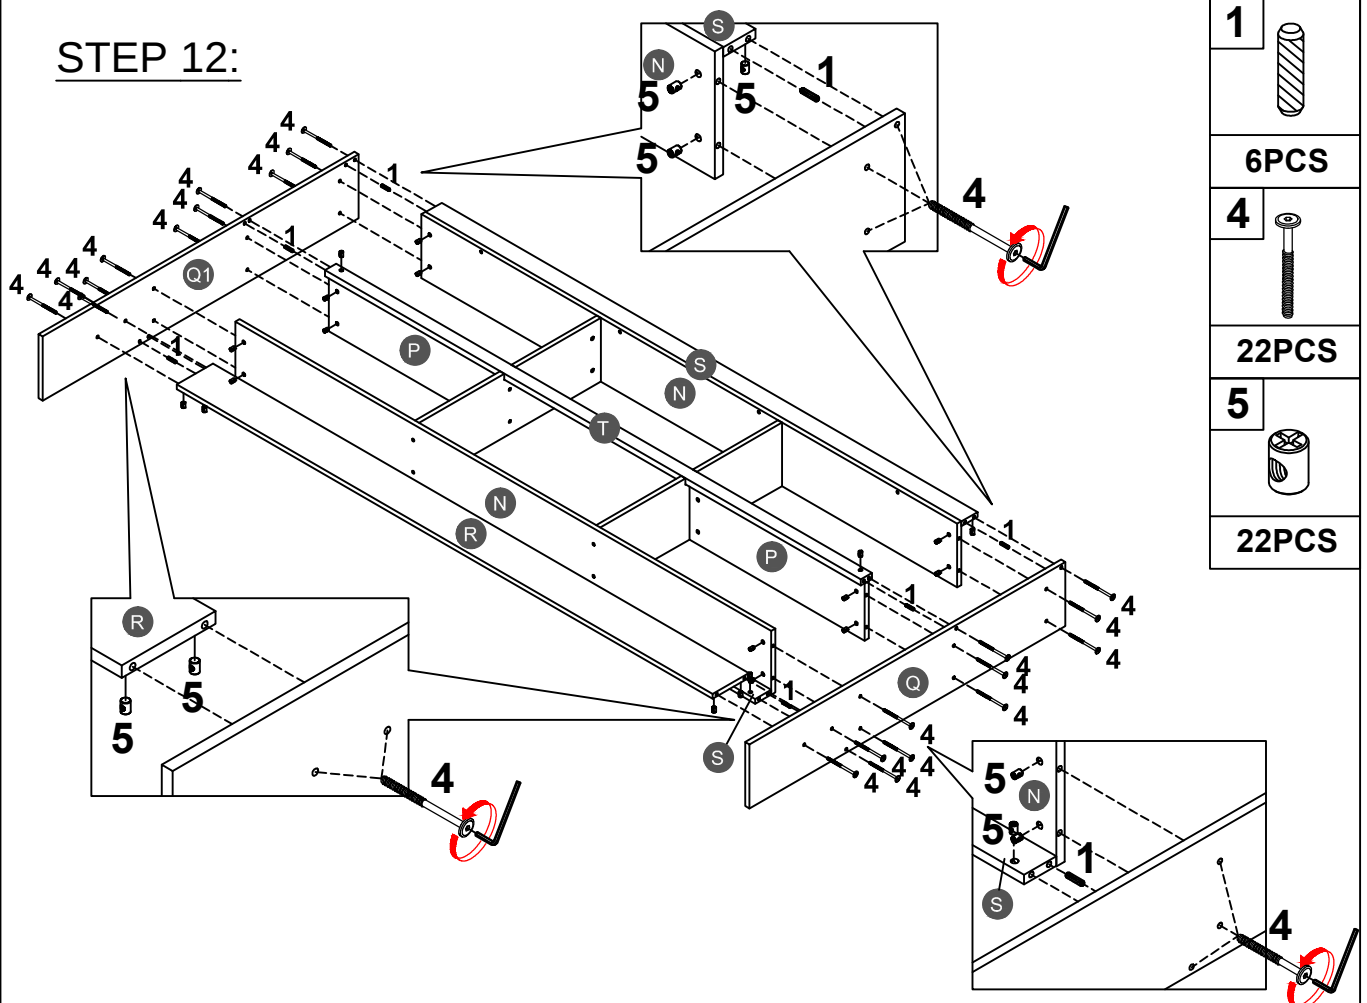


1	
6PCS	
4	
22PCS	
5	
22PCS	

STEP 13:


11




40PCS

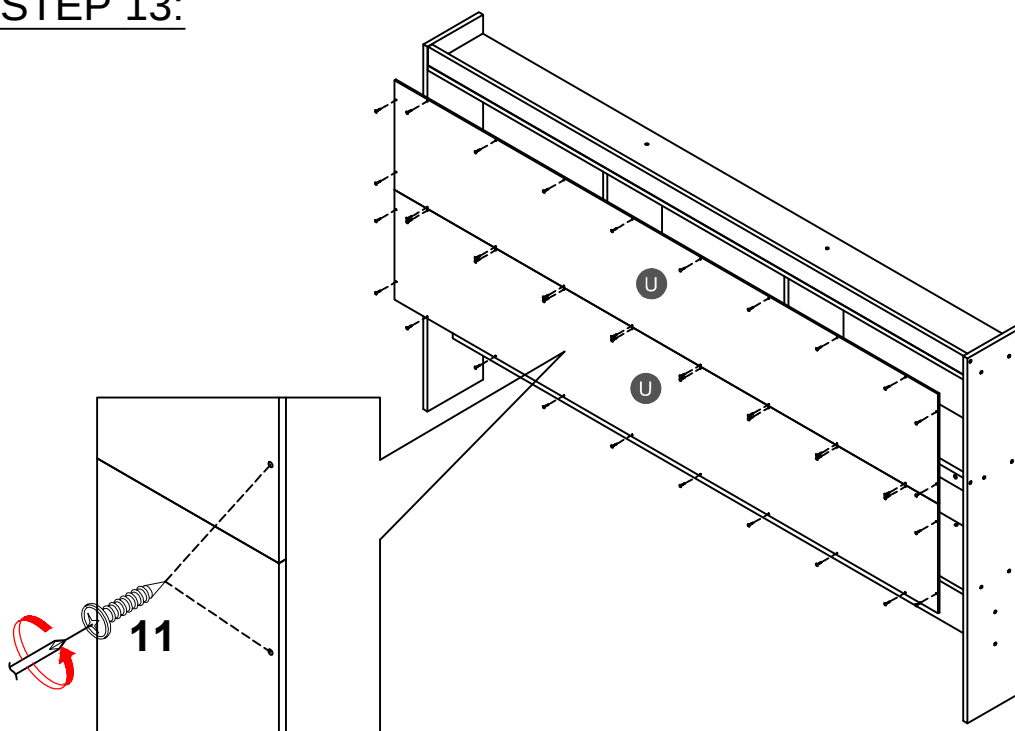

STEP 14:

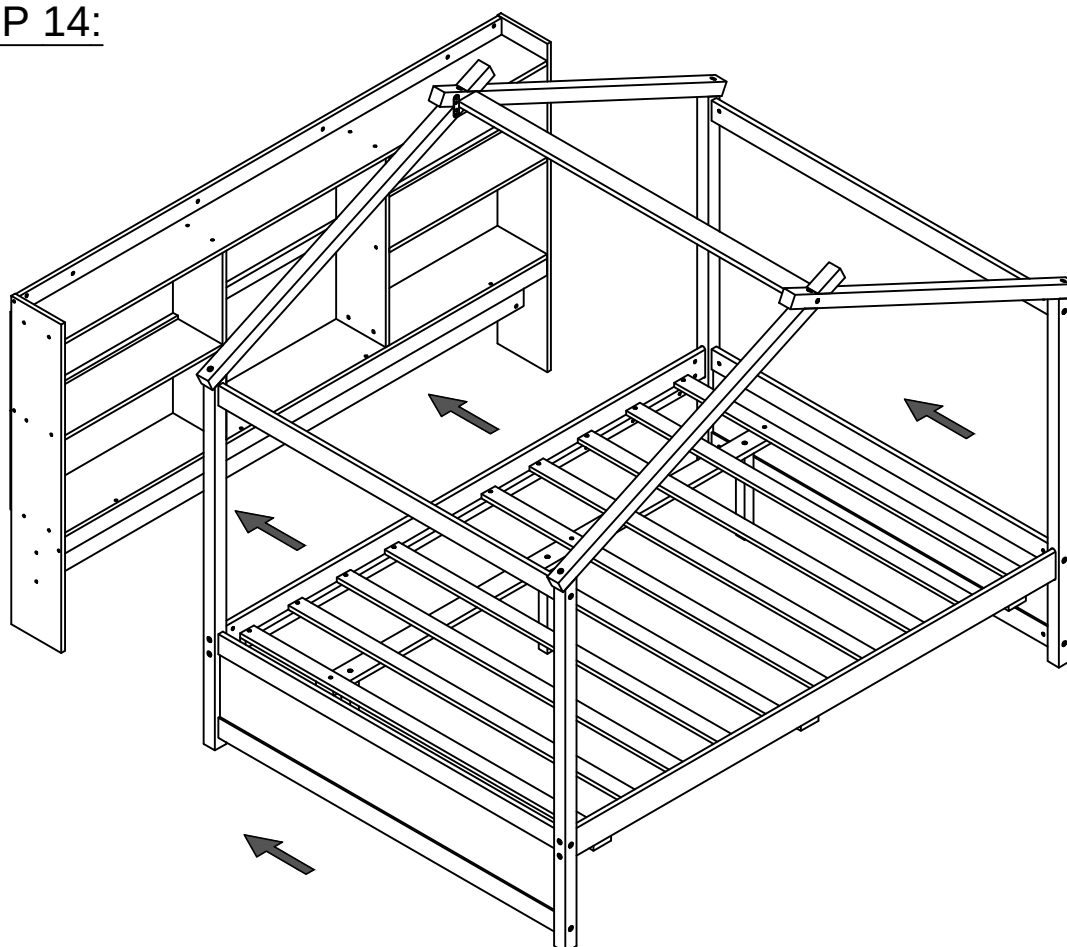

STEP 15:

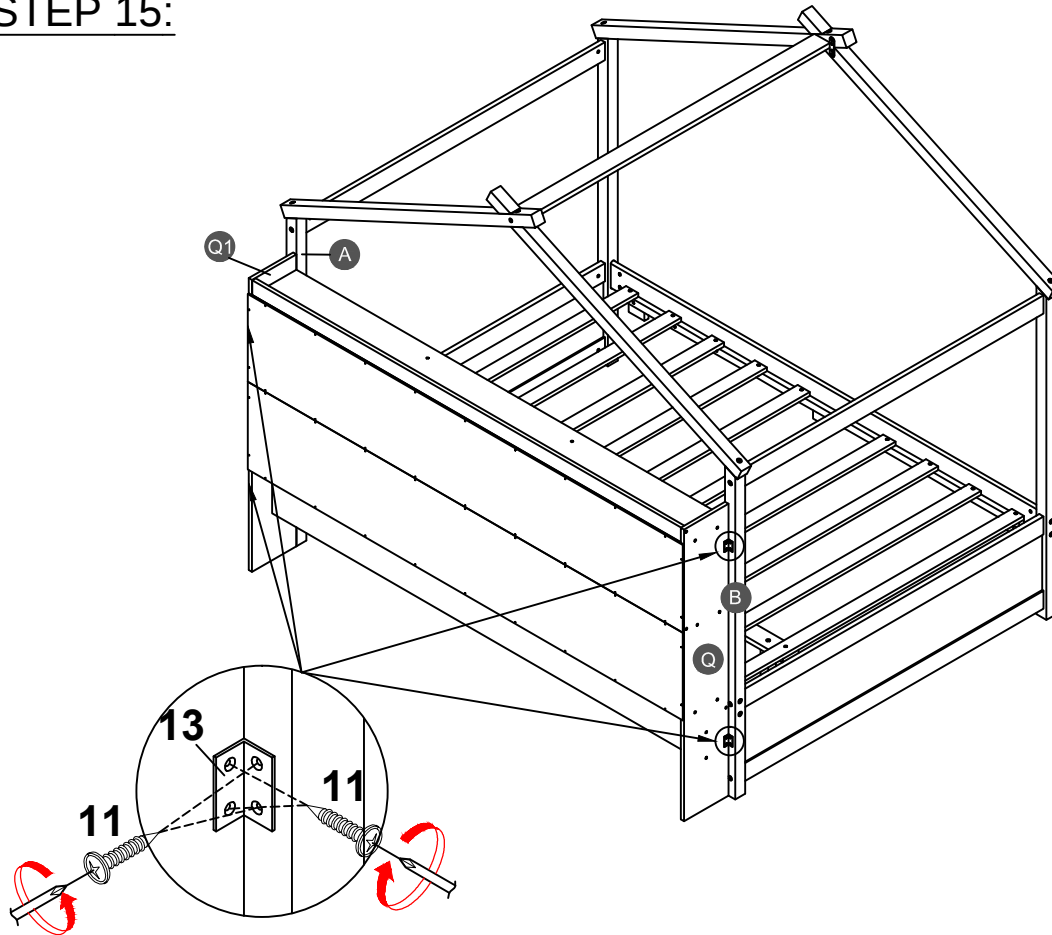

11




16PCS

13



4PCS

STEP 16:

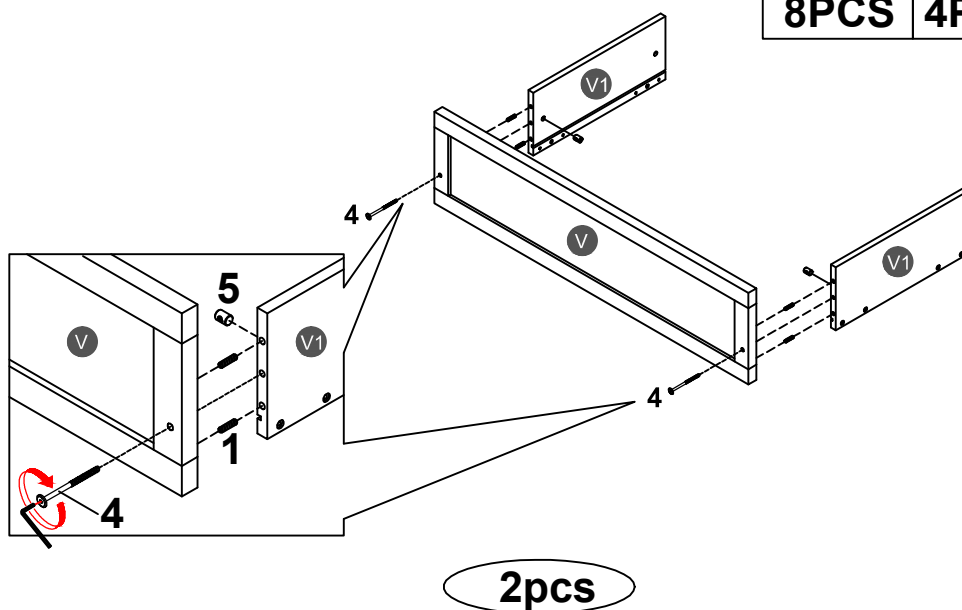

1



8PCS

4



4PCS


5



4PCS

2pcs


STEP 17:

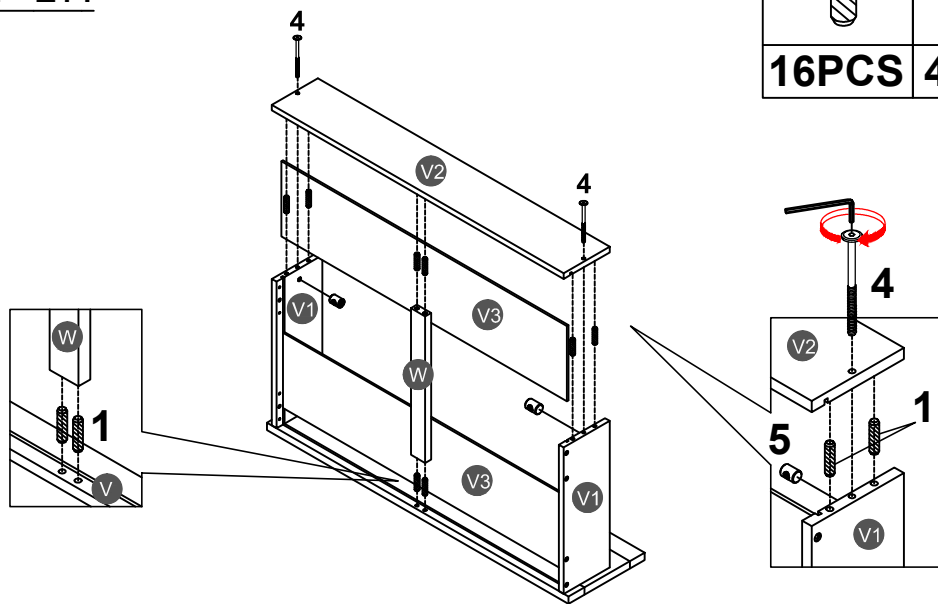

1	4	5
16PCS	4PCS	4PCS

2pcs


STEP 18:

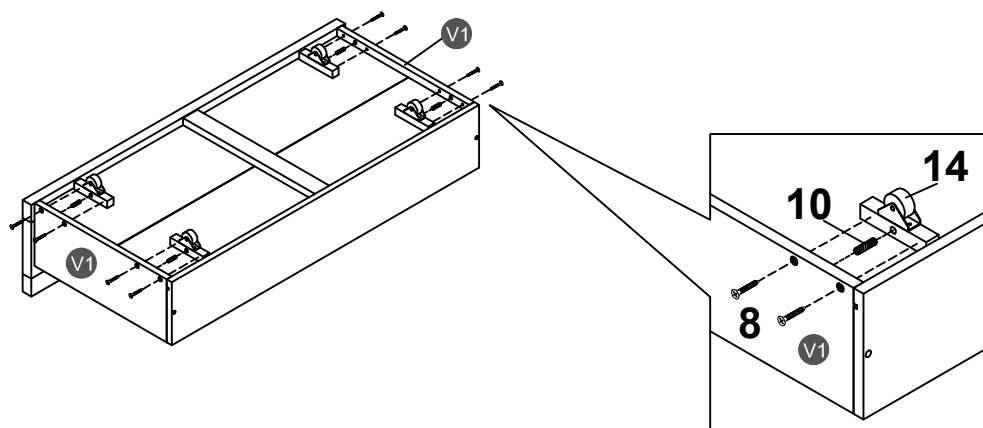

8	10	14
16PCS	8PCS	8PCS

2pcs

STEP 19:

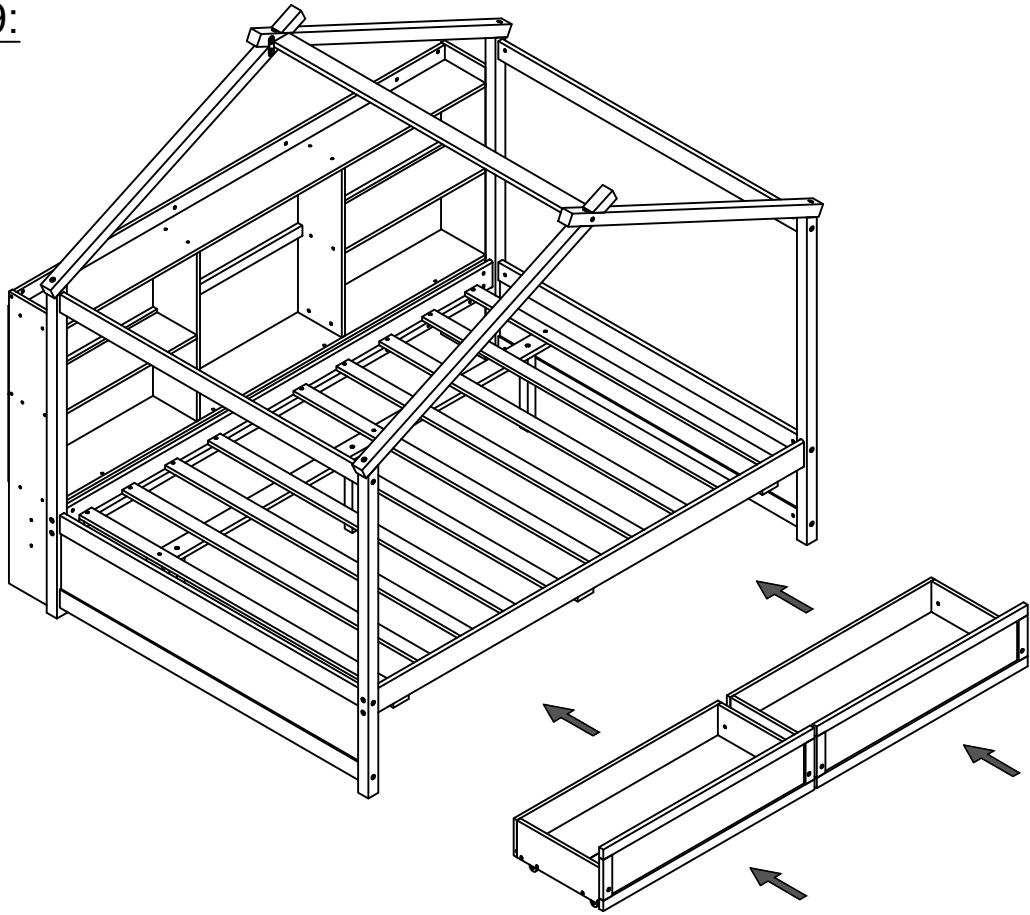

Push Drawer under the bottom of Bunkbed.

