




1. Get height. Work out the best position and height for your new TV stand. Draw a line with pencil or paster on the wall with spirit level, then place both the hanging boards along this line on the wall.

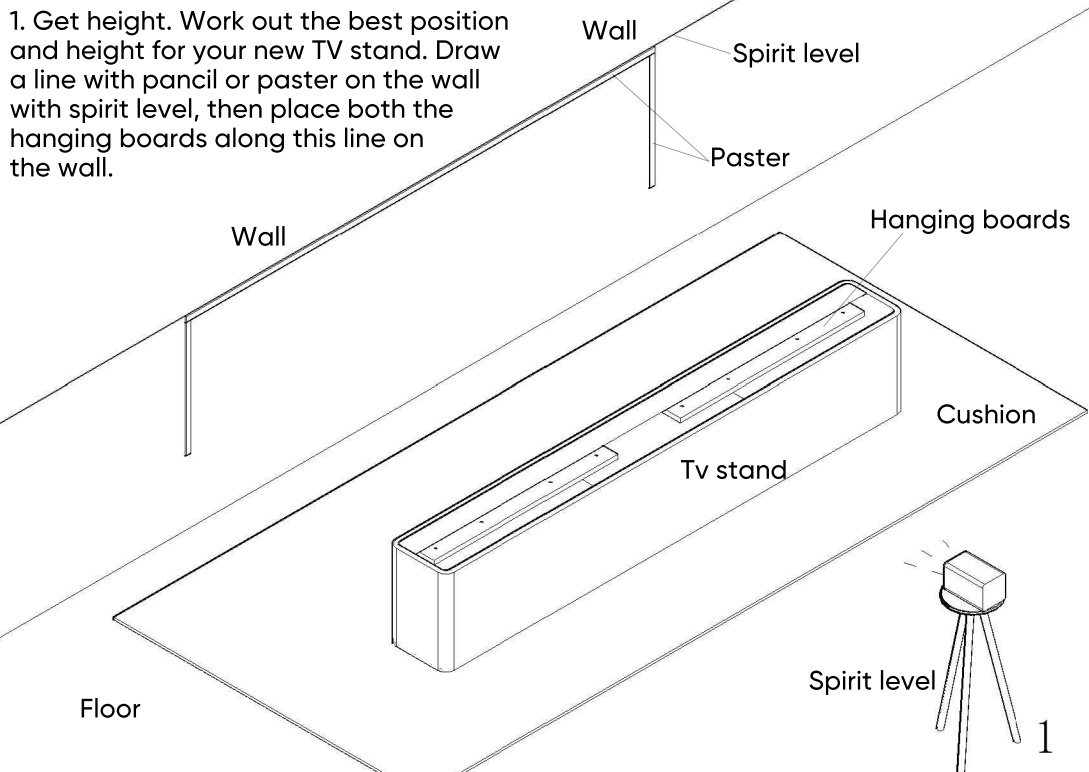


2. Mark the drill holes with a pencil. Using your drill make 5mm holes in the wall and fit the rawl plugs inside.

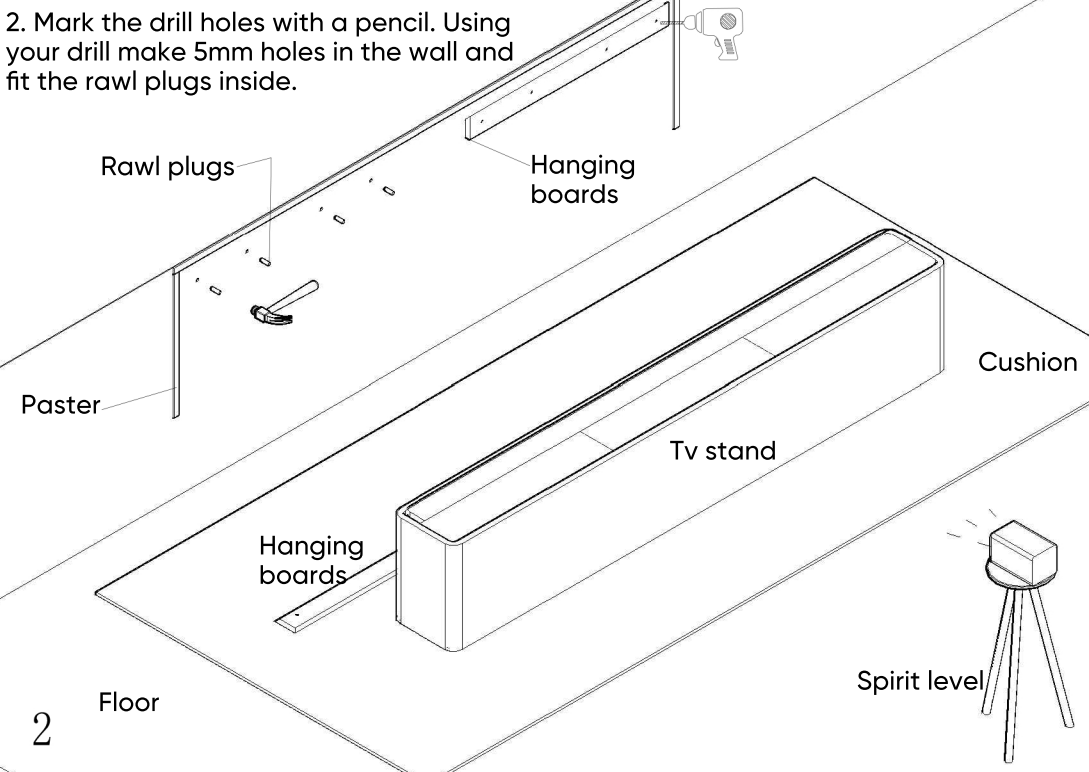

3. Hold the hanging boards in place and use screws to attach them. (Note: The notch of the board is upwards and towards the wall.)

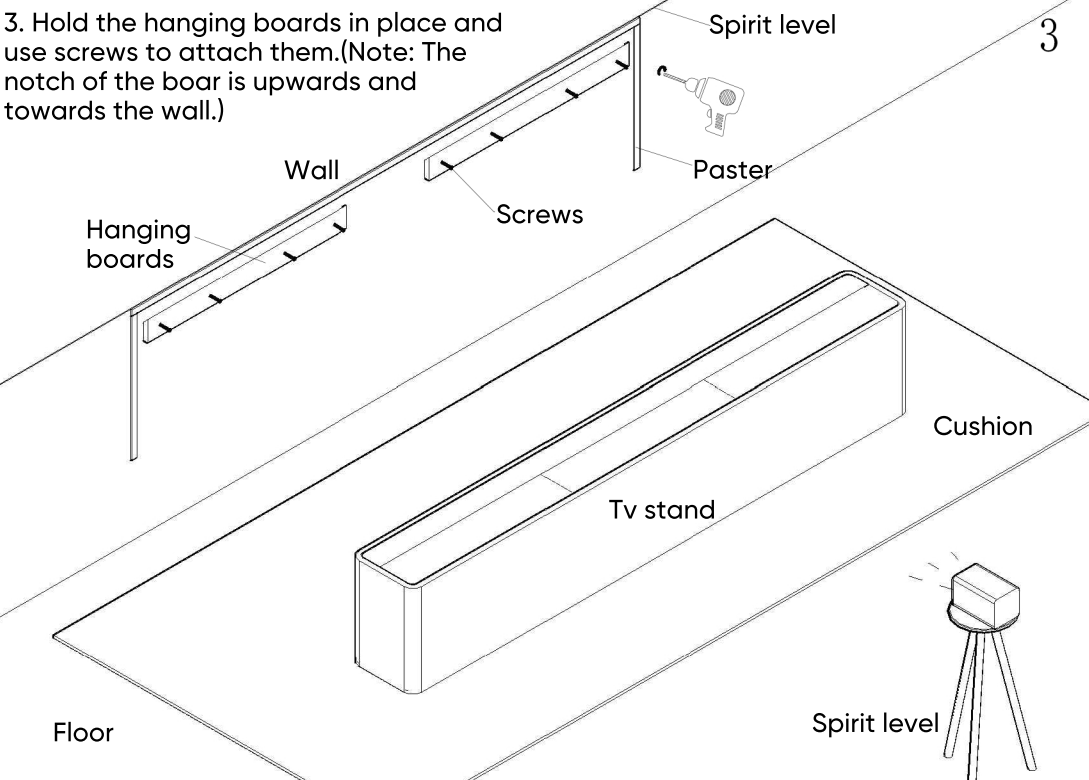


4. Lift the TV stand and hang the tv stand in the right way.

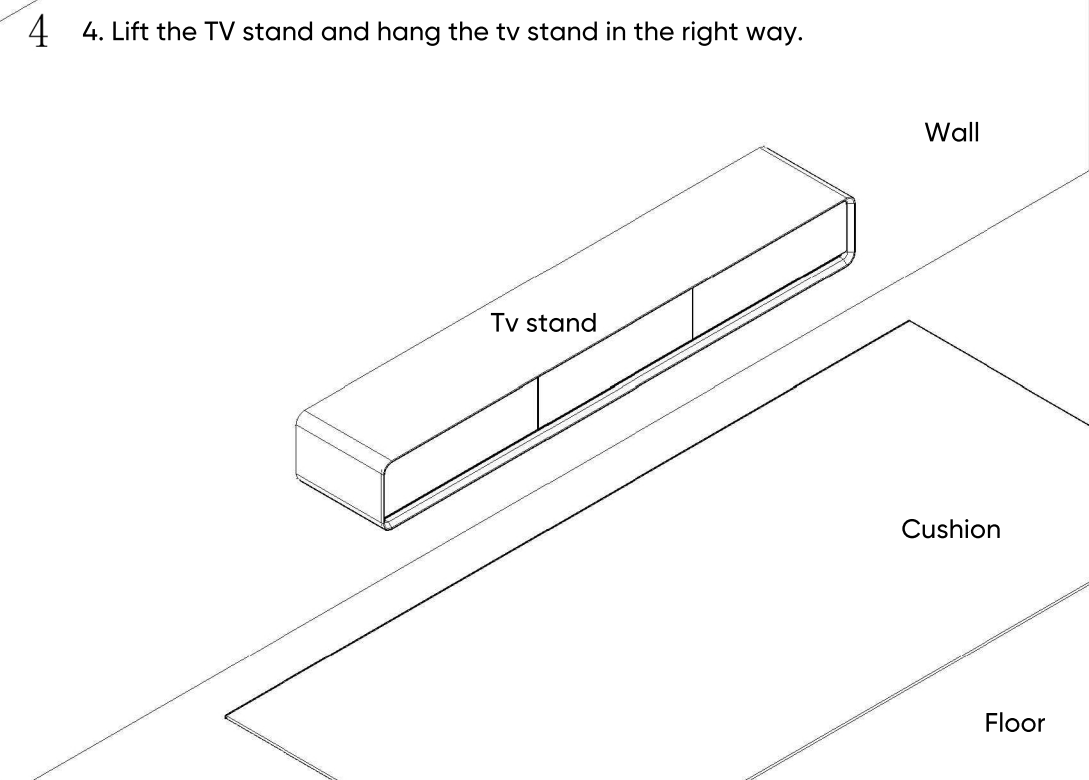

Using your drill, make 8 holes on the back of cabinet.


Wall

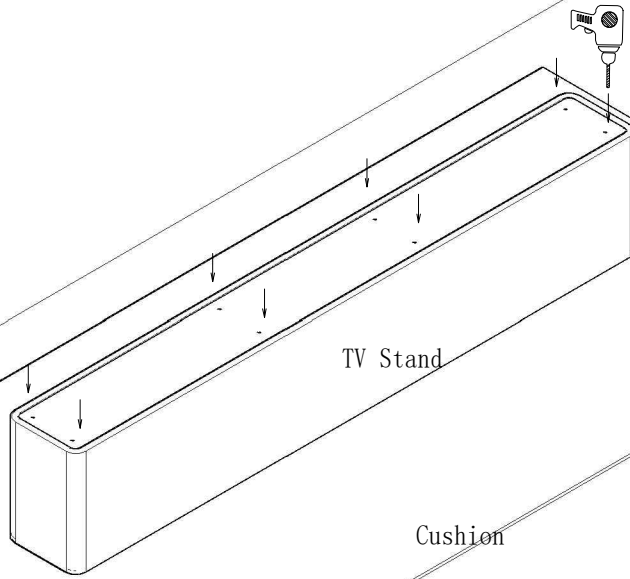

1


Grab a helper to hold the cabinet during installation. Find the location you want your cabinet to hang. Use a spirit level to make sure the shelf is level. Mark the stud locations through the holes on the back of cabinet at the wall.

Wall

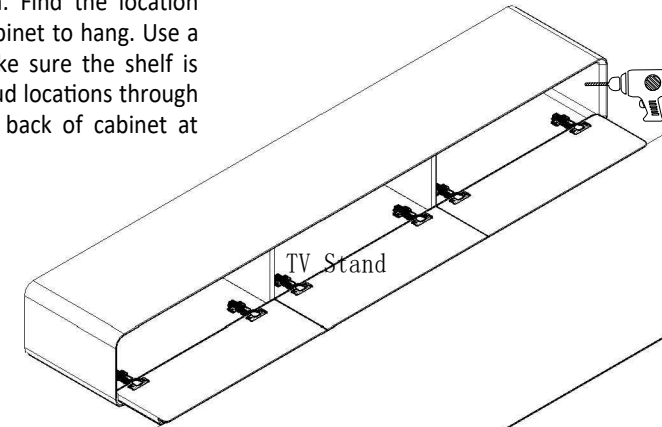

2

Mark hole's deep on the drill, make holes and place studs at the wall.

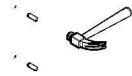


3

4

Screw. Locate the 8 studs behind the cabinet and drive 8 screws through the back of the cabinet into the studs.

Wall

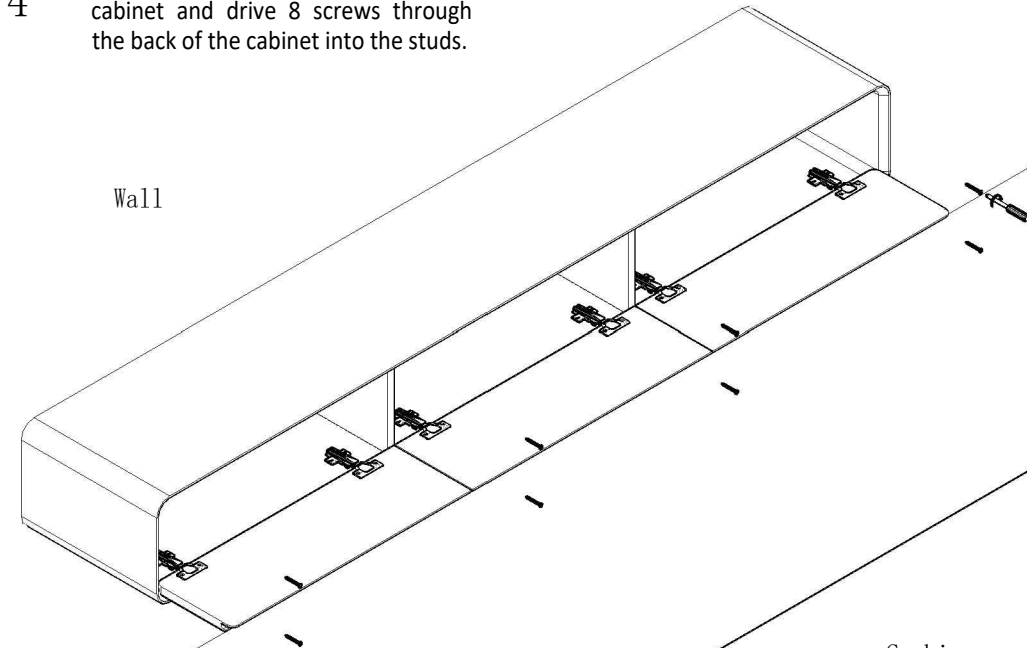

Cushion