
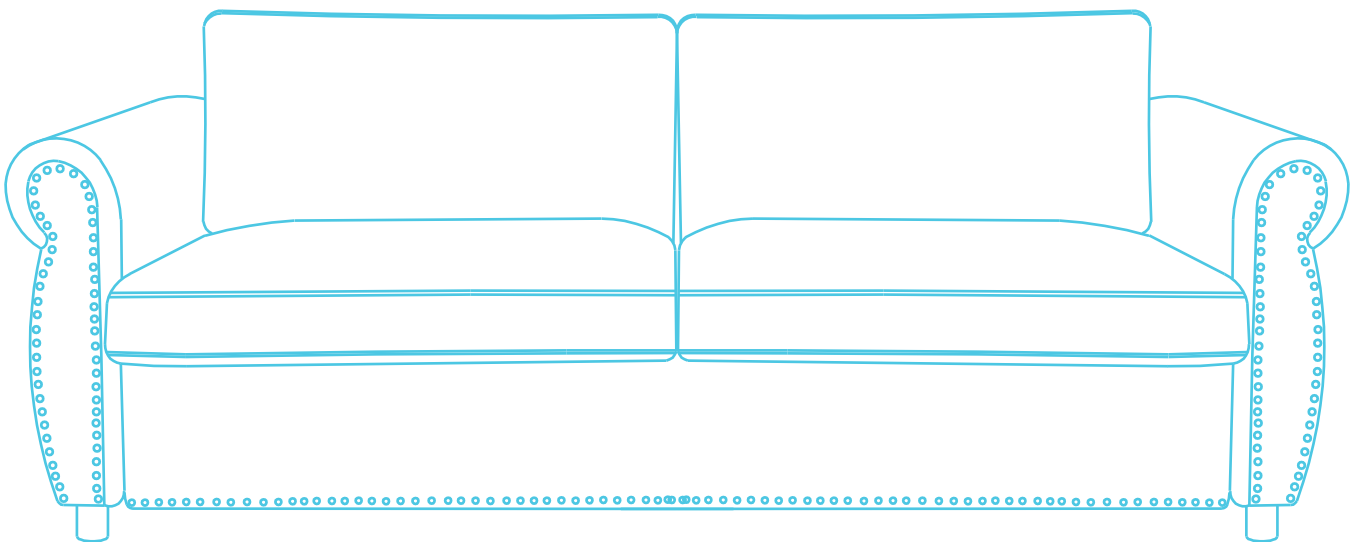
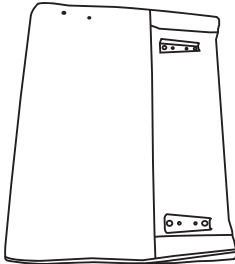
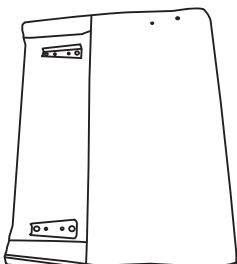
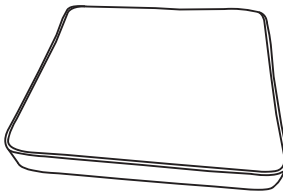
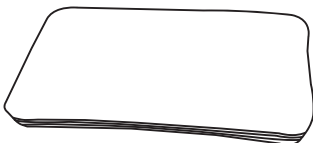
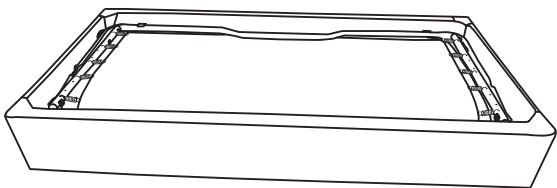
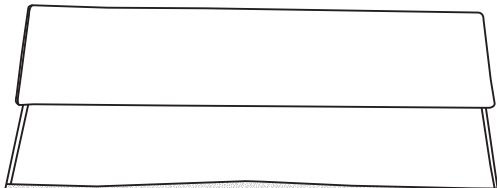
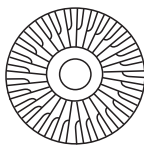




INSTALLATION GUIDE




SOFA

A Right Armrest 	B Left Armrest 	C Seat X2 	D Backrest X2 
E Base 		F Back Base 	
G Allenkey 			
J Washer X4 	K Feet X4 	M Insert X4 	N Screw X 16 
O Insert X 2 		P Insert X 2 	


STEP 1

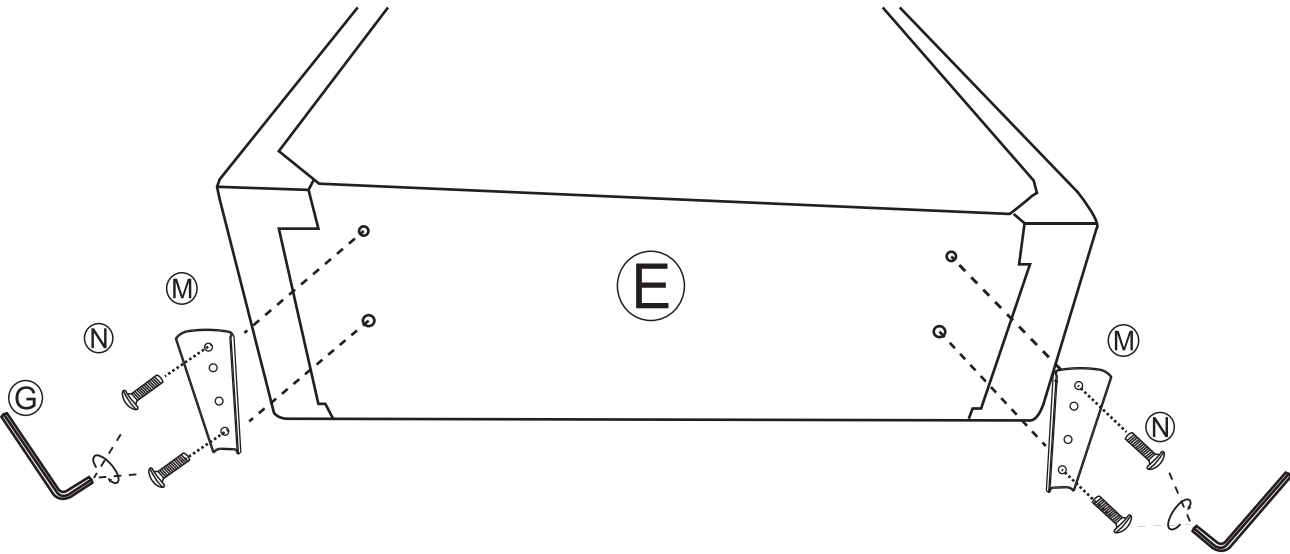


STEP 2

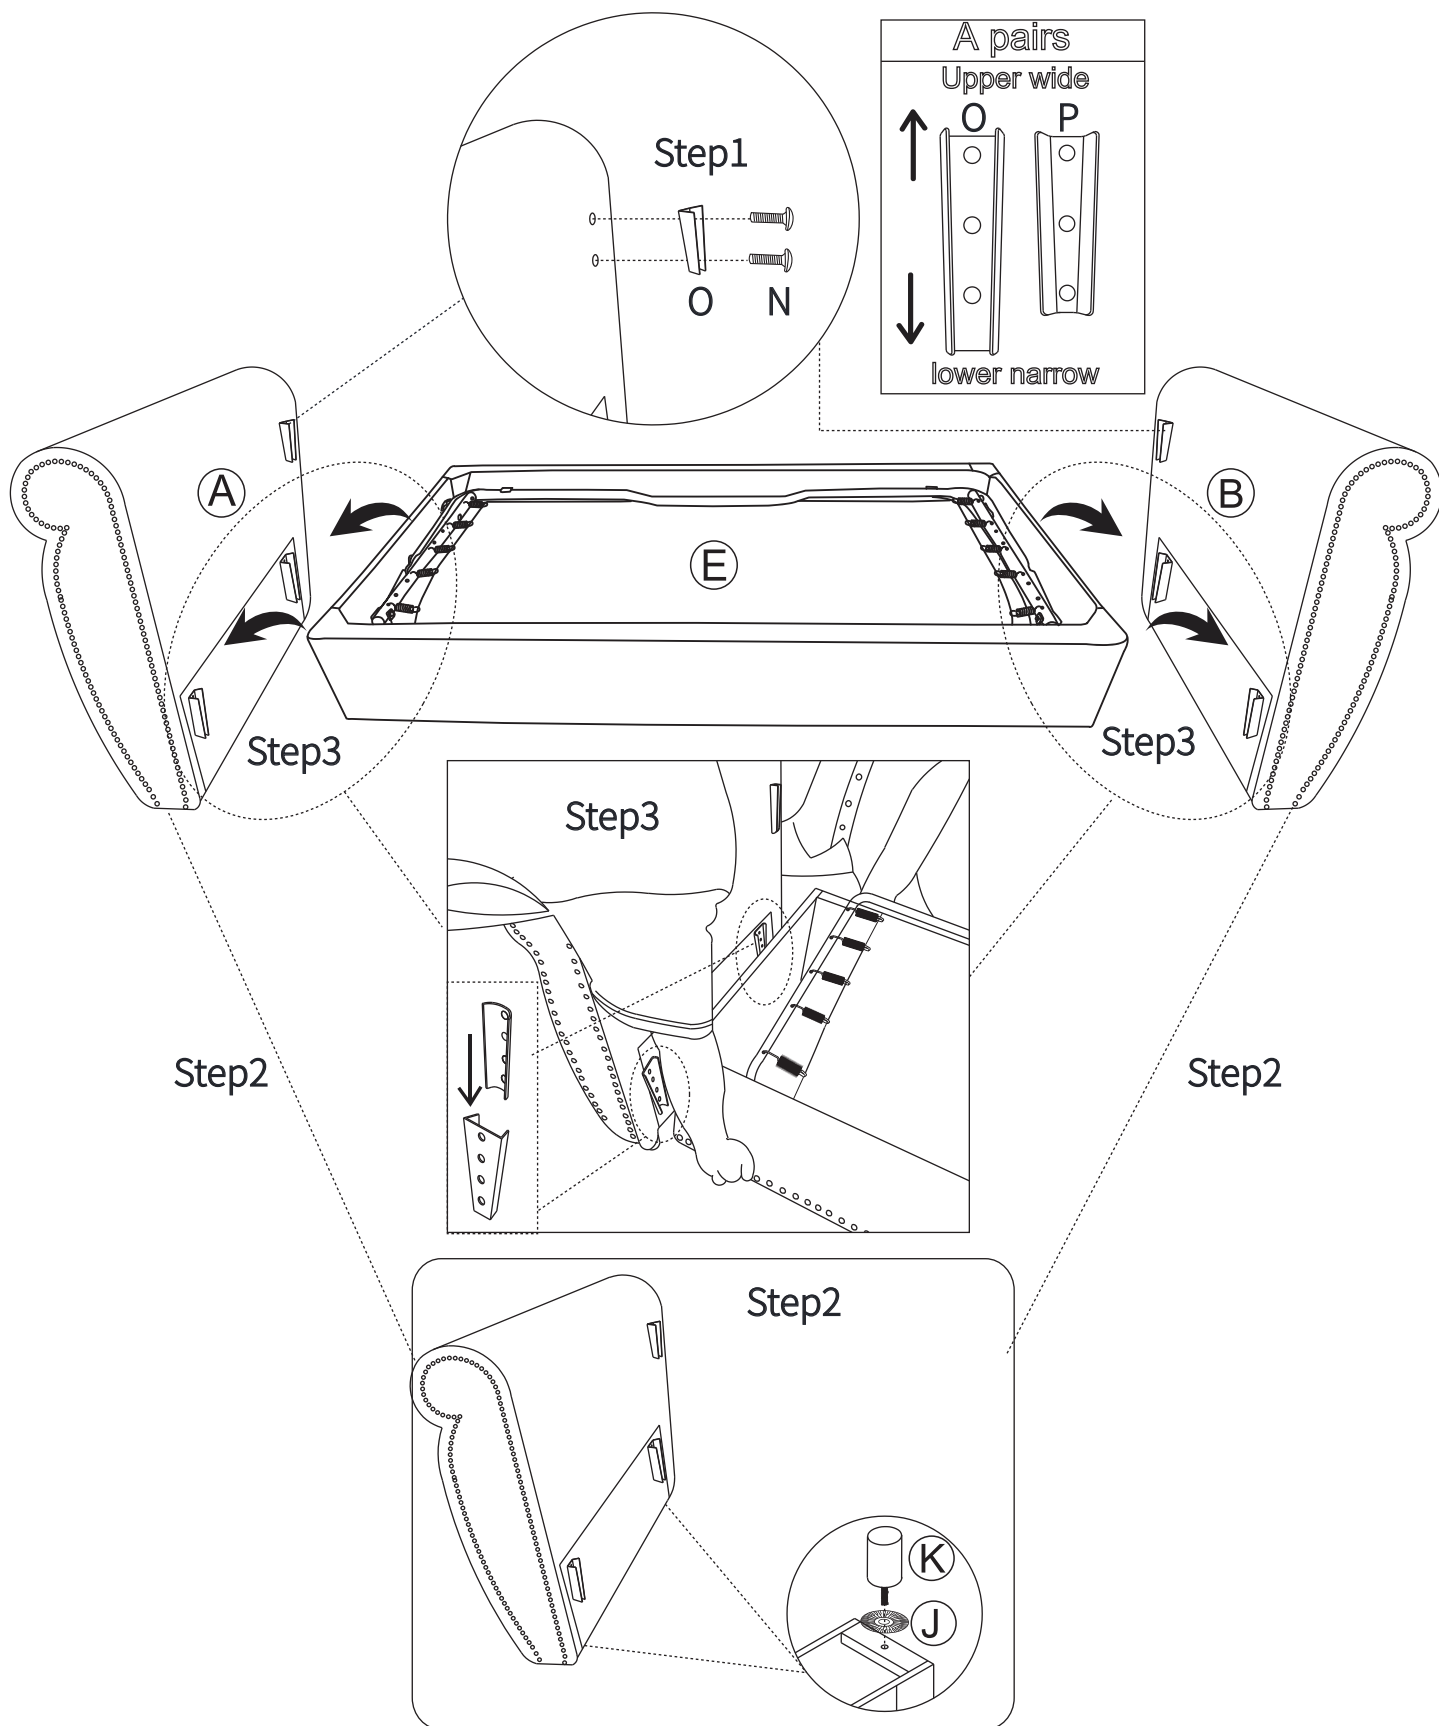


STEP 3

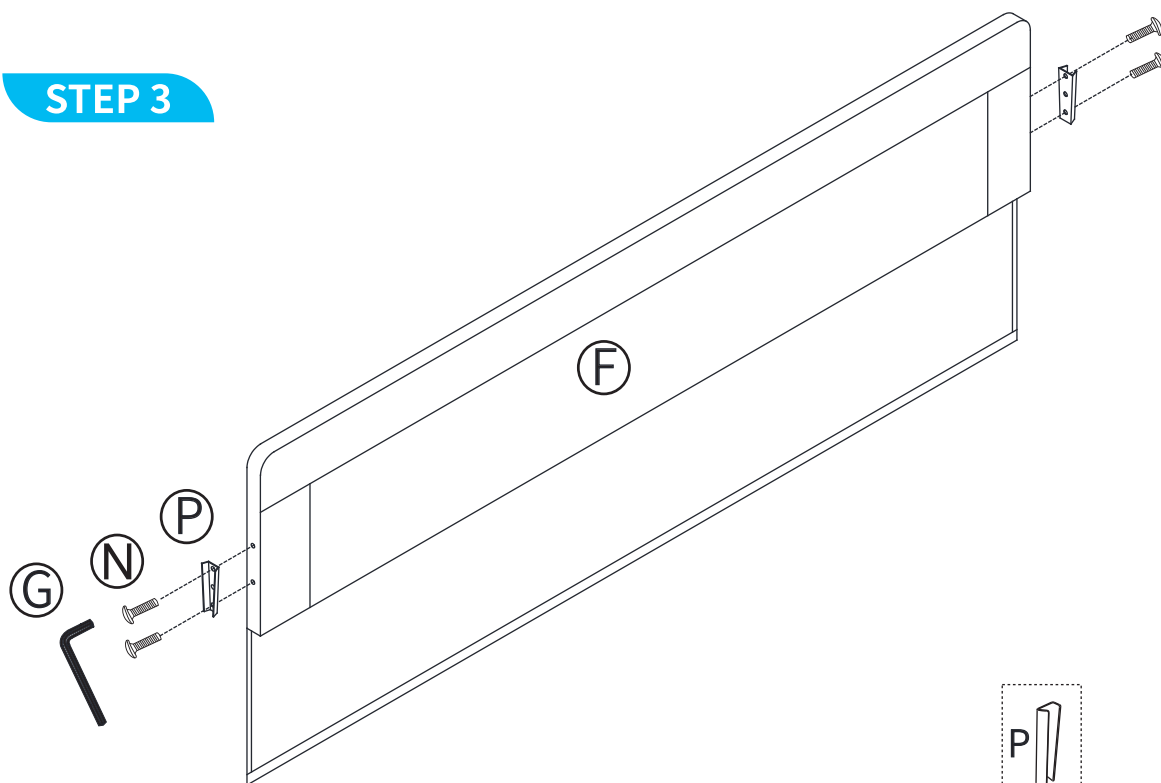


STEP 4

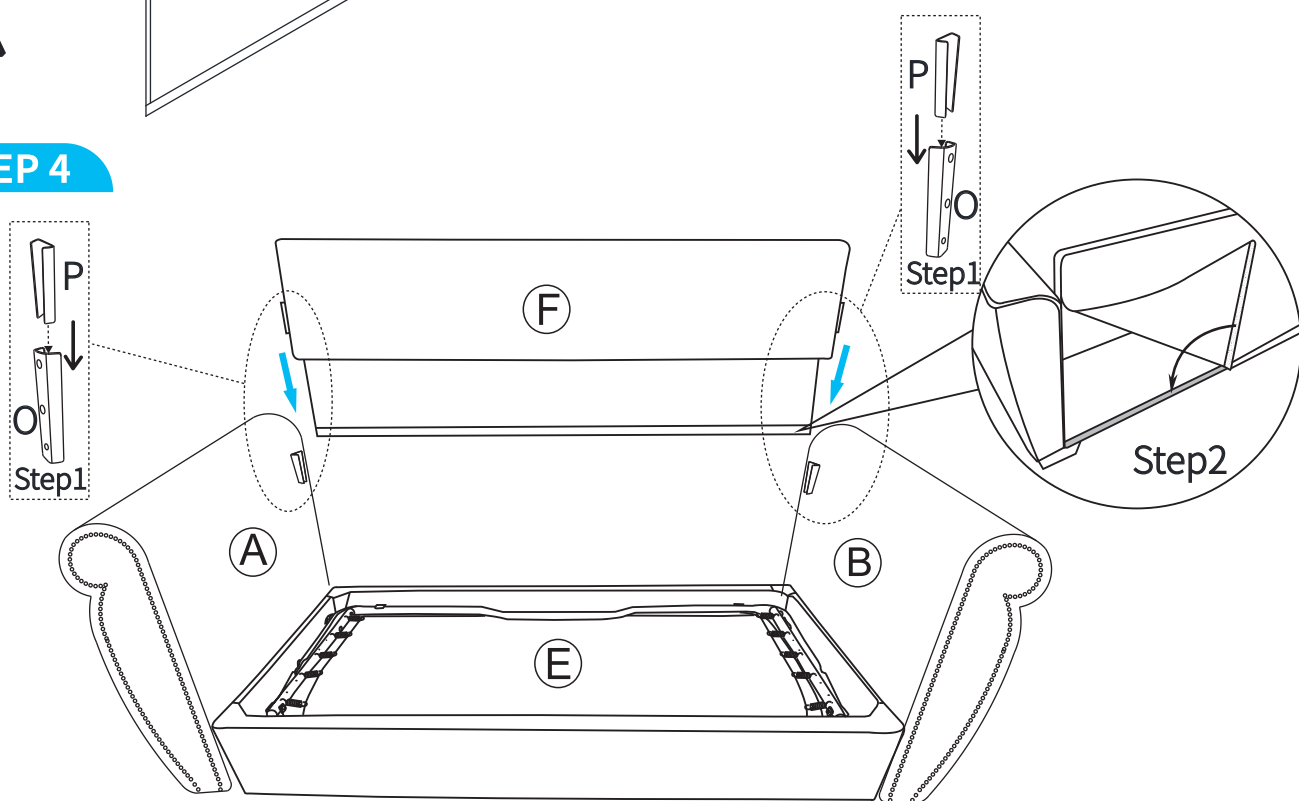


STEP 5

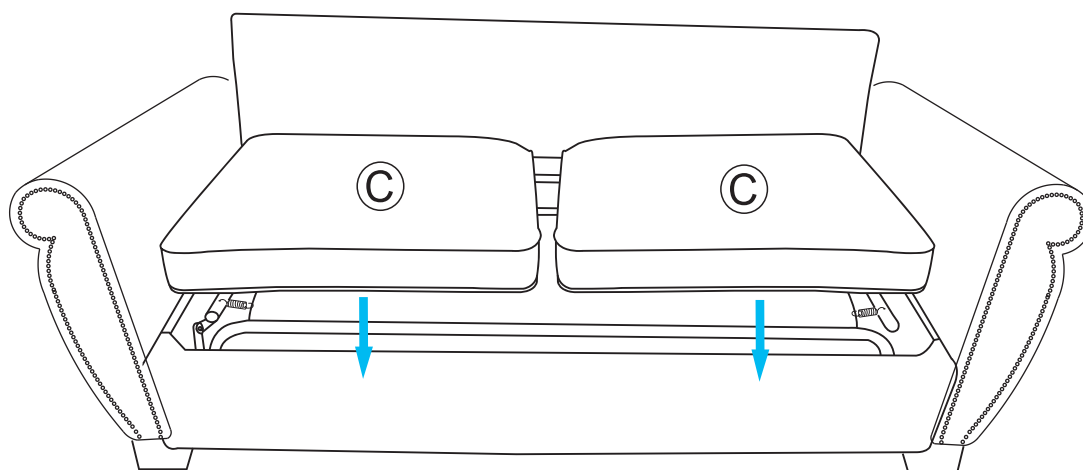

STEP 6

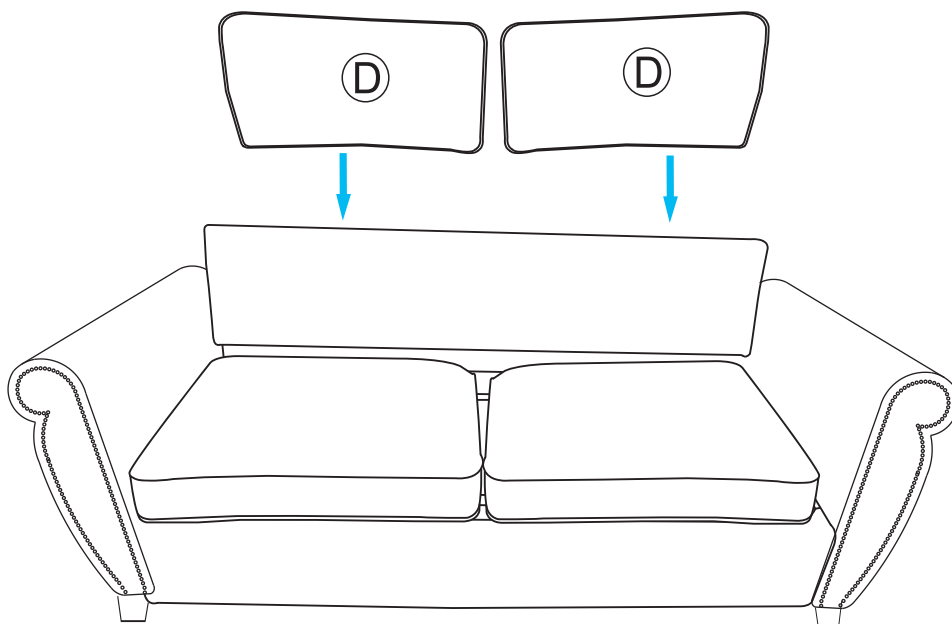


COMPLETE


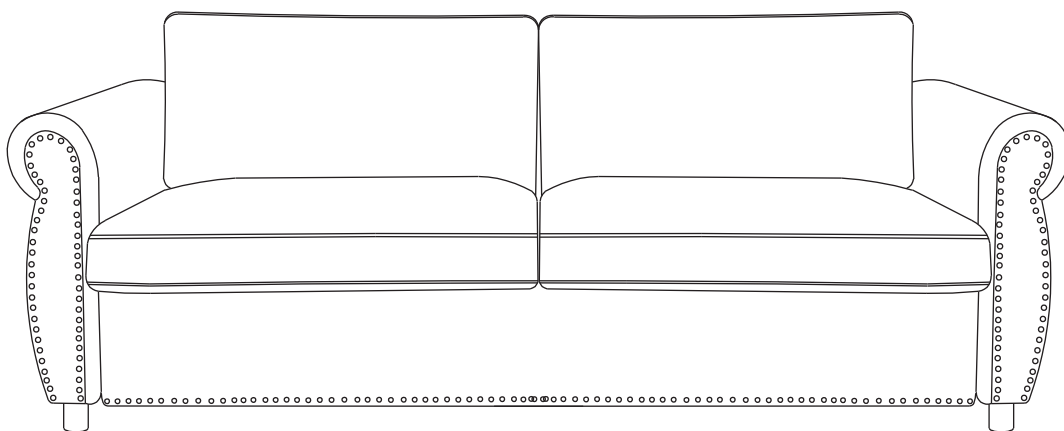


TRANSFORM



STEP 1

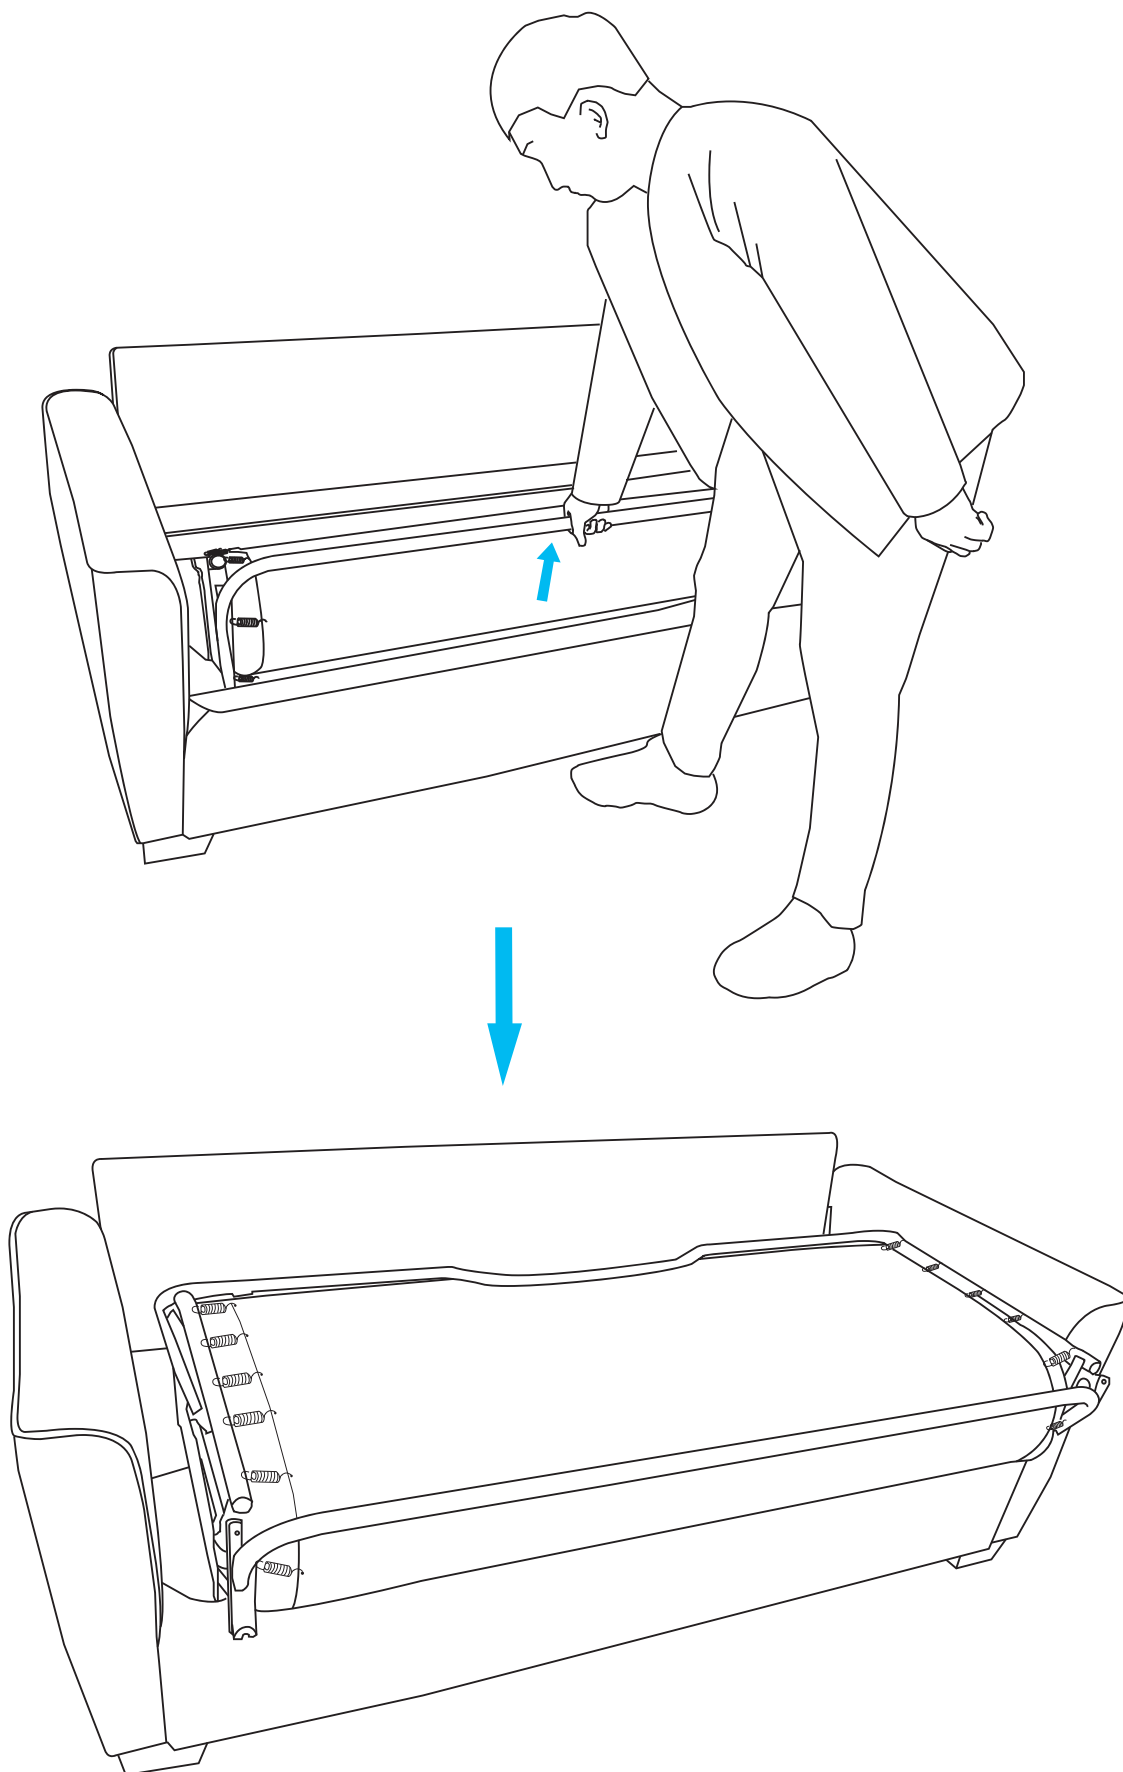

STEP 2

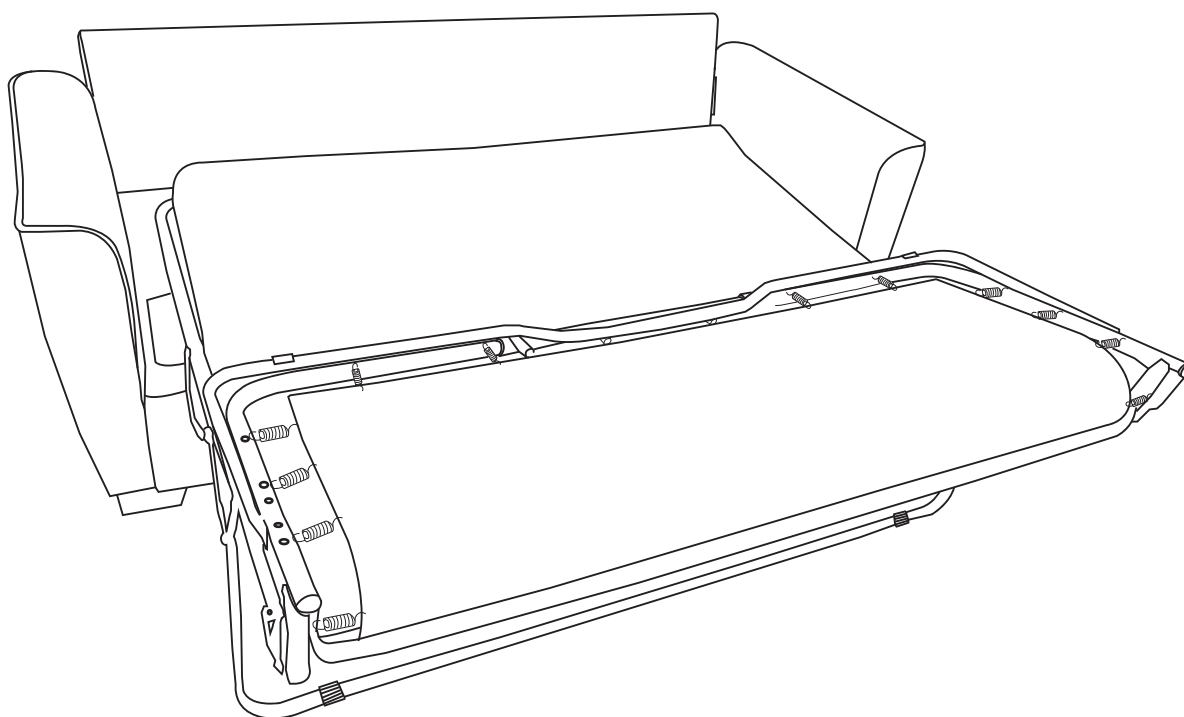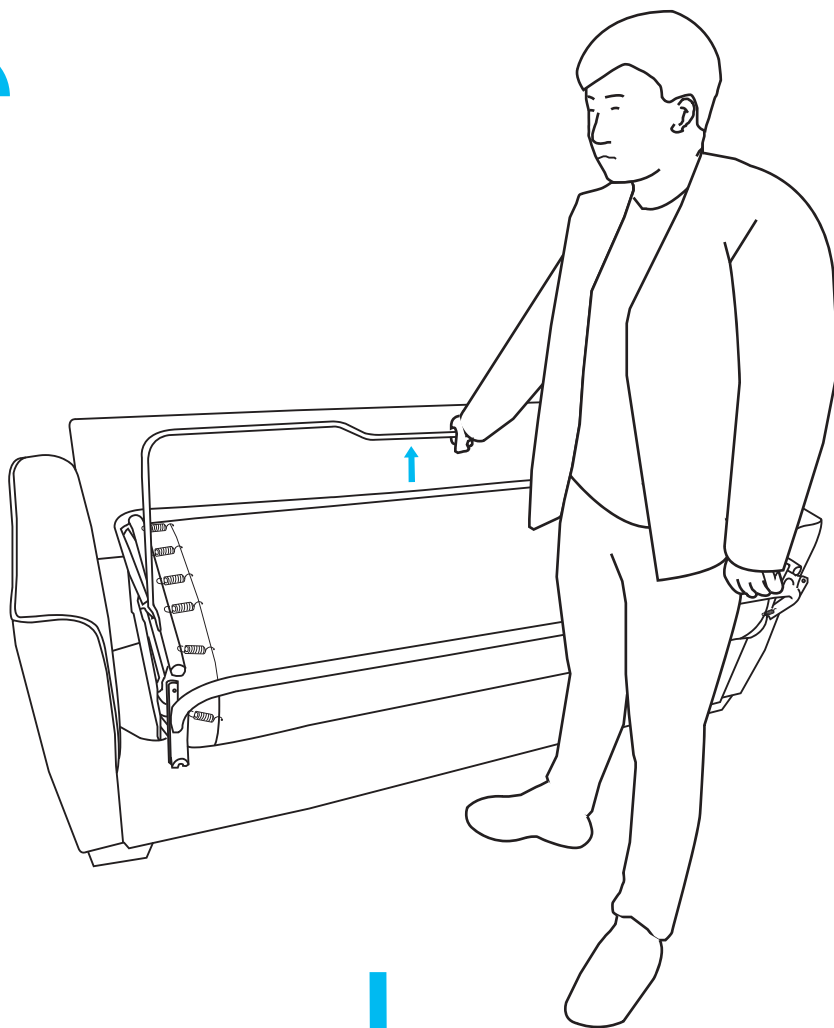

STEP 2

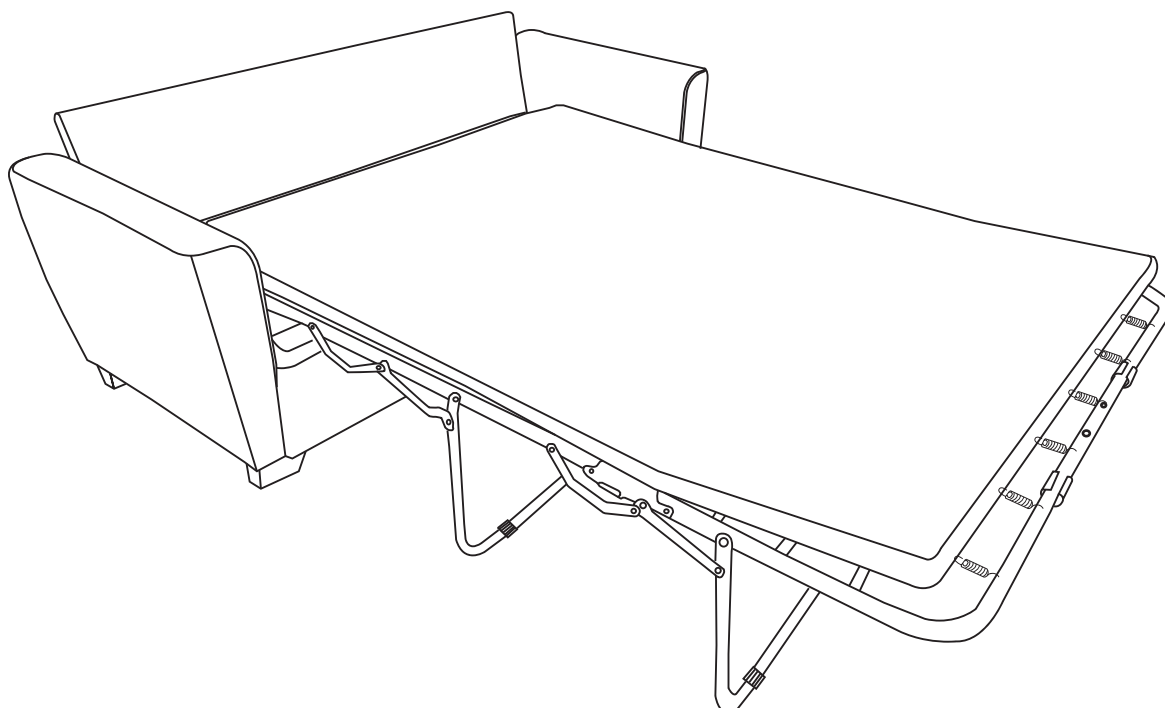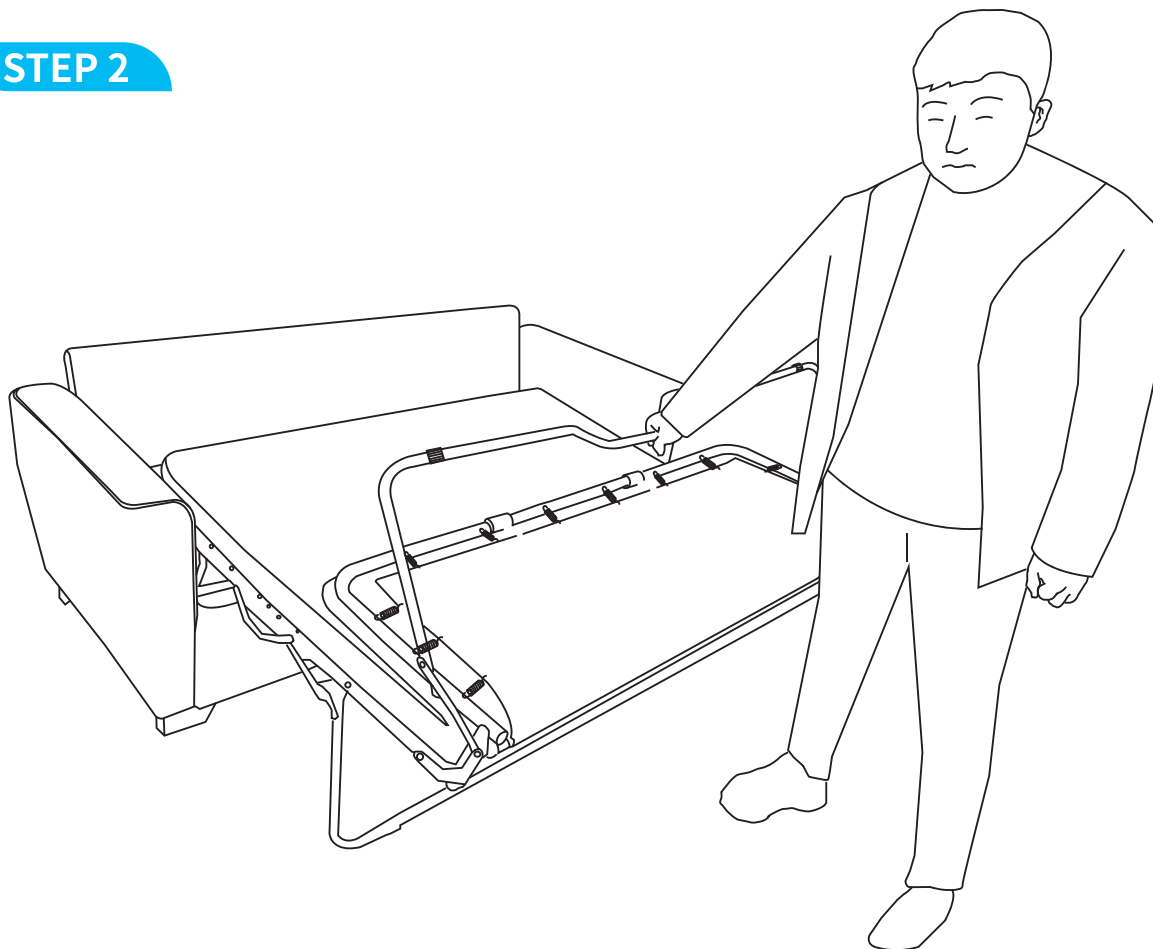

STEP 3

