


ASSEMBLY INSTRUCTION

SKU CODE : RH00111
TWIN SIZE FLOOR BED

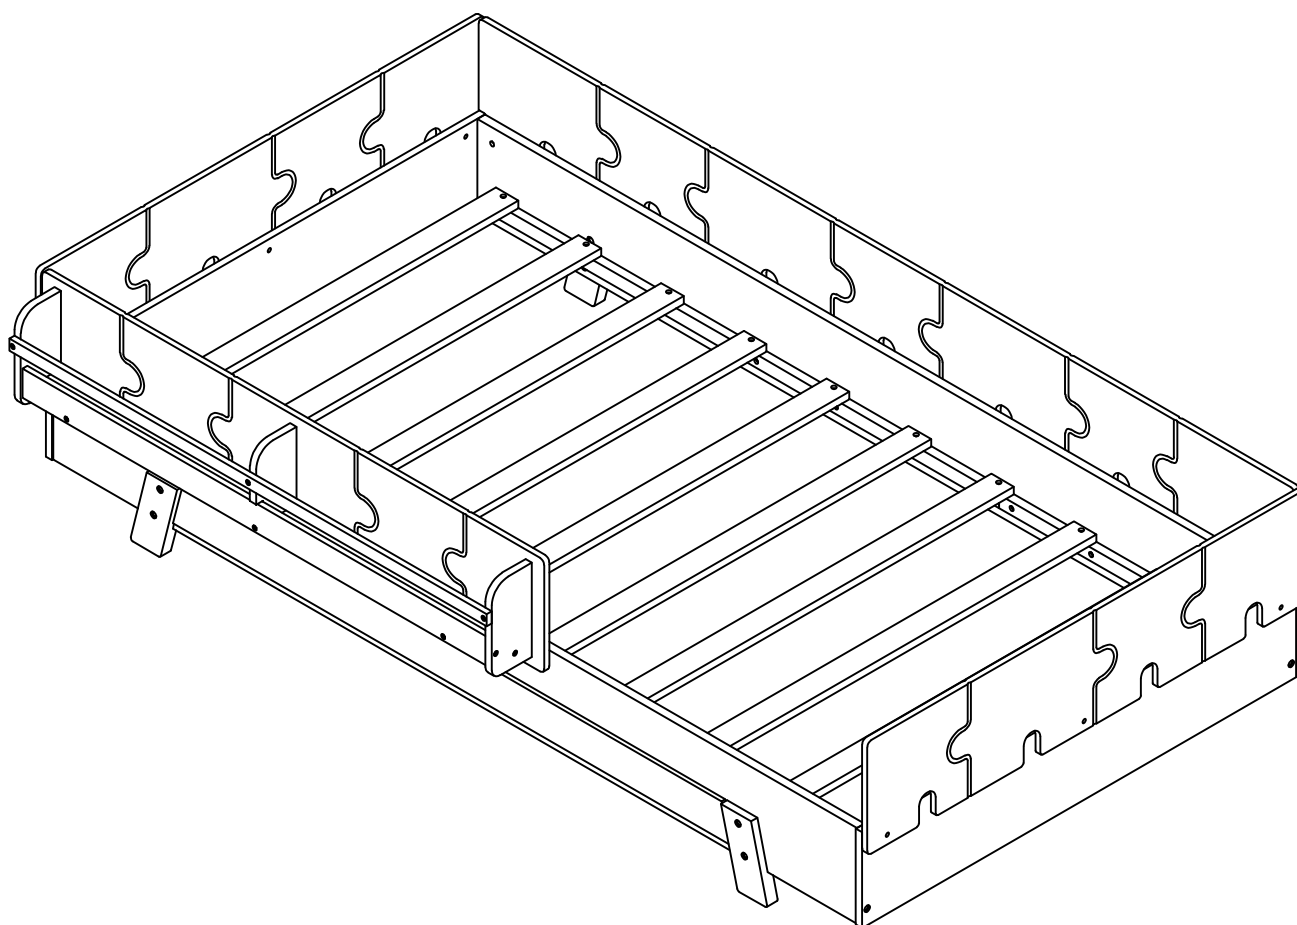

Bed Type
Twin Standard


Length
75"

Width
38 "













Thickness
6" max

This set includes 1 box. If you do not receive the full box, please contact our customer service team.


ASSEMBLY INSTRUCTION

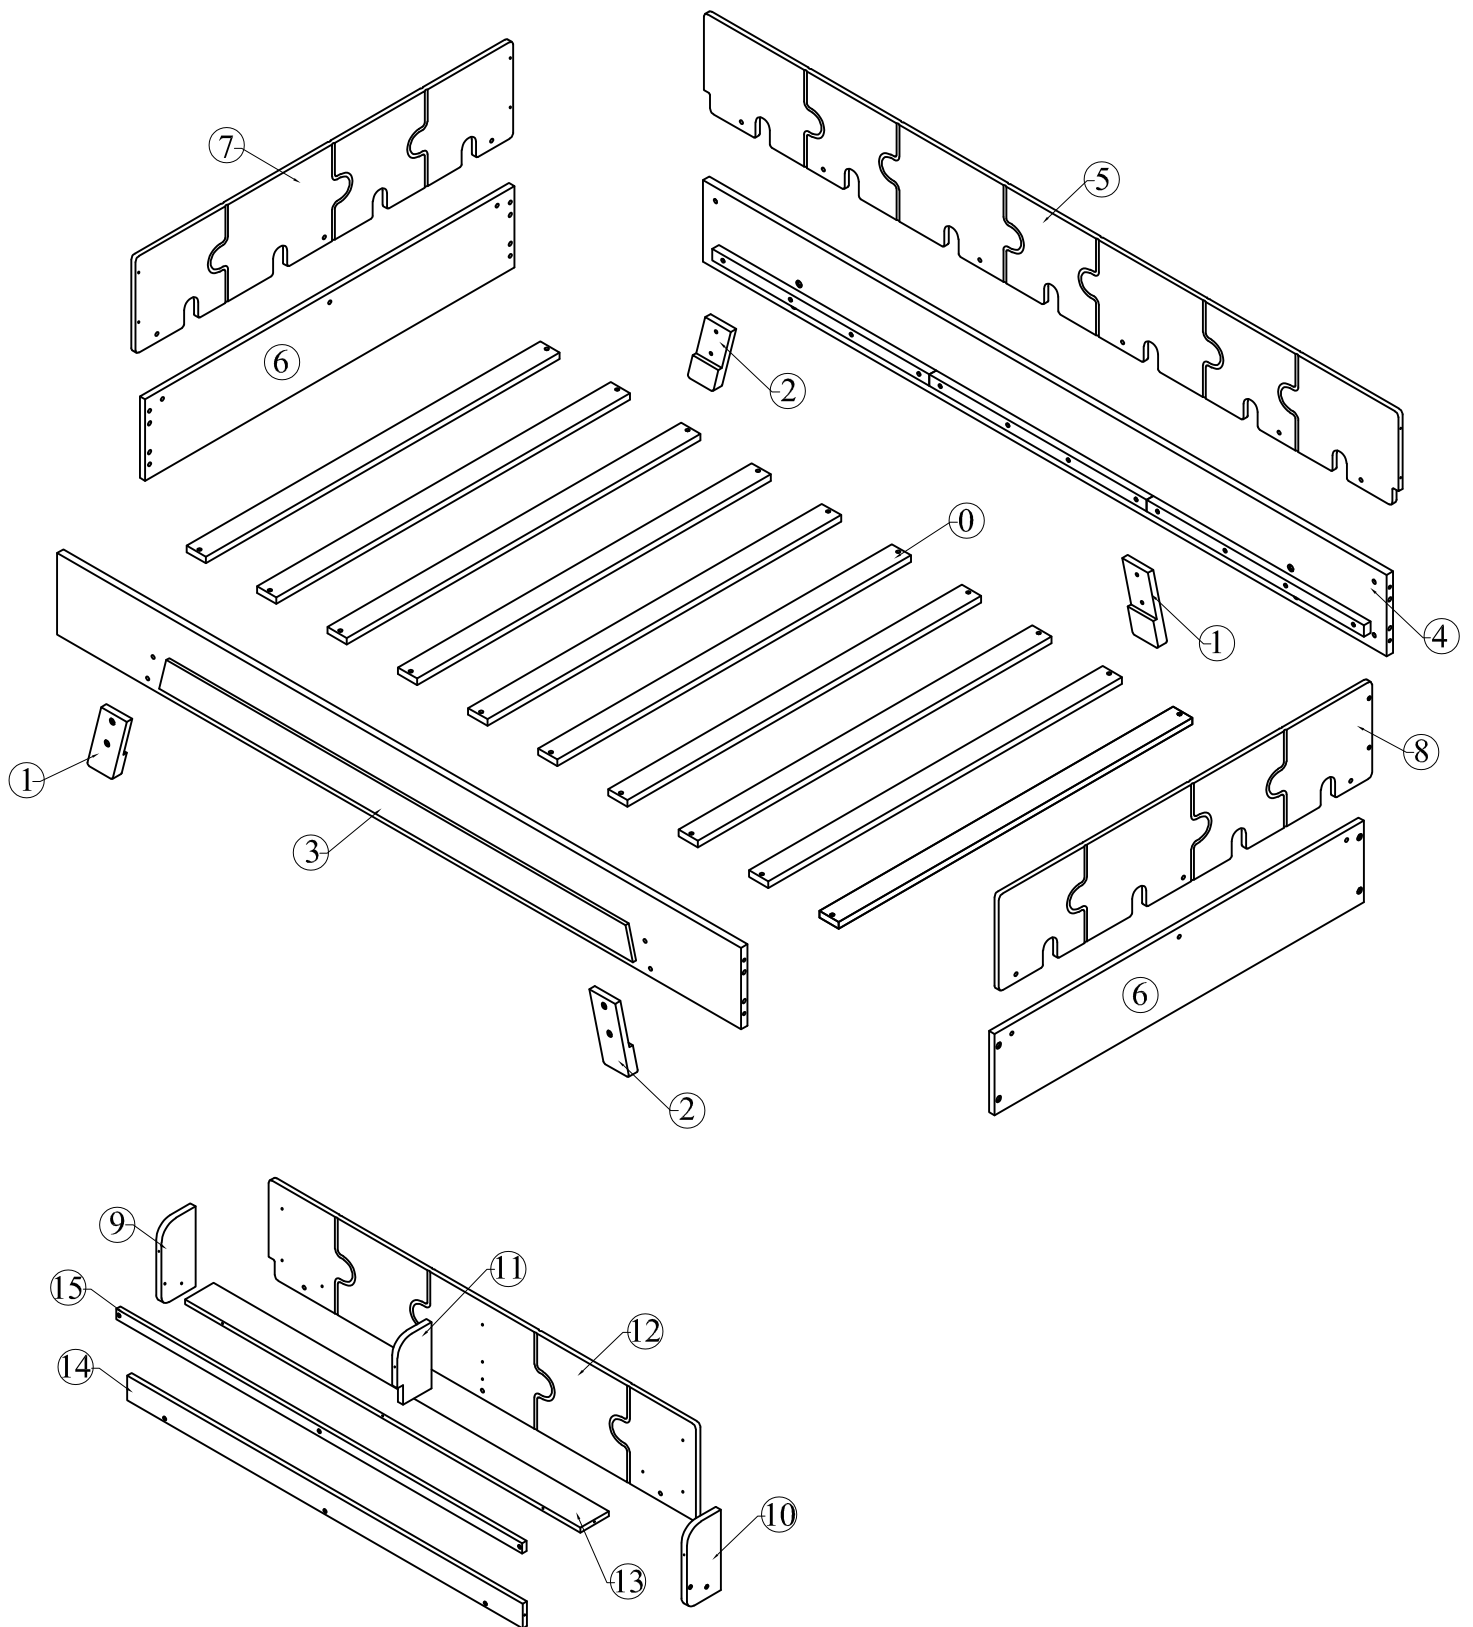

Part List - RH00111

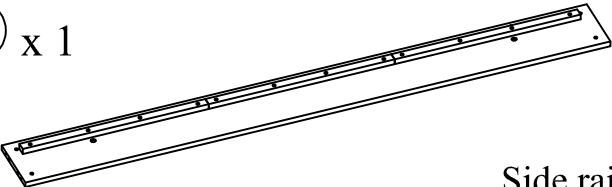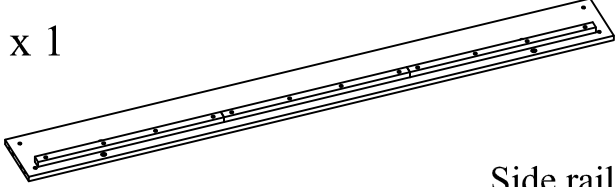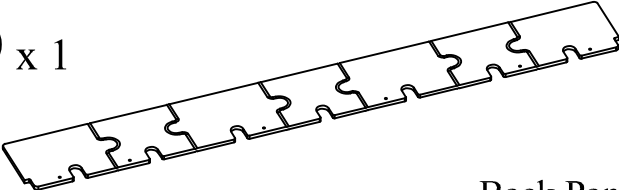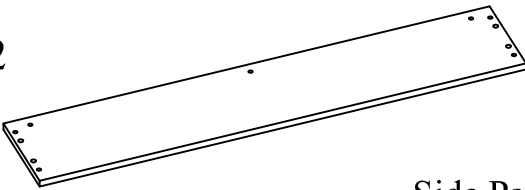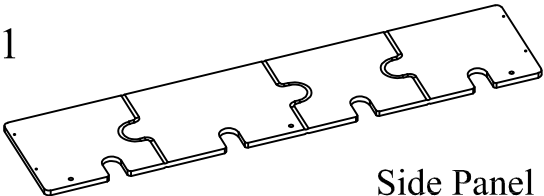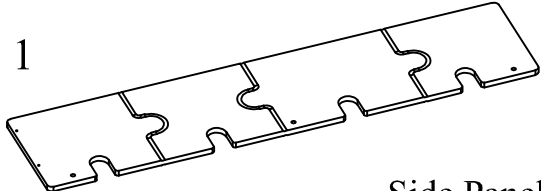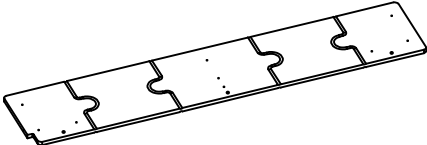① x 2  Leg	② x 2  Leg
③ x 1  Side rail	④ x 1  Side rail
⑤ x 1  Back Panel	⑥ x 2  Side Panel
⑦ x 1  Side Panel (L)	⑧ x 1  Side Panel (R)
⑨ x 1  Side Panel (L)	⑩ x 1  Side Panel (R)
⑪ x 1  Middle panel	⑫ x 1  Back Panel
⑬ x 1  Bottom Panel	⑭ x 1  Front Panel
⑮ x 1  Crossbar	① x 10  Slats


Hardware List - RH00111

No.	OUTLOOK	DESC	QTY
(A)		Dowel Ø10*40mm	08
(B)		Bolts 1/4"*20mm	08
(C)		Bolts 1/4"*25mm	15
(D)		Bolts 1/4"*60mm	08
(E)		Cross dowel 1/4"*13mm	08
(F)		Hex bolts 1/4"*15mm	08
(G)		Screws #8*25mm	09
(H)		Screws #8*30mm	20
(I)		Screws #8*35mm	16
(J)		Allen key 60*22*4mm	02


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




STEP 1

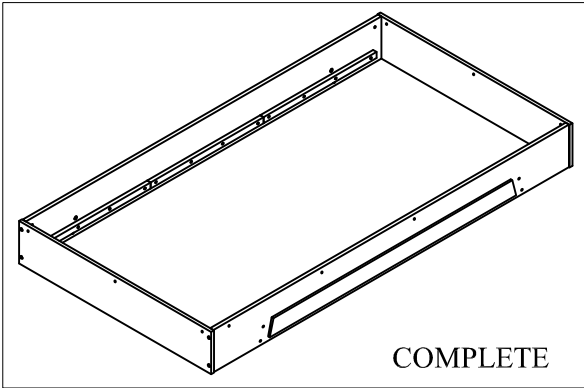


(A)		08
(D)		08
(E)		08

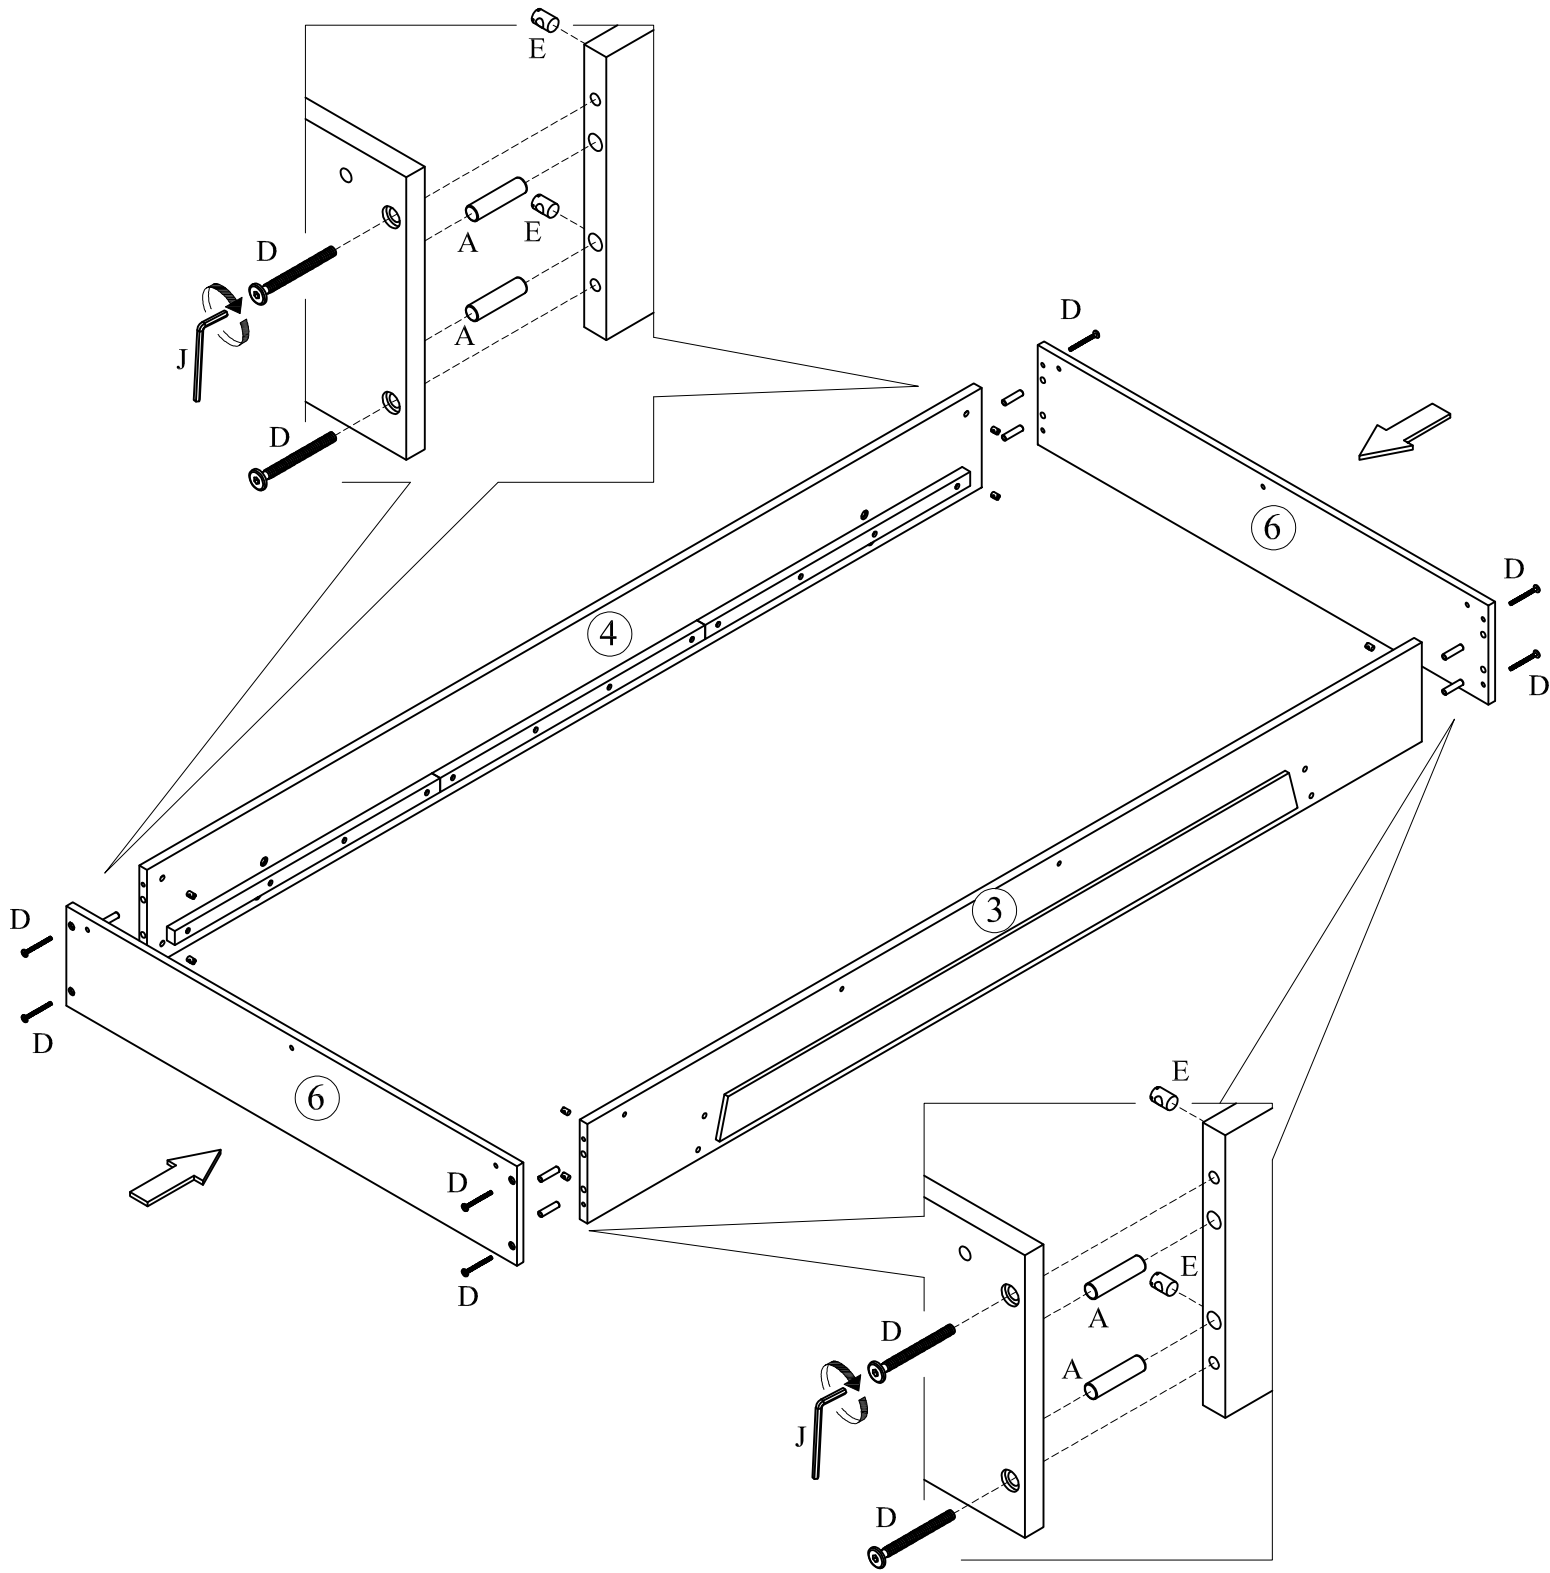


STEP 2

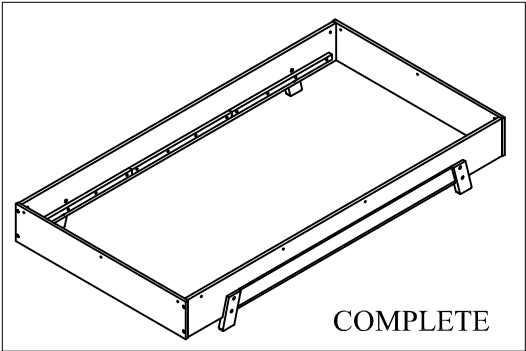


(B)		08
(F)		08

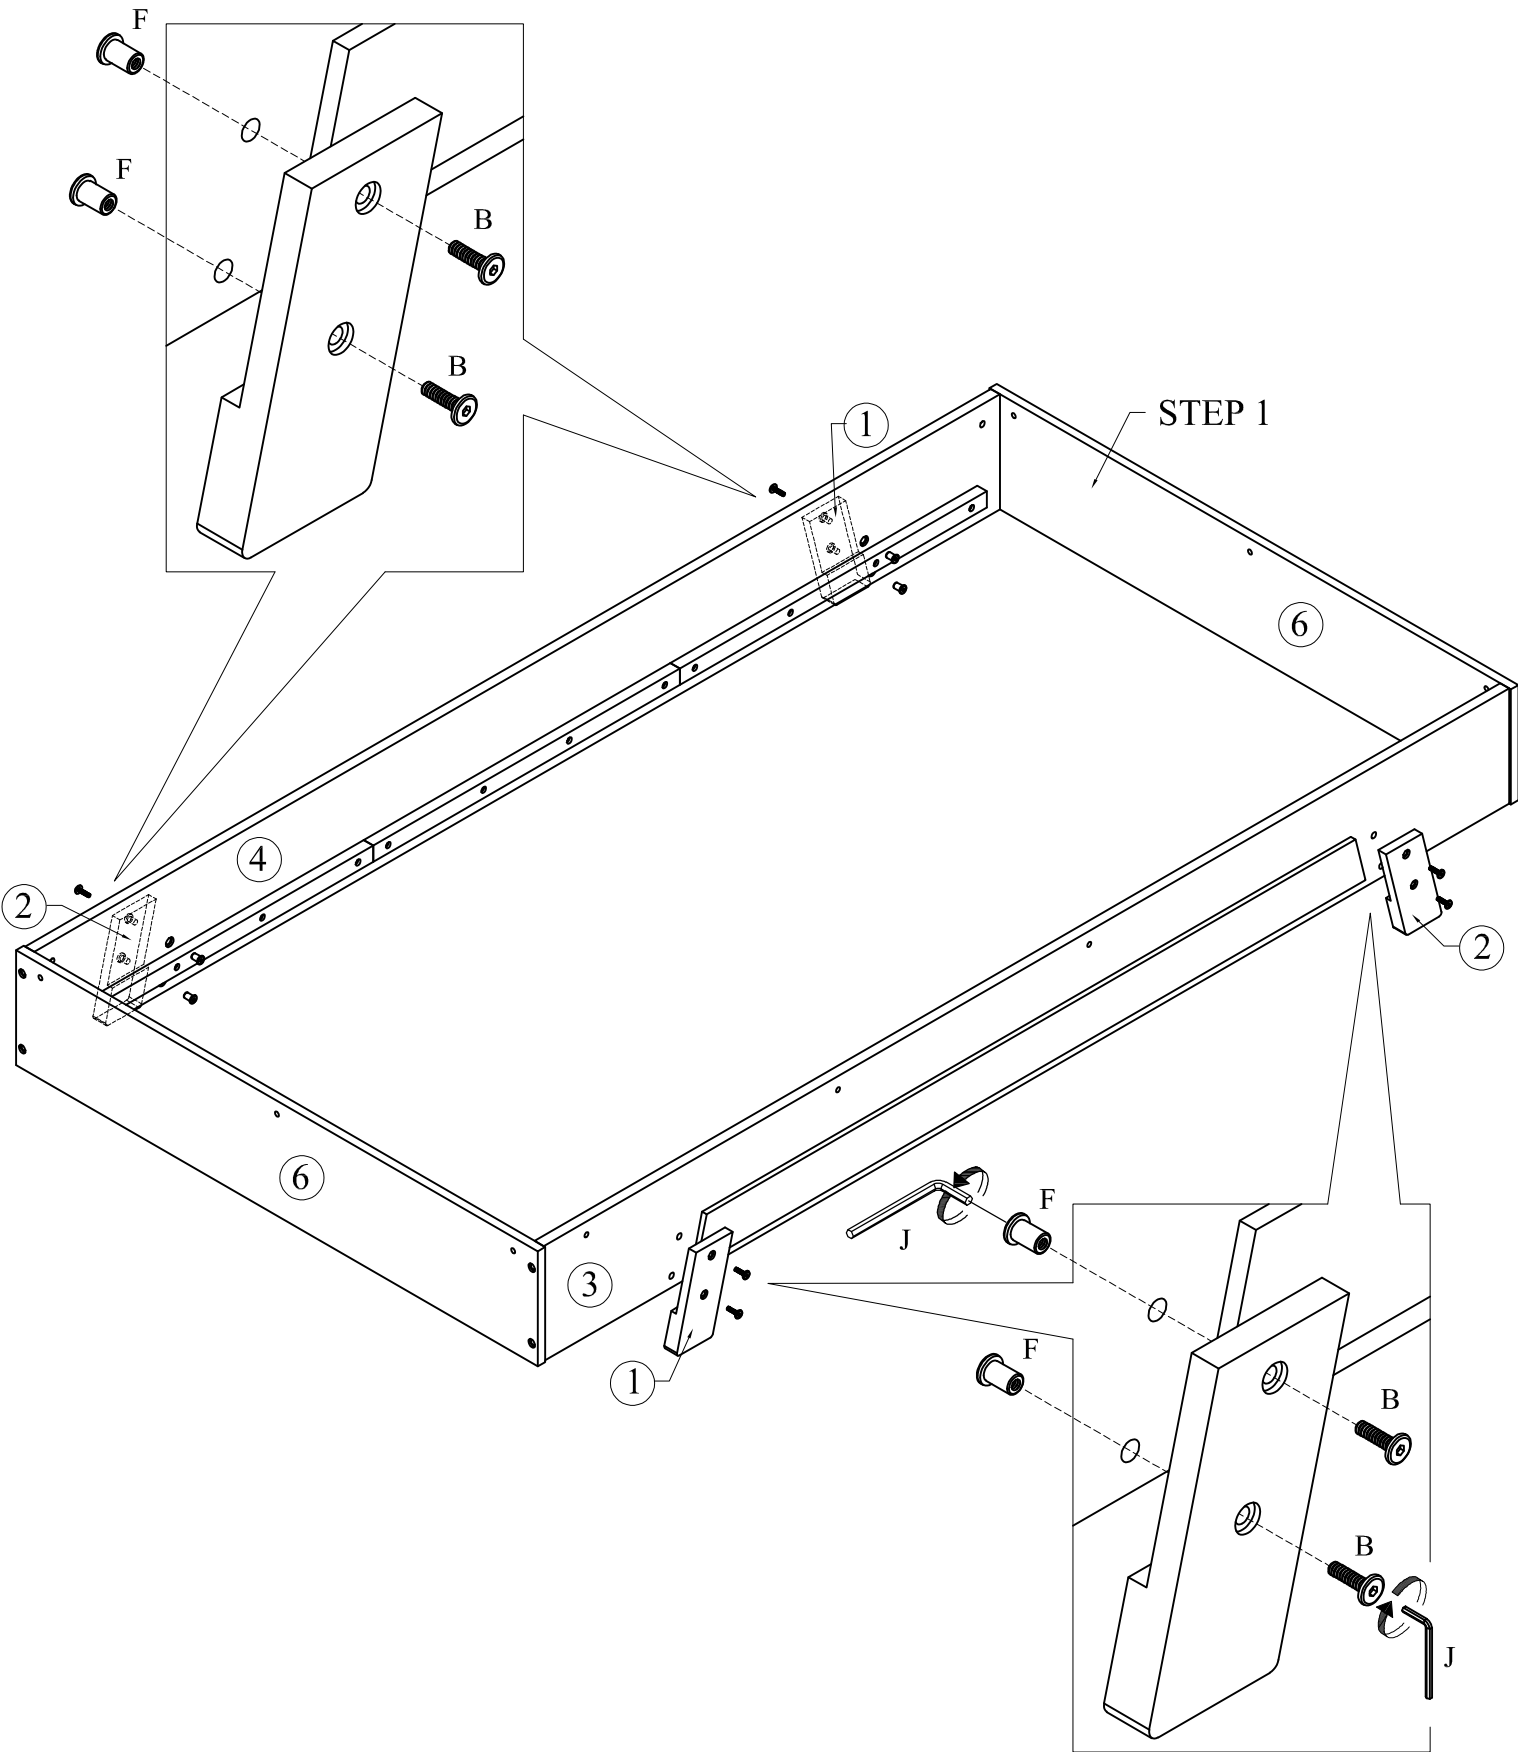


STEP 3

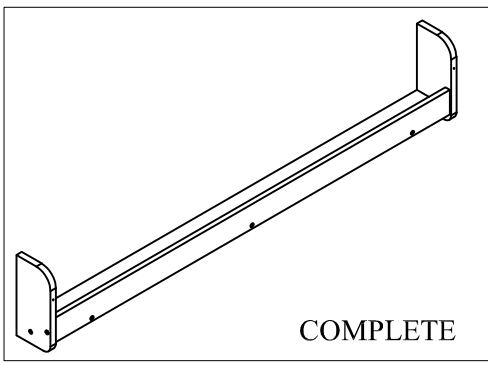


COMPLETE



07

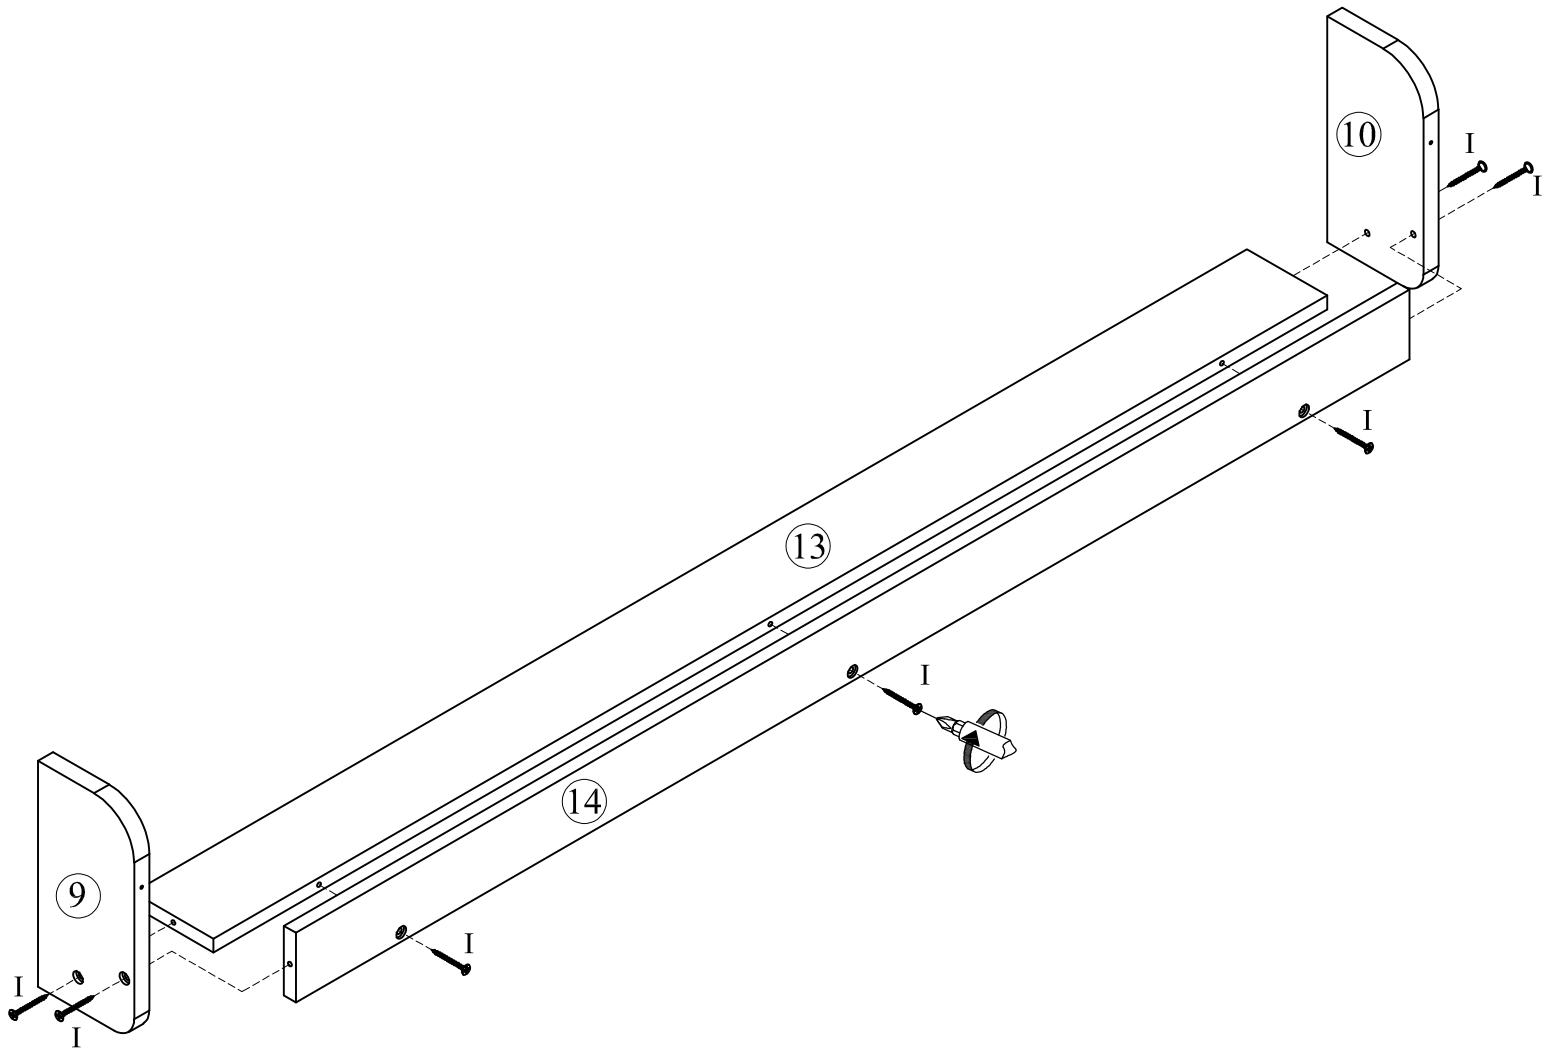


STEP 4

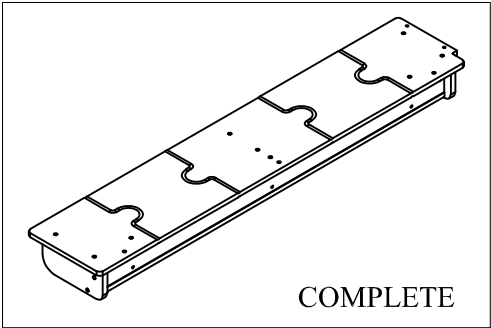


G		06
I		03

Lay the parts assembled in Step 3 flat as shown, then continue.

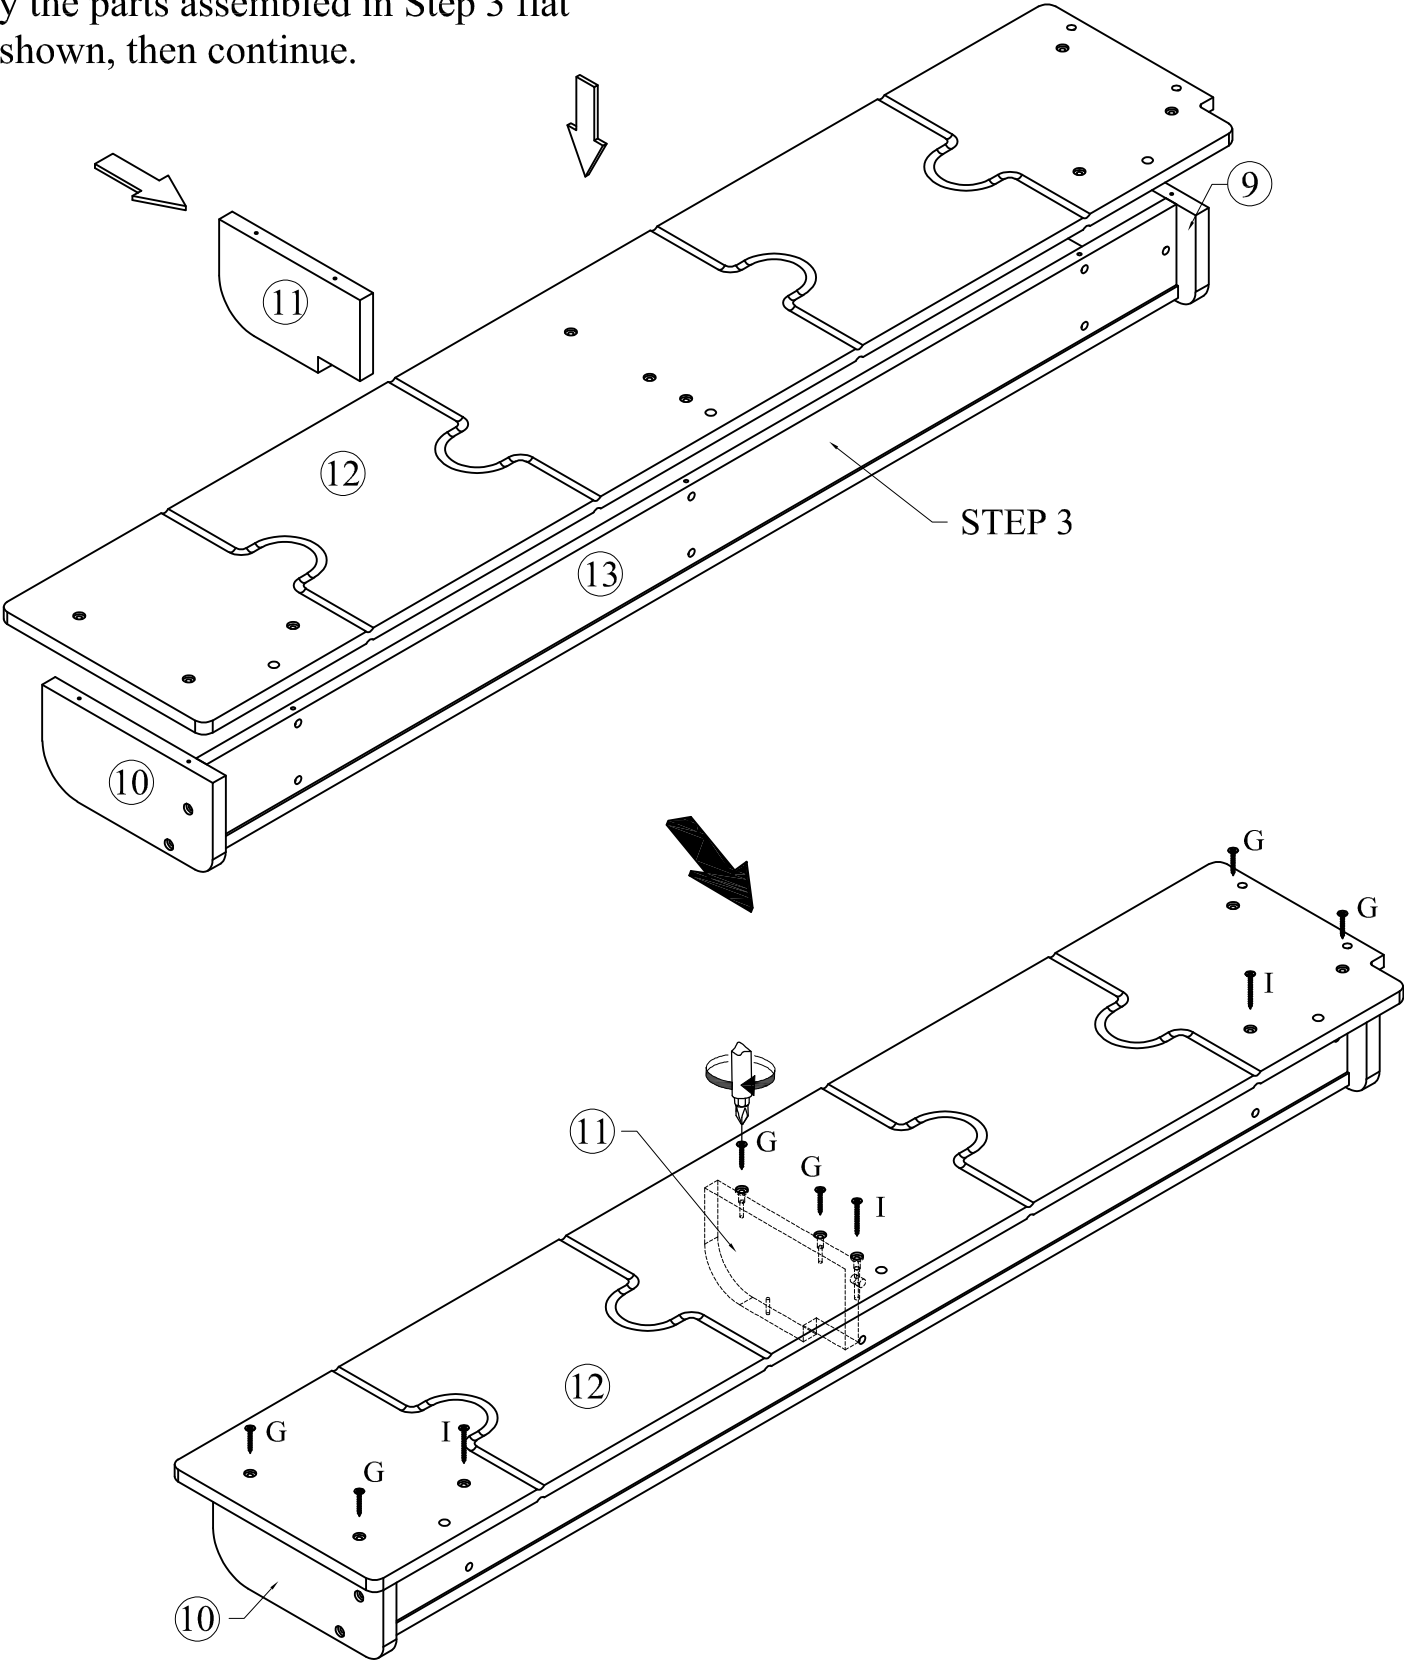


STEP 5

G		03
---	---	----


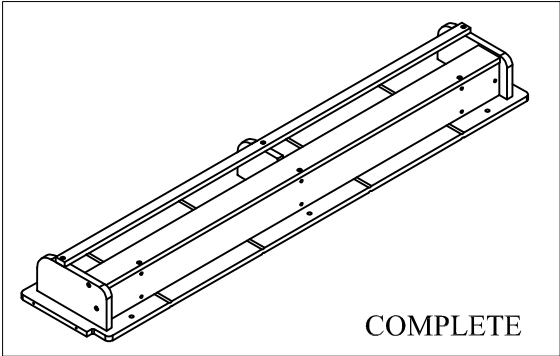


Flip the parts assembled in Step 4 as shown, then continue.

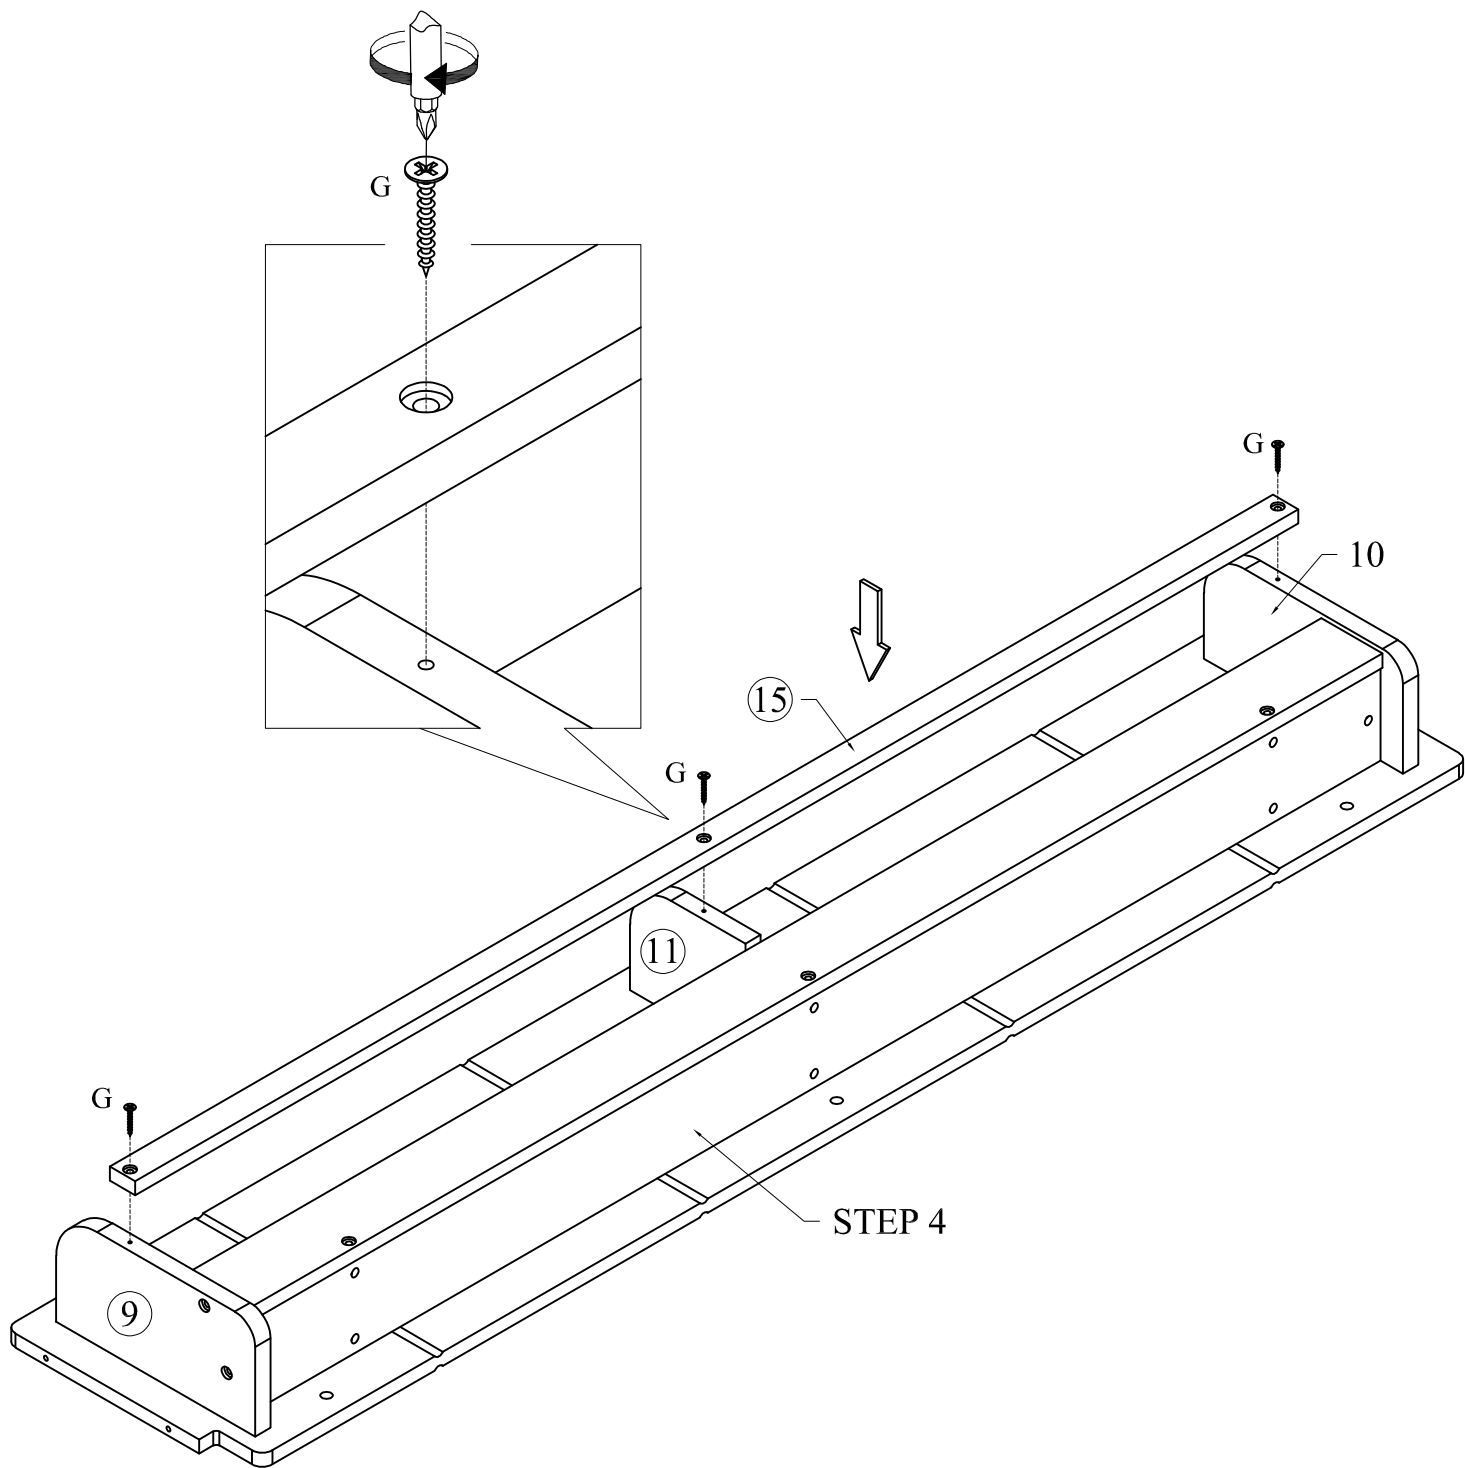



STEP 6

C		06
---	---	----

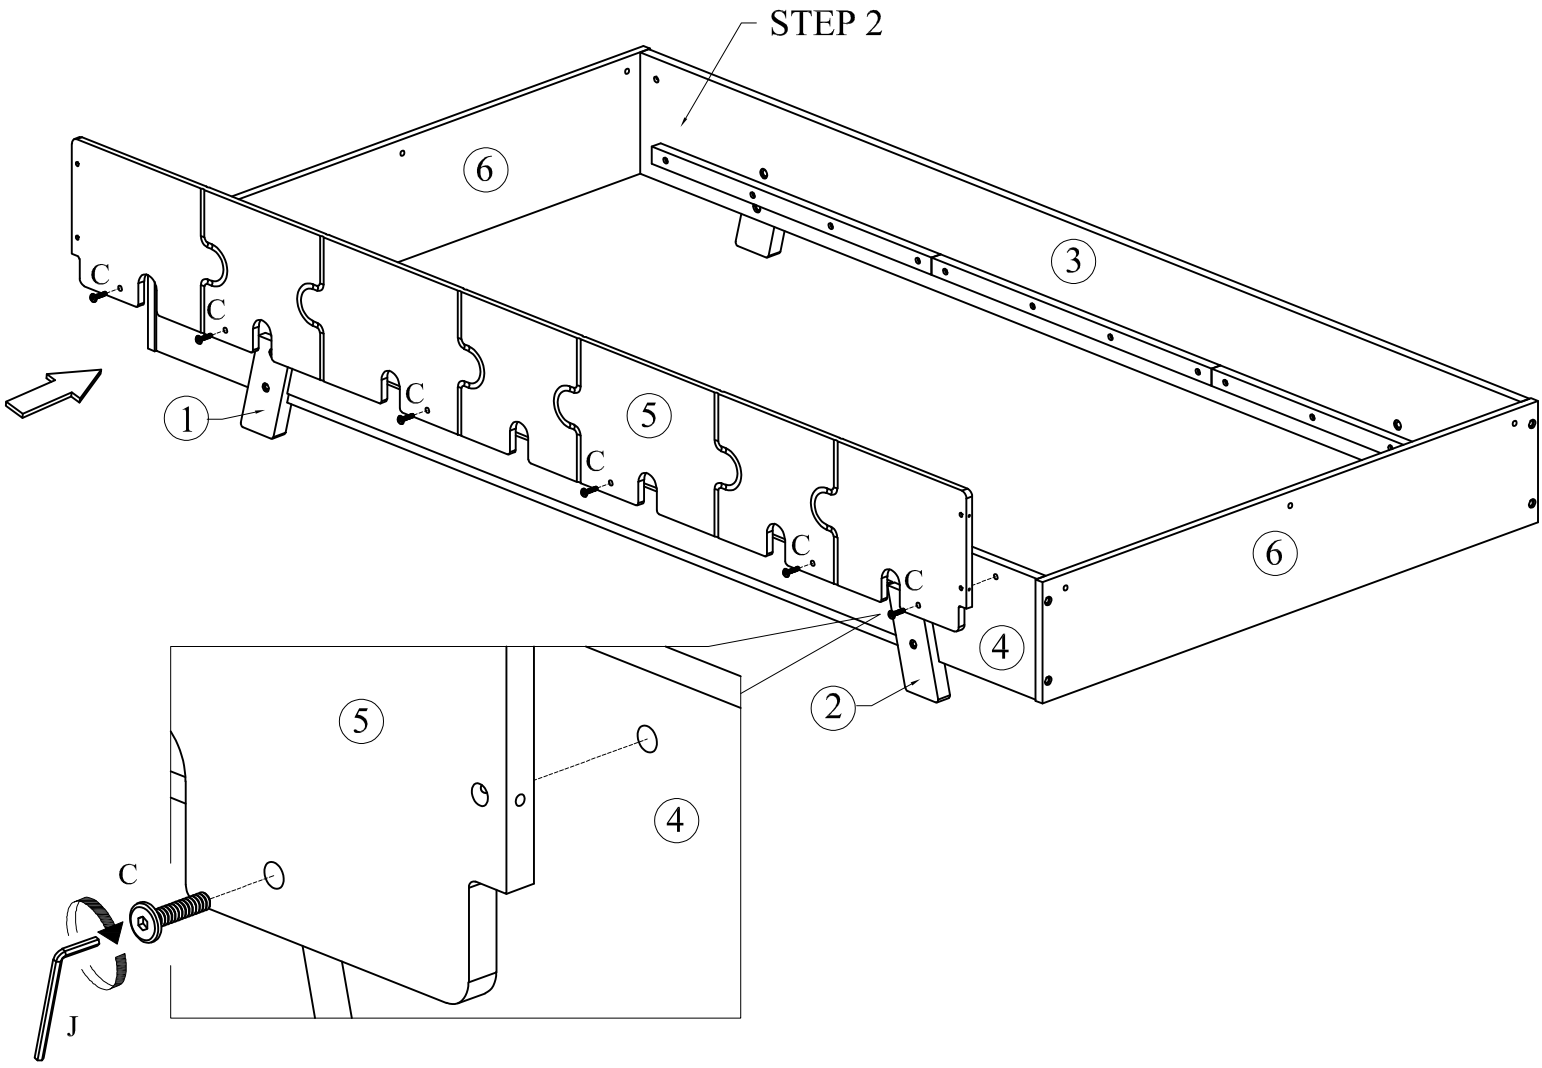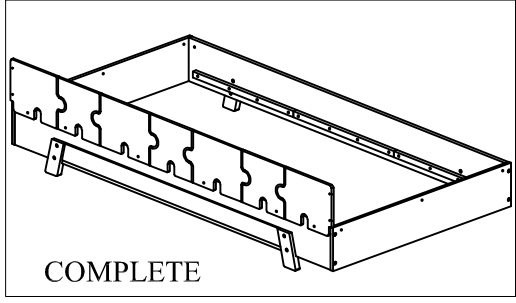


STEP 7


Ⓒ		03
---	---	----

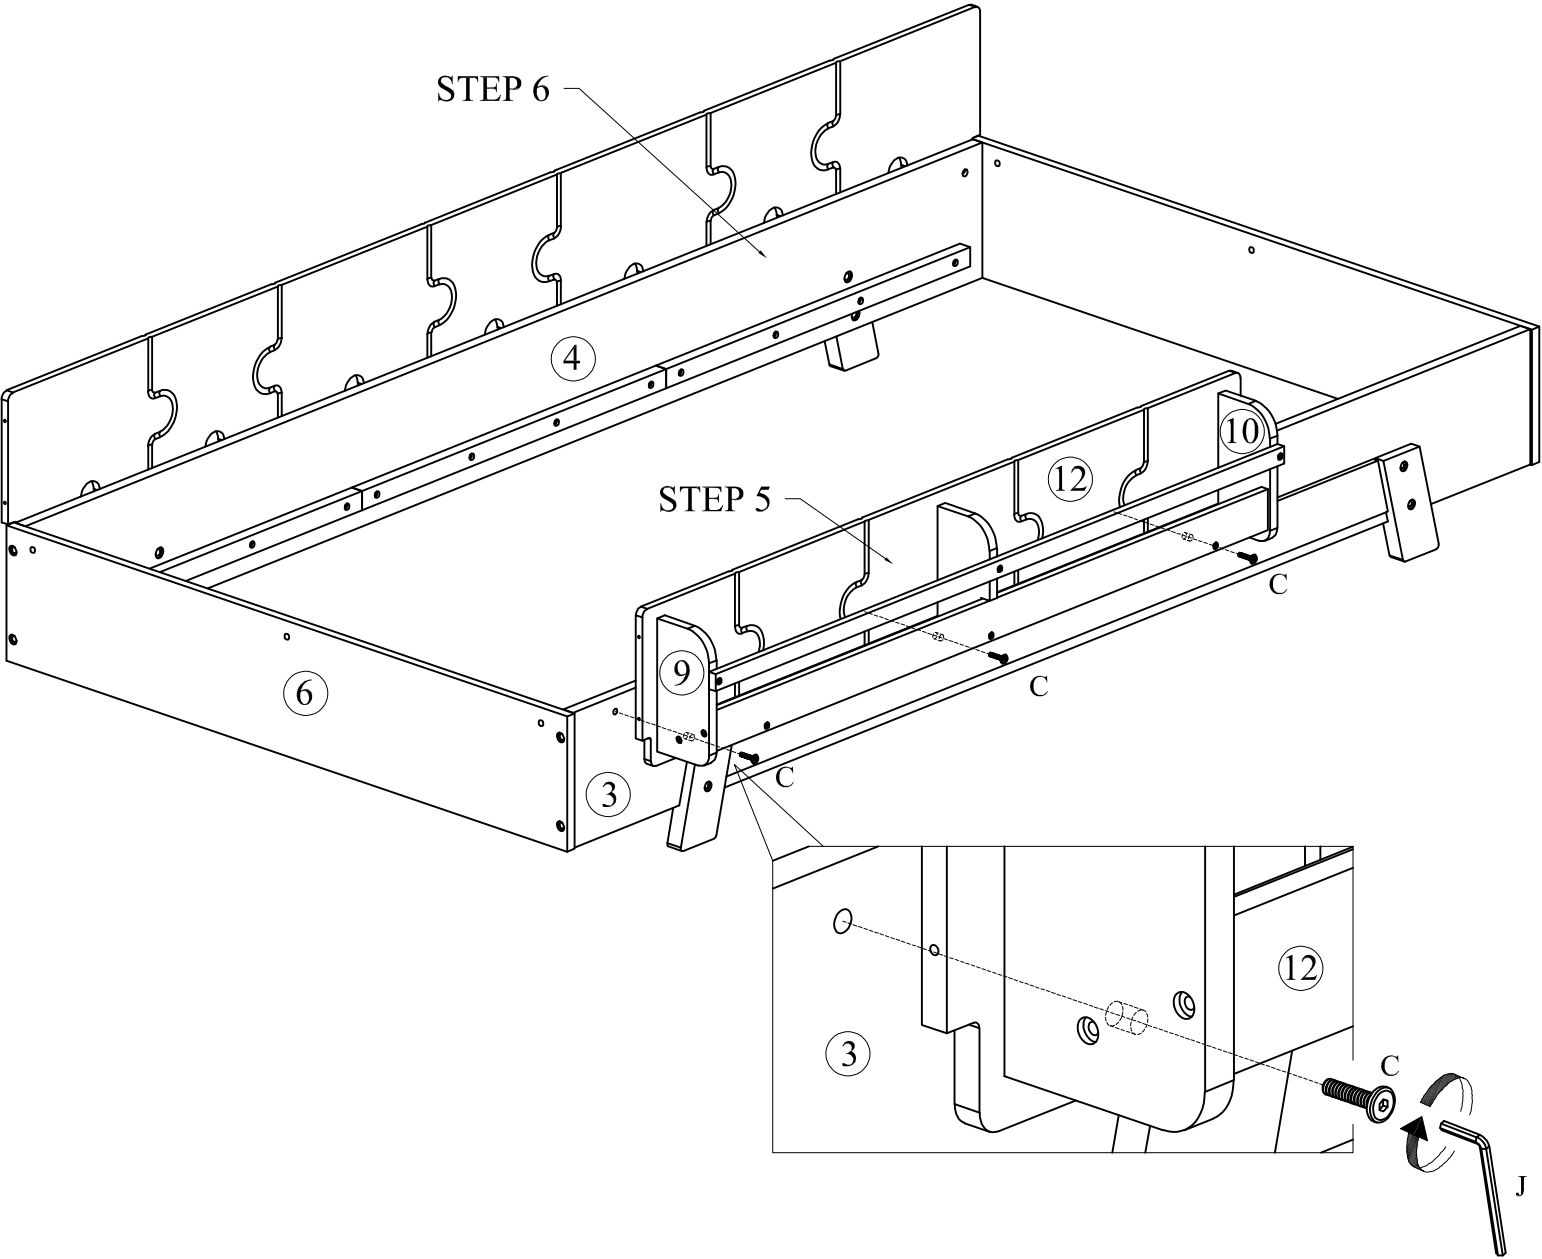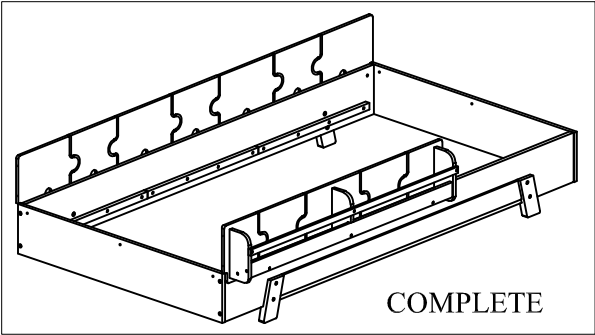


STEP 8

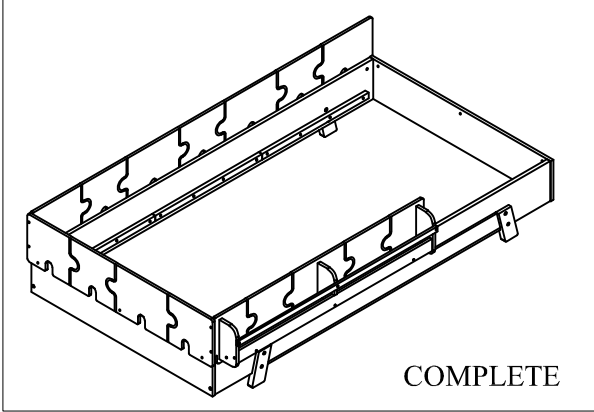


Ⓒ		03
Ⓘ		04

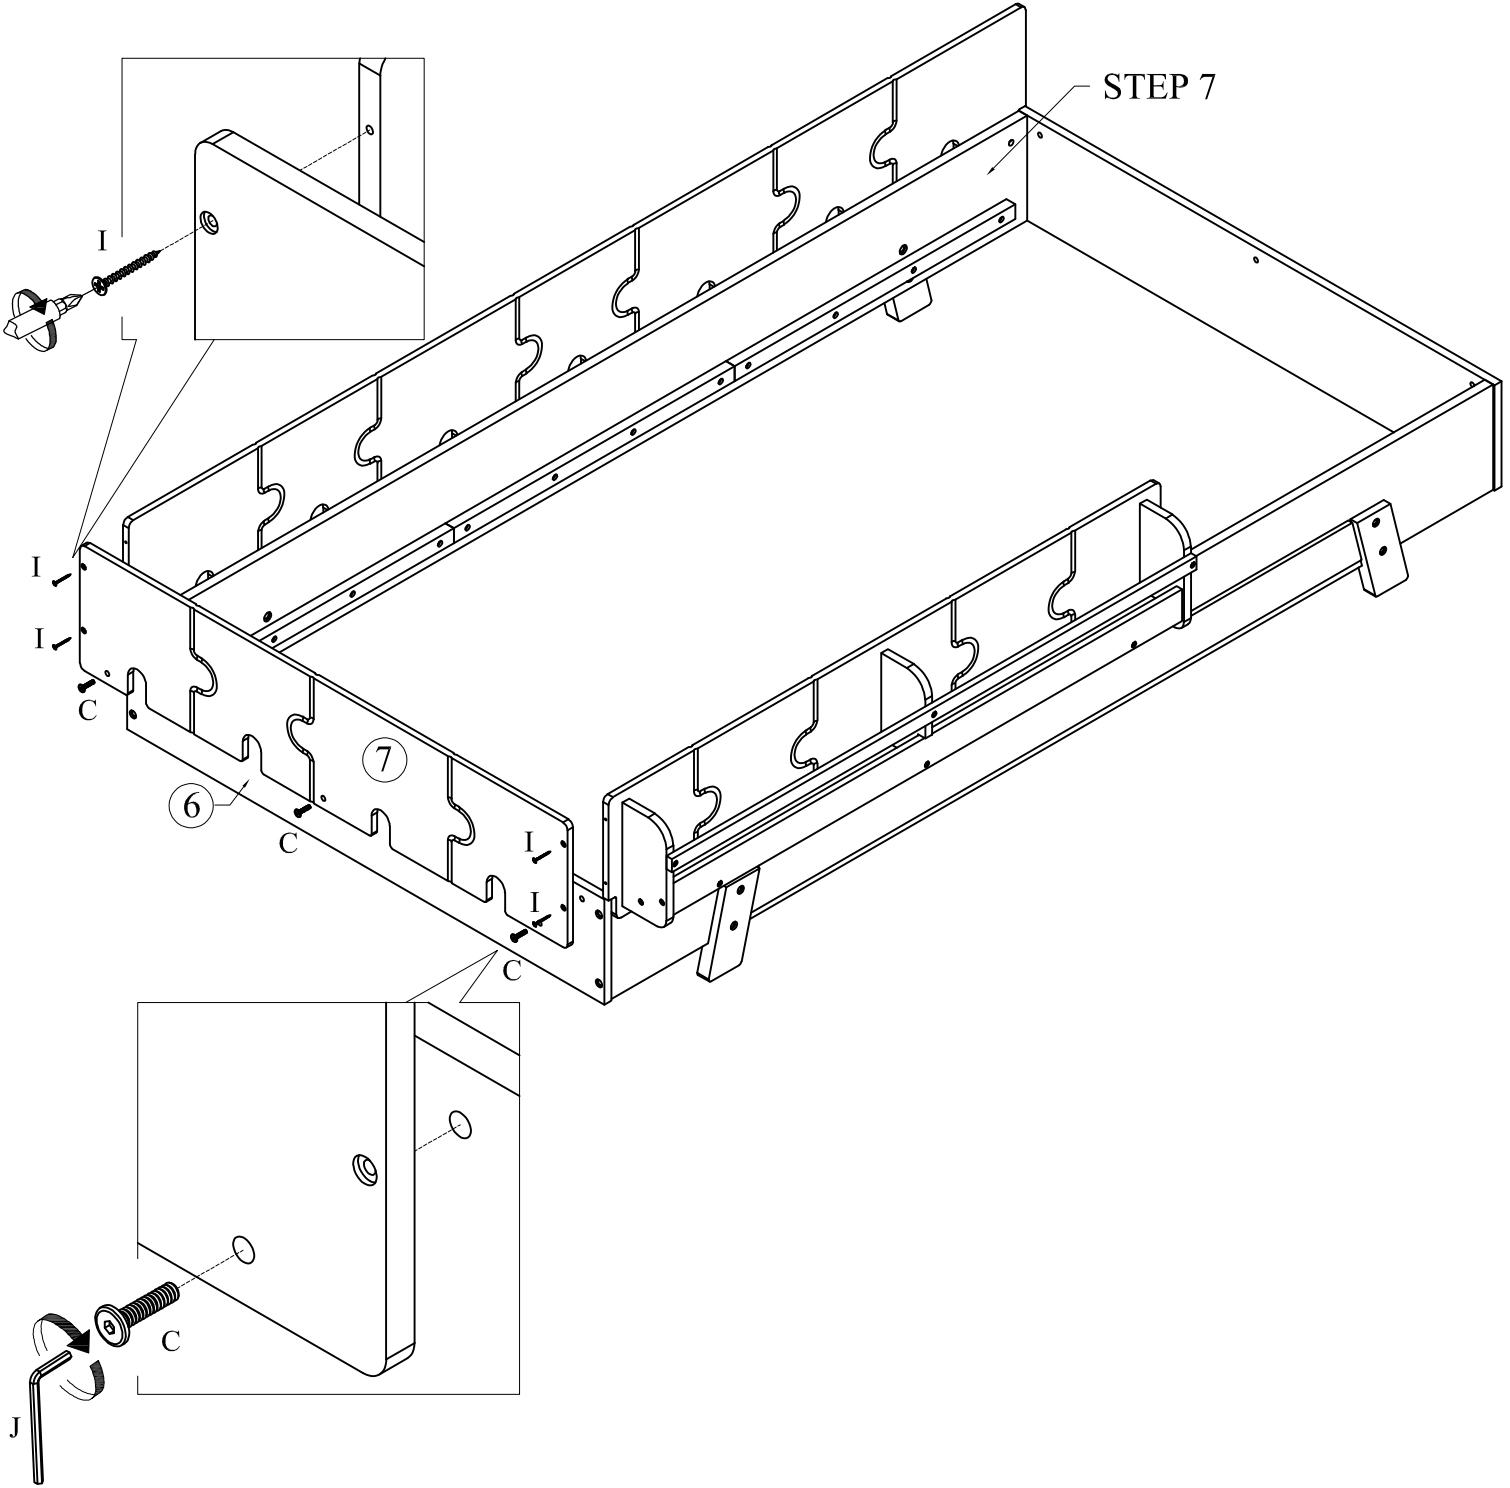


STEP 9

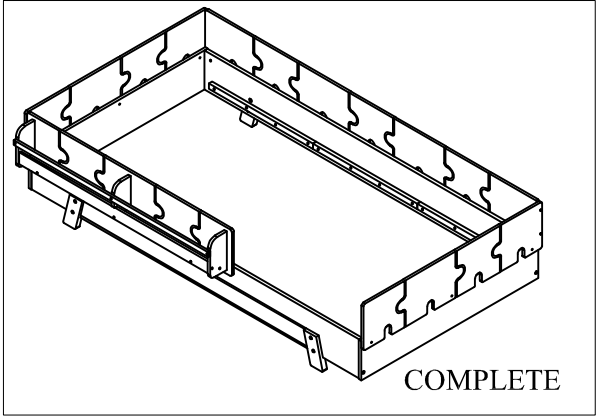

Ⓒ		03
Ⓘ		02

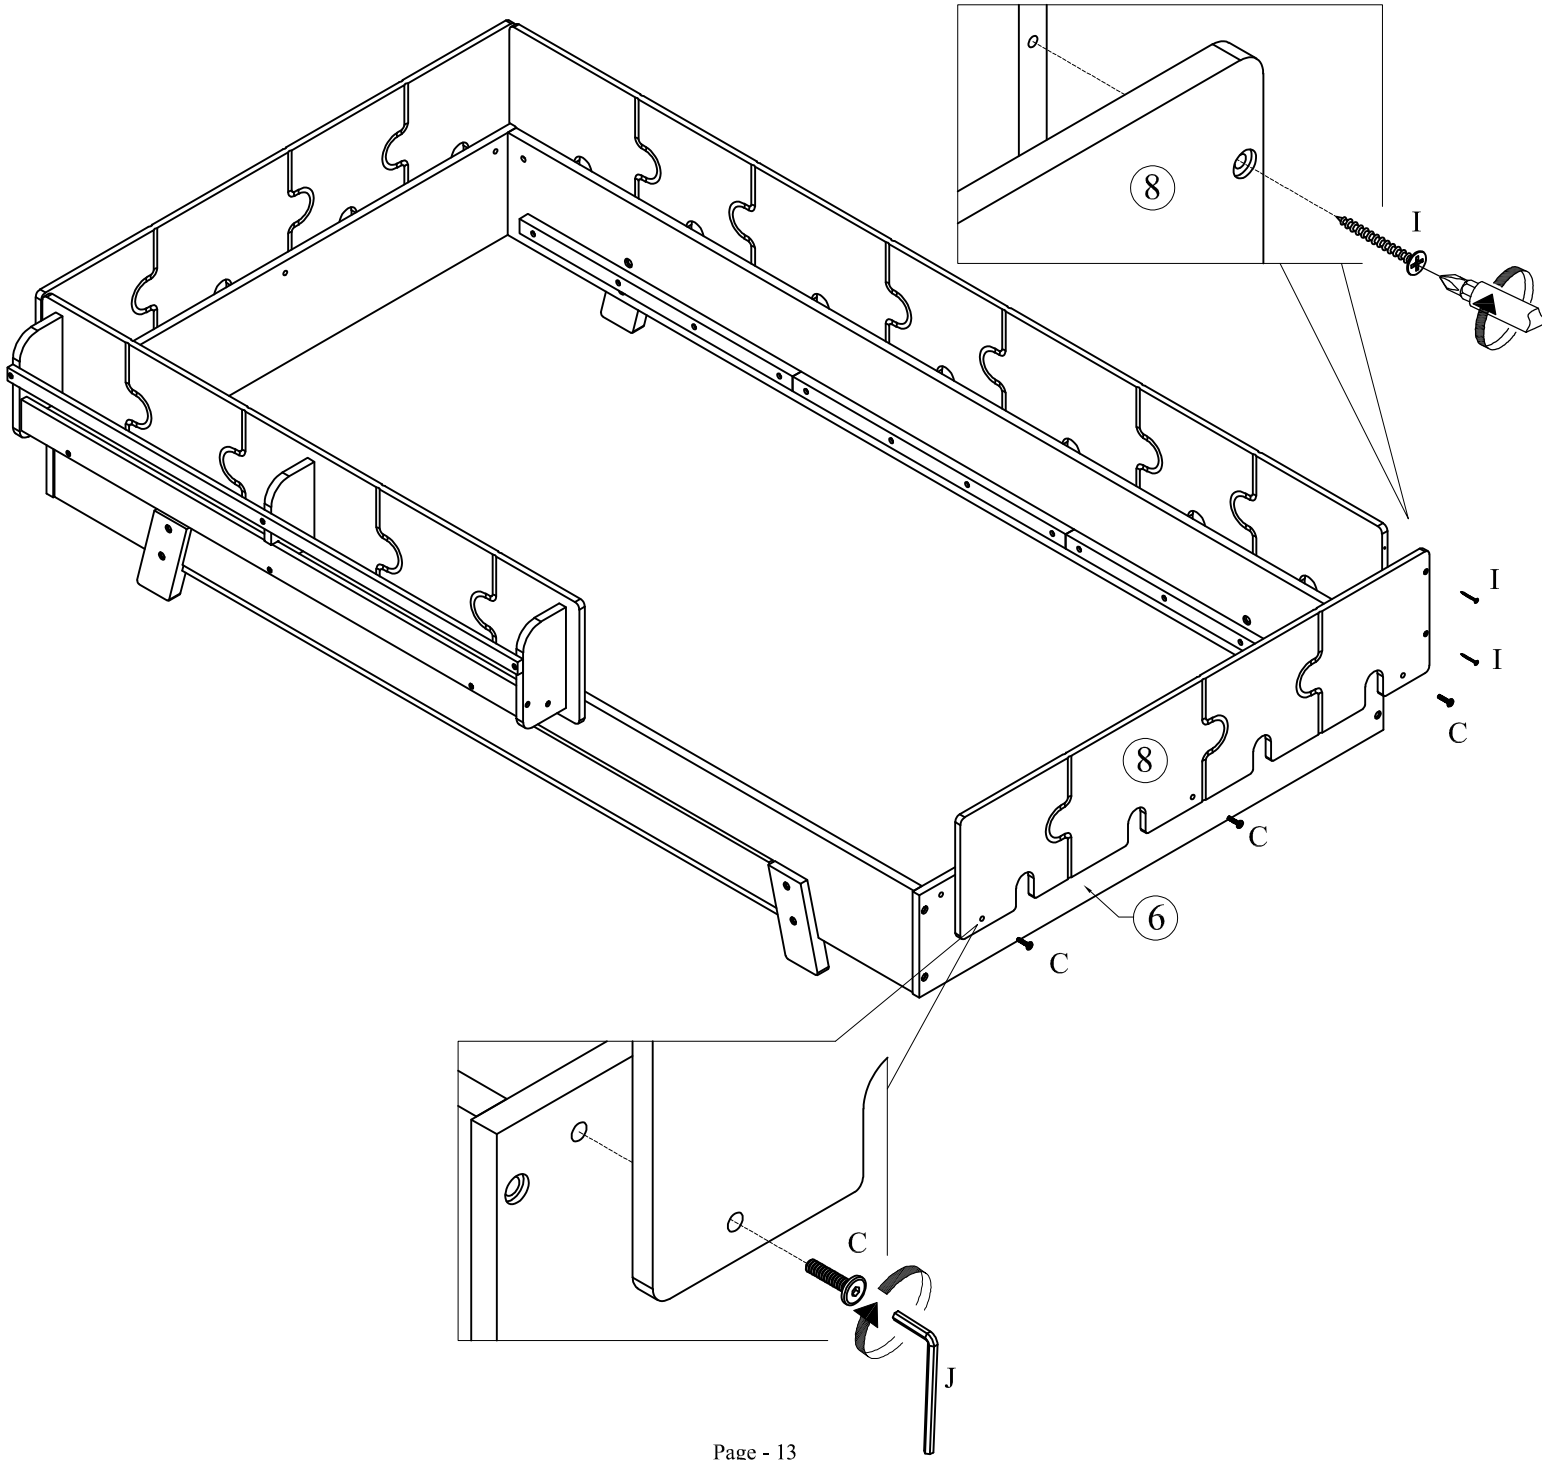

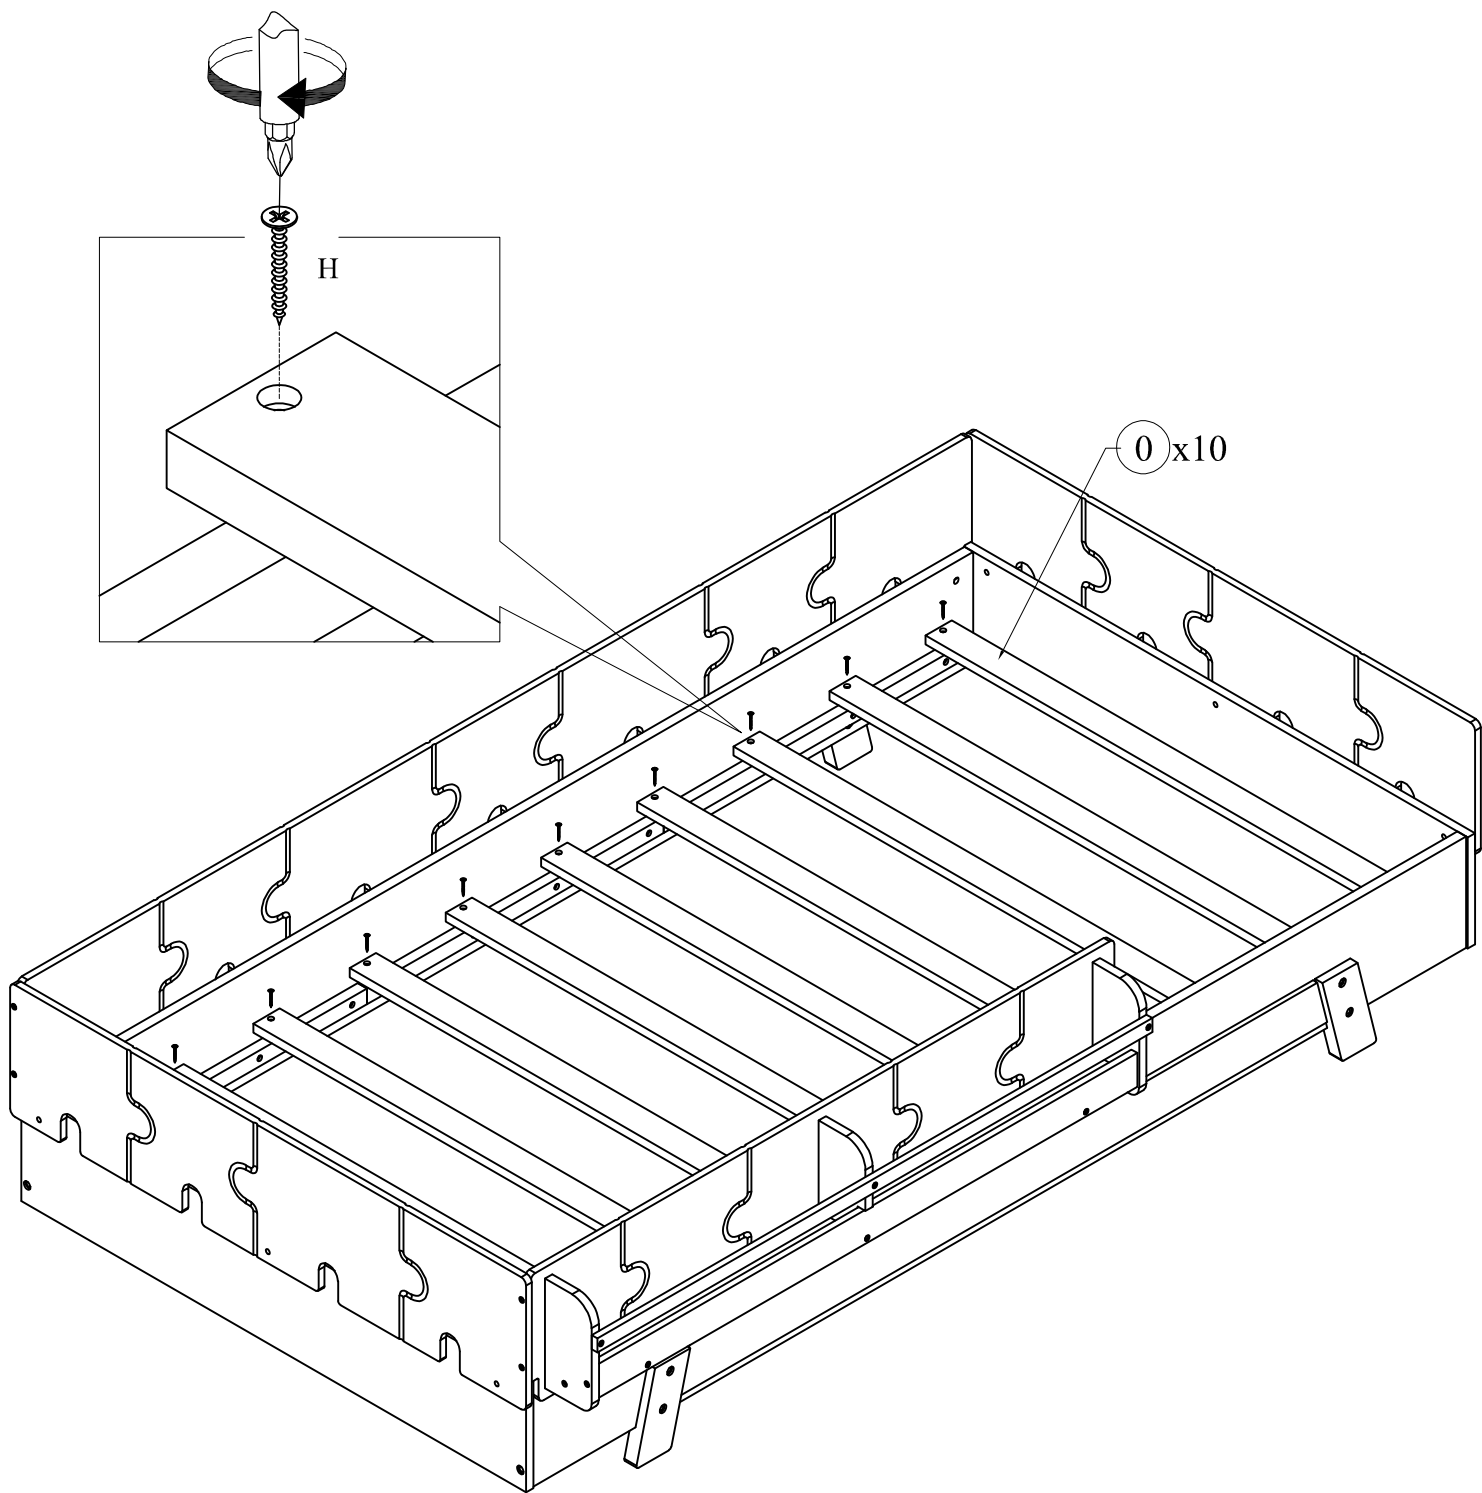

COMPLETED

