

Installation & Assembly

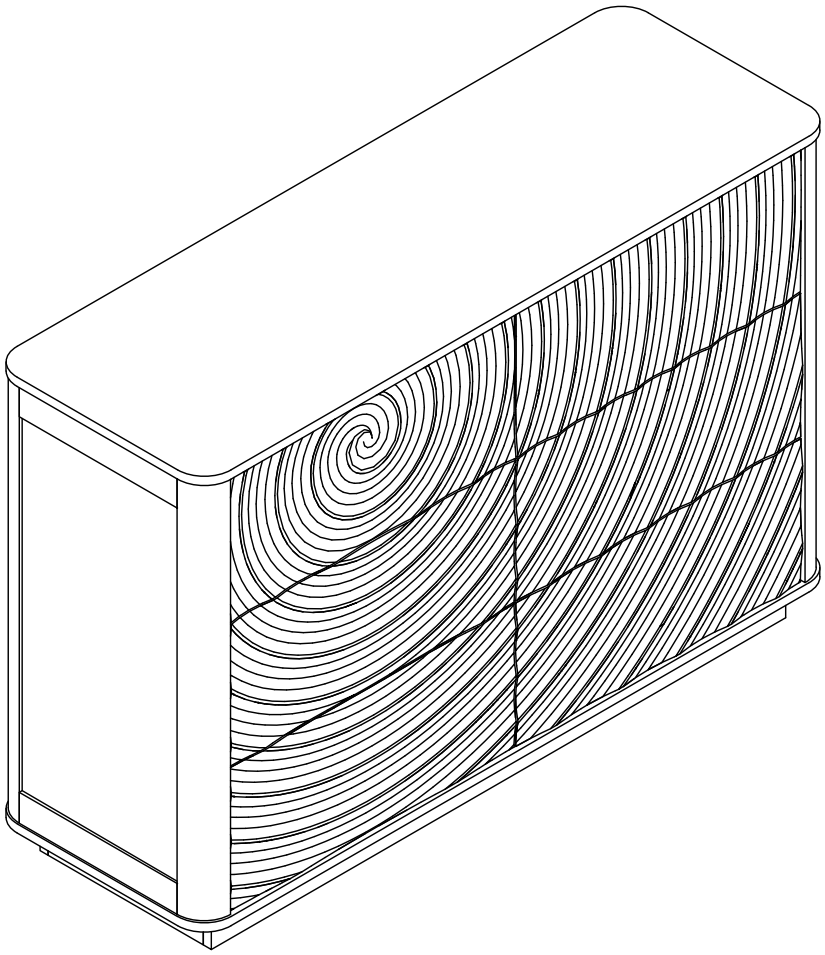


Before You Start

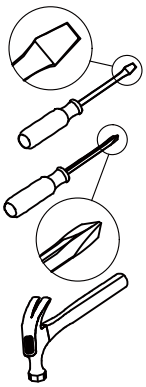

Read through each step carefully and follow the proper order
Separate and count all your parts and hardware.
Give yourself enough room for the assembly process.
Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.
Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver).

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2



Open your item in the area you plan to keep it to avoid excessive heavy lifting.



Identify, sort and count the parts before attempting assembly.
Compression dowels are lightly tapped in with a hammer.



Slides are labeled with an R (right) and L (left) for proper placement.
Make sure to always face the point on the top of the Cam Lock towards the outer edge.



If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.




Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




Do NOT use harsh chemicals or abrasive cleaners on this item.
Never push, pull, or drag your furniture.

Board Identification


Not actual size

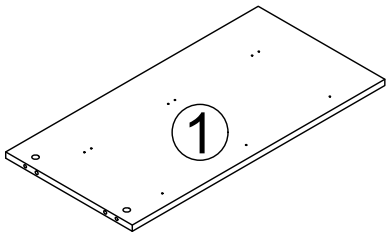


Qty:1

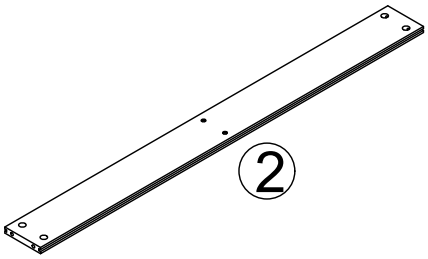


Qty:1

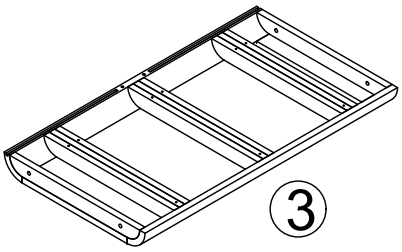


Qty:1

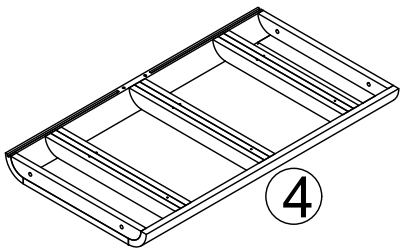


Qty:1

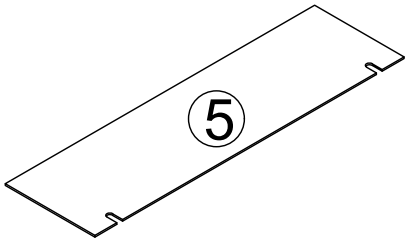


Qty:1

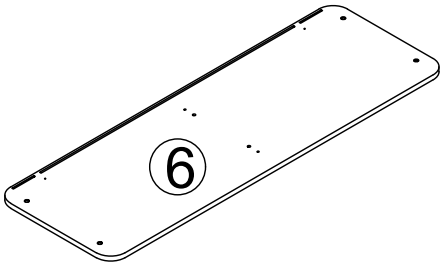


Qty:1

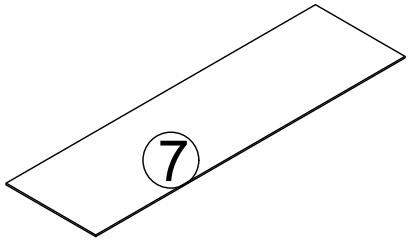


Qty:1

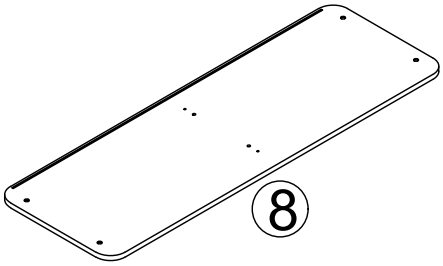


Qty:1

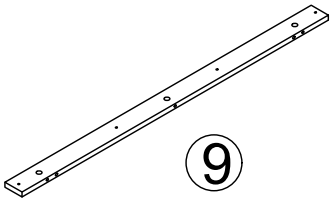


Qty:2

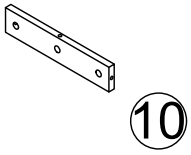

Qty:4

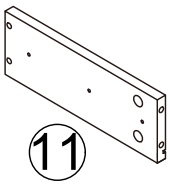


Qty:6

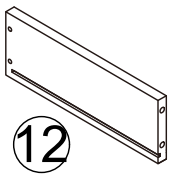


Qty:6

Board Identification


Not actual size

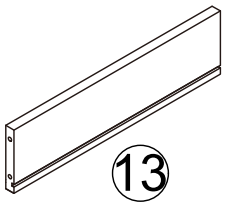


Qty:6

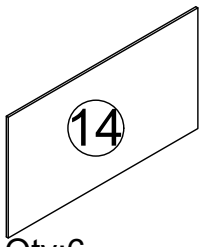


Qty:6

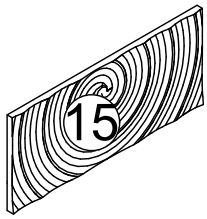


Qty:1

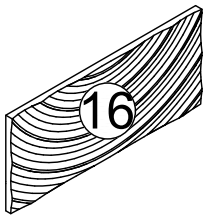


Qty:1

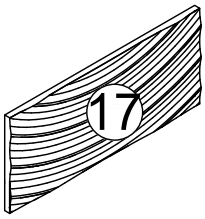


Qty:1

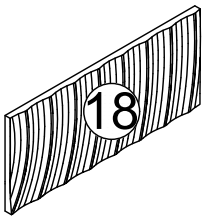

Qty:1

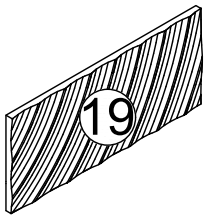


Qty:1

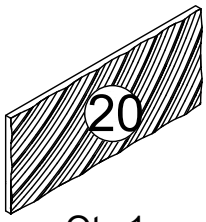

Qty:1

PART LIST




Ø6.5X35mm

A	X 48



Ø15X9.5mm

B	X 48




Ø8X25mm

C	X8




Ø3.5X14mm

D	X72



Ø4X30mm

E	X 28




F	X 12




Ø6X25mm


G	X 8



H	X 1




I	X 12




J	X 2

Board Identification

Not actual size

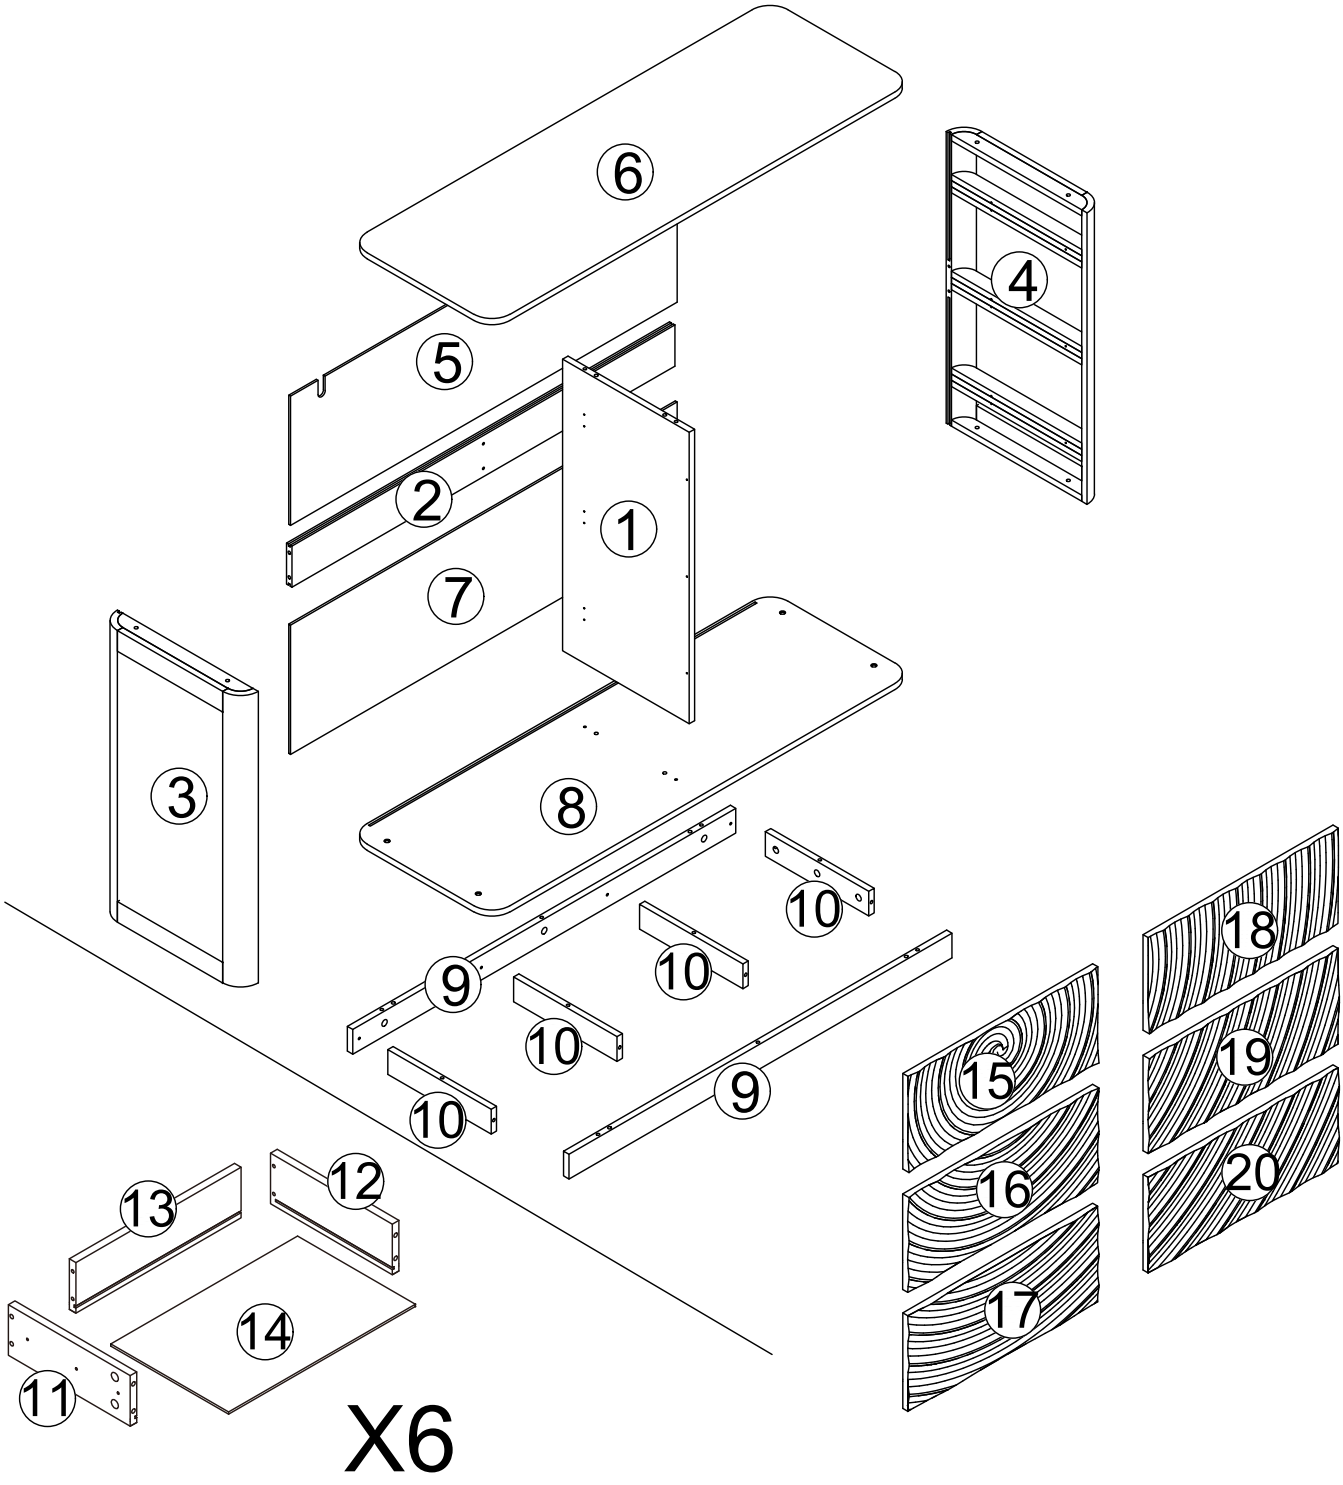


STEP 1

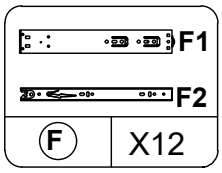


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

STEP 1 : Extend Slide

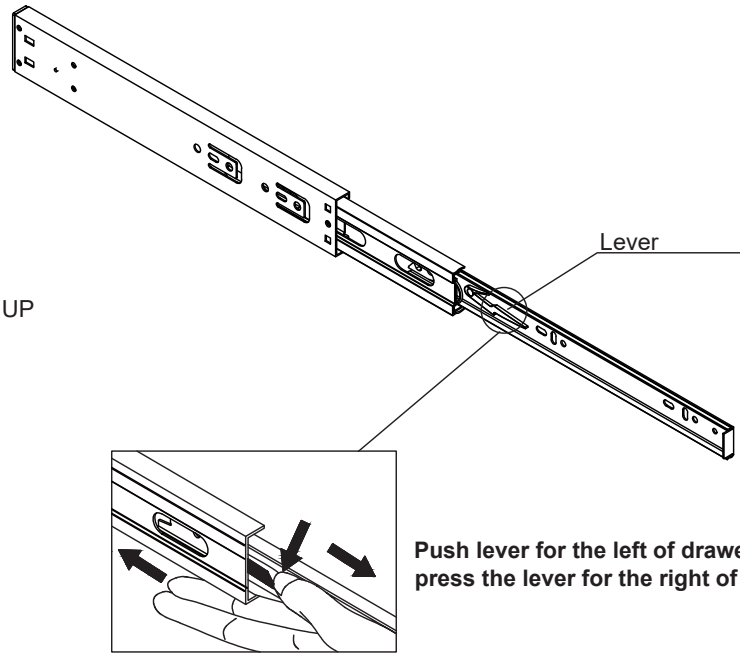


STEP 2: Push Lever UP

Push lever for the left of drawer ,
press the lever for the right of drawer .

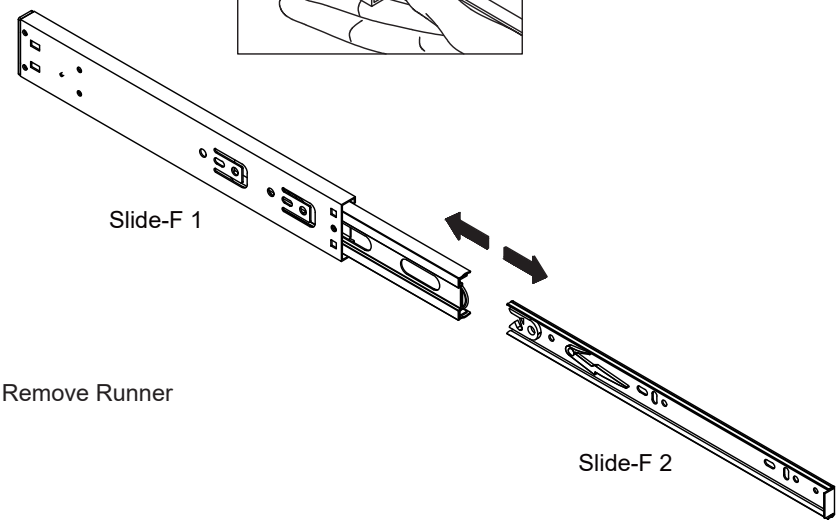


STEP 3: Remove Runner


Pay attention when connecting !
The sliding module must be at the front end.

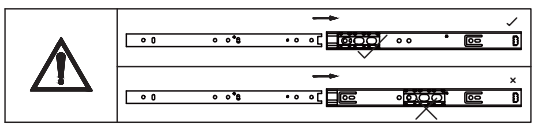


STEP 2

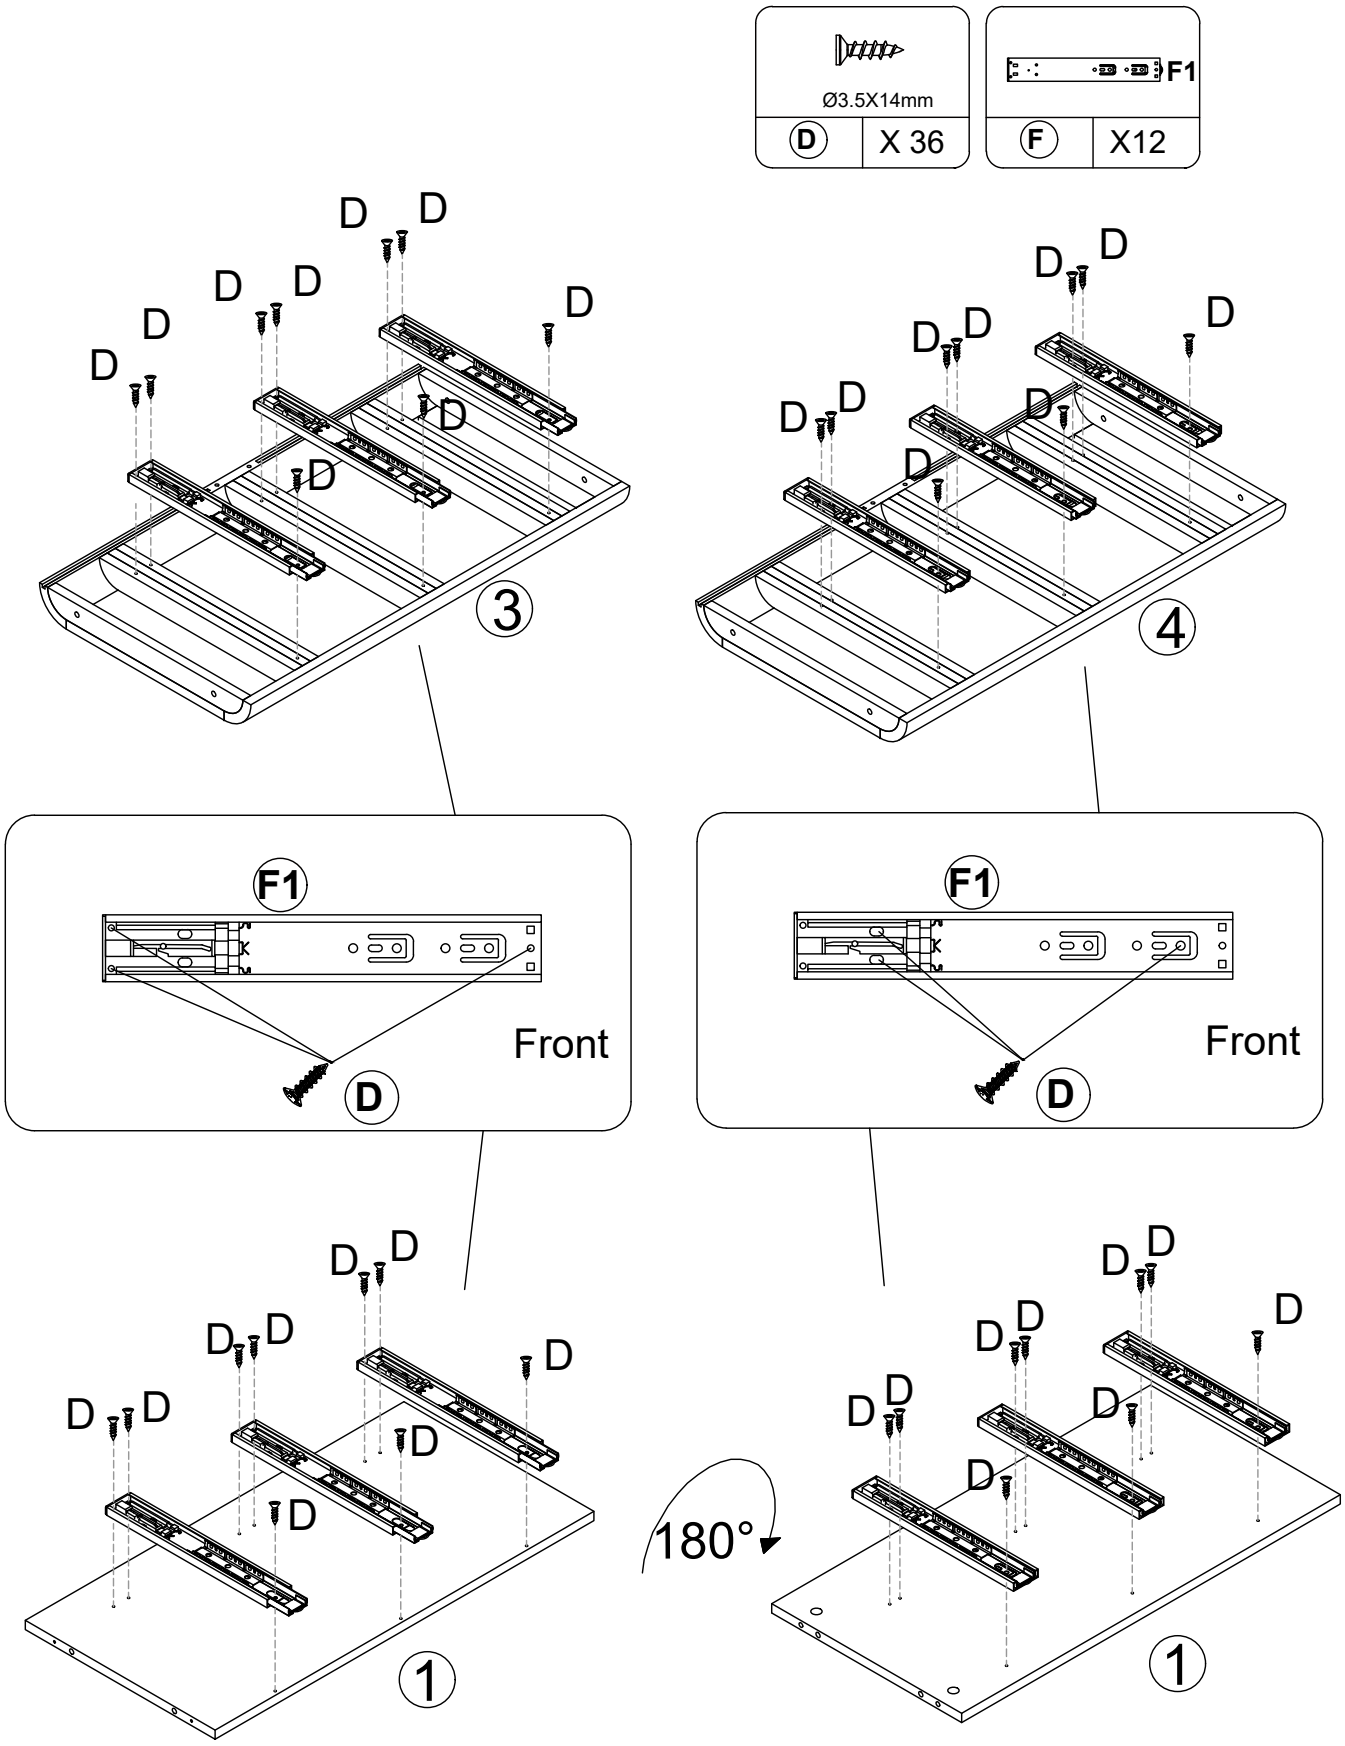



STEP 3

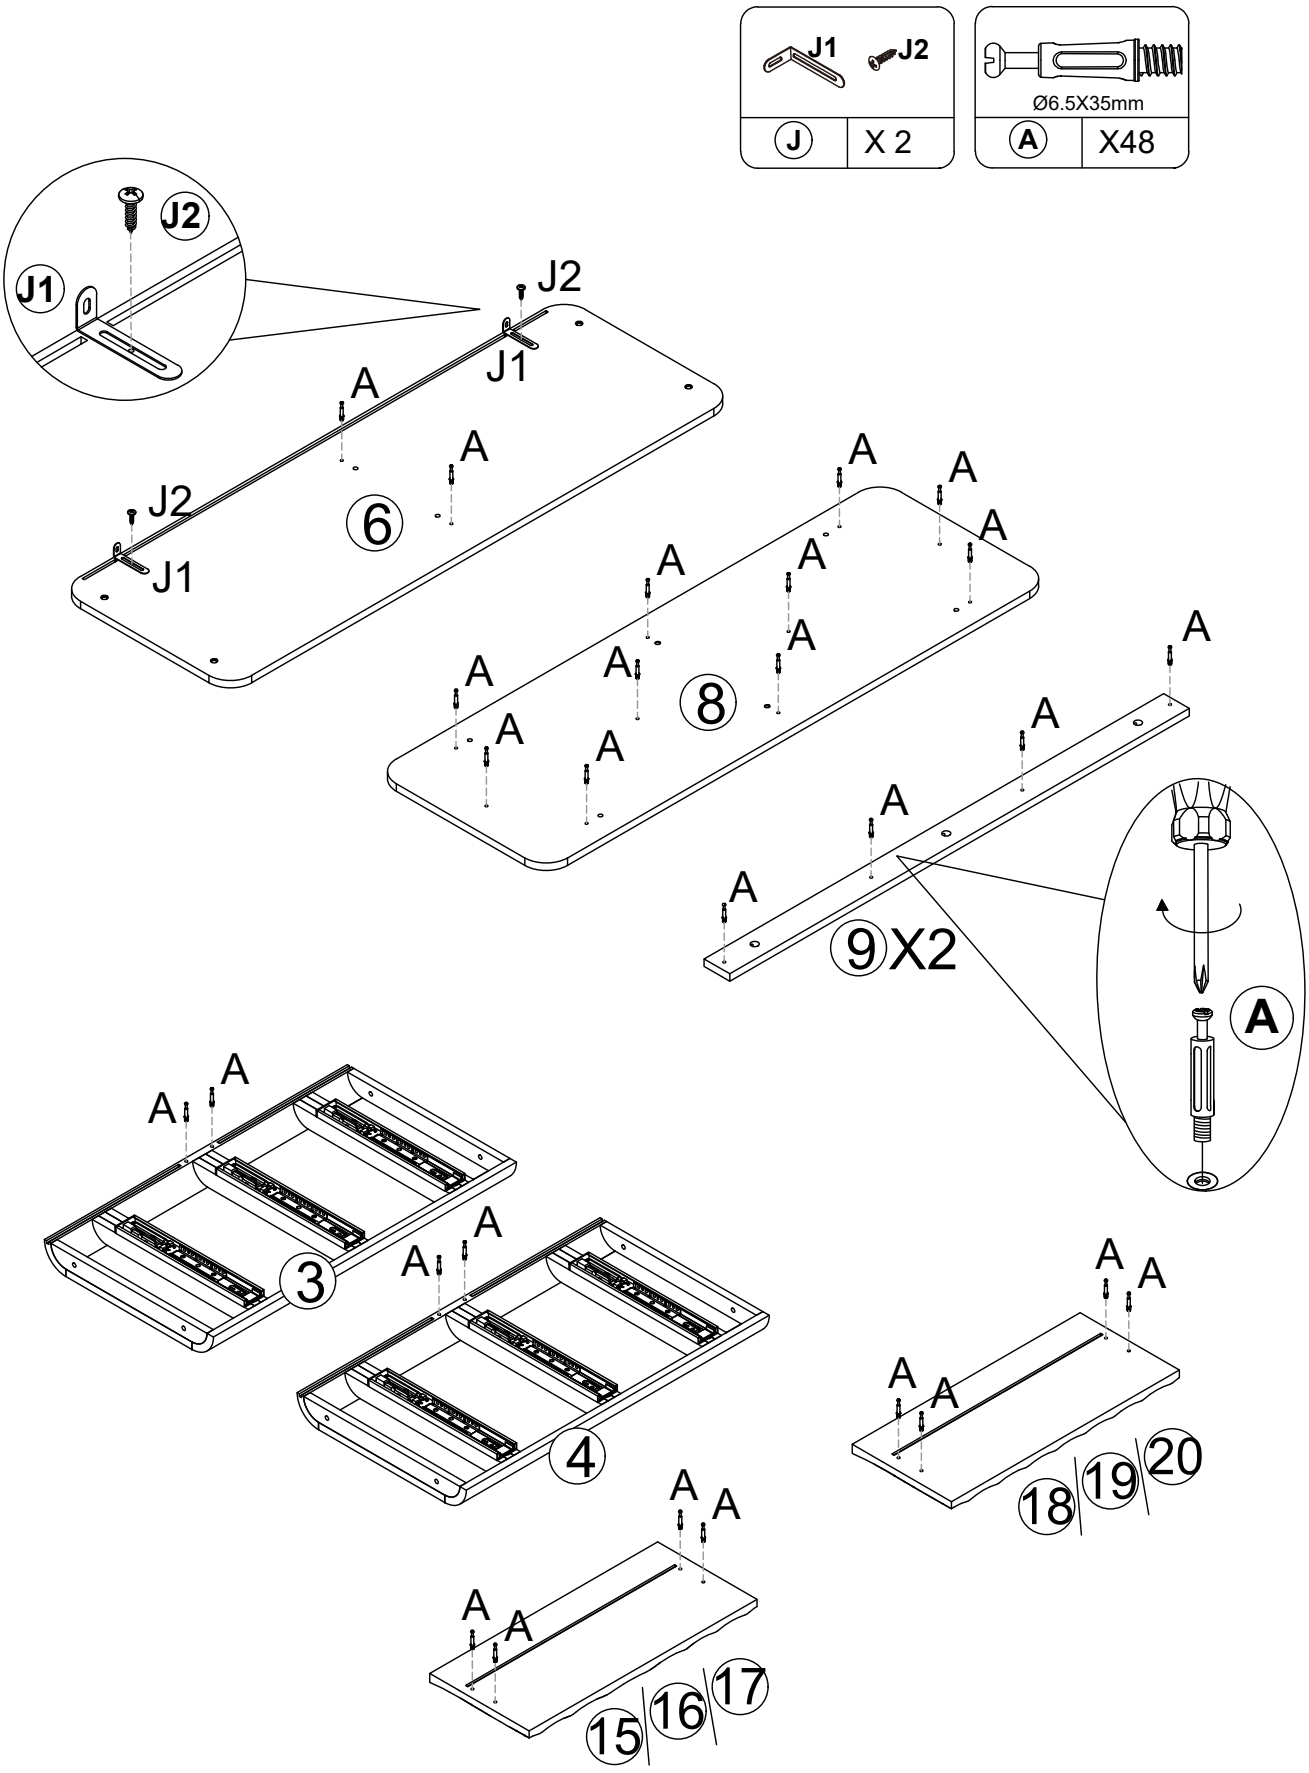


STEP 4

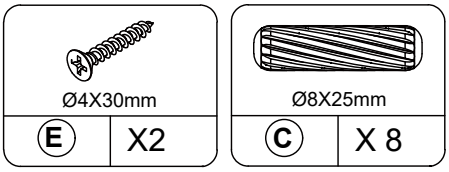

Ø4X30mm
E
X2
Ø8X25mm
C
X 8

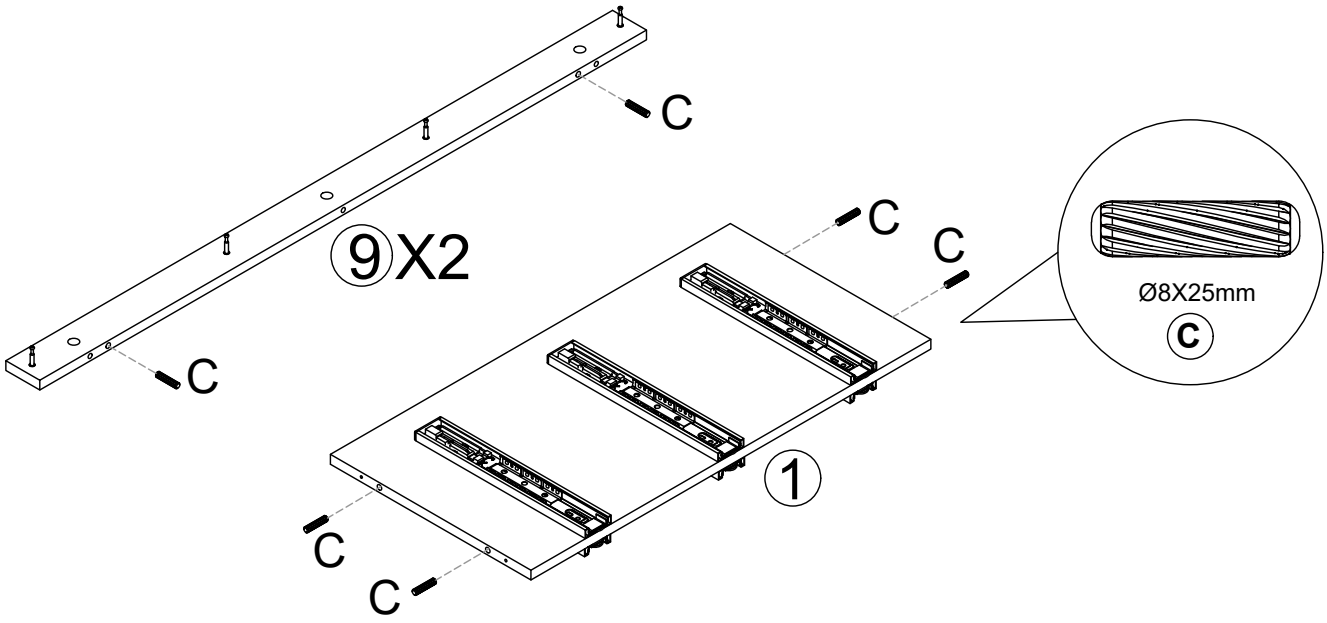

C
9X2
C
C
C
C
C
1
Ø8X25mm
C

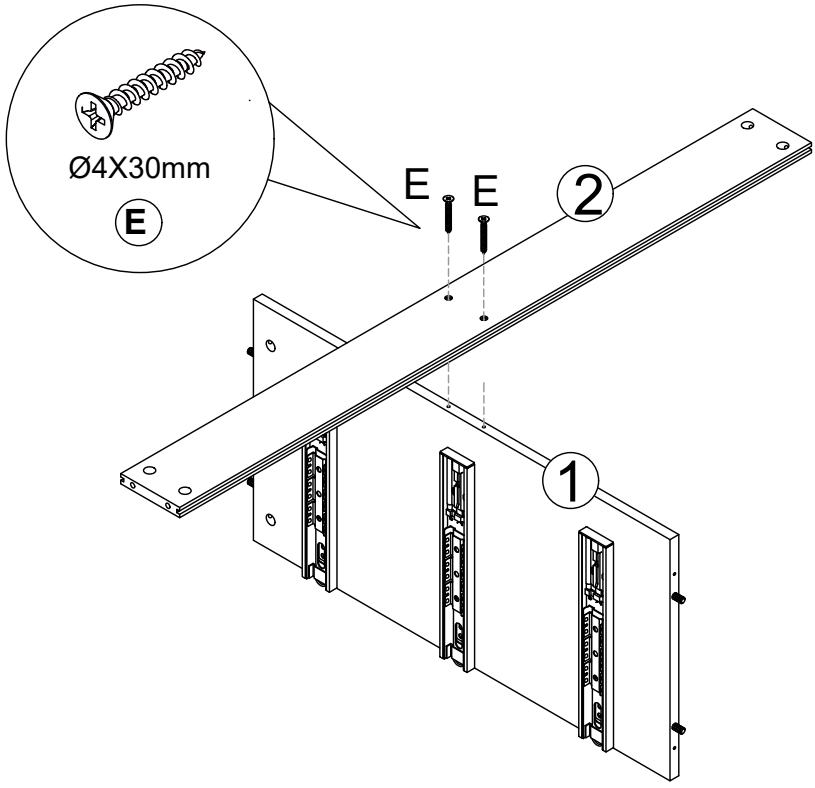

Ø4X30mm
E
E
E
2
1


STEP 5

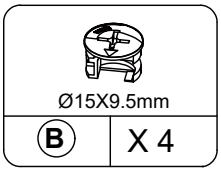


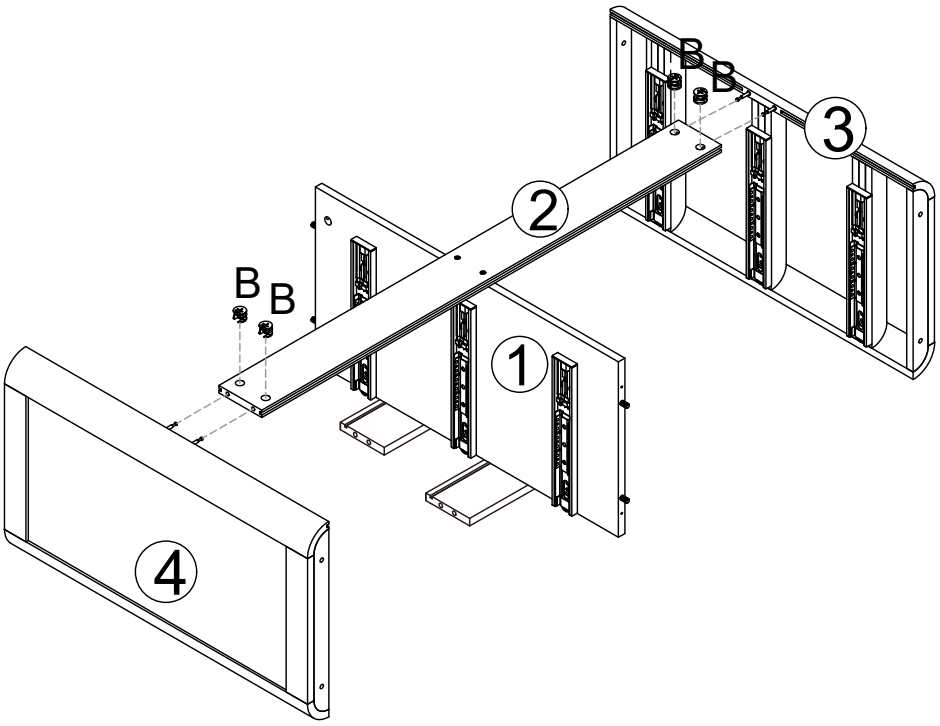

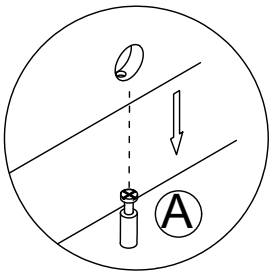


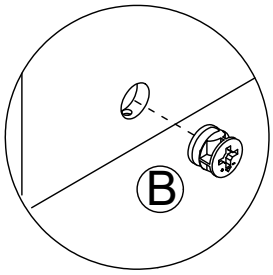


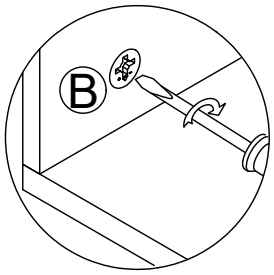


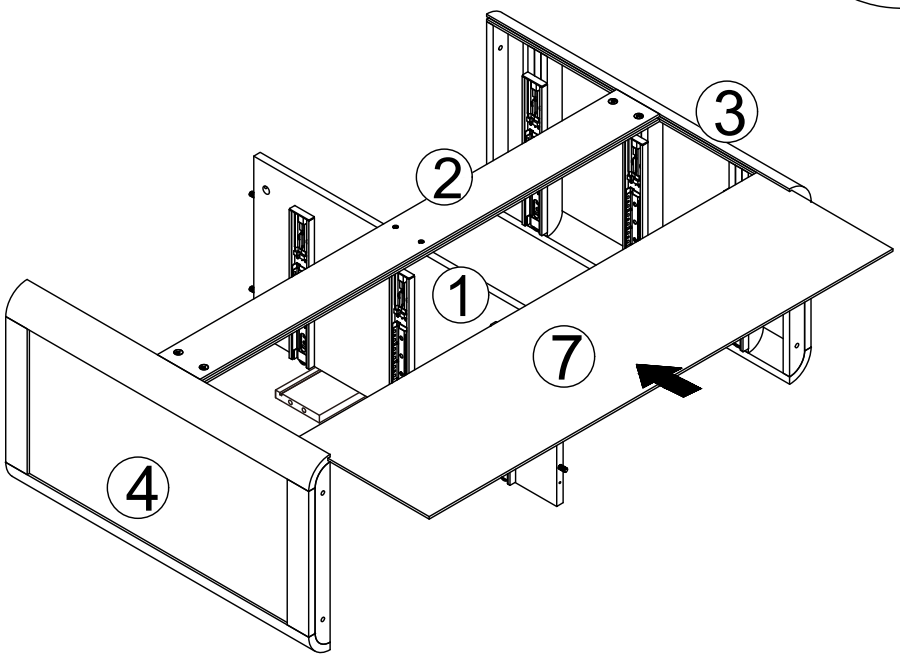



STEP 6

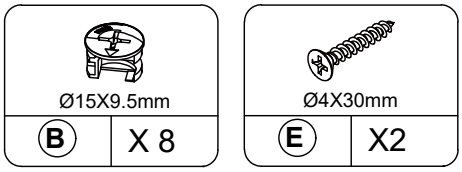

Ø15X9.5mm
B
X 8
Ø4X30mm
E
X2

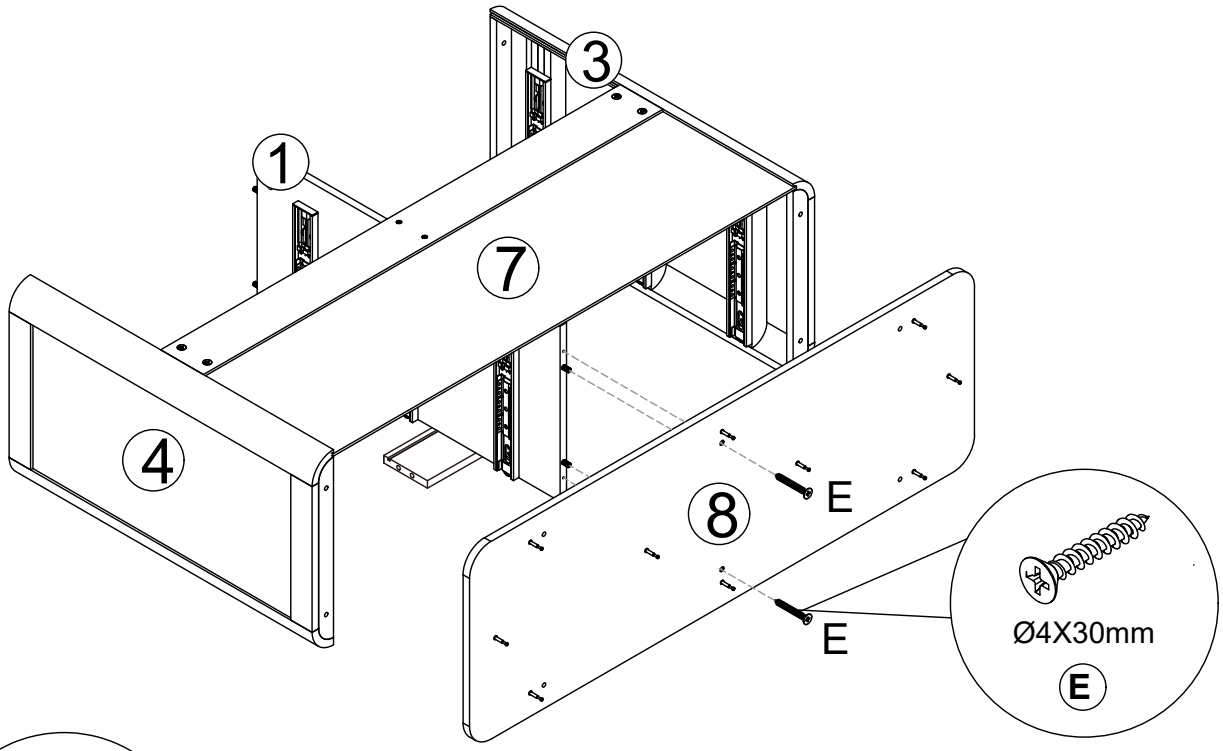
3
1
7
4
8
E
E
Ø4X30mm
E

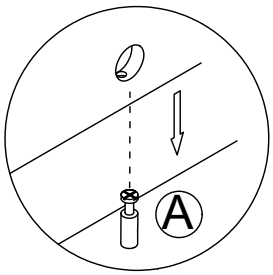

A

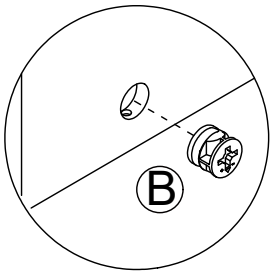

B

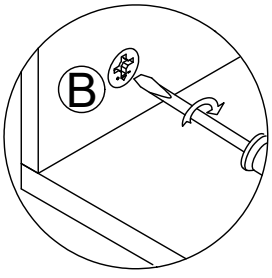

B

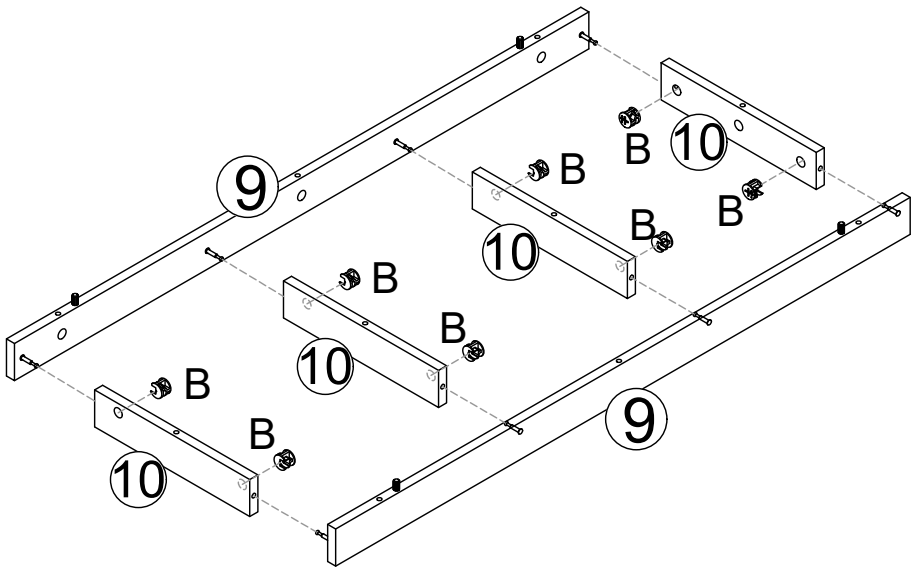
9
B
10
B
B
10
B
B
10
B
B
9


STEP 7

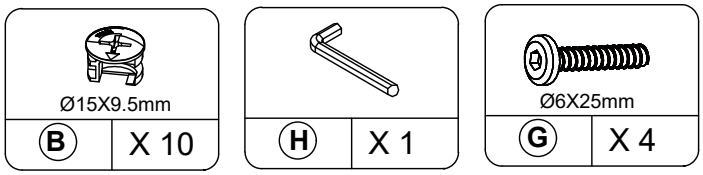

Ø15X9.5mm
B
X 10
H
X 1
Ø6X25mm
G
X 4

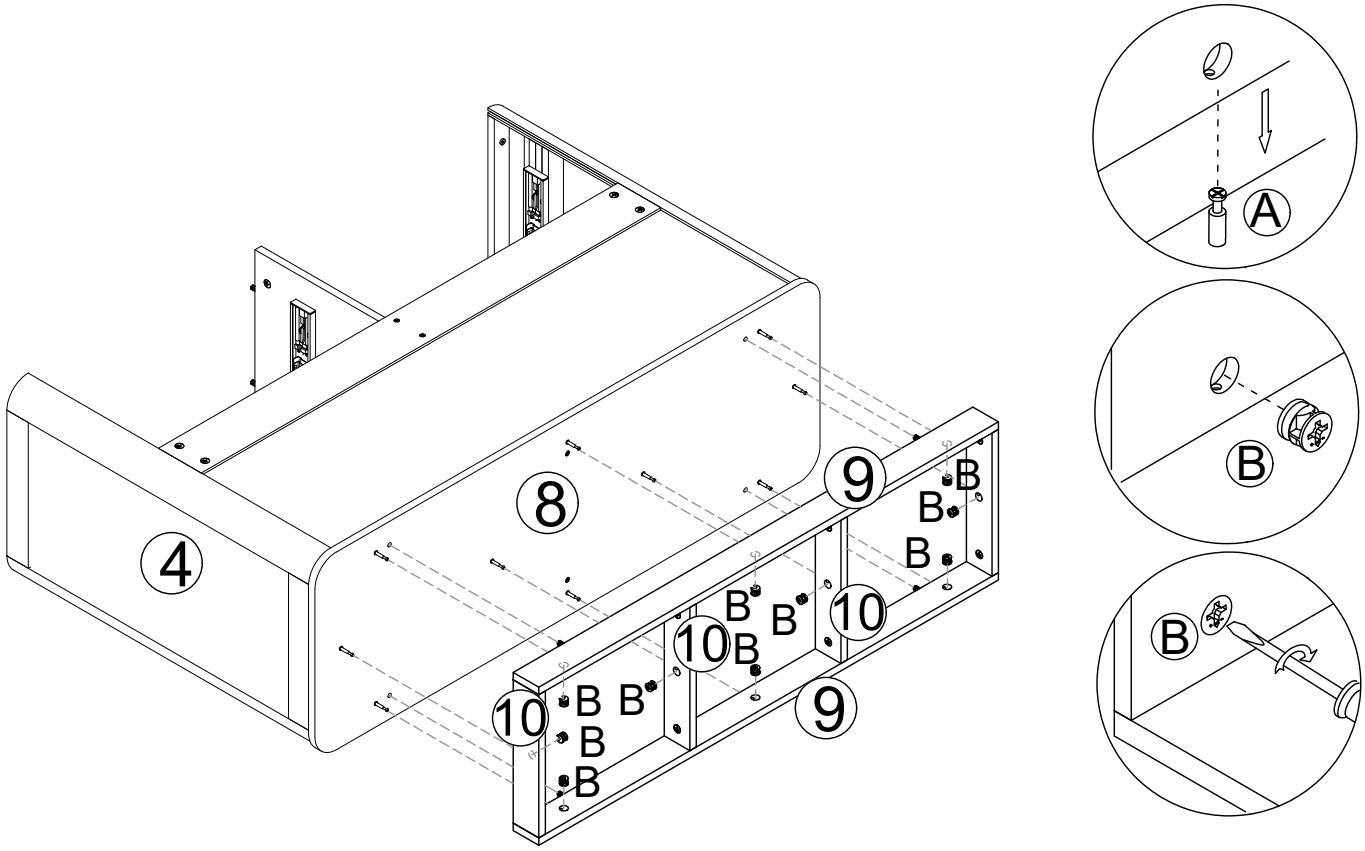

A
B
B
4
8
9
B
B
B
10
B
B
10
10
B
B
B
B
9

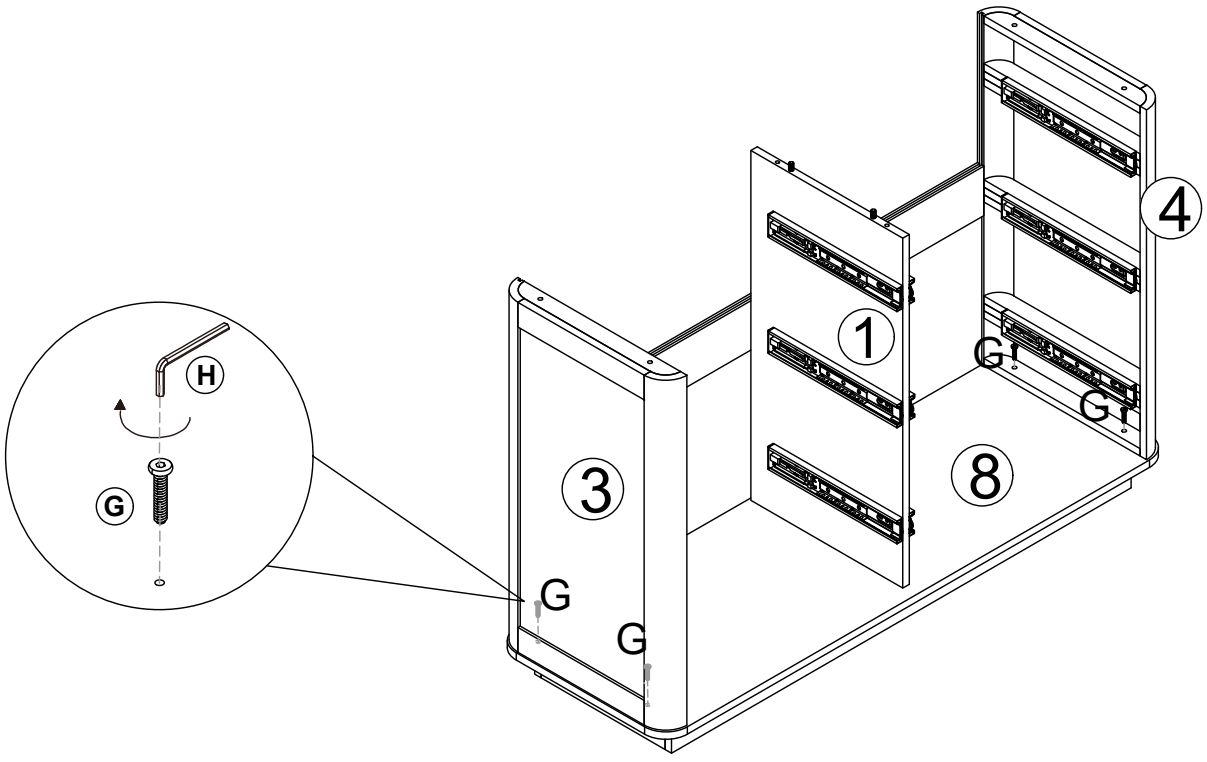

H
G
4
1
G
G
3
8
G
G


STEP 8

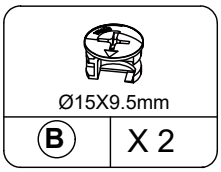


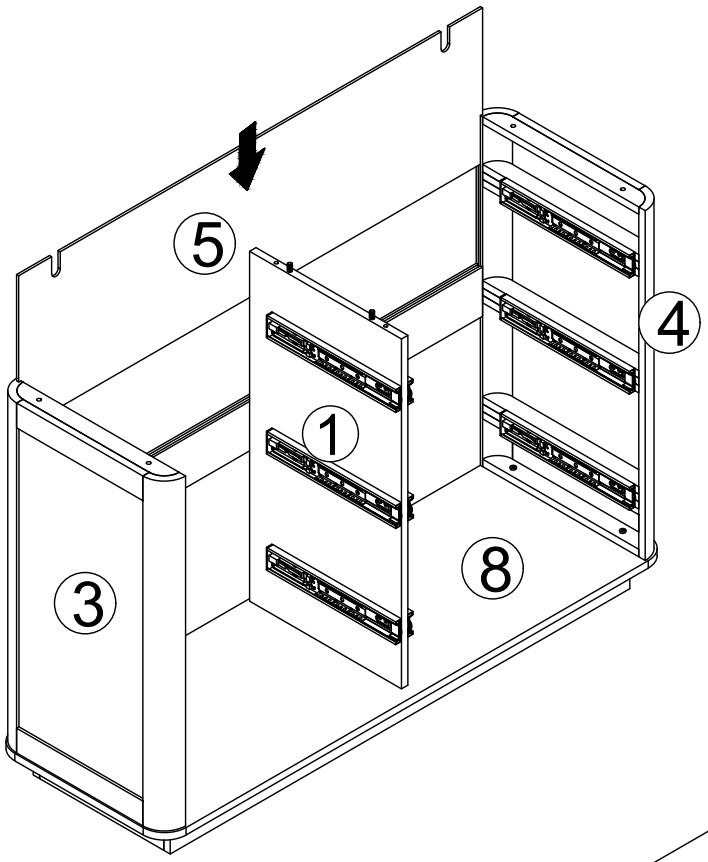

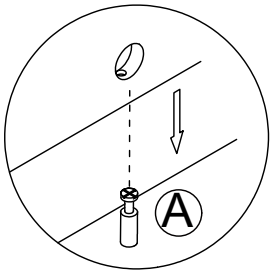


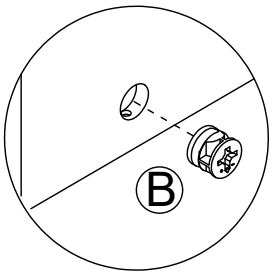


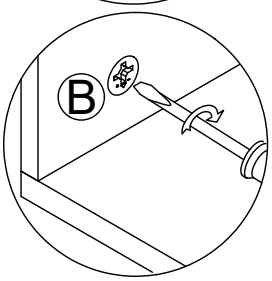


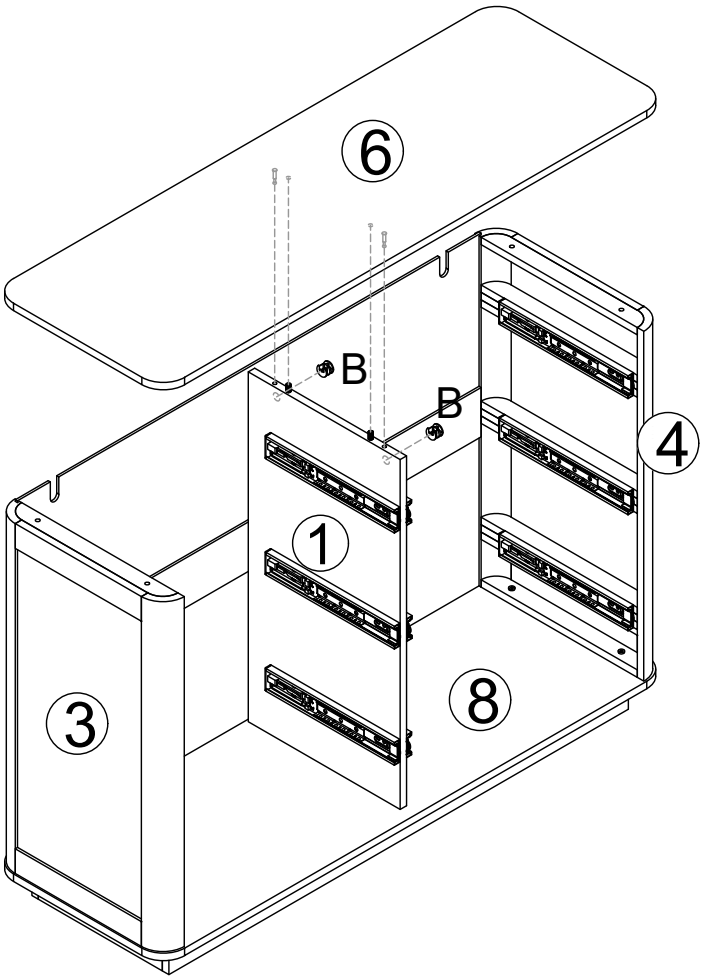


STEP 9

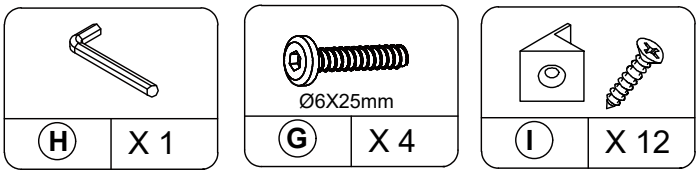

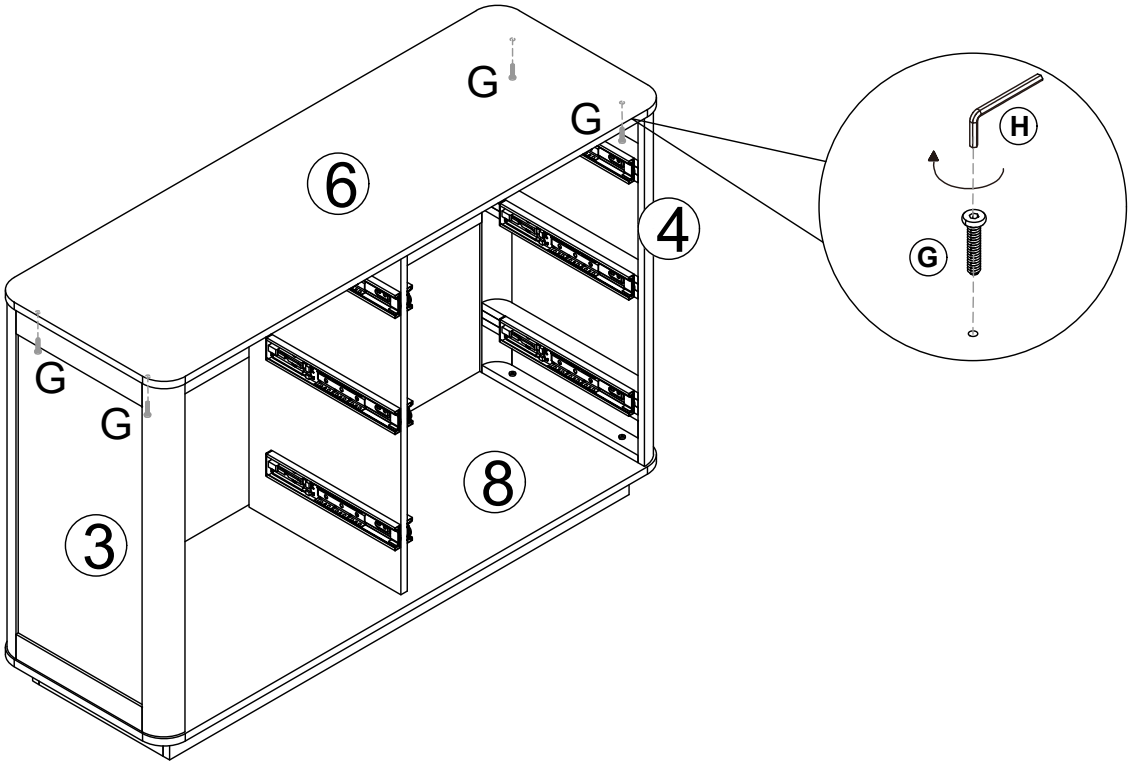


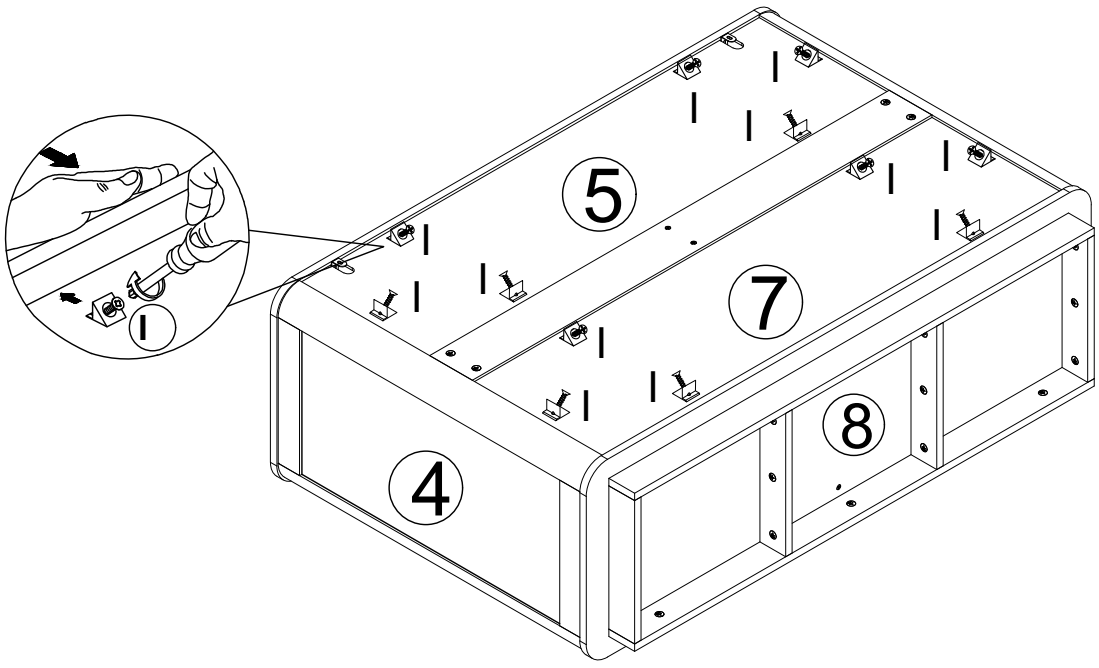


STEP 10

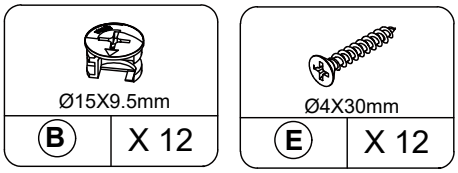

Ø15X9.5mm
B
X 12
Ø4X30mm
E
X 12

X3

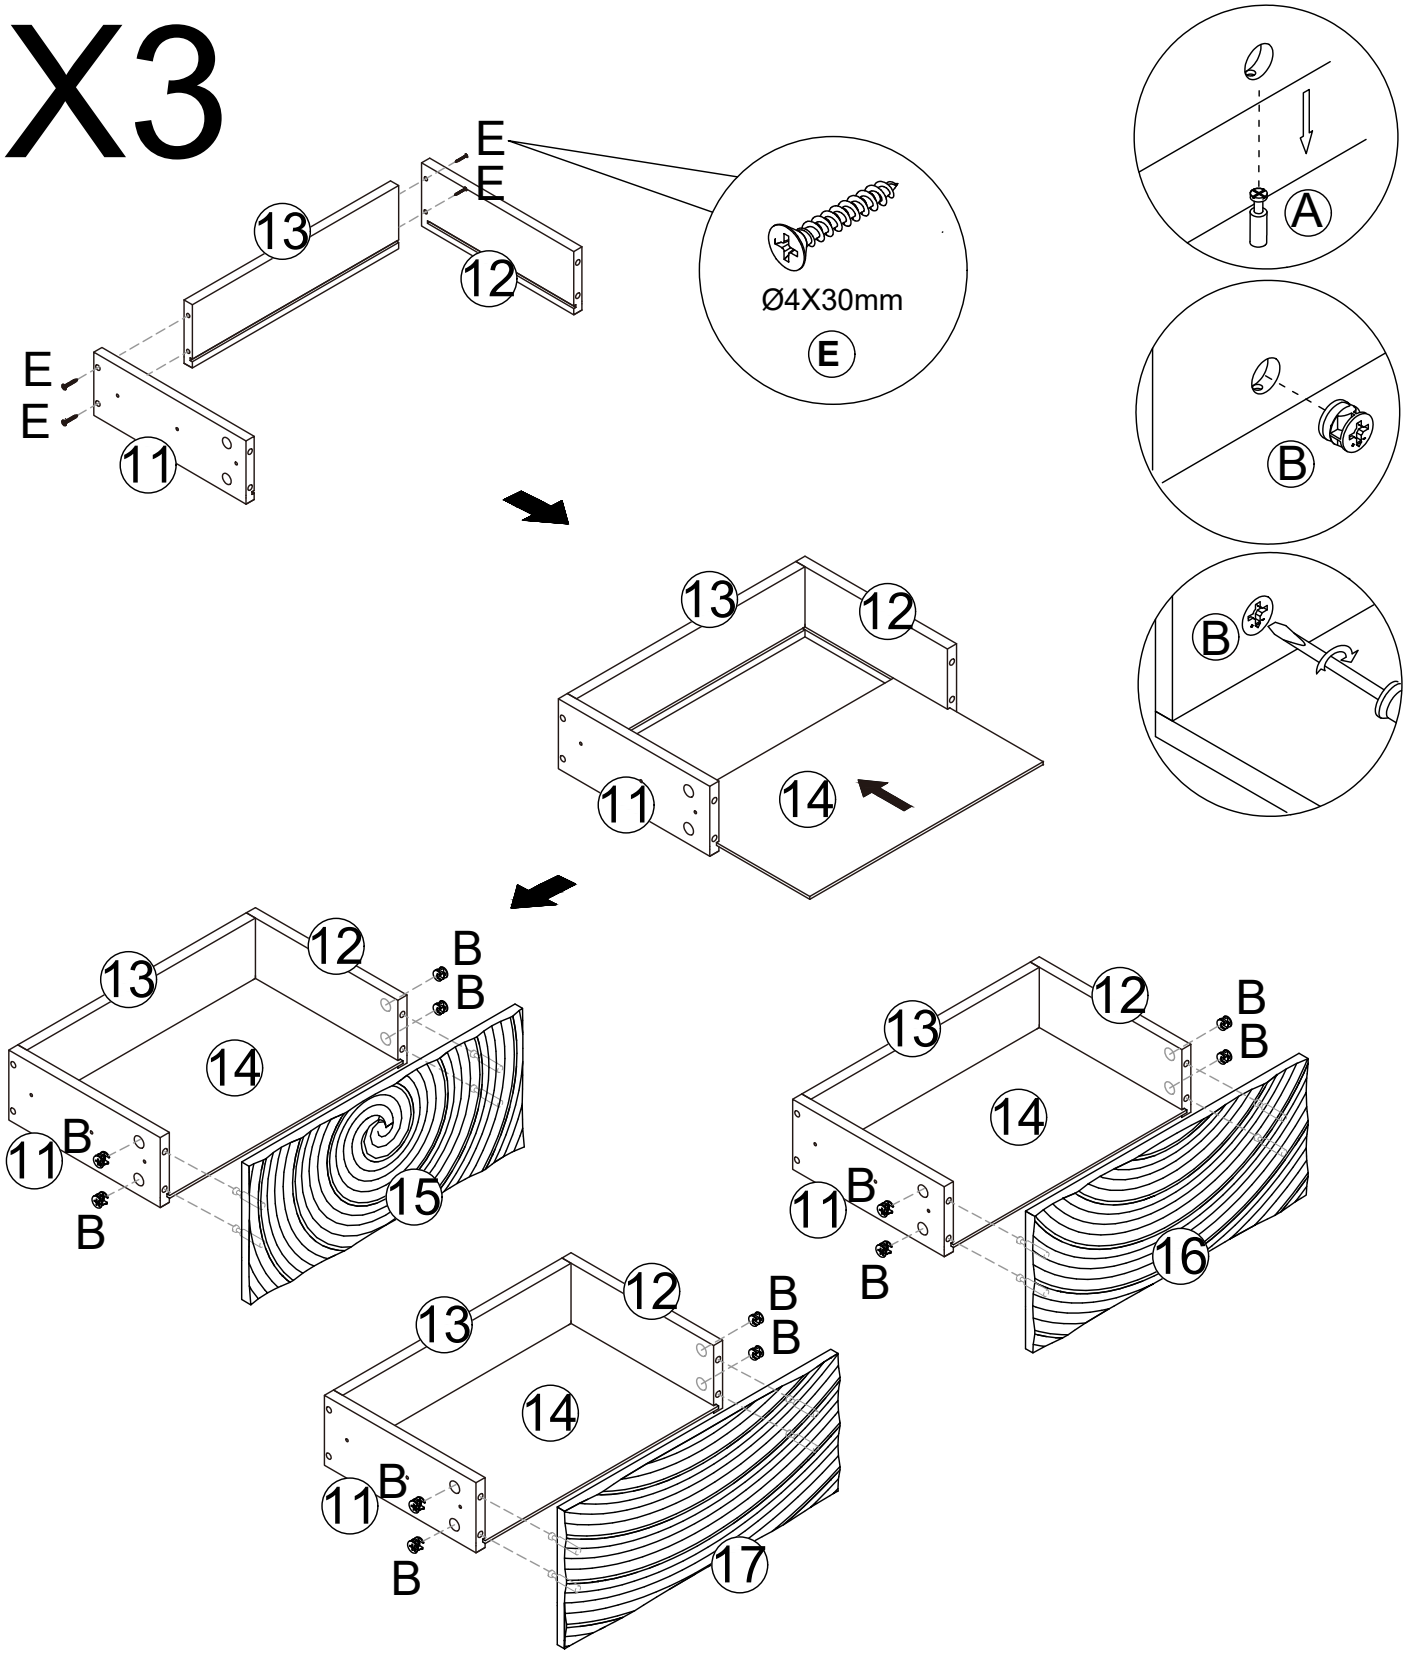

E
E
13
12
E
E
11
Ø4X30mm
E
A
B
B
13
12
11
14
13
12
B
B
14
B
11
B
15
13
12
B
B
14
B
11
B
16
13
12
B
B
14
B
11
B
17


STEP 11

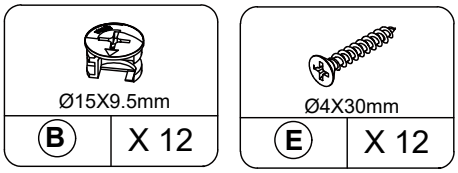

Ø15X9.5mm
B
X 12
Ø4X30mm
E
X 12

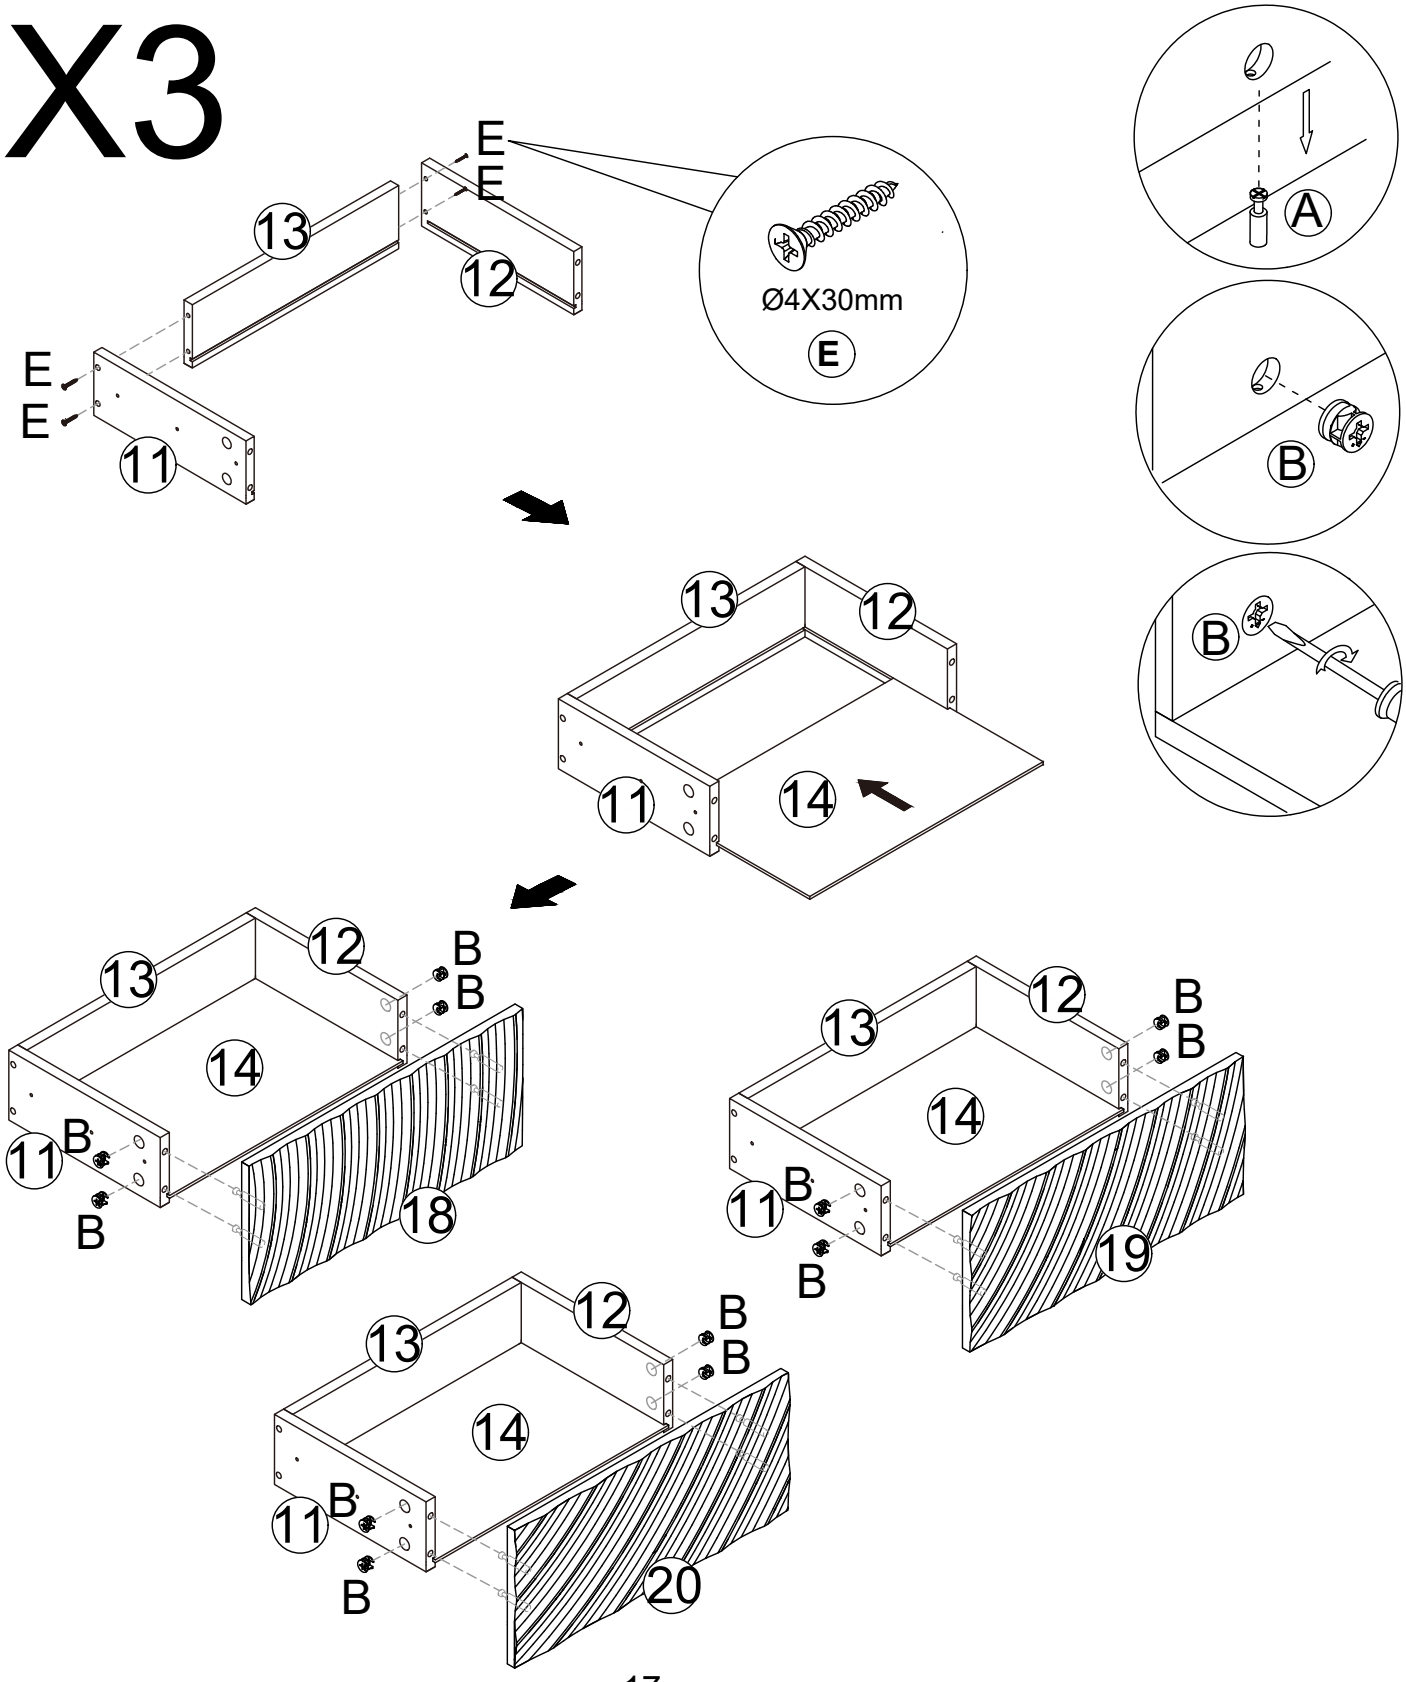

X3
E
E
13
12
E
E
11
Ø4X30mm
E
A
B
B
13
12
11
14
13
12
B
B
14
B
11
B
18
13
12
B
B
14
B
11
B
19
13
12
B
B
14
B
11
B
20


STEP 12

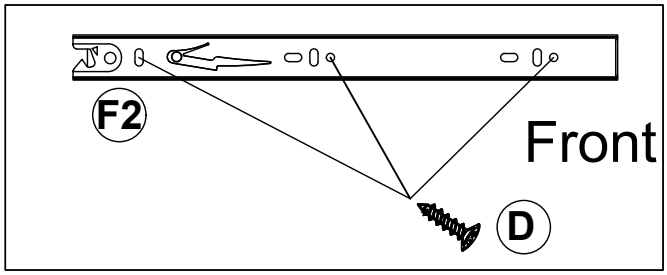

F2
Front
D

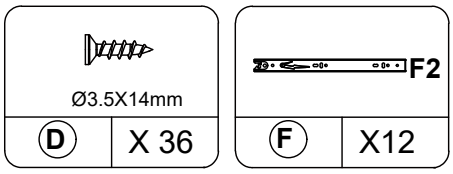

Ø3.5X14mm
D
X 36
F2
F
X12

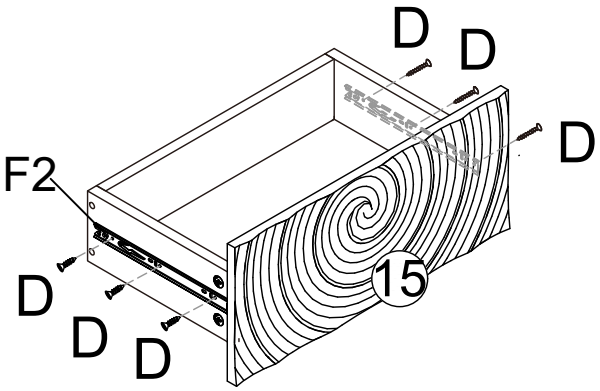

D
D
D
F2
D
D
D
15

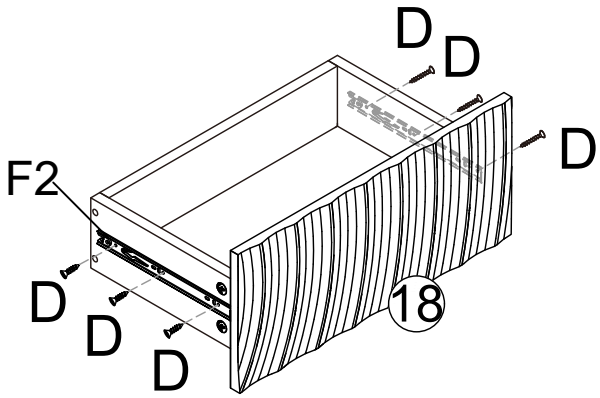
D
D
D
F2
D
D
D
18

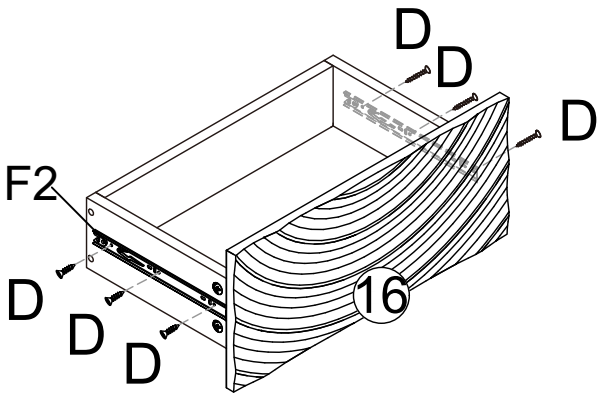
D
D
D
F2
D
D
D
16

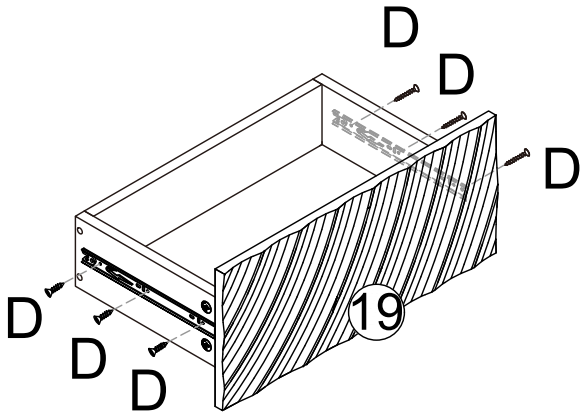

D
D
D
D
D
D
19

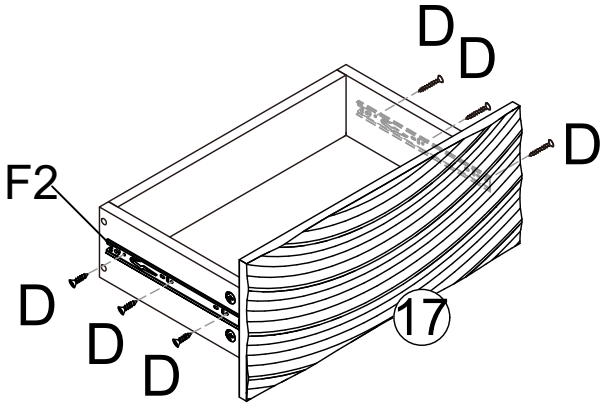
D
D
D
F2
D
D
D
17

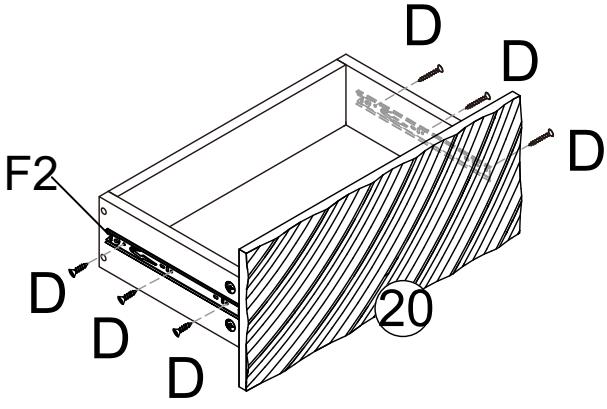
D
D
D
F2
D
D
D
20

STEP 13


J3	J4
J	X 2

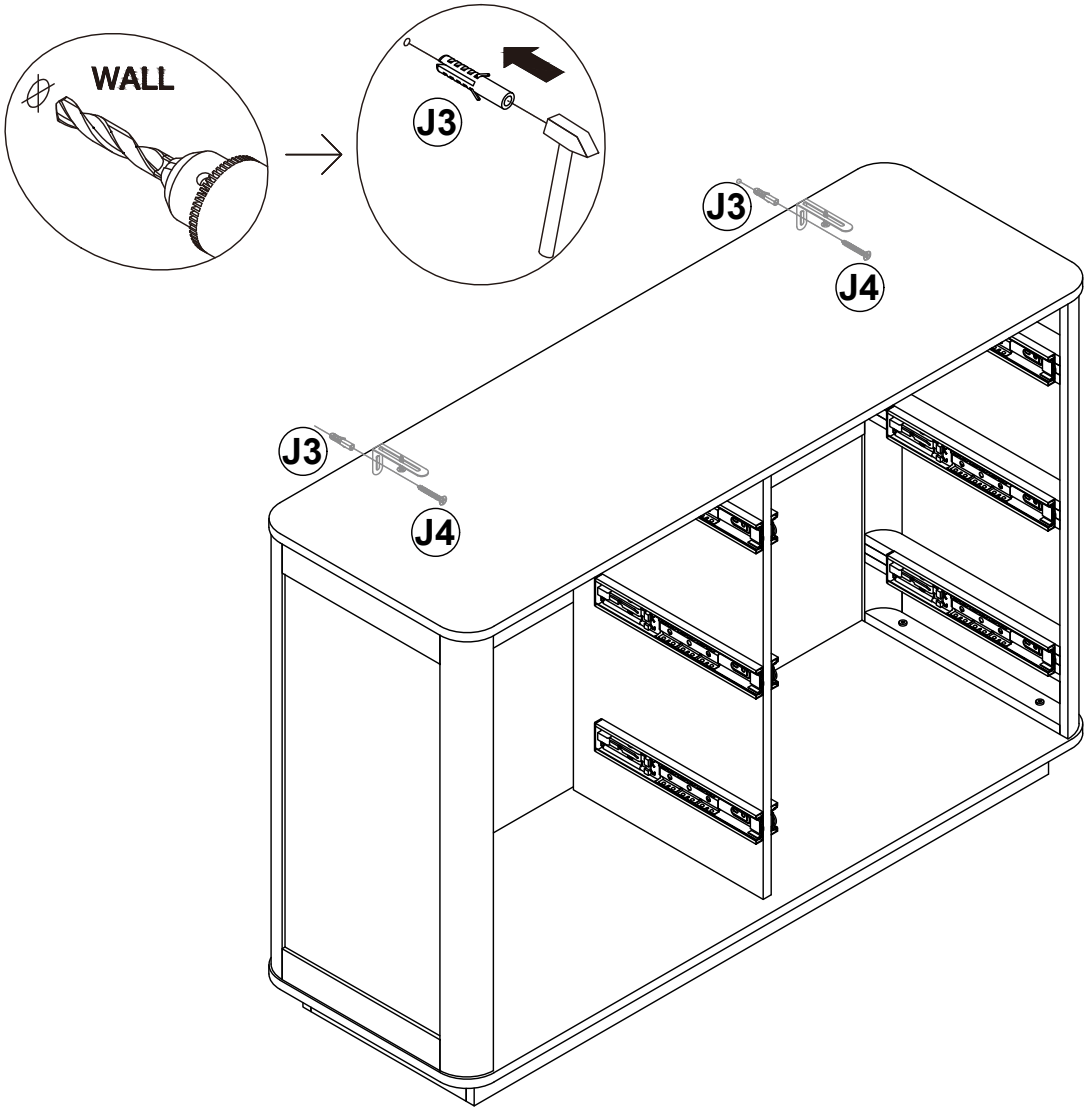

STEP 14

When using a drawer, it is incorrect to only press one end of the drawer panel.

It will cause the drawer to fail to pop out properly.

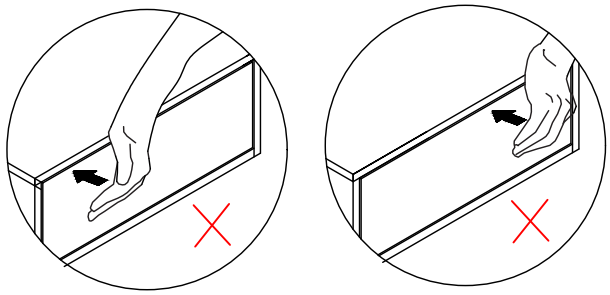

Press both ends simultaneously, or hold down the middle. The drawer can pop out normally.

