


INSTALLATION TUTORIAL



Pre-Installation Preparation

1

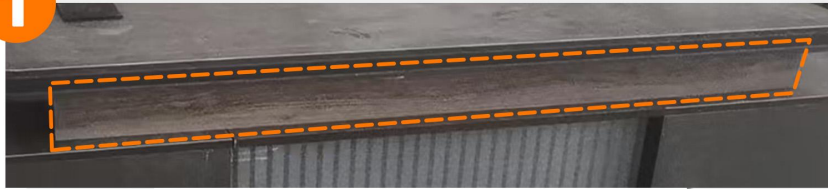


1 long wood strip

2



1 tabletop

3

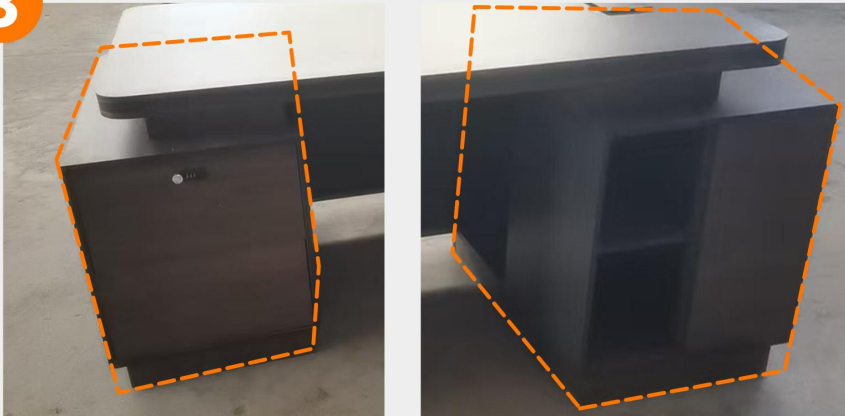

2 pre-assembled cabinets

4



1 baffle

5



2 sleepers

Install the accessories




Short screws



Cam lock screws



Angle brackets

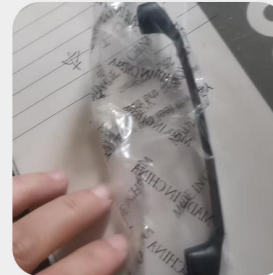


Handles



Long screws

Step1

First, install the baffle. Align it with the left and right cabinets, then secure the baffle between the two cabinets with cam lock screws from inside out.

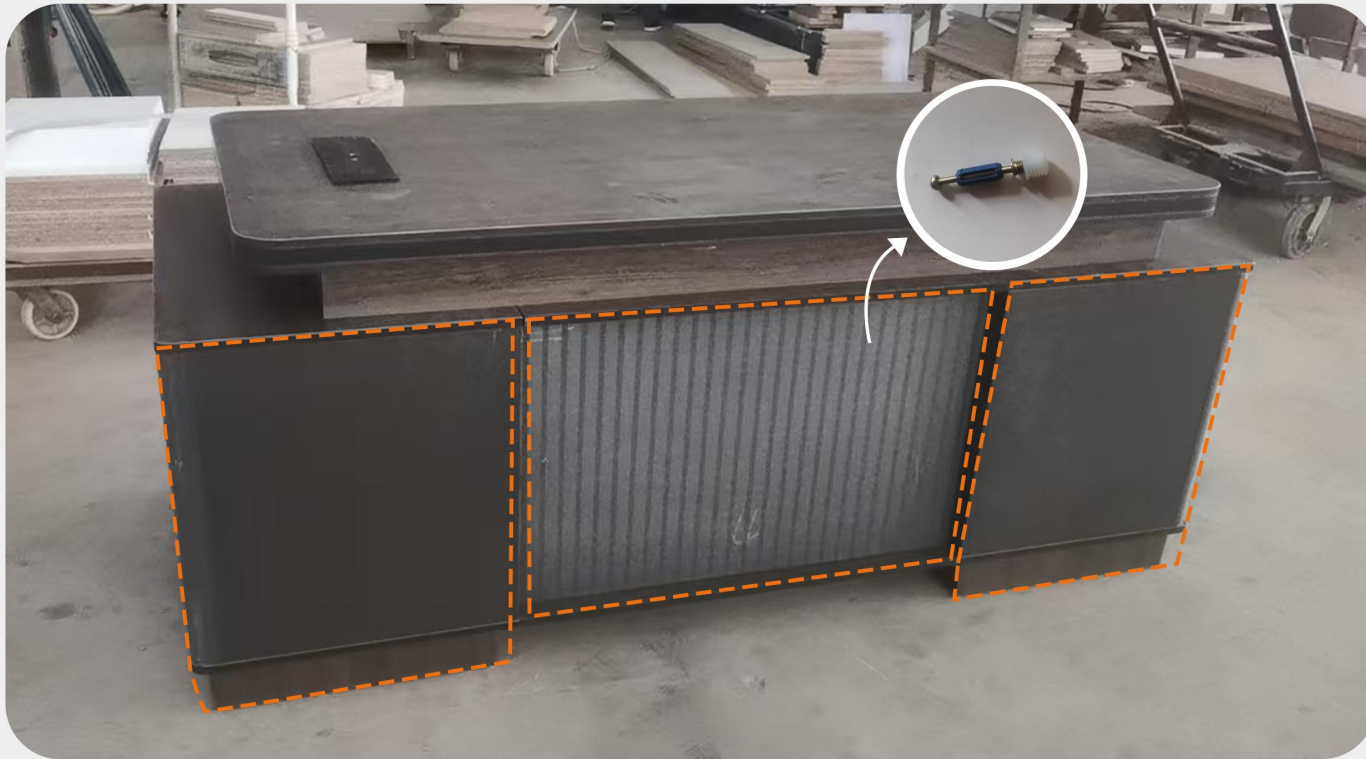


Step2

Install the sleepers. Place the two sleepers on top of the two side cabinets respectively. Then fasten one side of each angle bracket to the sleeper with short screws, and the other side to the side cabinet.



Step3

Install the long wood strip. Connect the long wood strip to the sleepers, then place the assembly on top of the cabinets and baffle. Align properly and fasten it with cam lock screws from inside out.

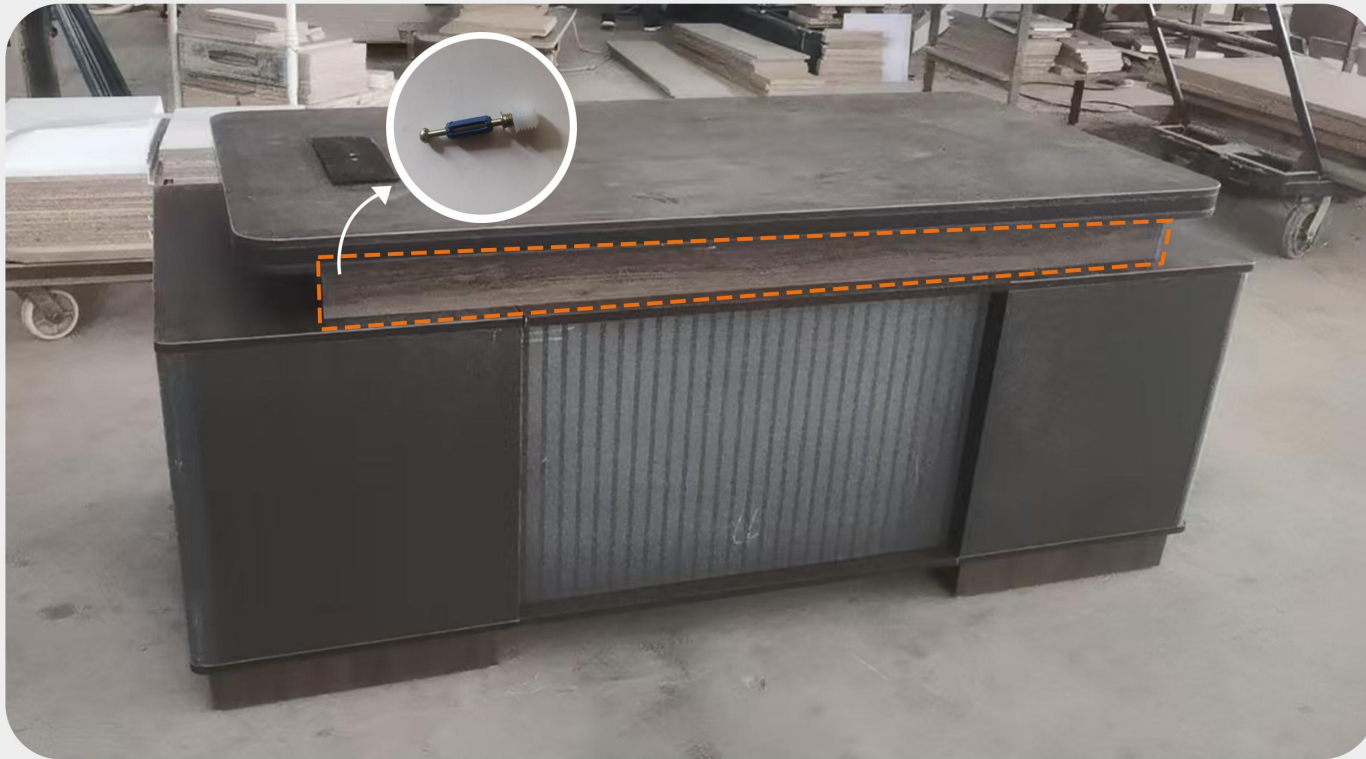

Step4

Finally, install the tabletop. Lay the tabletop flat on top of the sleepers and long wood strip. After proper alignment, secure it with angle brackets. Installation is complete.

