









ASSEMBLY INSTRUCTION

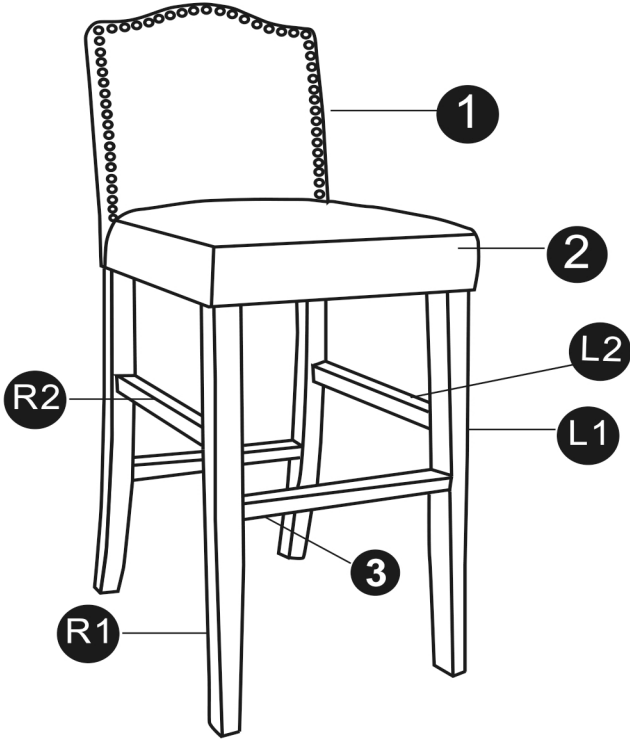


HARDWARE LIST	CODE	PARTS	QTY.
	A	M8X60MM  C 	9
	B	M4.5X50MM 	6
	C	ALLEN KEY 	1



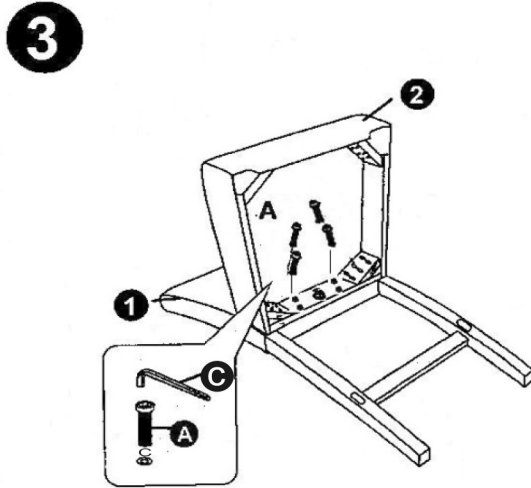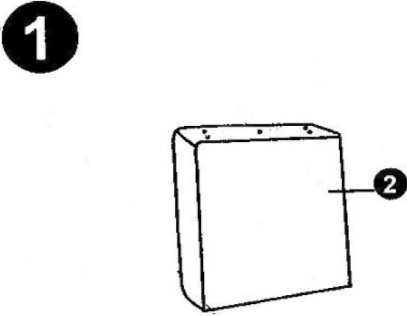Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

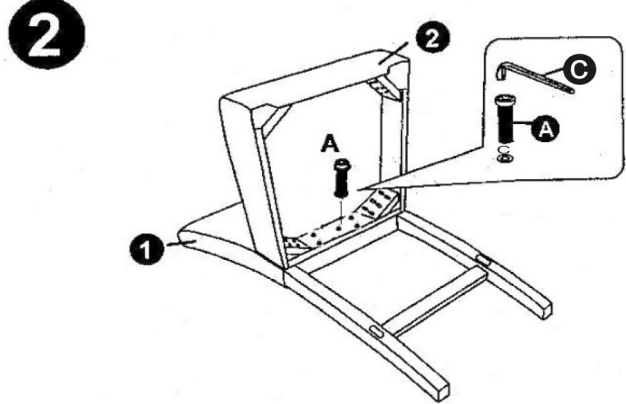


Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

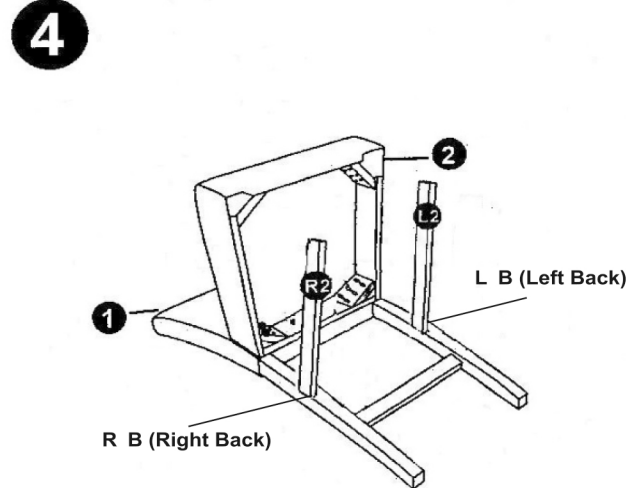


Put the L2 and R2 in the holes.

5

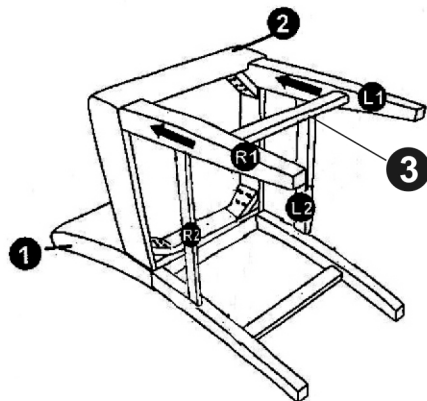


Put L1 and R1 legs in the holes.
Put 3 in the holes,

6

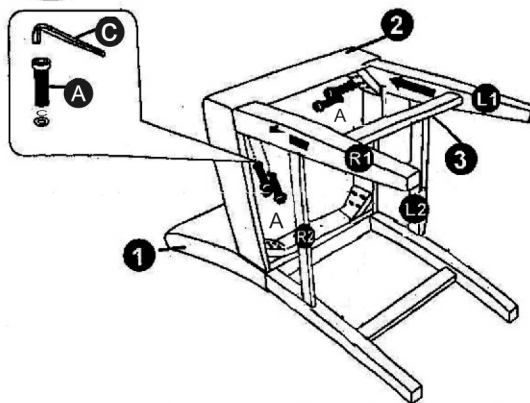


Put the screws in the holes,
tight the screws, but not too
tight, 90% is ok.

7

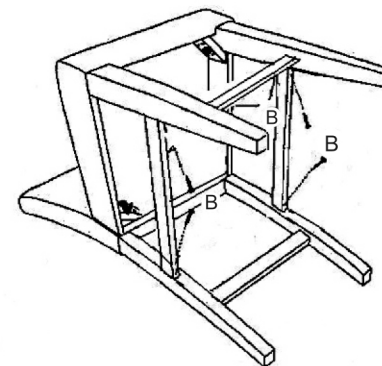


Put the screws in the holes,
tight the screws, but not too
tight, 90% is ok.

8

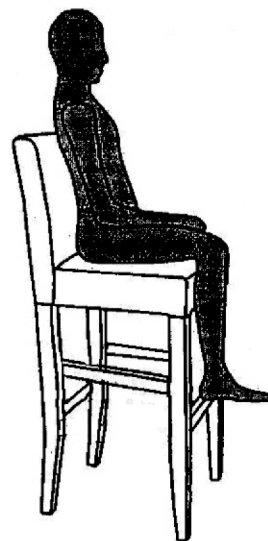


Then adjust the balance
of the chair.

9

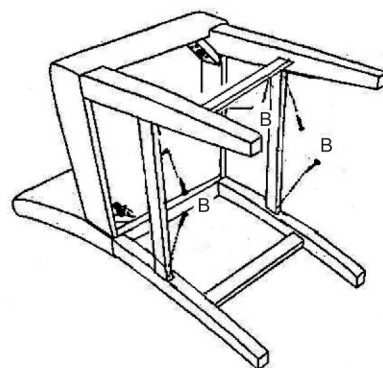

Tight all the screws to 100%

10

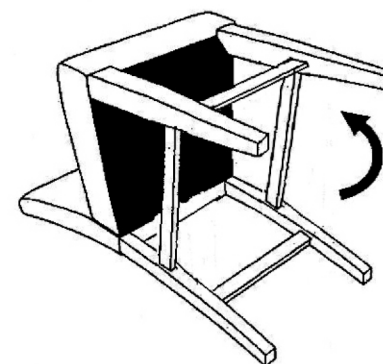

Stick the black part
on the seat