

3910 Series

3910 - 951 5/0 POSTER HEADBOARD
3910 - 953 5/0 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS


American Woodcrafters
1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

Assembly Instruction

A. Components :

1. Poster Headboard	: 1 Pc
2. Poster Footboard	: 1 Pc
3. HB Legs	: 2 Pcs
4. HB Vinyl	: 2 Pcs
5. FB Vinyl	: 2 Pcs
6. Stretcher	: 1 Pc
7. Bed Rails	: 2 Pcs
8. Slats	: 3 Pcs
9. Slats Support	: 3 Pcs

Qty

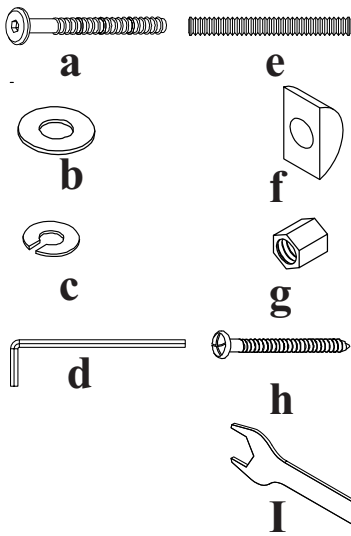


B. Hardware :

Qty


a. Bolt M6 x 50mm	: 10 Pcs
b. Flat Washer	: 10 Pcs
c. Lock Washer	: 10 Pcs
d. Allen Key	: 1 Pc
e. Bolt M8 x 100mm	: 8 Pcs
f. Halfmoon Washer	: 8 Pcs
g. Hexa Nut	: 8 Pcs
h. Screw	: 6 Pcs
i. Hexa Wrench	: 1 Pc

C. Tool Required

1. Screw Driver = (not included)



STEP - 1

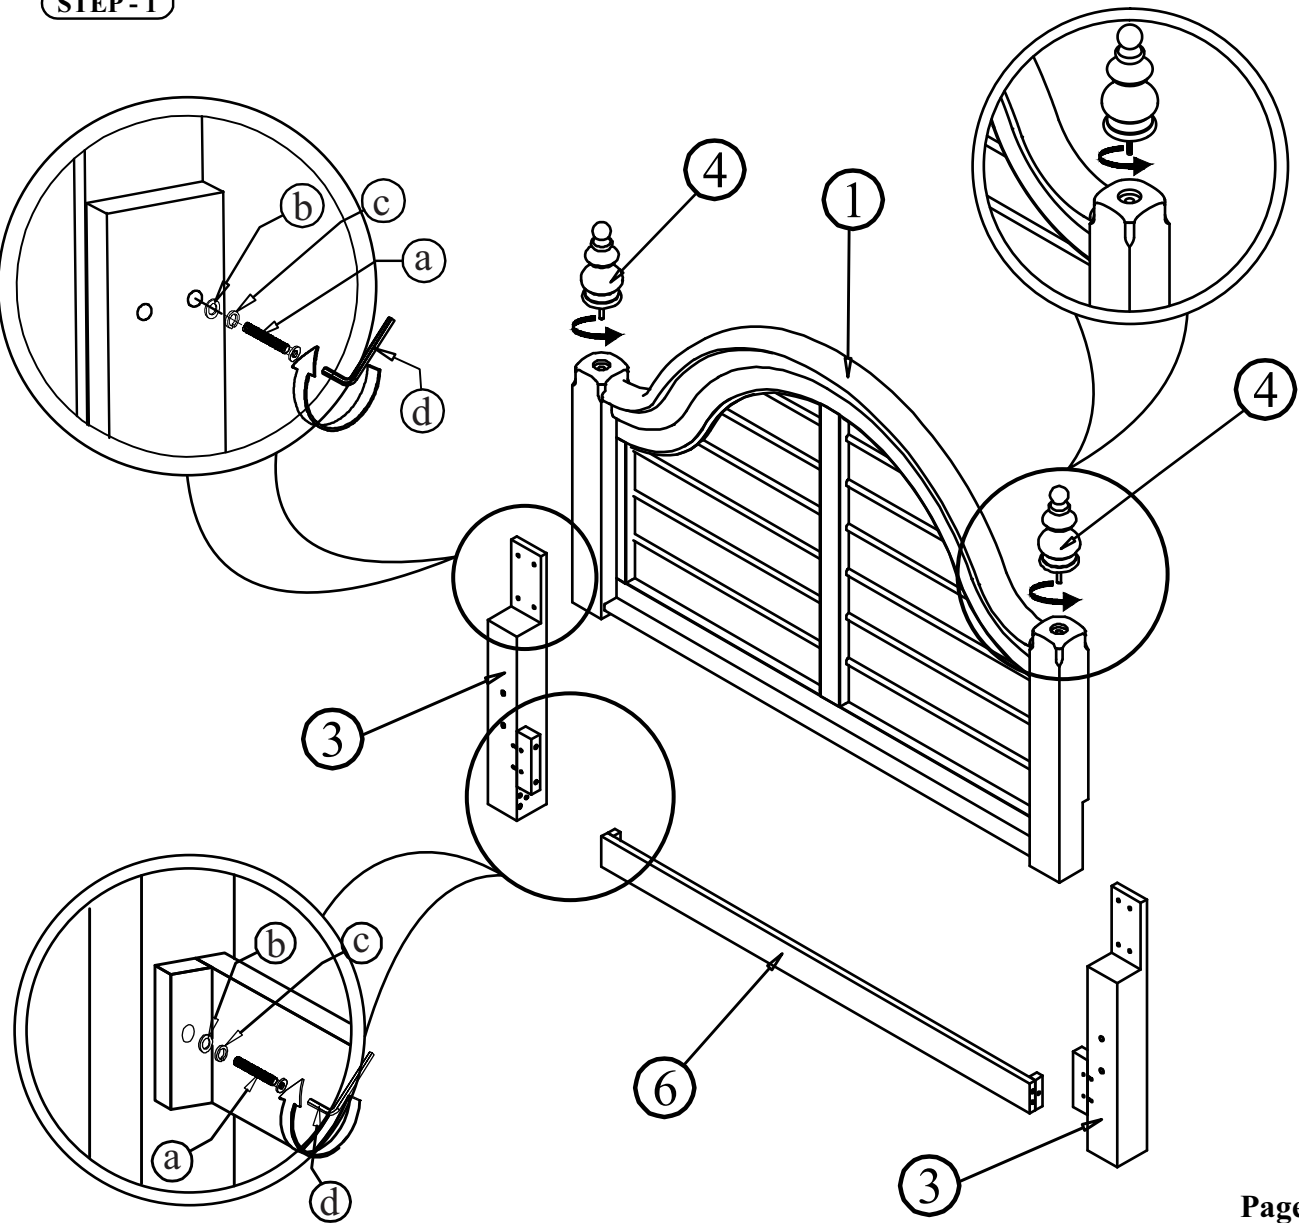

3910 Series


3910 - 951 5/0 POSTER HEADBOARD
3910 - 953 5/0 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS




1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

Assembly Instruction

STEP - 2

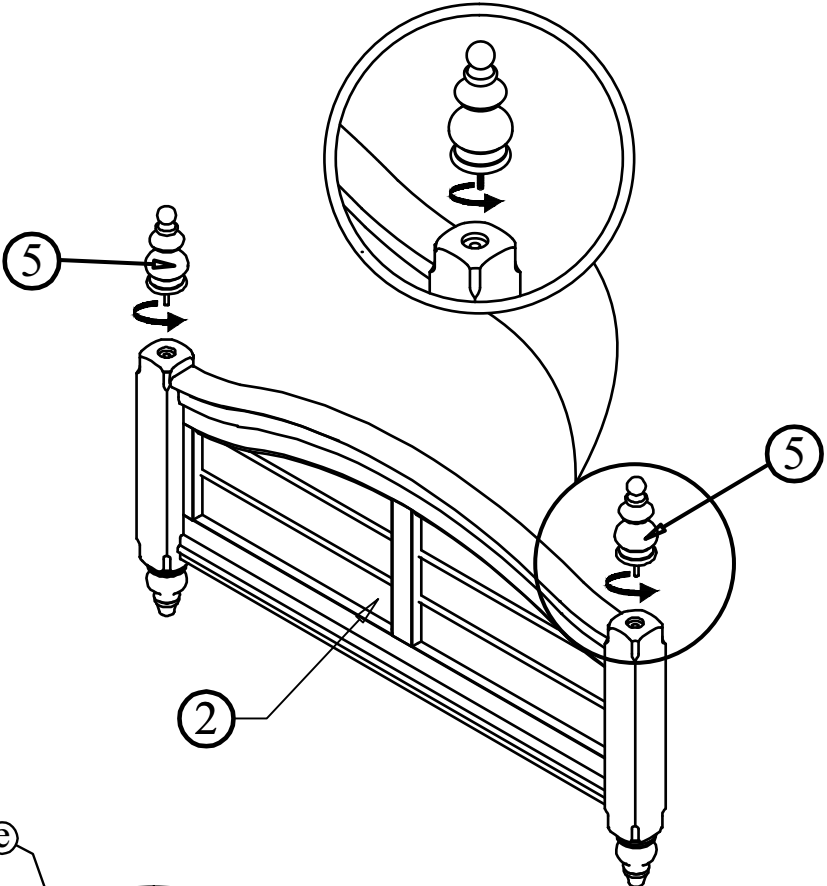

STEP - 3

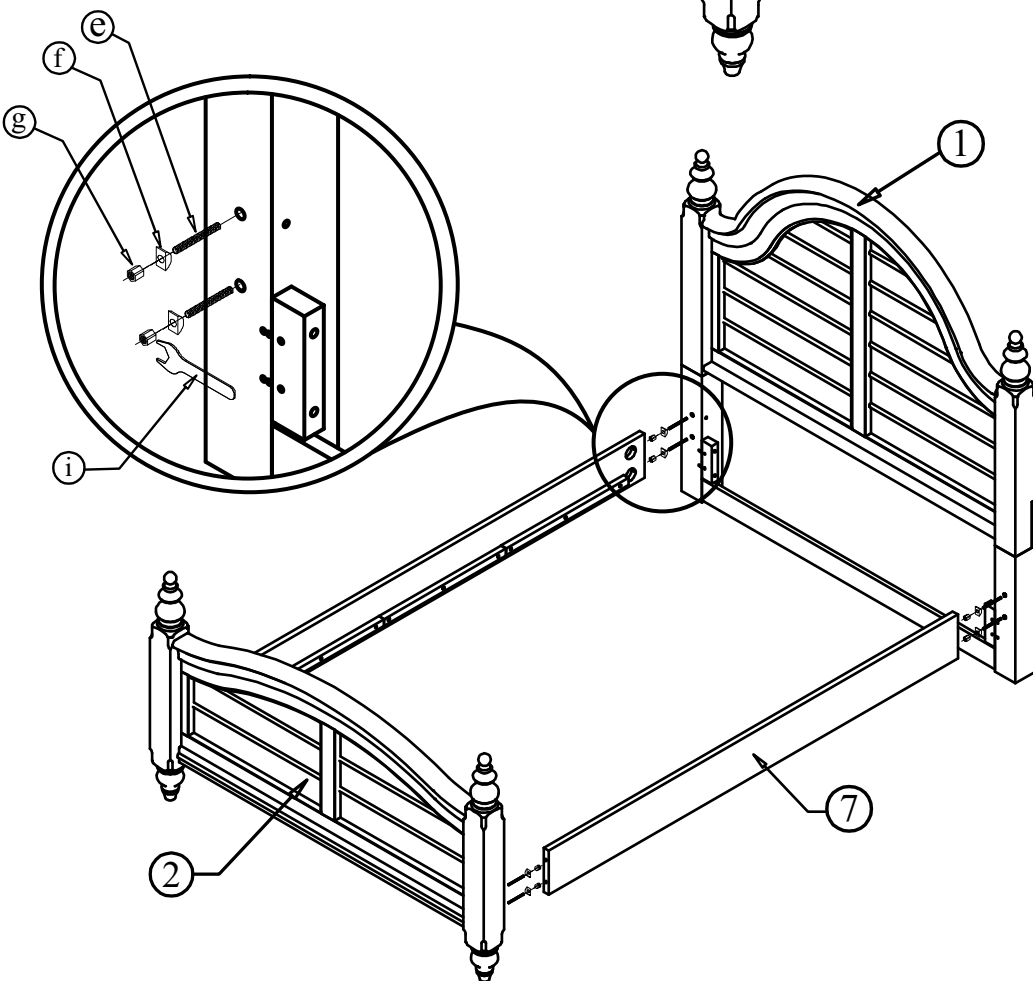

3910 Series


3910 - 951 5/0 POSTER HEADBOARD
3910 - 953 5/0 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS



1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

Assembly Instruction

STEP - 4

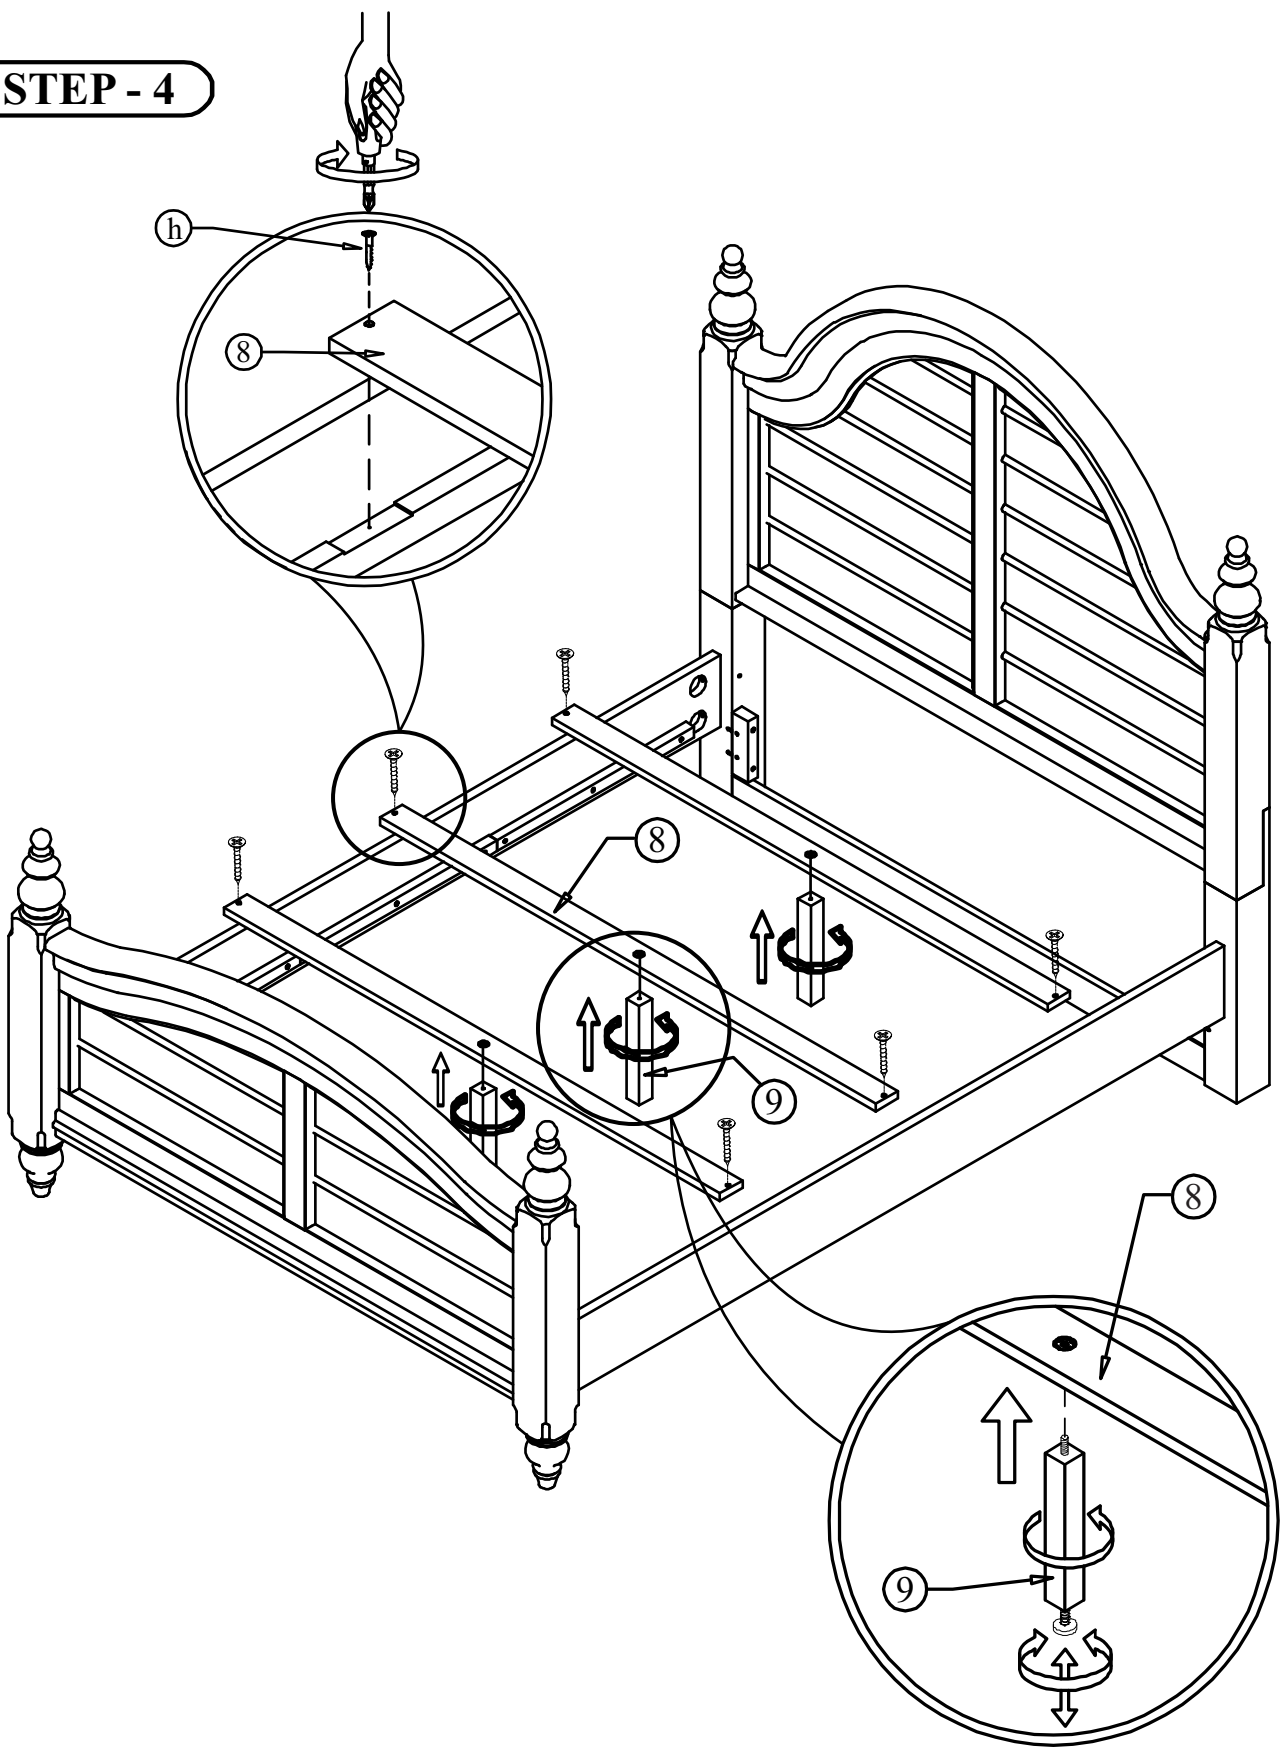


3910 Series

3910 - 951 5/0 POSTER HEADBOARD
3910 - 953 5/0 POSTER FOOTBOARD
3910 - 880 5/0 - 6/6 RAILS




1060 E. Springfield Rd.
High Point, NC 27263
(336)861-0003

CARTON 1

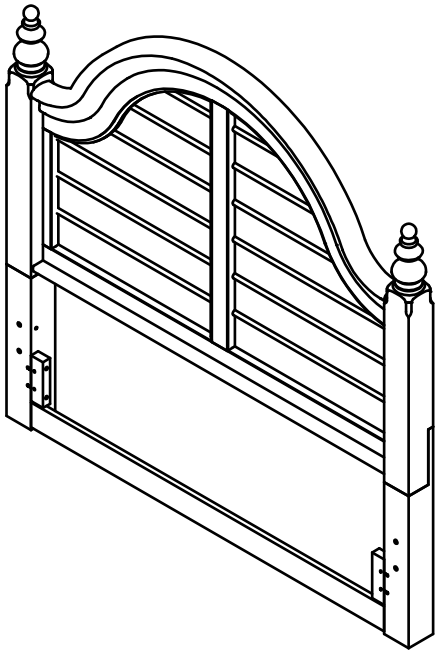

5/0 Poster Headboard.....1 Pc


CARTON 2

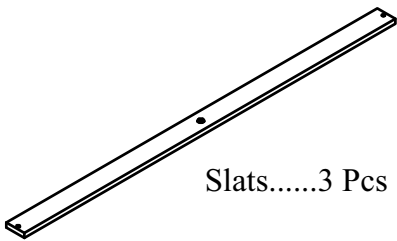

Slats.....3 Pcs




Slats Support.....3 Pcs

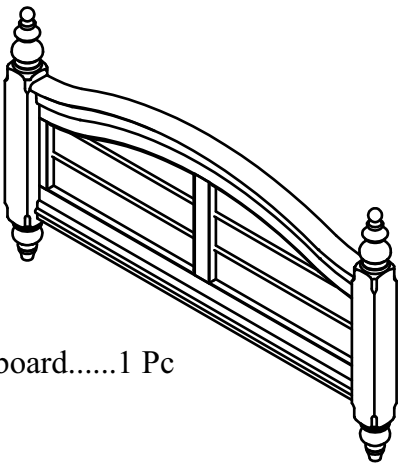

5/0 Poster Footboard.....1 Pc

CARTON 3

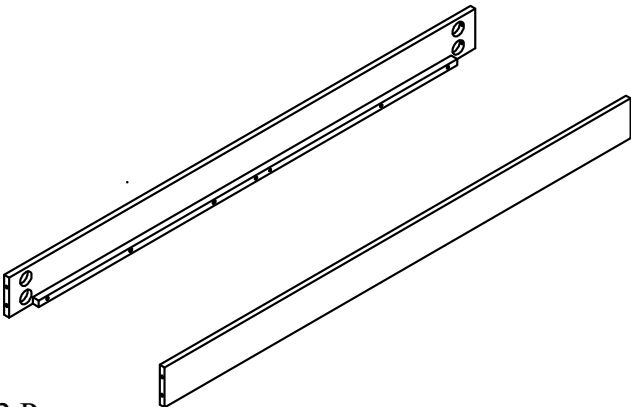

5/0 6/6 Rails.....2 Pcs