

# Ridgeline Mount For Starlink

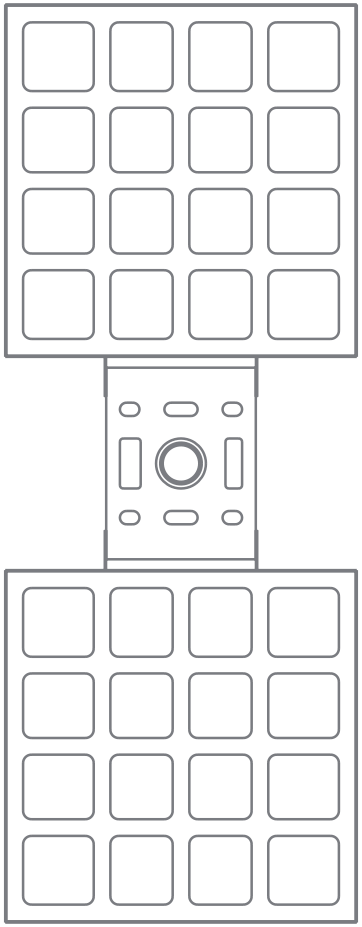

STARLINK

SETUP

# Additional Items Needed



Or




(4) Concrete Blocks
8 in. x 2 in. x 16 in.
~20 lbs.


(16) Standard Bricks
8 in. x 2-1/4 in. x 4 in.
5 lbs.

INSTALLATION


# Install Instructions

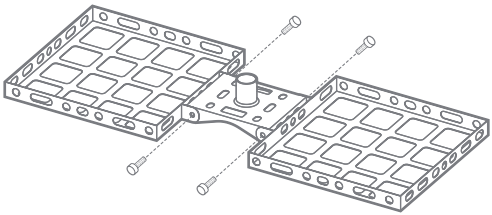

1.Assemble the bracket, insert the four screws and tighten the nuts

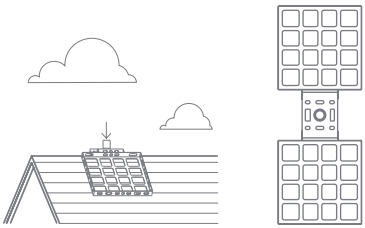

2. Unlock mount, open flat andplace over the roof.
Adjust the nuts to keep the rack close to the roof.

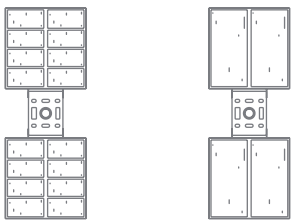


Bricks

Concrete Blocks

3. Add 40 lbs of ballast to each side of the mount, arranged as shown above.


# Install Instructions

4. Remove Kickstand
Squeeze the release tab and pull it away from its fixed location.

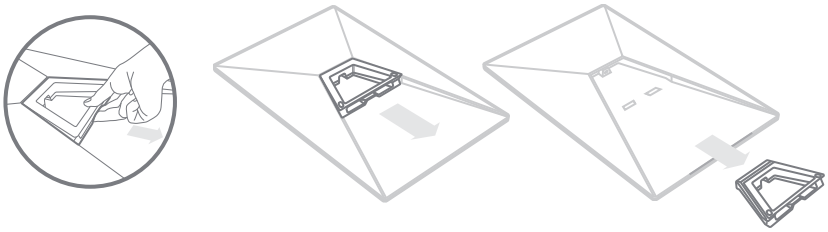

5. Route Cable Through Pipe Adapter


Route Cable Through Pipe AdapterRoute the Starlink cable through the opening inthe pipe adapter .

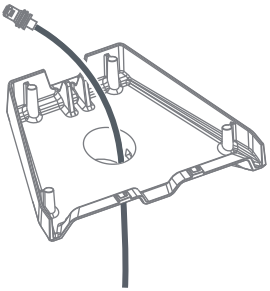

6. Plug in Cable and Install Pipe Adapter
Plug the cable into your Starlink.


Ensure the plug is fully inserted such that the plug face is  Flush with the surface.

Next, slide the adapter in until it clicks into place.

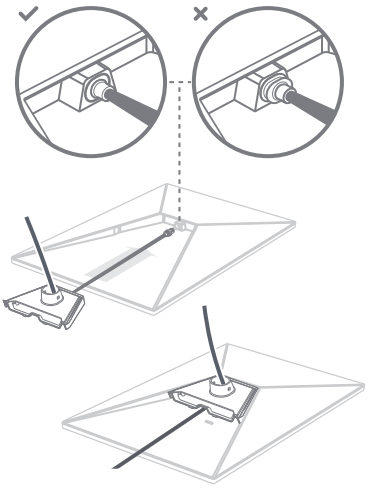


# Install Instructions

7. Mount Starlink to Pole
Loosen the locking screw and slide the Pipe AdapterMount onto your mounting pipe.Temporarily tightenthe locking screw to stabilize Starlink onto pipe.
Connect the other end of the Starlink cable to routerand plug in router power.

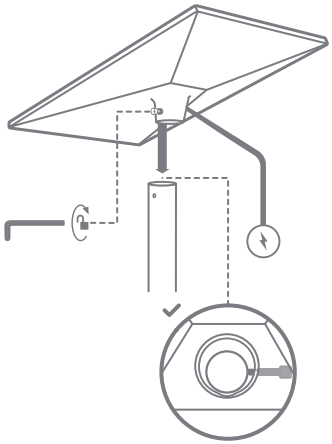

8. Place the mast of the Starlink into the hole at the center of the mount.

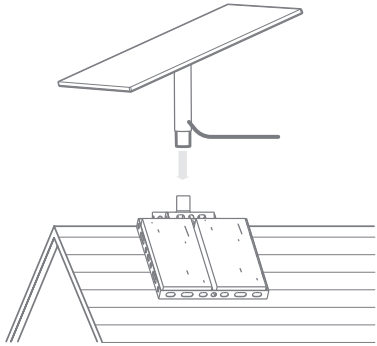

9. Align and Lock Your Starlink
An alert on the App will show if you need to rotate Starlink to be properly aligned.

Click the alert to use the alignment tool. Once aligned, tighten the thumb-screw on the mast to prevent rotation.

