



HARMONIZE AND INSTALL BULBS


1. Adjust the Balance

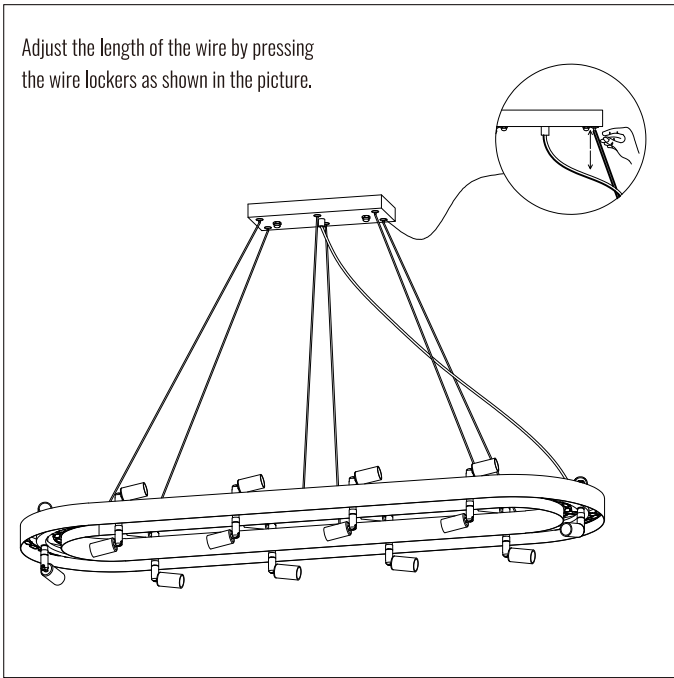


2. Install the Bulbs

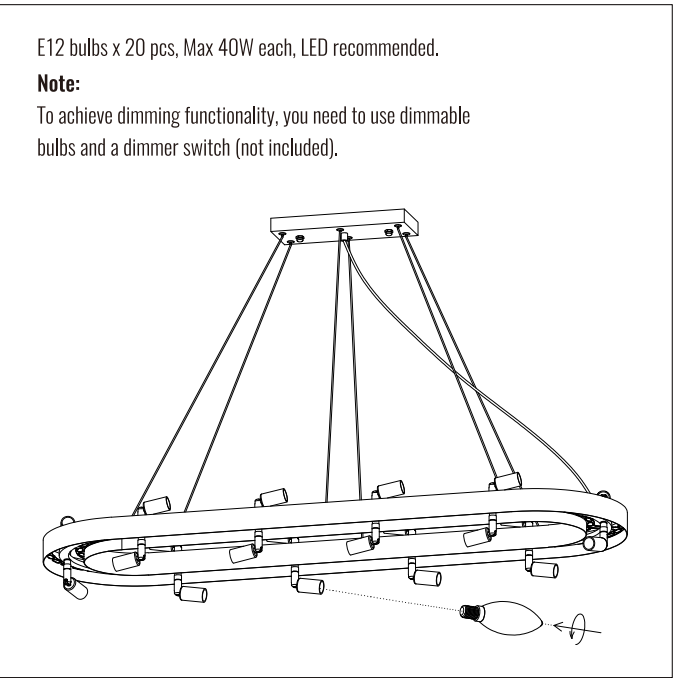

INSTALL THE CRYSTALS

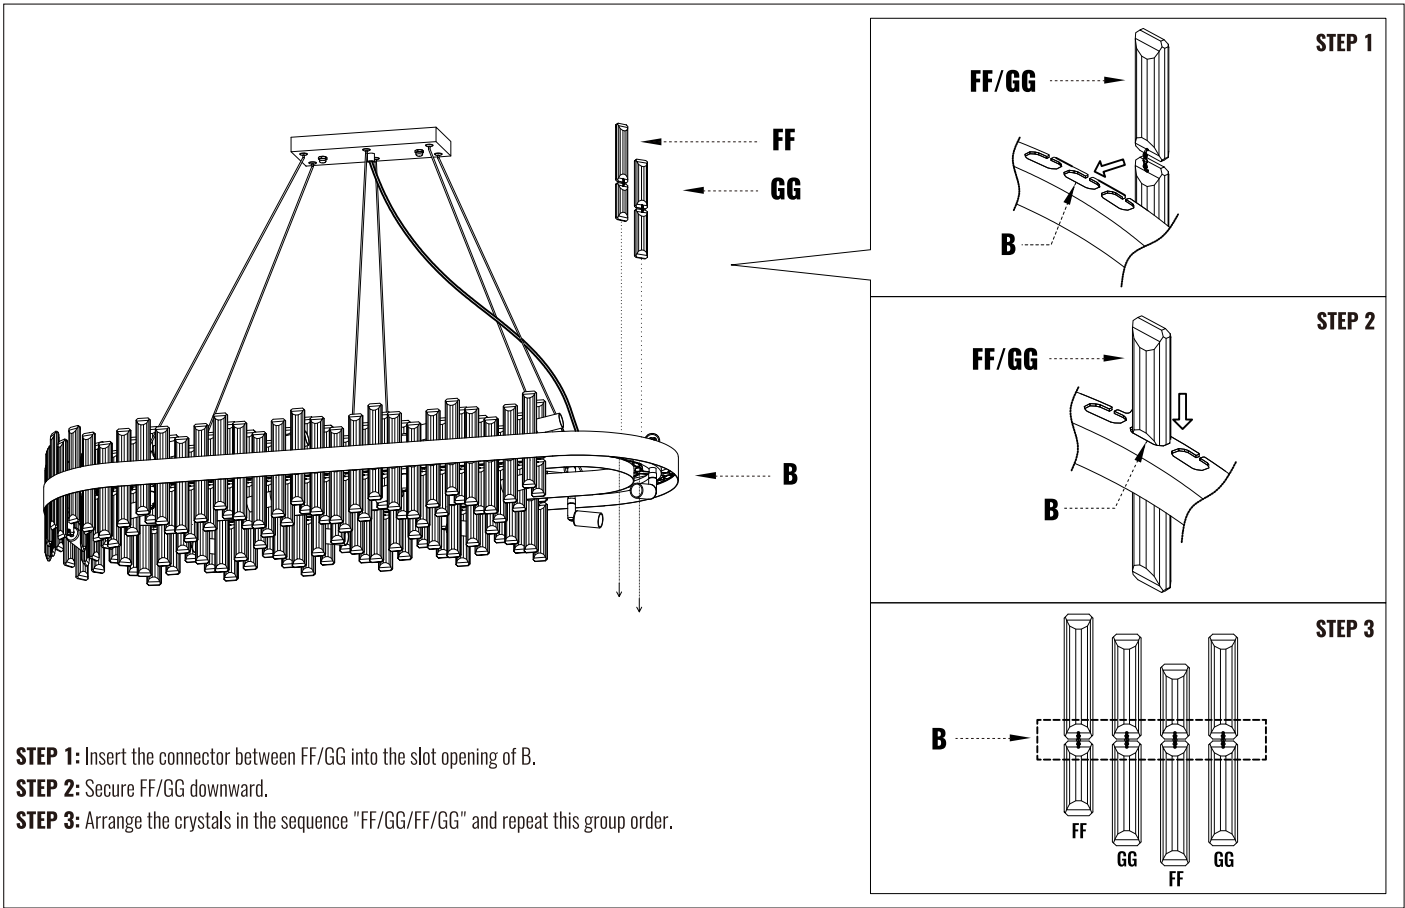

INSTALLATION  
MANUAL  
CHANDELIER

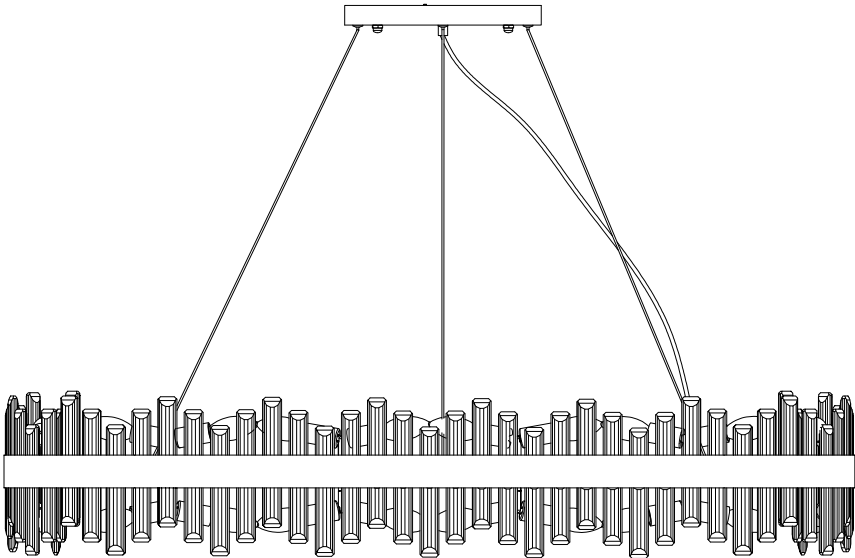

TOOLS REQUIRED


Ladder

Pliers









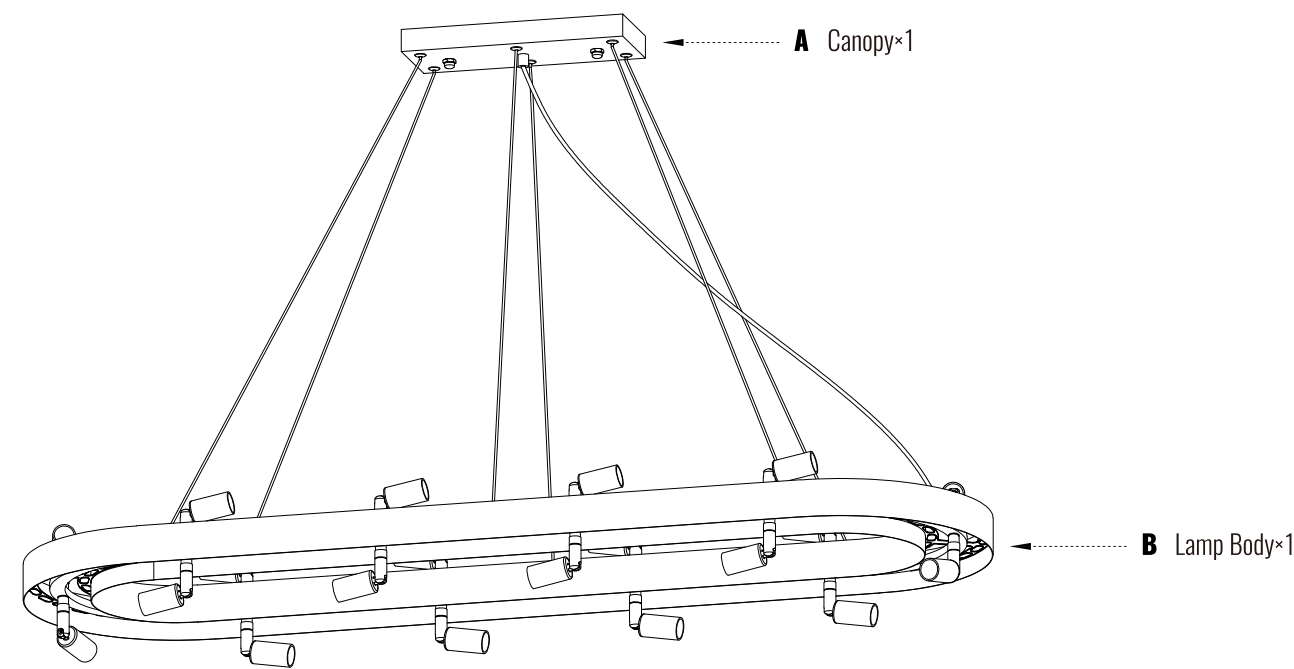


Wire Strippers

Screwdrivers

PACKING LIST




INSTALLATION KIT

<b>AA</b>  Mounting Bracket 1×	<b>BB</b>  Mounting Screw 2×	<b>CC</b>  Ground Screw 1×	<b>DD</b>  Wire Nut 3×	<b>EE</b>  Kneued Nut 2×
<b>FF</b>  Crystal A 72×	<b>GG</b>  Crystal B 72×	<b>HH</b>  Washer 2×	<b>II</b>  Wood Screw 2×	<b>JJ</b>  Plastic Anchor 2×
<b>KK</b>  Gloves 1×				

**NOTE:**  
1. CC is pre-installed on AA, AA/EE is pre-installed on A.  
2. FF/GG has two spare part for backup.

MOUNTING AND WIRE


1. Install the Mounting Bracket

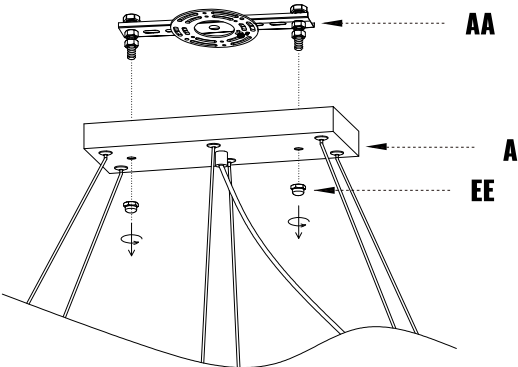


**STEP 1:** Loosen the kneued nut (EE) from canopy (A), take out the mounting bracket (AA).

**STEP 2:** Take off the screws from outlet box, secure the mounting bracket (AA) onto the box with screws taken off or screws provided (BB).

**STEP 3:** Secure two ends of the Bracket on the ceiling with plastic anchor (JJ) and wood screw (HH) with washer (EE).

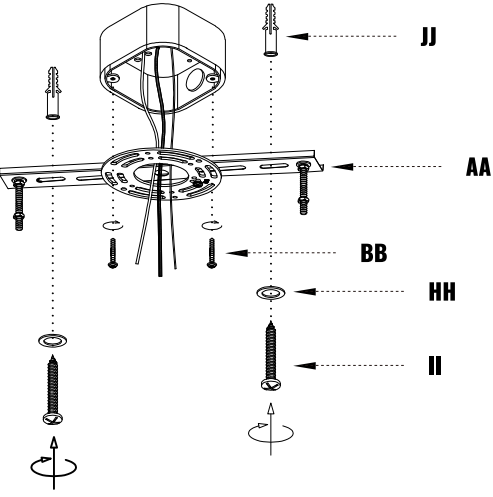


2. Connect the Wires

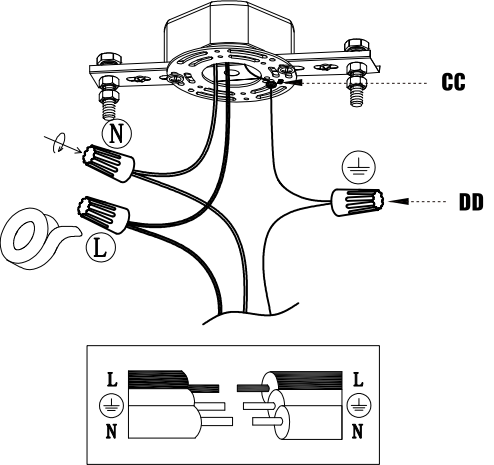

**STEP 1:** Connect the wires from the fixture to the house supply wires with wire nuts (DD), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

**STEP 2:** Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

3. Fix the Canopy

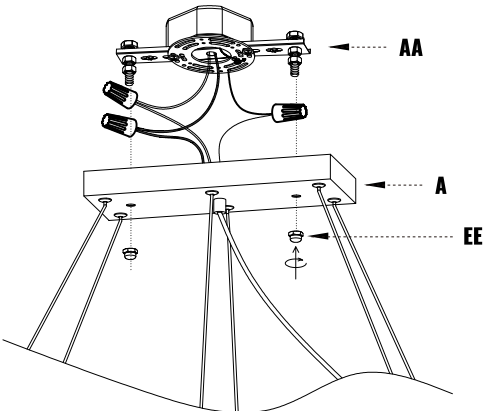

Fix the canopy (A) onto the mounting bracket (AA) with kneued nuts (EE) taken off.