

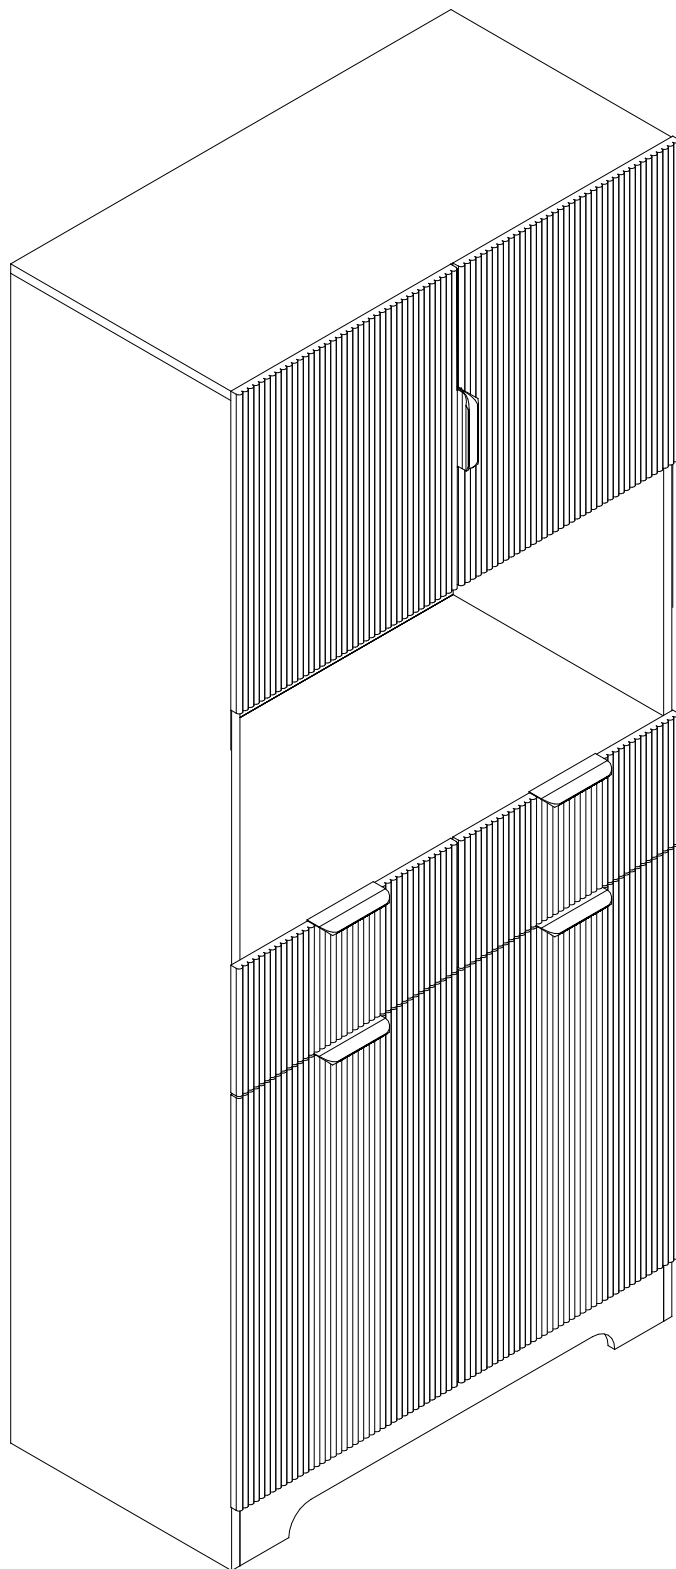
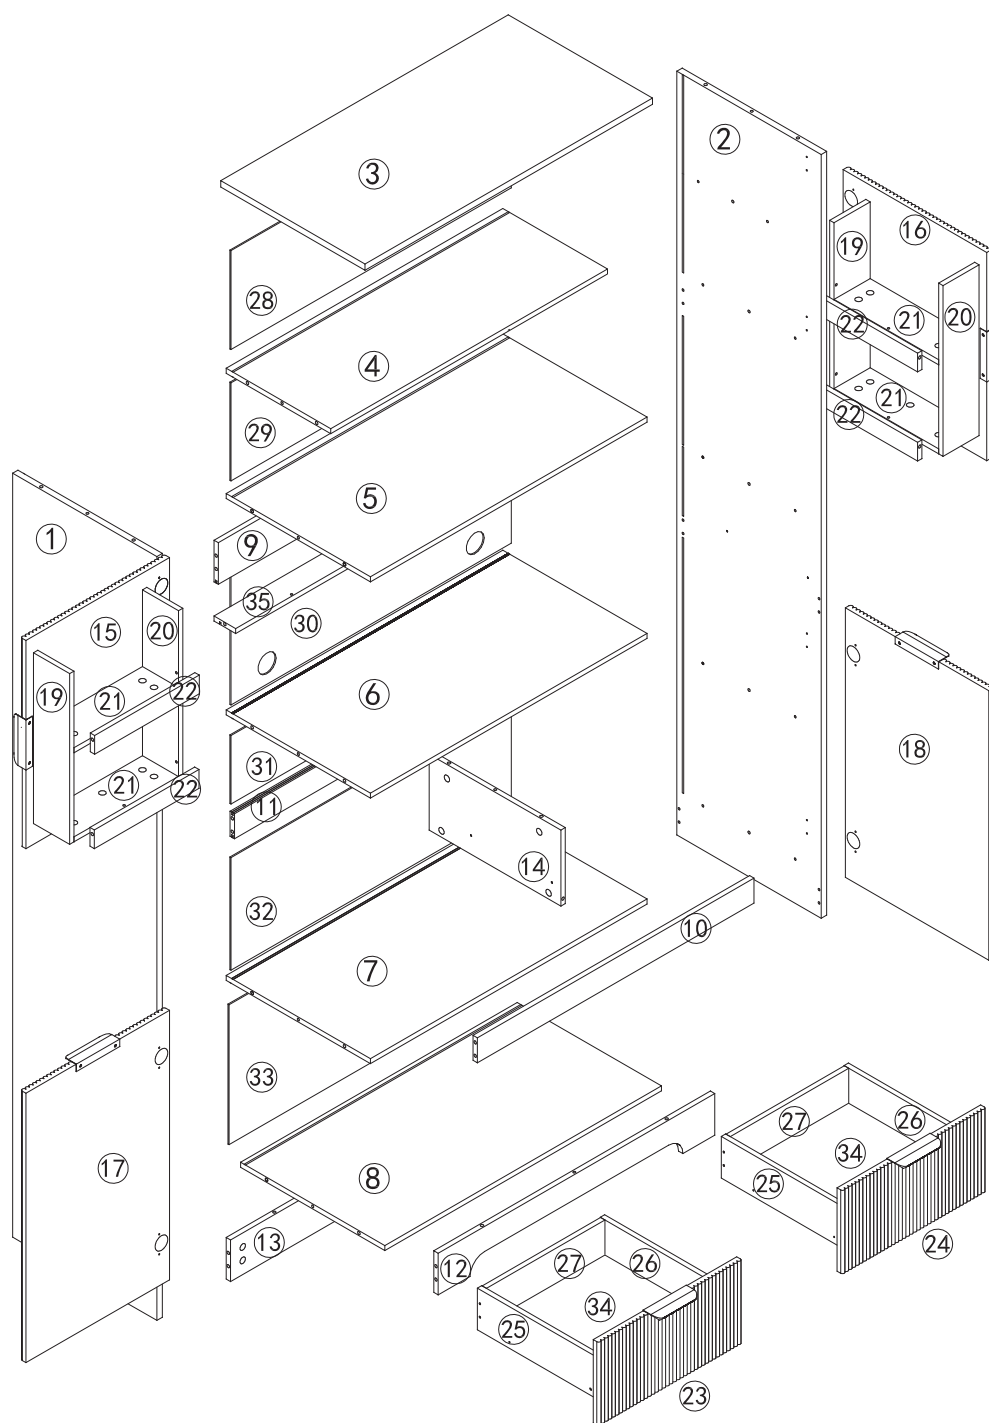







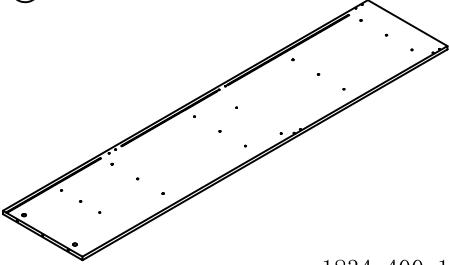
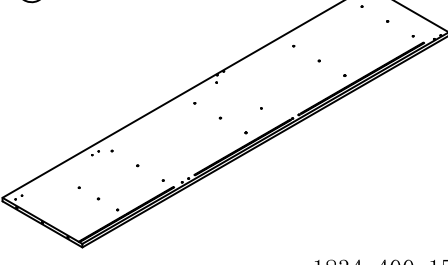
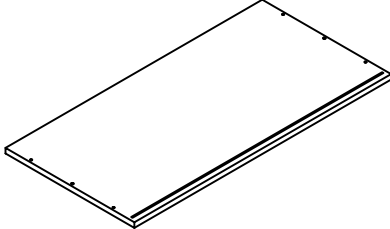
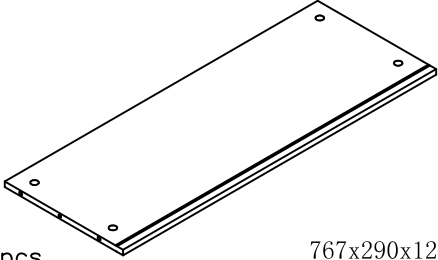
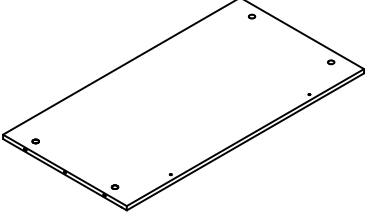
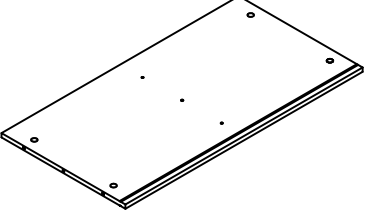
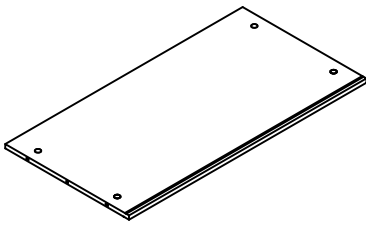
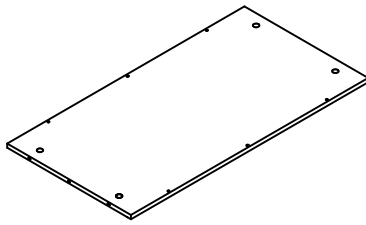
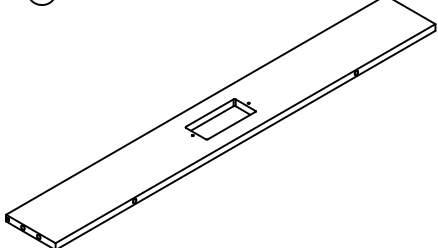
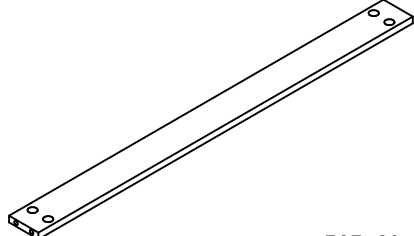
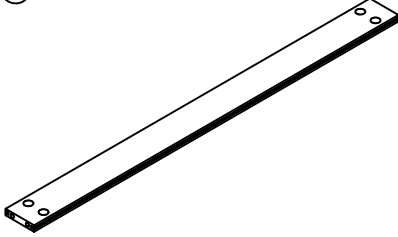
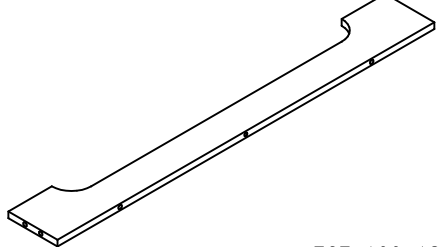
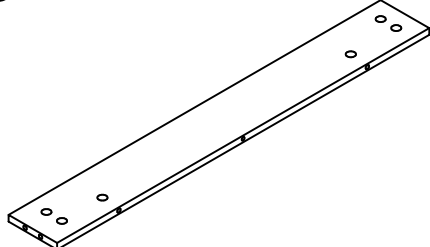
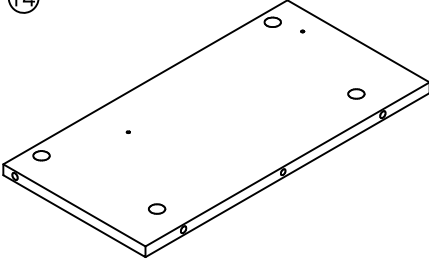
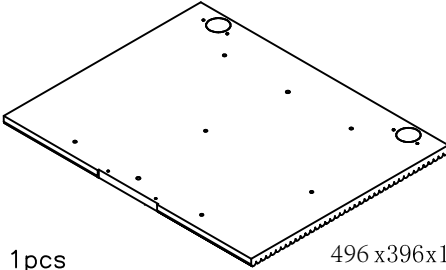
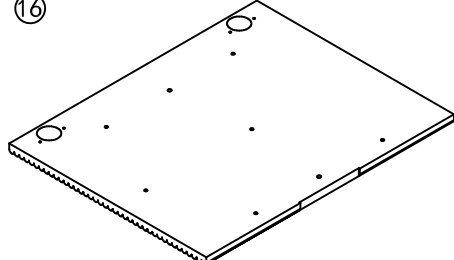



















Installation & Assembly



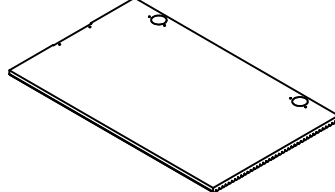


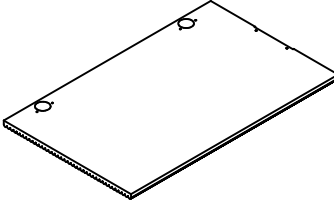



A  106pcs	B  106pcs	C $\Phi 6 \times 40$  19 pcs	D M3. 5*35  8pcs	E M3. 5*12  78 pcs	F  6pcs
G  350mm 2pcs	H  8pcs	I  1pcs	J  2pcs	K  3*14 24pcs	



①  1pcs 1834x400x15	②  1pcs 1834x400x15	③  1pcs 799x400x15
④  1pcs 767x290x12	⑤  1pcs 767x400x12	⑥  1pcs 767x400x12
⑦  1pcs 767x400x12	⑧  1pcs 767x400x12	⑨  1pcs 767x100x12
⑩  1pcs 767x60x12	⑪  1pcs 767x60x12	⑫  1pcs 767x100x12
⑬  1pcs 767x100x12	⑭  1pcs 365x182.5x12	⑮  1pcs 496 x396x15
⑯  1pcs 496 x396x15	⑰  1pcs 647x396x15	⑱  1pcs 647x396x15

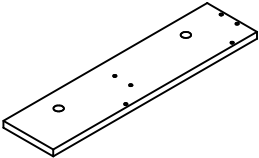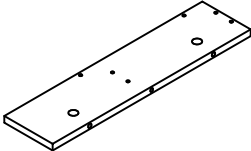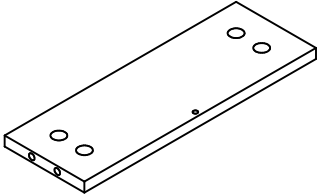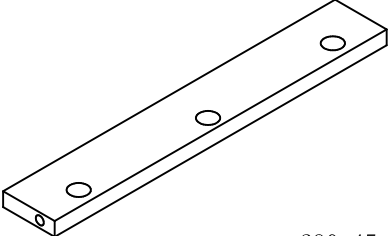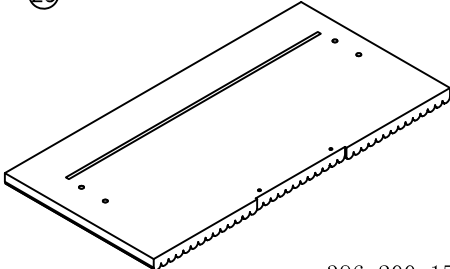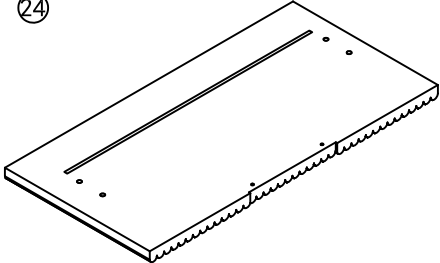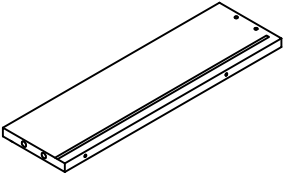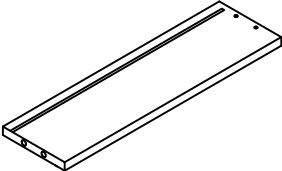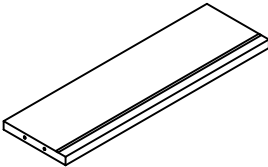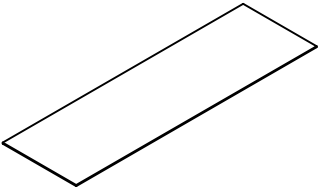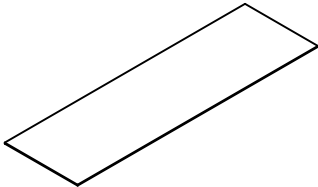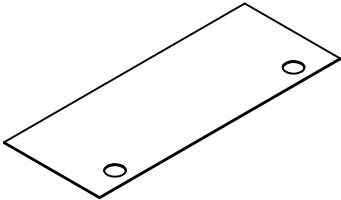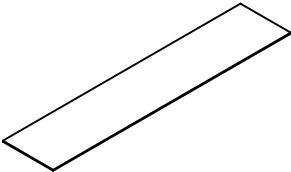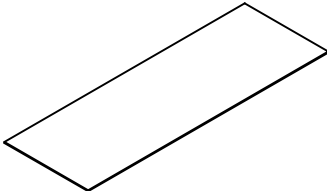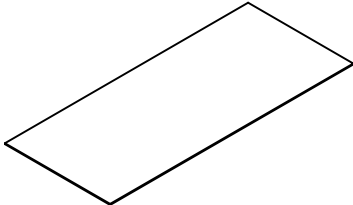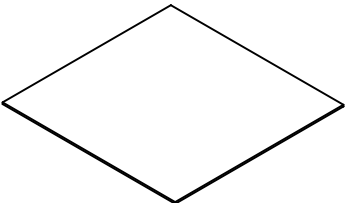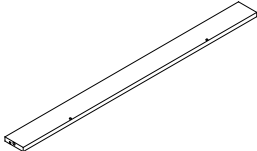
①9  2pcs 410x100x12	②0  2pcs 410x100x12	②1  4pcs 290x100x12
②2  4pcs 290x45x12	②3  1pcs 396x200x15	②4  1pcs 396x200x15
②5  2pcs 350x100x12	②6  2pcs 350x100x12	②7  2pcs 328.5x100x12
②8  1pcs 777x238x3	②9  1pcs 777x236x3	③0  1pcs 777x307x3
③1  1pcs 777x164x3	③2  1pcs 777x269x3	③3  1pcs 777x336x3
③4  2pcs 345.5x336x3	③5  1pcs 767x60x12	




G  CR CL 2pcs	A  4pcs	C Φ 6*40  2pcs	E M3.5*12  4pcs
--	--	---	--

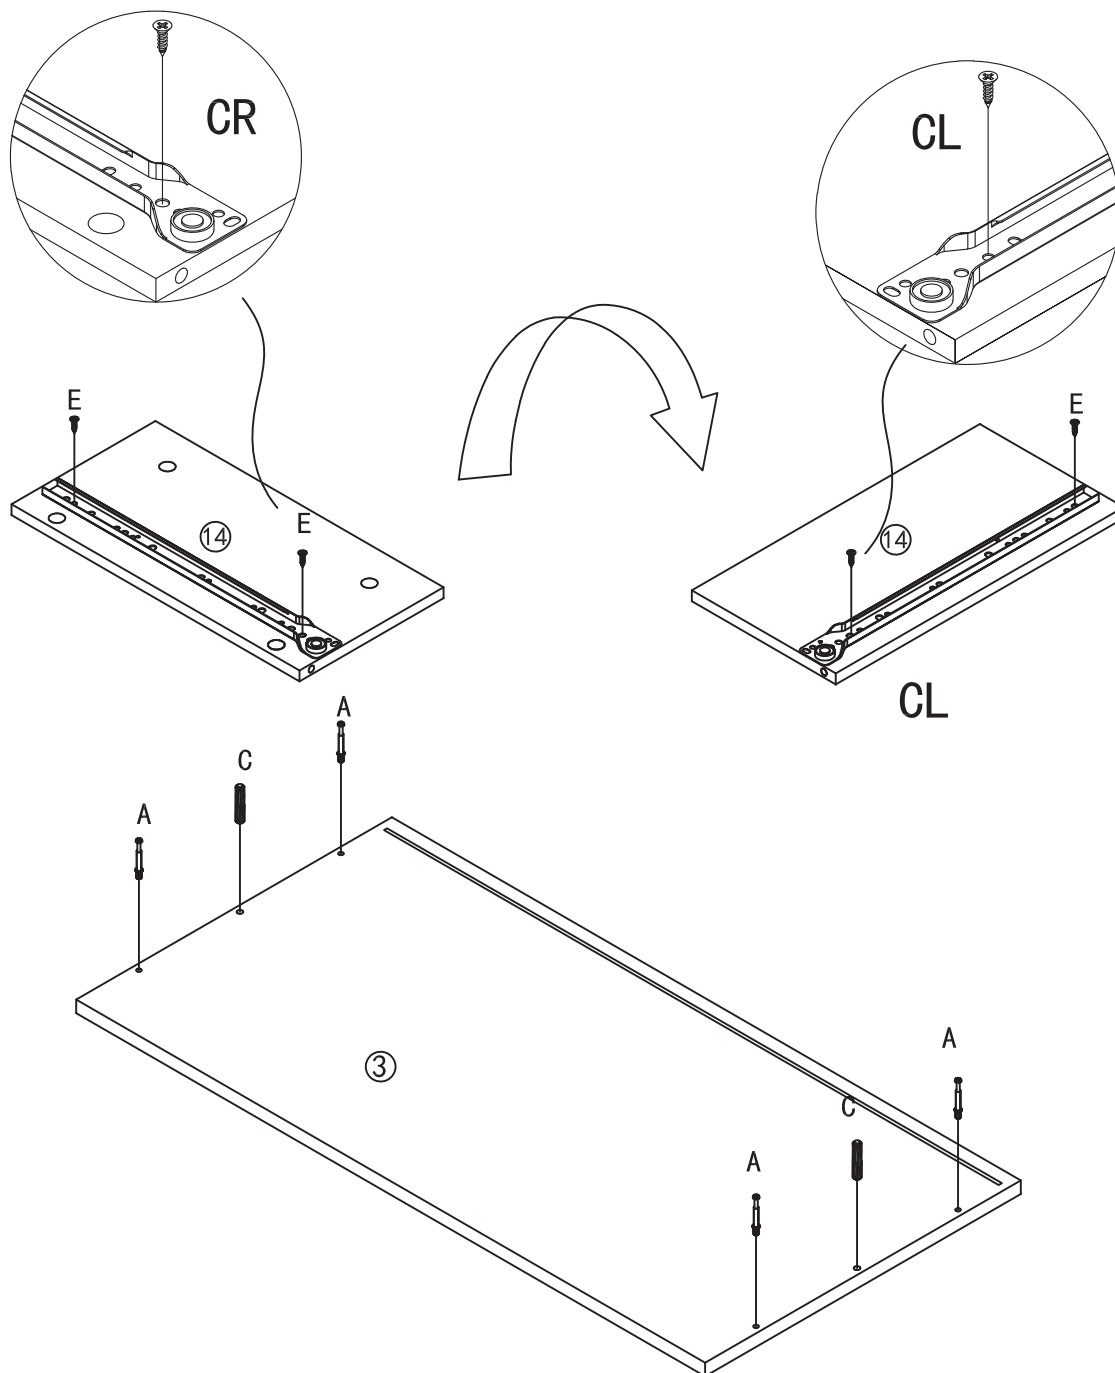







G  CR CL 2pcs	A  42pcs	C Φ 6*40  10pcs	E M3.5*12  4pcs
---	--	---	---

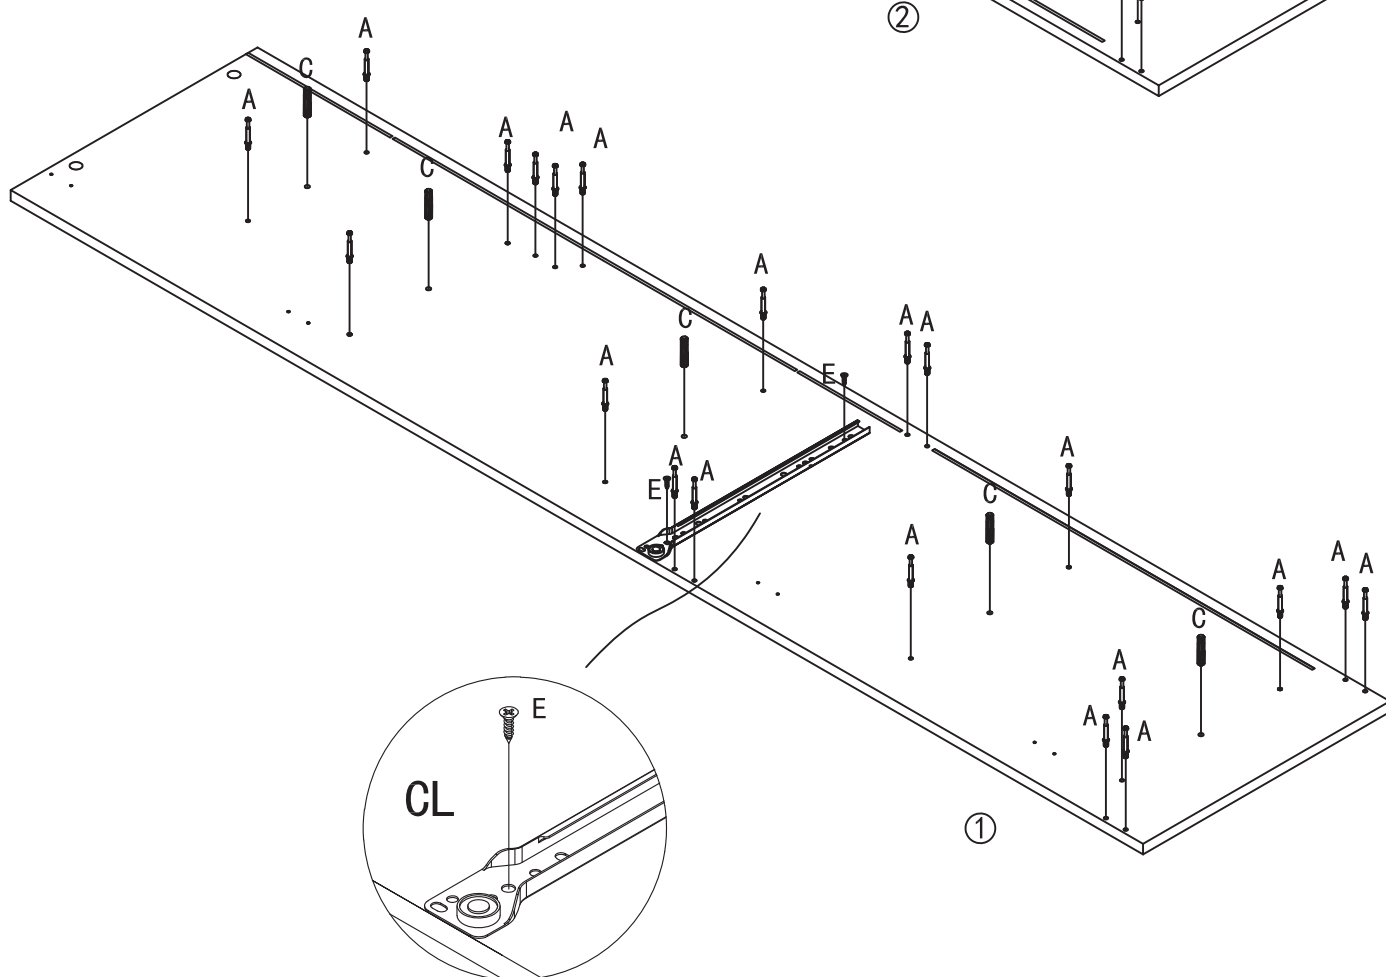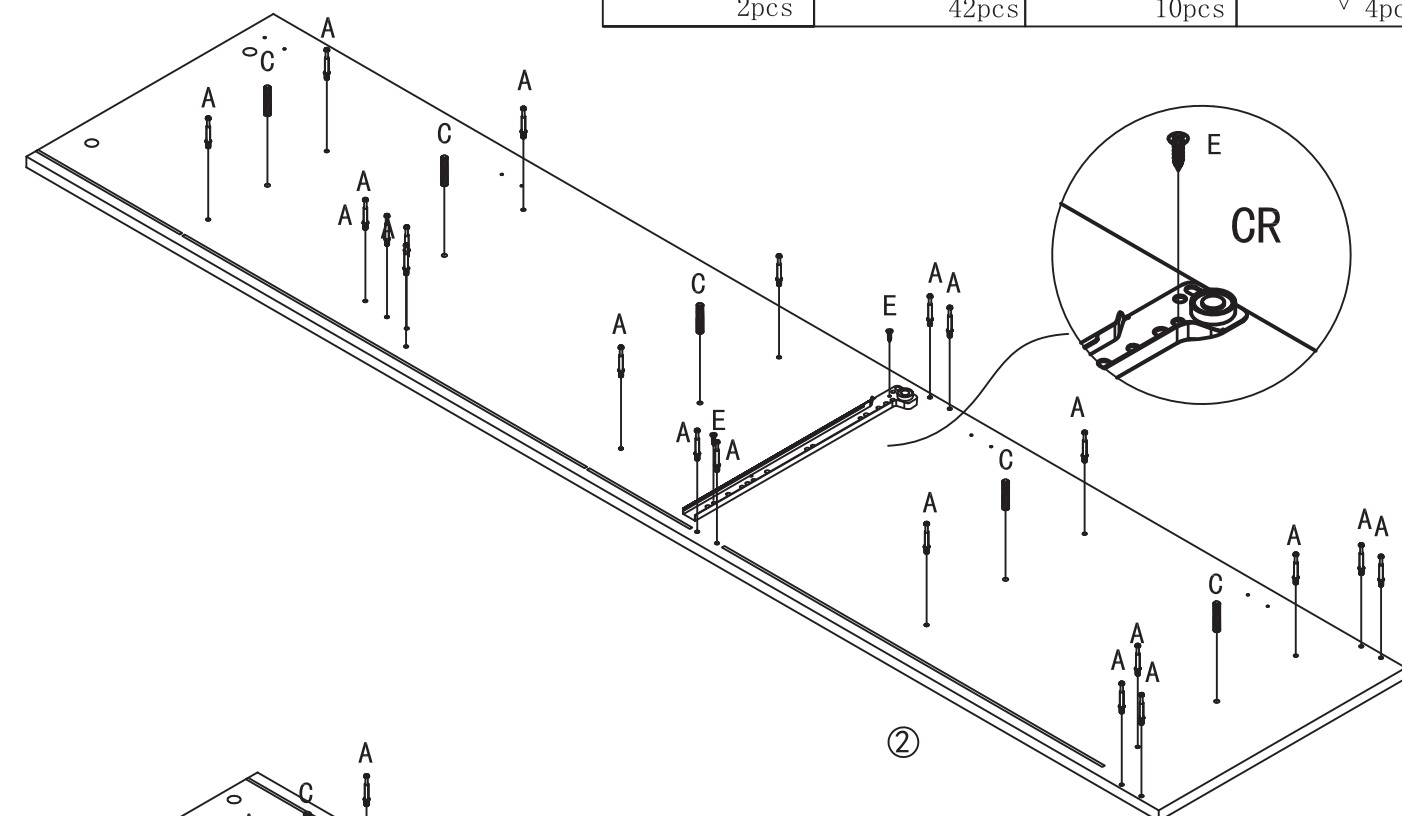

A  4pcs	B  4pcs	C Φ 6*40  1pcs
---	--	--

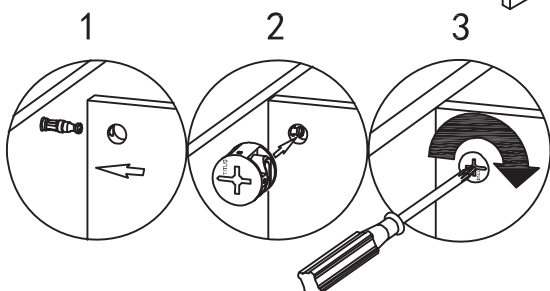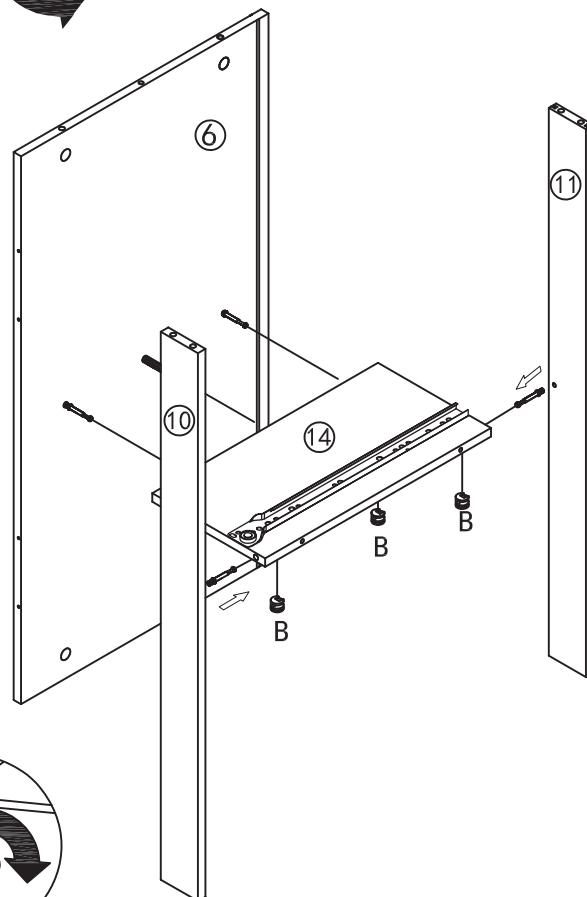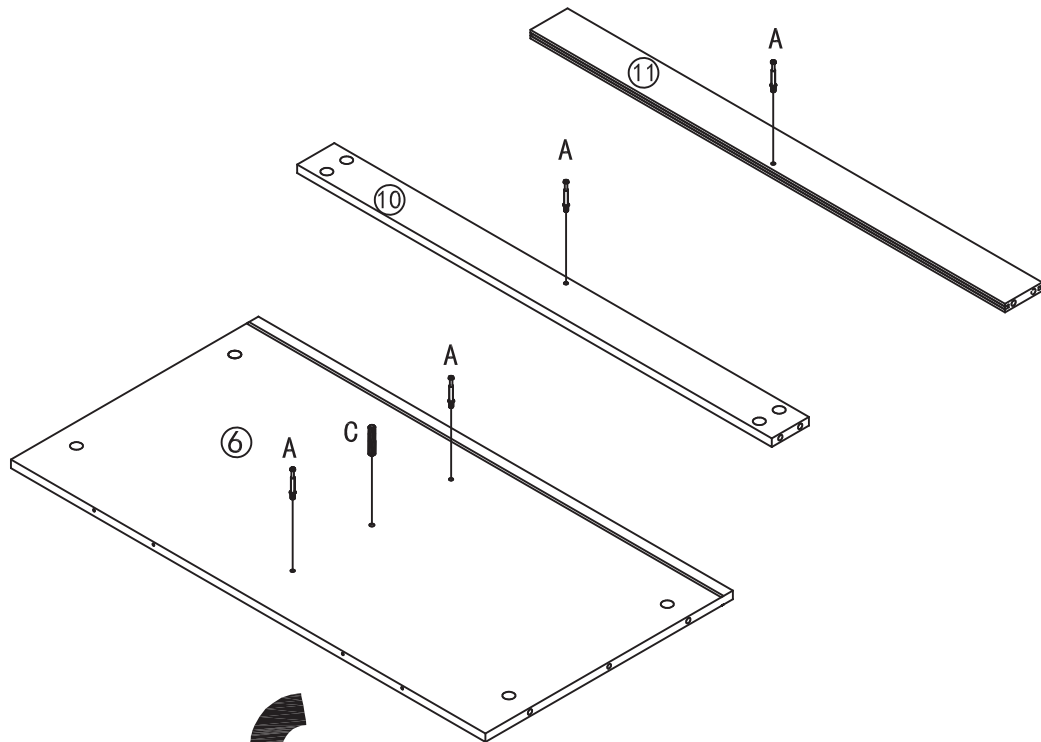

A  8pcs	B  8pcs	C Φ 6*40  2pcs
---	--	--

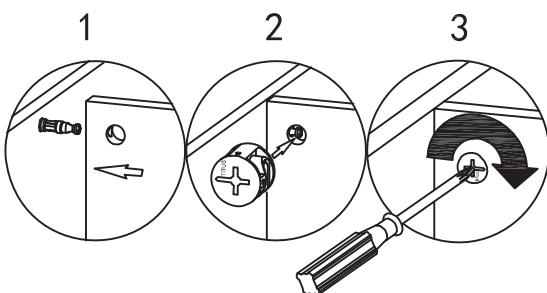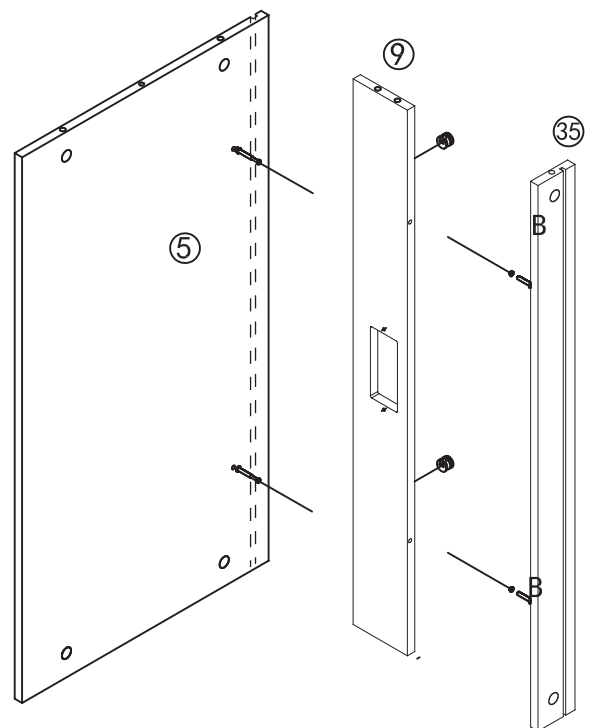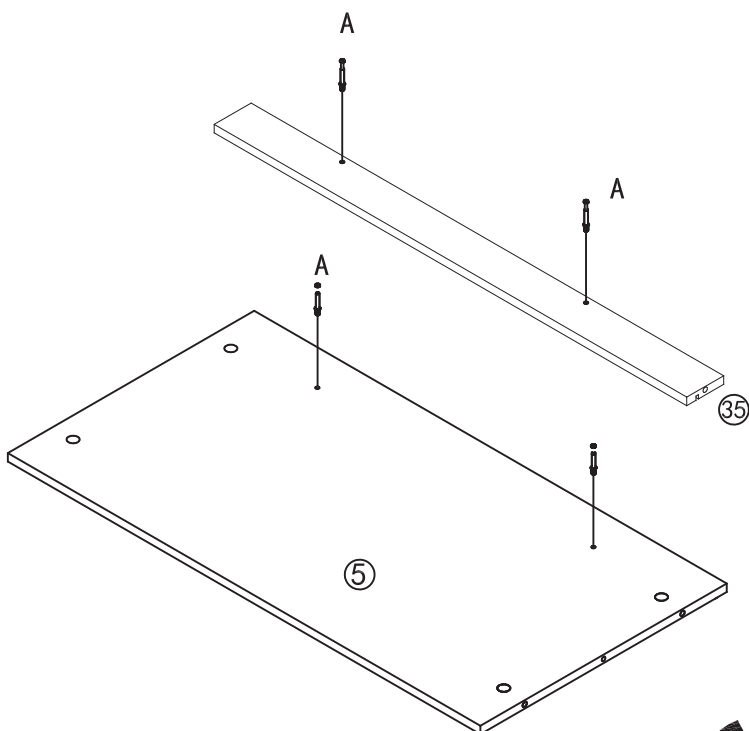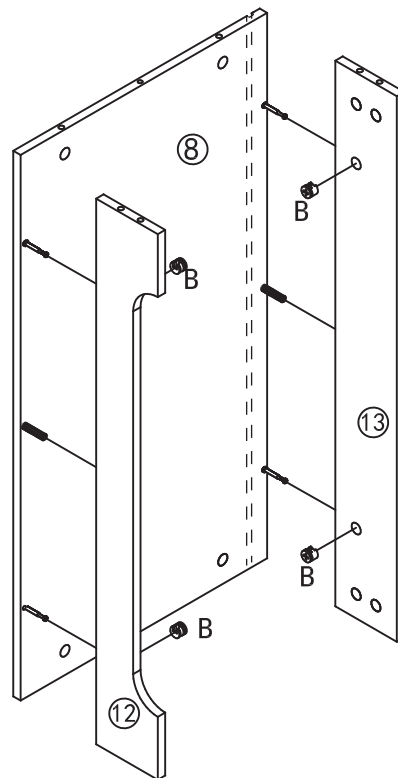
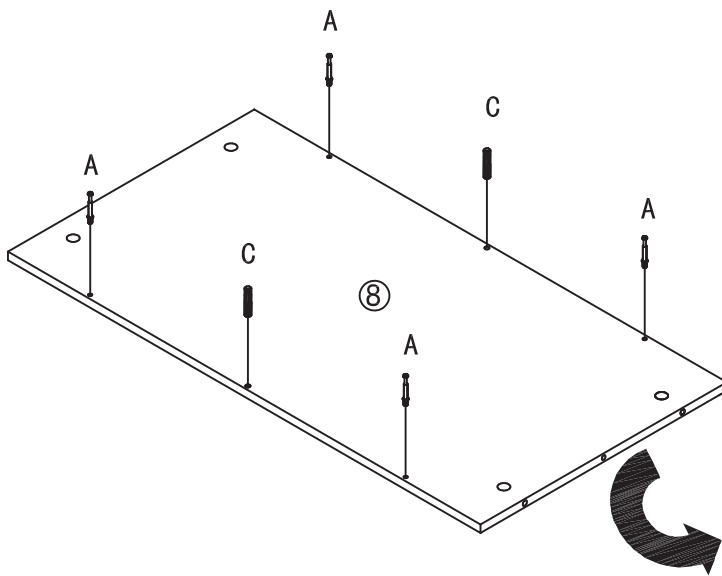


4


B






21pcs

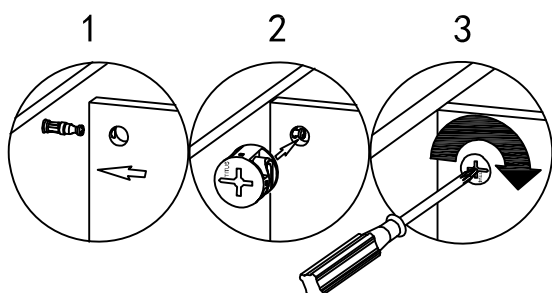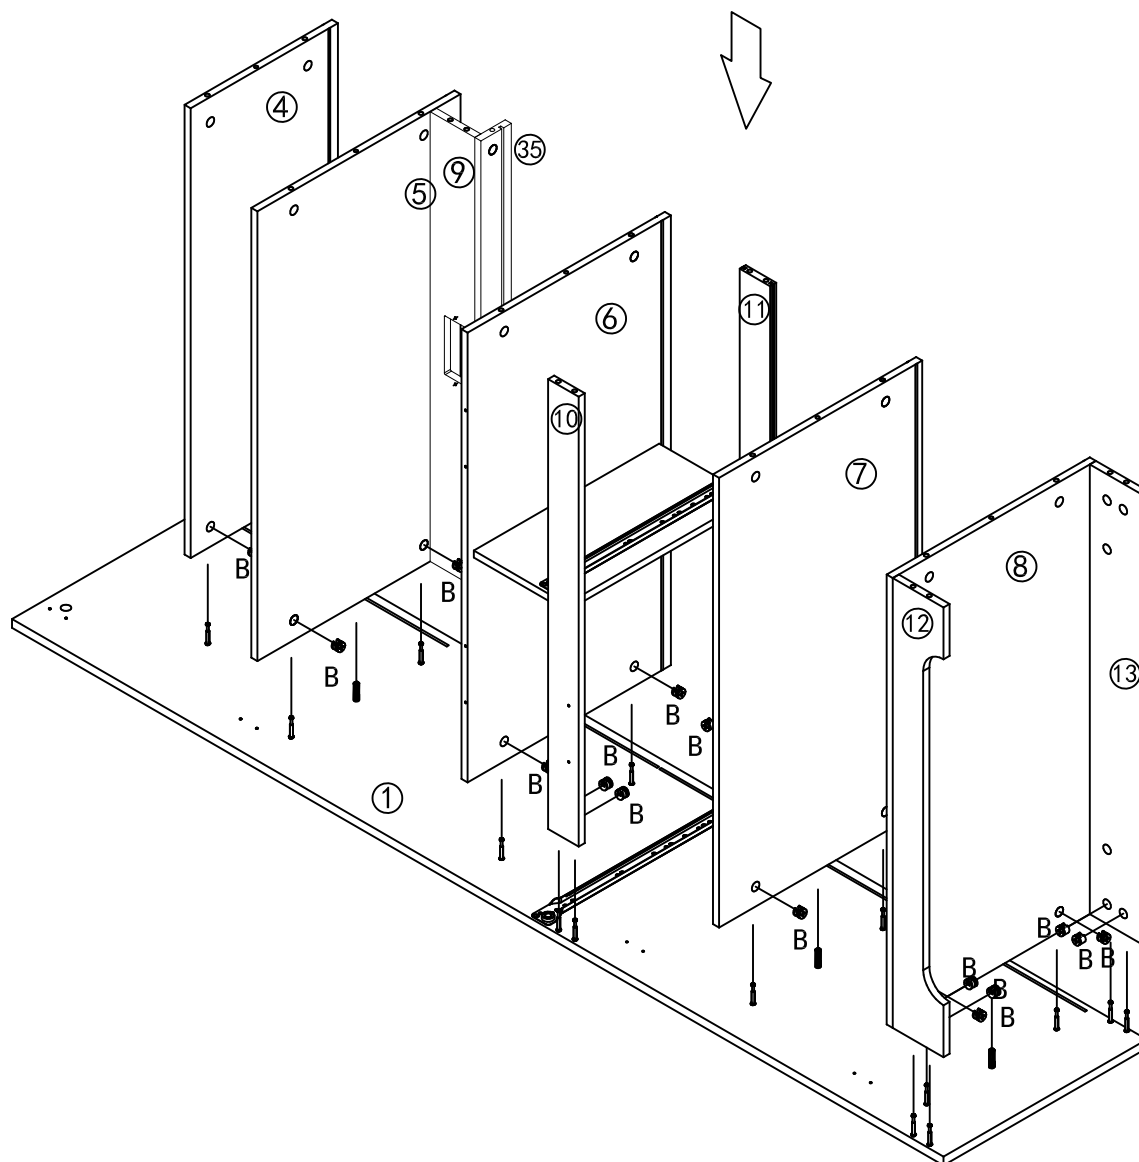

5

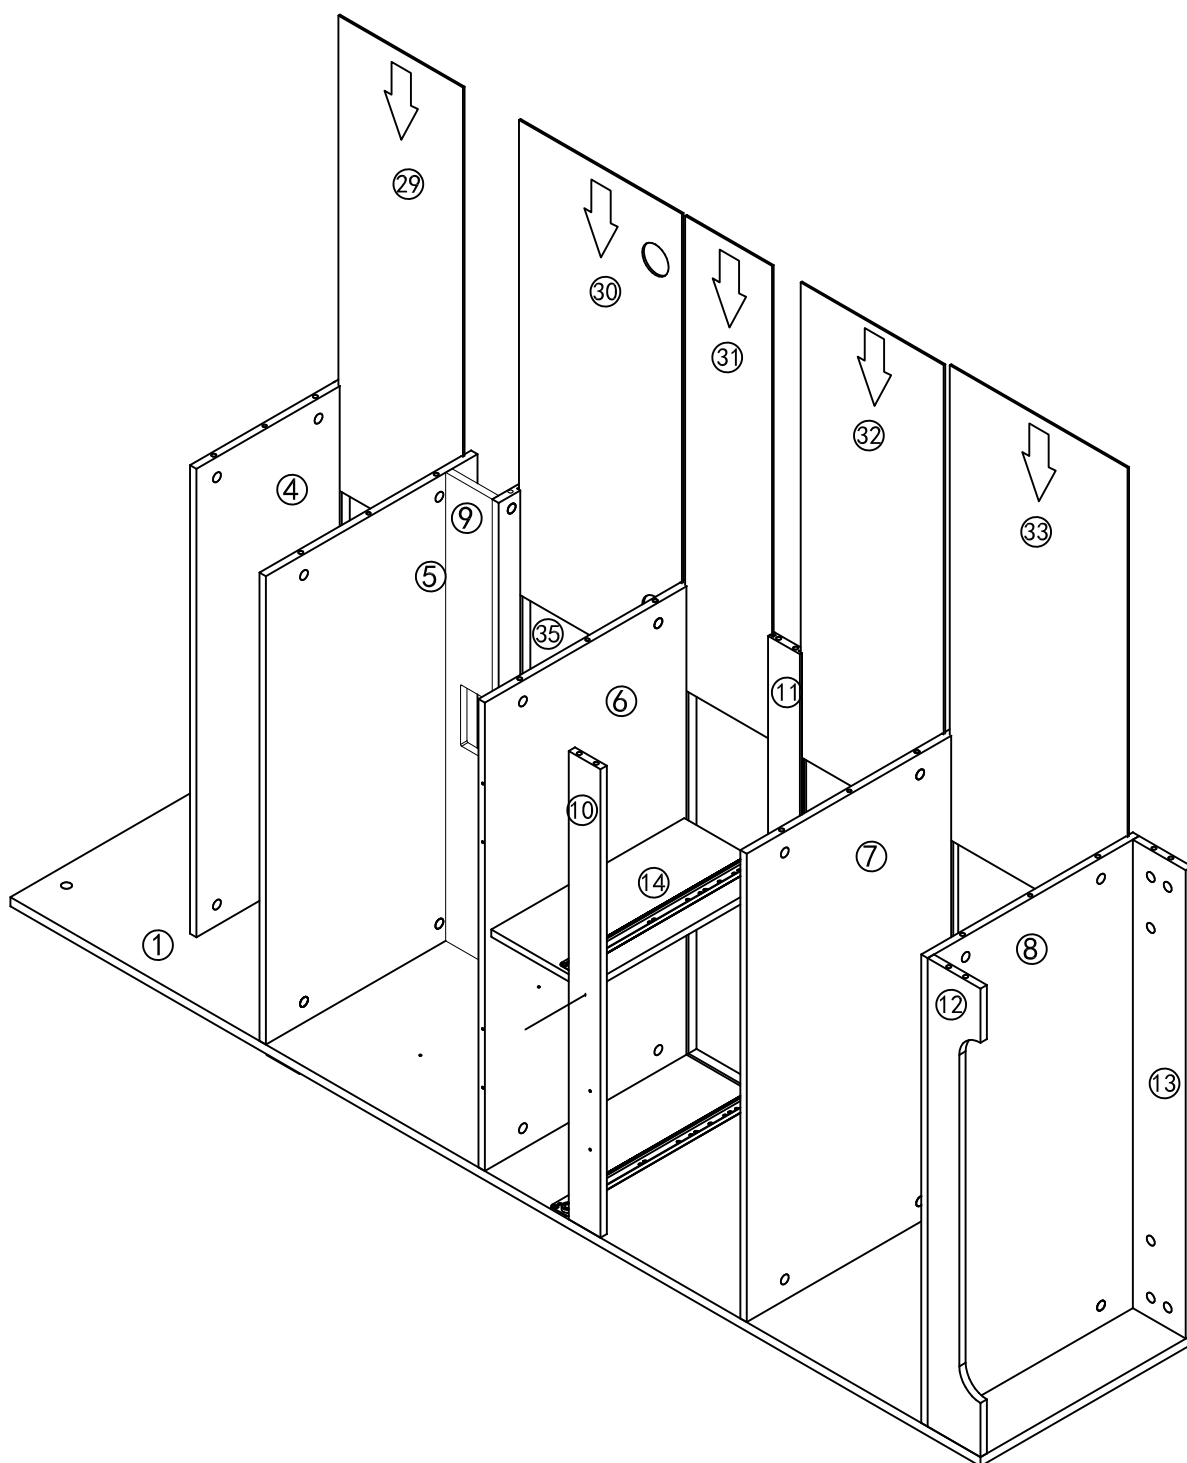

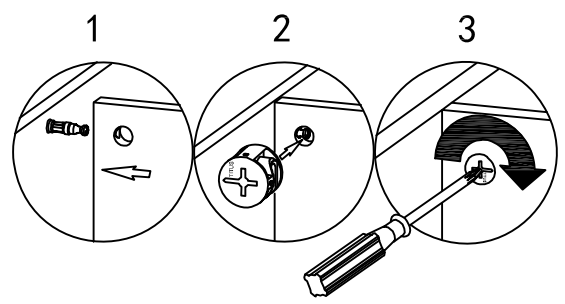
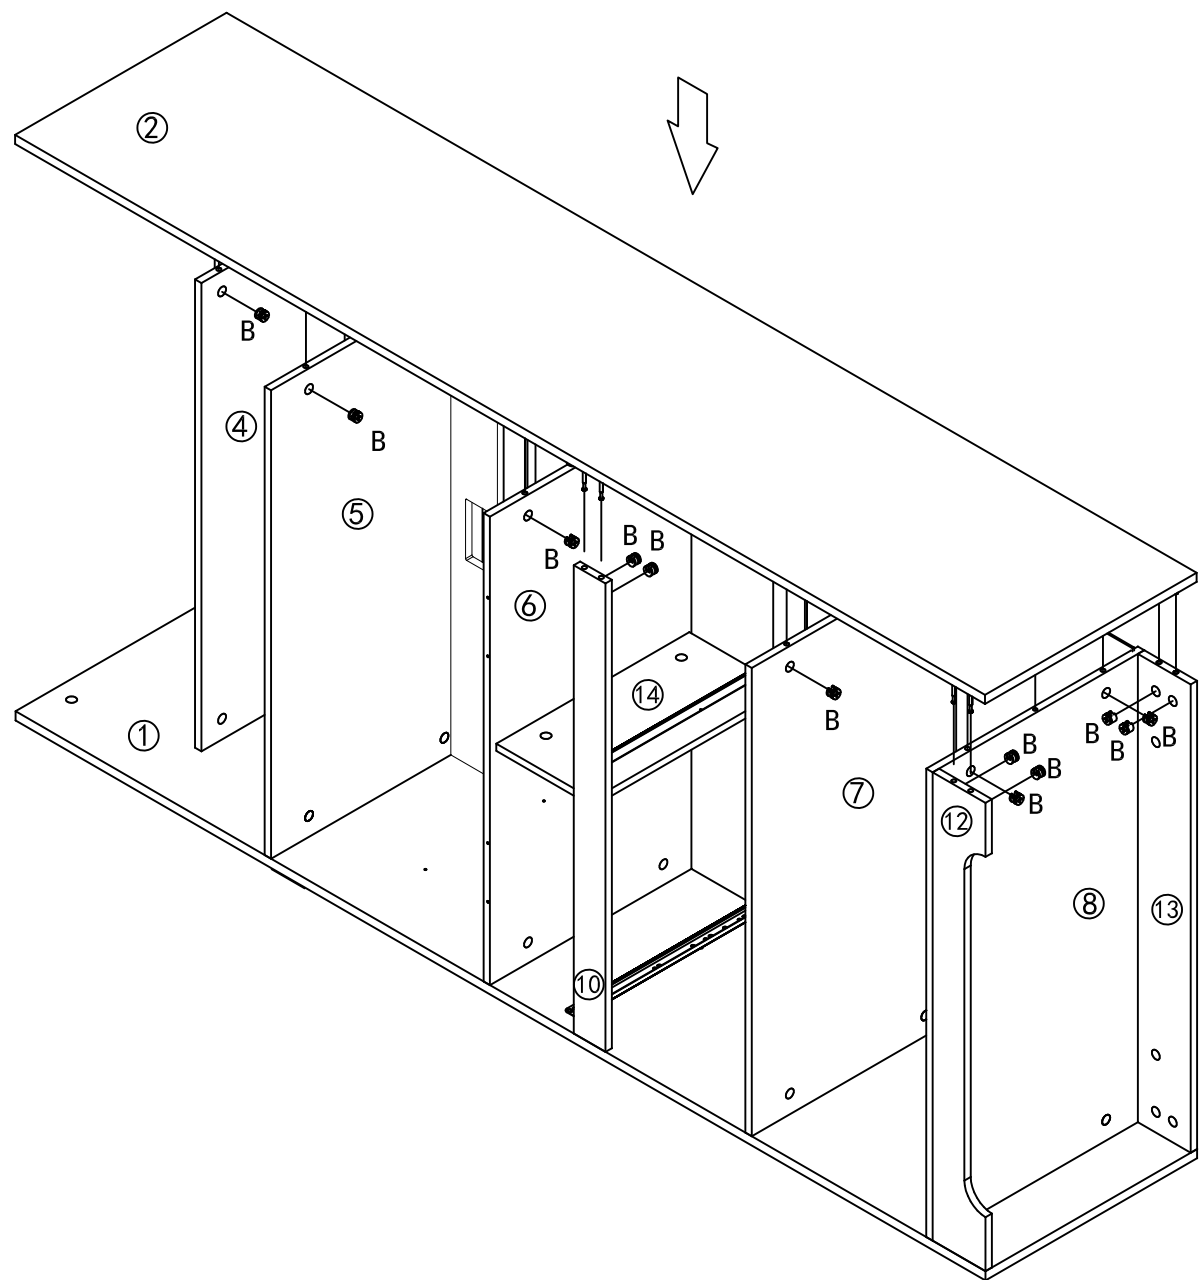


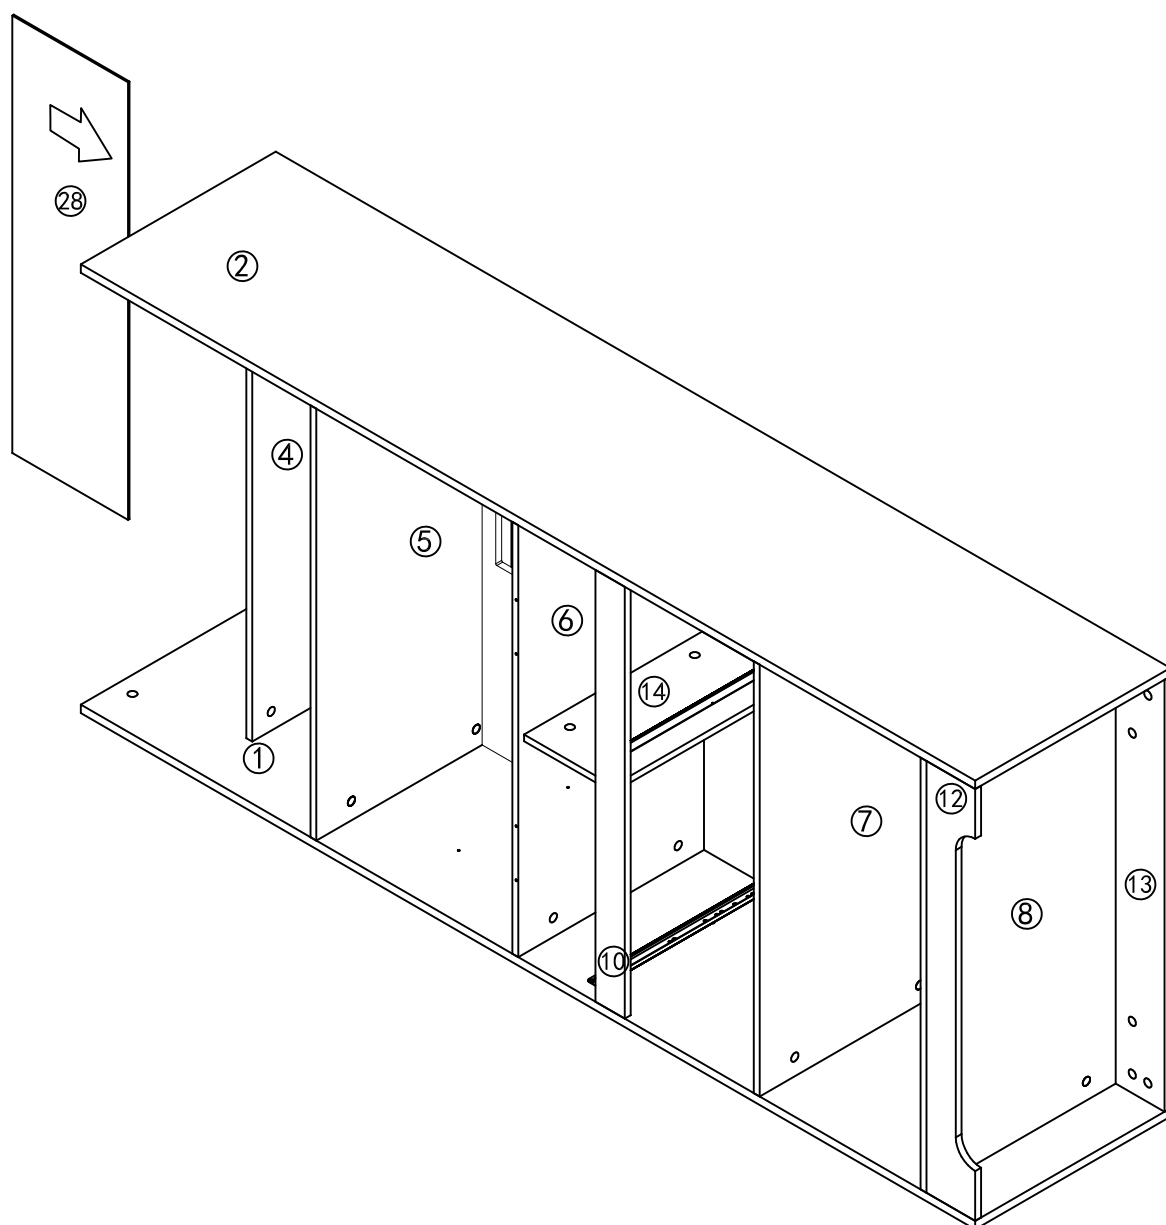





B




4pcs



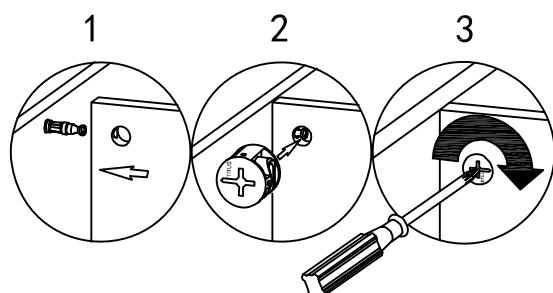
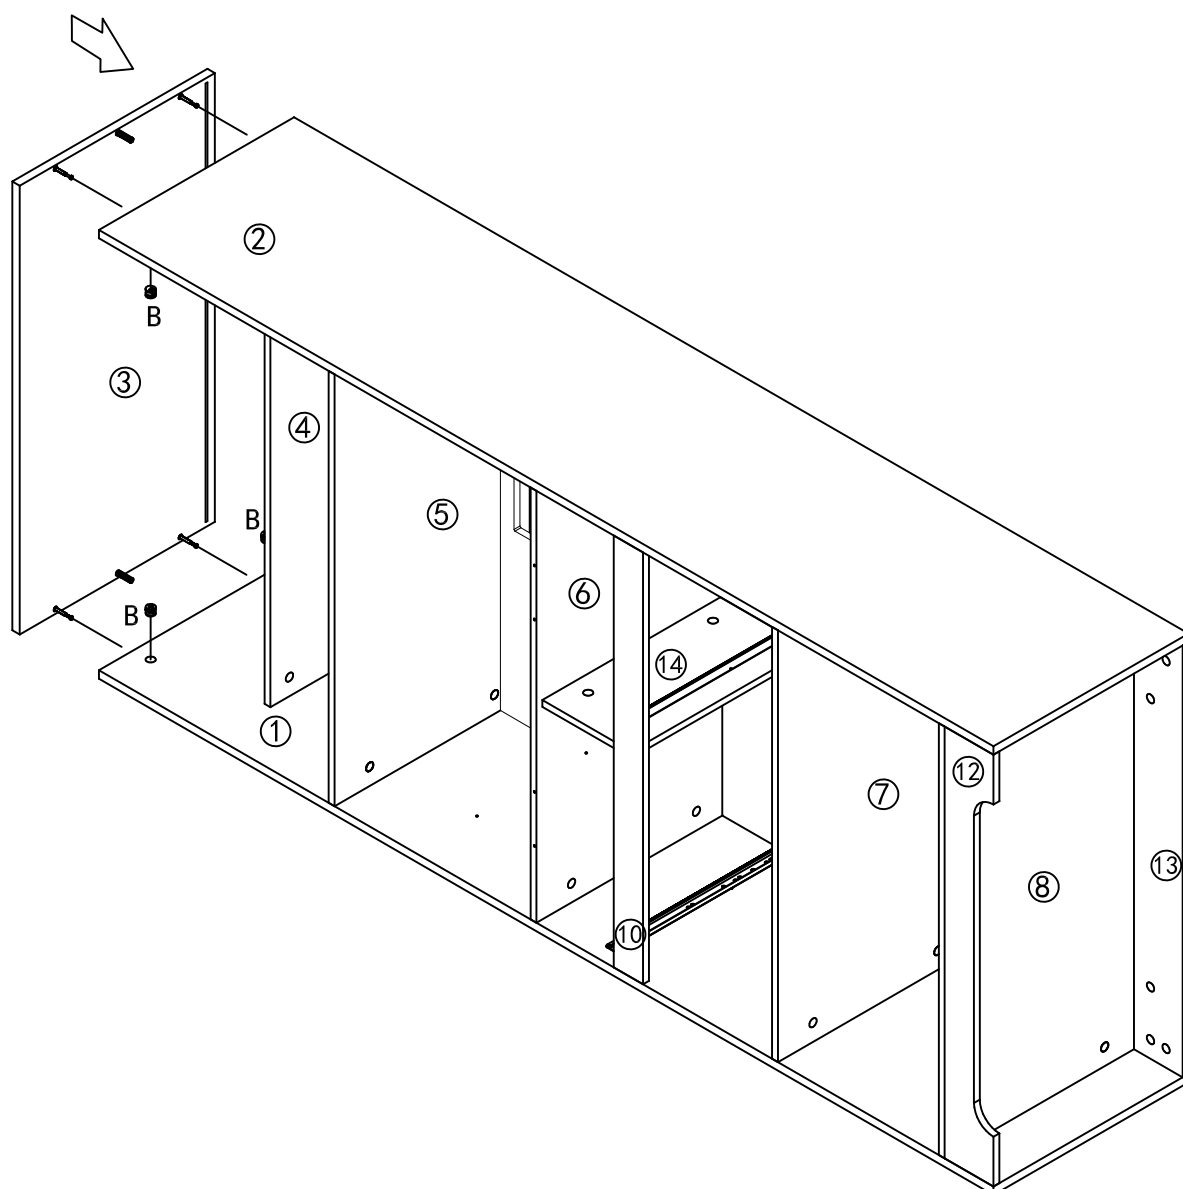









9

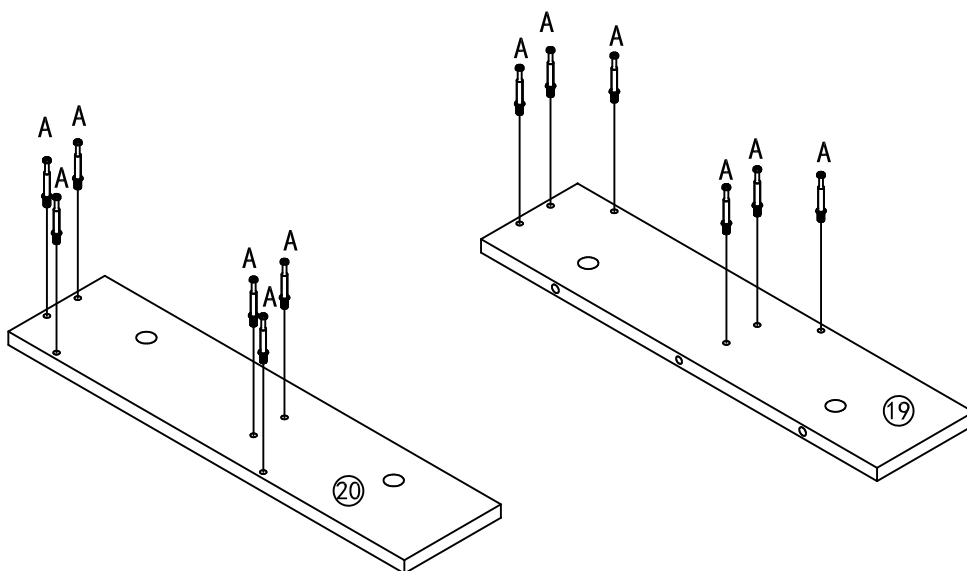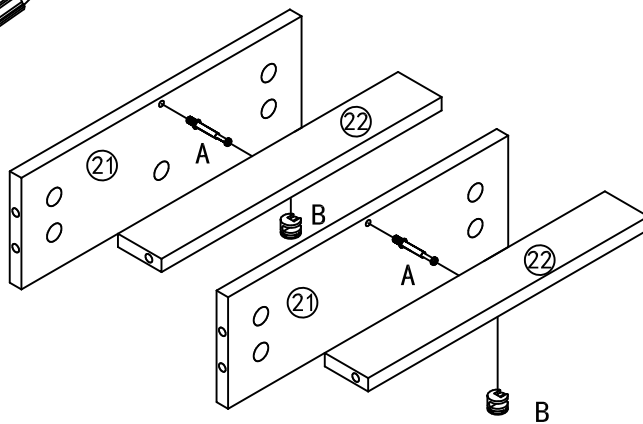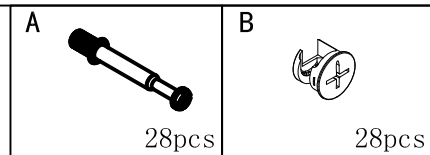
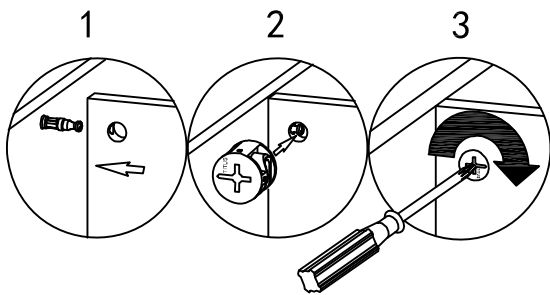



×2

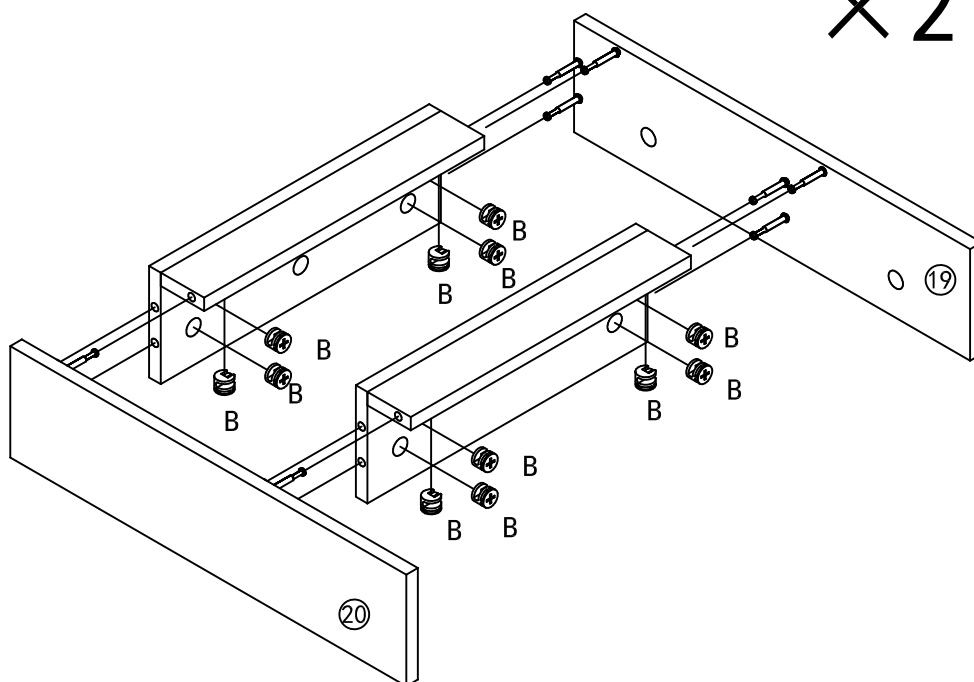

C $\Phi 6 \times 40$  4pcs	A  12pcs	B  12pcs	E M3.5*12  12pcs	F M3.5*12  2pcs	H  4pcs
---	--	--	---	---	--

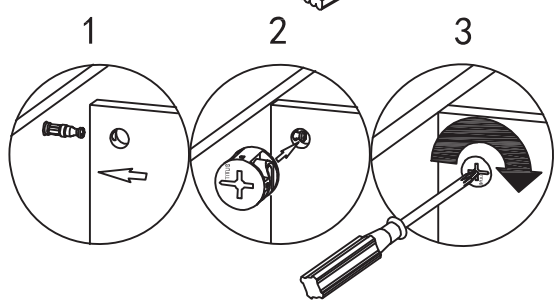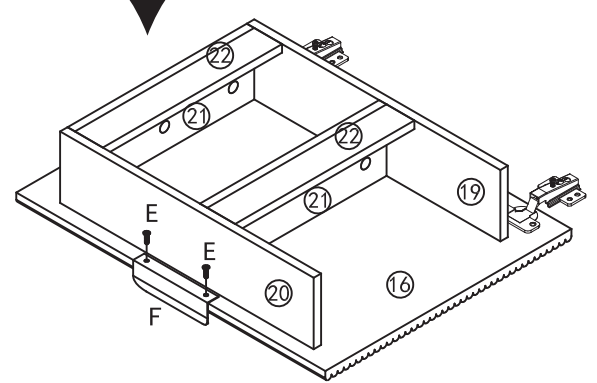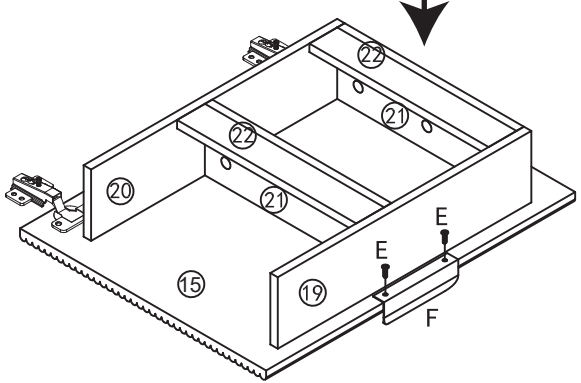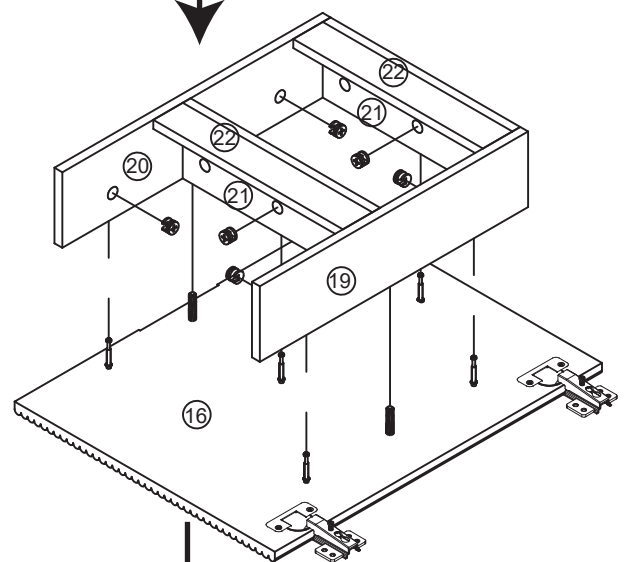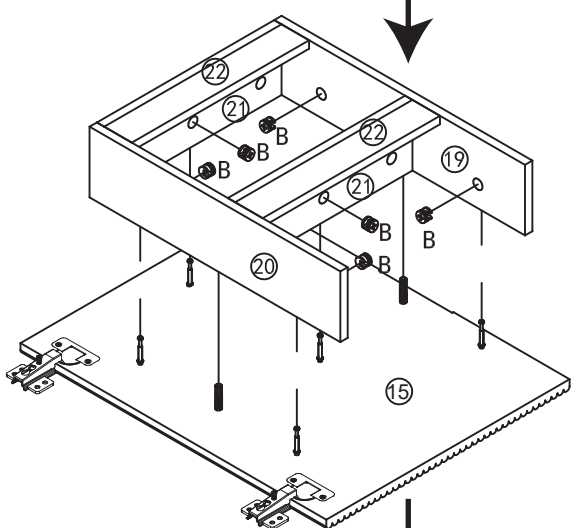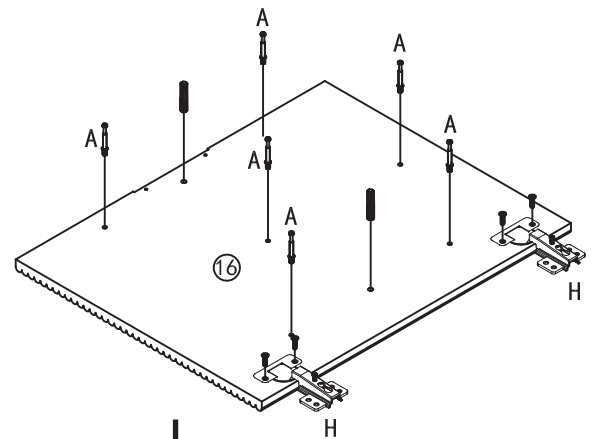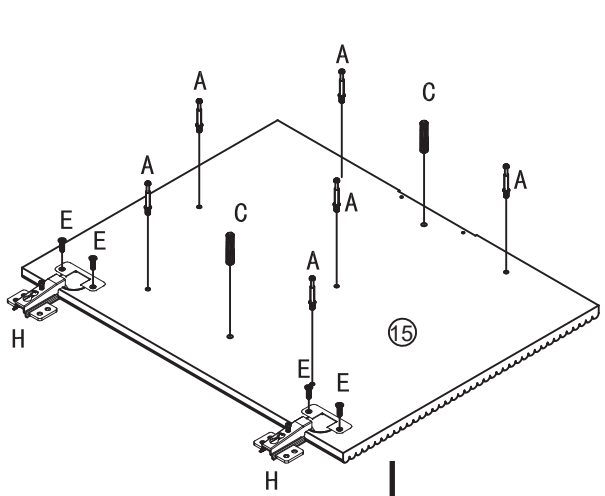

F	M3. 5*12	E	M3. 5*12	H
	2pcs		12pcs	
				4pcs

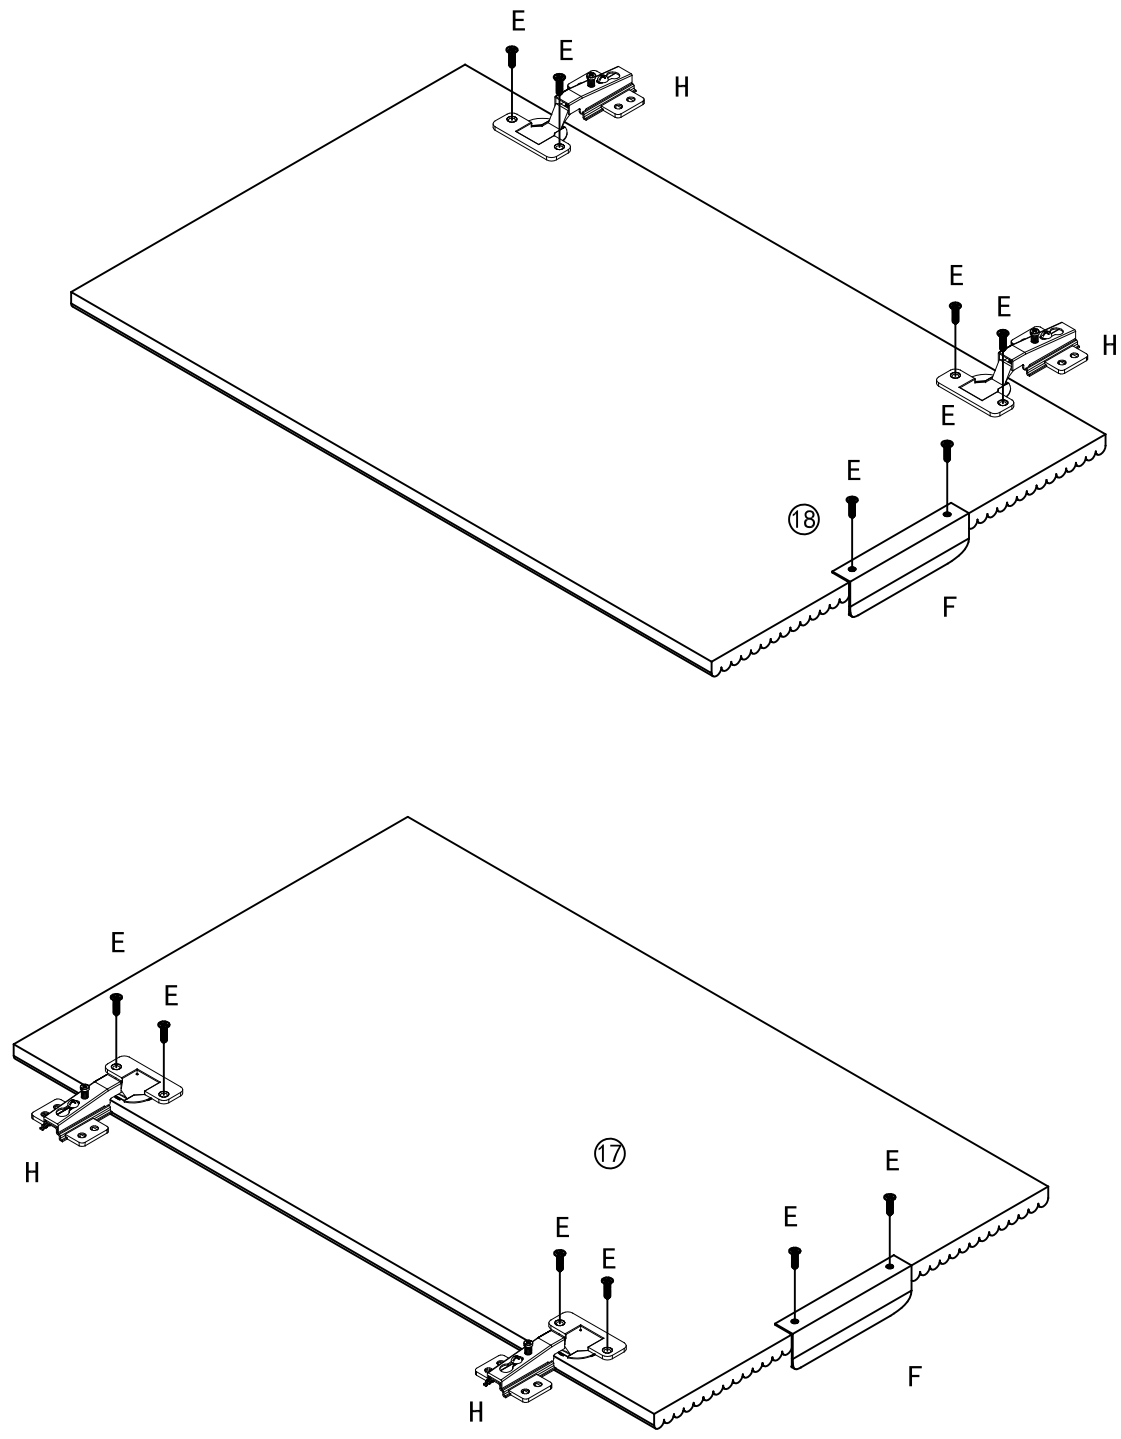

Hinge Installation

Install the hinge using the two pre-drilled holes.

Adjust the door for proper alignment.

Secure the hinge with the remaining screws.

Tighten all screws completely.

Important.


The additional hinge holes are intentionally left without pilot holes. This allows accurate door alignment before final installation.

E







M3.5*12






32 pcs

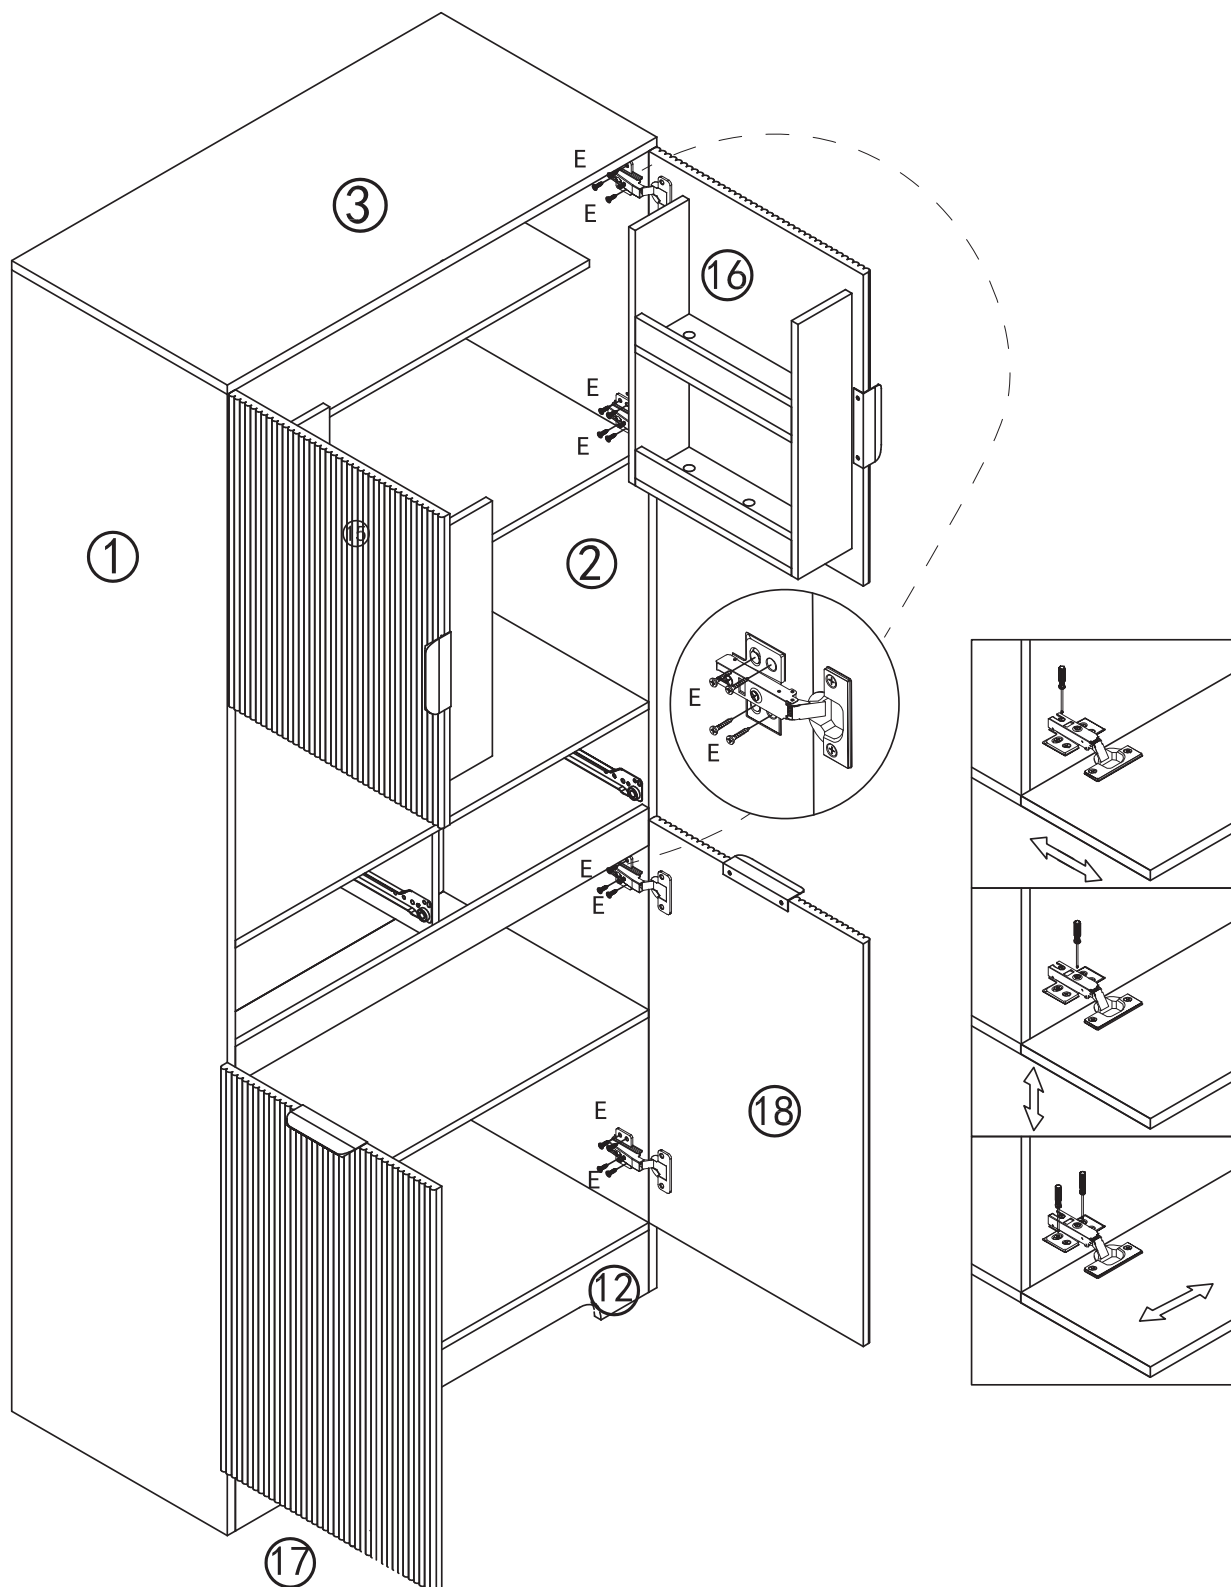



A  8pcs	B  8pcs	D M3.5*35  8cs
--	--	--

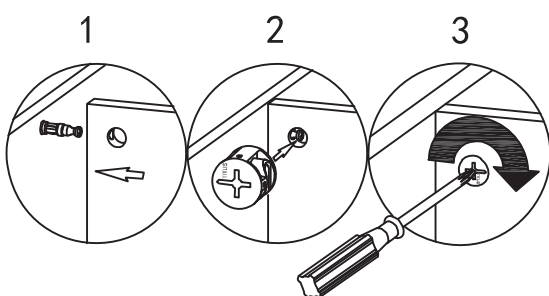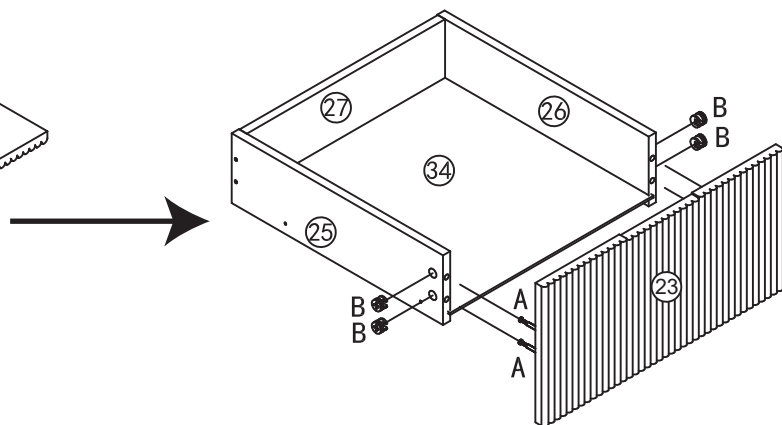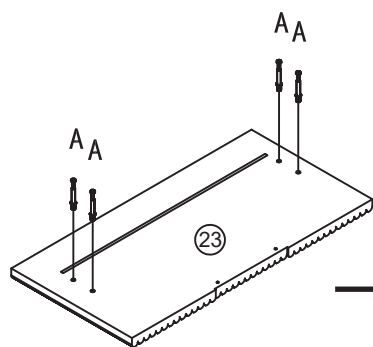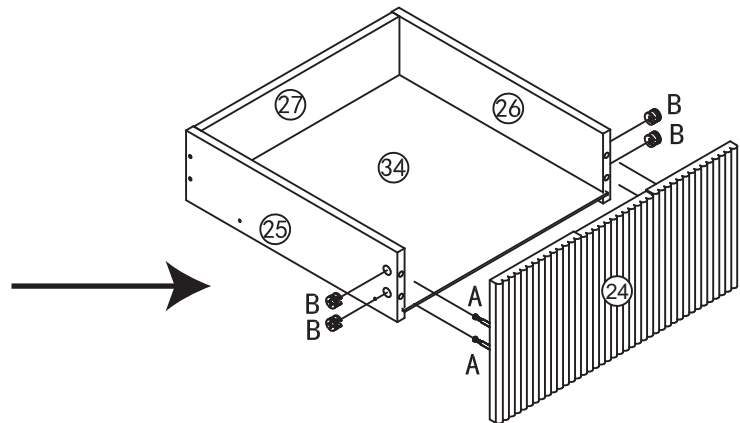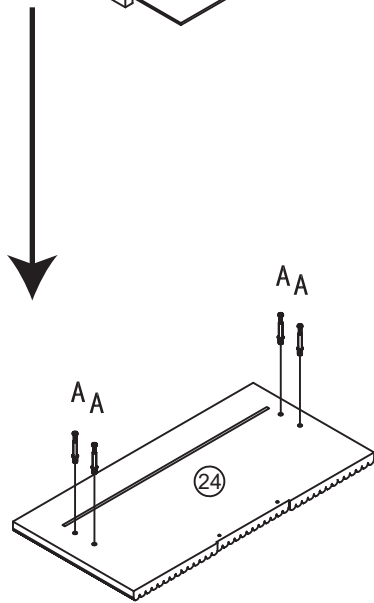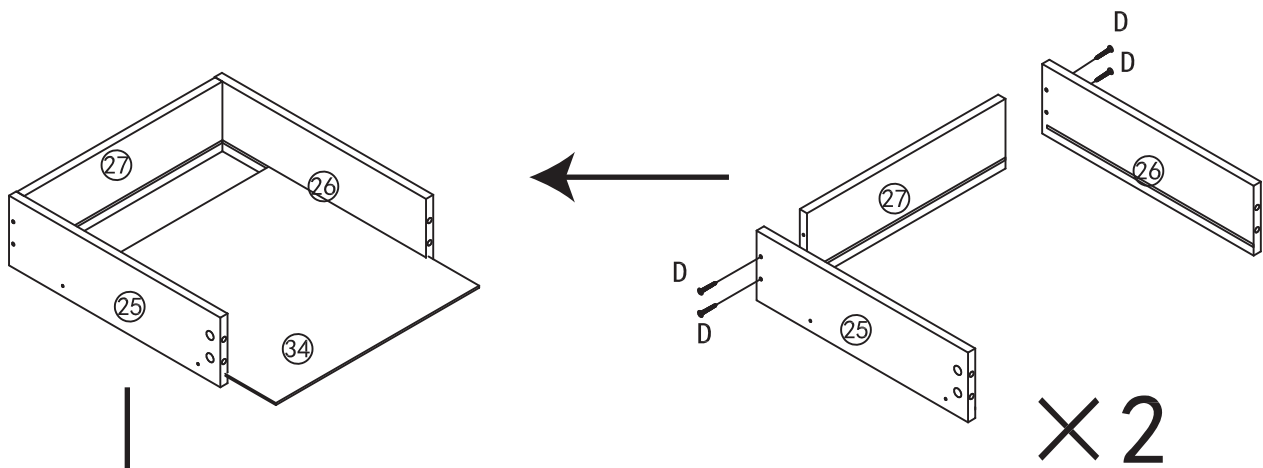


G  4pcs	F M3.5*12  2pcs	E M3.5*12  12pcs
---	---	--

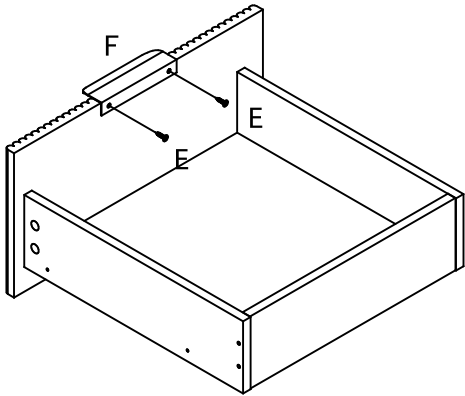


× 2

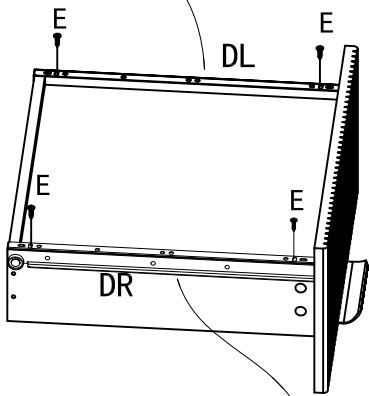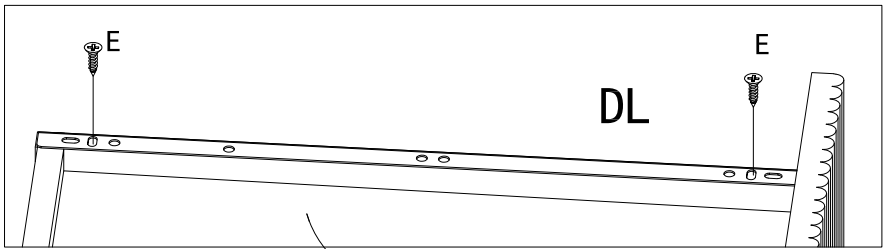


× 2


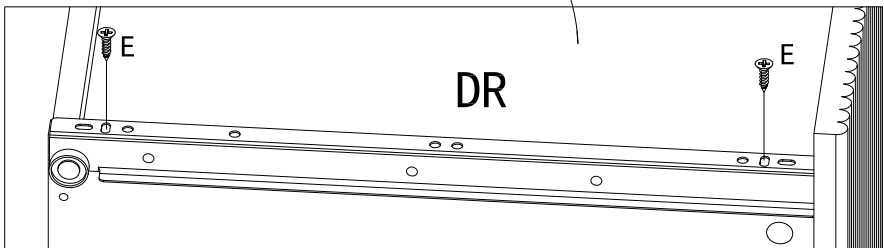


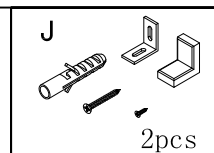


- 1.
- 2.
- 3.
- 4.

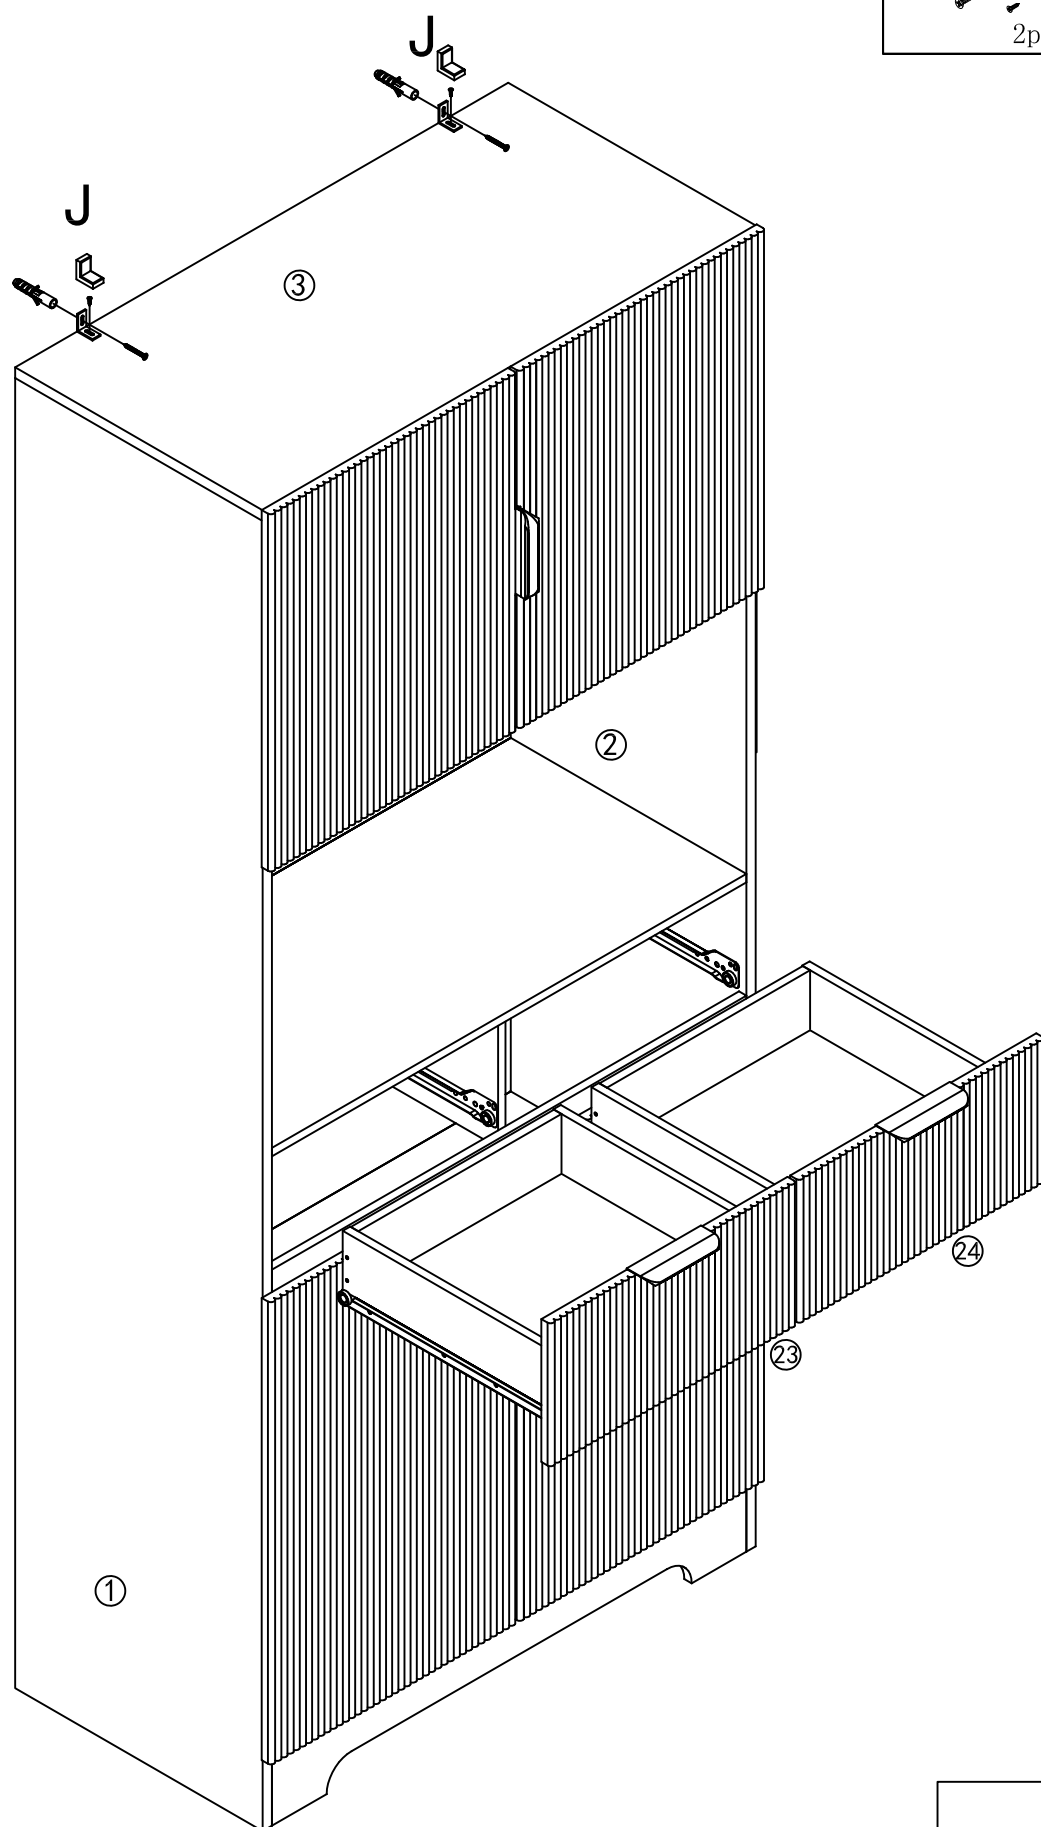

K
3*14 24pcs

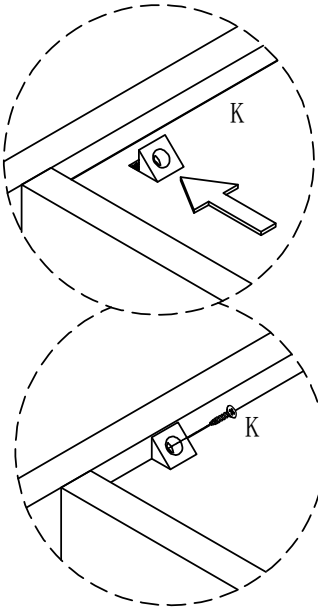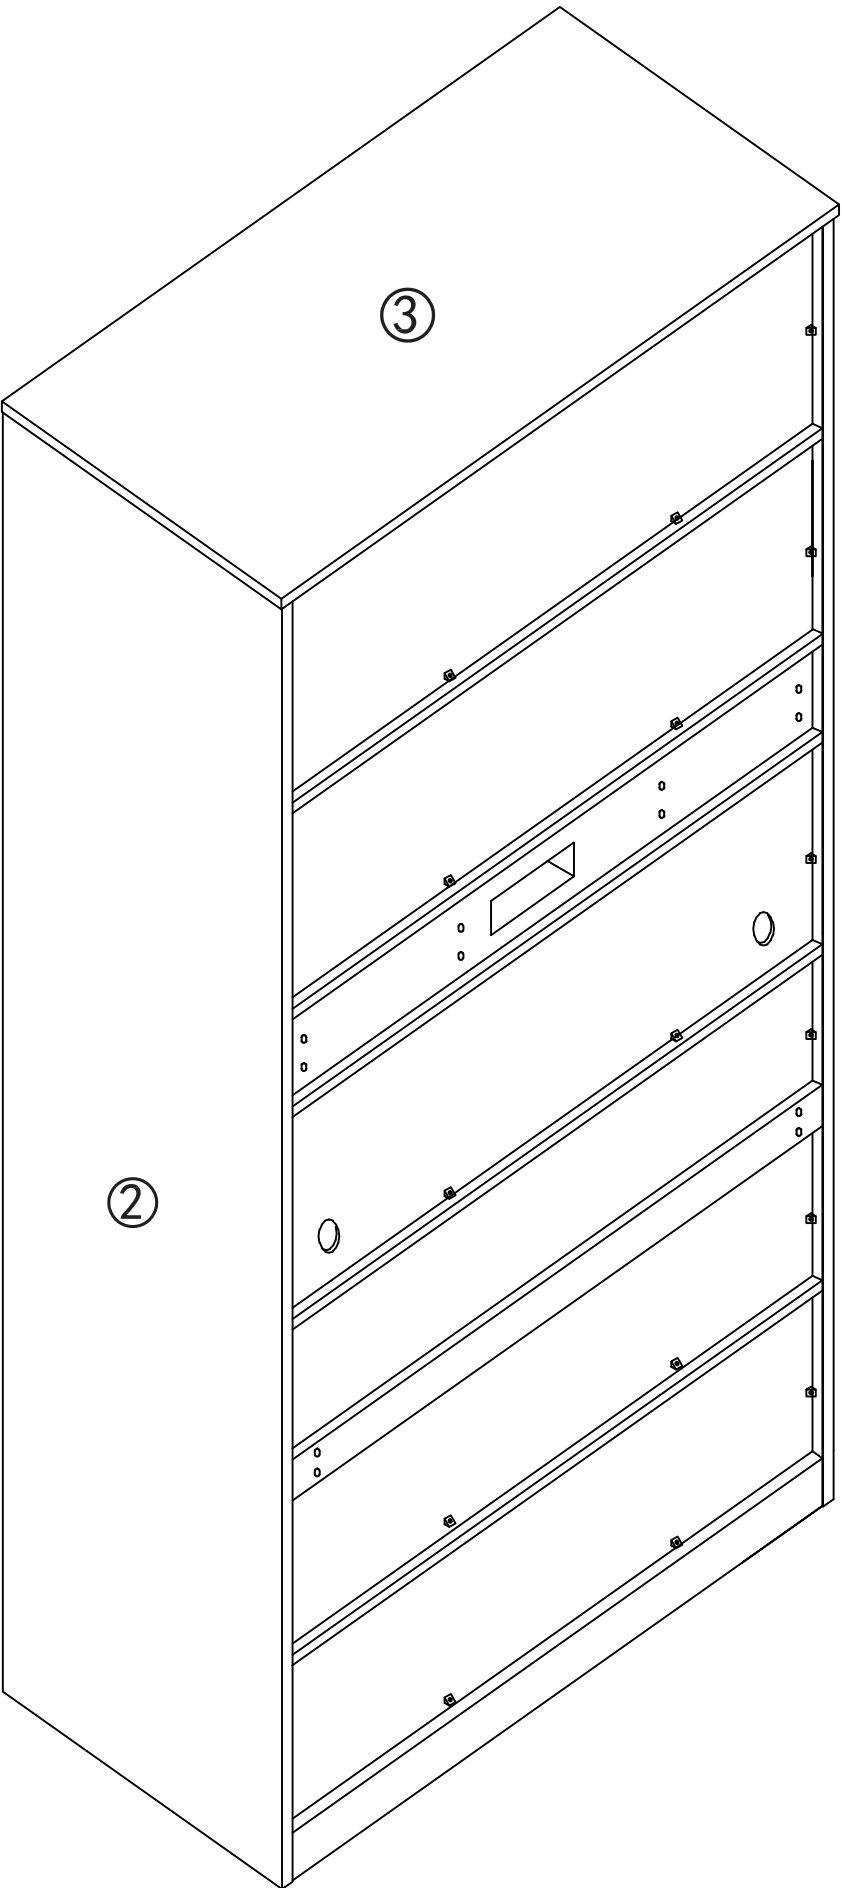

E M3. 5*12  2pcs	I  1pcs
--	--

