


MANUAL INSTRUCTION

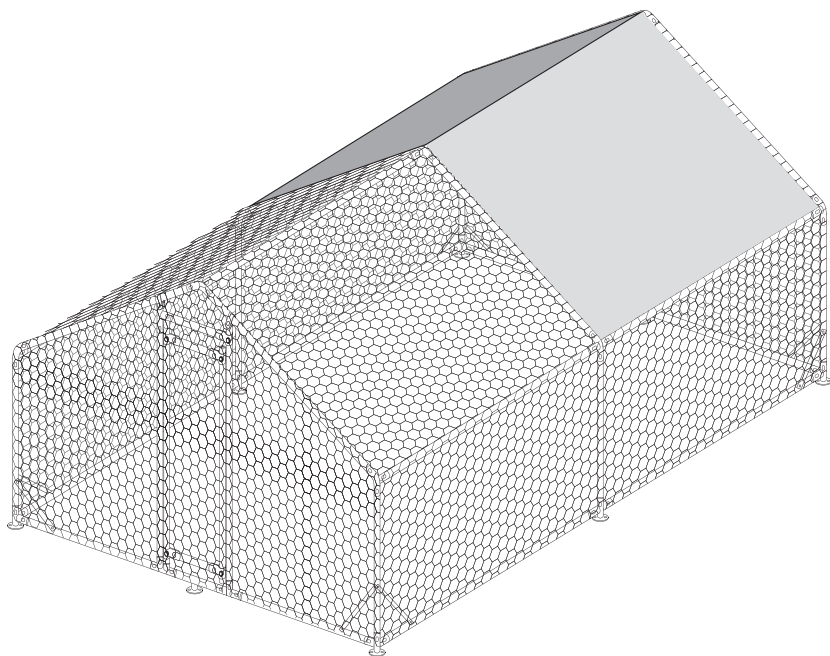

We offer a diverse range of products
to meet the needs of customers.

Reach us at
✉ service@kmcglobe-us.com
☎ (only us) +1 213-816-4788



1 x 4
1420



2 x 6
1925



2A x 4
1925



3 x 2
970



3A x 4
970



4 x 6
1540



5 x 1
1687



5A x 1
1687



6 x 1
605



7 x 1
1850



Φ16 395mm

10 x 8
395



A x 1
1580



1A x 1
1580



C x 2
564

D x 5



E1 x 2



E2 x 2



F x 3



G x 1



H x 3



V x 1



I x 8



J x 2



J1 x 2



K x30
M6
+1(spare)



L x 2
M8
+1(spare)



M x 1




O x 1



P x 1



Q x 1



R x12



S x 1



T x 2



W x 8





ATTENTION: E1 & E2 shall be placed in strict order, otherwise they cannot be installed


DIFFERENT HOLES SITUATIONS IN E1&E2



E1




E2

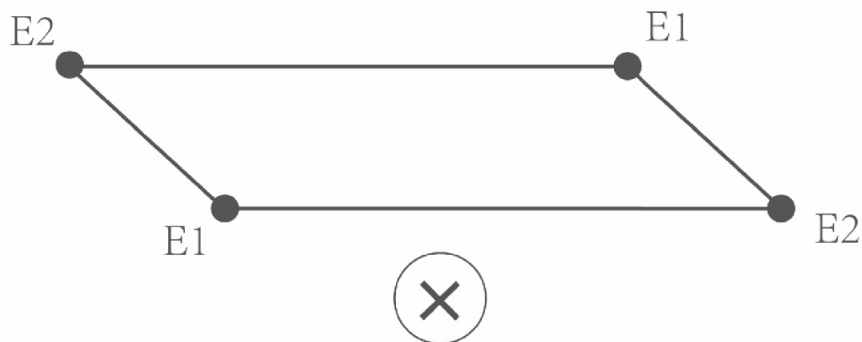


STEP1

Required Tools	 ①*4PCS	 ②A*4PCS	 E1*2PCS
 E2*2PCS	 G*1PCS	 F*3PCS	

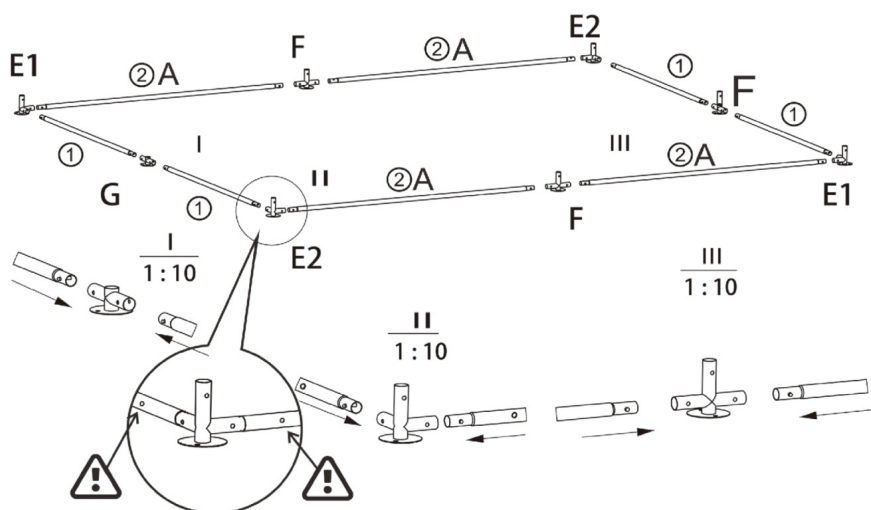


STEP2

Required Tools	 ③A*4PCS	 ③*2PCS
-------------------	--	---

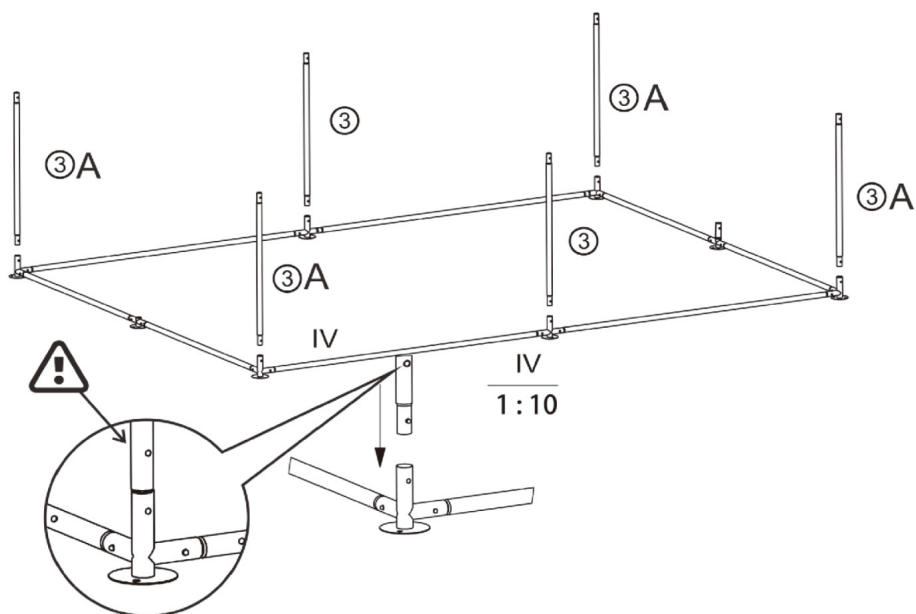


STEP3

Required Tools	 ④*6PCS	 D*5PCS	 H*3PCS	 V*1PCS
-------------------	---	---	---	---

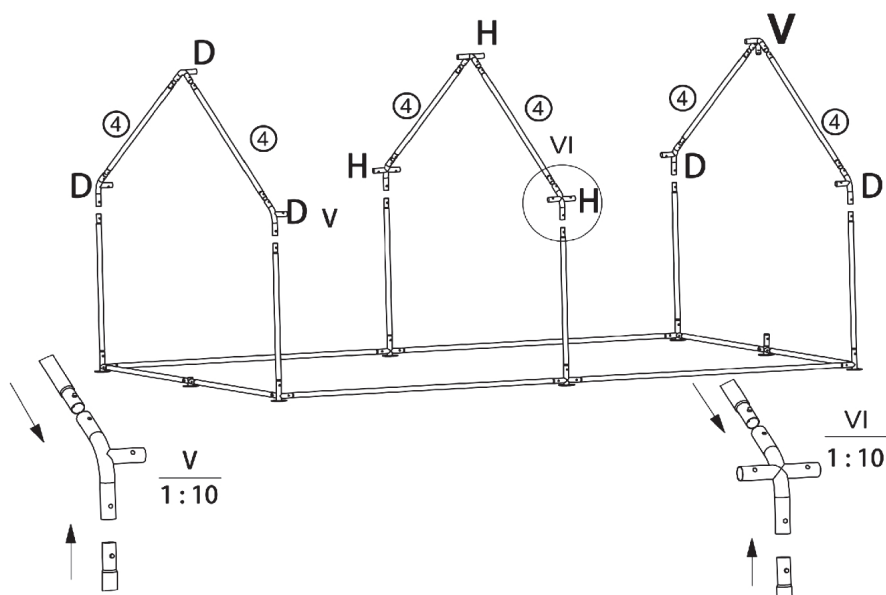


STEP4

Required Tools	 ②*6PCS	 ⑦*1PCS	 ⑩*8PCS Φ 16 350mm	 K*16PCS
-------------------	--	--	--	--

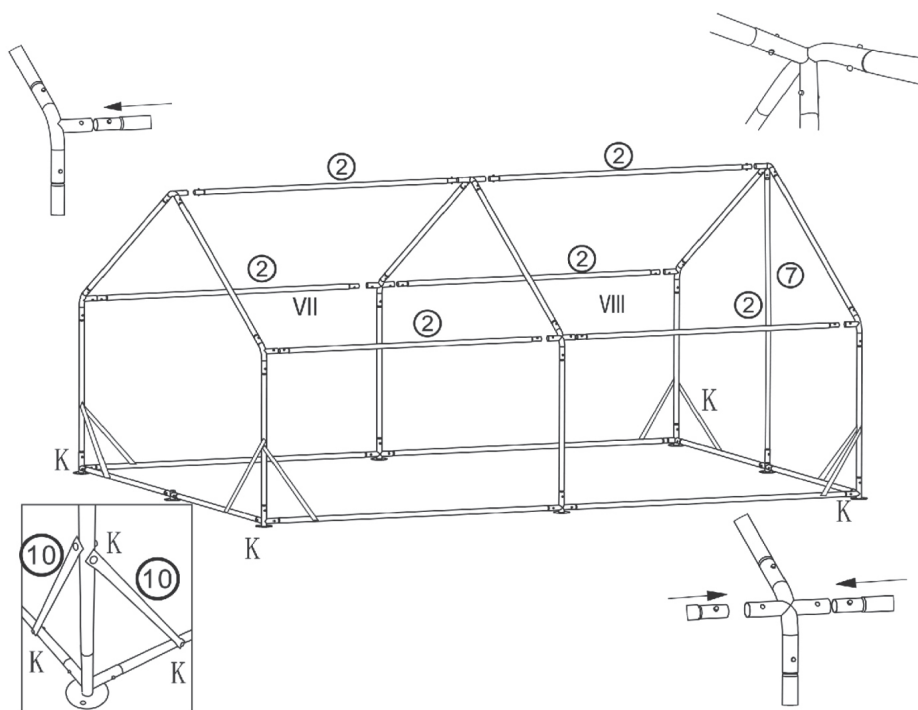


STEP5

Required Tools	 ⑤*1PCS	 ⑤A*1PCS	 ⑥*1PCS	 T*2PCS
 J*2PCS	 I*8PCS	 L*2PCS	 K*6PCS	

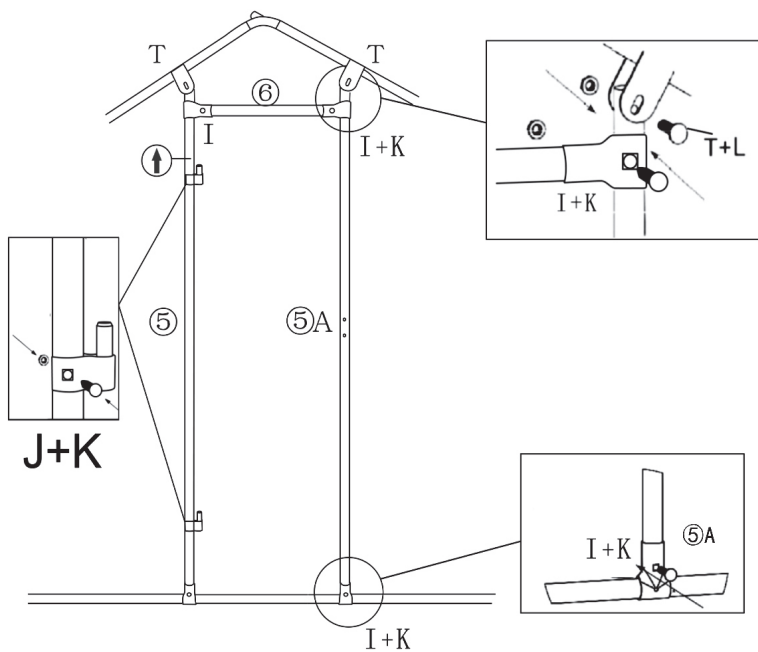


STEP6

Required Tools	 1A*1PCS	 A*1PCS	 C*2PCS	 J1*2PCS	 K*6PCS
-------------------	---	--	--	---	--

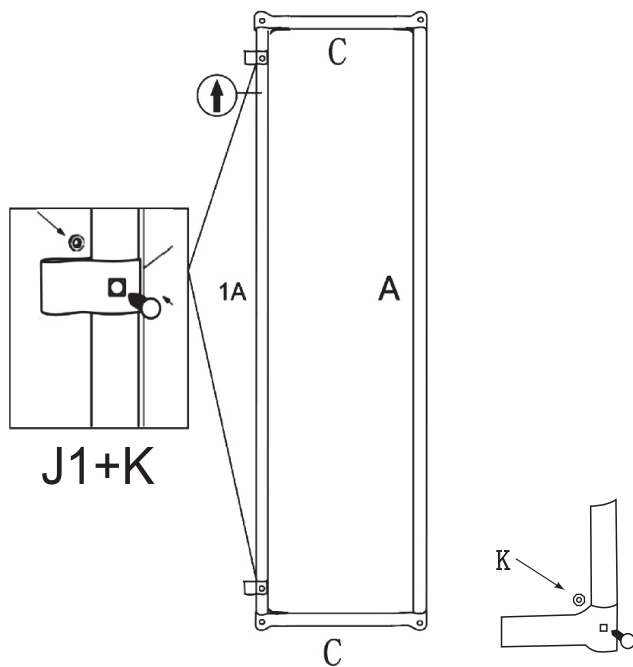


STEP7

Required Tools	 M*1PCS	 K*2PCS
-------------------	---	---

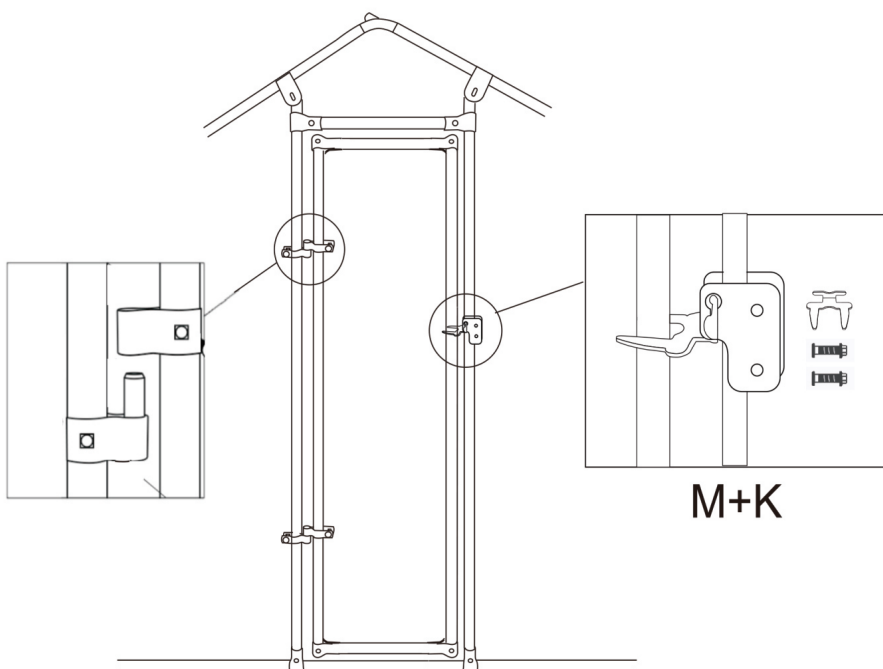

STEP8



Required
Tools



Q*1PCS




Q*1SET

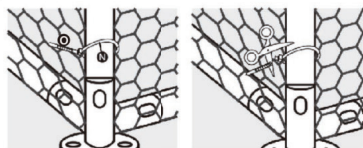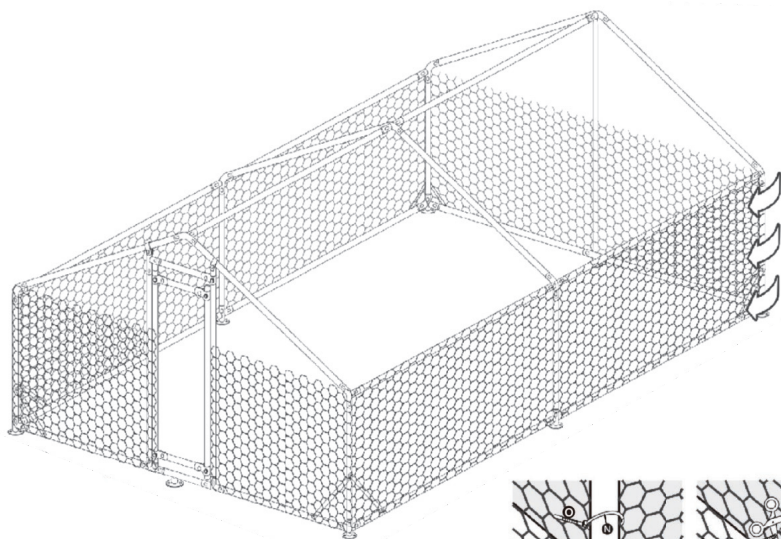

STEP9







Required
Tools



Q*1PCS






0*1SET

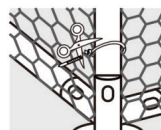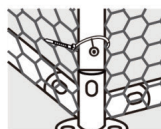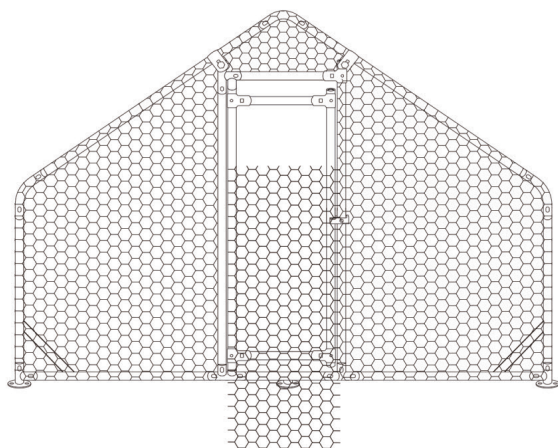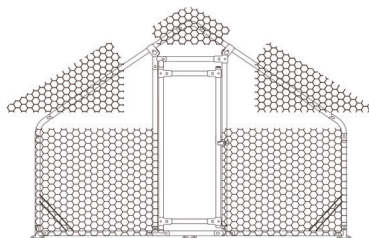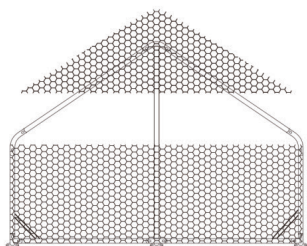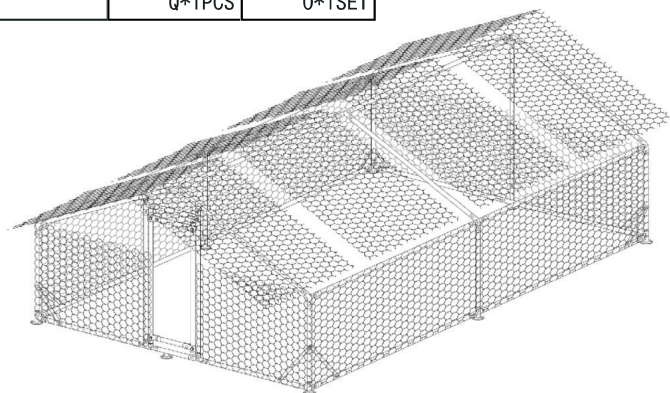

STEP10

Required Tools			
	P*1PCS	R*12PCS	W*8PCS

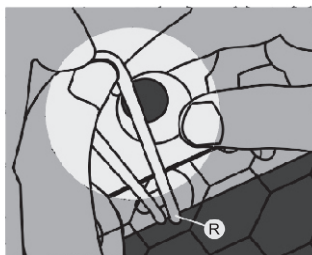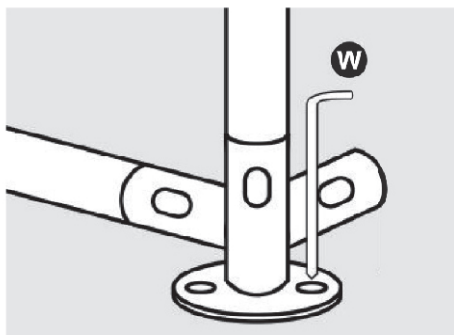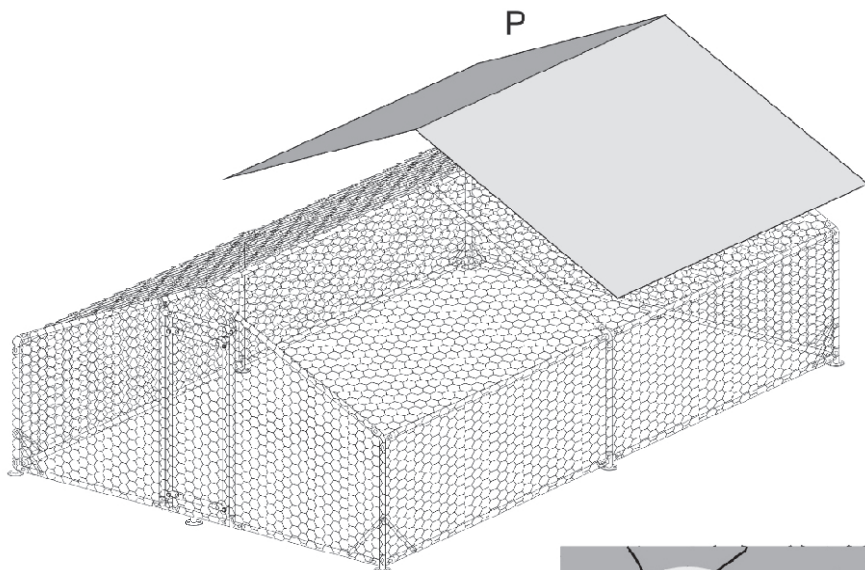

WARNING:

REMOVE THE COVER DURING HEAVY
SNOW OR RAINSTORMS TO PREVENT THE CHICKEN
COOP FROM COLLAPSING UNDER PRESSURE.