



Room to grow.



Assembly Videos

Contact Us



+1 (866) 597-1888



vegogarden.com



Vego Garden Academy



vego_garden



hello@vegogarden.com




Houston, TX




Manual for In Bed Composter


Copyright © 2024 Vego

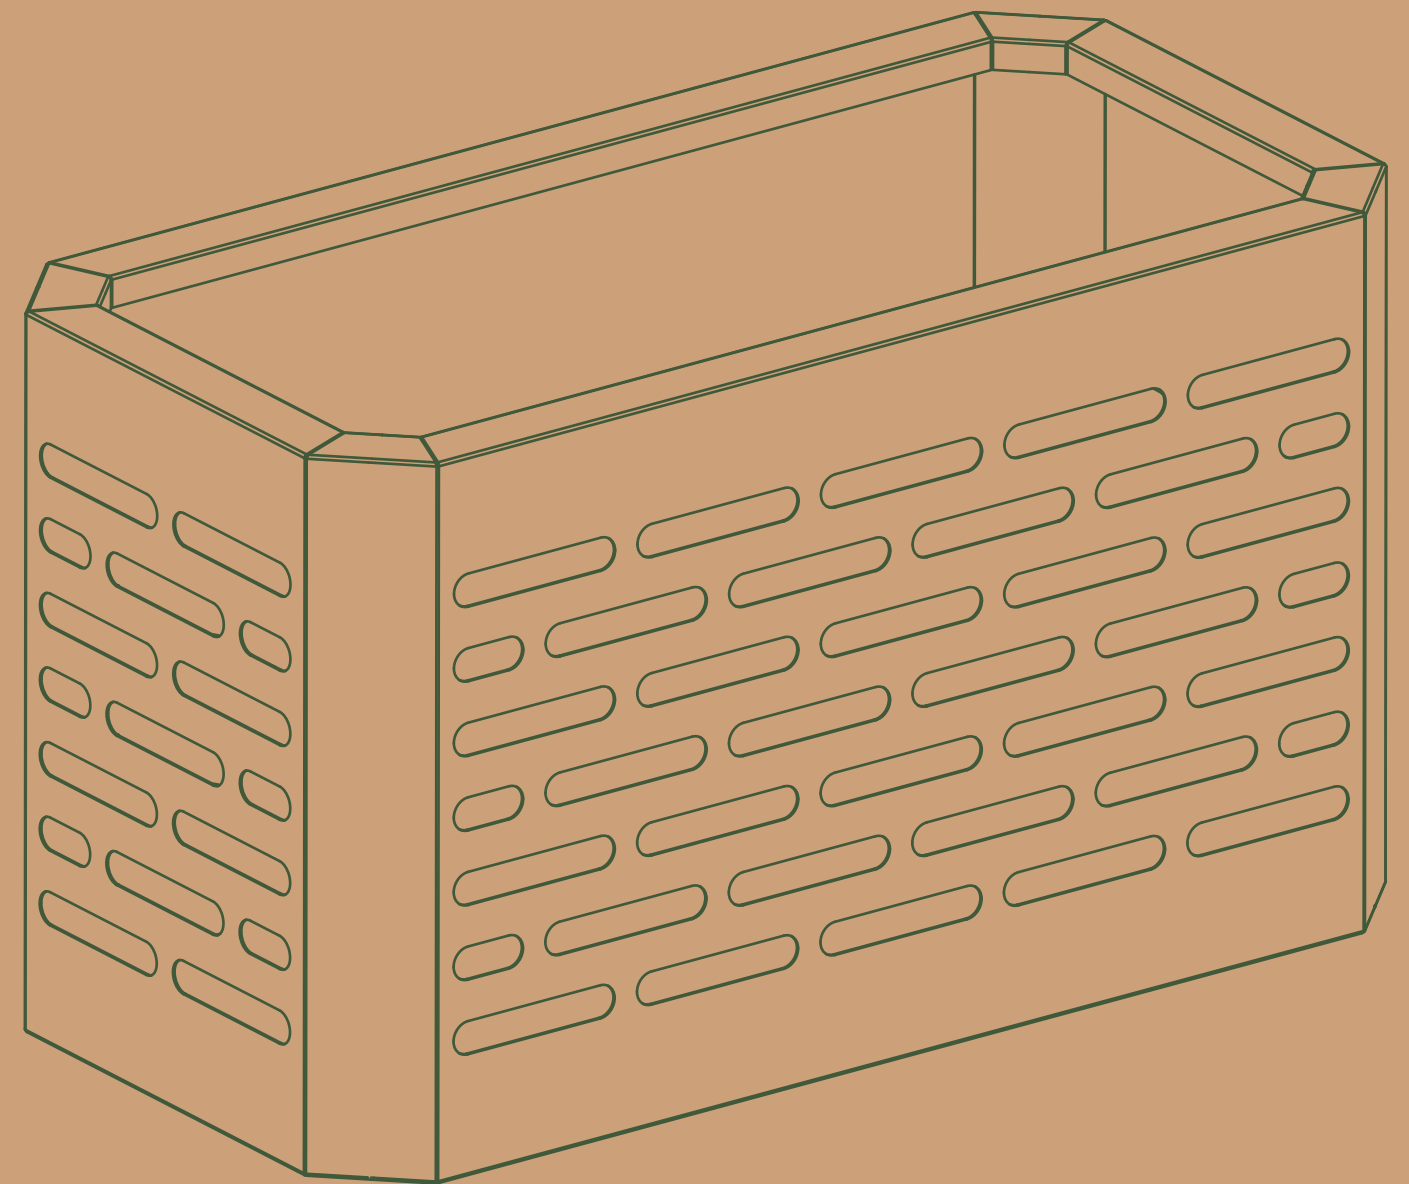

Parts List

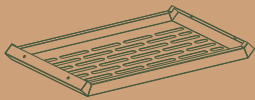

P1
Qty: 2

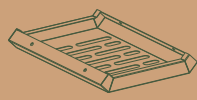

P2
Qty: 2




F1
Qty: 8



LW
Qty: 2

Assembly Guide

1 Connect P1 and P2, and secure them in place with F1.

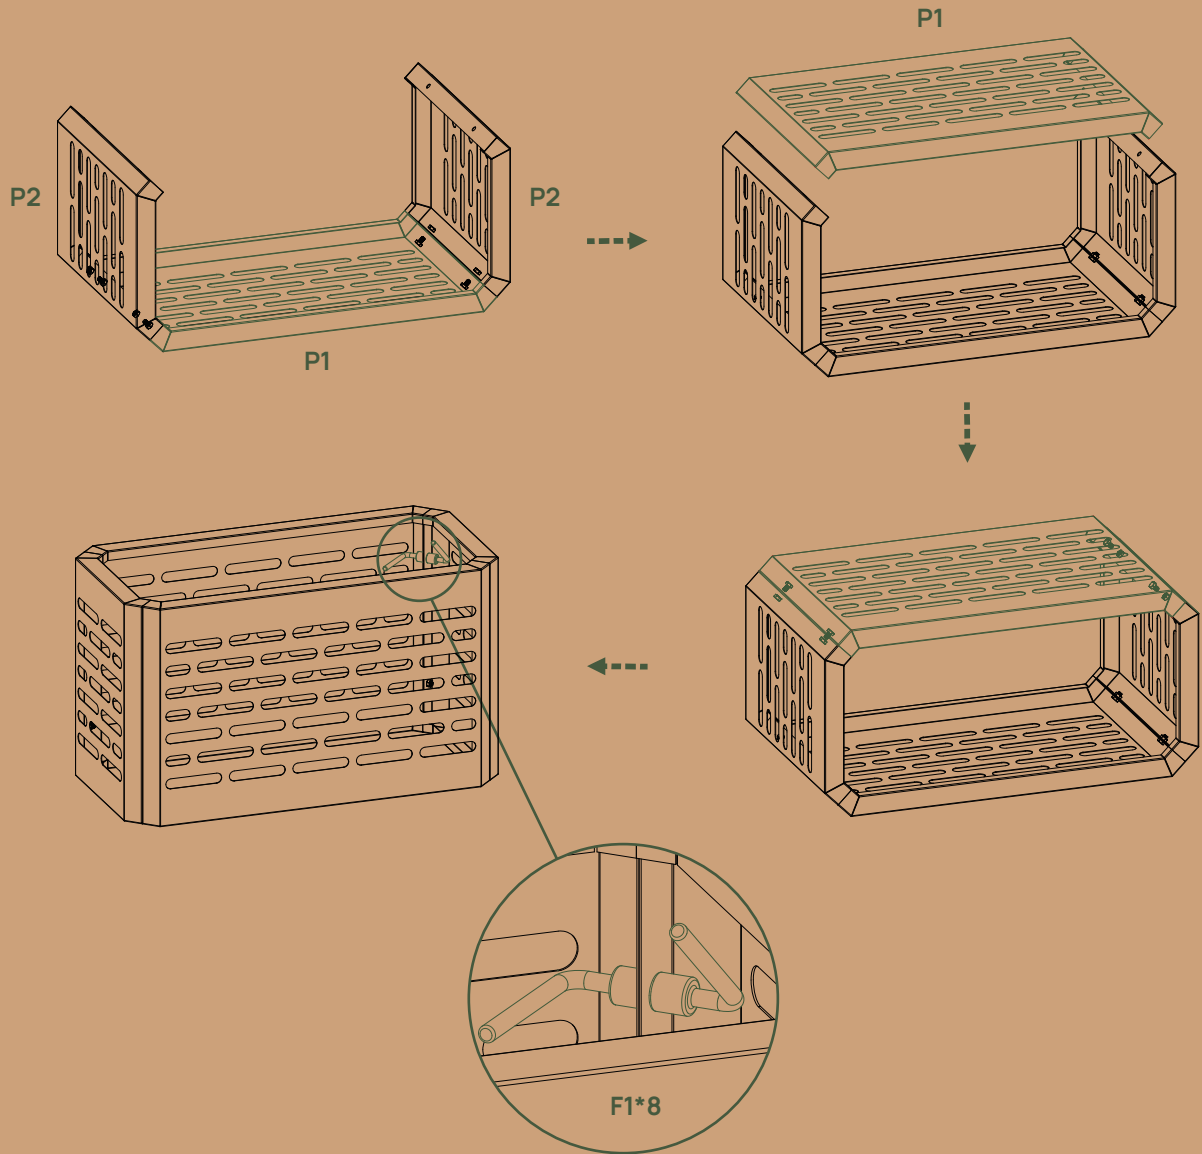

The diagram illustrates the assembly of the In Bed Composter. It begins with two separate components, P1 and P2, which are rectangular trays with a grid of holes. These are connected by inserting F1 bolts through the holes. The final assembly is shown as a single unit with a circular inset showing a close-up of the F1 bolts securing the parts.

2 Place the In Bed Composter in the Modern Garden Bed. Make sure it is positioned at least **1 inch** above the soil surface.

