



ASSEMBLY INSTRUCTION

If there are any questions during the assembly process.


A video and description about the step you were stucked will help us to understand the problem quickly.

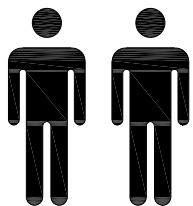

2 person required to
assemble this product


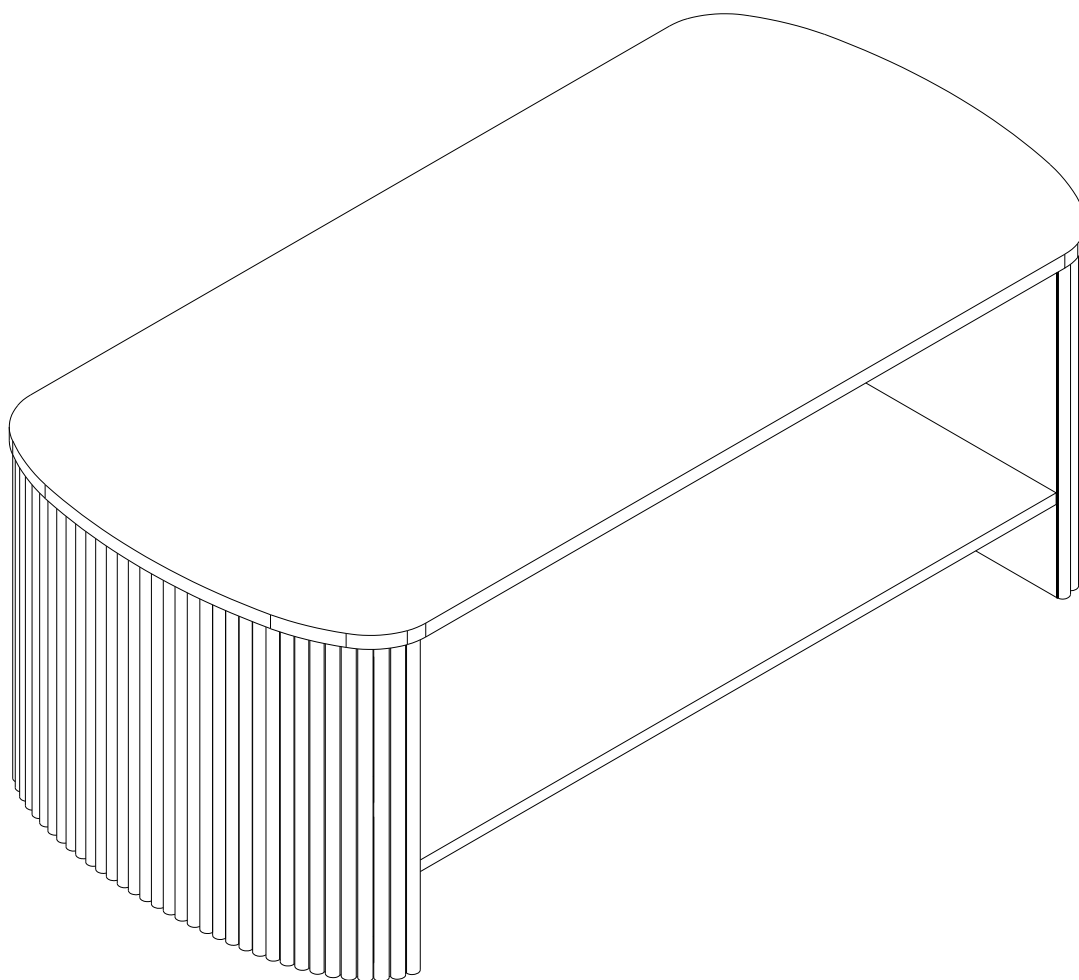


1

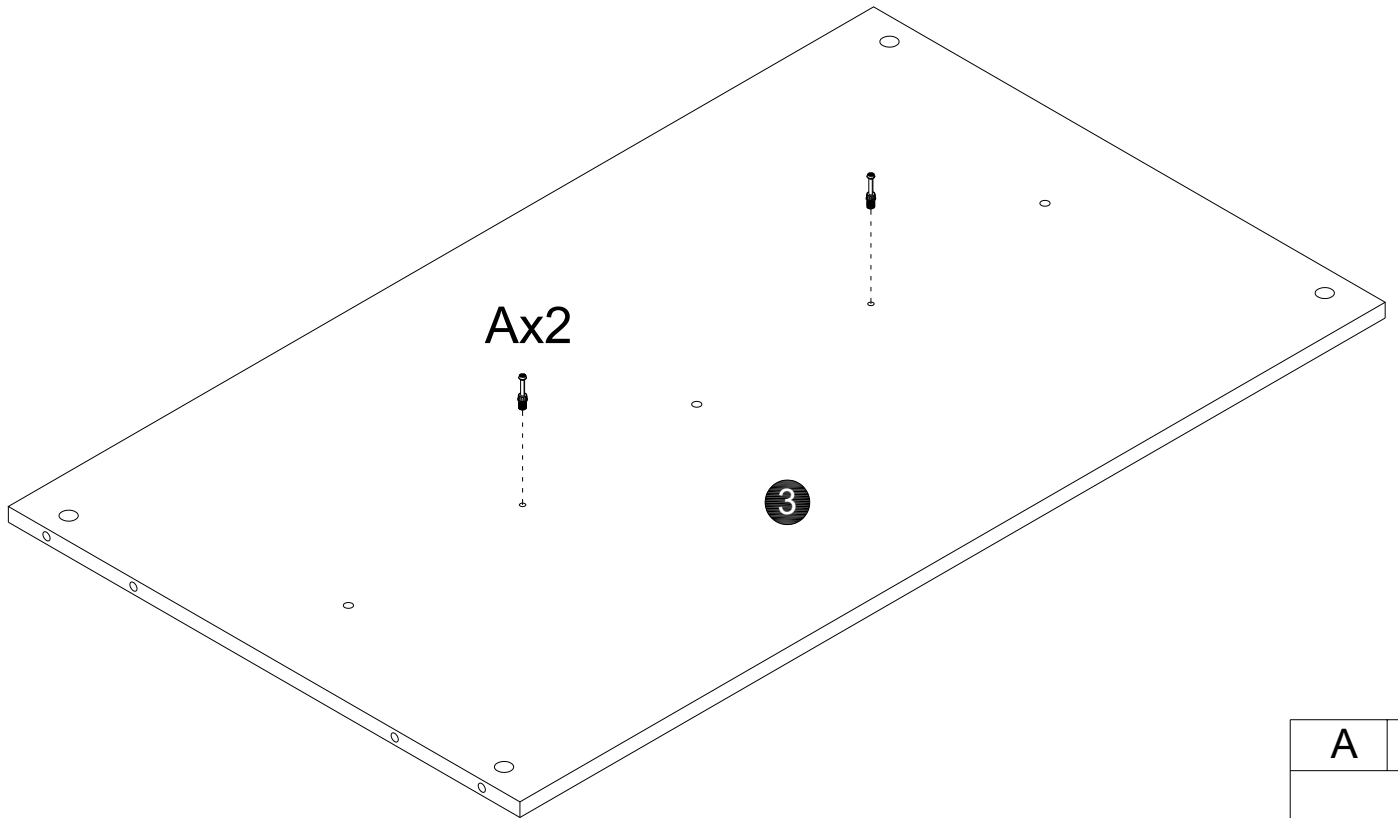


| | |
|---------|----|
| A | x2 |
| | |
| M6x35mm | |



2

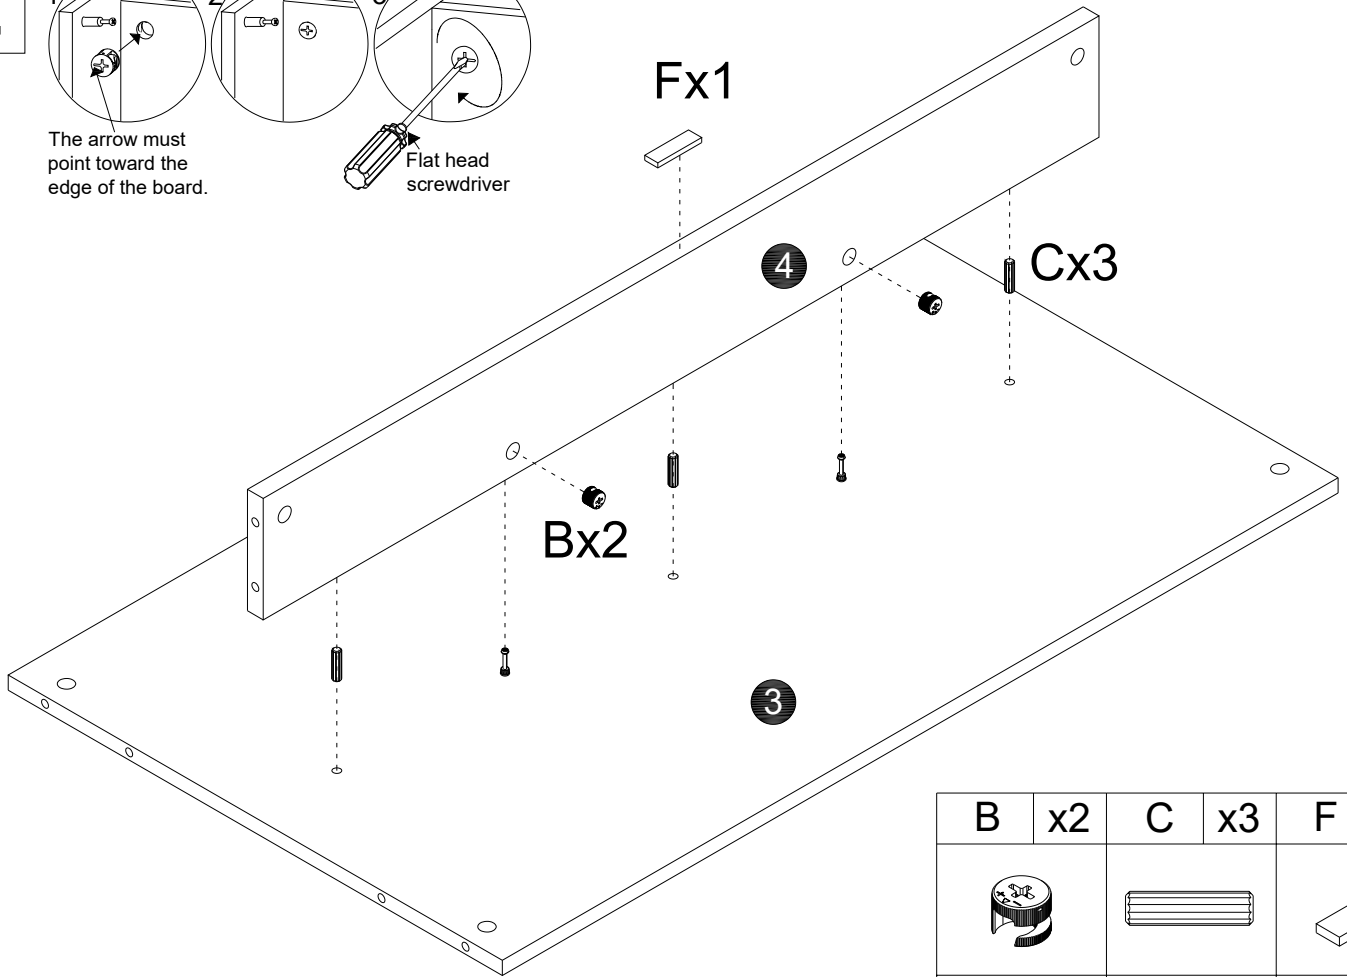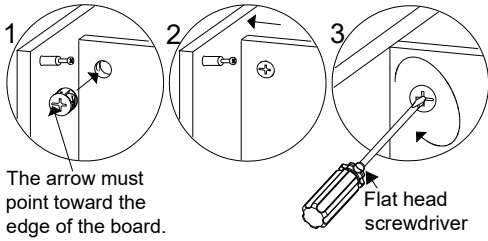


| | | | | | |
|-------|----|---------|----|---------|----|
| B | x2 | C | x3 | F | x1 |
| | | | | | |
| Ø15mm | | Ø8x30mm | | 50x15x5 | |



3

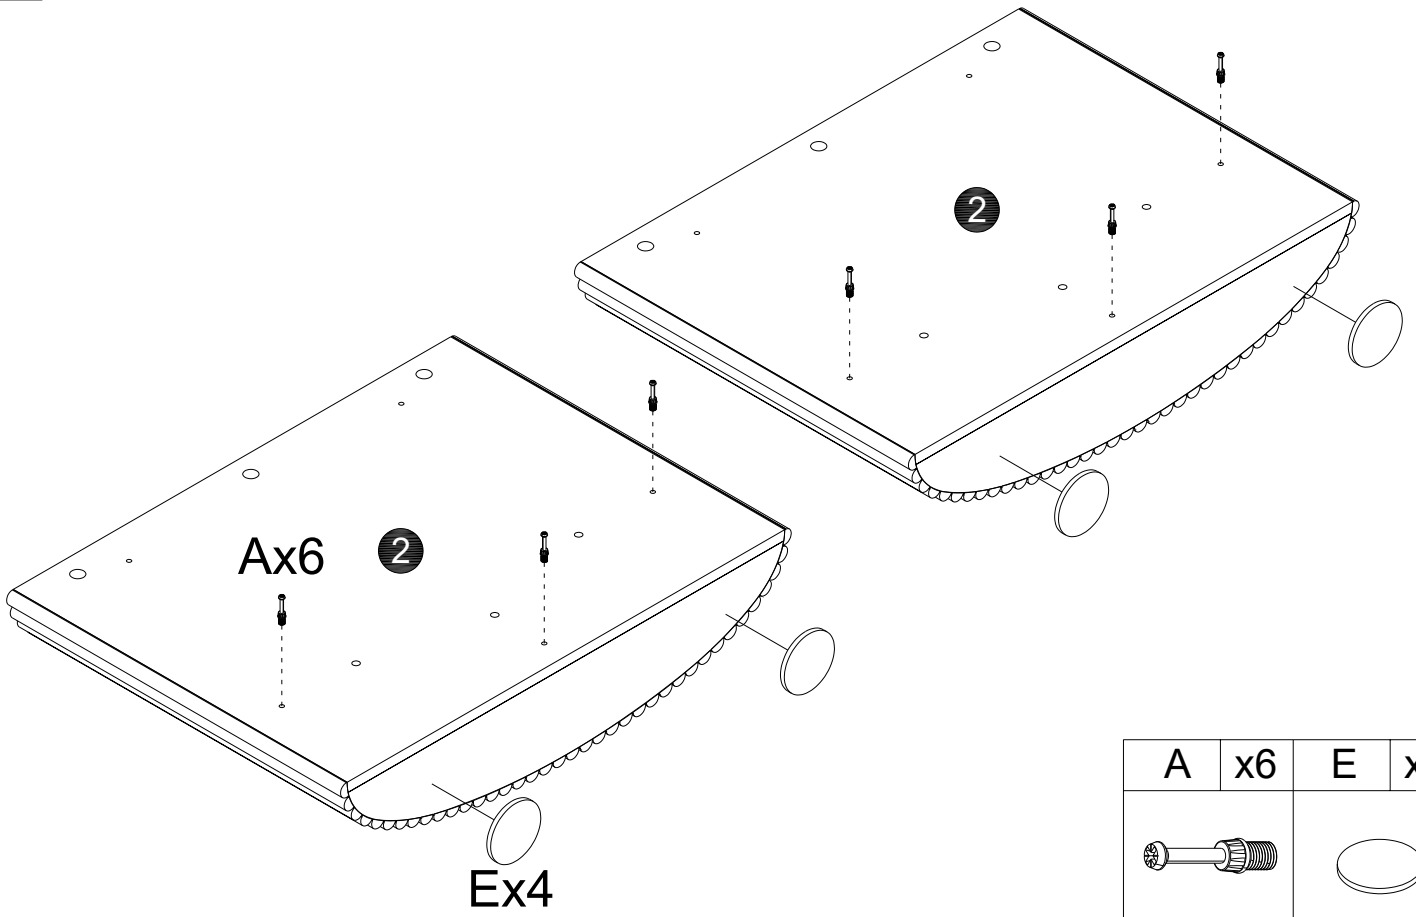


| A | x6 | E | x4 |
|--|----|--|----|
|  | |  | |
| M6x35mm | | Ø65x5mm | |



4

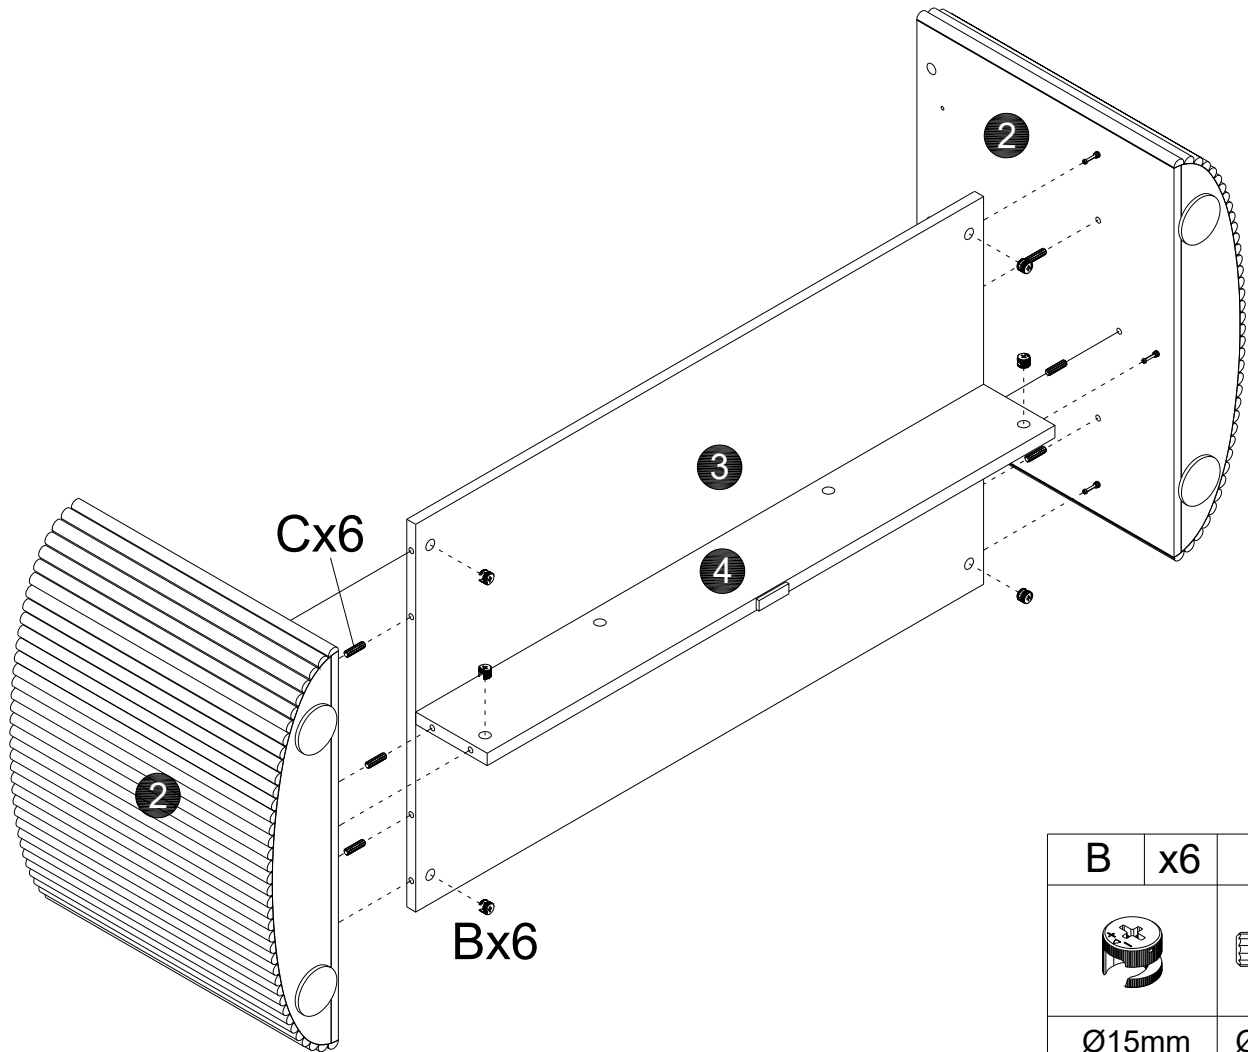


| B | x6 | C | x6 |
|---|----|---|----|
|  | |  | |
| Ø15mm | | Ø8x30mm | |

5

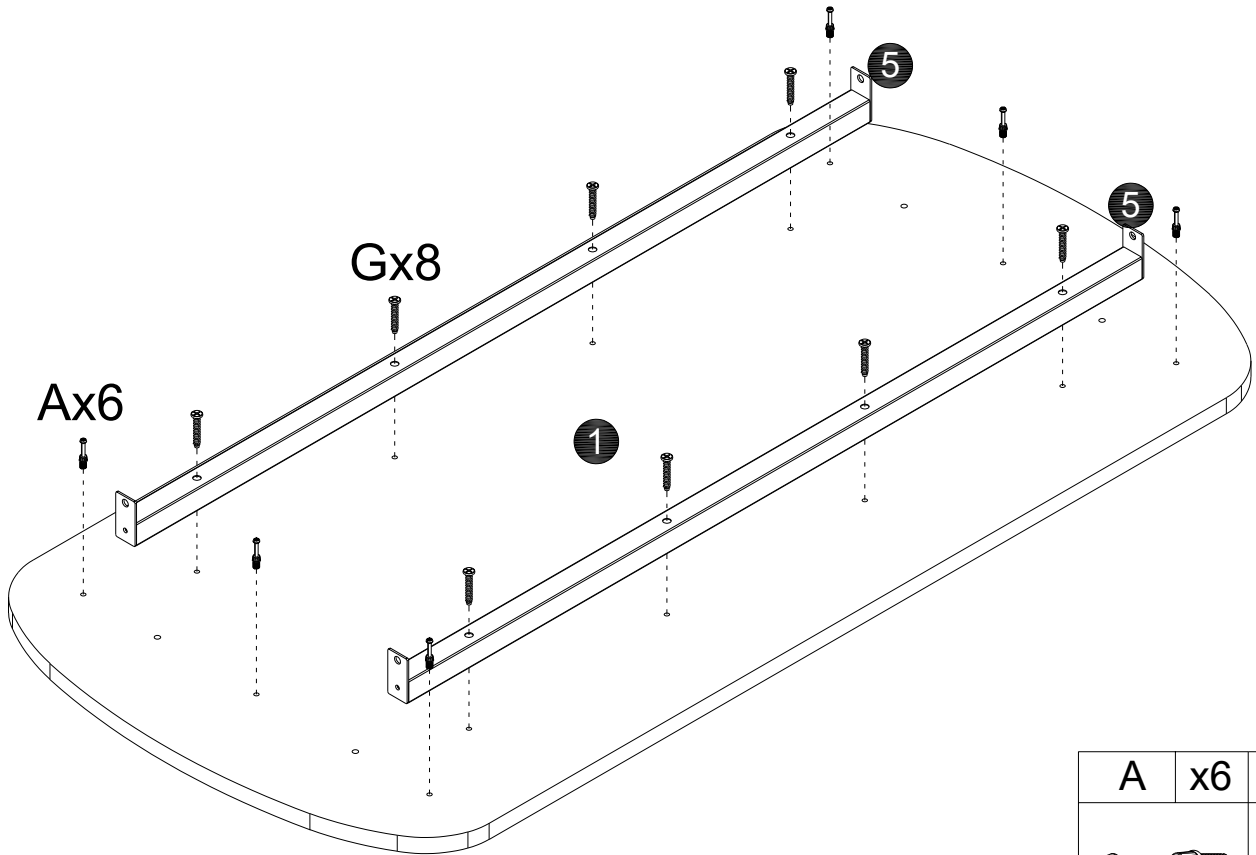


| A | x6 | G | x8 |
|--|----|--|----|
|  | |  | |
| M6x35mm | | M6x35mm | |

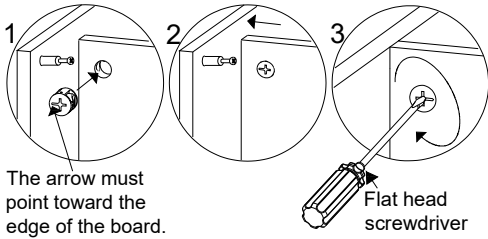

6






The arrow must point toward the edge of the board.


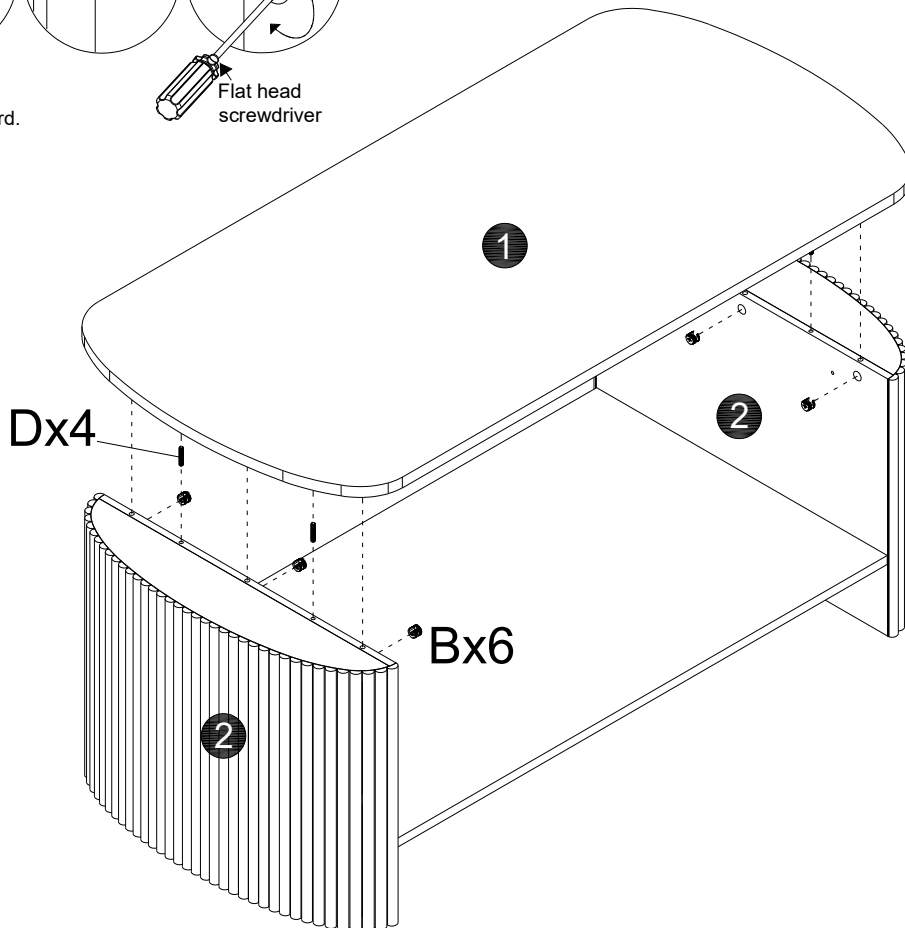
Flat head screwdriver



| B | x6 | D | x4 |
|---|----|---|----|
|  | |  | |
| Ø15mm | | Ø6x30mm | |

7

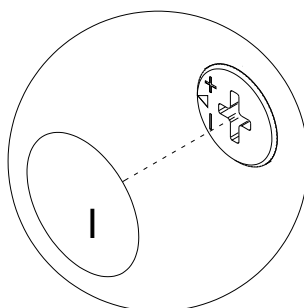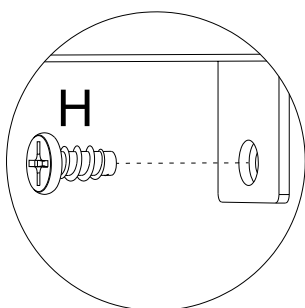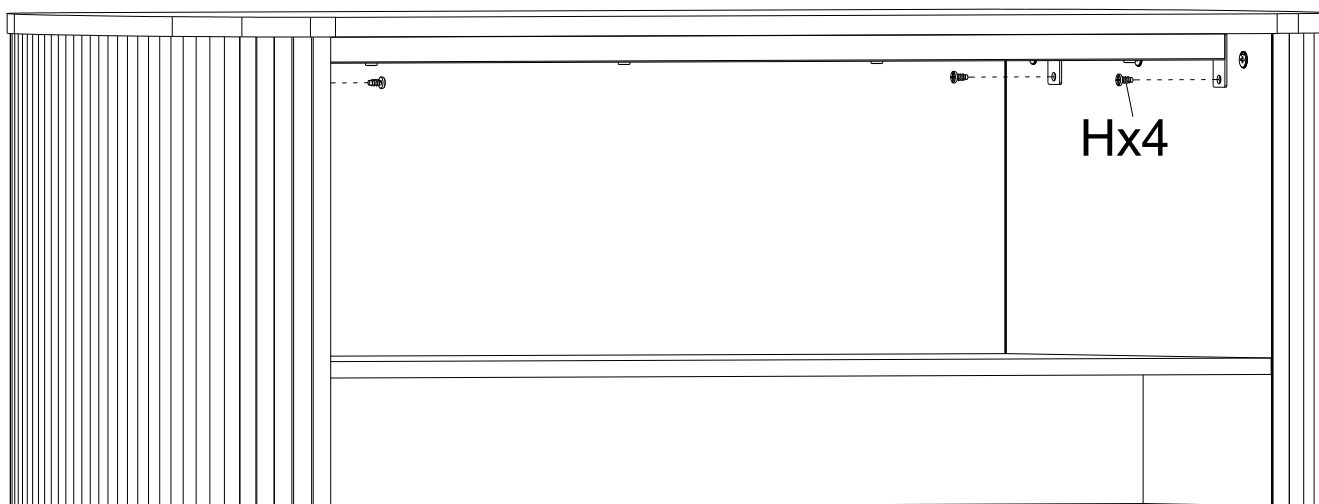

| H | x4 | I | x1 |
|--|----|--|----|
|  | |  | |
| M6x12mm | | Ø25 | |

8

