
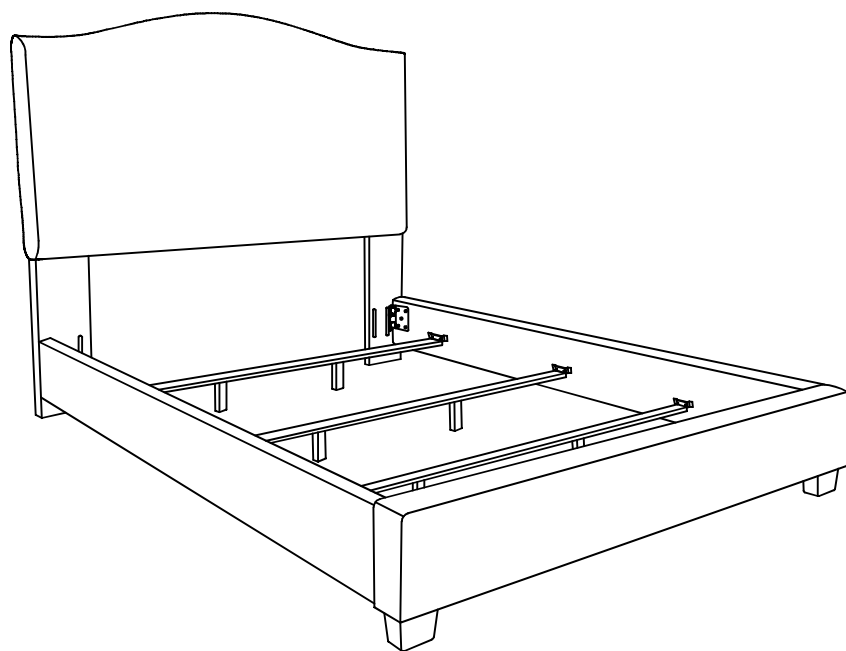
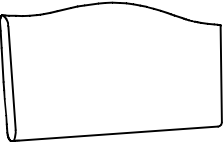


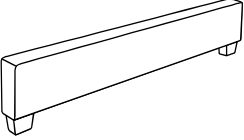
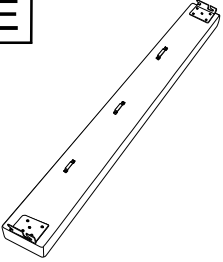



Upholstered Bed

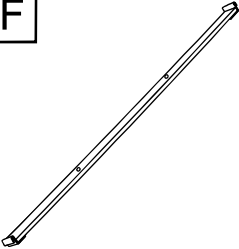

PART LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 	<div>E</div> 
<div>Headboard Panel</div> <div>1 PC</div>	<div>Left Headboard Post</div> <div>1 PC</div>	<div>Right Headboard Post</div> <div>1 PC</div>	<div>Footboard Panel</div> <div>1PC</div>	<div>Side Rail</div> <div>2 PCS</div>
<div>F</div> 	<div>G</div> 	<p>*Please note headboard panel, left headboard post and right headboard post will ship separately</p>		
<div>Slat</div> <div>3 PCS</div>	<div>Support Leg</div> <div>6 PCS</div>			

HARDWARE LIST

<div>#1</div>  <div>5/16"x1-3/4"L</div>	<div>#2</div> 	<div>#3</div> 	<div>#4</div>  <div>M5</div>
<div>Bolt</div> <div>11PCS(Extra1)</div>	<div>Spring Washer</div> <div>11PCS(Extra1)</div>	<div>Flat Washer</div> <div>11PCS(Extra1)</div>	<div>Allen Wrench</div> <div>1 PC</div>


Step 1. Lay headboard panel (part A) down on a soft surface, such as carpet, as shown below. Attach left headboard post (part B) and right headboard post (part C) to headboard panel (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

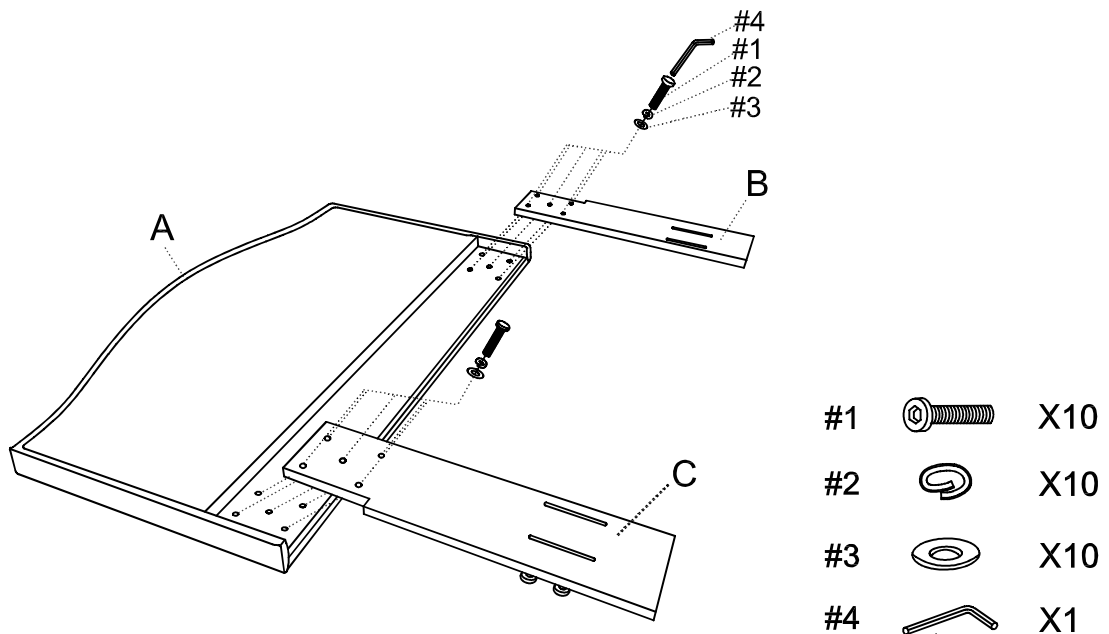


Step 2. Carefully turn assembled headboard upright. Attach side rails (part E) to headboard posts (parts B & C) and footboard panel (part D) using allen wrench (part #4) to screw out the bolts on the headboard posts (parts B & C) and footboard panel (part D), then hang up the side rails (part E) and secure the bolts using allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

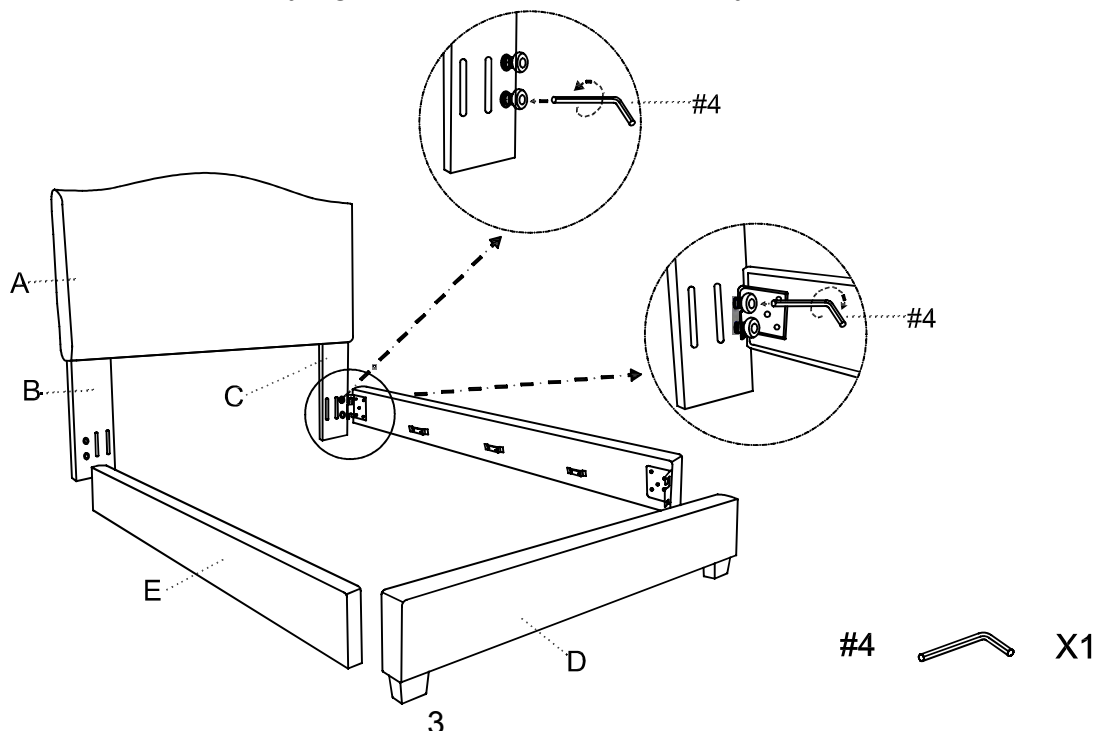

Step 3. Attach support legs (part G) to slats (part F).

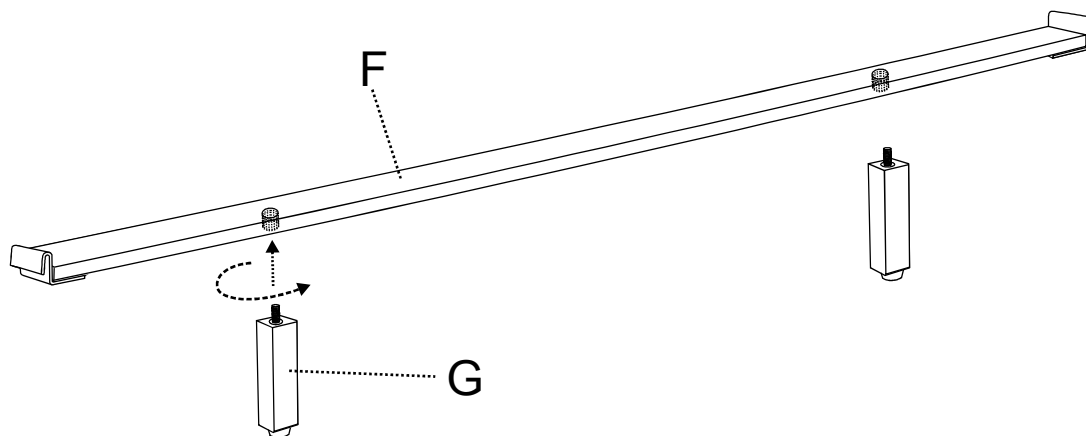

Step 4. Attach assembled slats (parts F & G) to side rails (part E) by fitting the metal supports in place.

NOTE: Please fully tighten all bolts at this time.

