




# Assembly Instruction



SCAN THIS QR CODE WITH YOUR  
SMARTPHONE CAMERA FOR  
ADDITIONAL INSTRUCTIONS

**MAKE SURE THE LETTERS  
MATCH BEFORE ASSEMBLING**

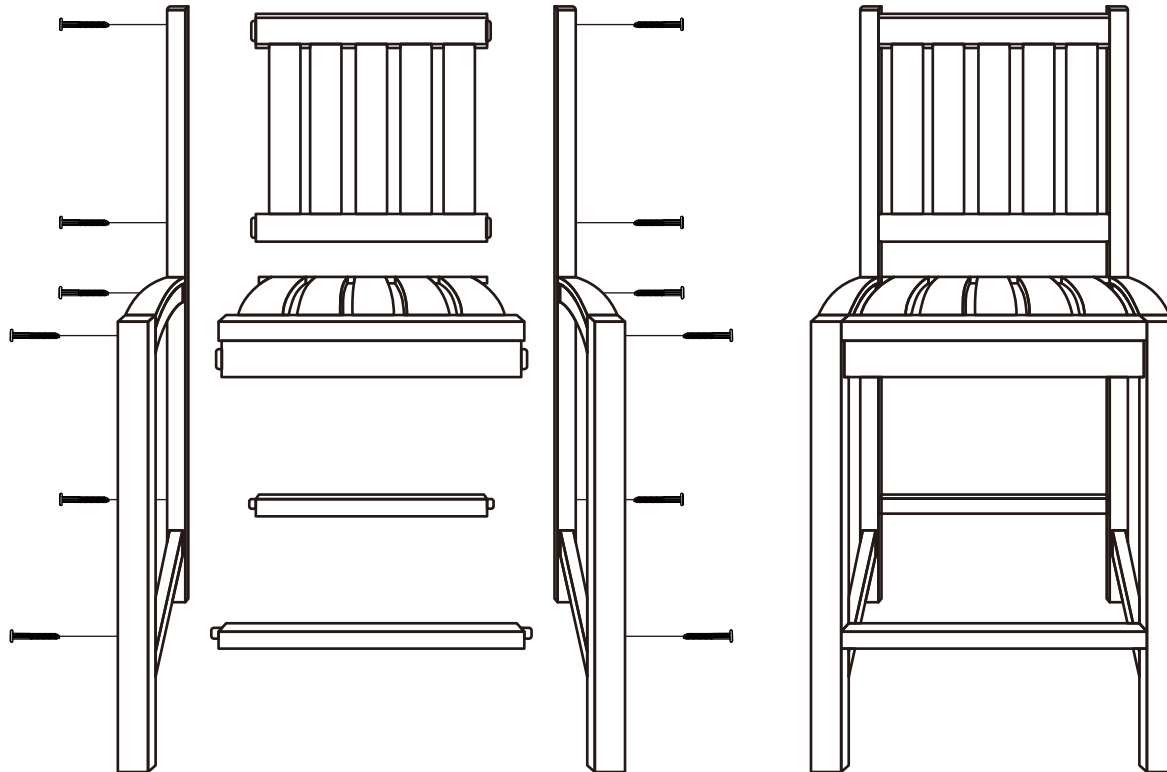

**Make sure to use Glue on all wood  
joints before assembly  
(Included in package)**

**Code**

**AM201DC**

**Hardware**



**1. F. Bolt 50 mm (12 Pcs)**

**Tool**



Socket Wrench 4m/m Ht

**Total Section**

**6 Section**