



Assembly Instructions

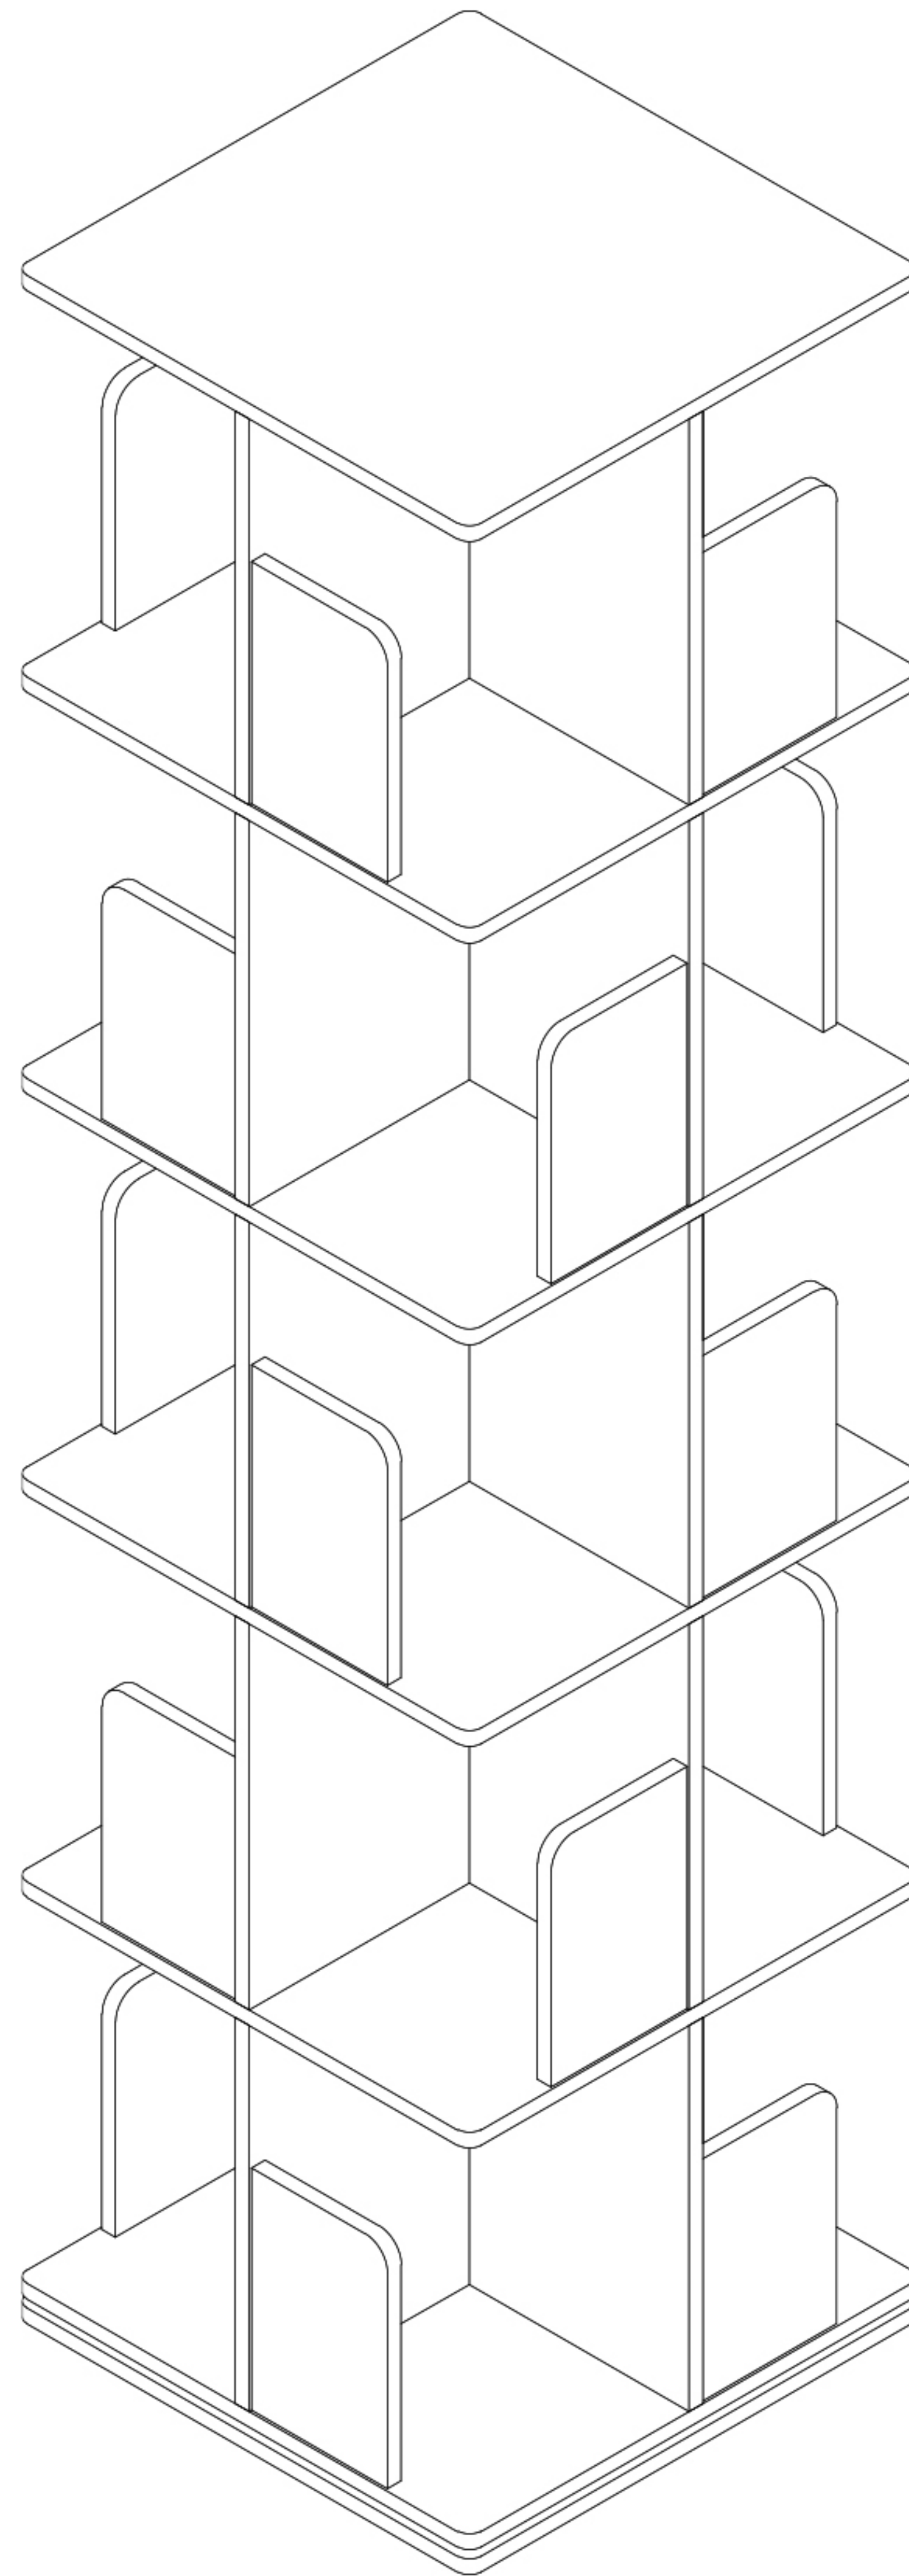

**DESIGN
TRANSFORMS
LIFE**

Product Attributes

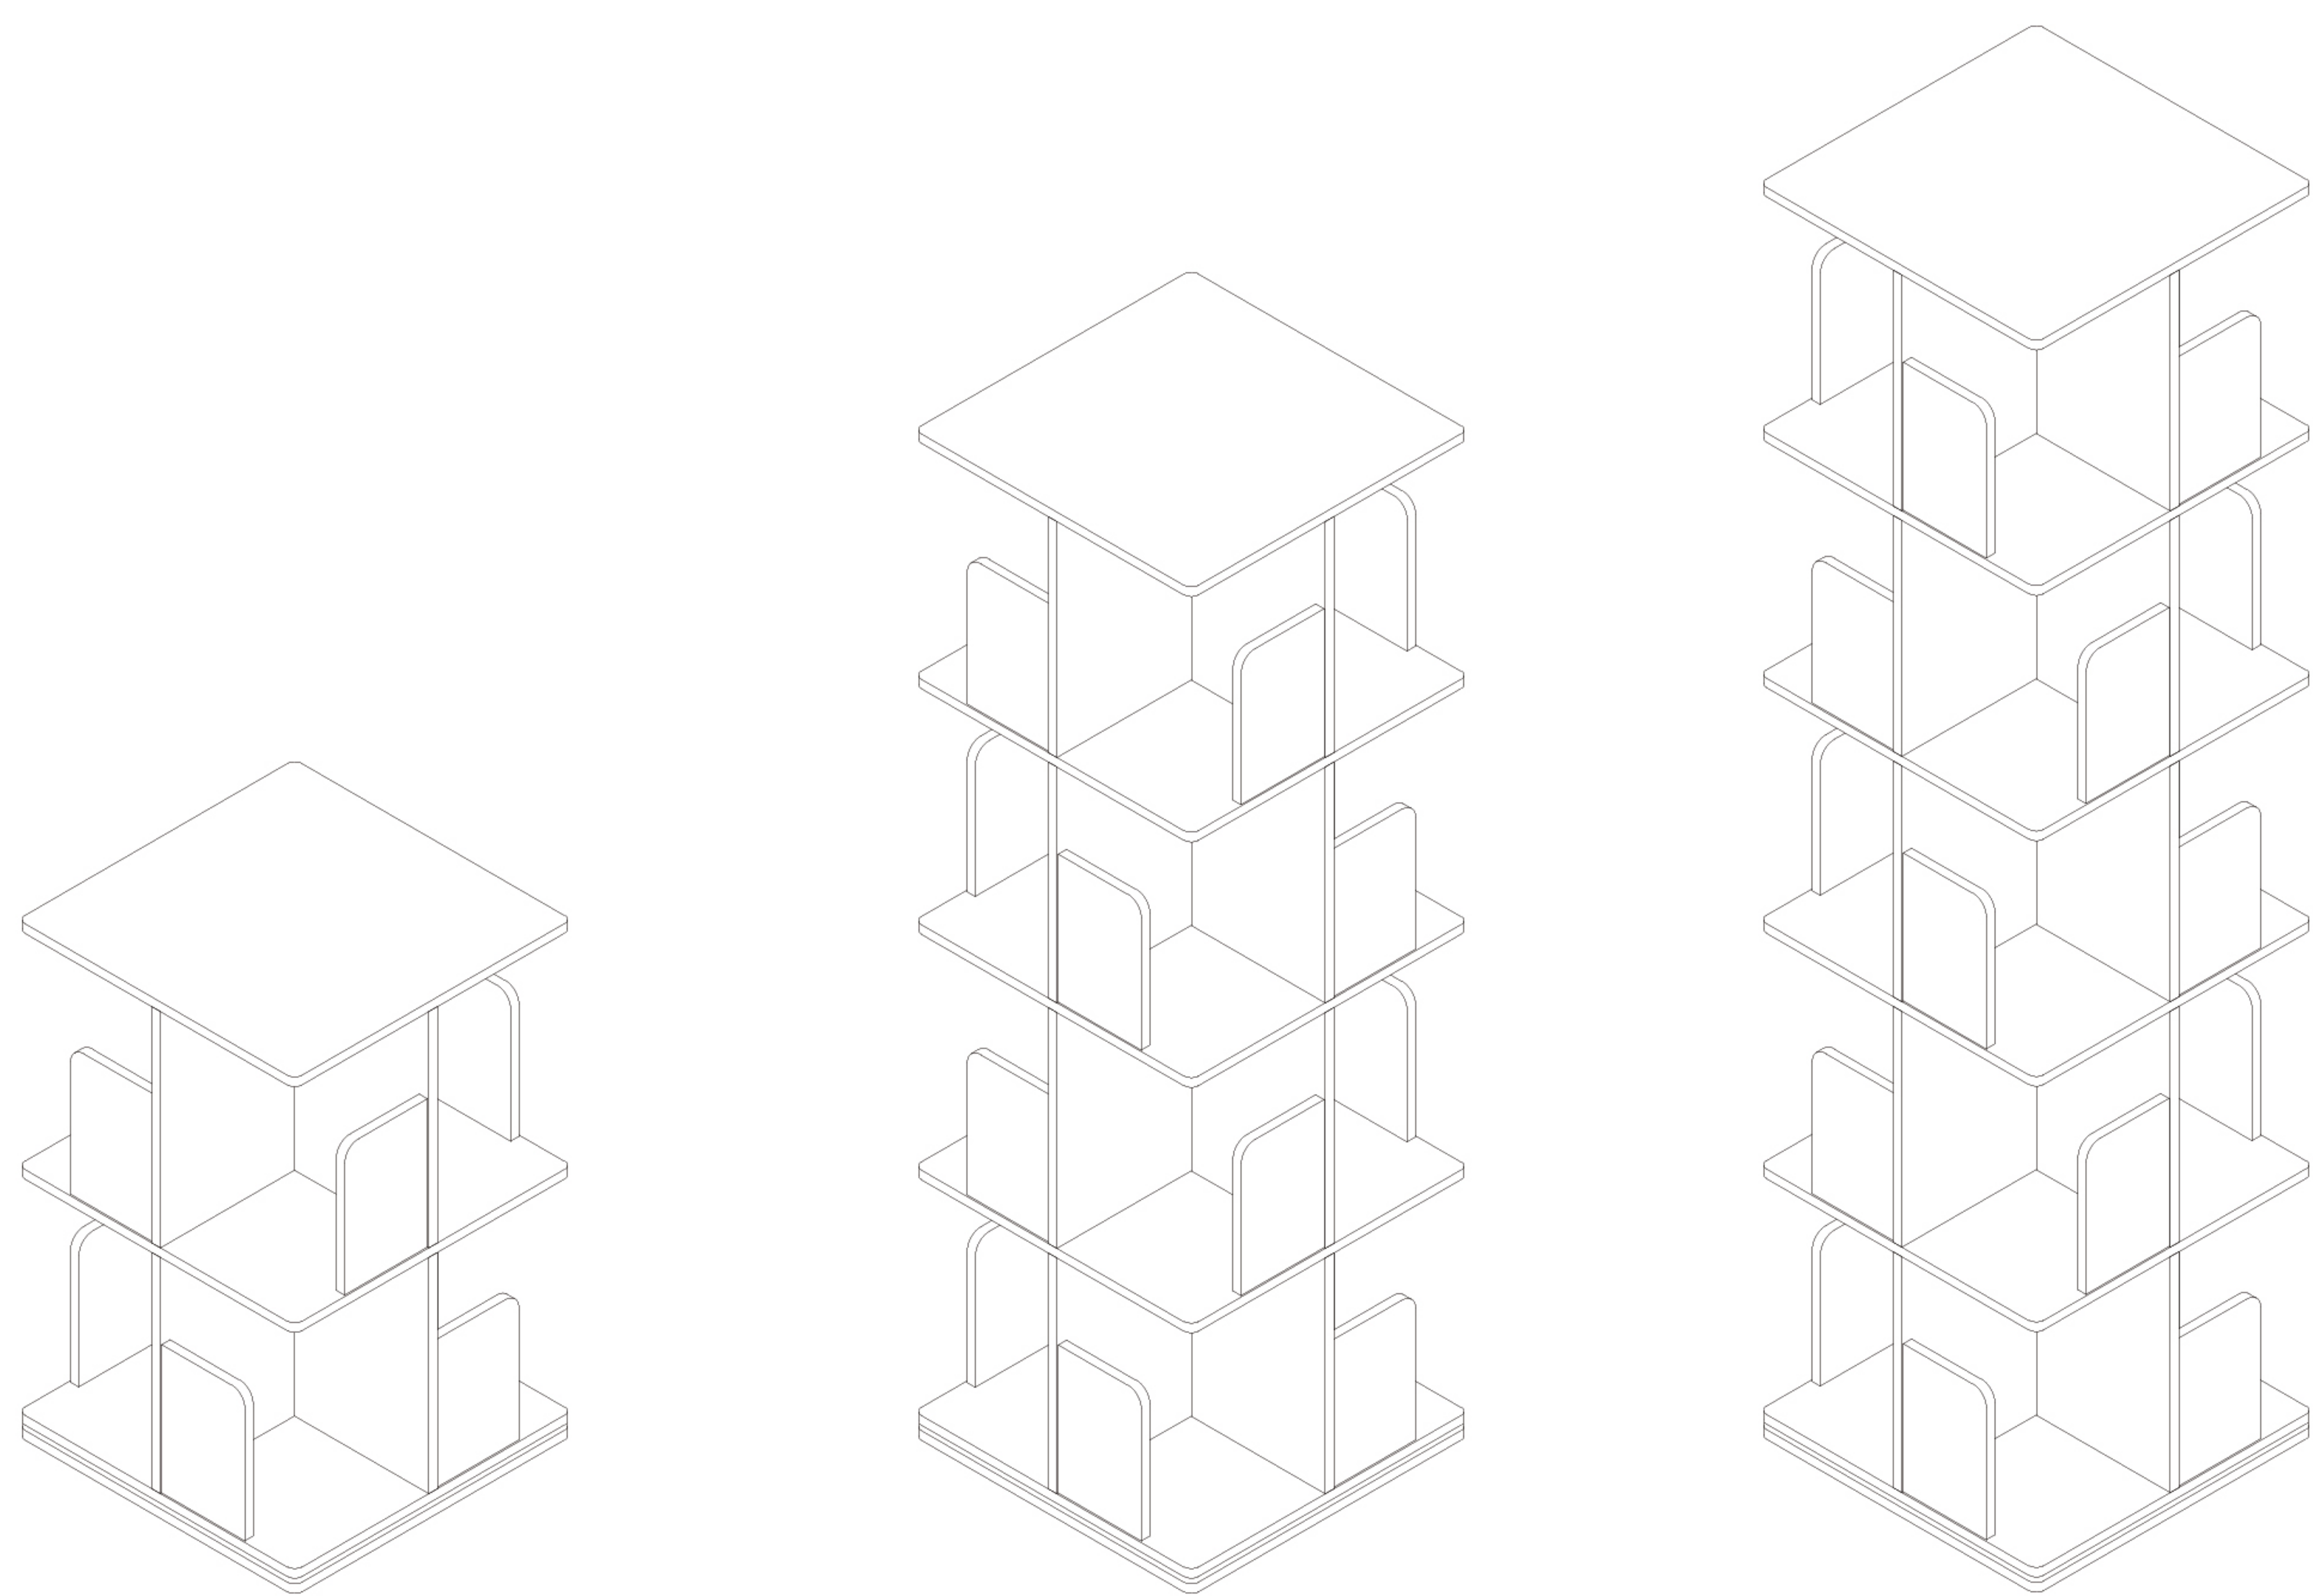

Material


Particle Board	Plywood	Rubberwood
	✓	

Specification













2 Tiers	4 Tiers	5 Tiers
		✓

Color






✓ Walnut	Black	White	Natural
----------	-------	-------	---------

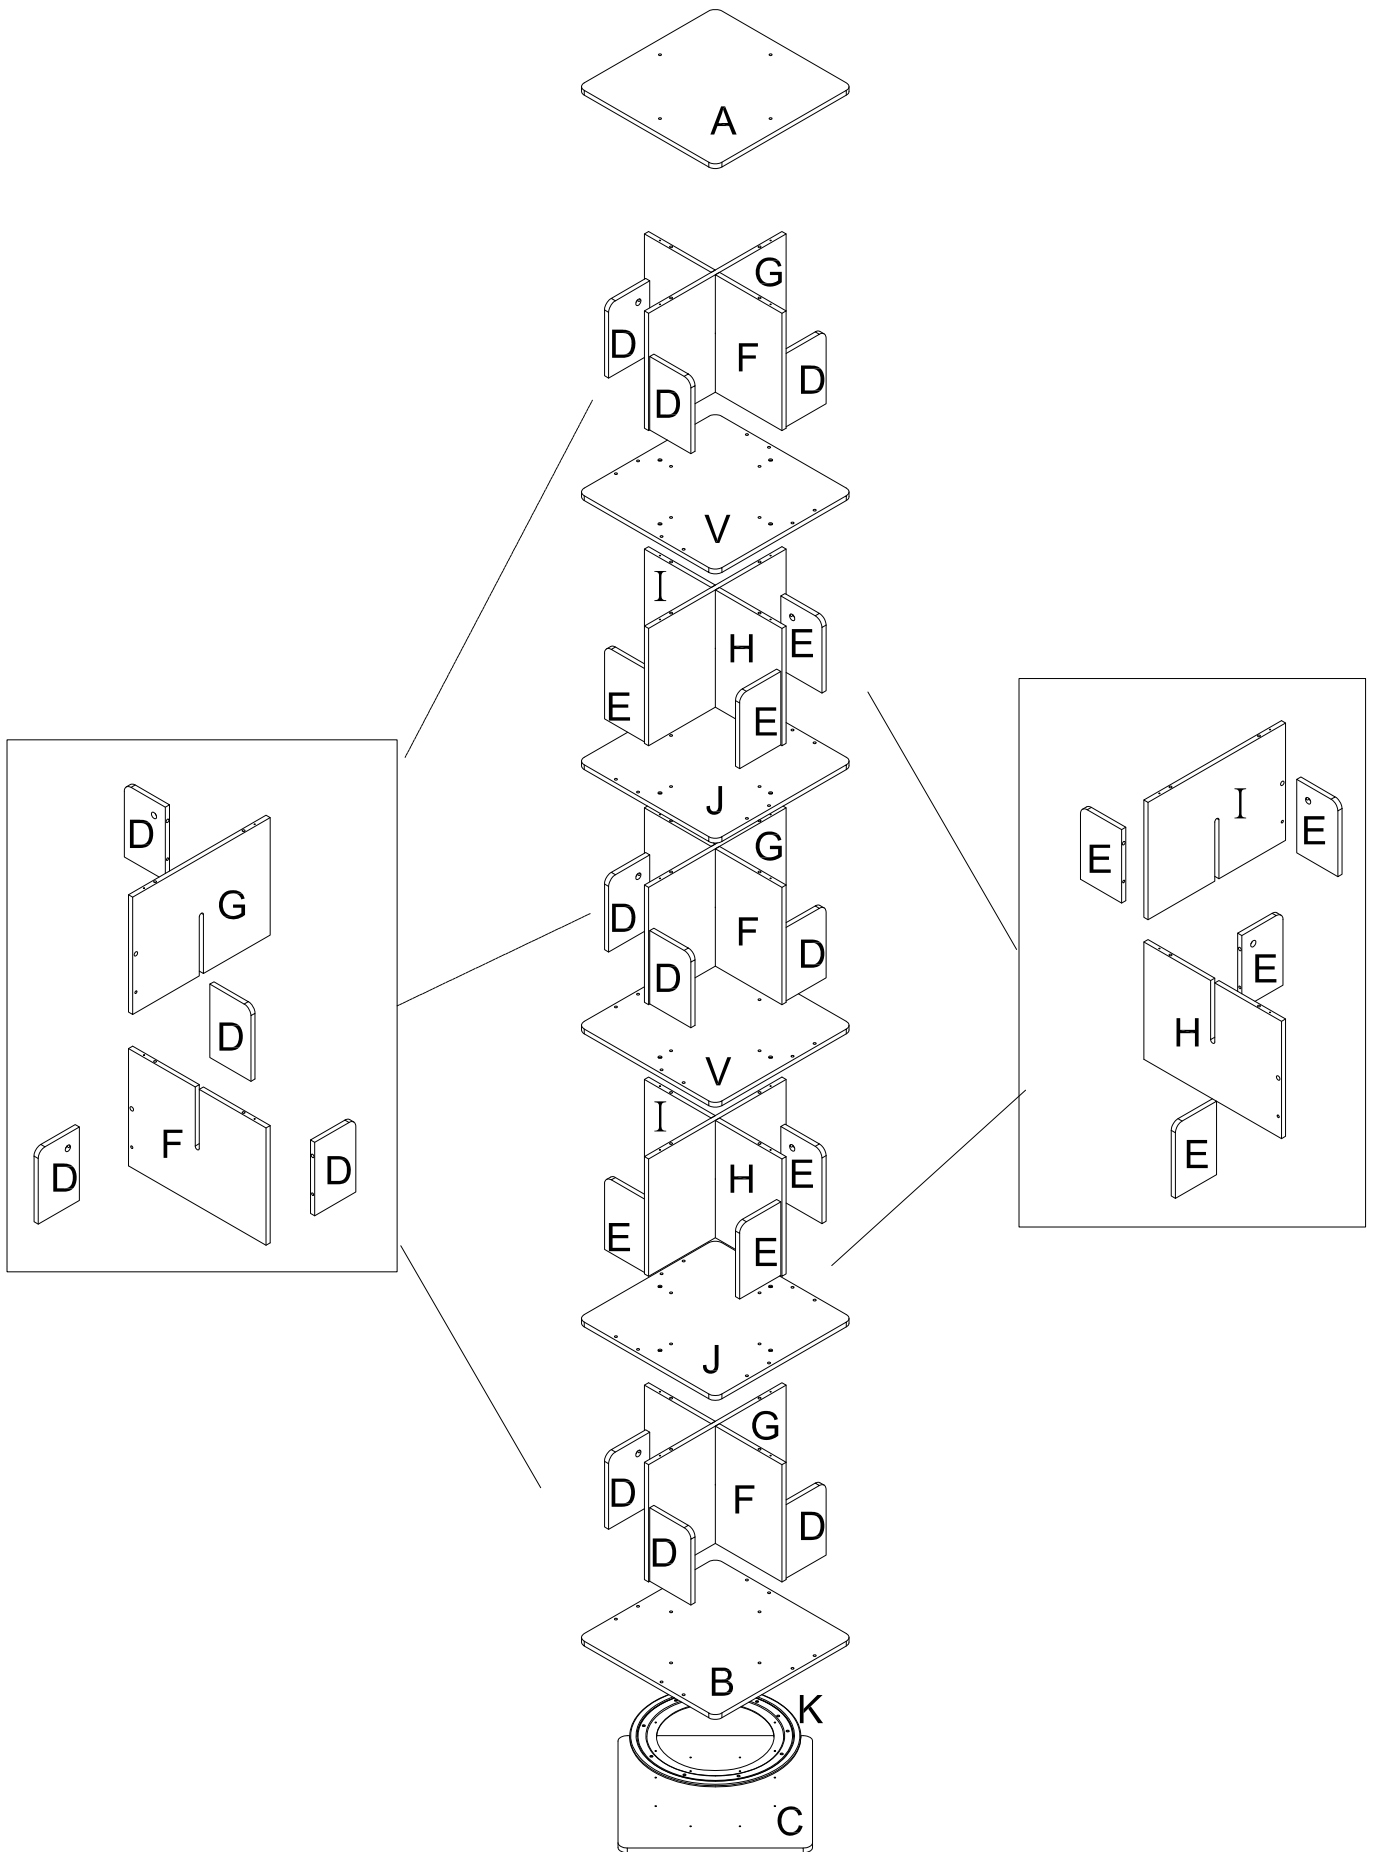

Parts & Hardware List

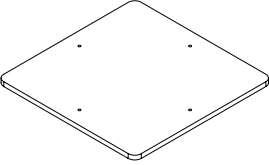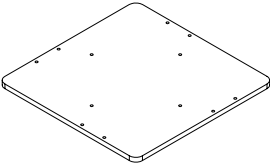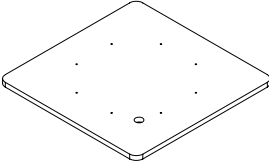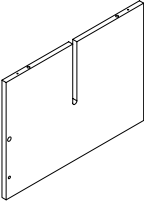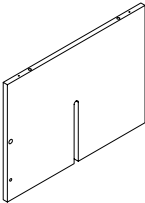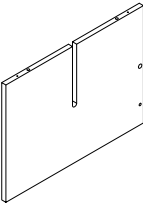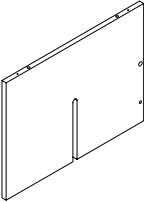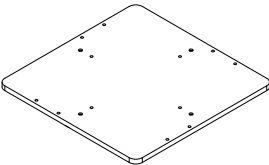
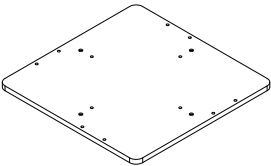

A  X1	B  X1	C  X1
D  X12	E  X8	F  X3
G  X3	H  X2	I  X2
J  X2	V  X2	K  X1

Parts & Hardware List


L	 5mm*40mm	60 +2
M	 3.5mm*12mm	8 +1
N	 35mm	20 +1
O	 15mm*9mm	20 +1
P		1
Q	 6mm*50mm	16 +1
R	 6mm*30mm	28 +1
S		1
T	 M6*10mm	4
U		4

Assembly Steps


CAM BOLT INSTALLATION AS BELOW:

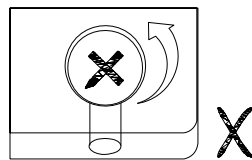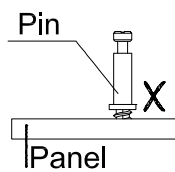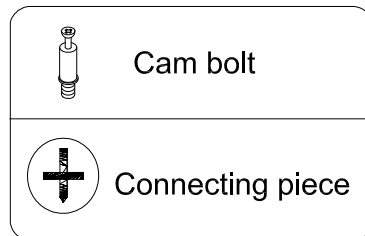

Rotate connecting piece if found in the position illustrated above.






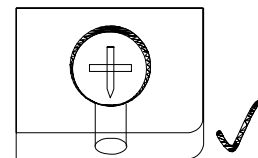


Correct orientation to receive bolts.

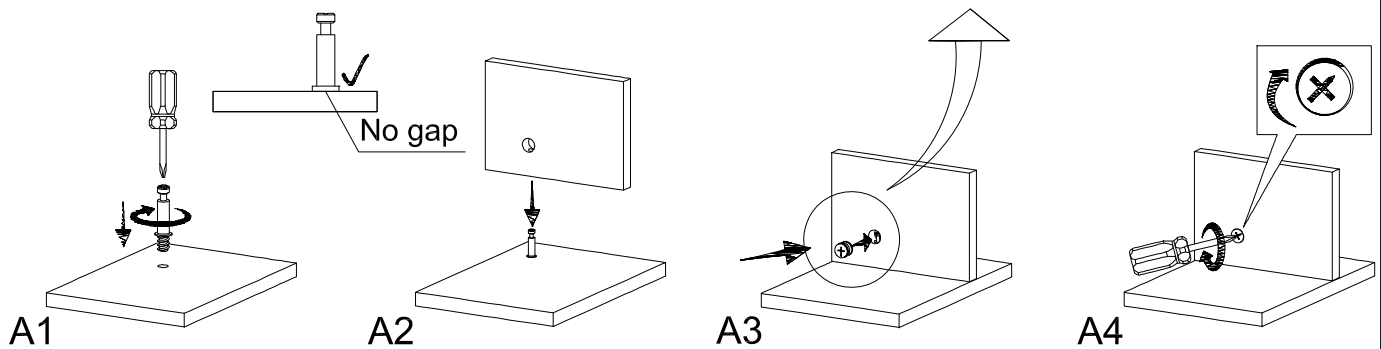







Assembly Steps

STEP 1		
N		12
R		12
O		12

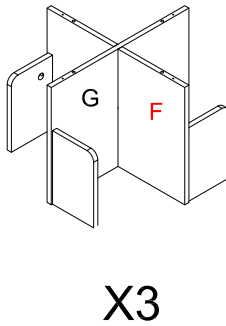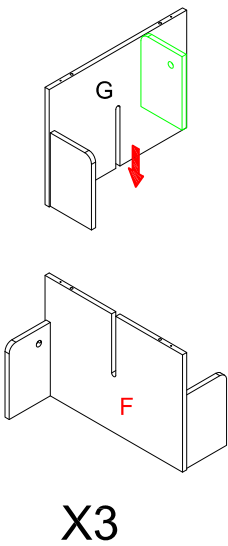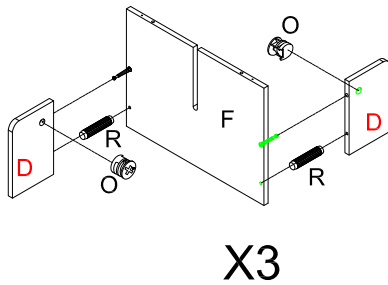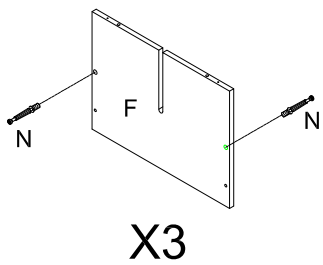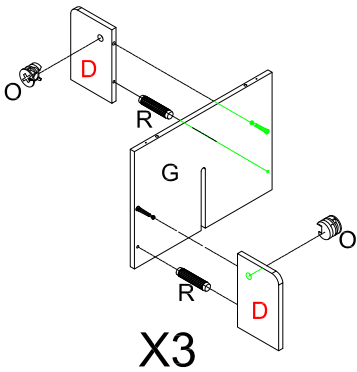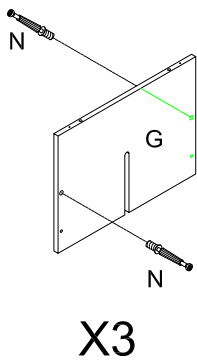

Assembly Steps



STEP 2		
N		8
R		8
O		8

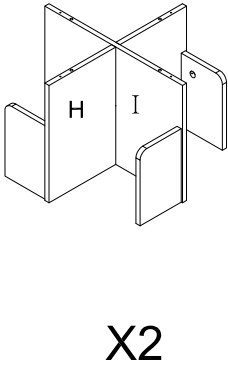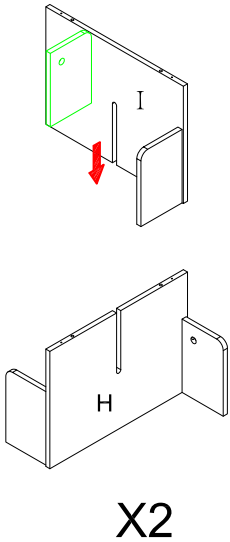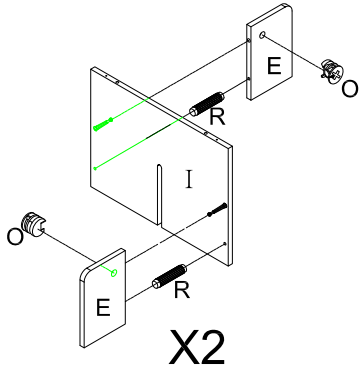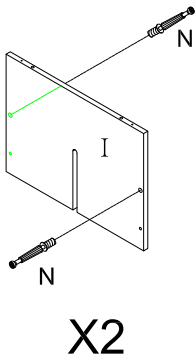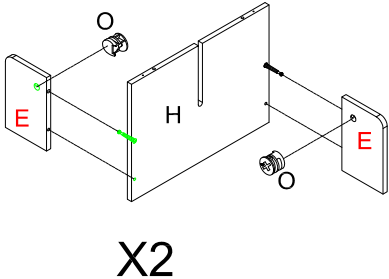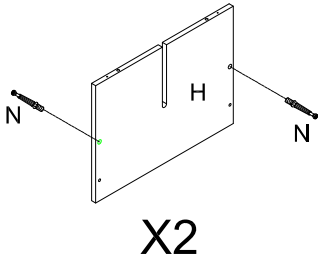

Assembly Steps






STEP 3

L		12
P		
R		4

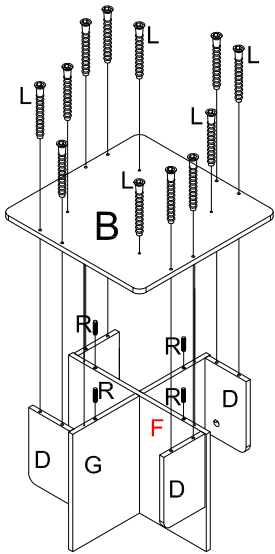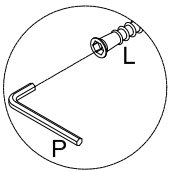





STEP 4

M		8
T		4
U		4

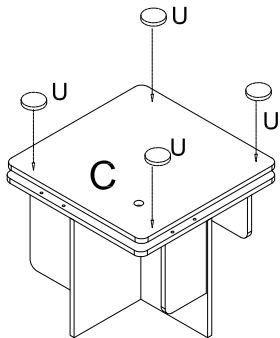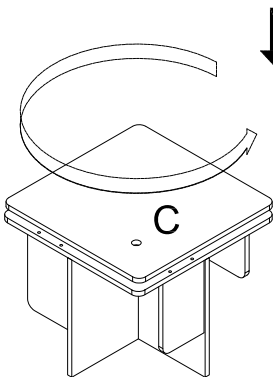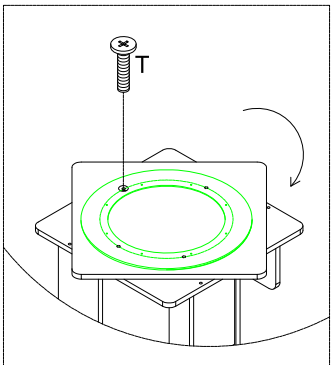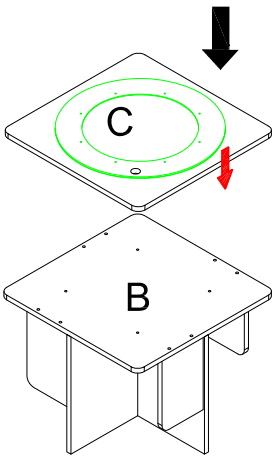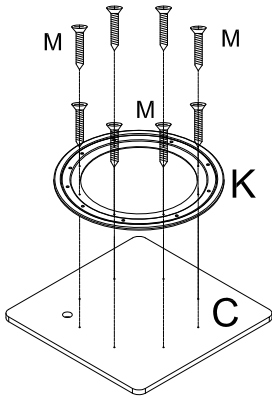

Assembly Steps




STEP 5		
Q		4
P		
L		8

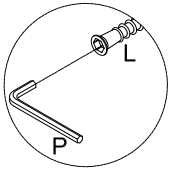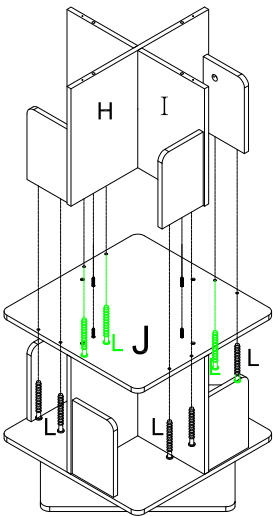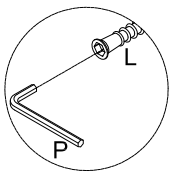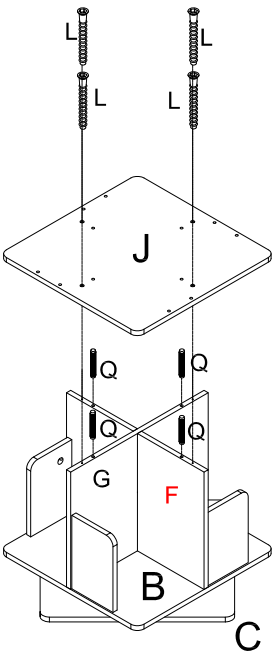

Assembly Steps




STEP 6

Q		4
P		
L		12

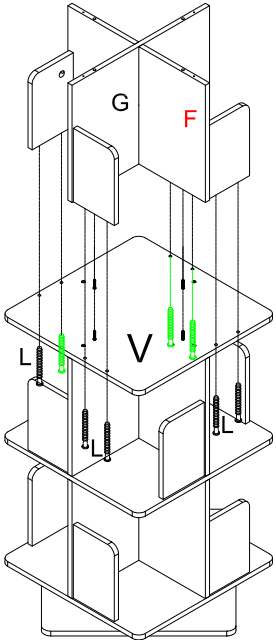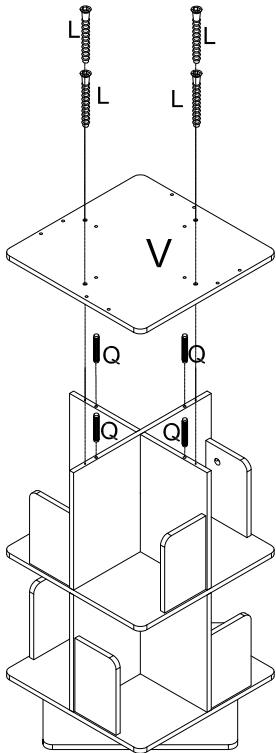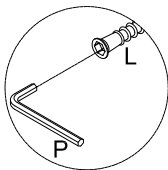




STEP 7

Q		4
P		
L		12

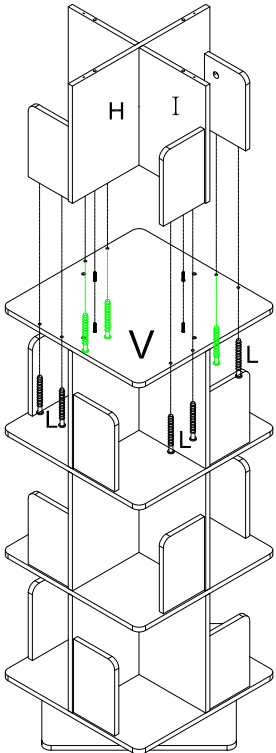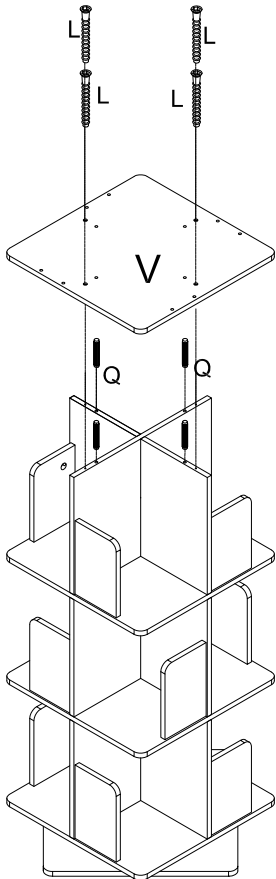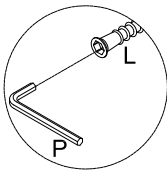


Assembly Steps

STEP 8		
Q		4
P		
L		12

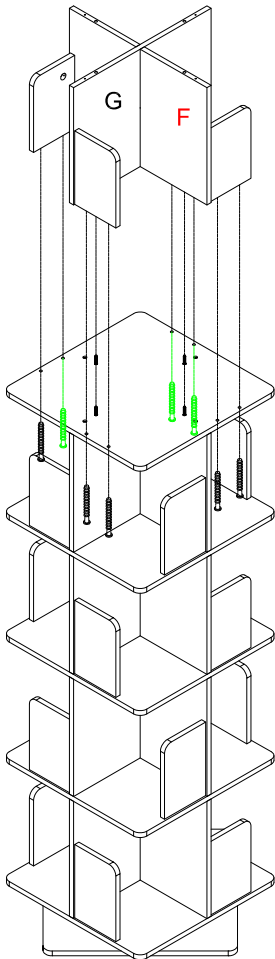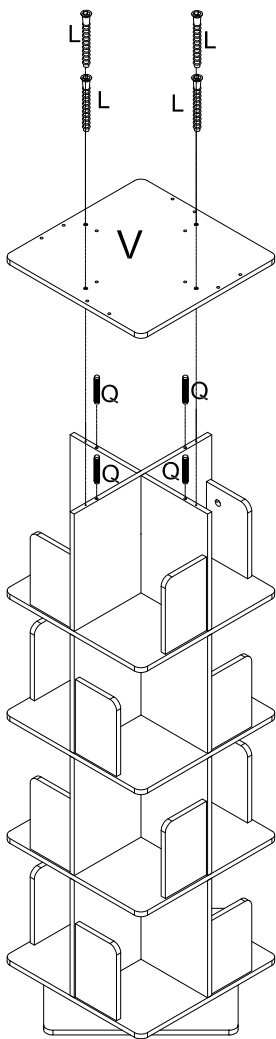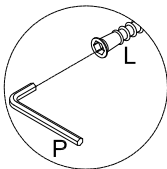

Assembly Steps

STEP 9		
P		
L		4
R		4

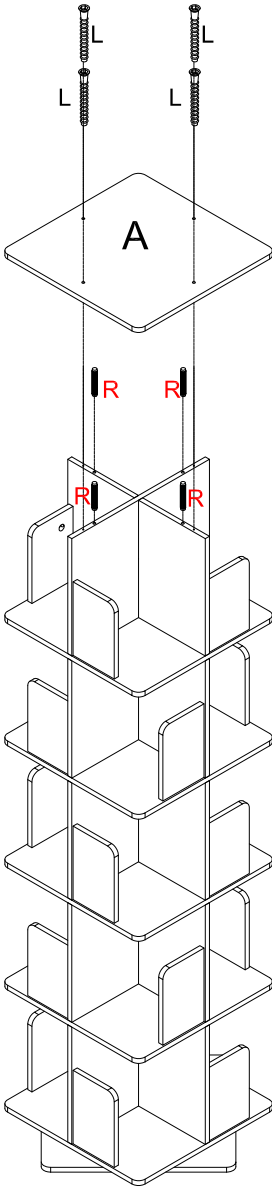

Assembly Steps

STEP 10

