


ASSEMBLY INSTRUCTIONS


QUEEN FLOOR BED

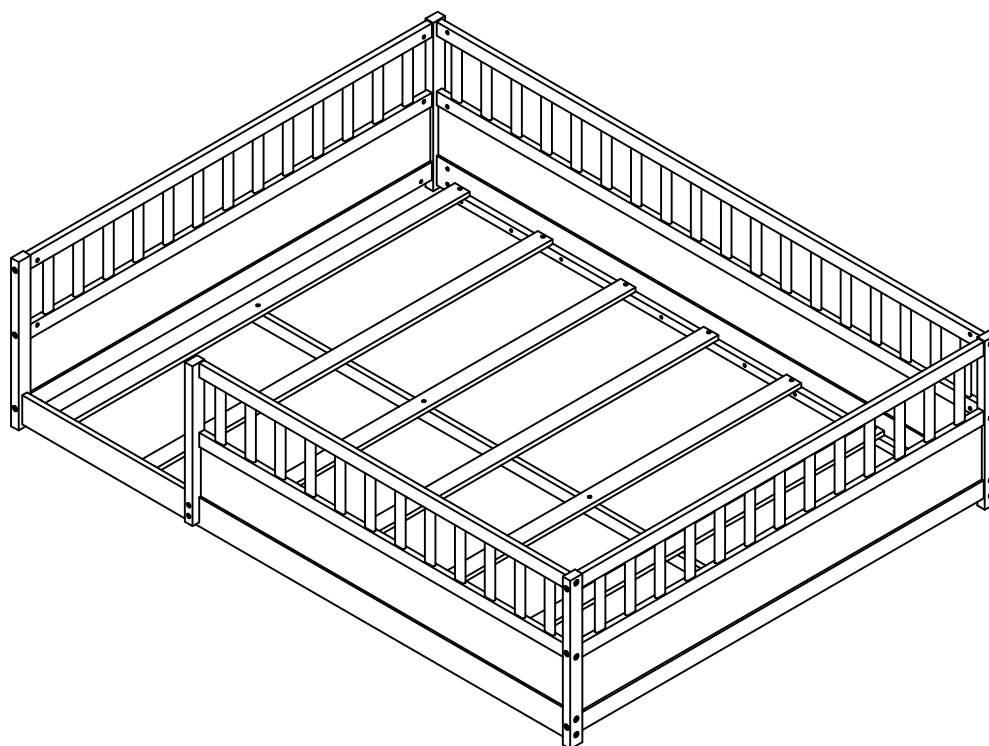








SWB028-Q

Contact us: 13826959116@163.com




Detail View

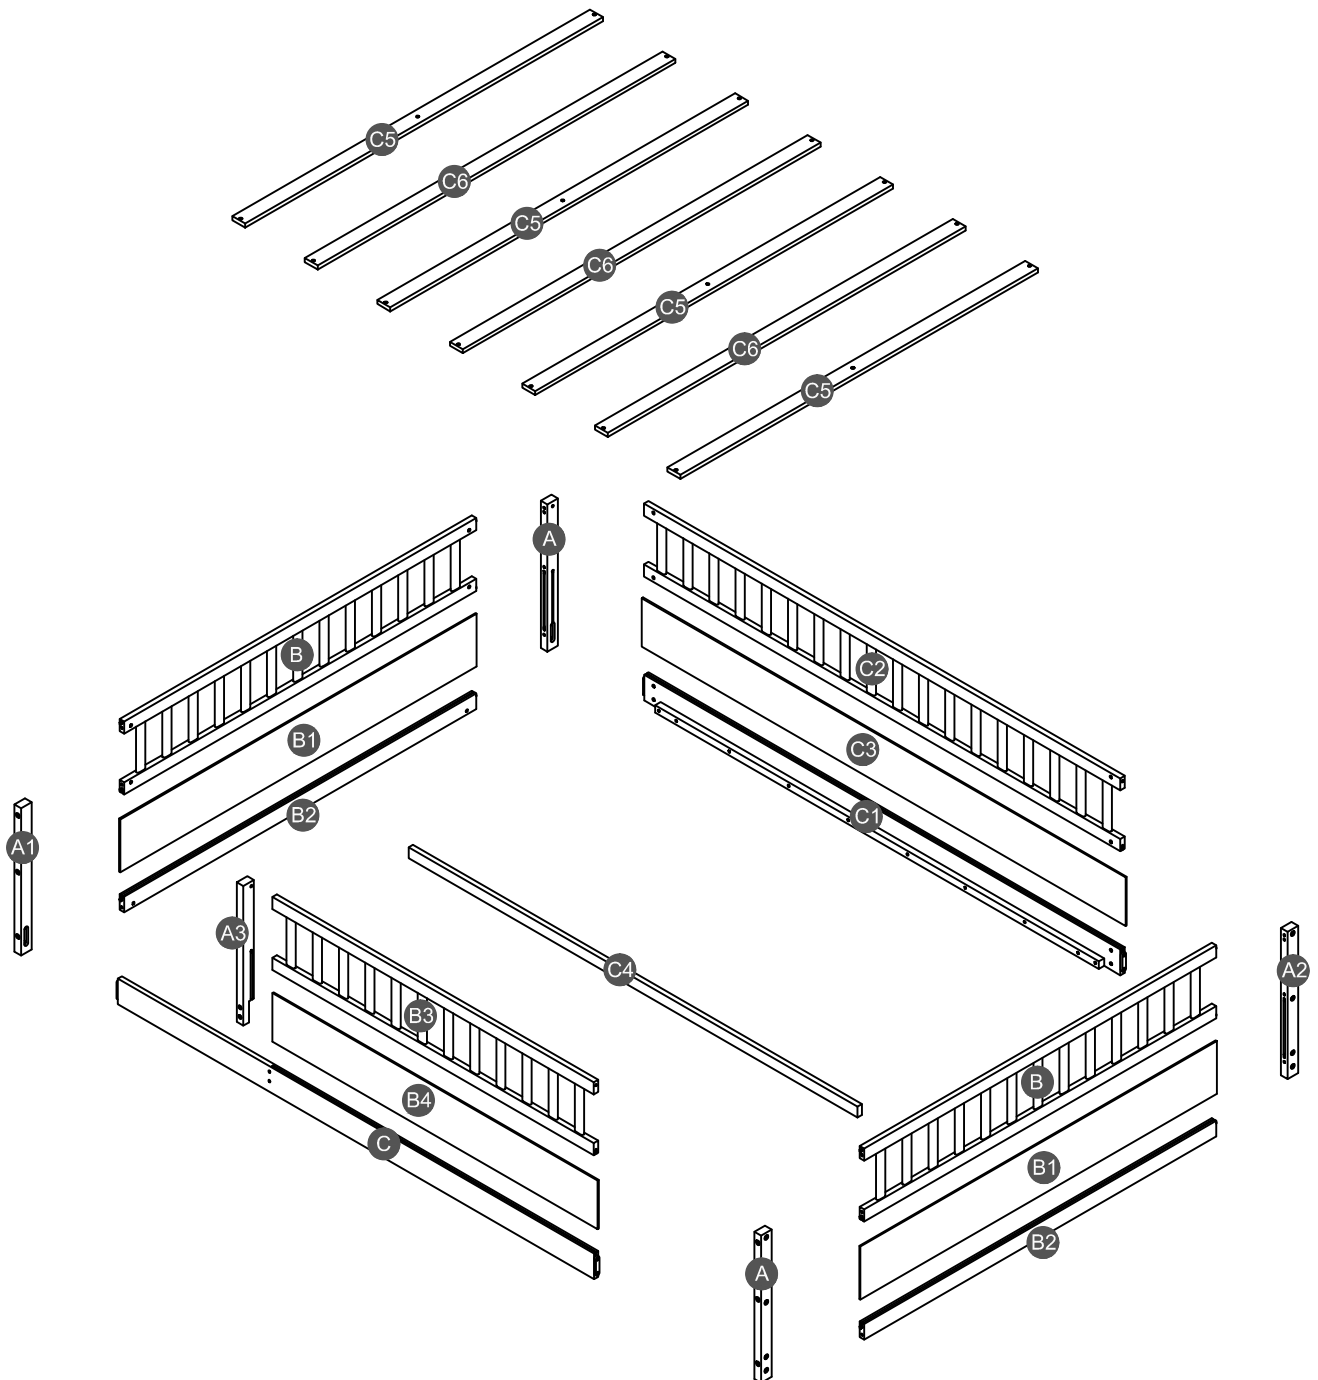

Part List



A  Leg (left back/right front) - 2pcs	A1  Leg (left front) - 1pc	A2  Leg (right back) - 1pc
A3  Support guard rail - 1pc	B  Frame HB/FB - 2pcs	B1  Side Panel HB/FB - 2pcs
B2  Lower horizontal bar HB/FB - 2pcs	B3  Guard rail (Front) - 1pc	B4  Side Panel (Front) - 1pc
C  Side rail (front) - 1pc	C1  Side rail (back) - 1pc	C2  Guard rail (back) - 1pc
C3  Side Panel (back) - 1pc	C4  Lower support slat - 1pc	C5  Slat - 4pcs
C6  Slat - 3pcs		

Hardware List

1	 (Ø15)1/4"*80mm Hex-Head bolts (26pcs)	2	 (Ø12)1/4"*70mm Hex-Head bolts (2pcs)	3	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
4	 1/4"*15 (9.5mm) Horizontal-Hole bolts(28pcs)	5	 Ø4*30mm Wood screws (18pcs)	6	 (1/4")4.5*58mm Allen key (1pc)

OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)


OUTILS FACULTATIFS POUR L'ASSEMBLAGE (NON INCLUS)




Electric
Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !
NE PAS UTILISEZ DES OUTILS ÉLECTRIQUES POUR ASSEMBLER CE PRODUIT !

STEP 1:

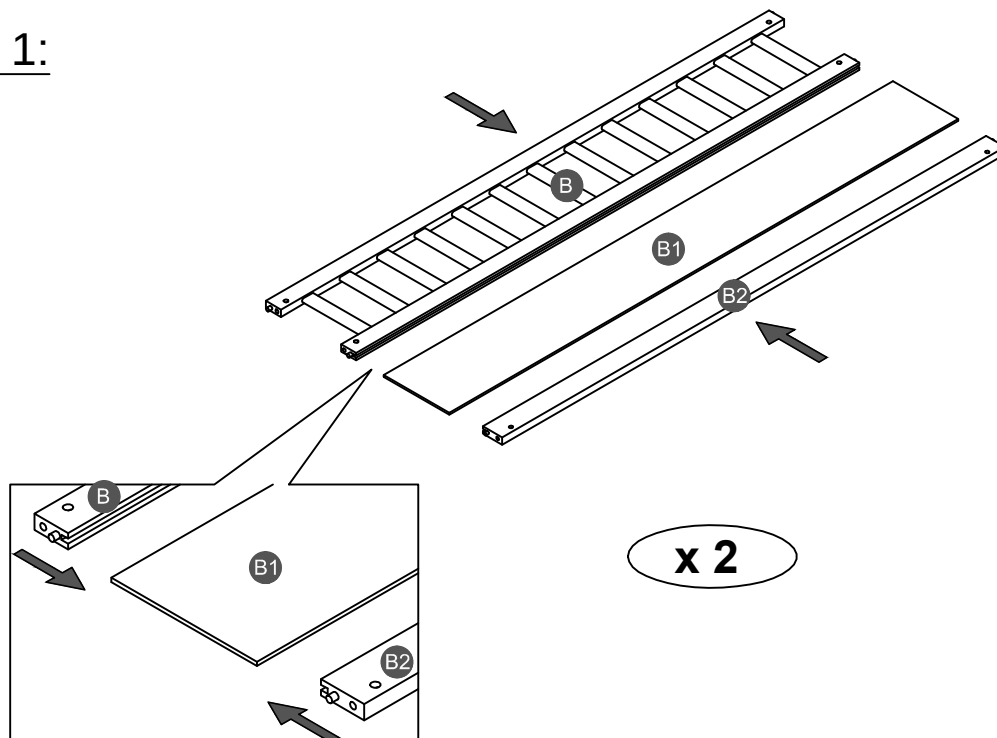


STEP 2:

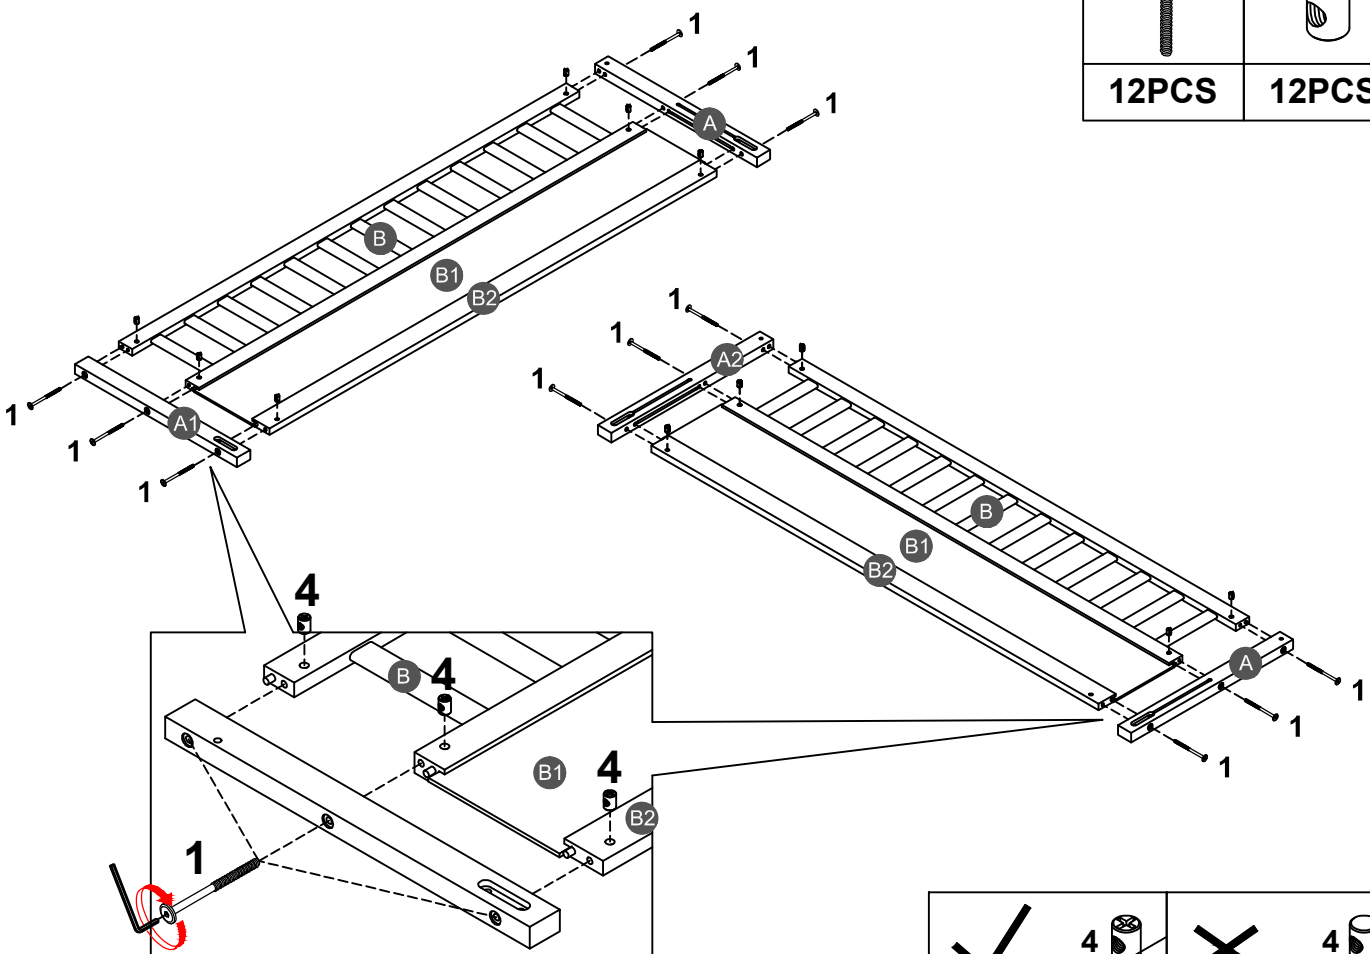


1	4
12PCS	12PCS


Note: Part 4 will face up with the "x" mark on it, otherwise it cannot be tightened

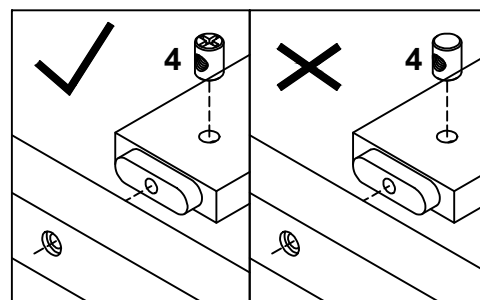

STEP 3:


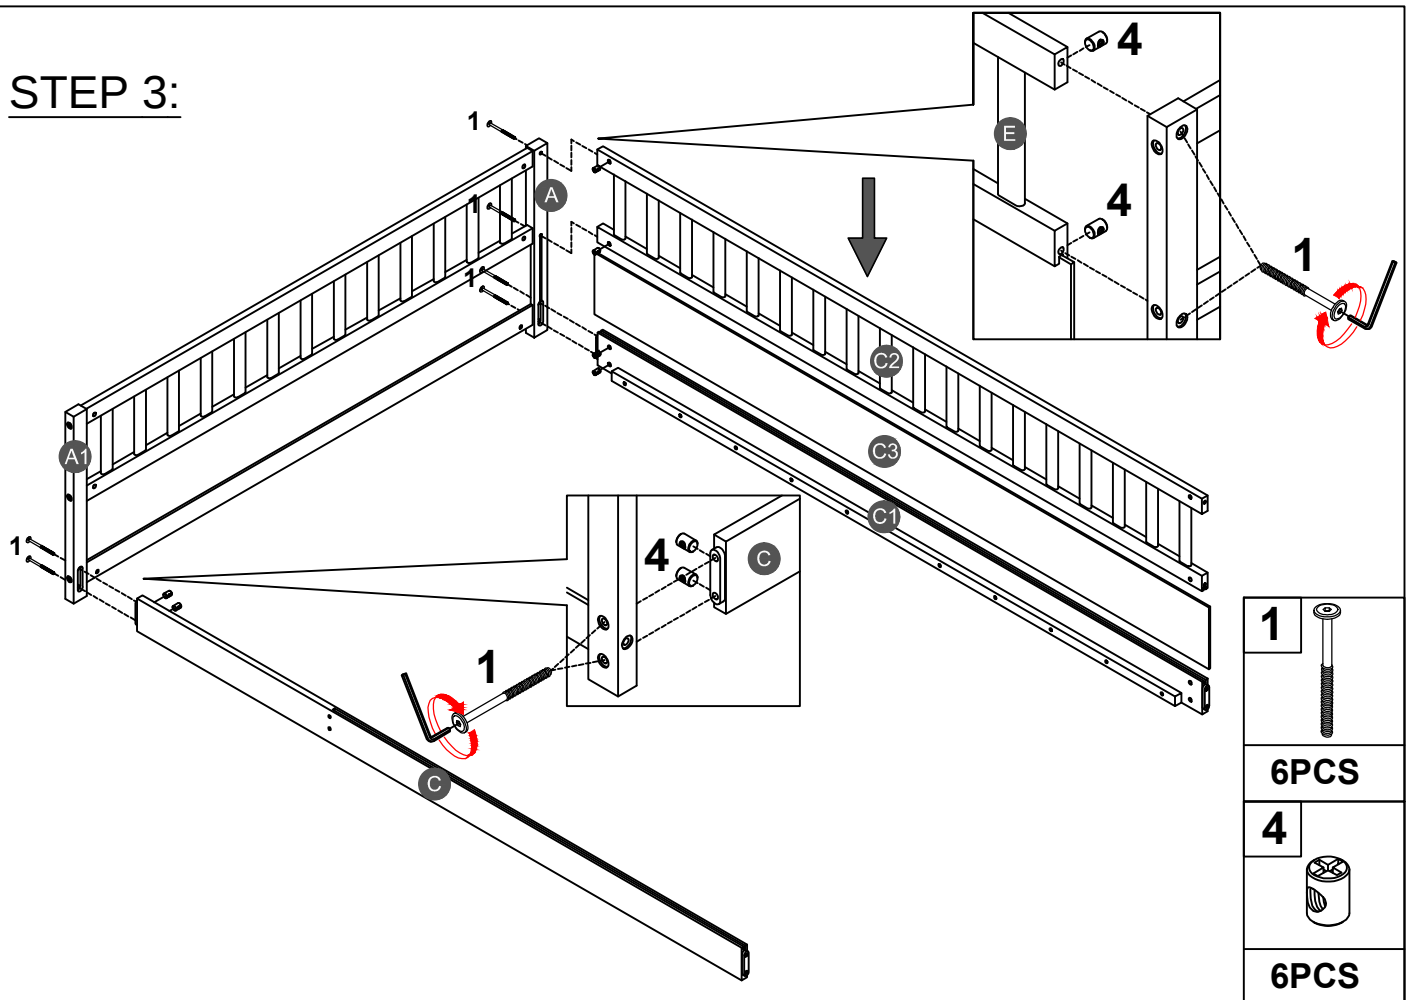


STEP 4:

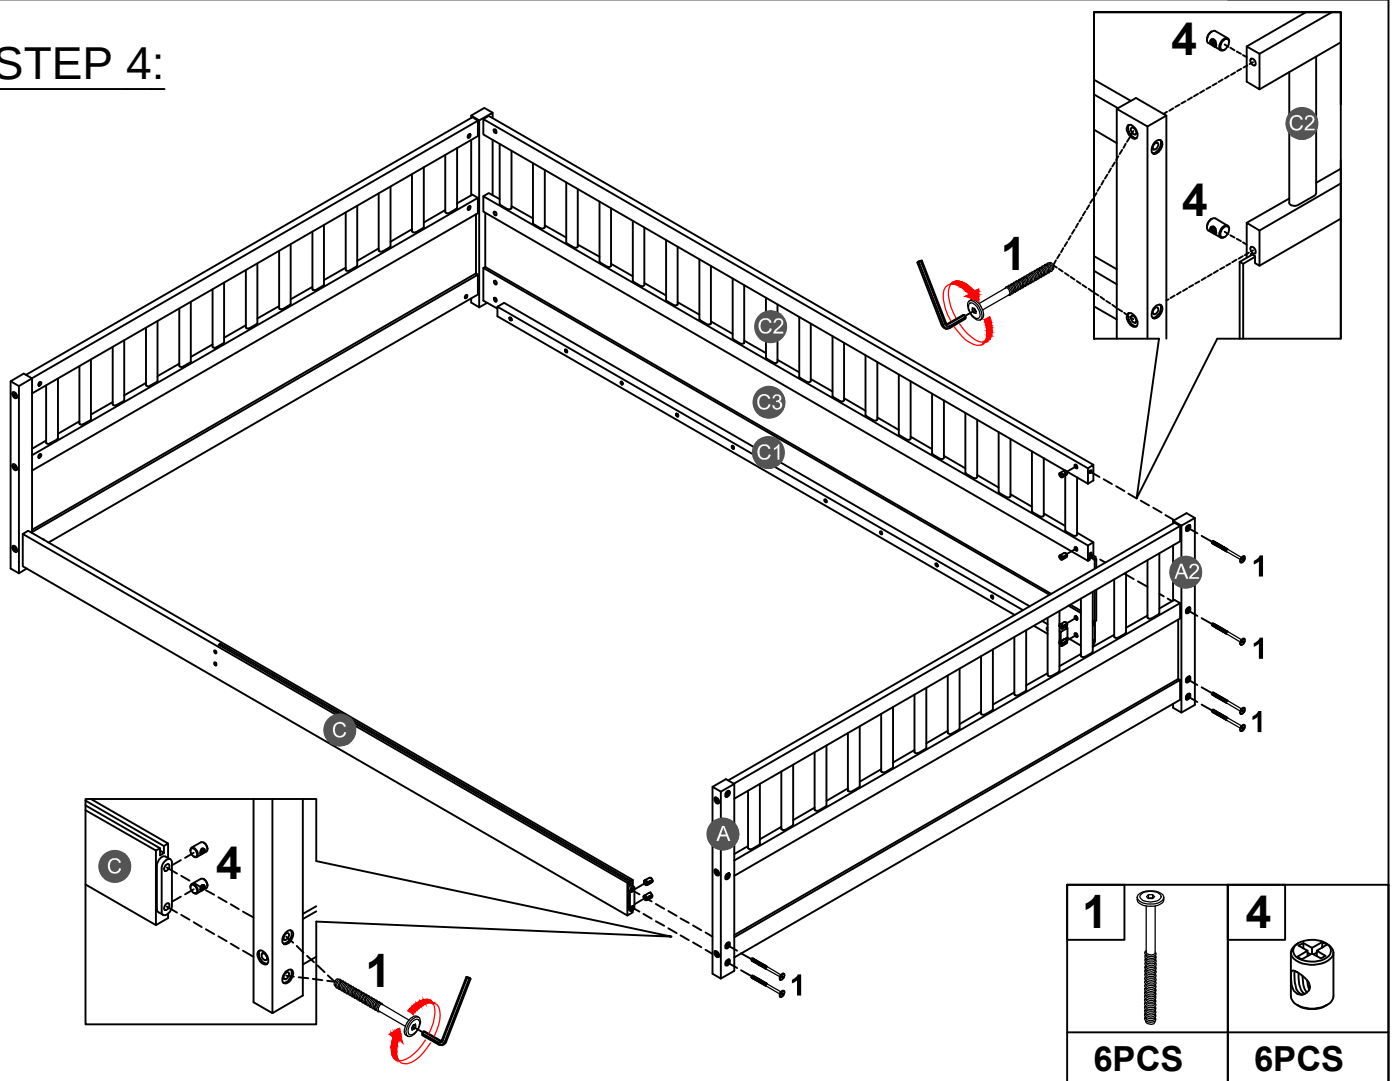


STEP 5:

1		4	
2PCS		2PCS	

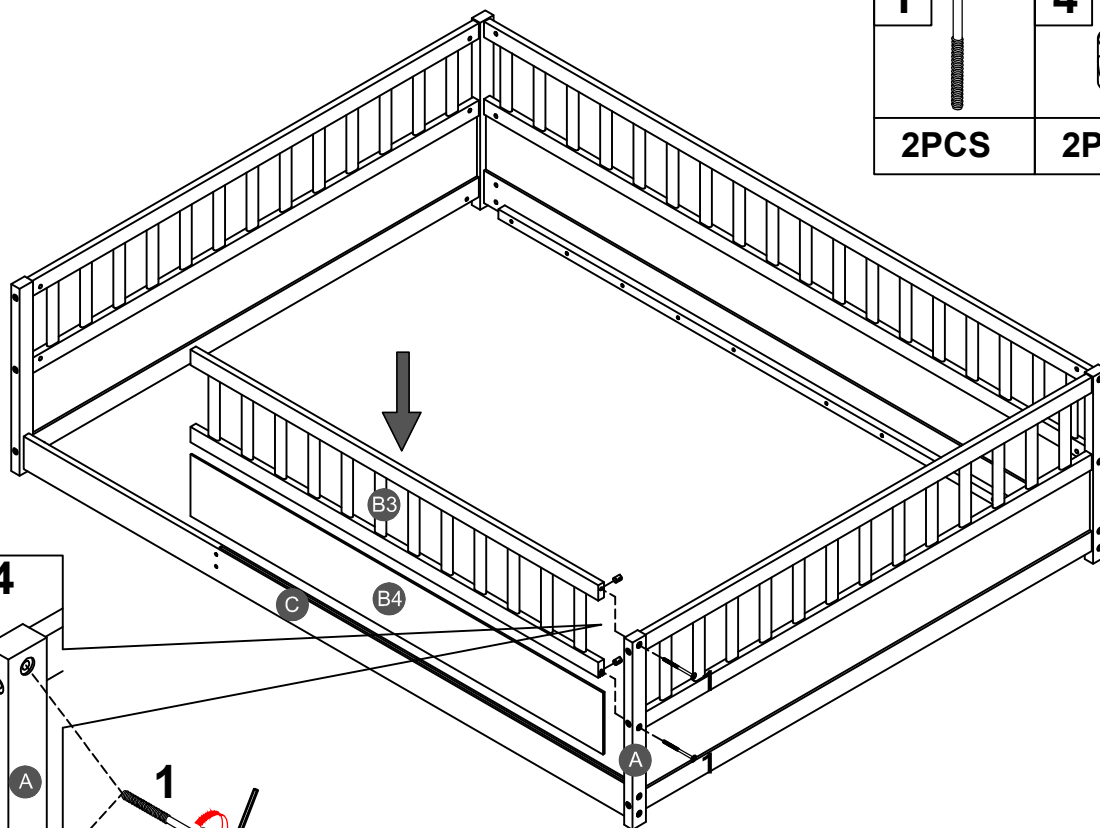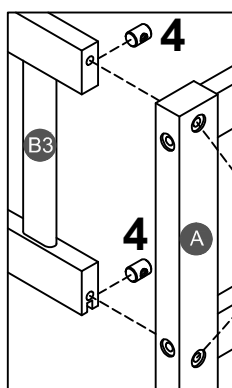


STEP 6:

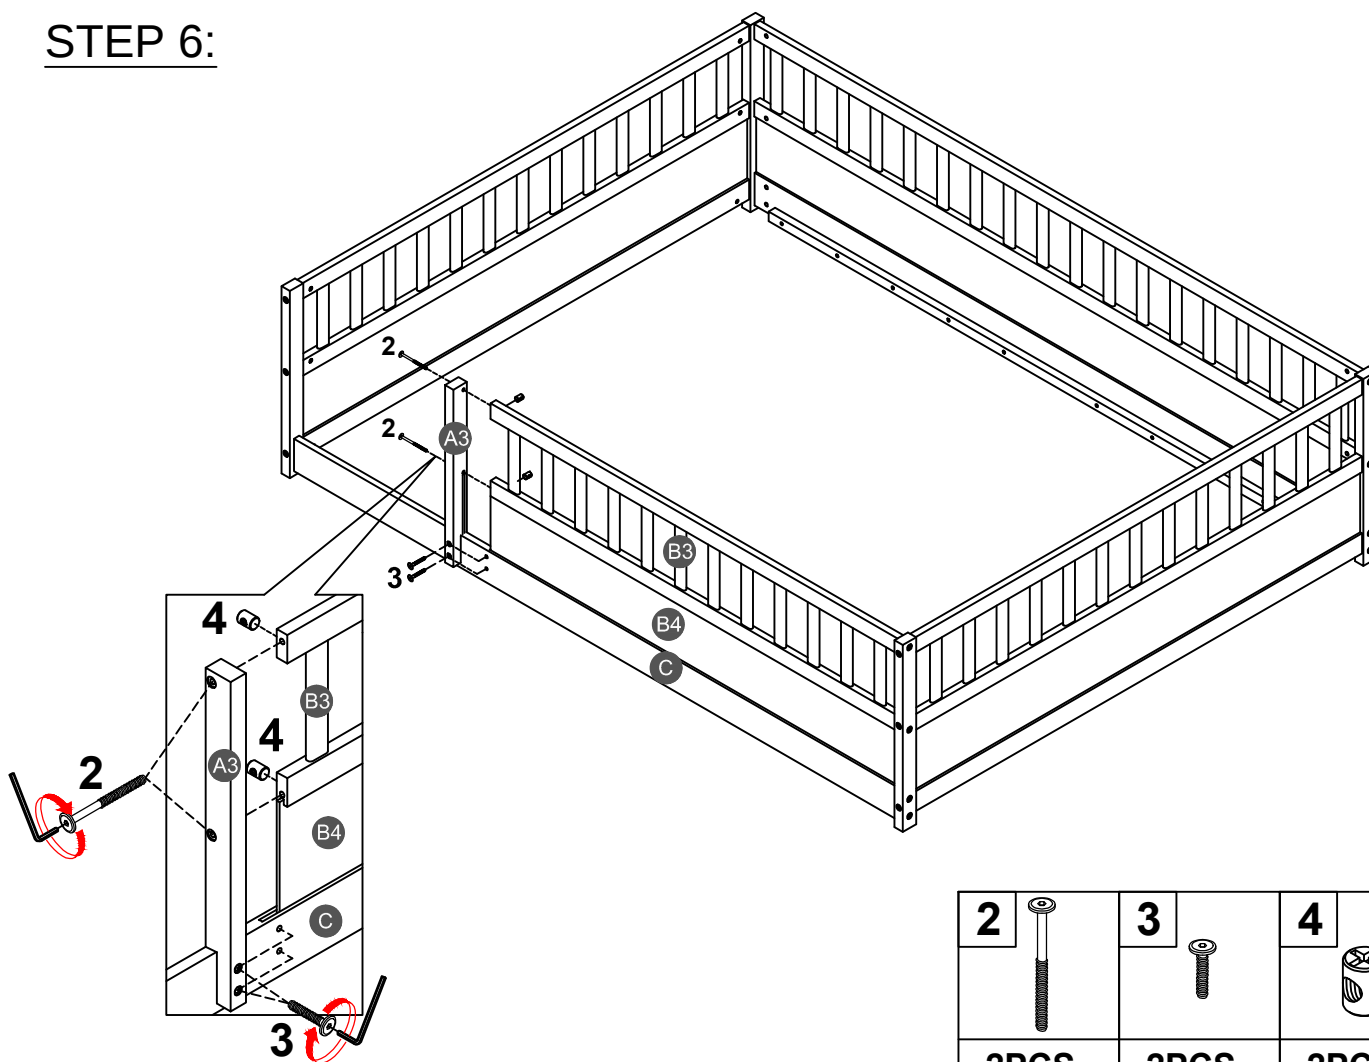

2		3		4	
2PCS		2PCS		2PCS	

STEP 7:

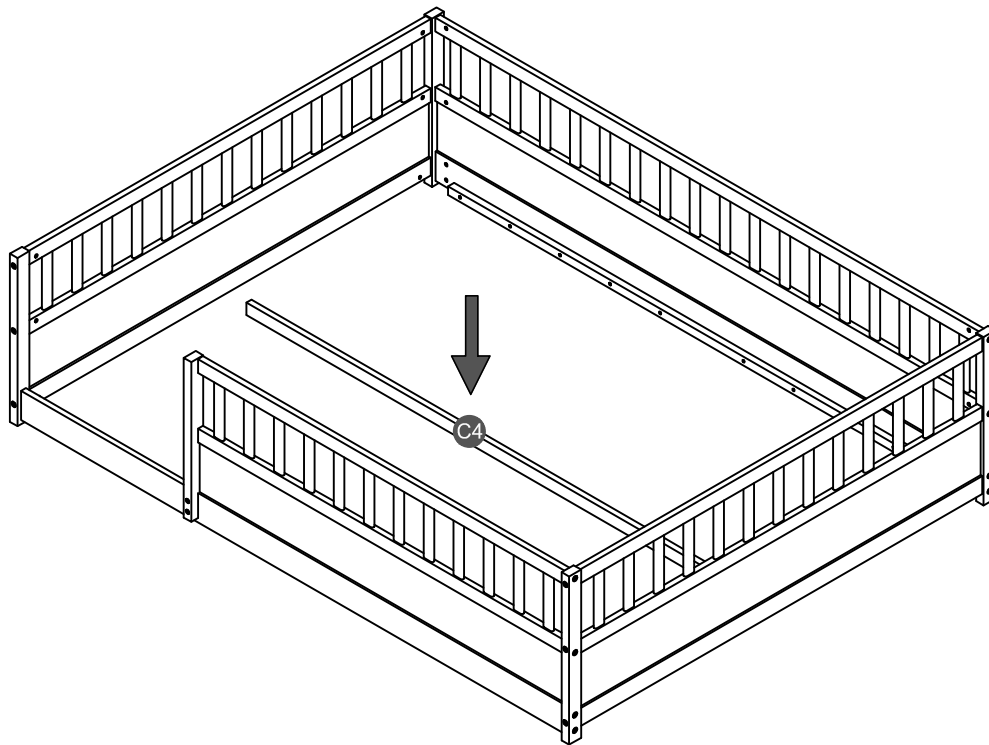




STEP 8:

For better fixing effect, there is no pre-drilled hole on the side rails. Please use self-tapping screws to fix it.

5



18PCS

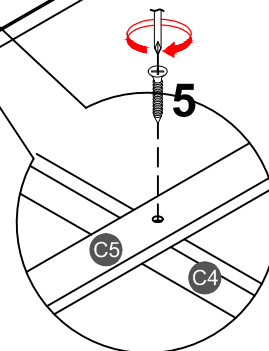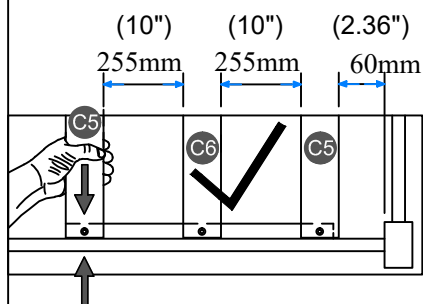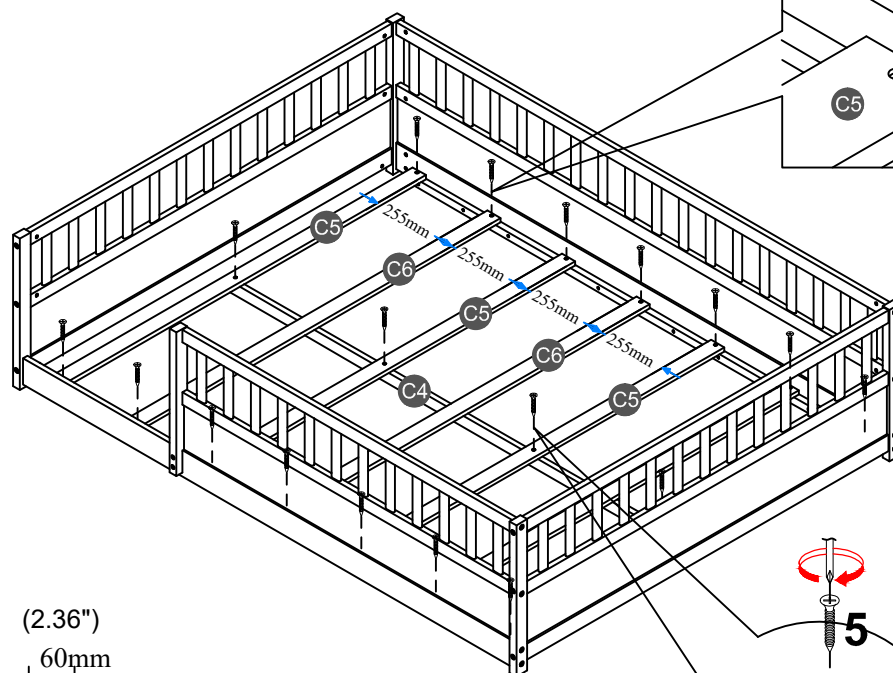

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.