


Assembly Instruction

Bamboo Floor Cabinet With Glass



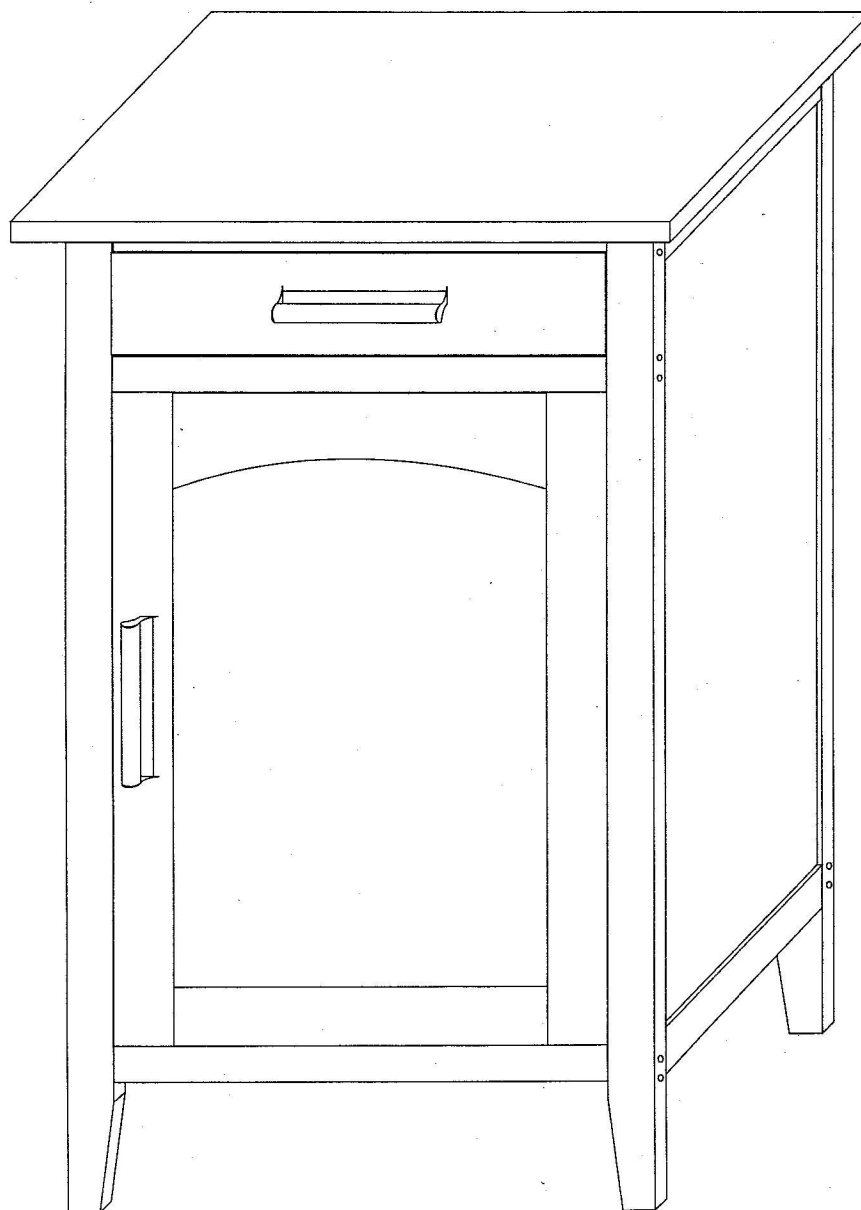













Note:











- 1) Please be advise to have at least 2 persons to assemble this unit.
- 2) Place a large cloth on the floor or flat surface to protect parts from scratching.
- 3) Before assembling this unit, please check that all parts and hardware are present.

Made In China


Part List

| | | |
|----|---|----|
| 1 |  | ×1 |
| 2 |  | ×2 |
| 3 |  | ×1 |
| 4 |  | ×1 |
| 5 |  | ×1 |
| 6 |  | ×1 |
| 7 |  | ×1 |
| 8 |  | ×1 |
| 9 |  | ×1 |
| 10 |  | ×1 |
| 11 |  | ×1 |
| 12 |  | ×1 |
| 13 |  | ×1 |
| 14 |  | ×1 |

Hardware List


| | | |
|---|--|-----|
| A |  Screw Ø1/8" X 1" | ×8 |
| B |  Handle Bolt Ø1/4" X 5/8" | ×4 |
| C |  Handle 3/8" X 4-3/8" | ×2 |
| D |  Plastic Stopper L 2" | ×1 |
| E |  Allen Bolt Ø 3/16" X 2" | ×16 |
| F |  Magnetic Catch 1-3/8" X 9/16" | ×1 |
| G |  Screw Ø 1/8" X 3/8" | ×13 |
| H |  Door Pin H 1/2" | ×1 |
| I |  Allen Wrench L 2-1/2" | ×1 |
| J |  Screw Ø 1/16" X 1/2" | ×6 |

Step 1

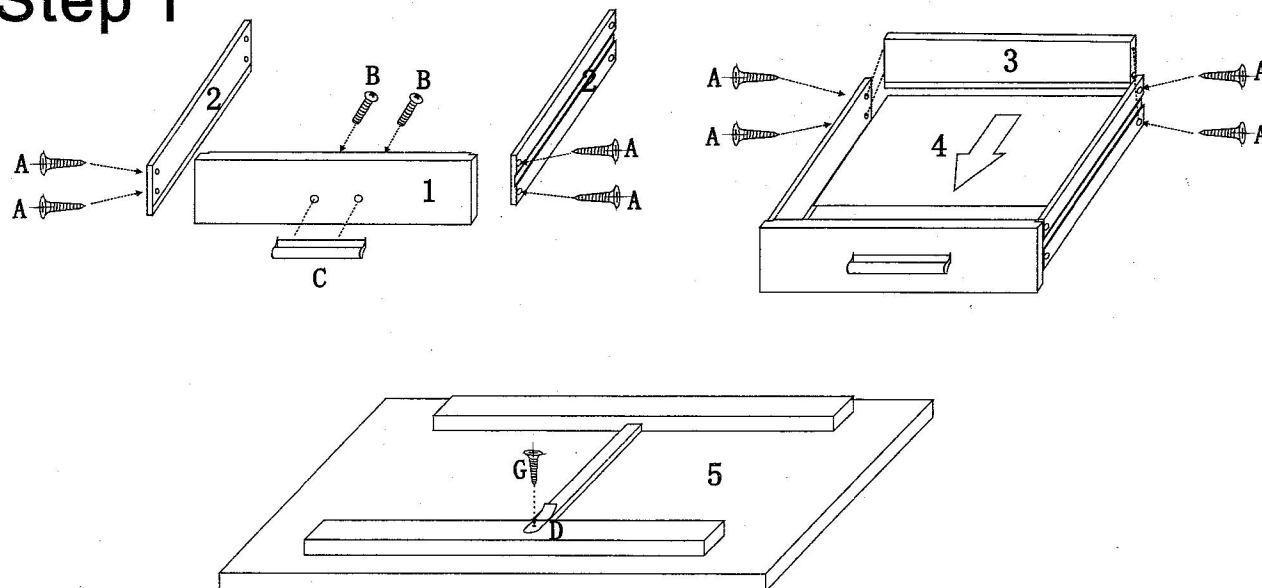

Assemble the Drawer Side Panel(2) to Drawer Front(1) as shown by using Screw(A), then assemble the Handle(C) to Drawer Front(1) by using Handle Bolt(B).
 Insert the Drawer Bottom Panel(4), then assemble the Drawer Back Panel(3) by using Screw(A) as shown.
 Assemble the Plastic Stopper(D) to Table Top(5) by using Screw(G) as shown.


Step 2

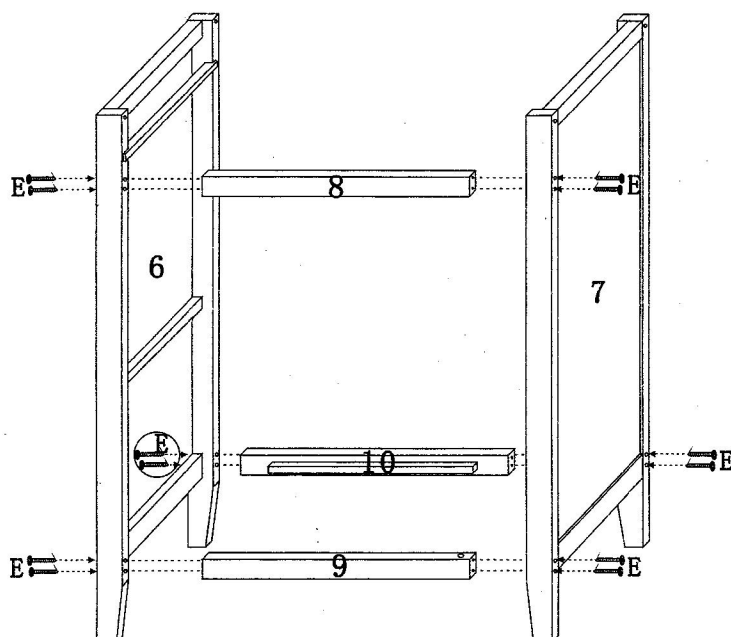

Assemble the Upper Front Rail(8), Lower Front Rail(9) and Lower Back Rail(10) as shown by using Allen Bolt(E).


Step 3

page 4 of 5

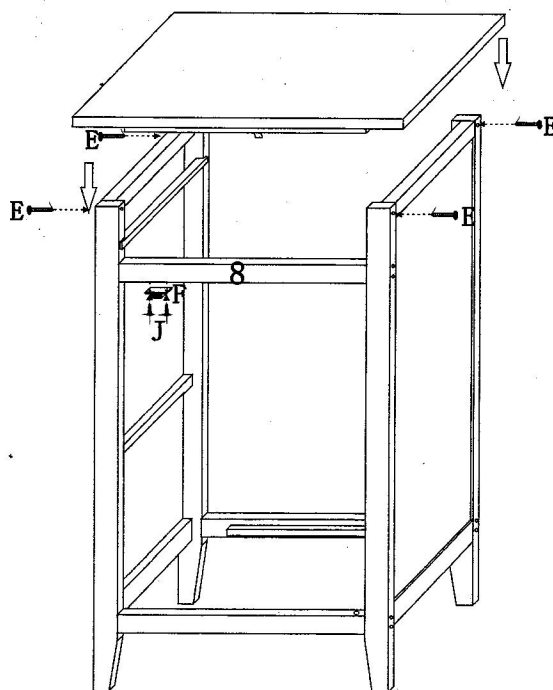

Assemble the Top Panel(5) to assembled unit as shown by using Allen Bolt(E).
Assemble the Magnetic Catch(F) to Upper Front Rail(8) by using Screw(J).


Step 4

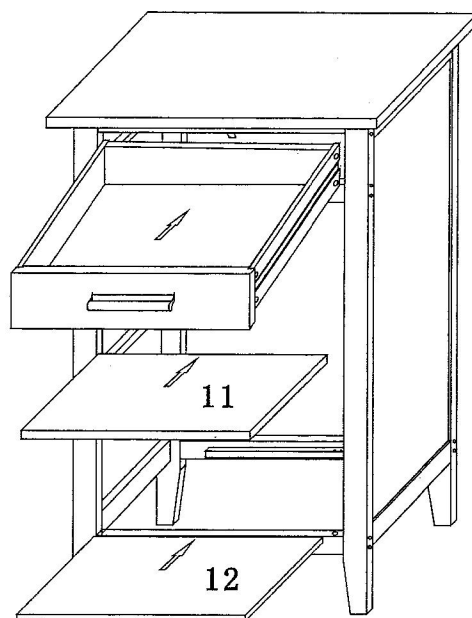

Insert the Drawer, Shelf(11) and Shelf(12) as shown to assembled unit.

Step 5

page 5 of 5

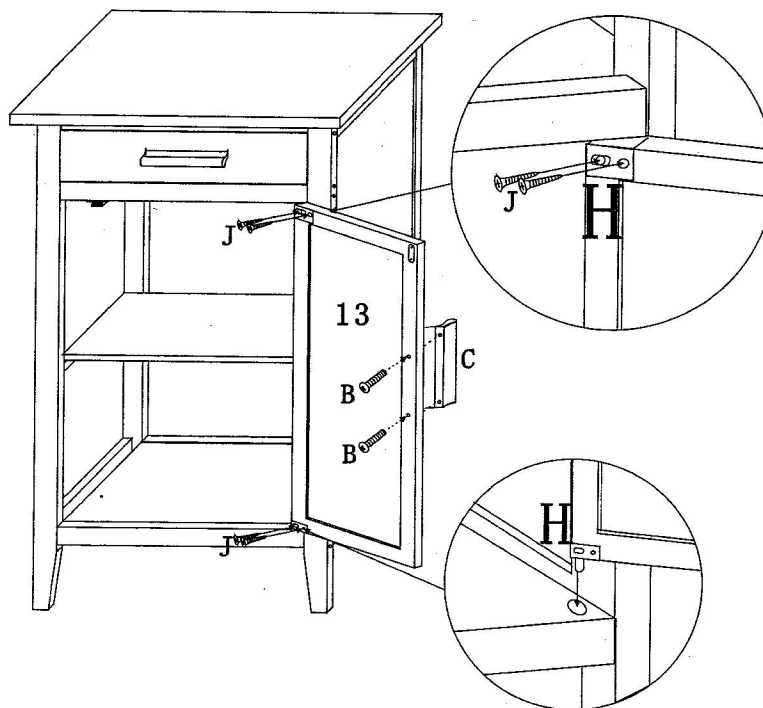


Assemble the Door Pin(H) to one side of Door Panel(13) by using Screw(J), then insert to assembled unit as shown.

Insert the Door Pin(H) to assembled unit first, then assemble another side of Door Panel(13) by using Screw(J) as shown.

Assemble the Handle(C) to Door Panel(13) by using Handle Bolt(B).

Step 6

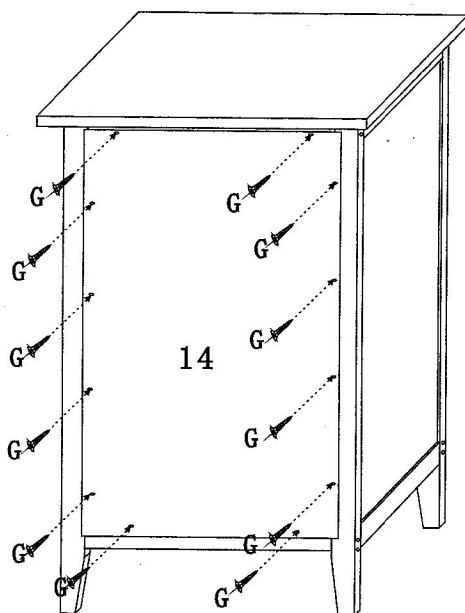

Assemble the Back Panel(14) to assembled unit by using Screw(G) as shown.