
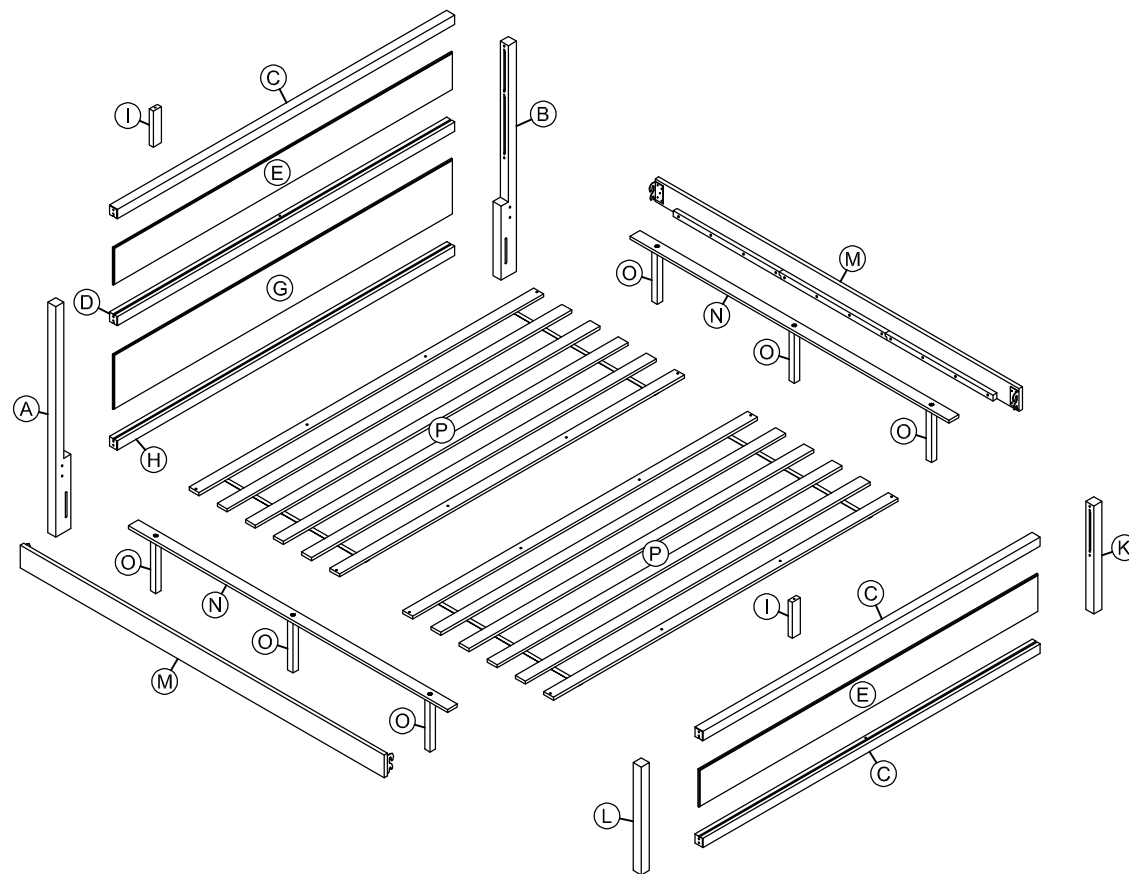


ASSEMBLY INSTRUCTIONS

52016 KING BED

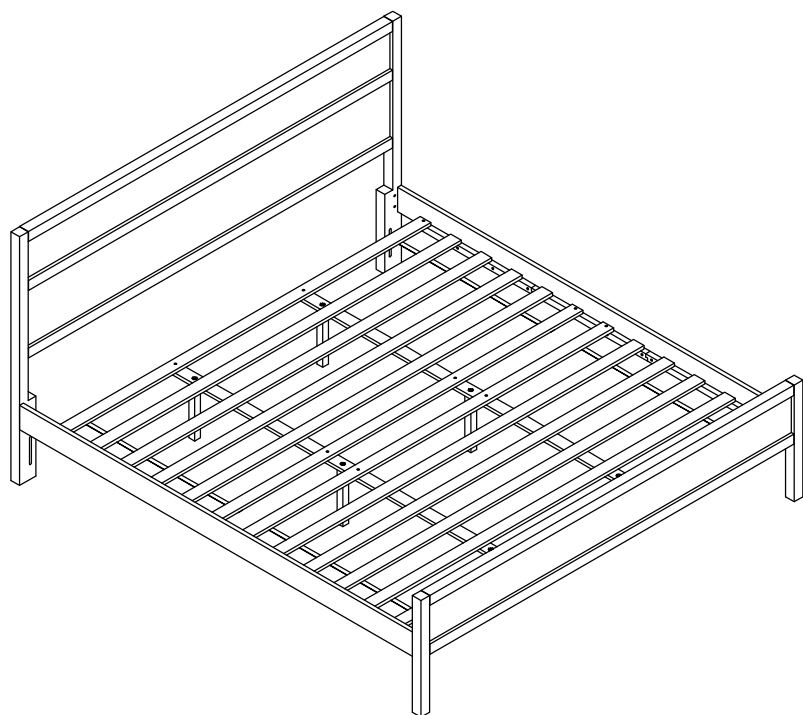

Requires two people for assembly

VERSION 2.1 REV 08/19/2026

52016 KING BED

ASSEMBLY INSTRUCTIONS


Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.

When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.


If you're having difficulty, our friendly Customer Care team is always here to help. Call us at 1.336.861.0604 during business hours, email parts@comfortpointe.com.

Attention : Veuillez Lire Toutes Les Instructions Avant De Commencer L'assemblage De Ce Produit. Les Pièces Sont Lourdes. Pour Éviter Toute Blessure Et Pour Vous Assurer Que Le Produit N'est Pas Endommagé Pendant L'assemblage, Nous Vous Recommandons De Faire Appel À Une Ou Plusieurs Autres Personnes.


Cuidado: Favor De Leer Todas Las Instrucciones Antes De Ensamblar Su Producto. Estas Piezas Son Pesadas. Para Prevenir Heridas Personales Y Asegurar Que Su Producto No Sea Dañado Mientras Es Ensamblado, Se Recomienda La Asistencia De Una O Más Personas.

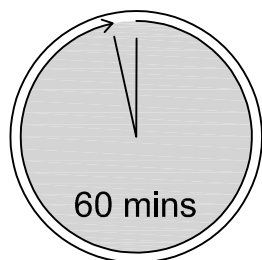

TIME

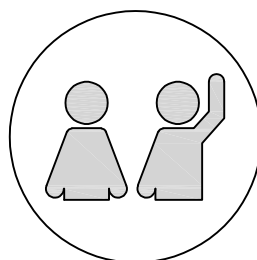

OF PEOPLE






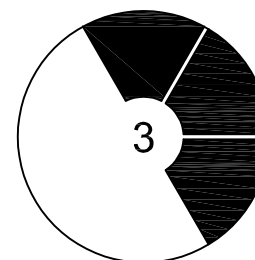


DIFFICULTY

Important: Use hand tools for assembly. DO NOT USE POWER TOOL TO TIGHTEN CAM LOCKS.

52016 KING BED

Parts List




CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
A	Left headboard leg 	1PC	I	Center support 	2PCS
B	Right headboard leg 	1PC	K	Right footboard leg 	1PC
C	Upper horizontal rail 	3PCS	L	Left footboard leg 	1PC
D	Middle horizontal rail 	1PC	M	Rail 	2PCS
E	Upper panel 	2PCS	N	Support bar 	2PCS
G	Bottom panel 	1PC	O	Supporting leg 	6PCS
H	Bottom horizontal rail 	1PC	P	Slat 	2PCS

52016 KING BED

Hardware List

CODE	DESCRIPTION	QTY	CODE	DESCRIPTION	QTY
1.	Bolt 5/16"x20mm	8PCS	6.	Dowel 8x30mm	10PCS
2.	Lock Washer	8PCS	7.	Wood Screw	16PCS
3.	Flat Washer	8PCS	8.	Screwdriver to tighten cam locks	1PC
4.	Cam Lock Bolt M6x40mm	14PCS	9.	Allen key	1PC
5.	Cam Lock Ø15mm	14PCS			

1 52016 KING BED

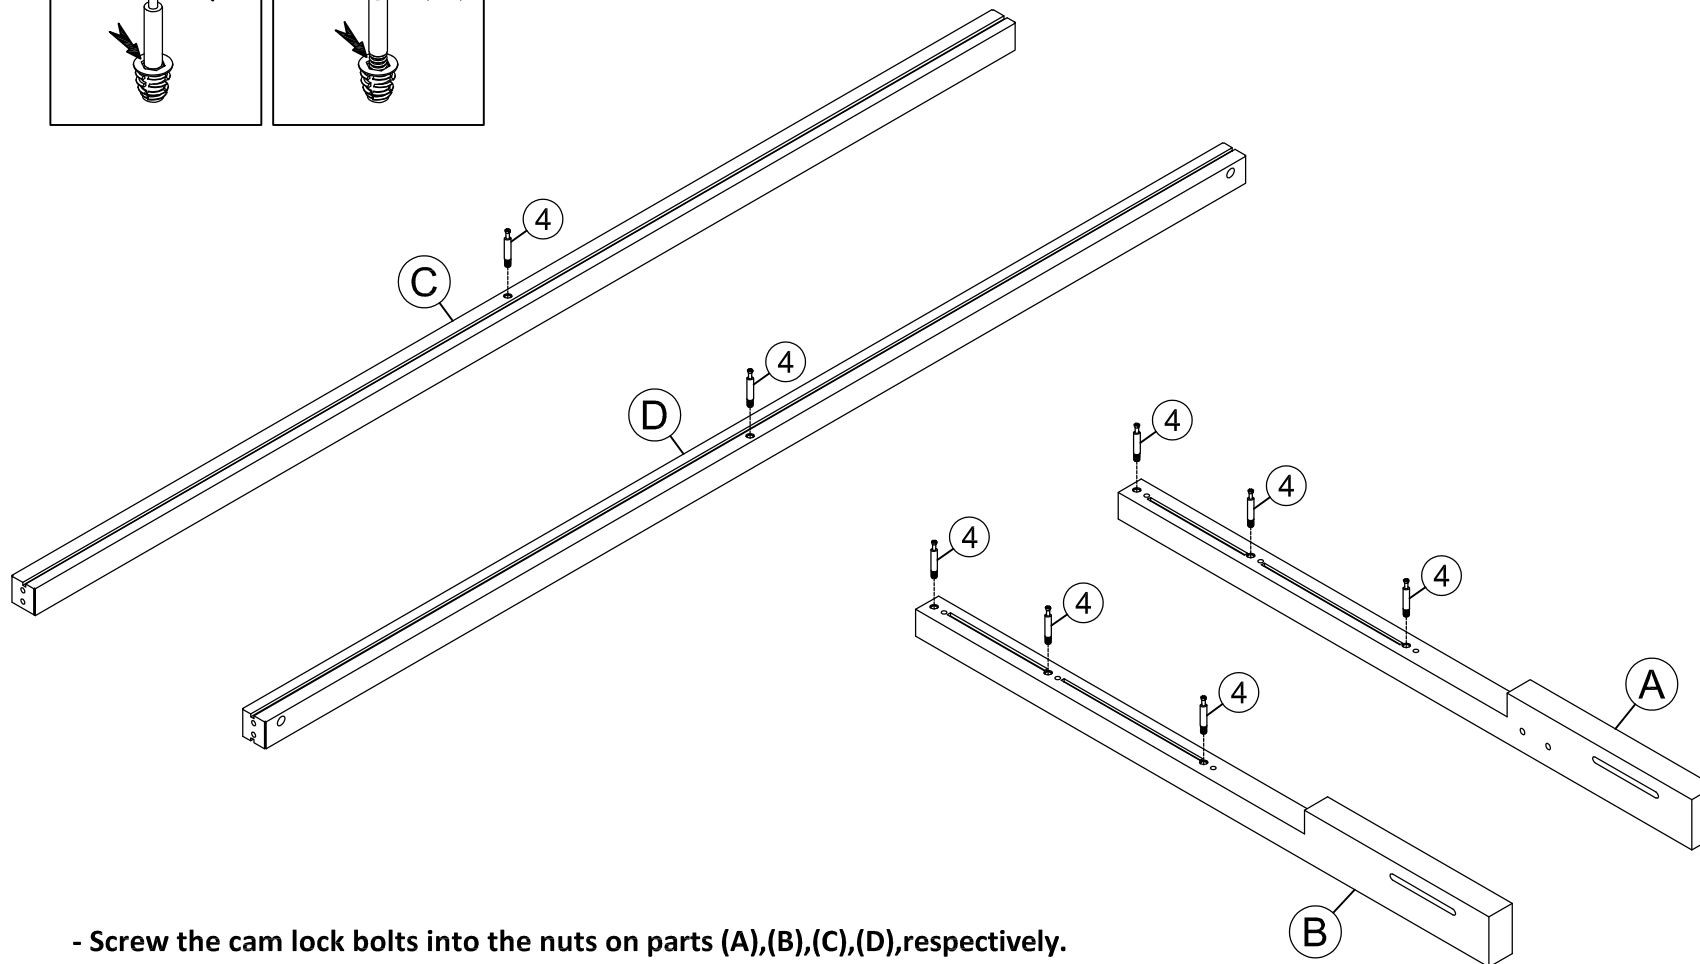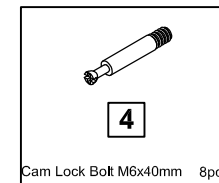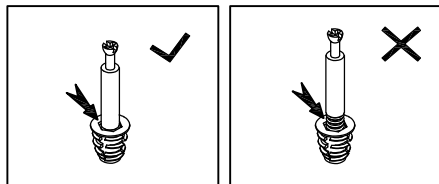


- Screw the cam lock bolts into the nuts on parts (A),(B),(C),(D),respectively.

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026


2 52016 KING BED

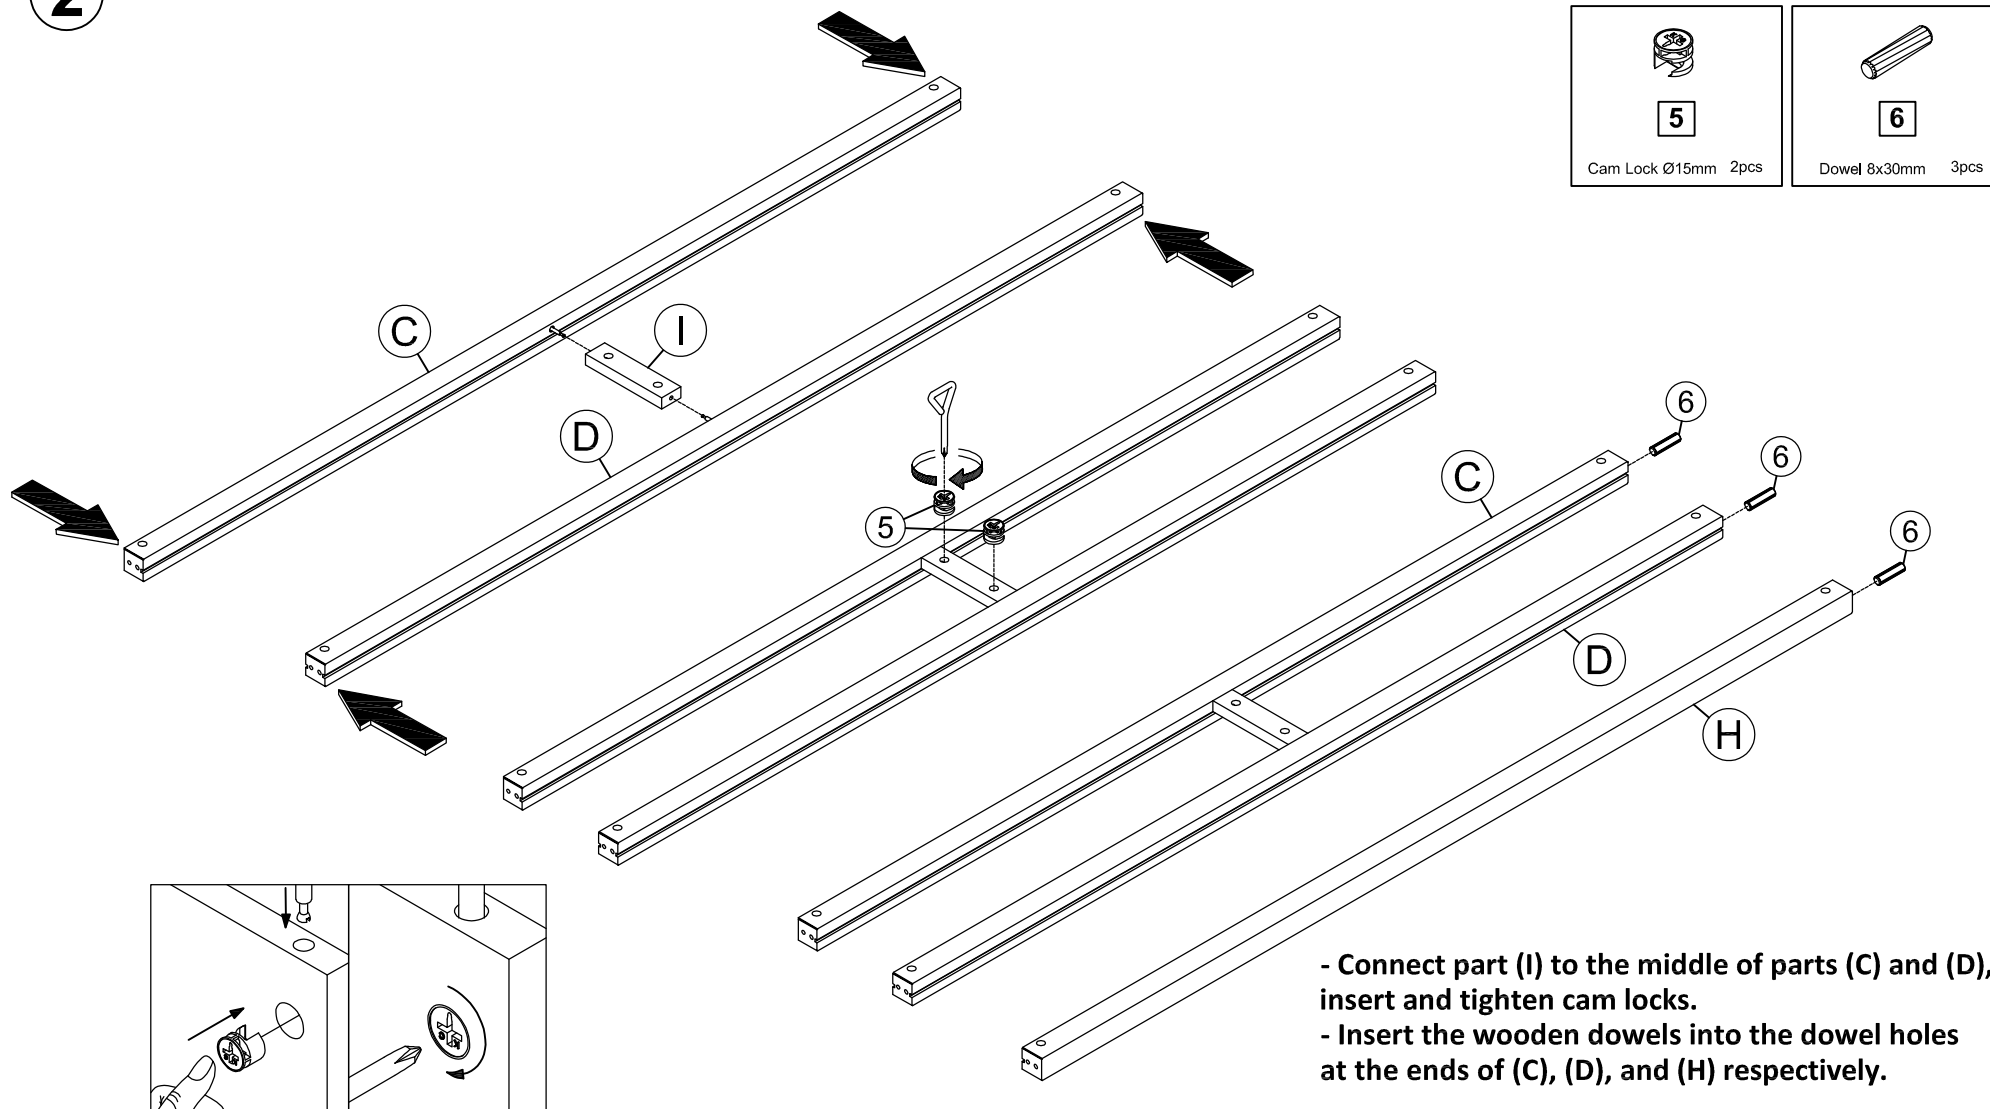

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

3 52016 KING BED

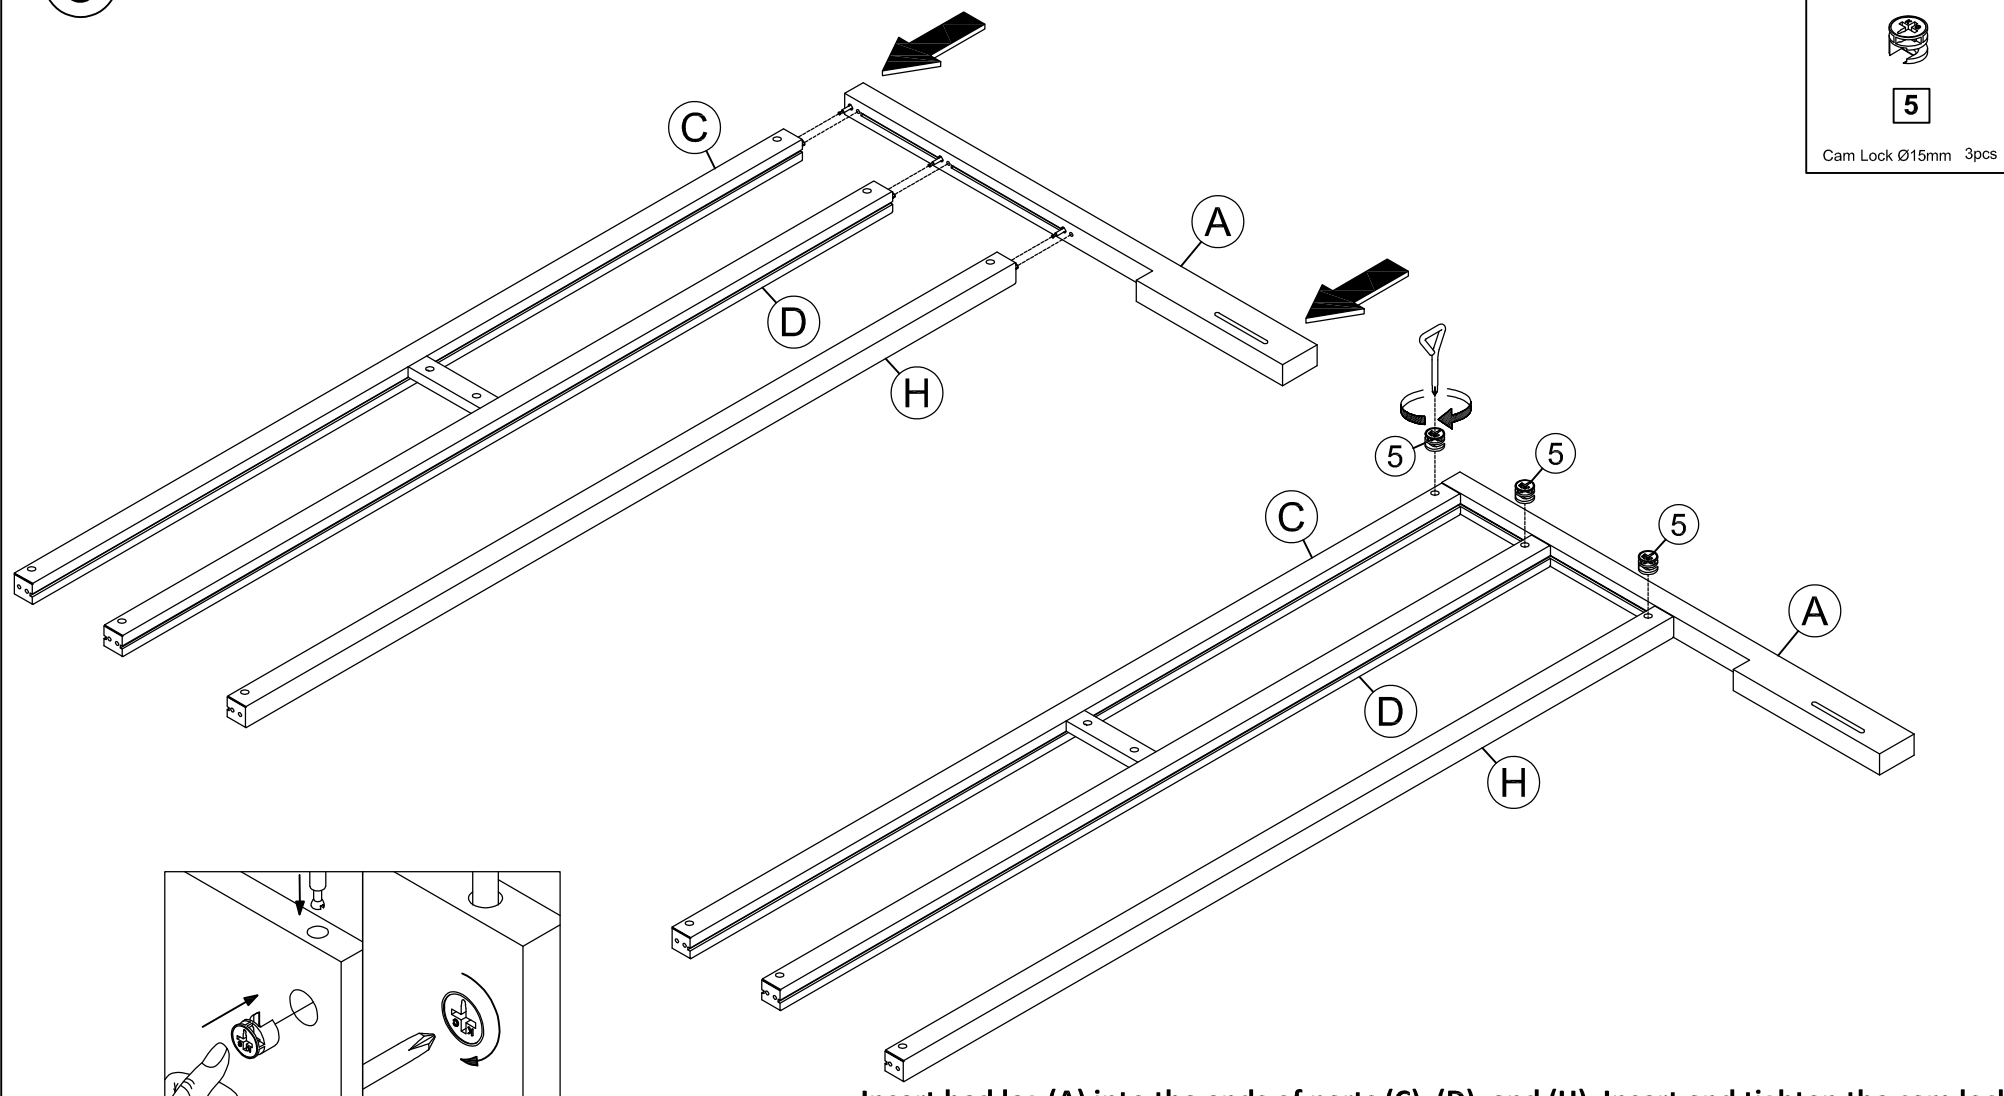



-Insert bed leg (A) into the ends of parts (C), (D), and (H), Insert and tighten the cam locks.

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

4**52016 KING BED**




- One person holds the assembled frame at an approx. 30-degree angle to the ground. The other person inserts panels (E) and (G) into the slots Between (C), (D), and (H) respectively.
- Insert the wooden dowels into the dowel holes at the ends of (C), (D), and (H) respectively.
- Insert bed leg (B) into the ends of parts (C), (D), and (H).

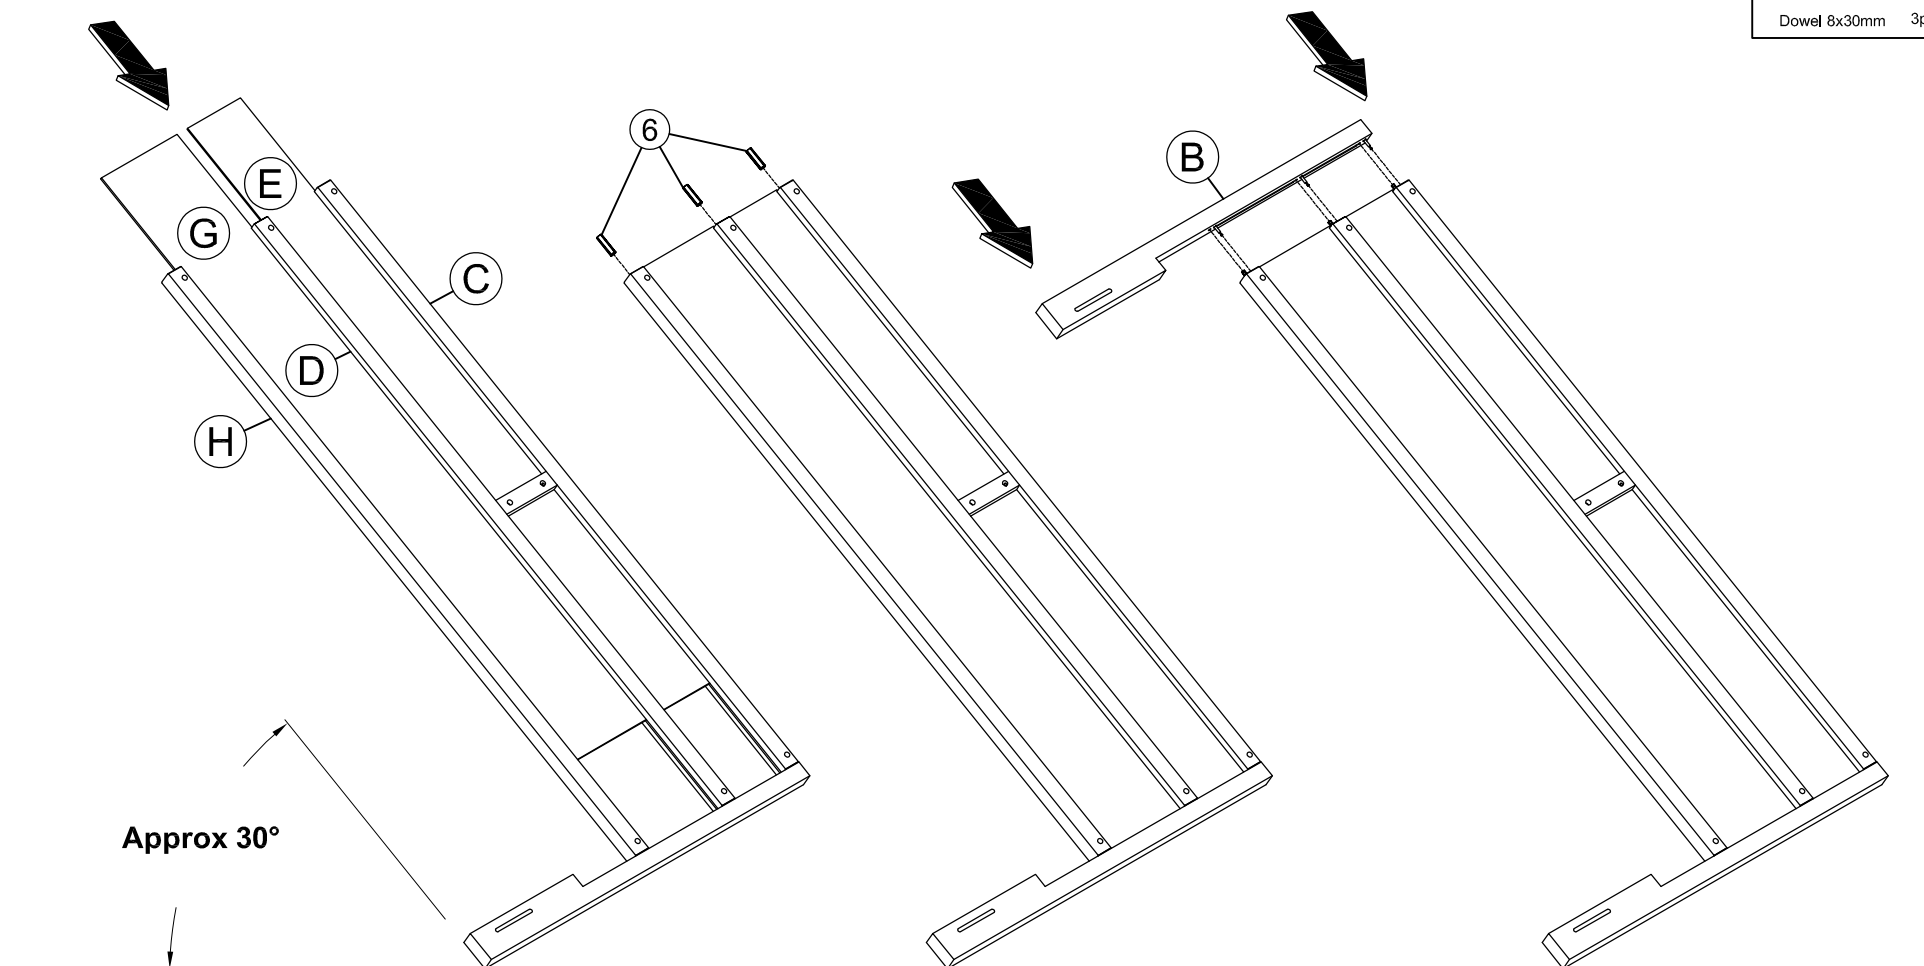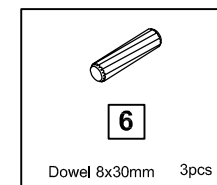


If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

5 52016 KING BED

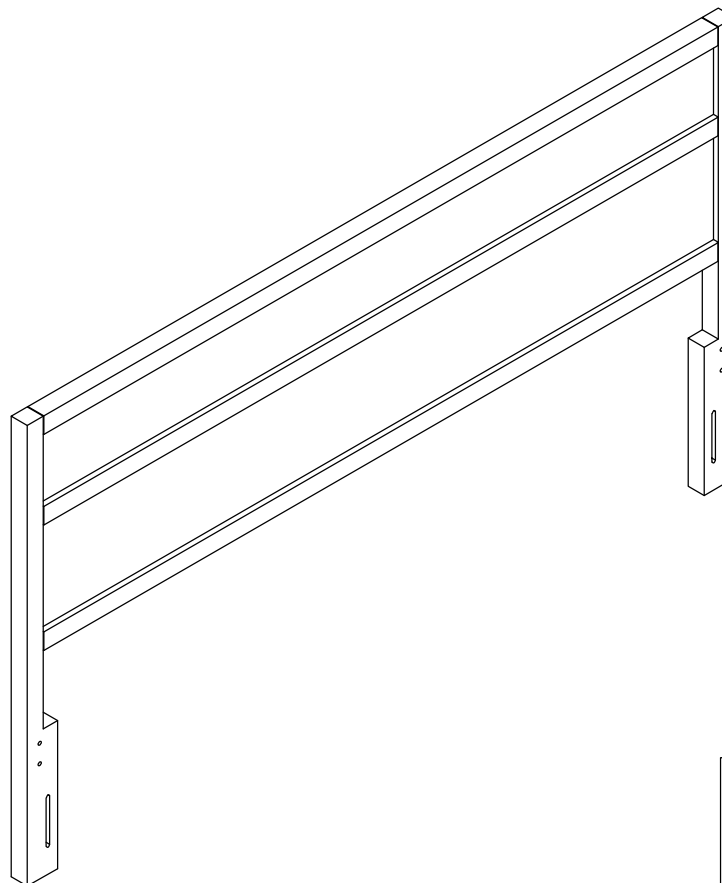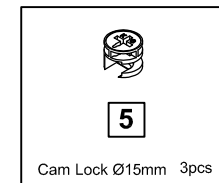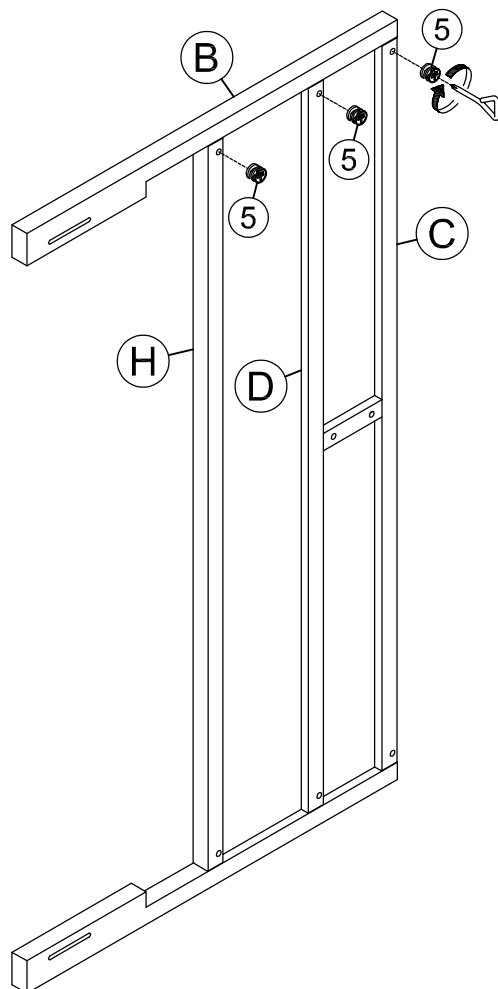




- Insert and tighten the cam locks.

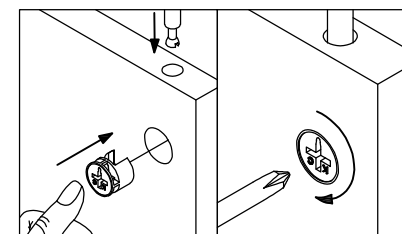

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

6 52016 KING BED

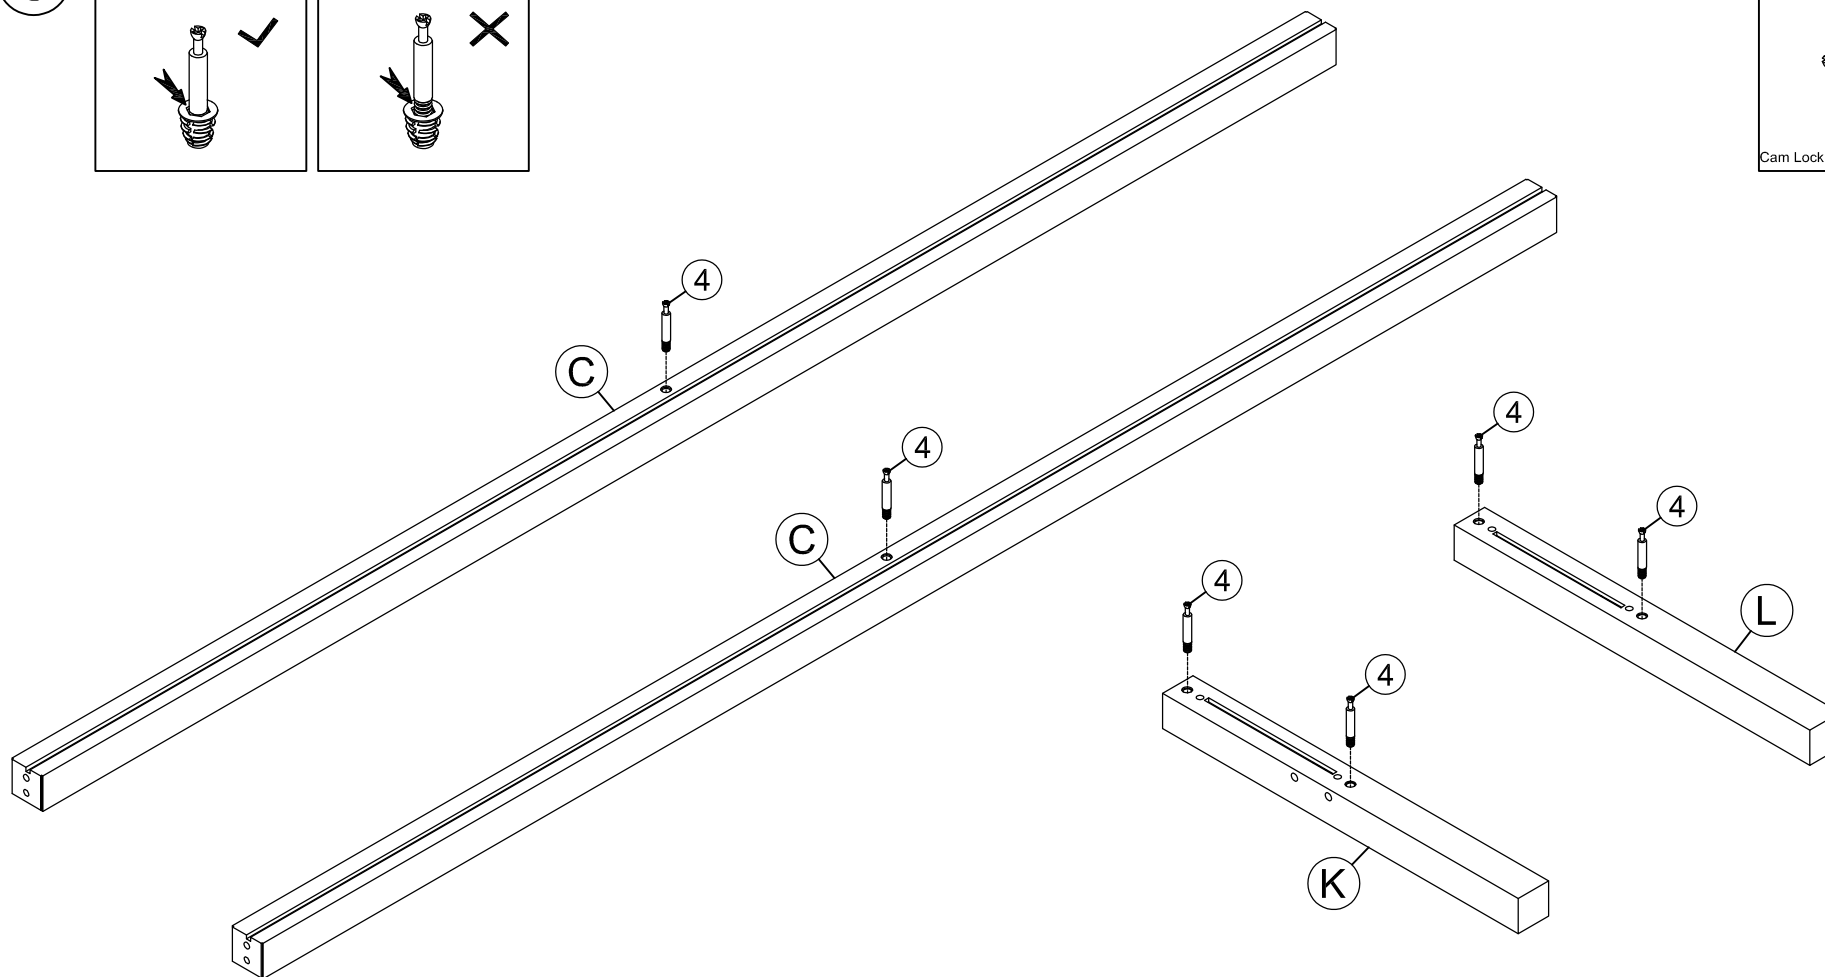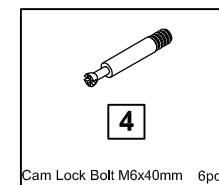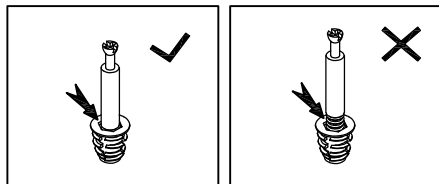


- Screw the cam lock bolts into the nuts on parts (C),(K) and (L) respectively.

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026


7 52016 KING BED

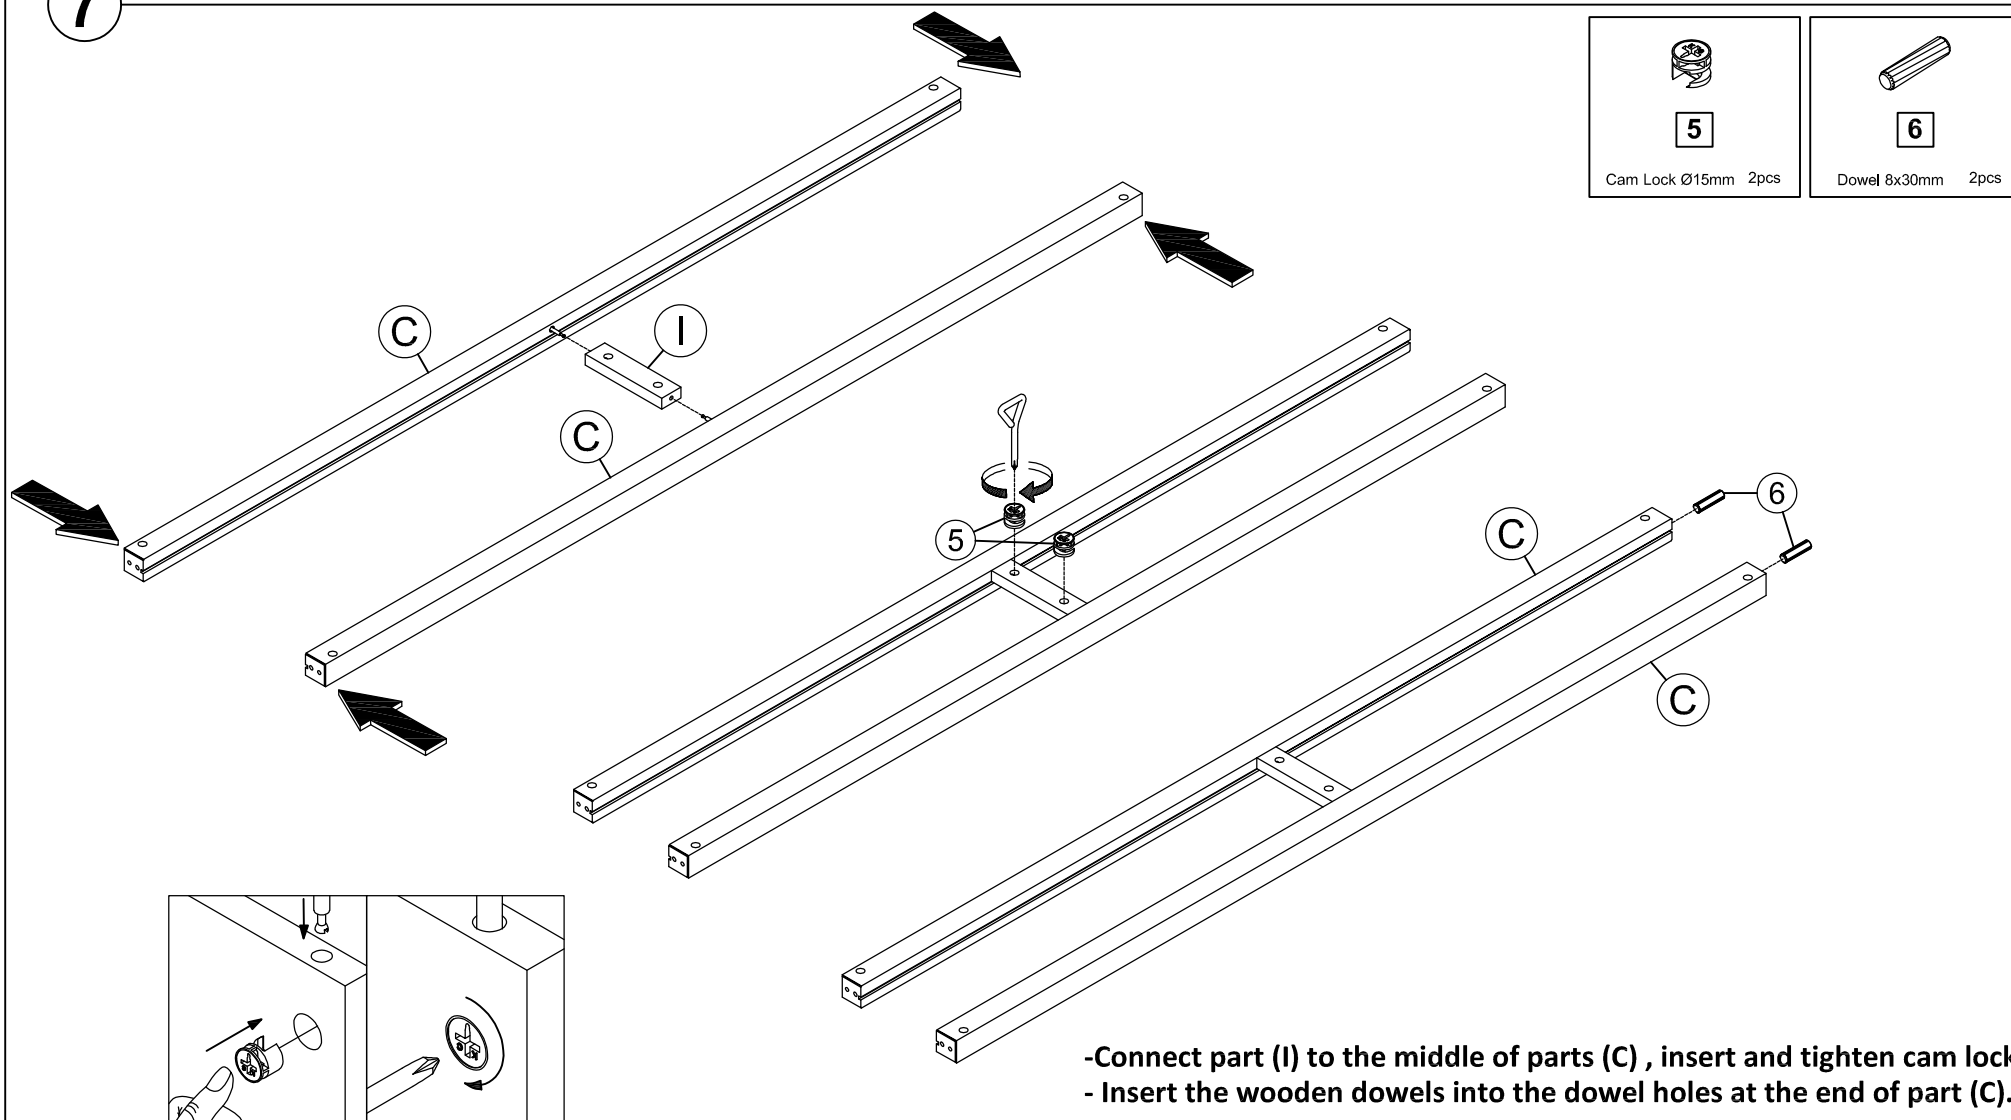

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

8 52016 KING BED

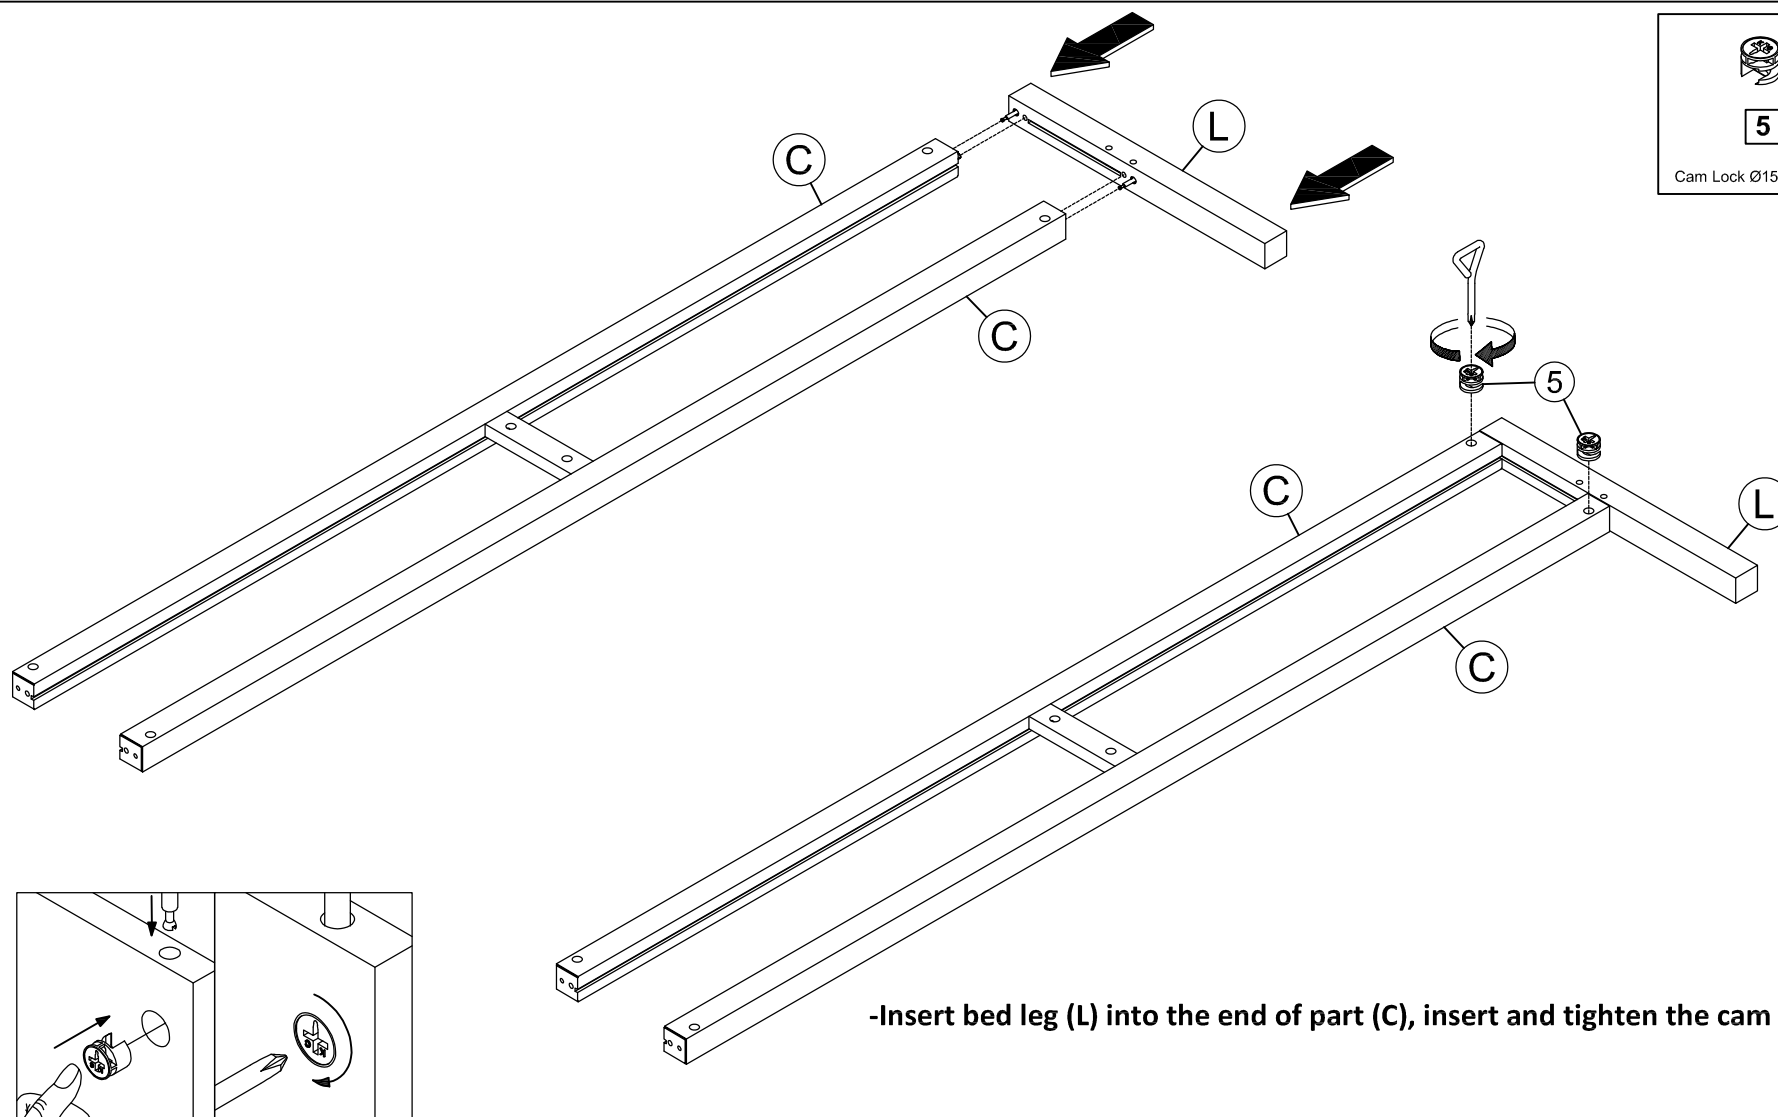



-Insert bed leg (L) into the end of part (C), insert and tighten the cam locks.

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

9 52016 KING BED


- One person holds the assembled frame at an approx. 30-degree angle to the ground. The other person inserts panel (E) into the slot of part (C).
- Insert the wooden dowels into the dowel holes at the end of part (C).
- Insert bed leg (K) into part (C).

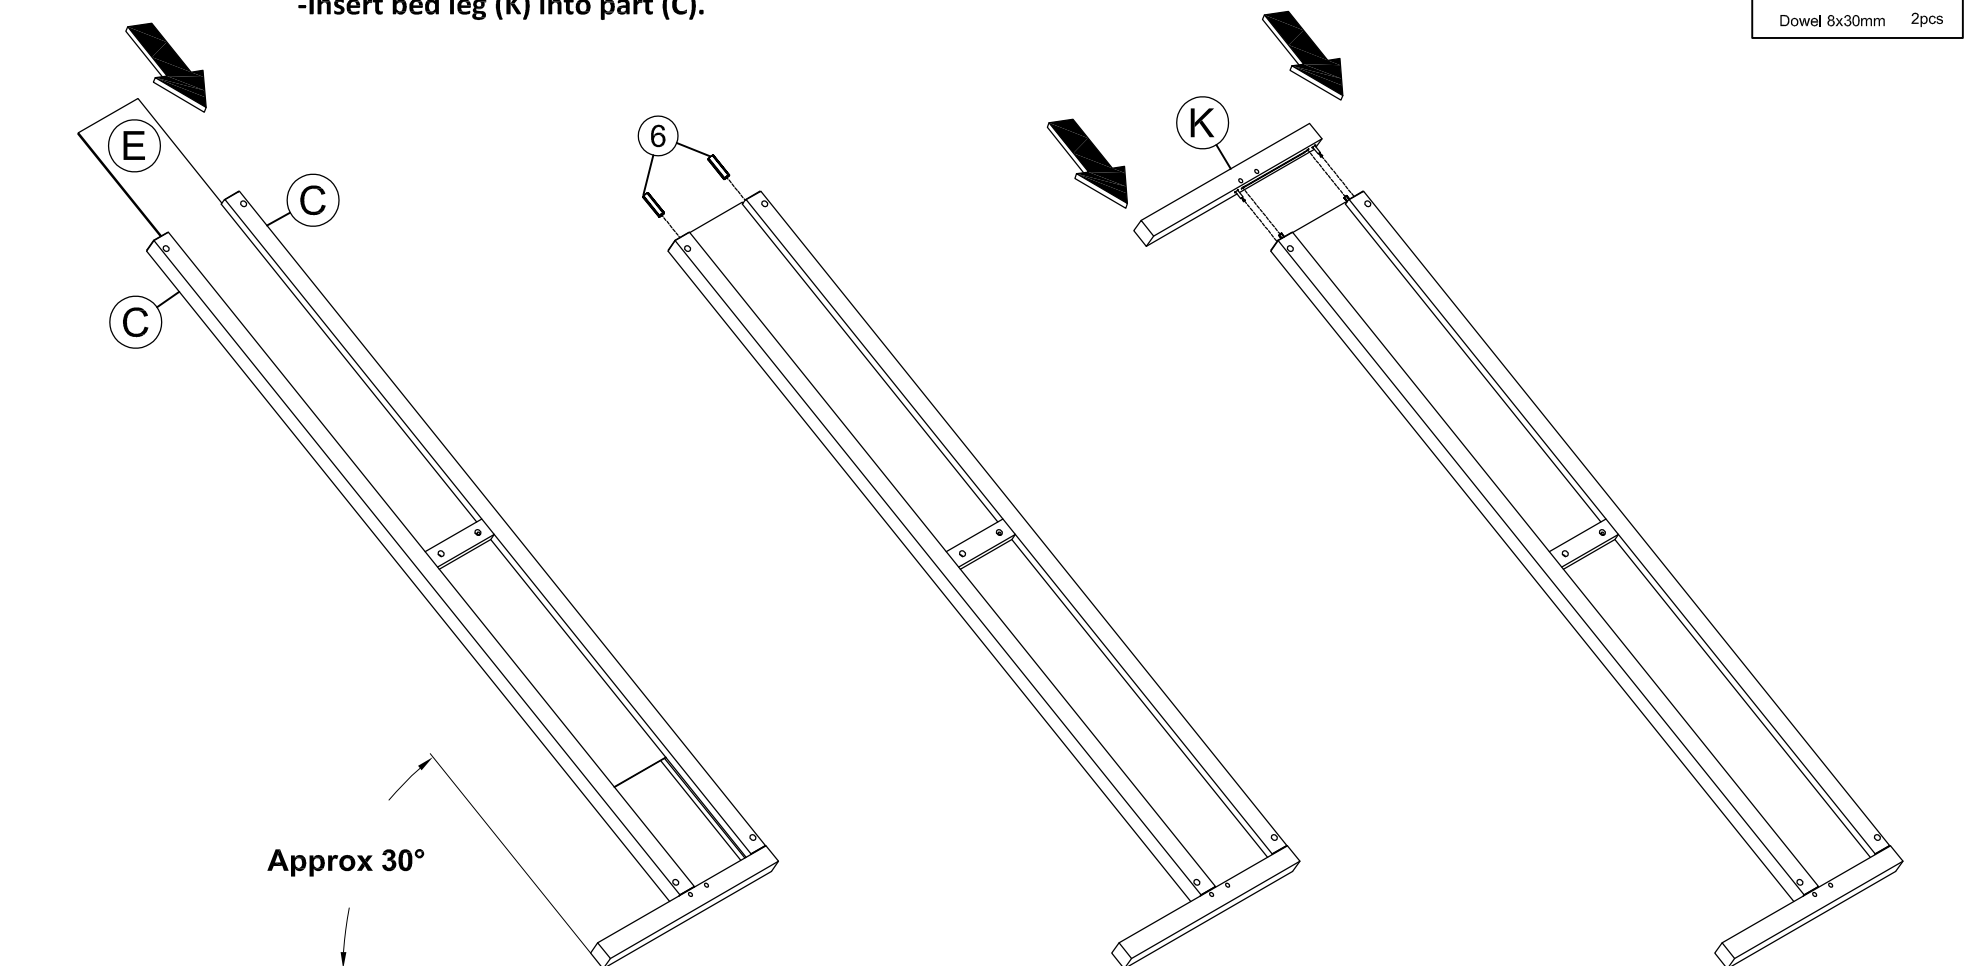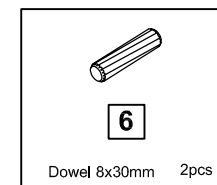




If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

10 52016 KING BED

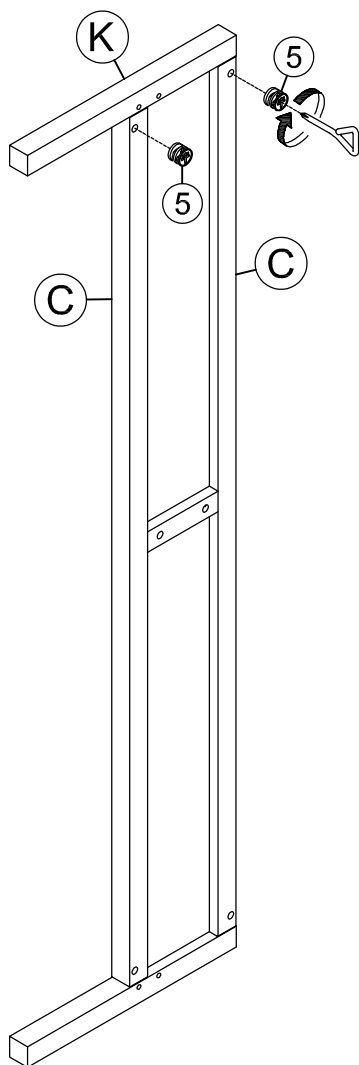


- Insert and tighten the cam locks.

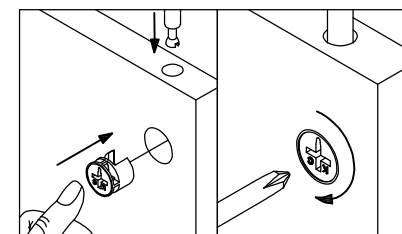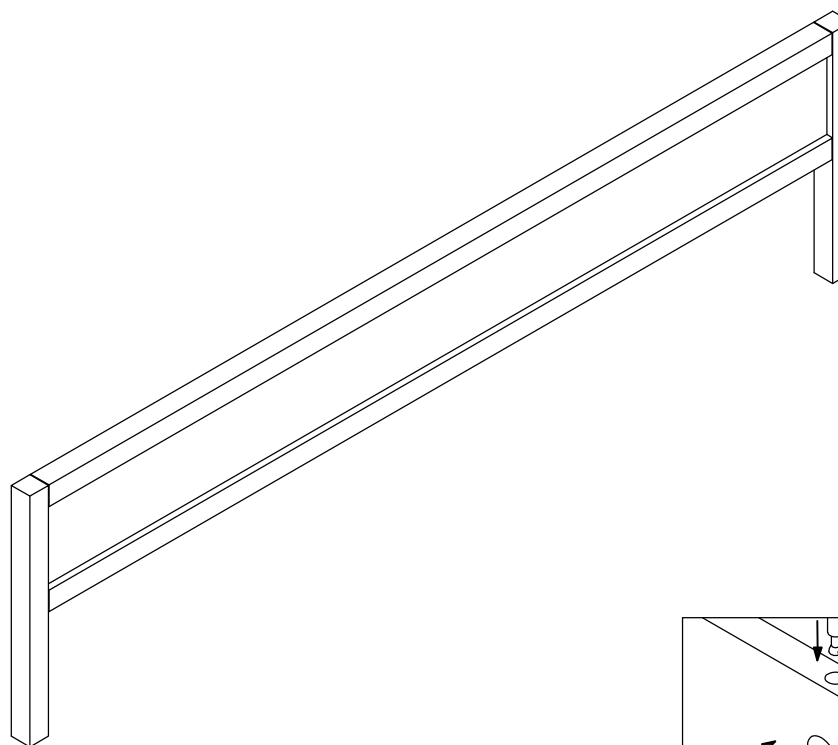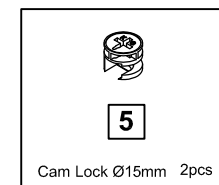

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026


11 52016 KING BED

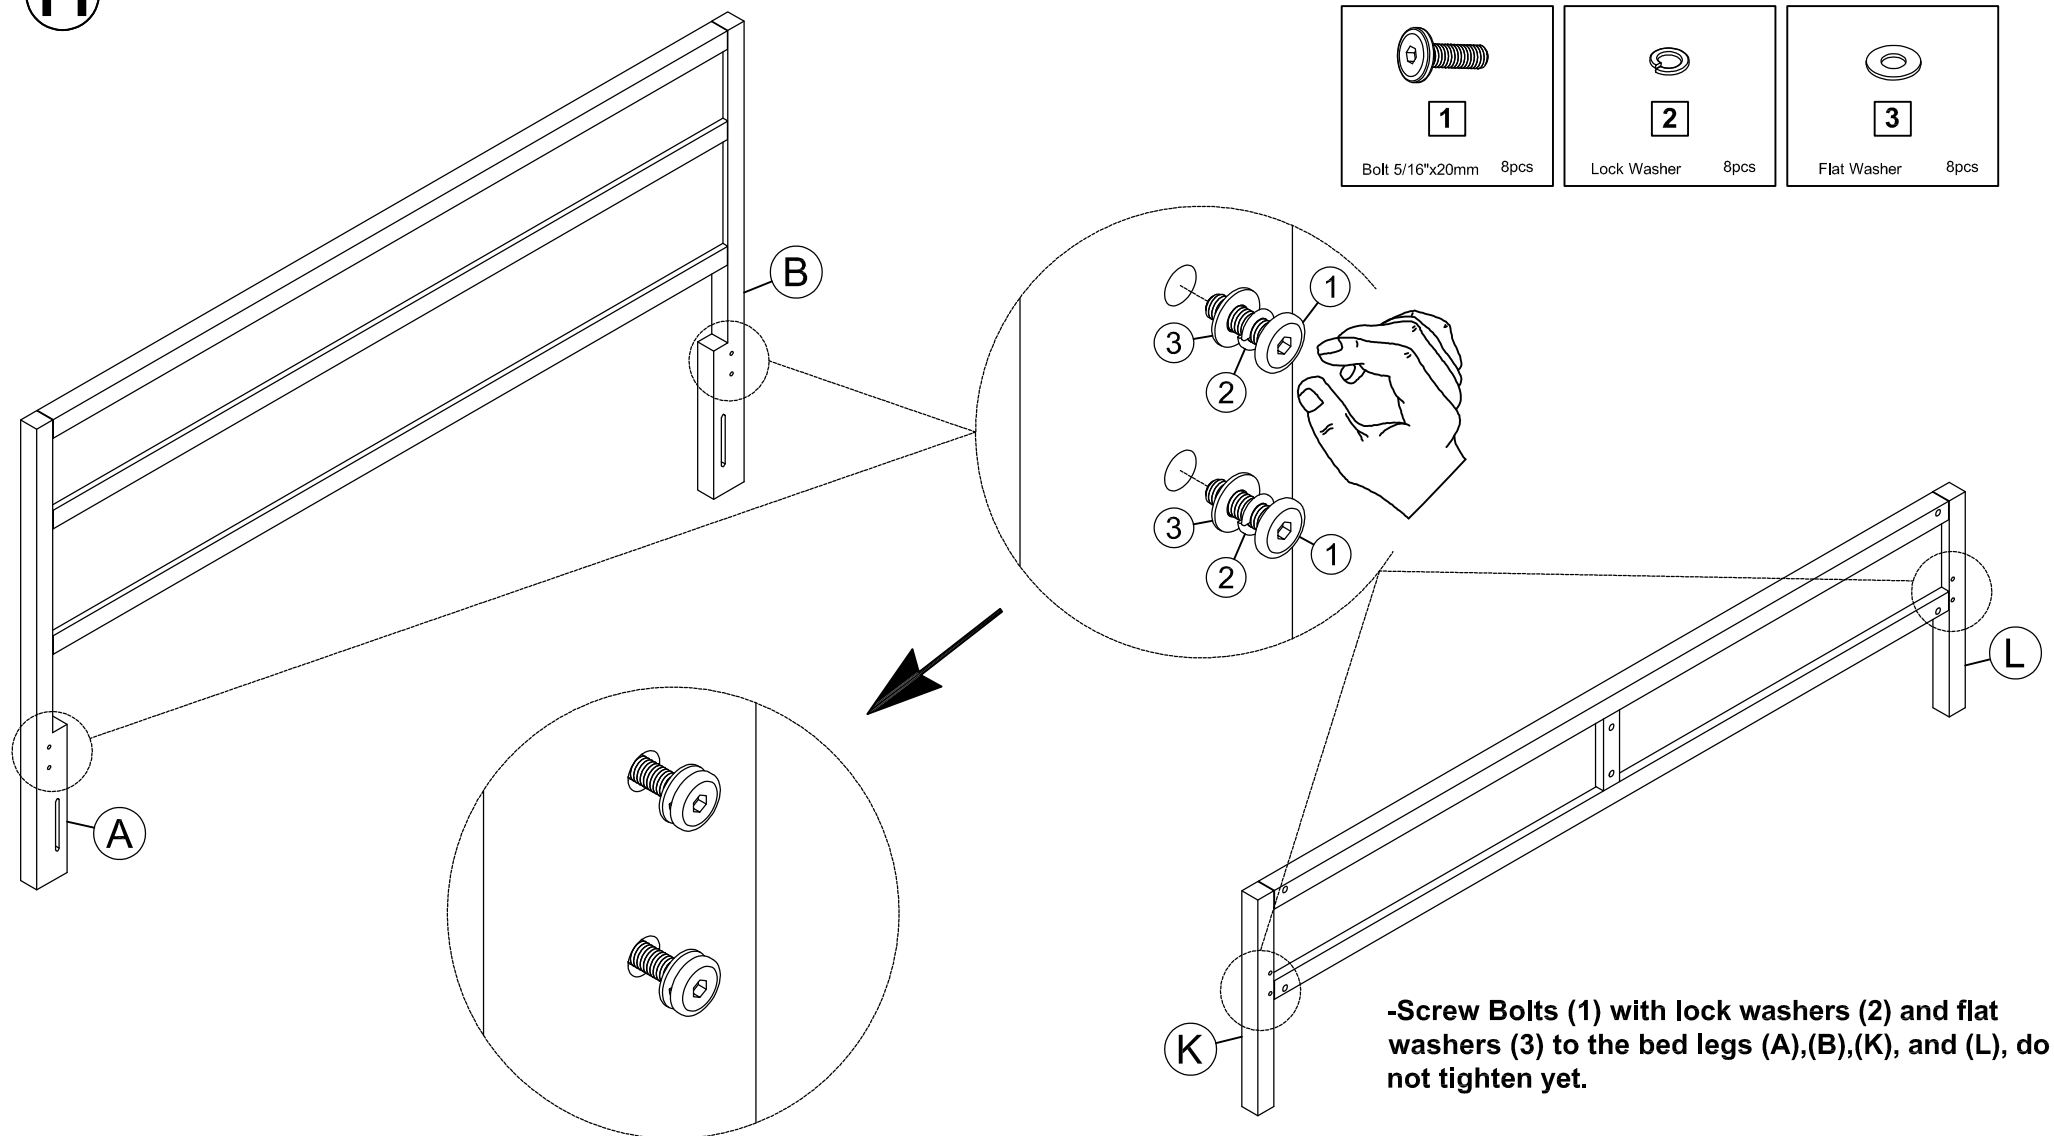

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026


12 52016 KING BED

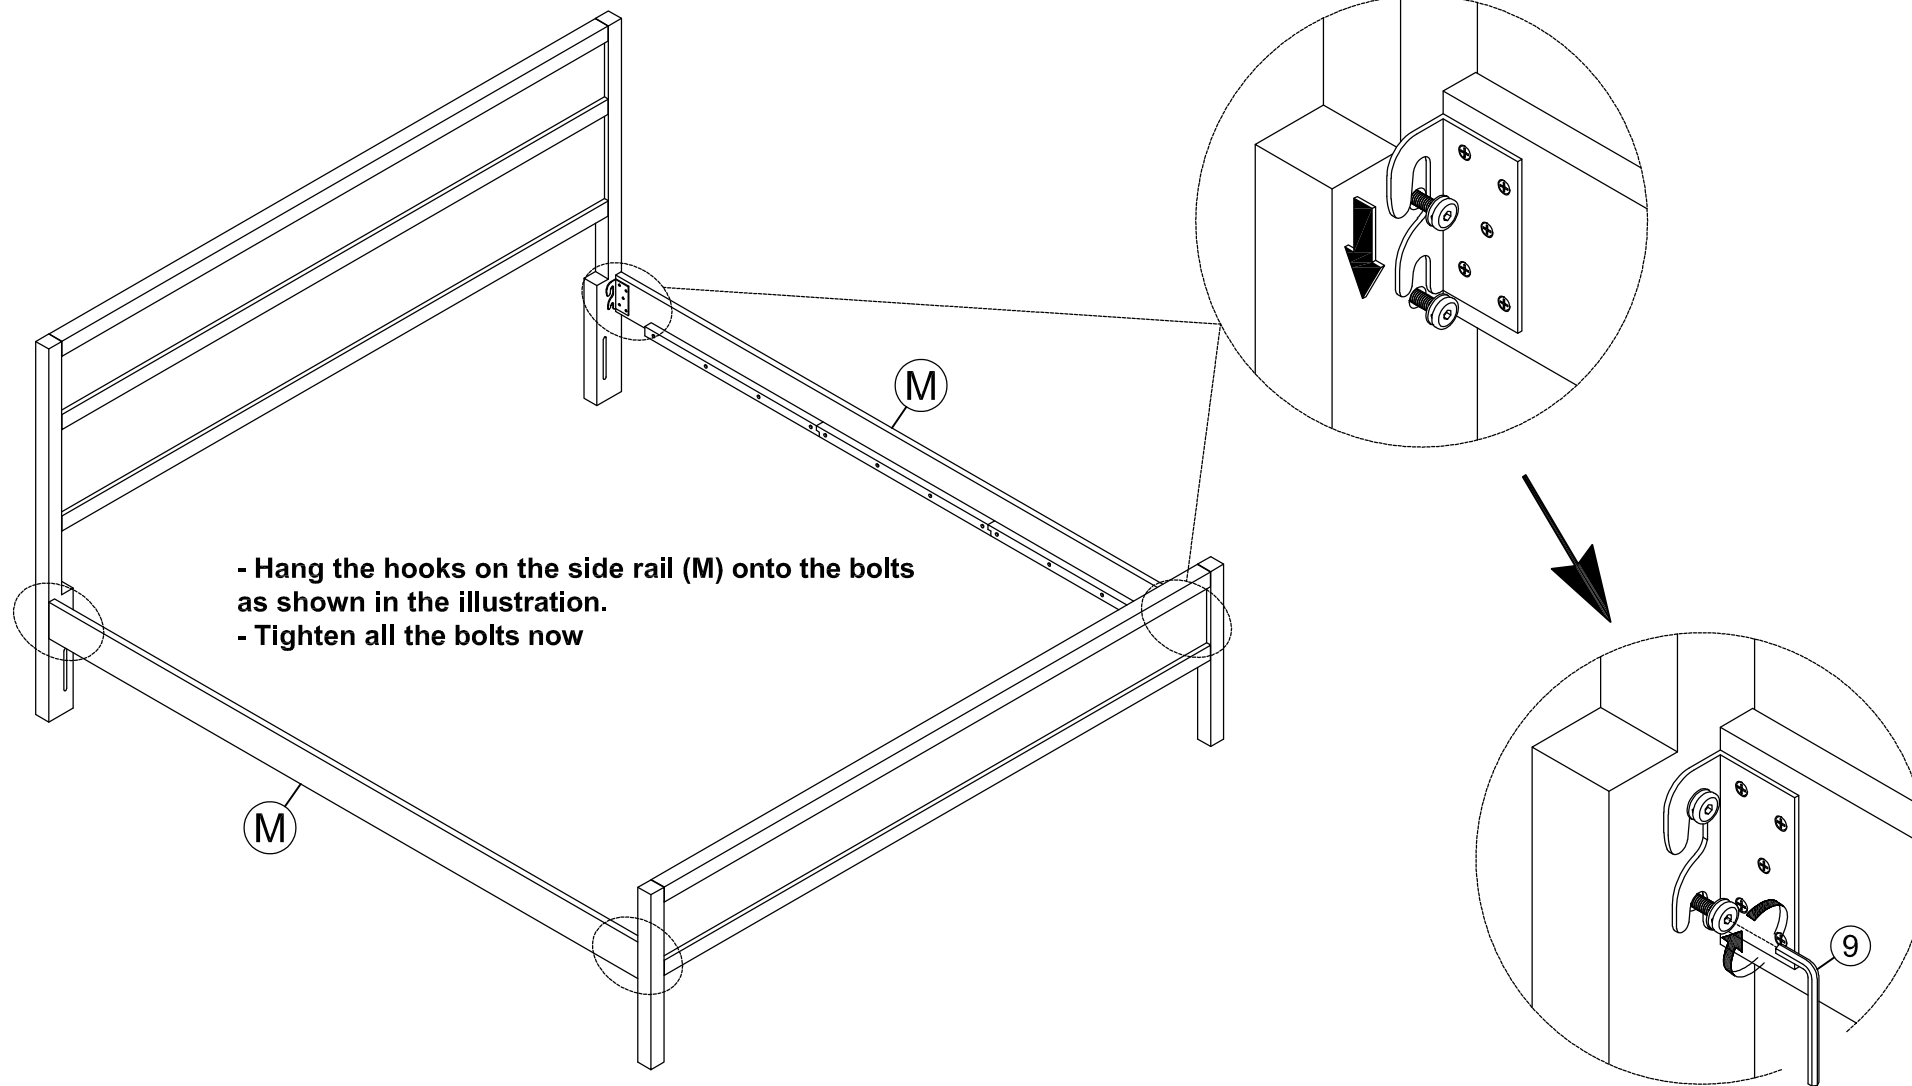

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

13 52016 KING BED



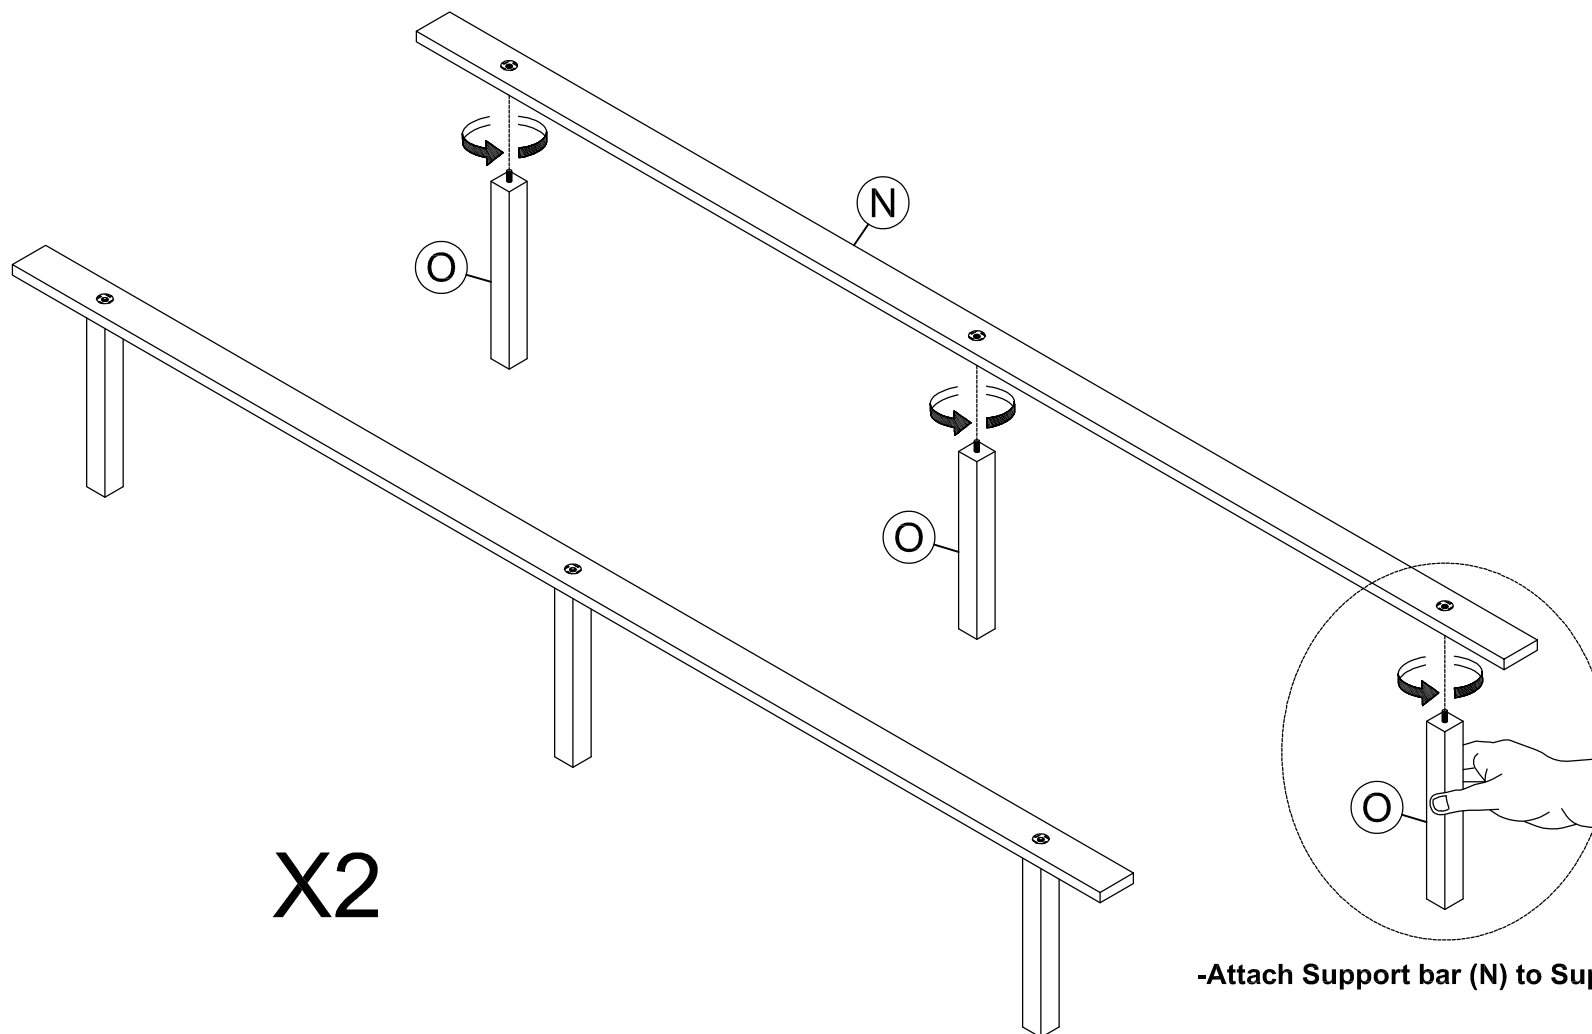


-Attach Support bar (N) to Supporting leg (O).

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

14 52016 KING BED

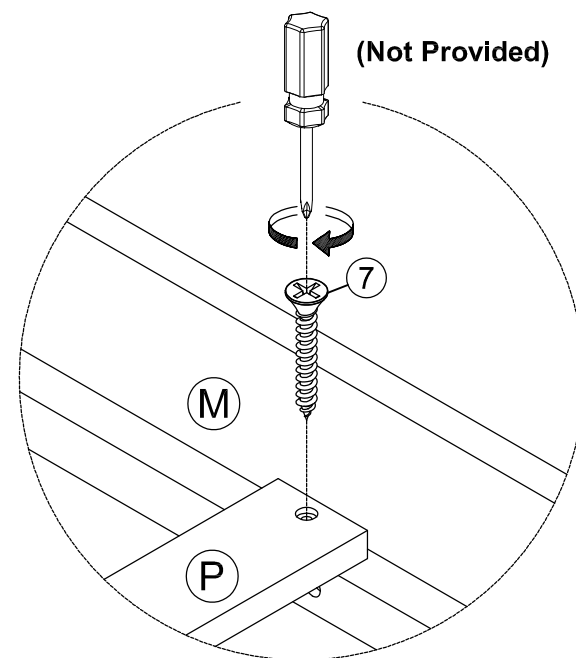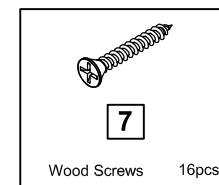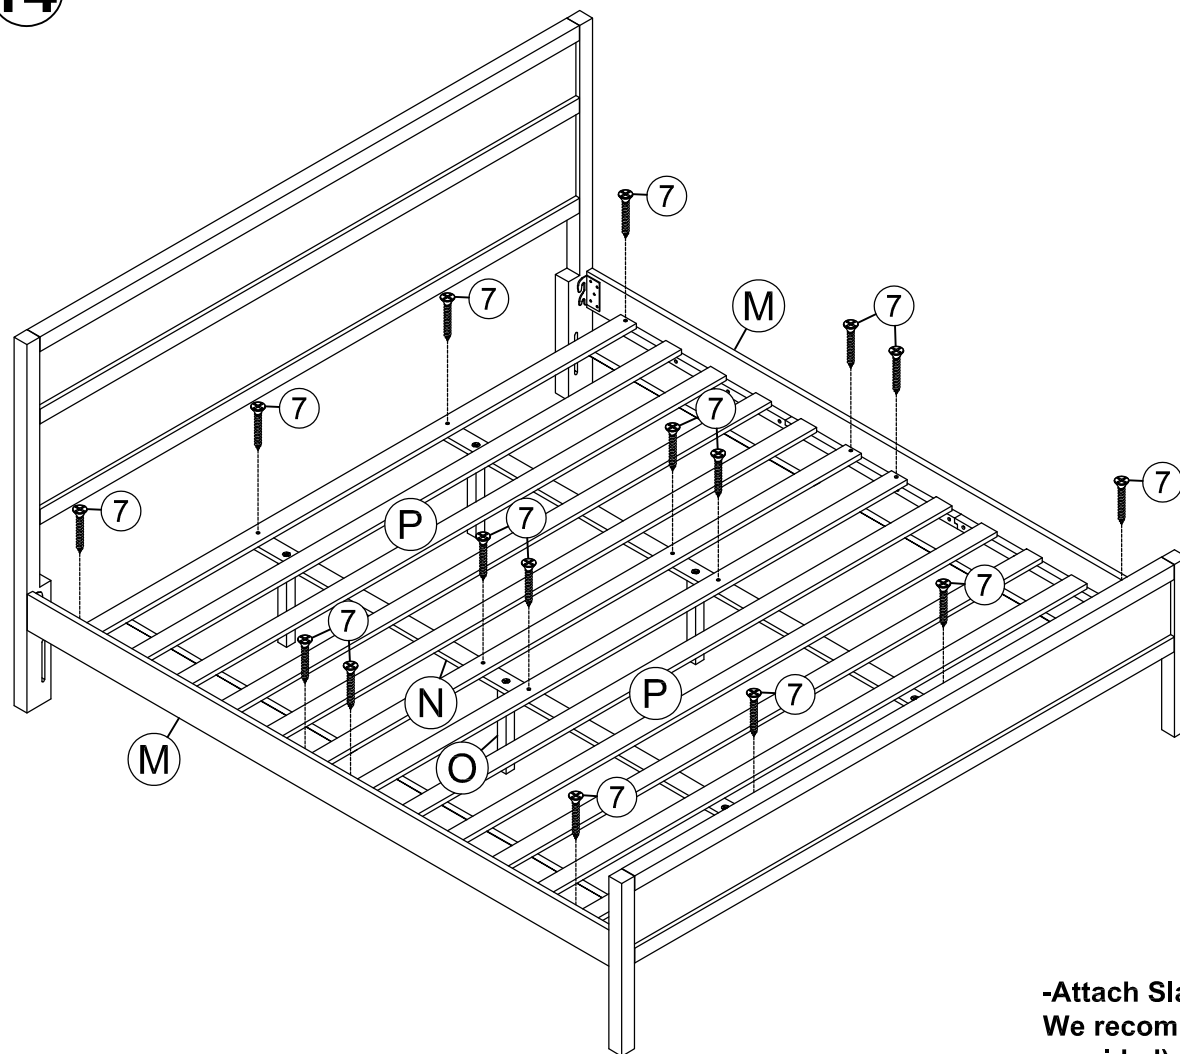


-Attach Slats (P) to side rail (M) & Support bar (N) using Wood Screw (7)
We recommend to use standard size philips head screwdriver (not provided) to attach the slats to bed with wood screws (7).

Your bed is complete, thank you for your purchase!

If you're having difficulty, our friendly Customer Care team is always here to help.
Call us at 1.336.861.0604, email: parts@comfortpointe.com.

VERSION 2.1 REV 08/19/2026

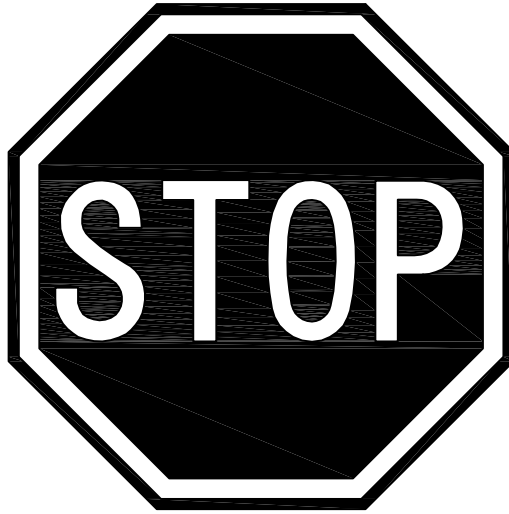

*****IMPORTANT MESSAGE*****

Please check to insure you have received all parts listed on the instruction sheet provided. If you did not receive all parts or received damaged parts please email or call the following:

Email: parts@comfortpointe.com

Phone: 336-861-0604 Contact: Parts Department

Office hours:

8am to 4pm EST Mon-Thur

8am to 3pm EST Friday

You will need to provide the item number purchased, your reference number, and identify which part is missing/damaged, all parts orders are considered priority.

Thank You