Assembly Instruction

<u>CAUTION:</u> Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.



Care and Cleaning

To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent)to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:30 minutes

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Mounting Plate		1X	G	Long Roped Tube		1X
В	Canopy		1X	Н	Shade		1X
С	Hanging Loop	8	1X	I	Finial	(D-C	1X
D	Canopy Nut		1X	J	Short Roped Tube	©	ЗХ
E	Chain	•	1X	К	Wire Nut	W	3X
E1	Closable link/ cap		2X	L	Mounting Screw	Î	2X
F	Socket Assembly	Q-2	1X	М	Bulb		ЗХ


Installation


Step 1

Unpack all parts from cartons carefully.

Insert one end threaded portion of the Long Roped Tube(G) into the tube underneath the Socket Assembly (F).

Screw the Chain(E) to the Hanging Loop(C) of the Metal Plate(B) and the Loop of the Socket Assembly (F) with Closable Link (EI) as diagram.

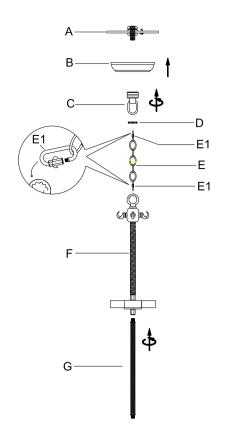

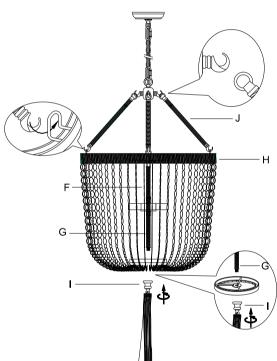


Step 2

Place the Shade(H) around the Socket Assembly(F) and fix the upper shade by matching the upper loops of the Short Roped Tube(J) to the hooks of the Socket Assembly(F), lower hooks of the Short Roped Tube(J) to the hooks of the Shade(H) as diagram.

Insert the lower end of the Long Roped Tube(G) into the center hole of bottom Shade(H) spider and fix it by turning the Finial(I) clockwise till tight.


Step 3

Seperate the Mounting Plate(A) from the Canopy (B) by unscrewing the Canopy Nut(D)anti-clockwise.

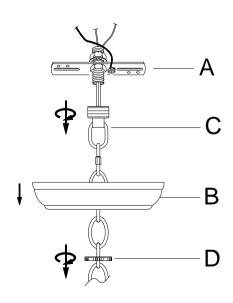

Step 4 Wire connection

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:		
Black	White		
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)		
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)		
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor		



*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)




Grounding Instructions:

- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

Step 5

Fix the Mounting Plate(A) to the junction box with Mounting Screw (L).
Attach the Canopy(B) to the junction box and fix it by turning the Canopy Nut (L) clockwise.
Insert the bulb (M) into the Socket.

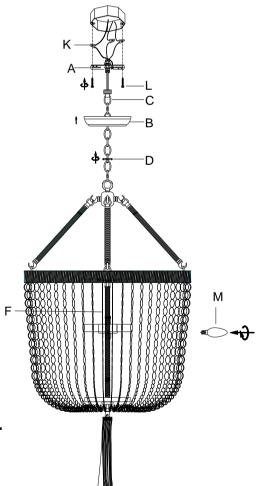

PLEASUE USE ON/OFF TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 9-WATT THERE ARE 3PCS 25-WATT TYPE"B" BULBS IN THE BOX.

Step 6

Consult a qualified electrician to ensure correct branch circuit conductor