

Bathroom Vanity

# ASSEMBLY INSTRUCTIONS

## Notice:

1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers : 2



Put a carpet on the floor  
before unpacking




Estimate installation time:  
30 minutes

Item no.	Reference Image	Qty
A		x1
B		x1
1		x3
2		x3
3		x3


Item no.	Reference Image	Qty
4		x3 Sets
5		x6
6		x6
7		x6 Sets
8		x1

## ASSEMBLY INSTRUCTIONS

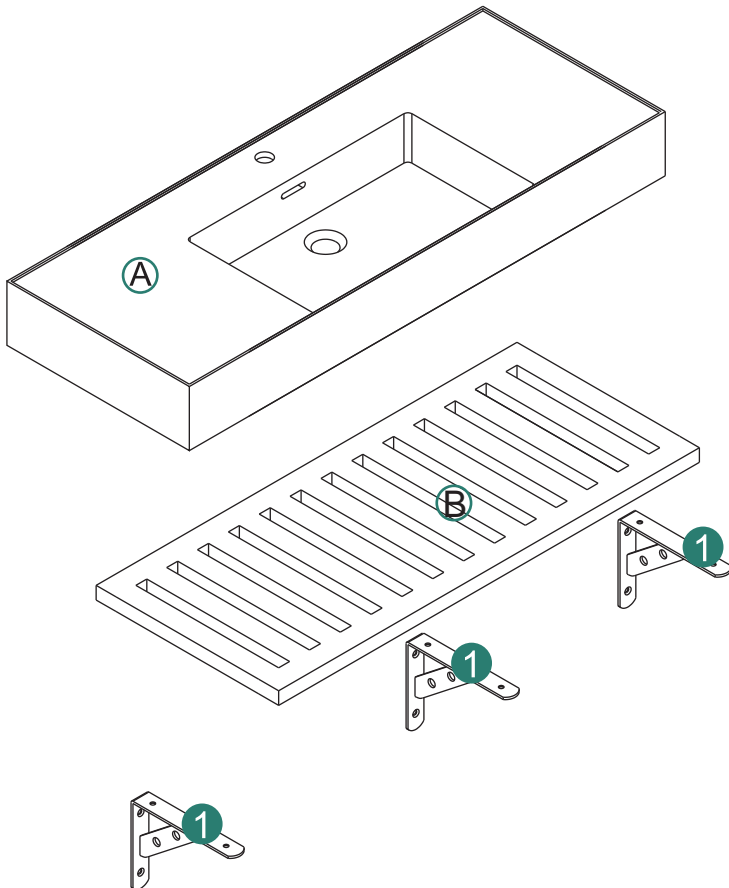

# ASSEMBLY INSTRUCTIONS


## TOOLS AND ACCESSORIES

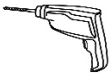

Drill



Measuring tape

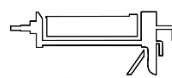


Silicone









Level



Pencil

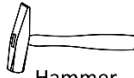

Hammer

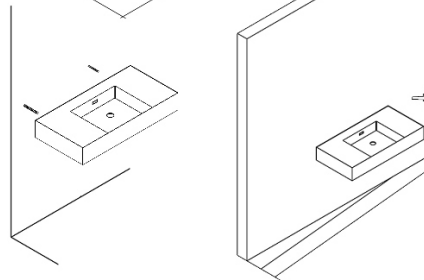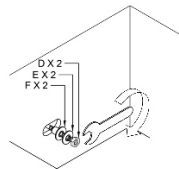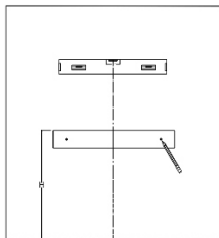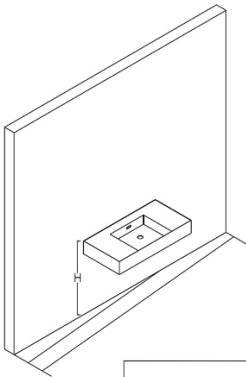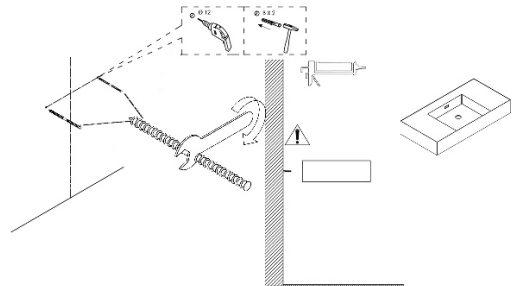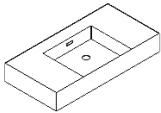

# ASSEMBLY INSTRUCTIONS


1








② 3pcs



⑤ 6pcs

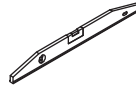

Bring your own tools

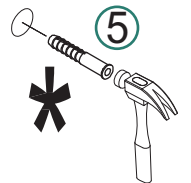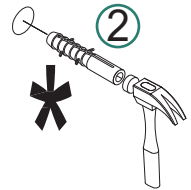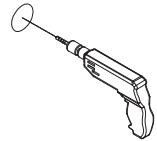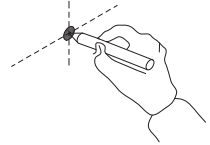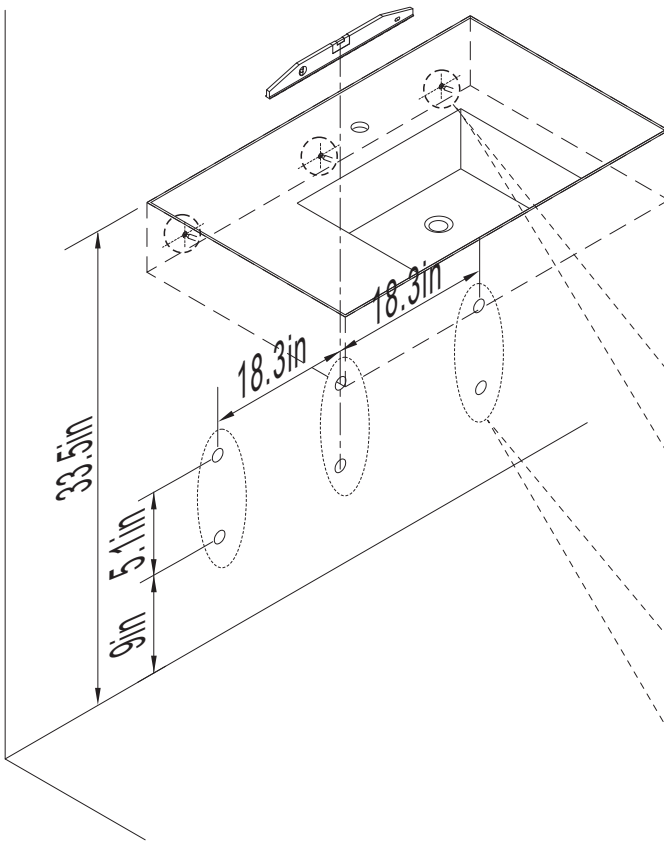


## 2

① 3pc


③ 3pc

⑦ 6pc

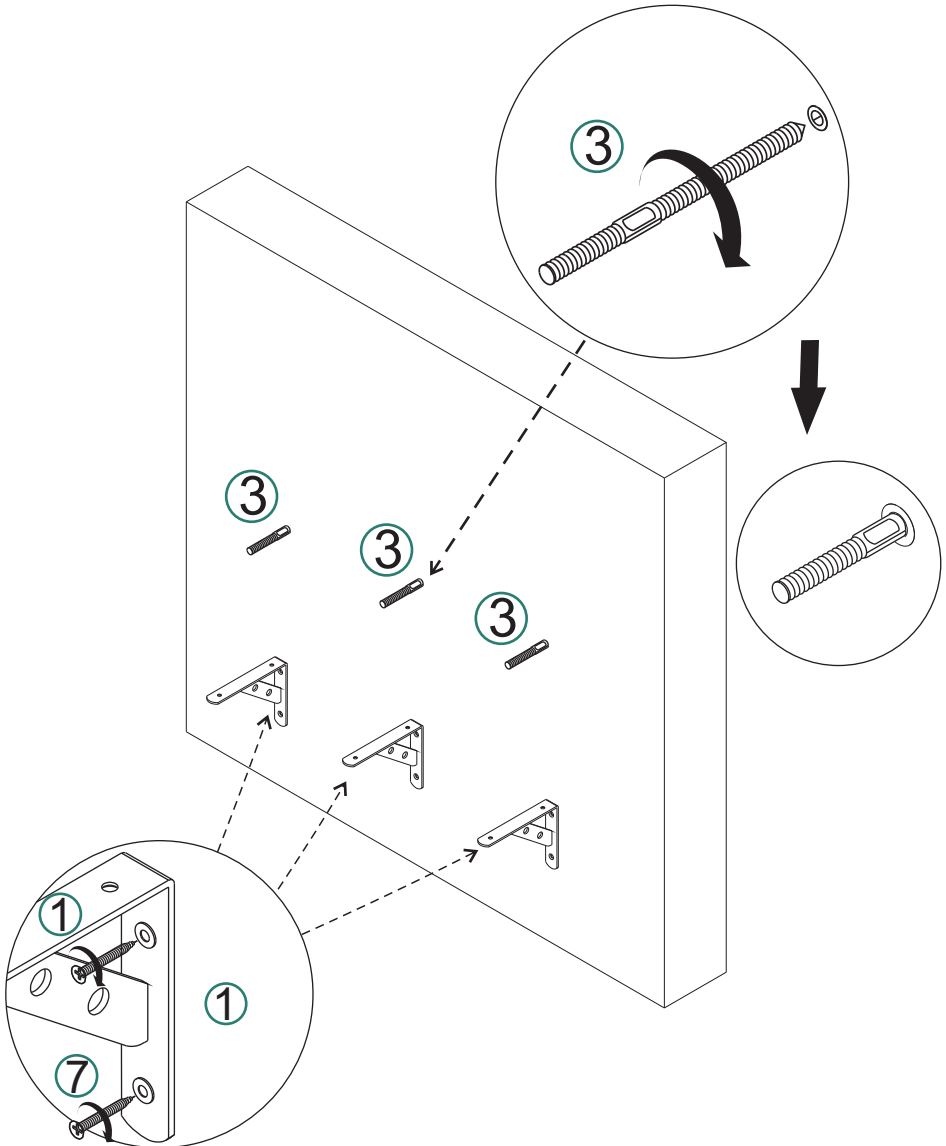


## ASSEMBLY INSTRUCTIONS

3

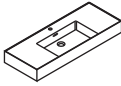

A 1pc

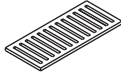


B 1pc




4 3pcs



6 6pcs

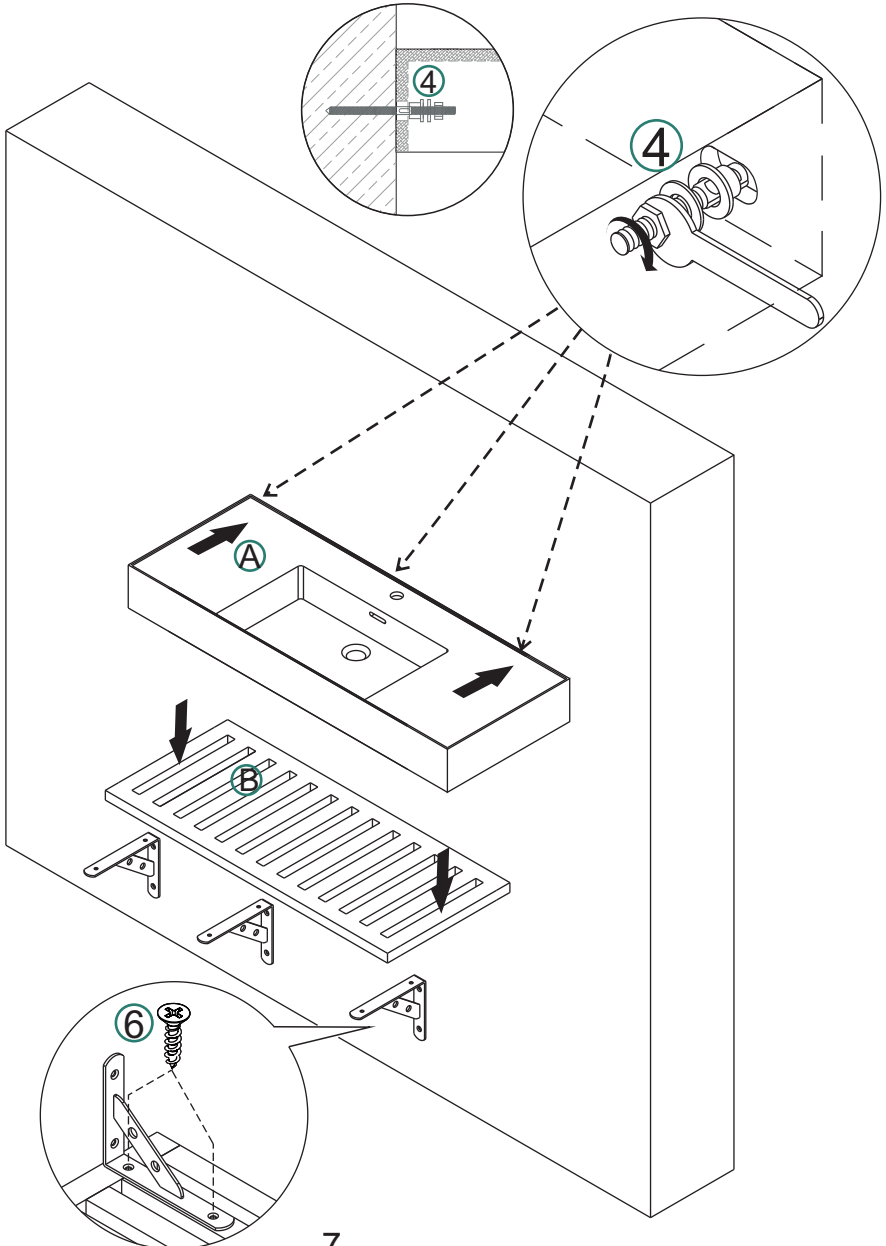

4

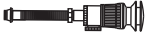

⑧ 1pcs

