



Assembly Instructions

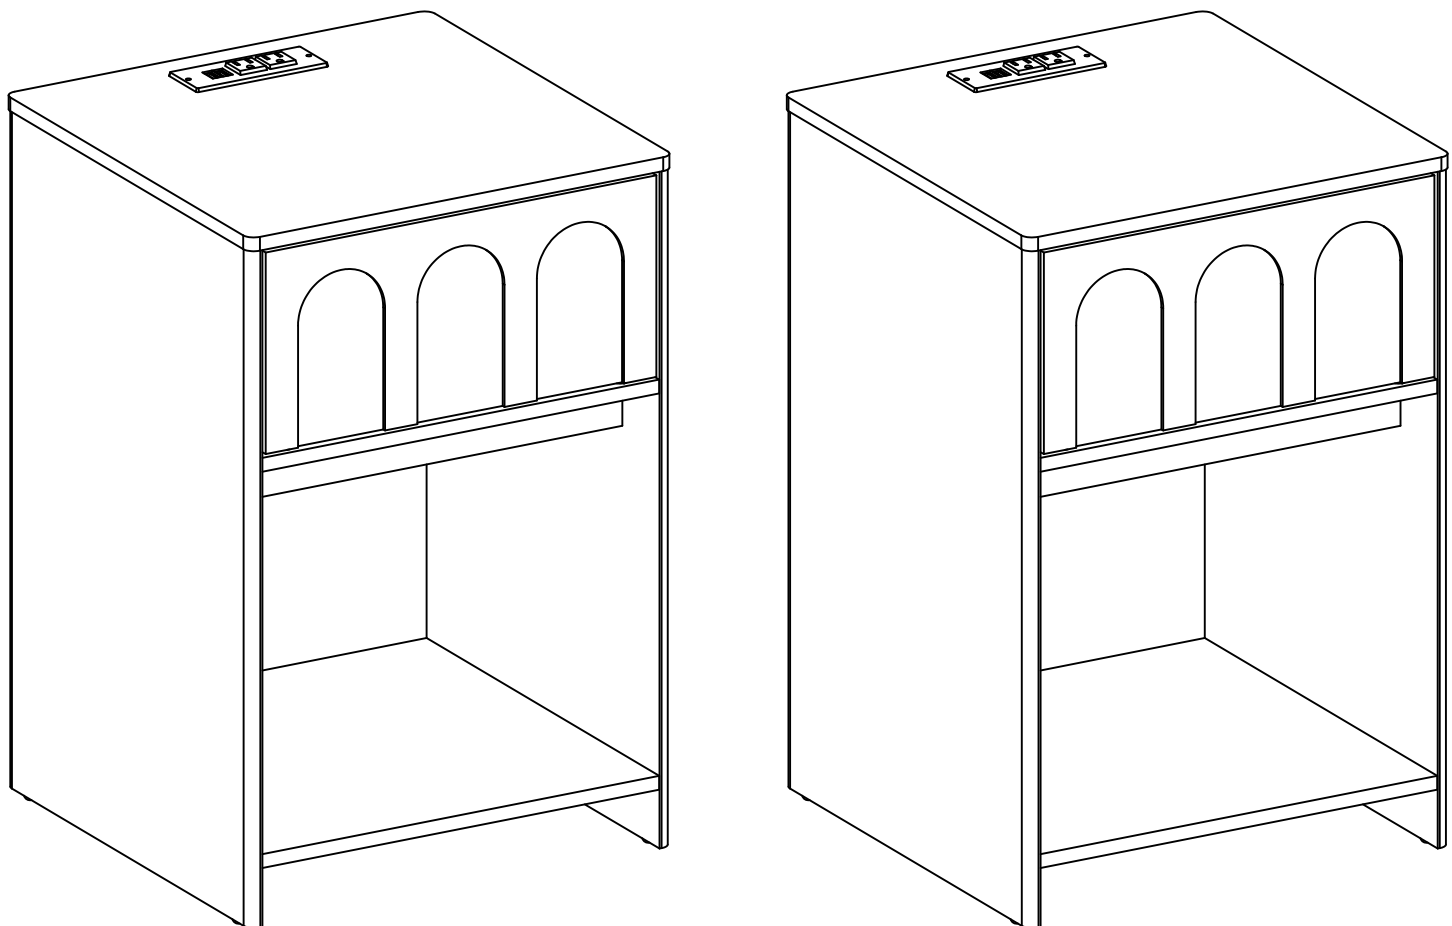


ASSEMBLY INSTRUCTION

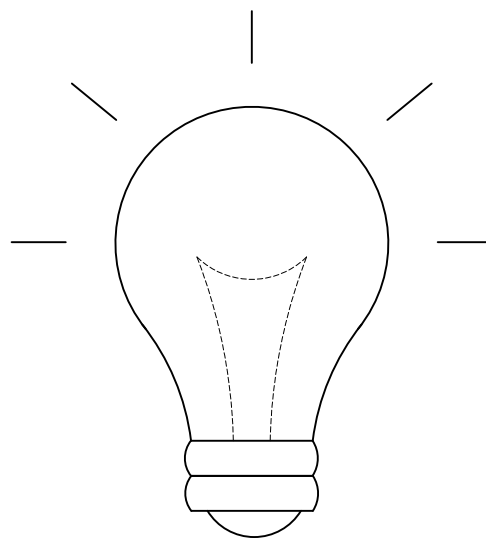







friendly reminder


To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

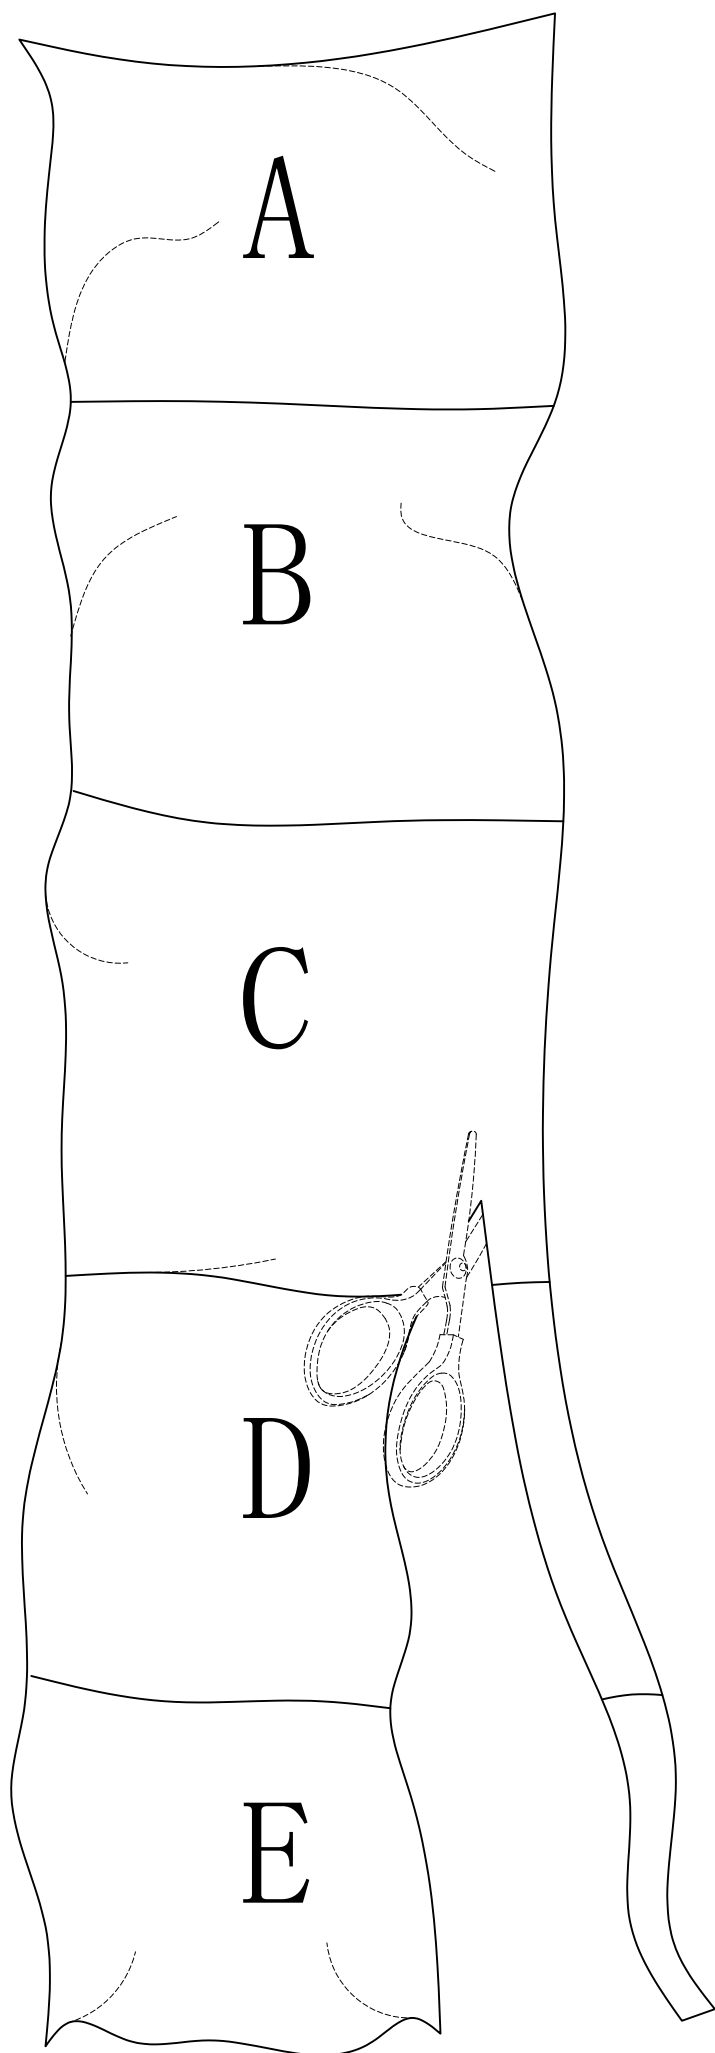


Packaging Details

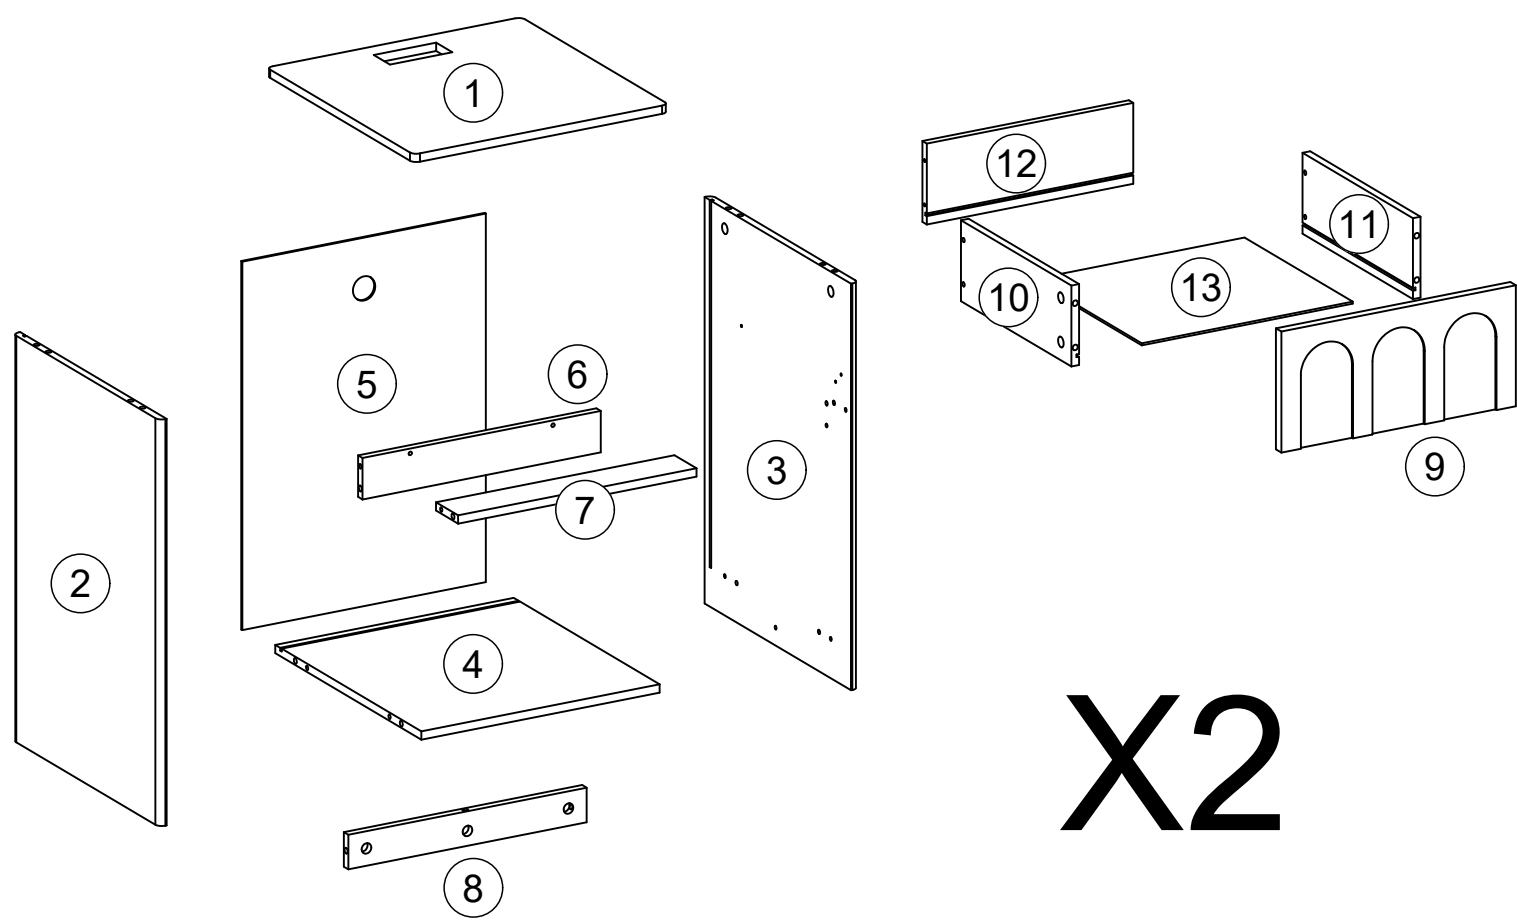

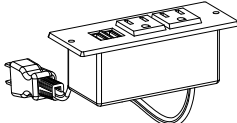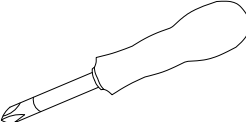
A	X42+4	B	X42+4	C	X24+2	D	X8+1	E	X2	F	X2
											
Ø6×35		Ø15×10		Ø6×30		Ø5×38					
G	X8+2	H	X24+2	I	X2	X1					
											
Ø6×Ø3*16		Ø6×Ø3*12		Ø4×12		Ø4×35					

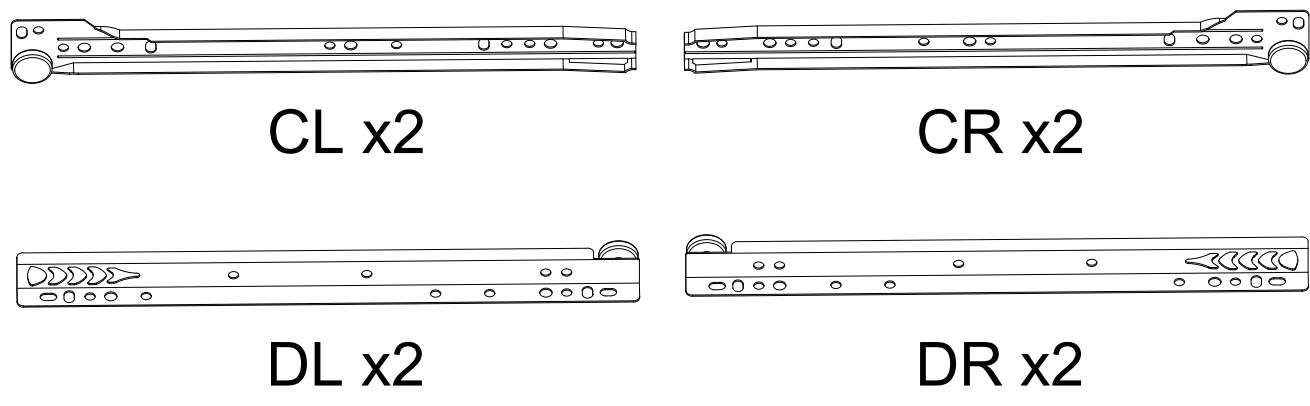

Step 1

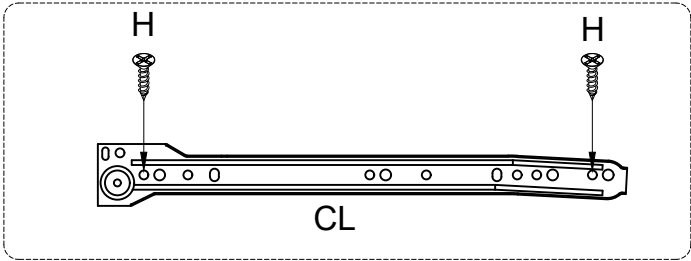


H	X4
 Ø6×Ø3*12	
A	X10
 Ø6×35	

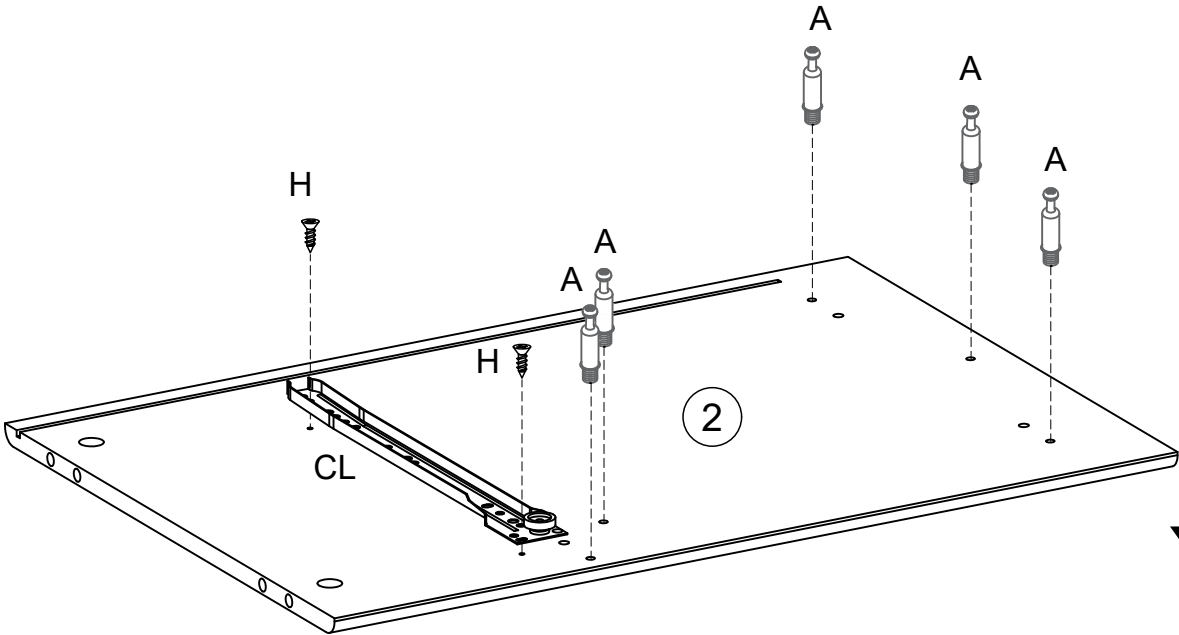



X2

 ✓	 ✗
---	--

Step 2

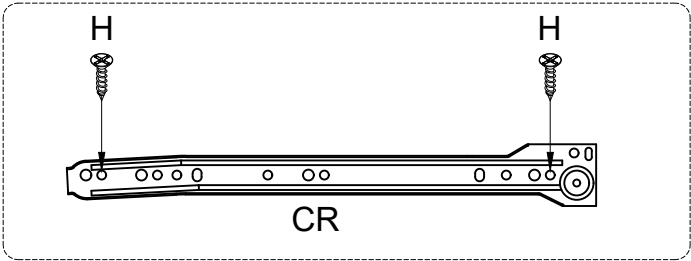


H	X4
 Ø6×Ø3*12	
A	X10
 Ø6×35	

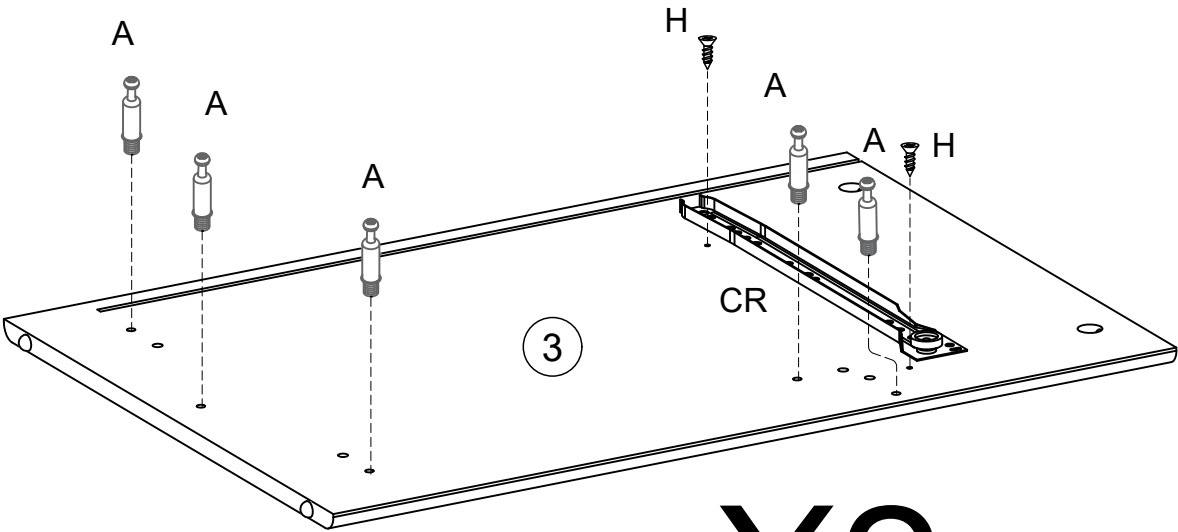



X2

Step 3

A	X2
 Ø6×35	

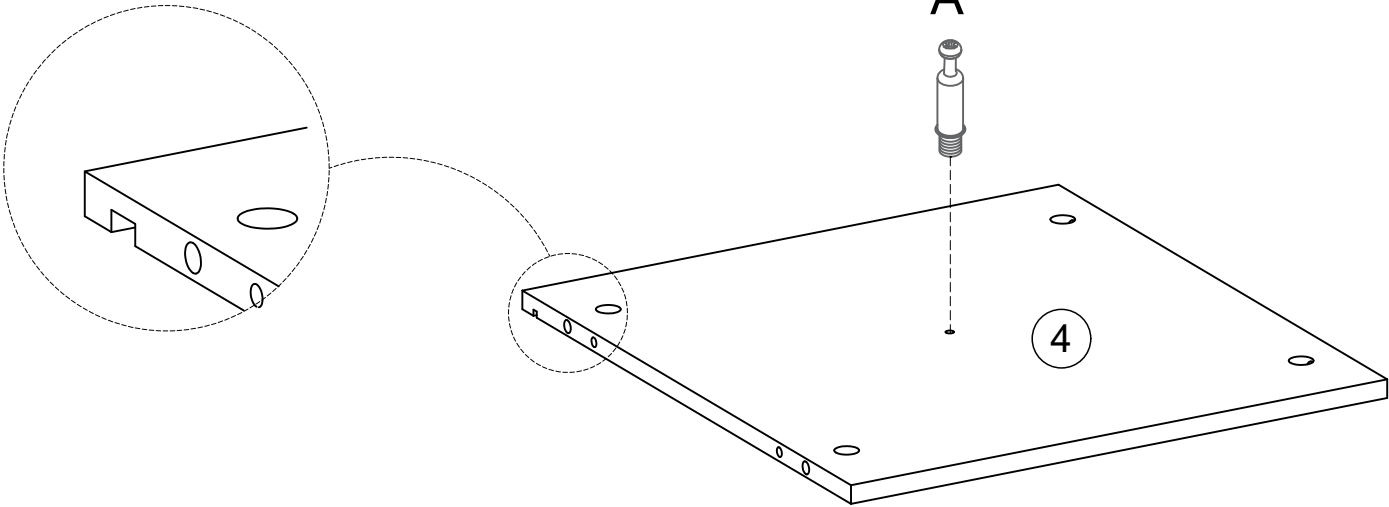


X2


 ✓	 ✗
---	--

Step 4

B	X2
 Ø15×10	

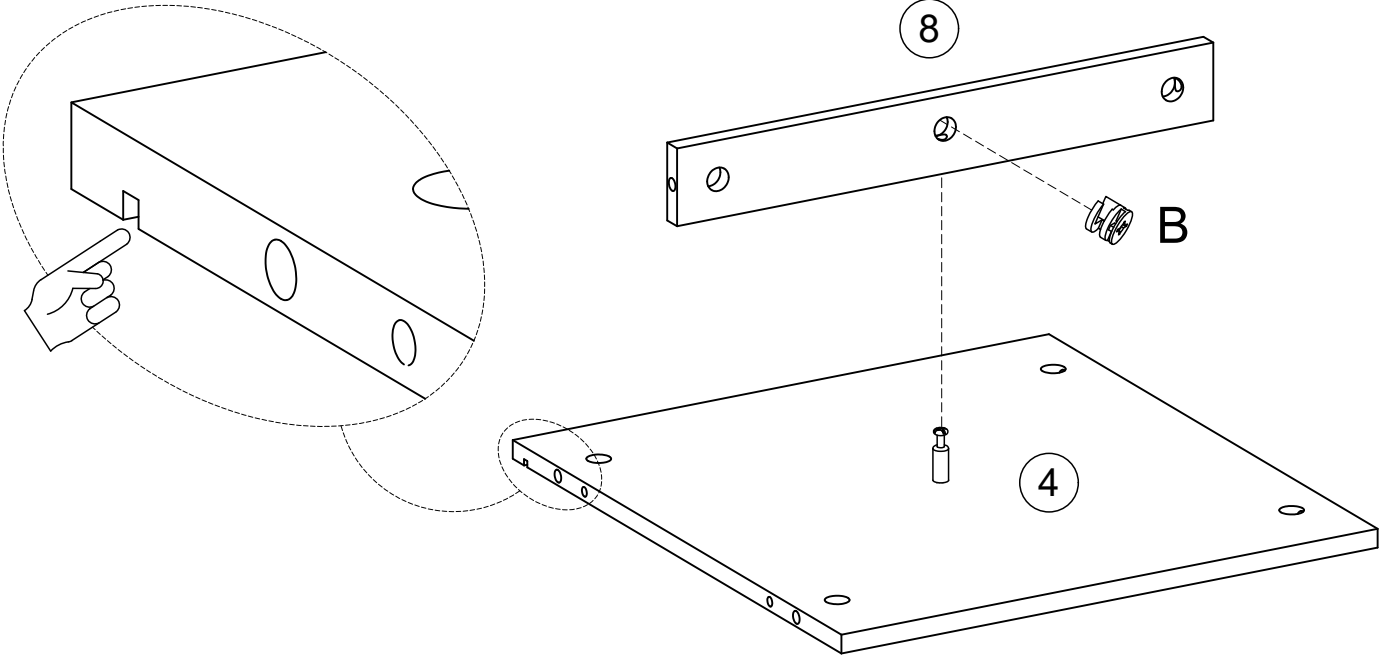


X2

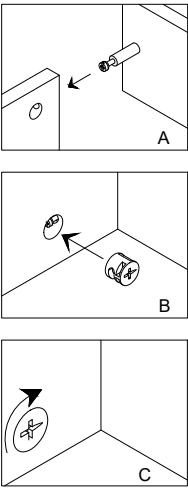

Step 5


A	X4
 Ø6×35	

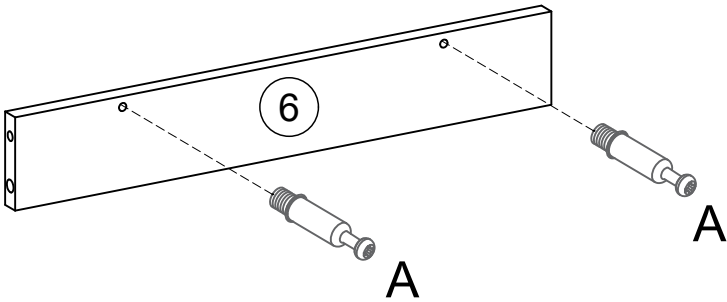


X2

Step 6


B	X4
 Ø15×10	

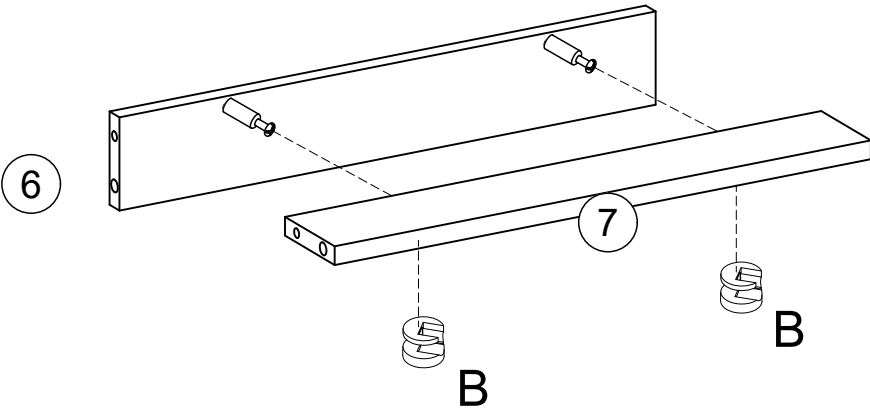


X2

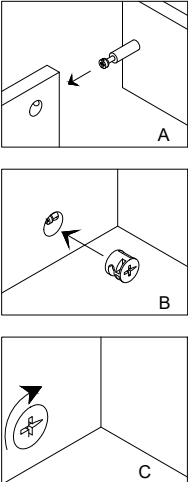

Step 7

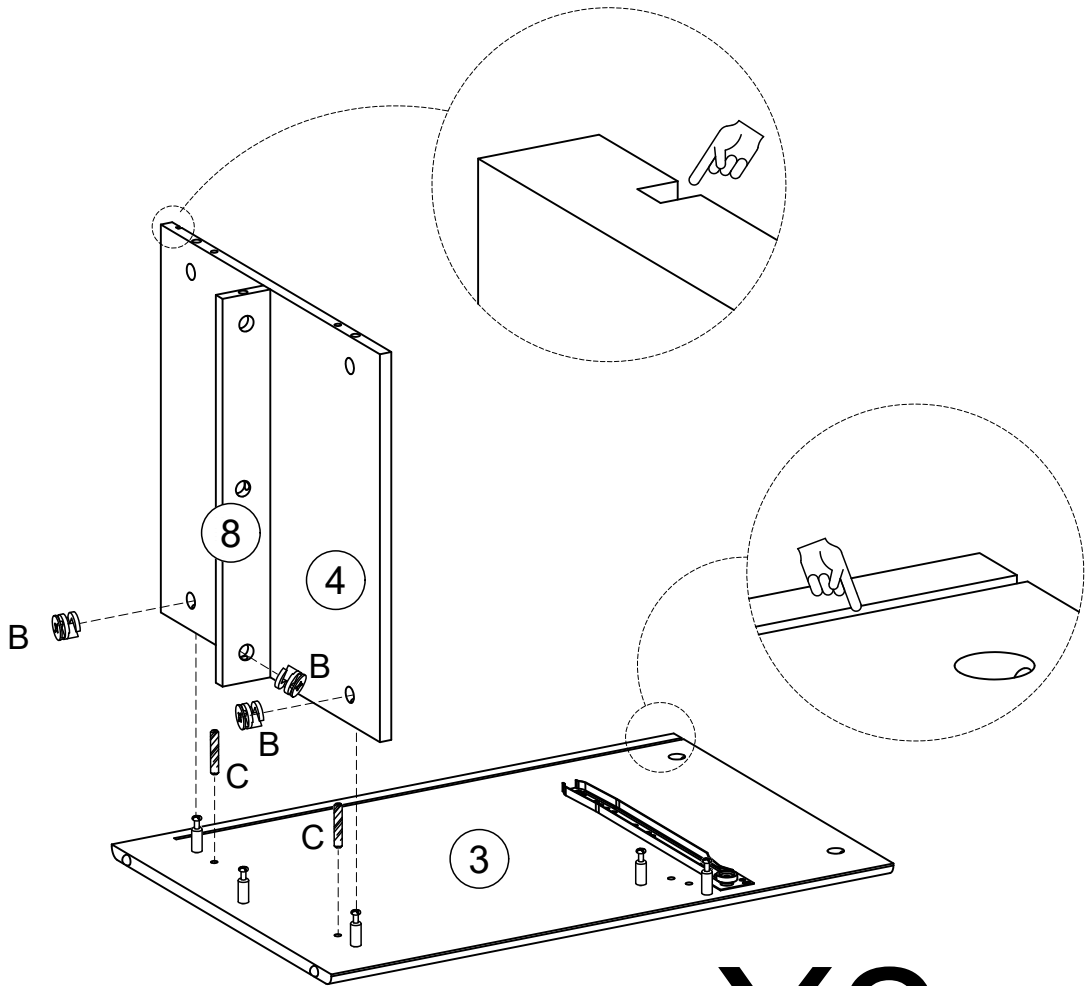


B	X6
 Ø15×10	
C	X4
 Ø6×30	

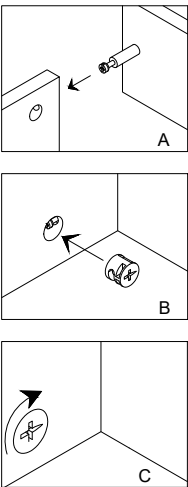


X2

Step 8

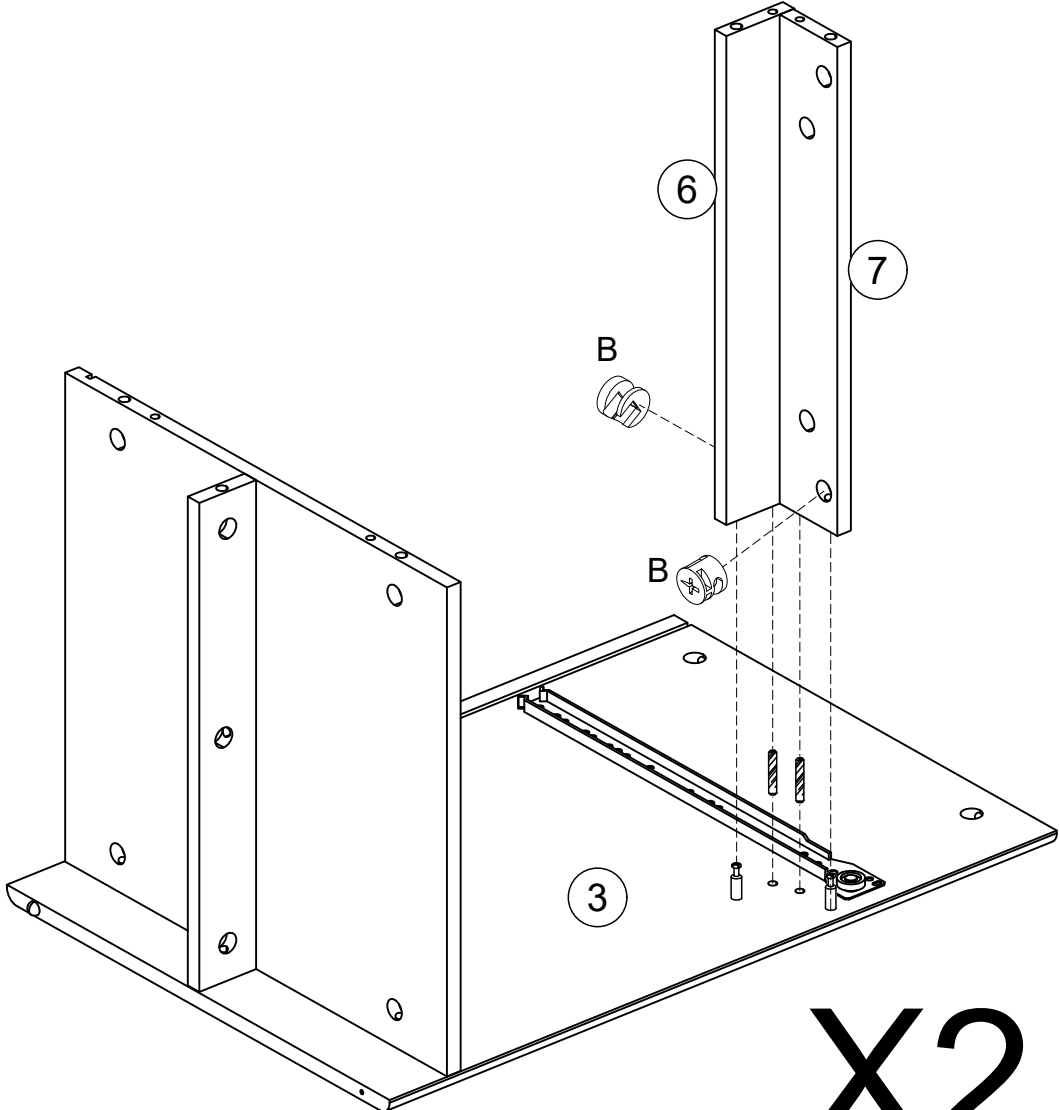


B	X4
 Ø15×10	
C	X4
 Ø6×30	

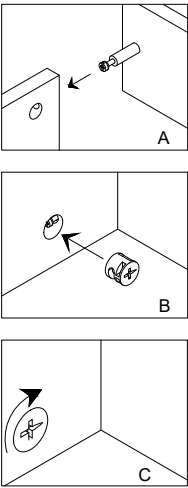

X2

Step 9



B	X10
 Ø15×10	
C	X8
 Ø6×30	

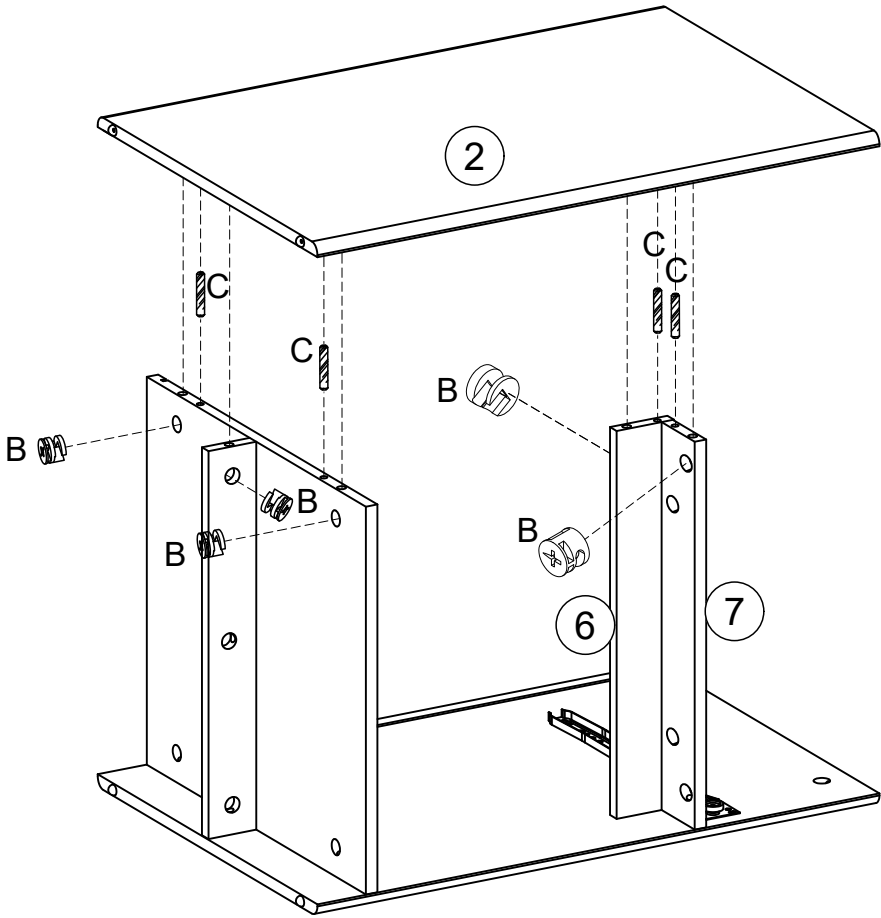

X2


Step 10



The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

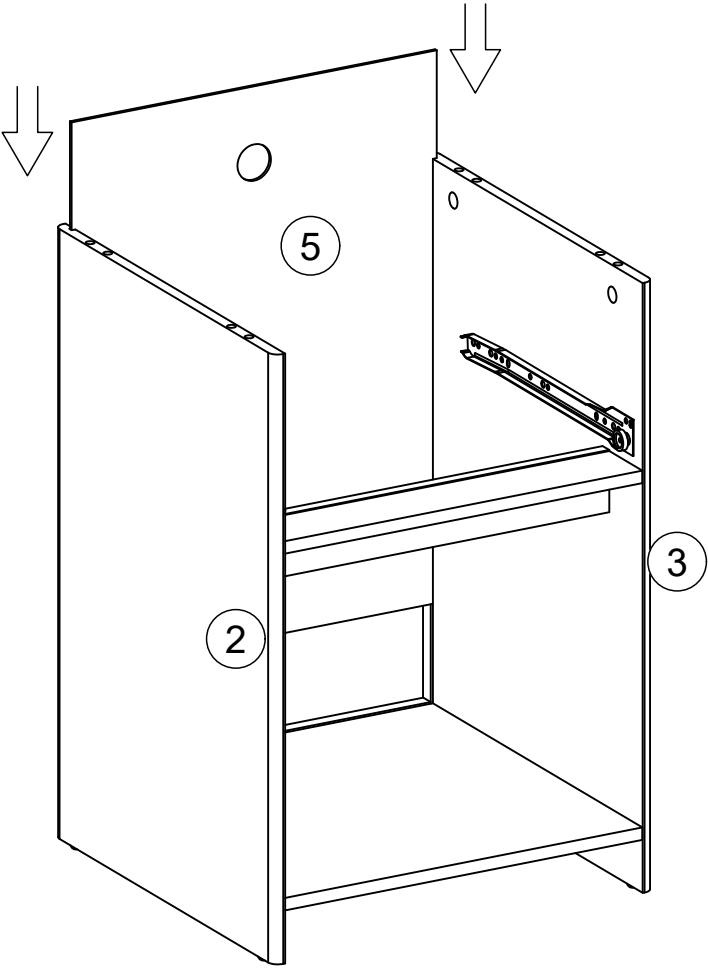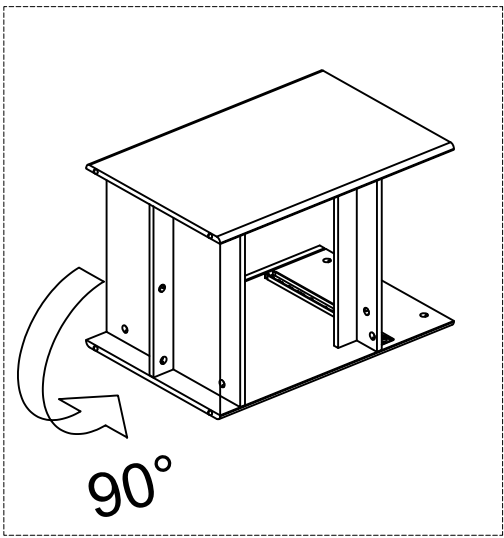



X2

Step 11

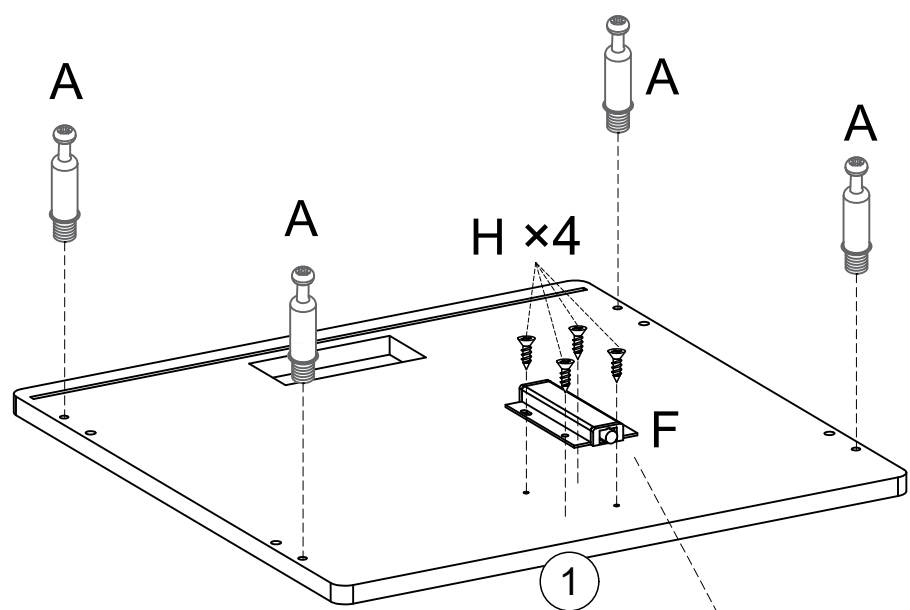

A	X8
 Ø6×35	
H	X8
 Ø6×Ø3*12	
F	X2
	


X2

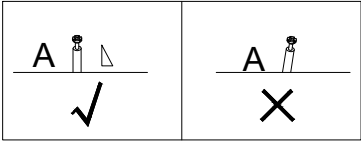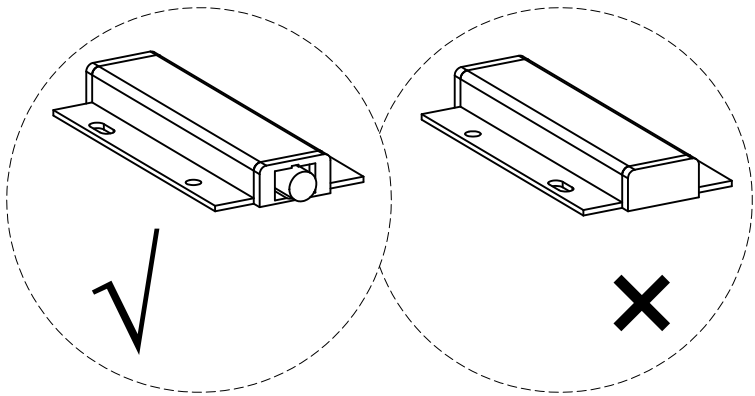



Step 12

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


X2

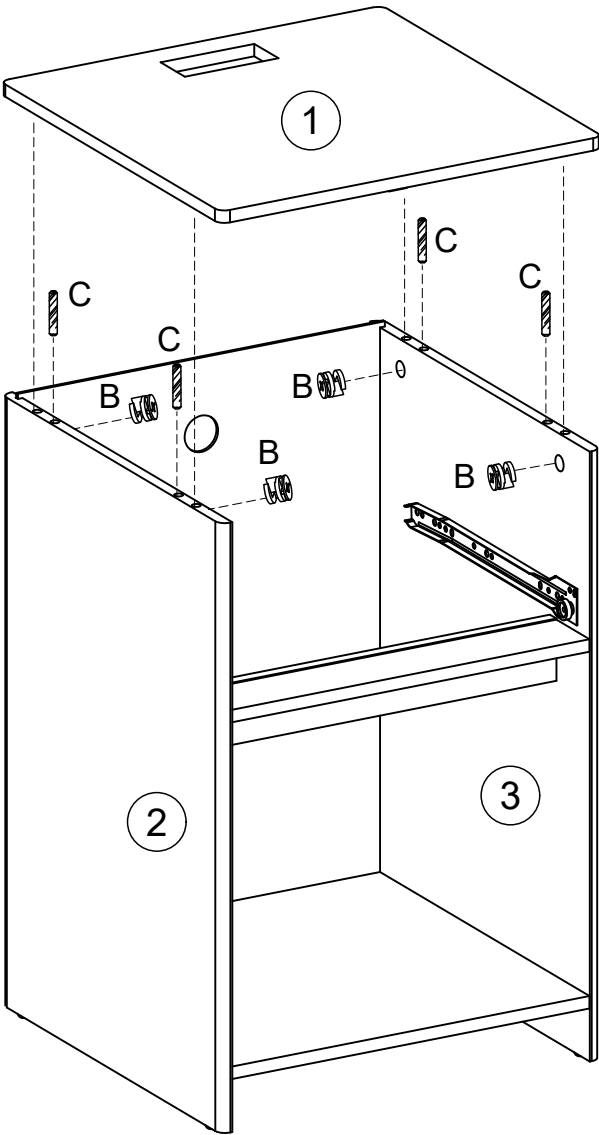


B	X8
 Ø15×10	
C	X8
 Ø6×30	

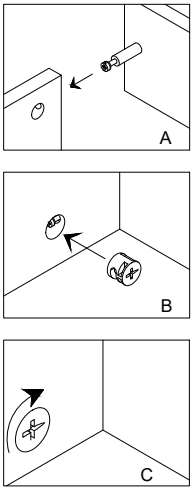

Step 13

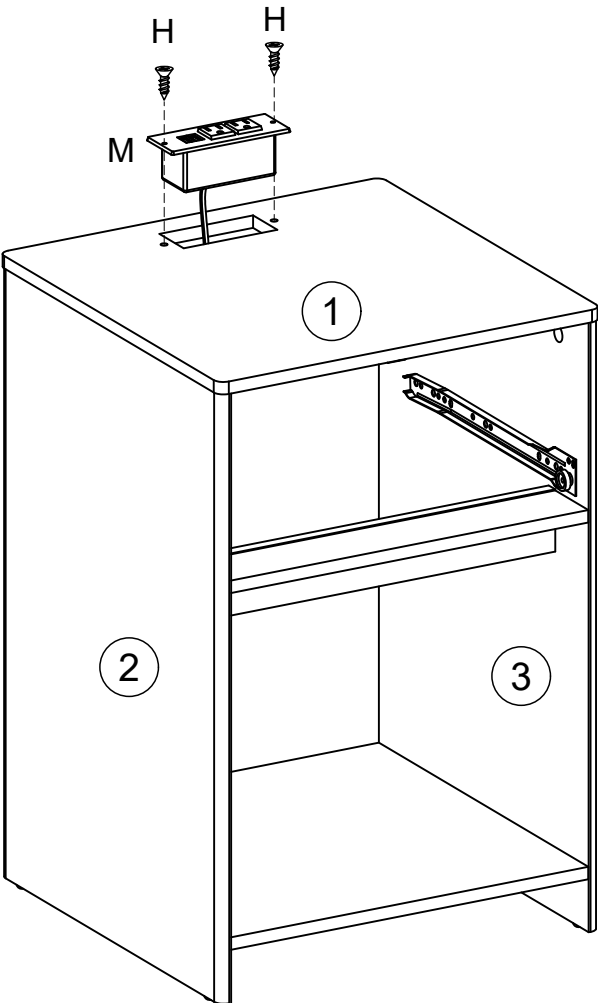


M	X2
H	X4
Ø6×Ø3*12	

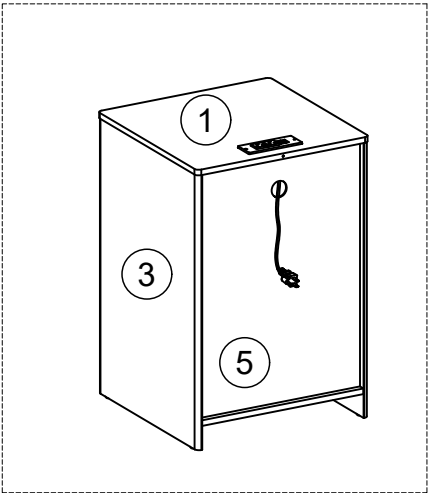

X2


Step 14

D	X8
Ø5×38	

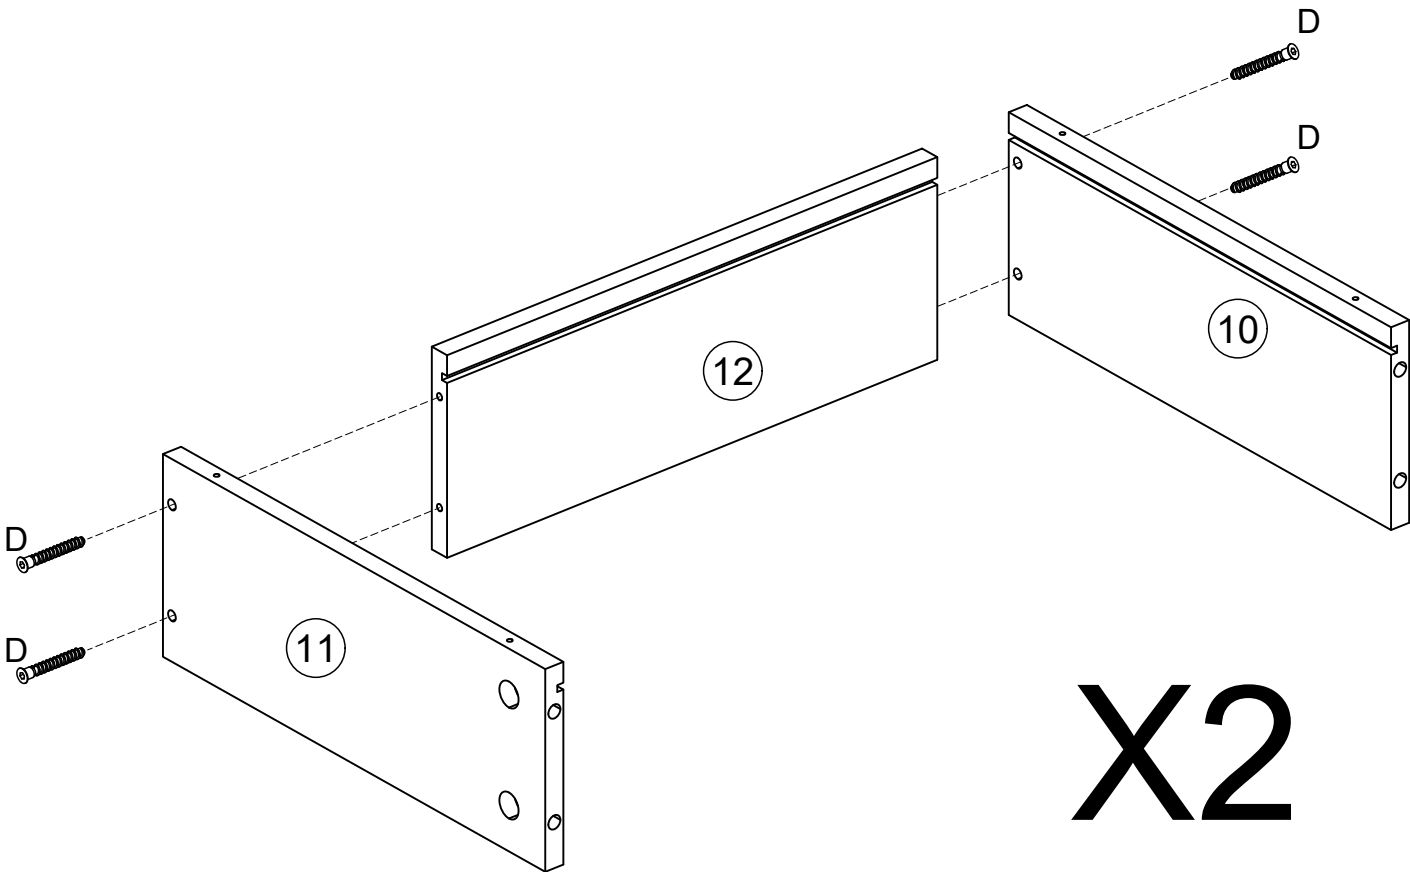

X2


Step 15

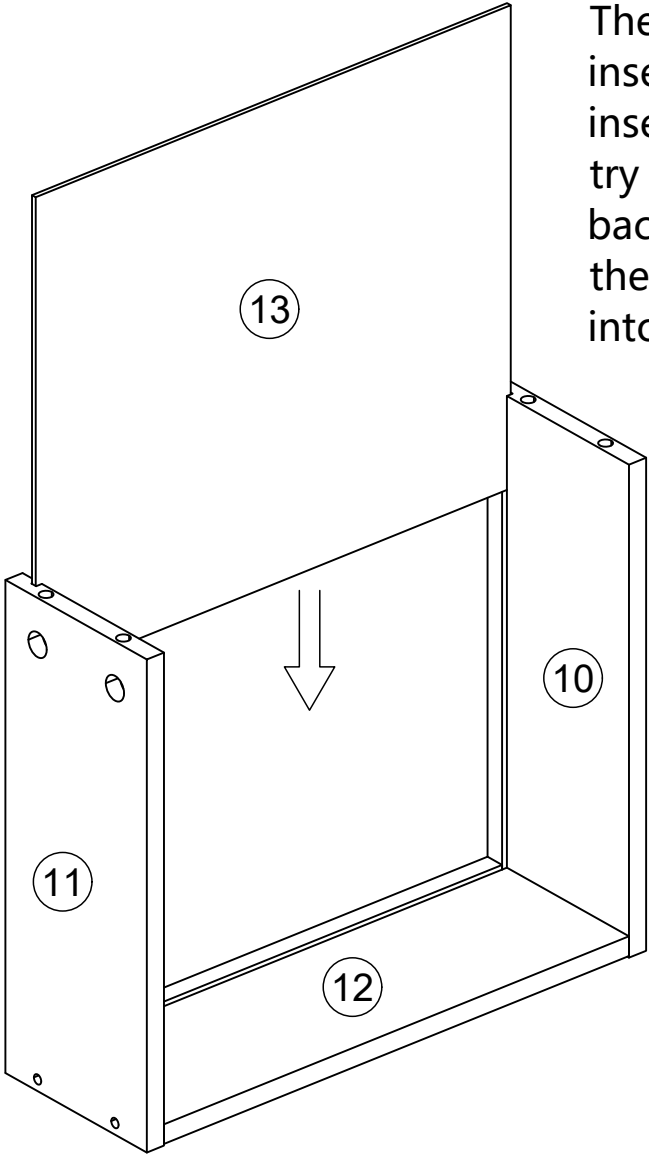


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.



X2

Step 16

A	X8
 Ø6×35	
F	X2
	

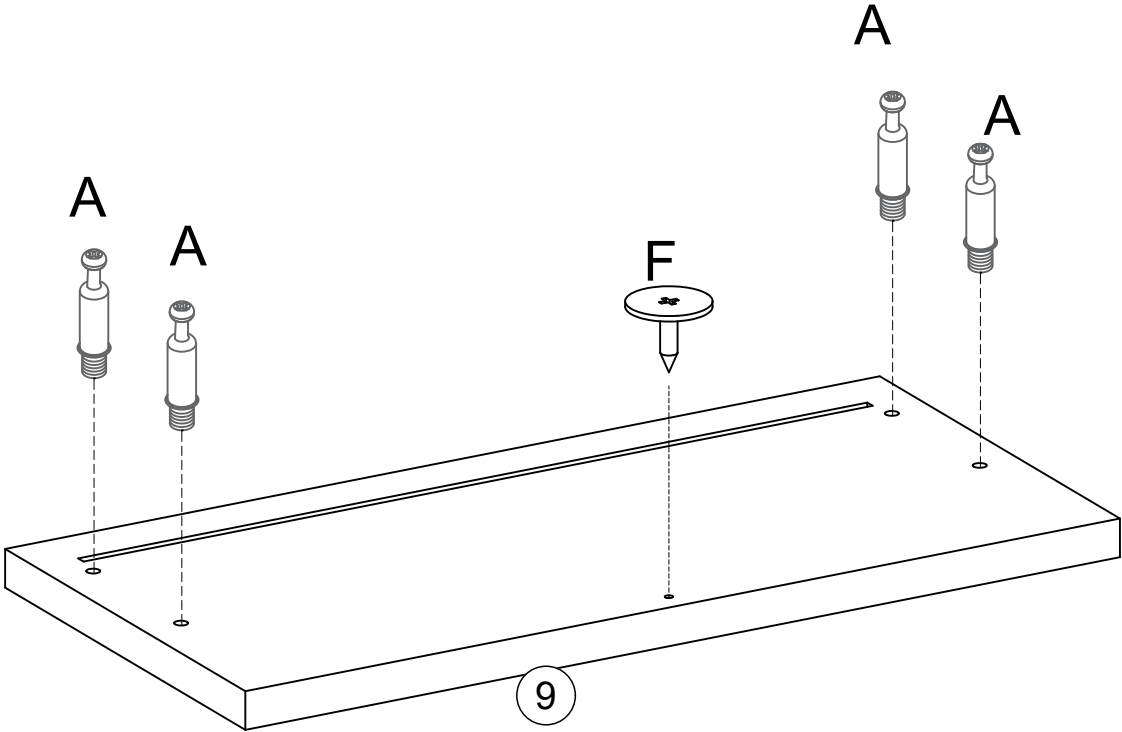


X2

	
--	---


Step 17

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.


X2

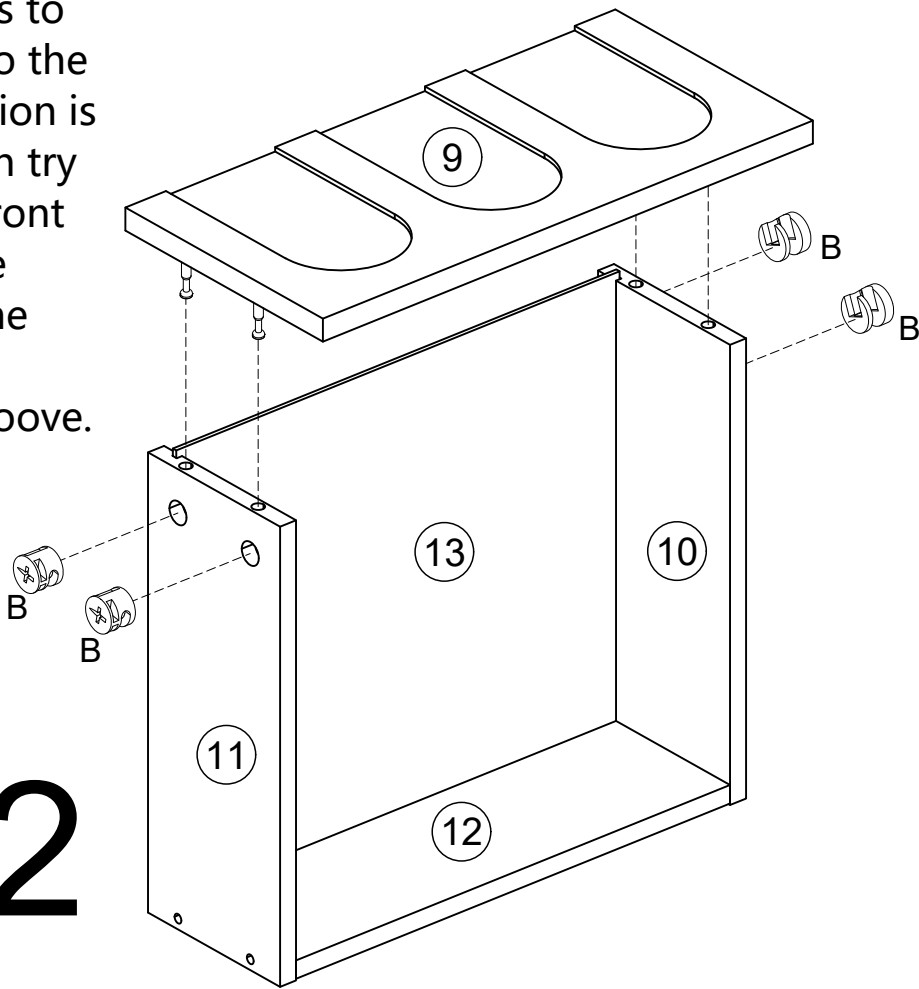


B	X8
 Ø15×10	

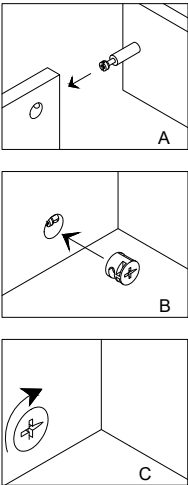


Step 18

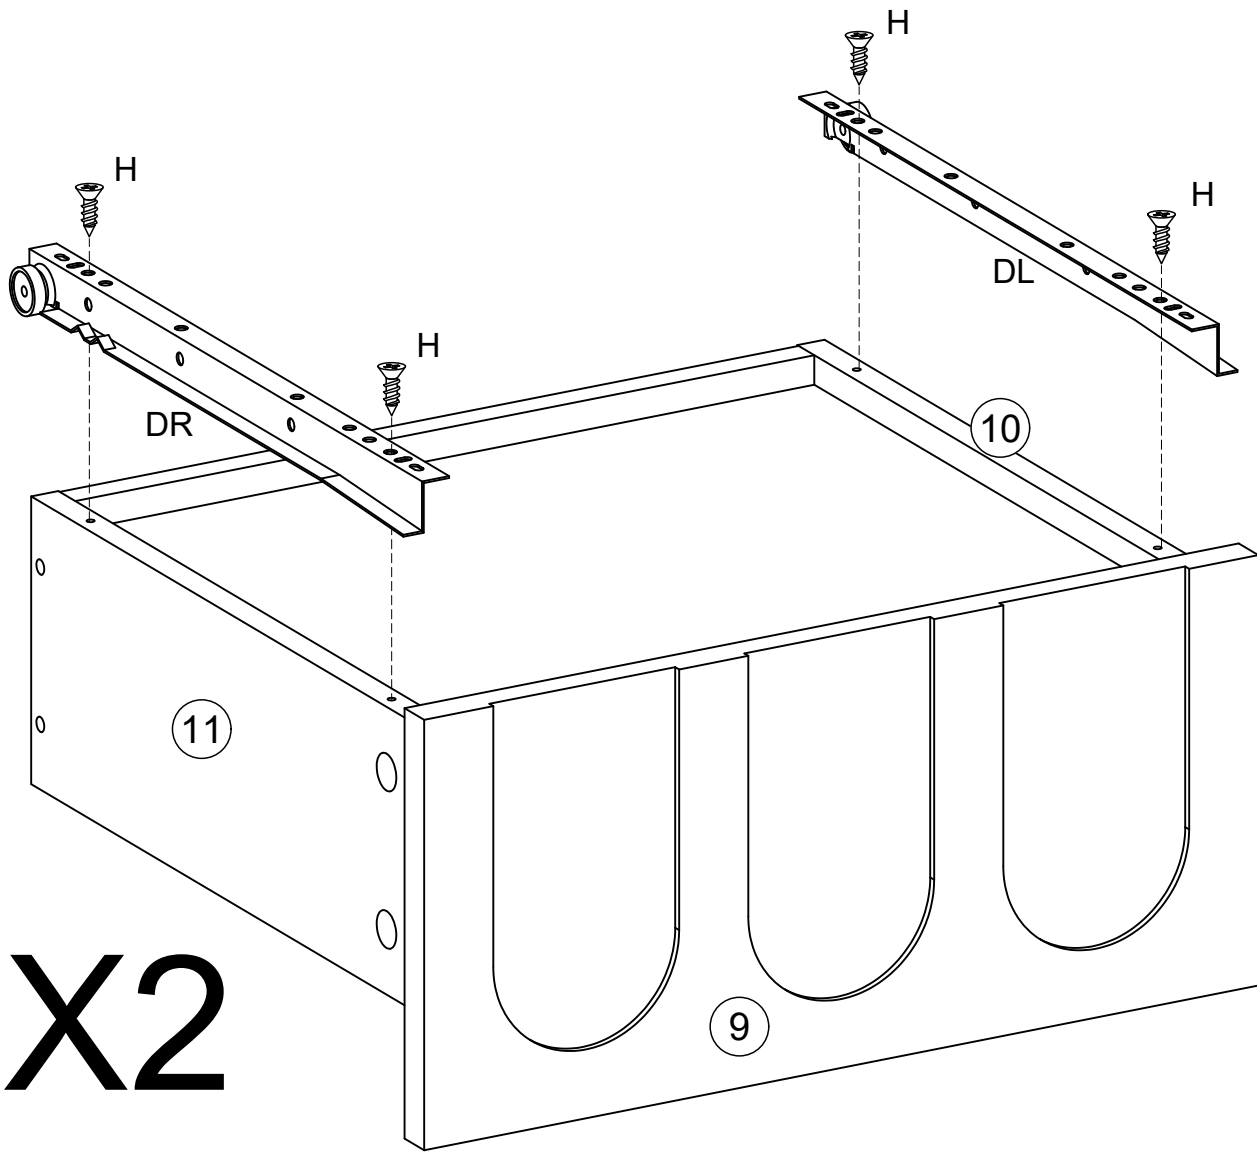

X2

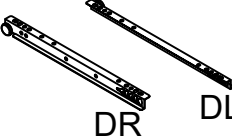
H	X8
 Ø6×Ø3*12	
 DL	

Step 19

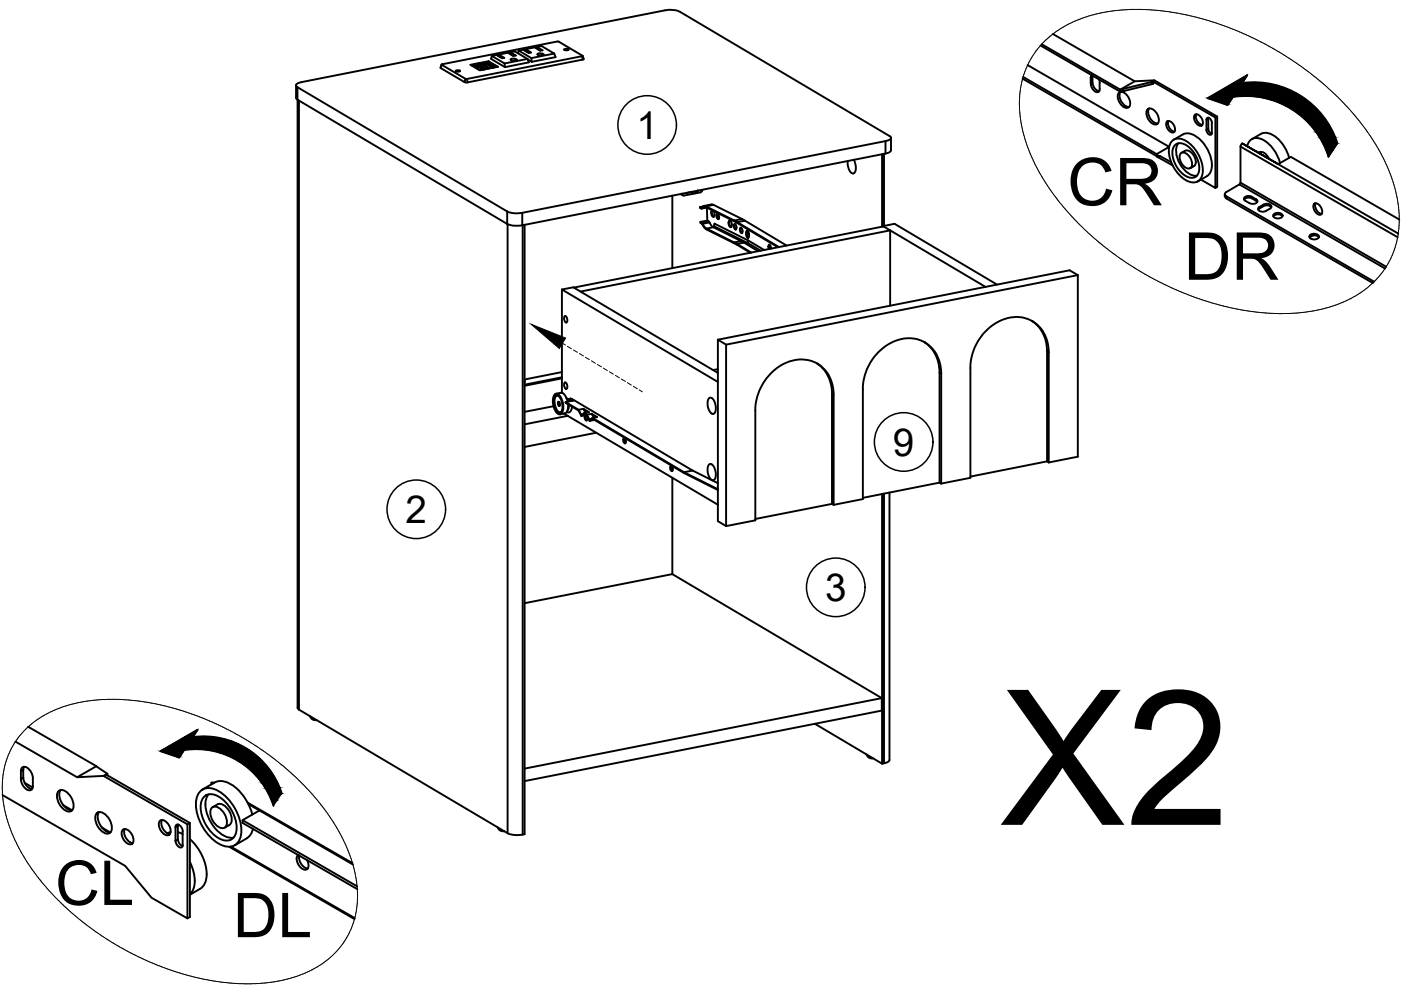

Step 20




G	X8
	
Ø6×Ø3*16	

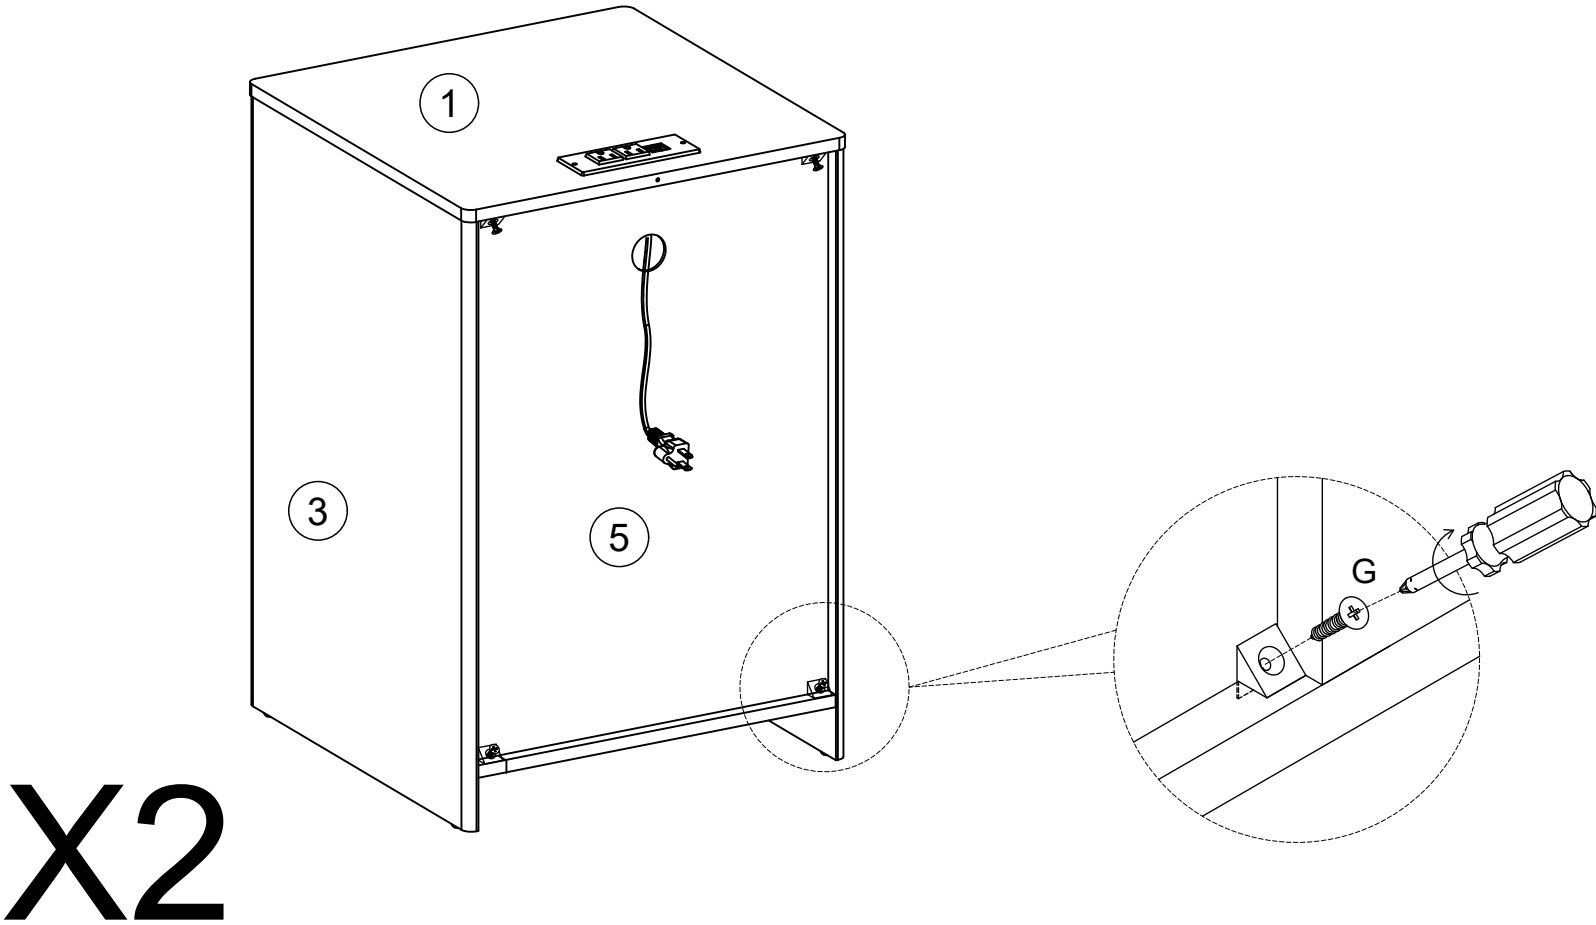

Step 21

The cabinet must be permanently fixed to the wall
Equipped with an anti-tipping device to prevent cabinet don't tip over
Mark the position of the drill on the wall with a pencil.
Drill holes at the marked locations with a drill bit.
Insert the wall anchor (I) gently into the hole
Knock in this wall anchor (I).
Lock the strips to the wall
Equipped with screws (I).

X2

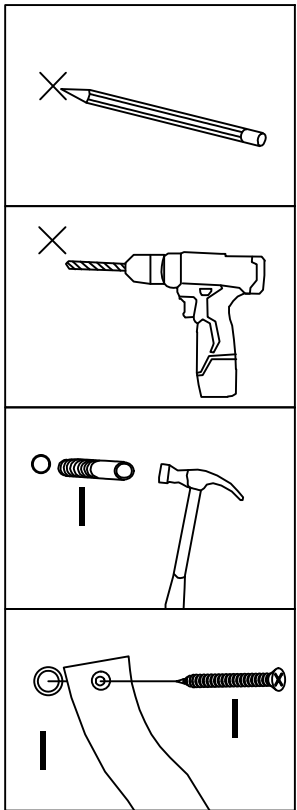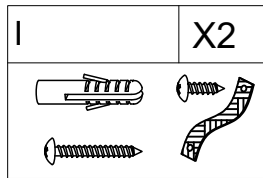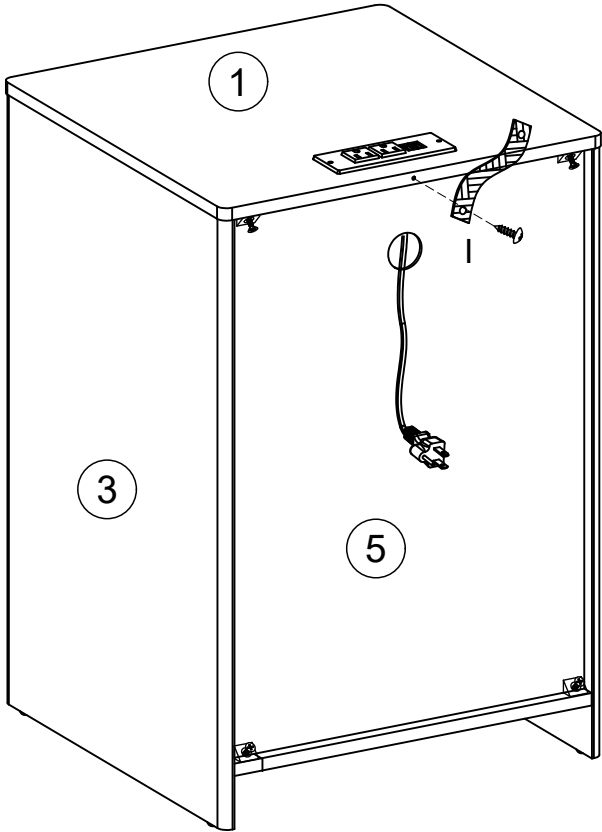

Step 22

