


















Installation Instruction

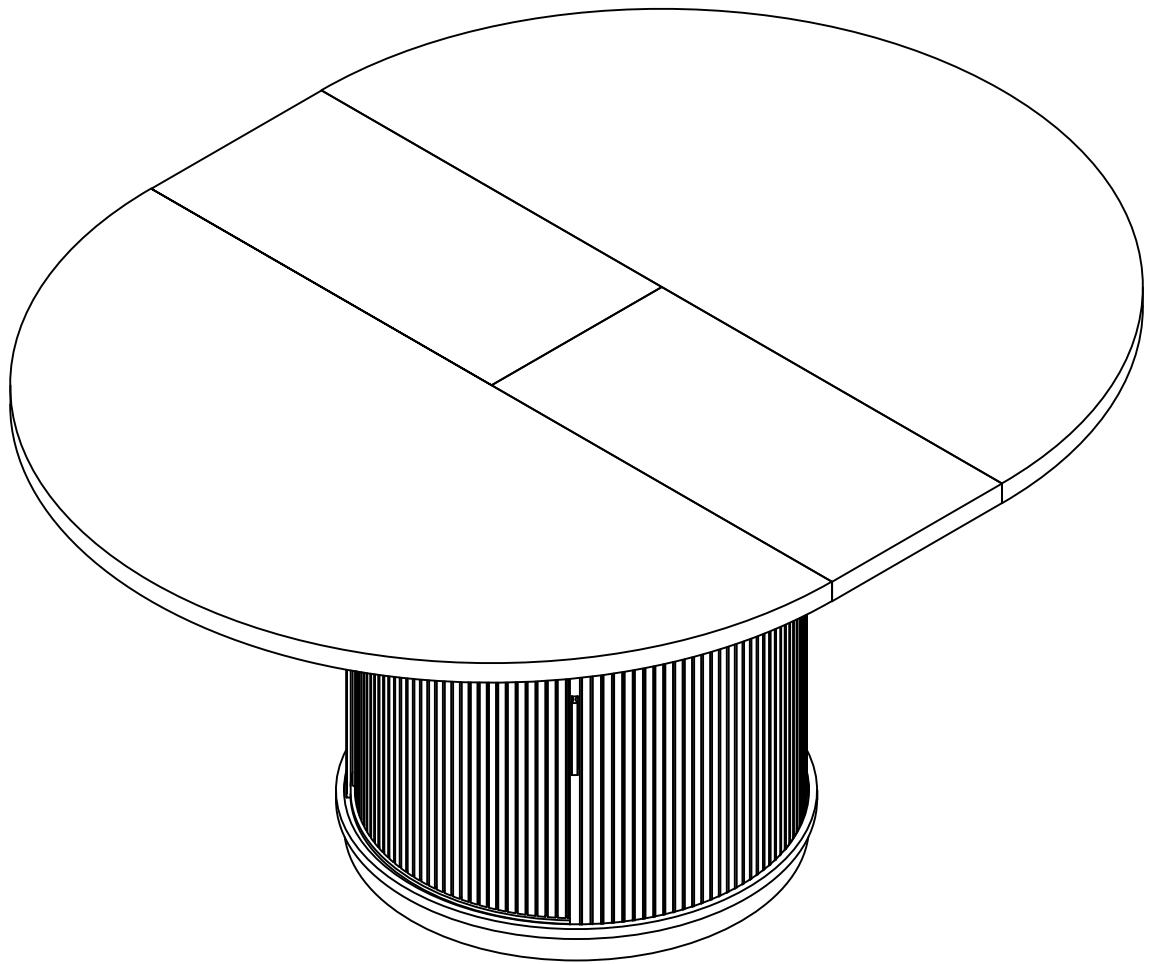

The Accessoriess

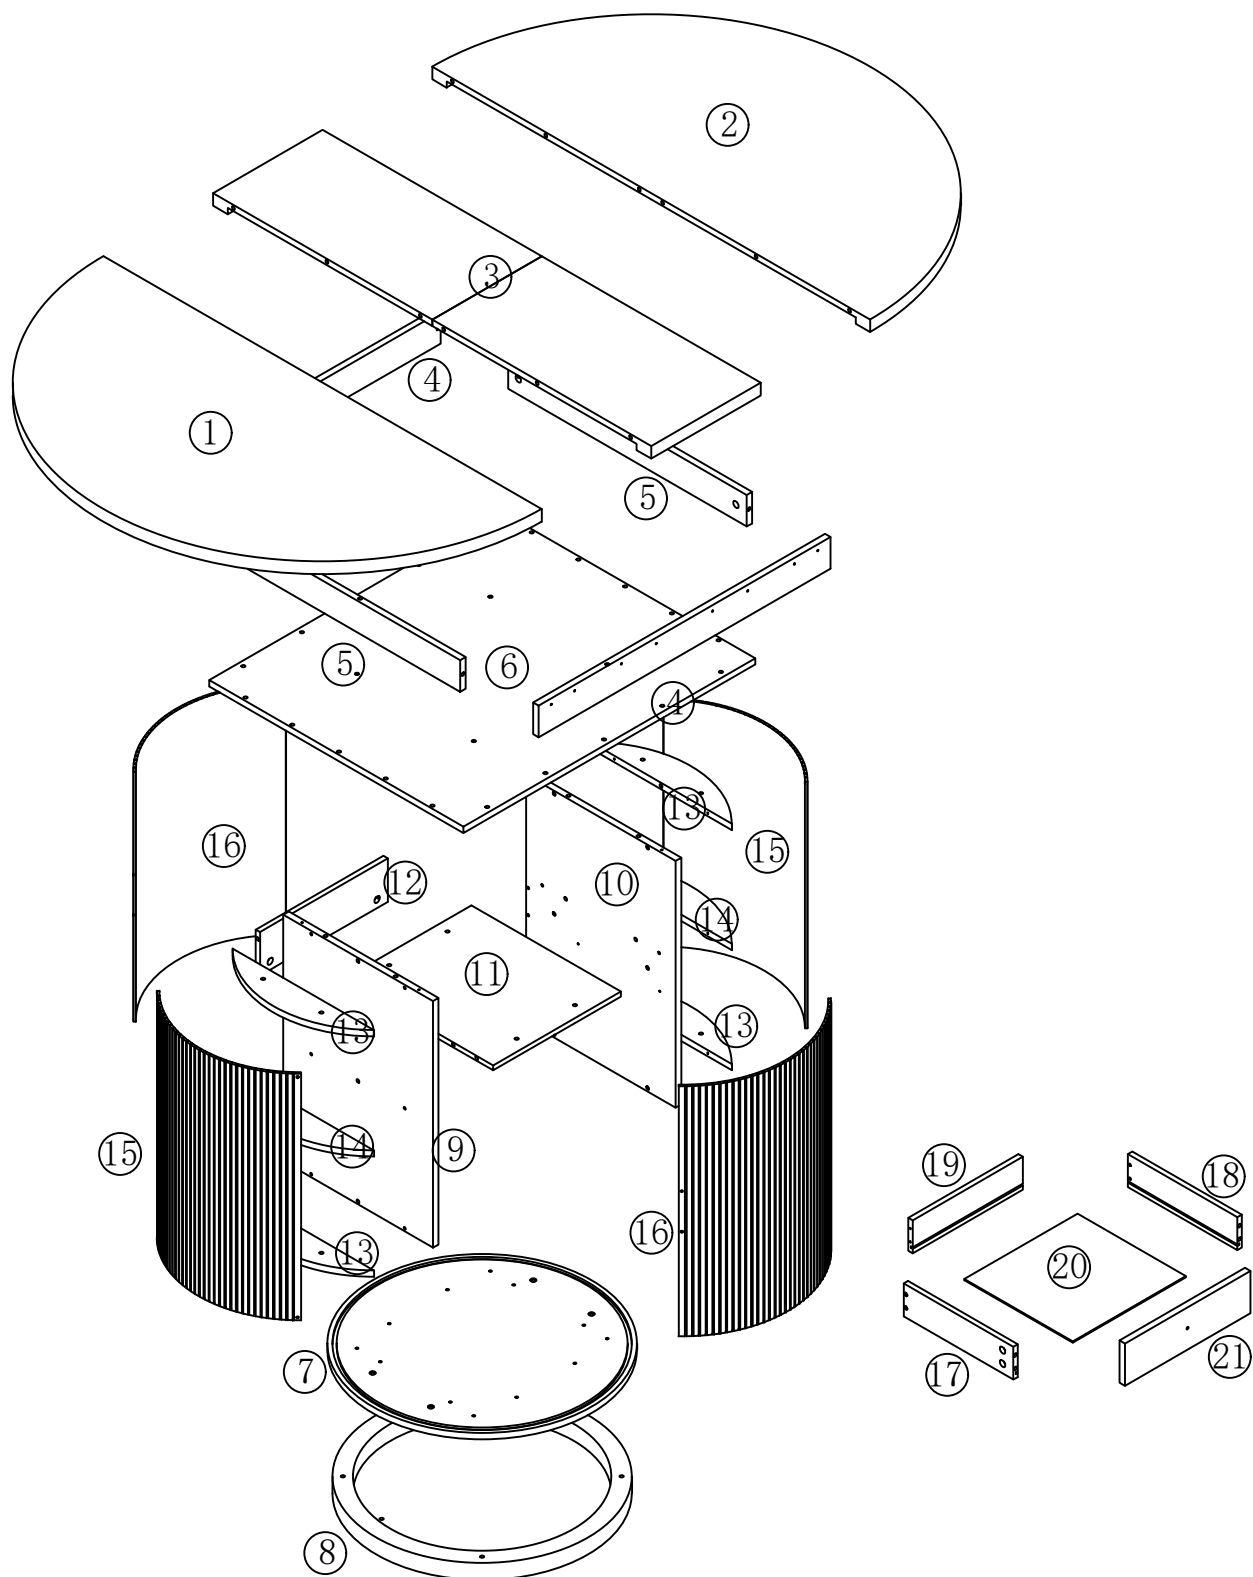


Included Accessories

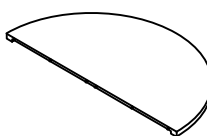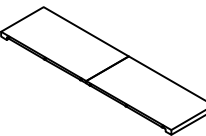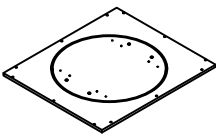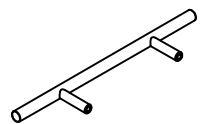①  1pc	②  1pc	③  1pc	④  2pcs	⑤  2pcs
⑥  1pc	⑦  1pc	⑧  1pc	⑨  1pc	⑩  1pc
⑪  1pc	⑫  1pc	⑬  4pcs	⑭  2pcs	⑮  2pcs
⑯  2pcs	⑰  1pc	⑱  1pc	⑲  1pc	⑳  1pc
㉑  1pc	㉒  4pcs			

The Hardwares

(A)




φ6*35mm
14pcs

(B)



φ15*9mm
14pcs

(C)



φ8*30mm
28pcs

(D)




M3*14mm
8pcs

(E)




M4*14mm
32pcs

(F)



M4*20mm
8pcs

(G)

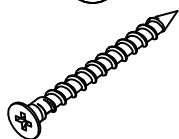

M4*40mm
24pcs

(H)




M4*8mm
4pcs

(I)



M4*8mm
1pc

(J)



2pcs

(K)



1pc

(L)



M7*40mm
12pcs

(M)




M6*25mm
16pcs

(N)



M6*45
4pcs

(O)

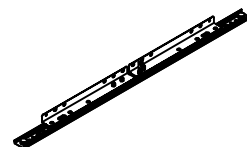


800mm
2pcs

(P)




M4
1pc

(DL)

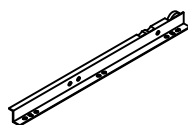


300mm
1pc

(CR)




300mm
1pc

(DR)

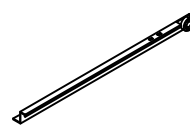

300mm
1pc

(CL)









300mm
1pc




IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product,you can also use power tools(please use power tools carefully).

Step 1

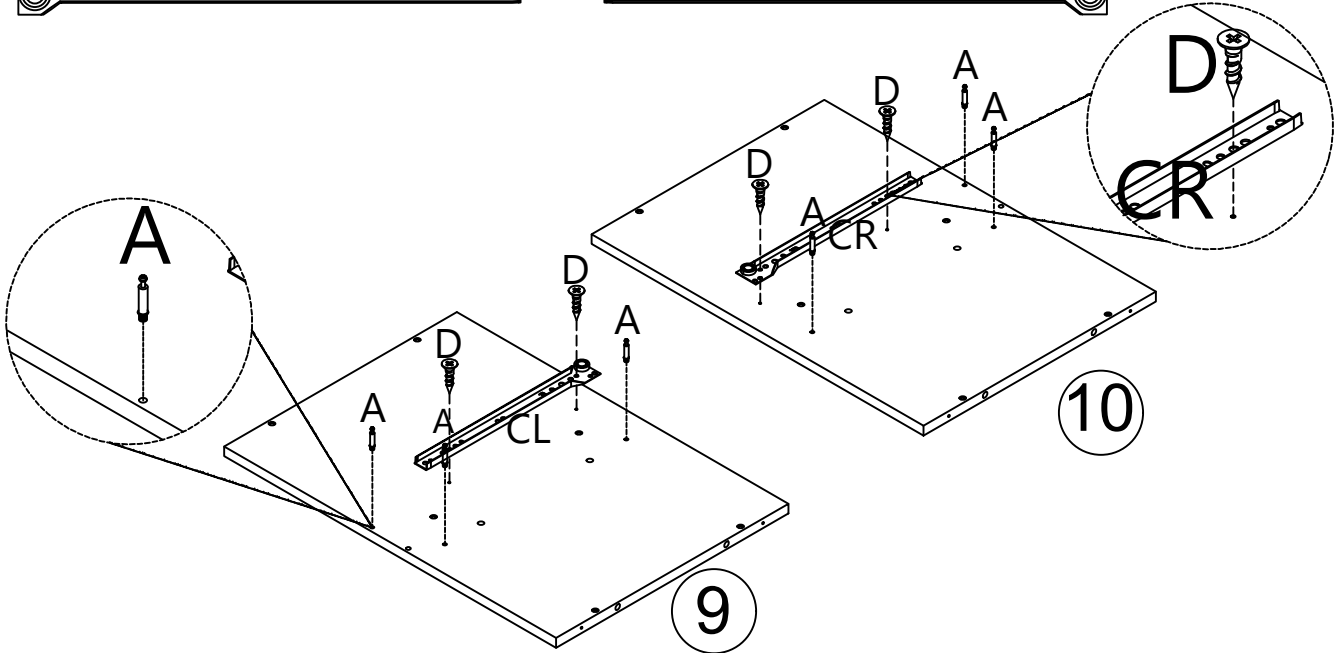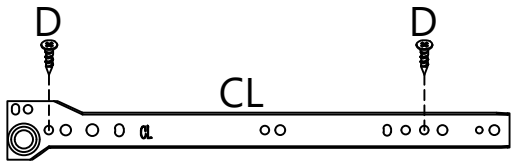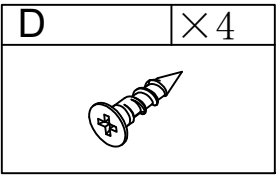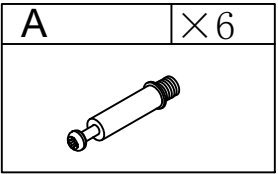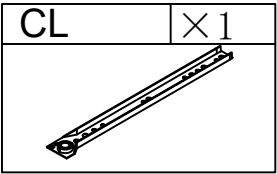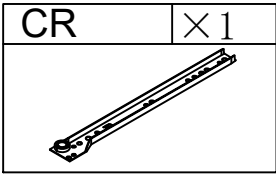


Step 2

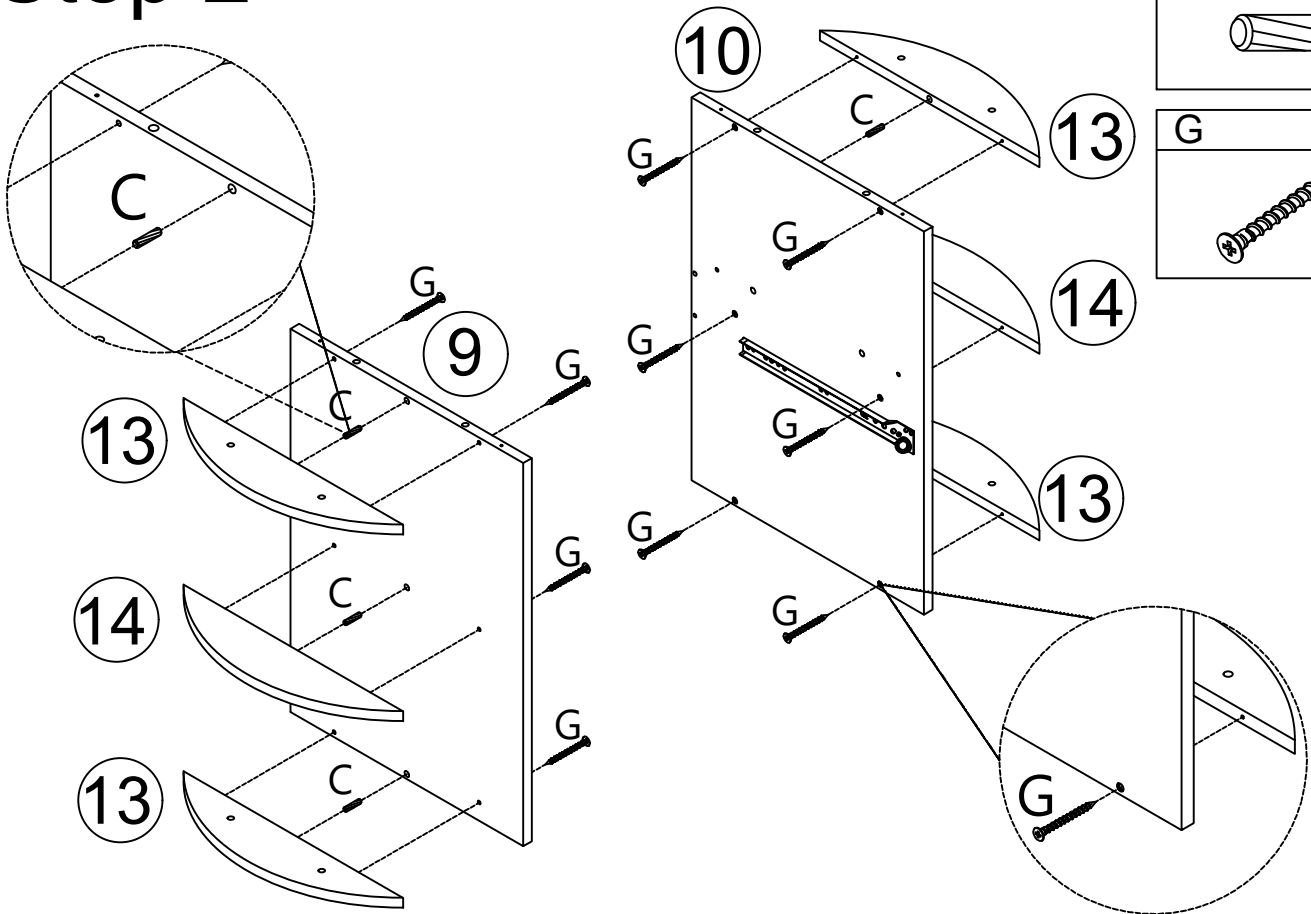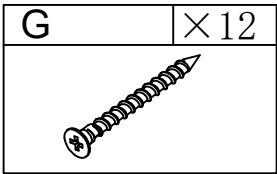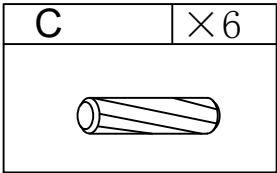

Step 3


M	×8
	

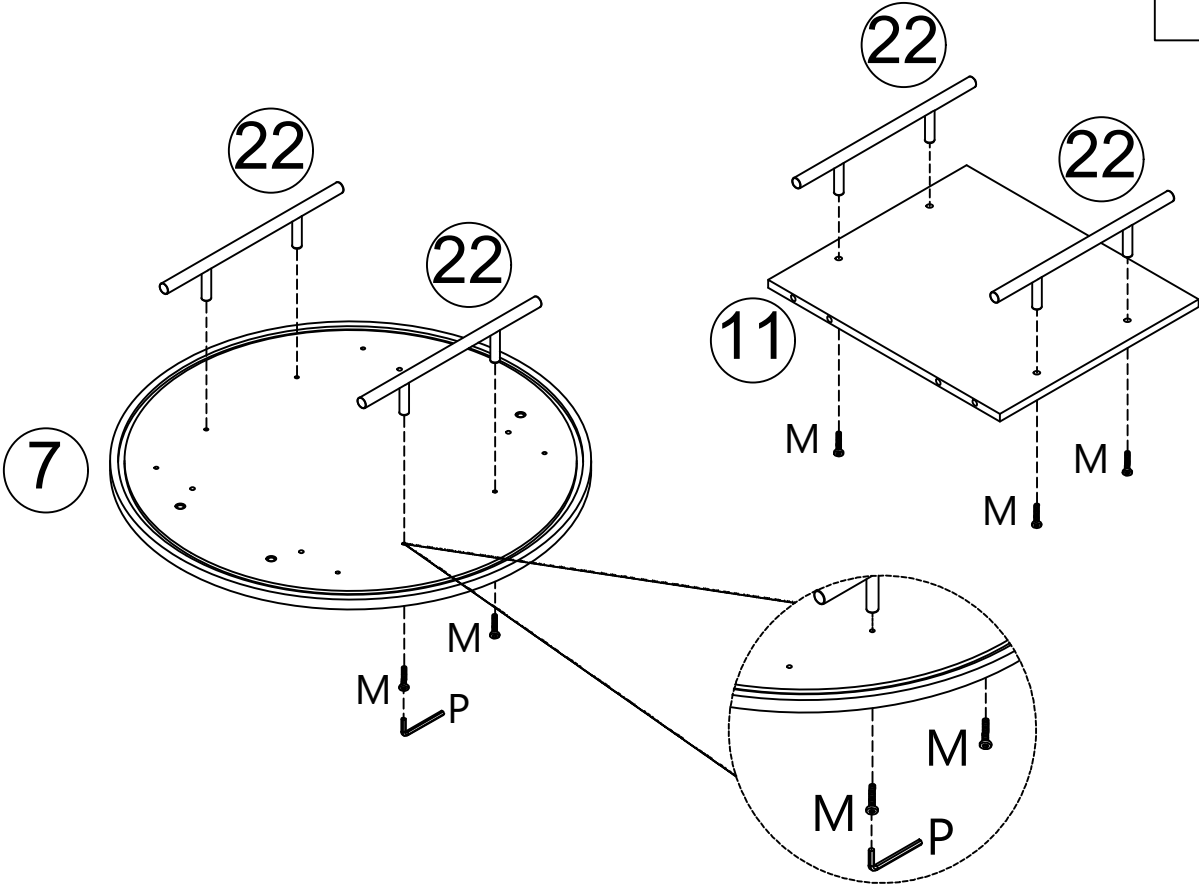

Step 4

B	×3
	


C	×3
	

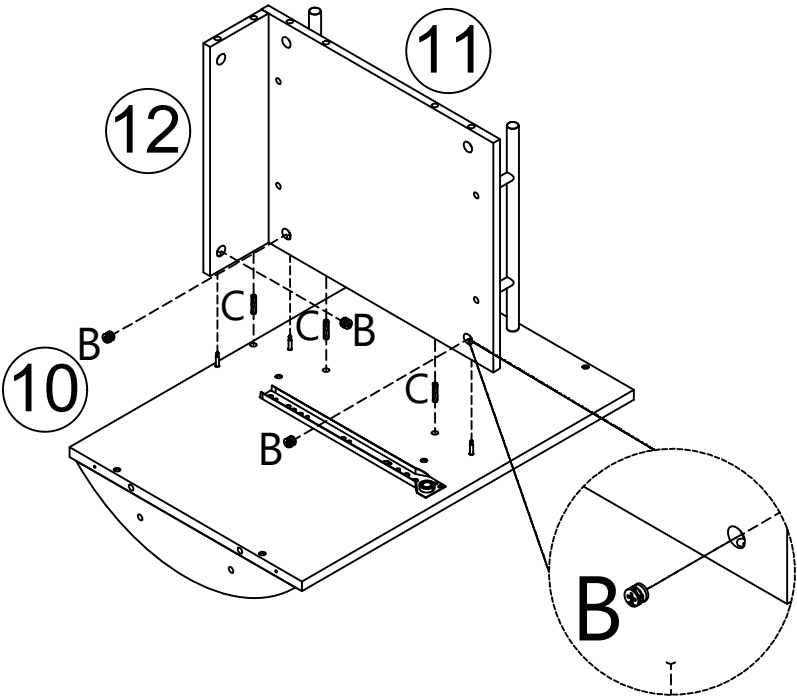

Step 5

B	×3
	


C	×3
	

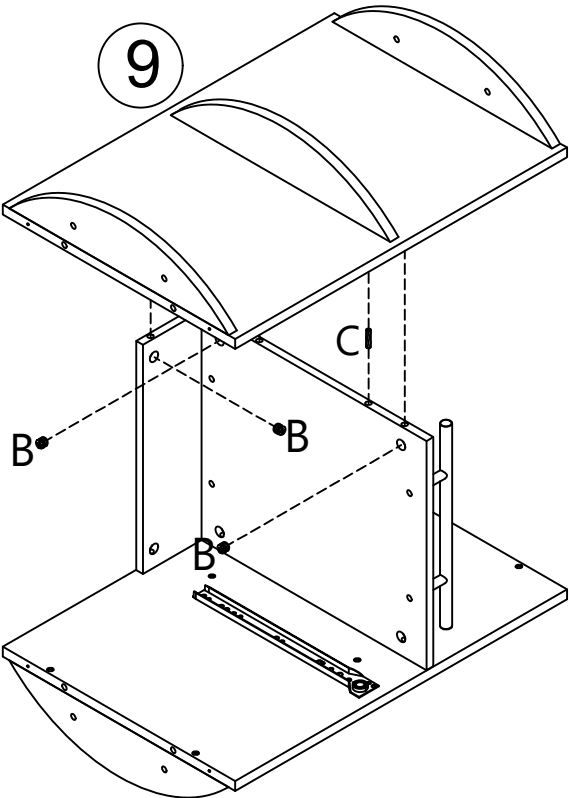


Step 6


M	×4
	

C	×4
	


G	×4
	

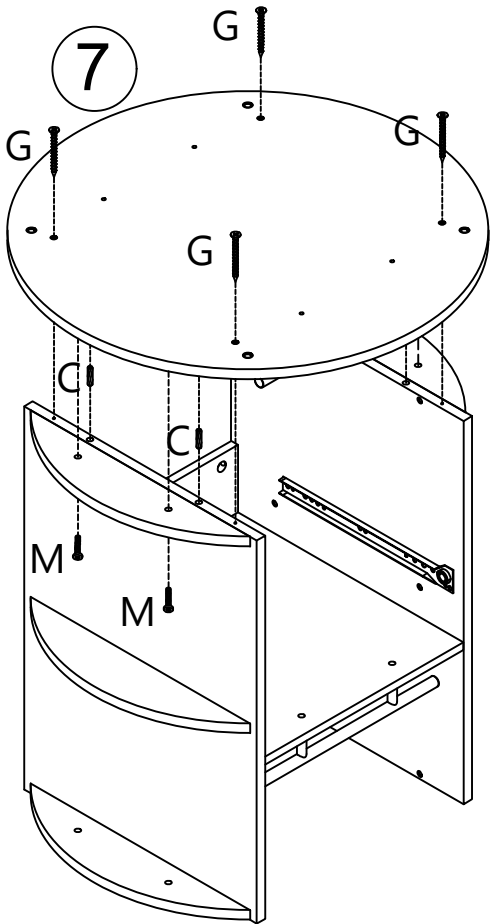

Step 7

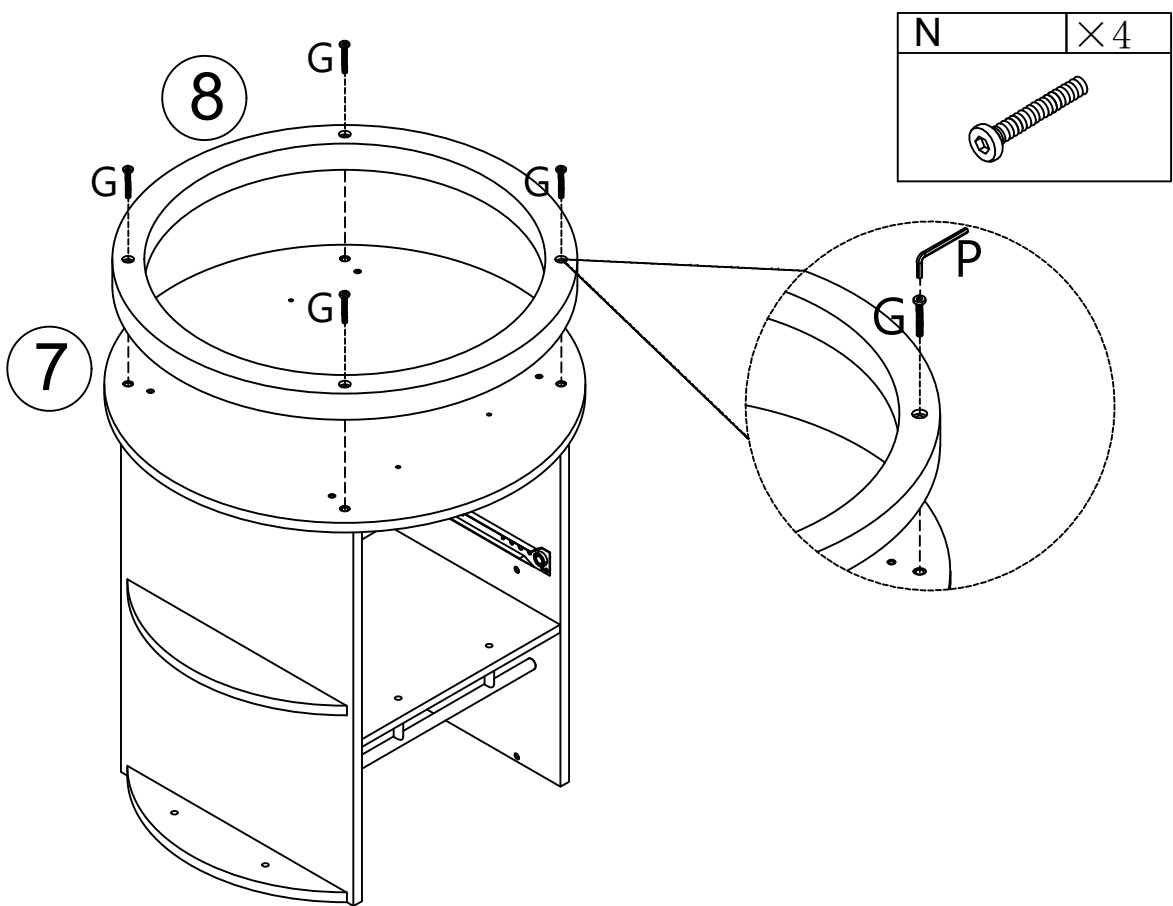


Step 8

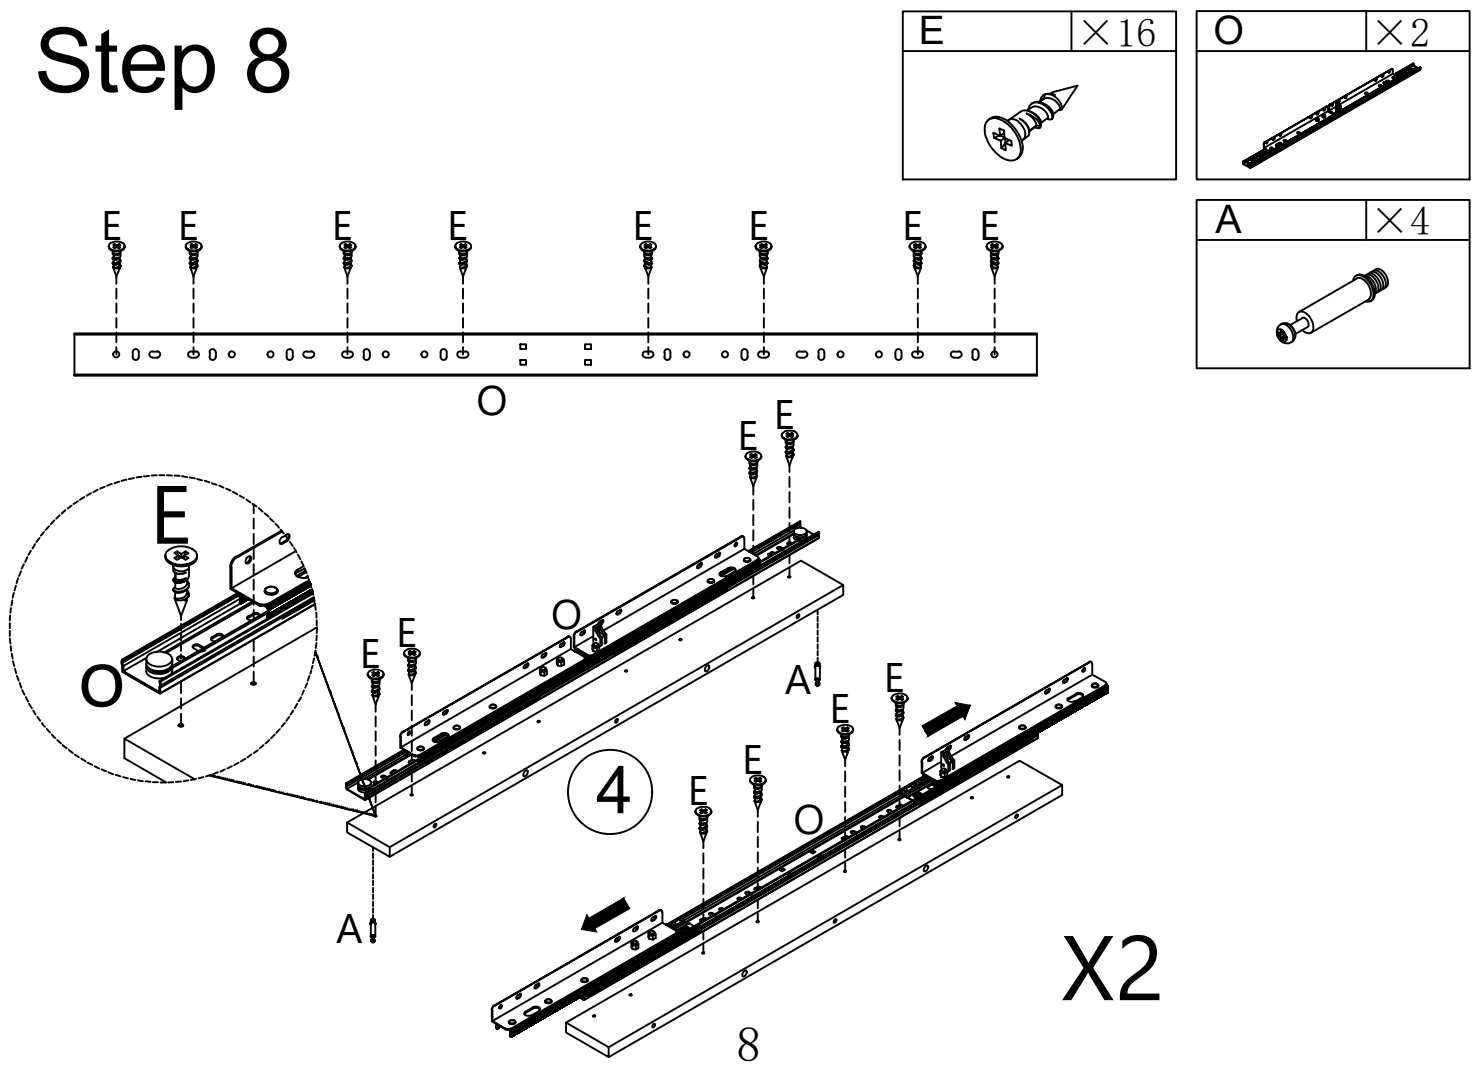

Step 9


B	× 4
	

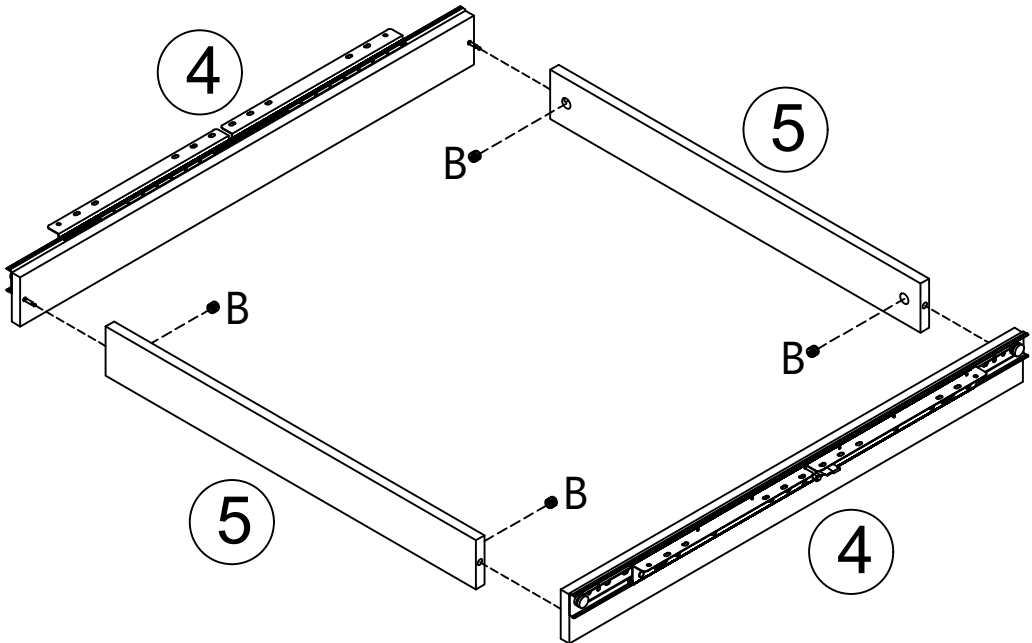


Step 10

C	× 8
	

L	× 12
	

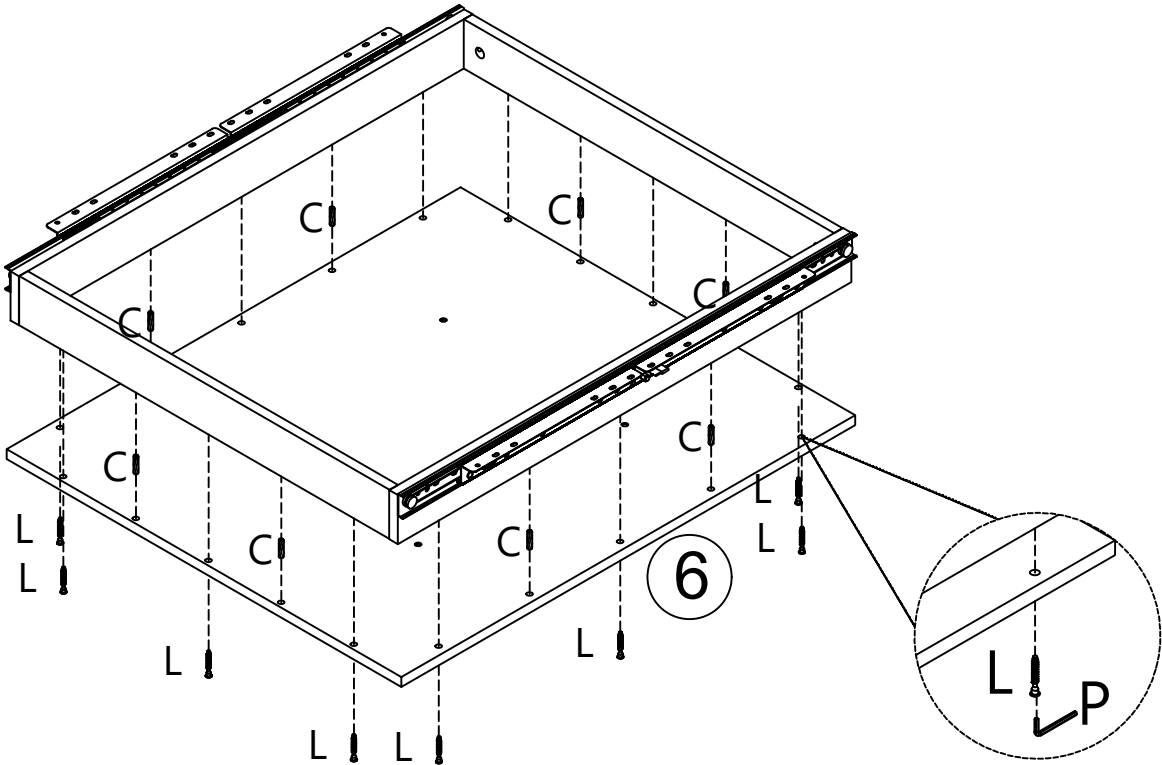


Step 11

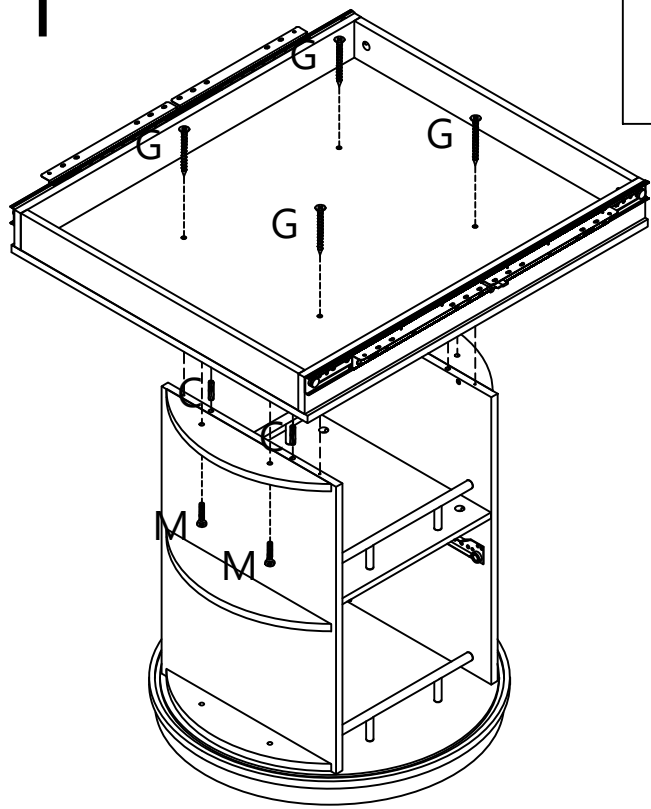



M	×4
	

C	×4
	



G	×4
	

Step 12

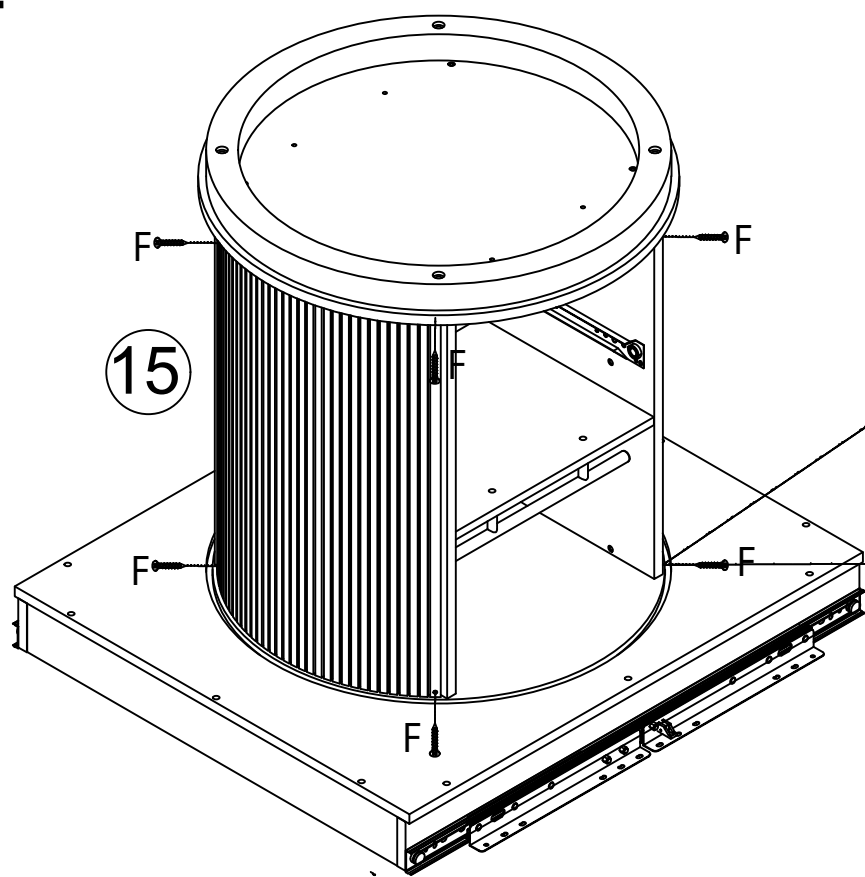


F	×8
	


Do not fold the board No. 15 and No. 16 !

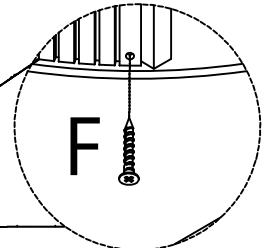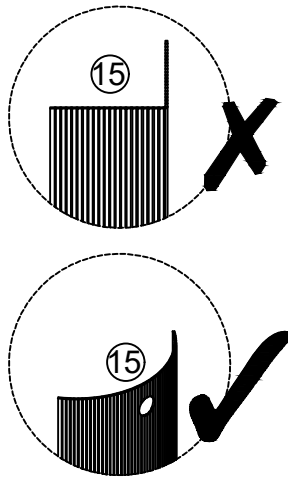


Step 13

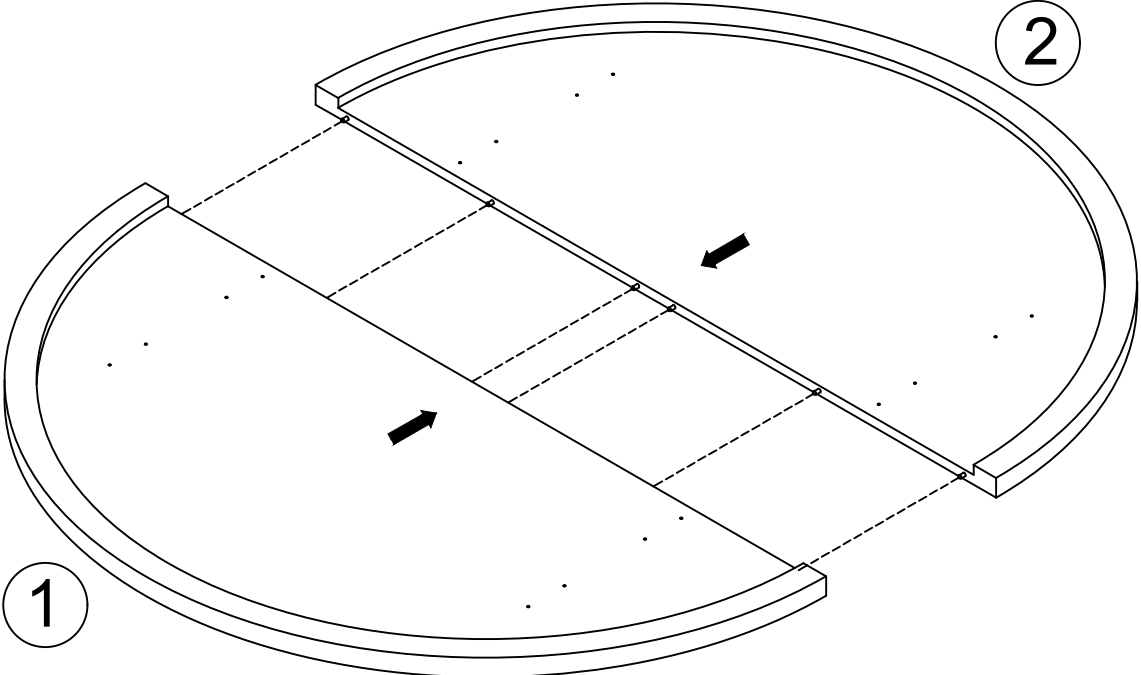


Step 14

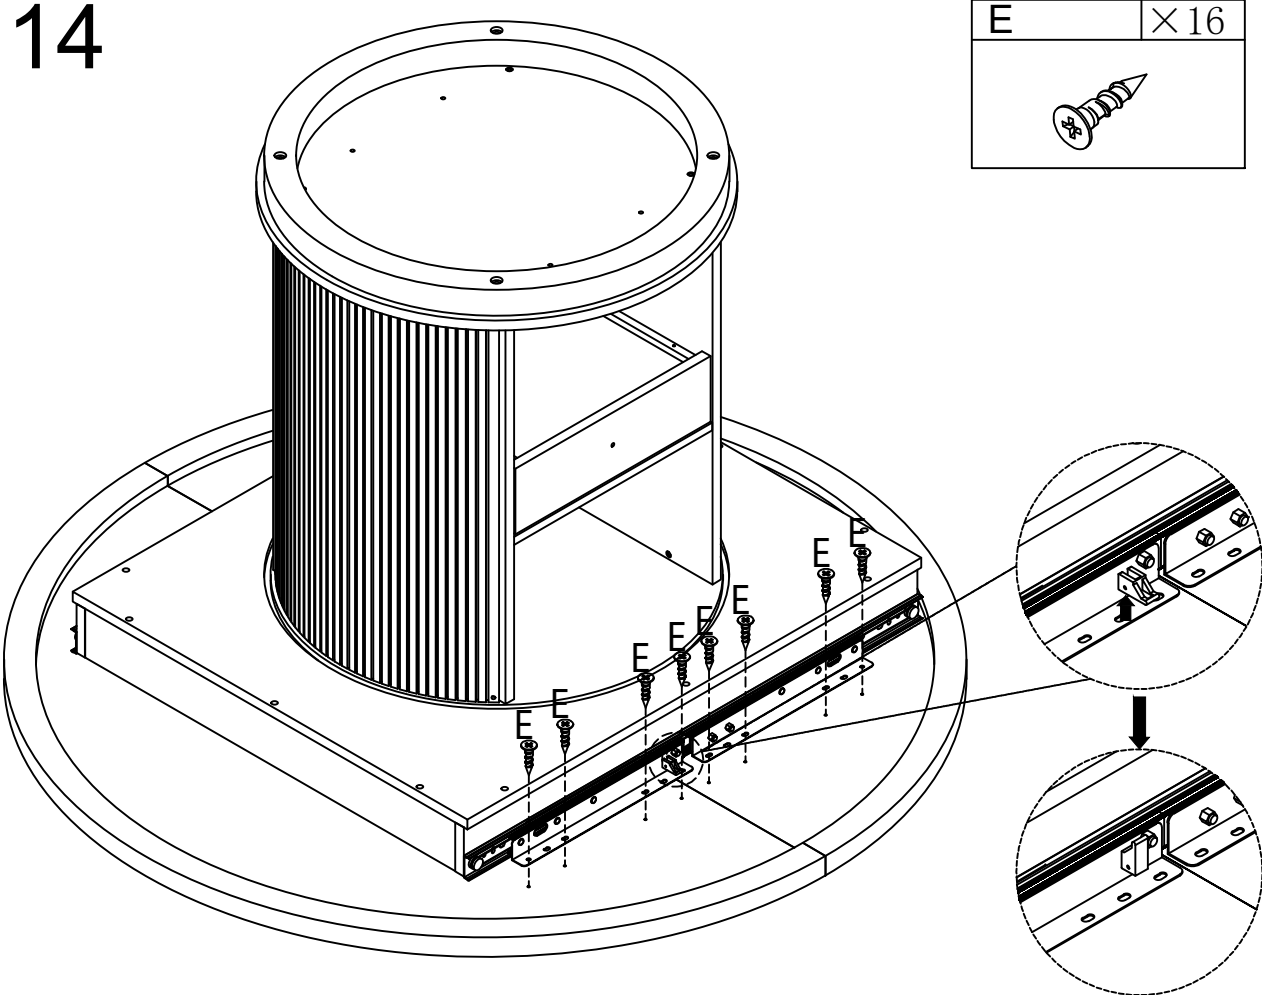


Step 15

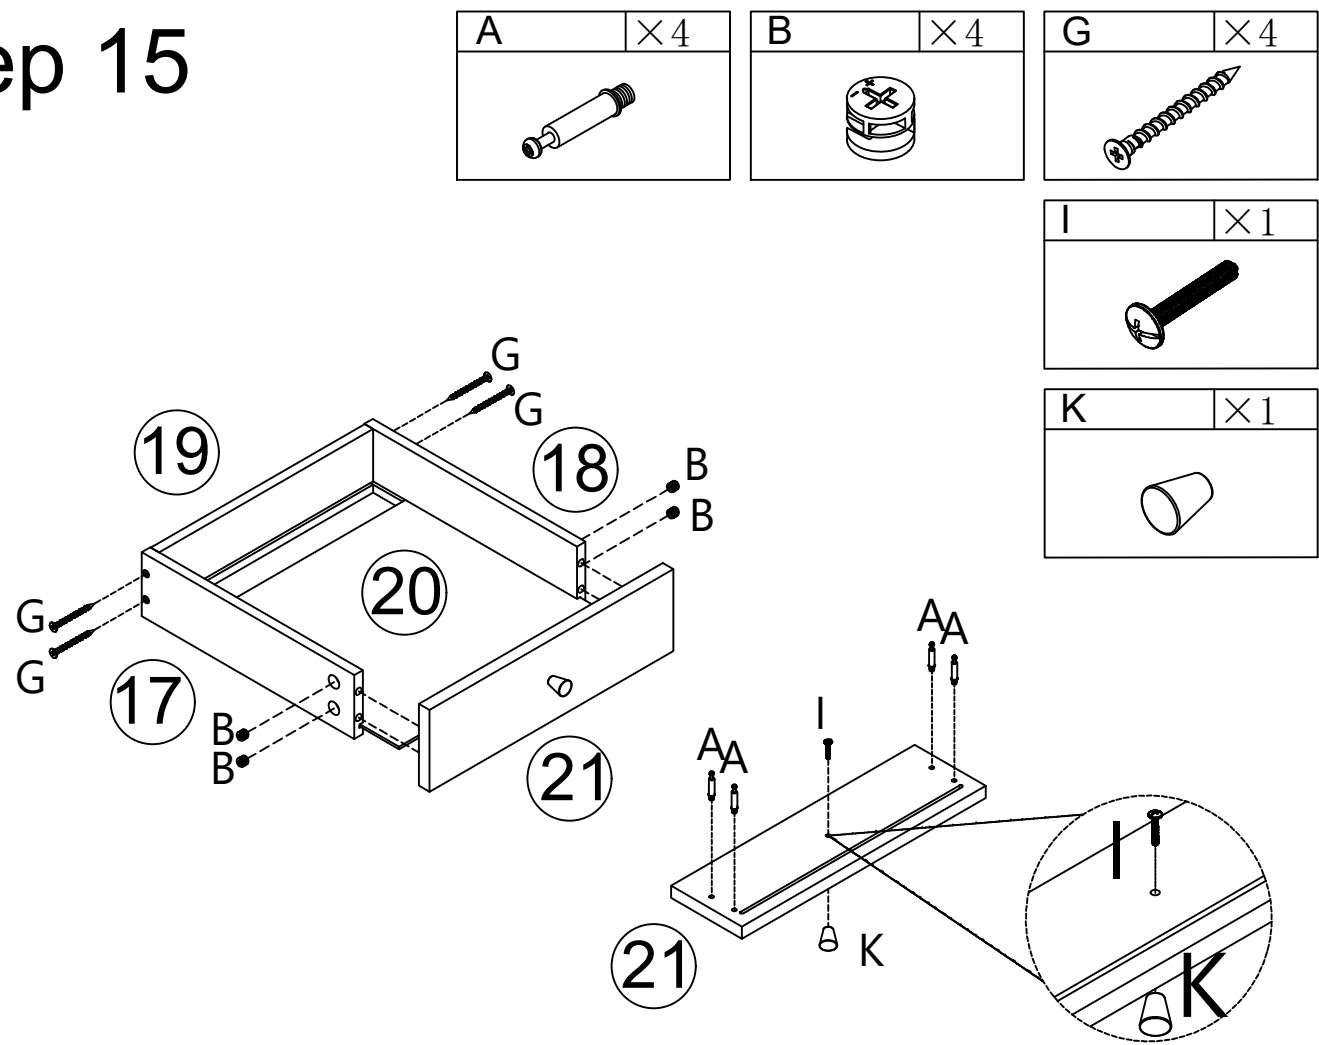

Step 16

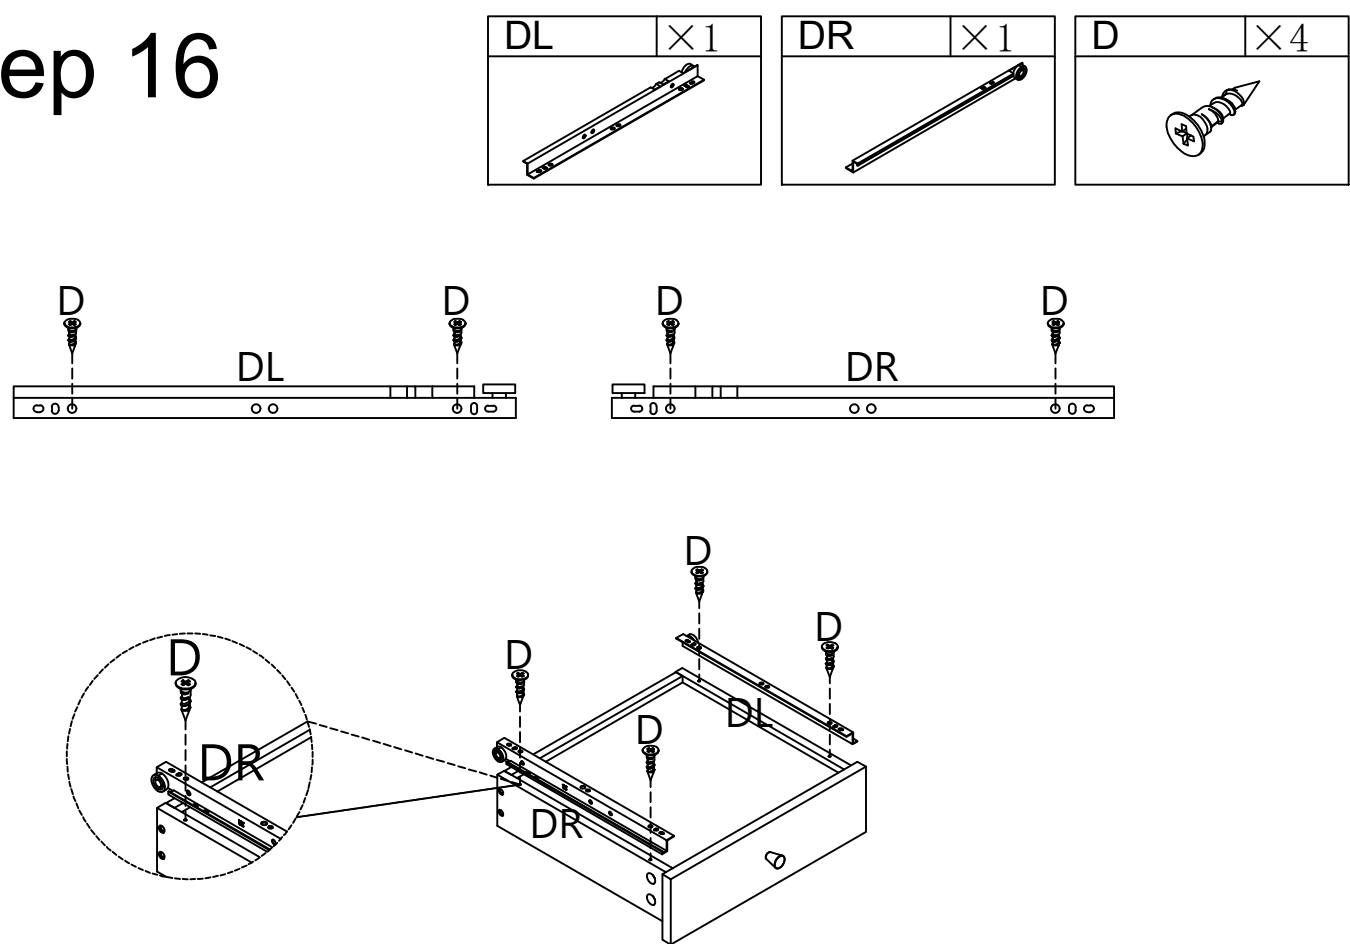


Step 17





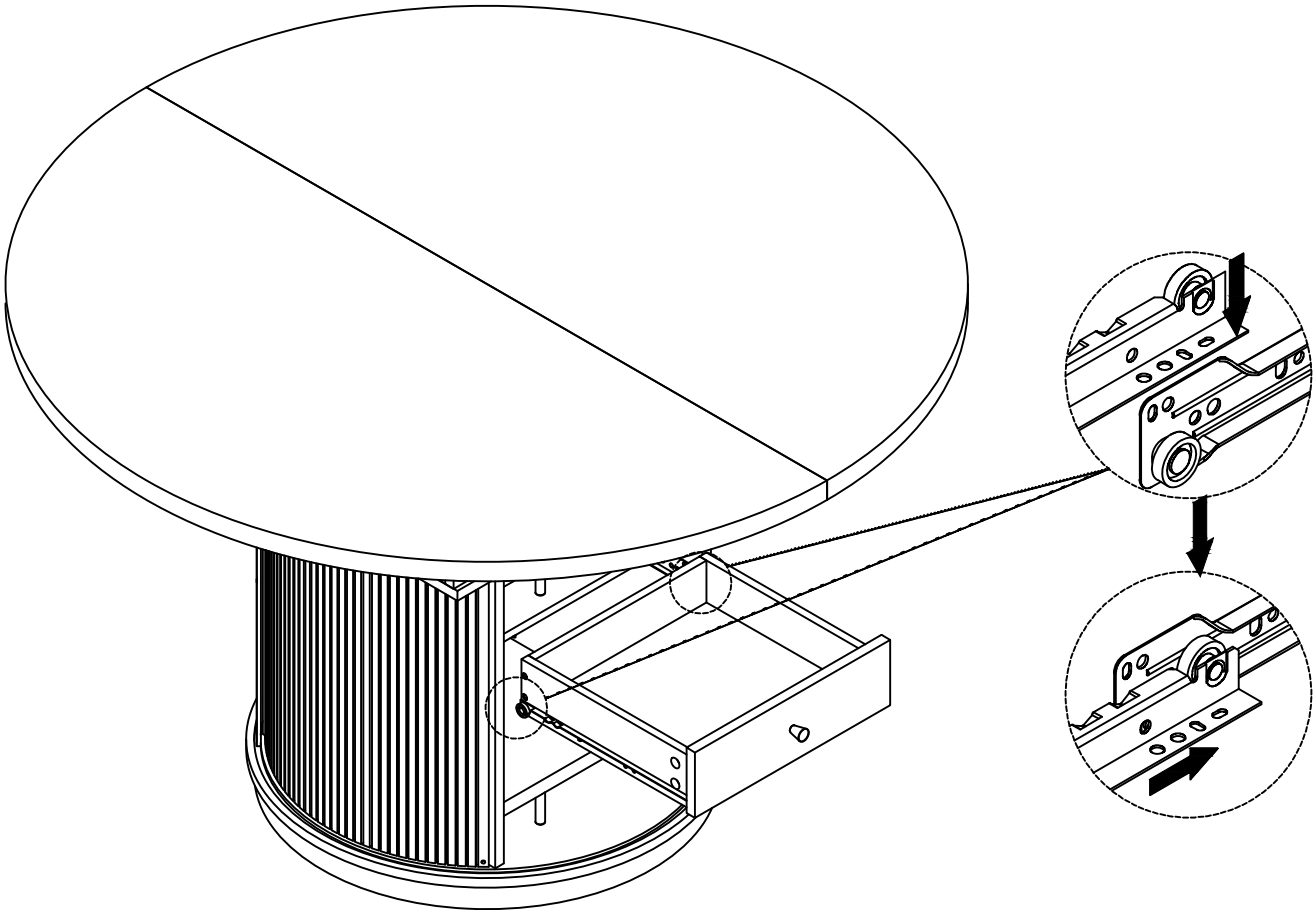


Step 18


H	× 4	J	× 2
			

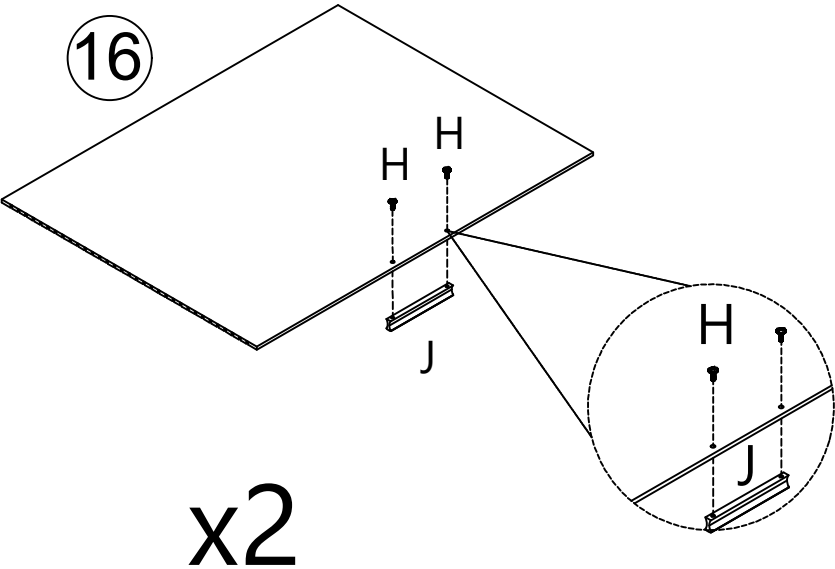

Step 19

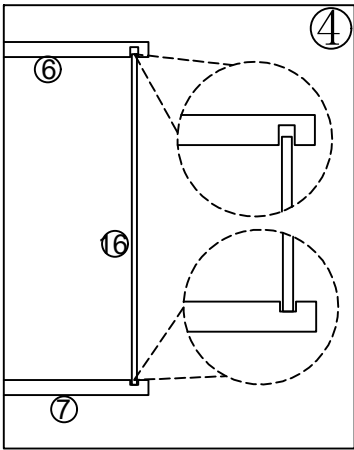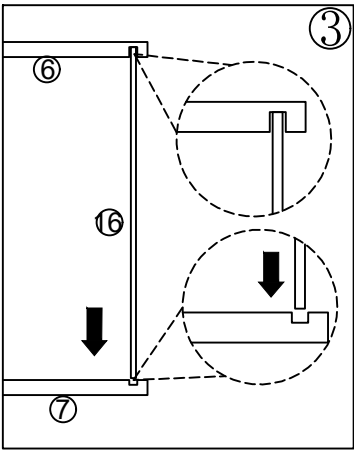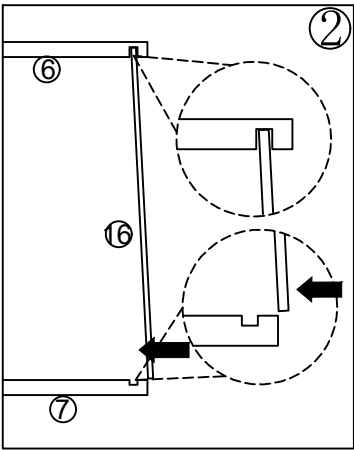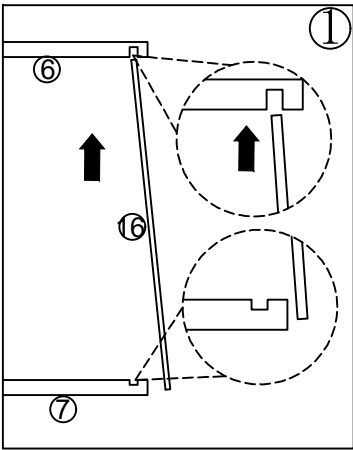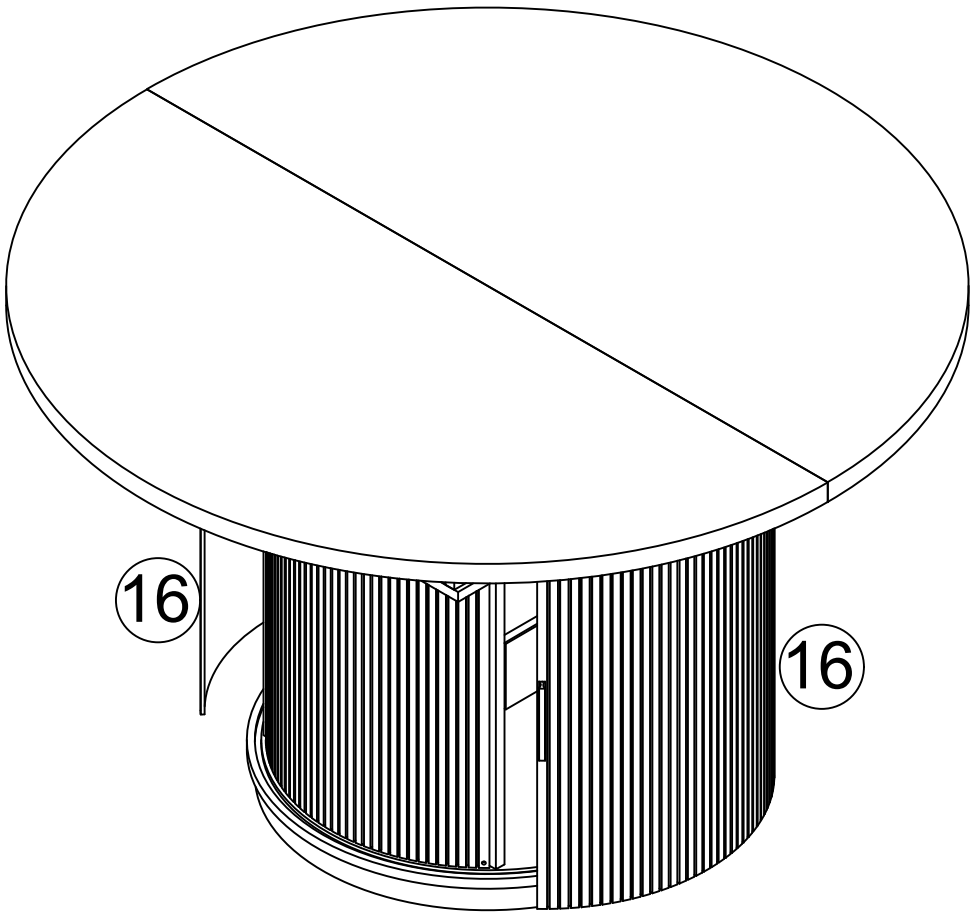

Step 20

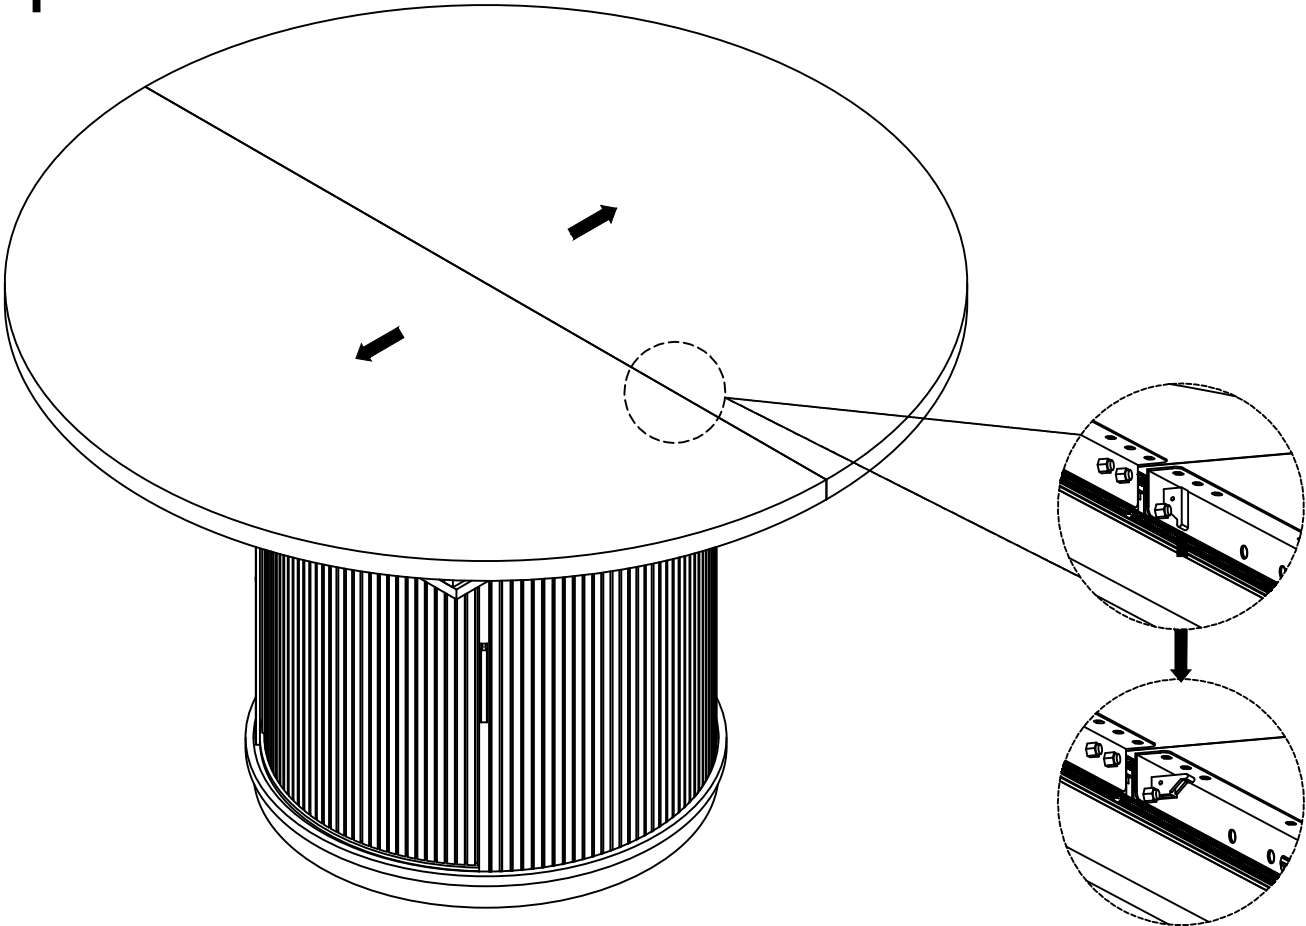

Step 21

