


ASSEMBLY INSTRUCTIONS

4, 6, 8 HOOK COAT RACK

ASSEMBLY INSTRUCTIONS

4, 6, 8 HOOK COAT RACK



(A) 1x Coatrack



(B) 2 x Wall Brackets Located on Backside of Product





(C) 2x S10 Fischer Plugs



(D) 2x Hex Bolt S10

Prepare for Installation

- Use an 8mm drill bit (not included) for Step 2.
- Use a 16/17mm wrench (not included) for Step 4 to properly tighten Part D.
Note: the Hex Bolt head diameter is 10mm.
- Coatrack must be mounted directly into a concrete wall or stud.

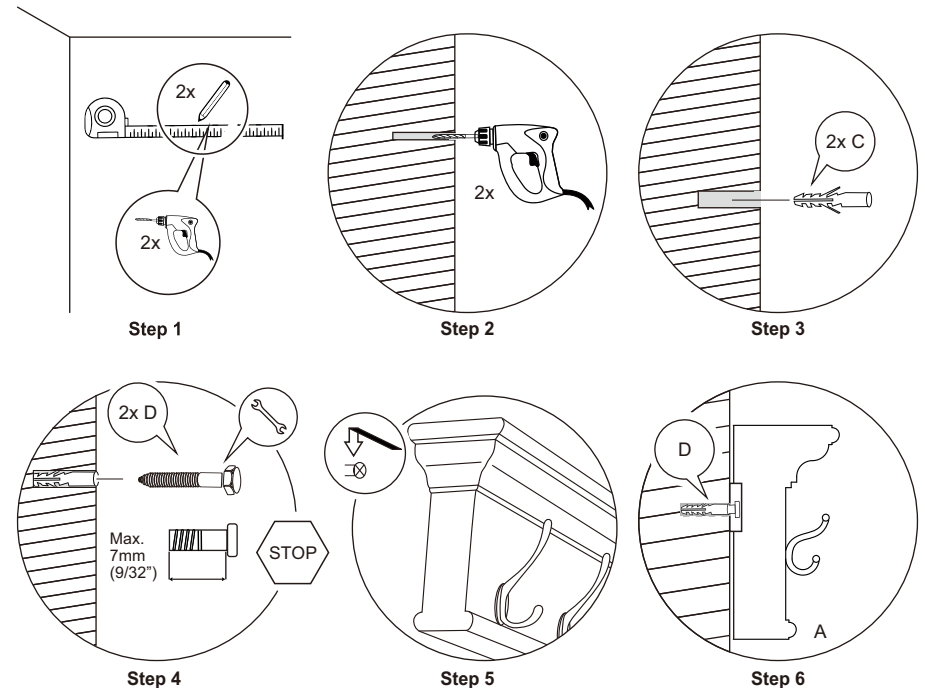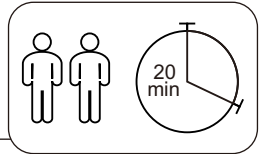

WARNING

Always use the proper tools during assembly and follow the steps in order—DO NOT skip any steps. Carefully check all packing materials for assembly hardware. If any parts are missing, contact the retailer from which you purchased the product to obtain replacements. **DO NOT USE SUBSTITUTE PARTS.** When assembling, tighten screws by hand initially. Once all screws are in place, use the provided tool for final tightening. Periodically check that all hardware (bolts, screws, etc.) is secure. **DO NOT STAND ON THE PRODUCT DURING ASSEMBLY.** If the instructions indicate that assembly requires two or more people, **DO NOT ATTEMPT TO ASSEMBLE IT ALONE**, as this poses a risk of injury.