

Buffets & Sideboards
















Installation Instructions

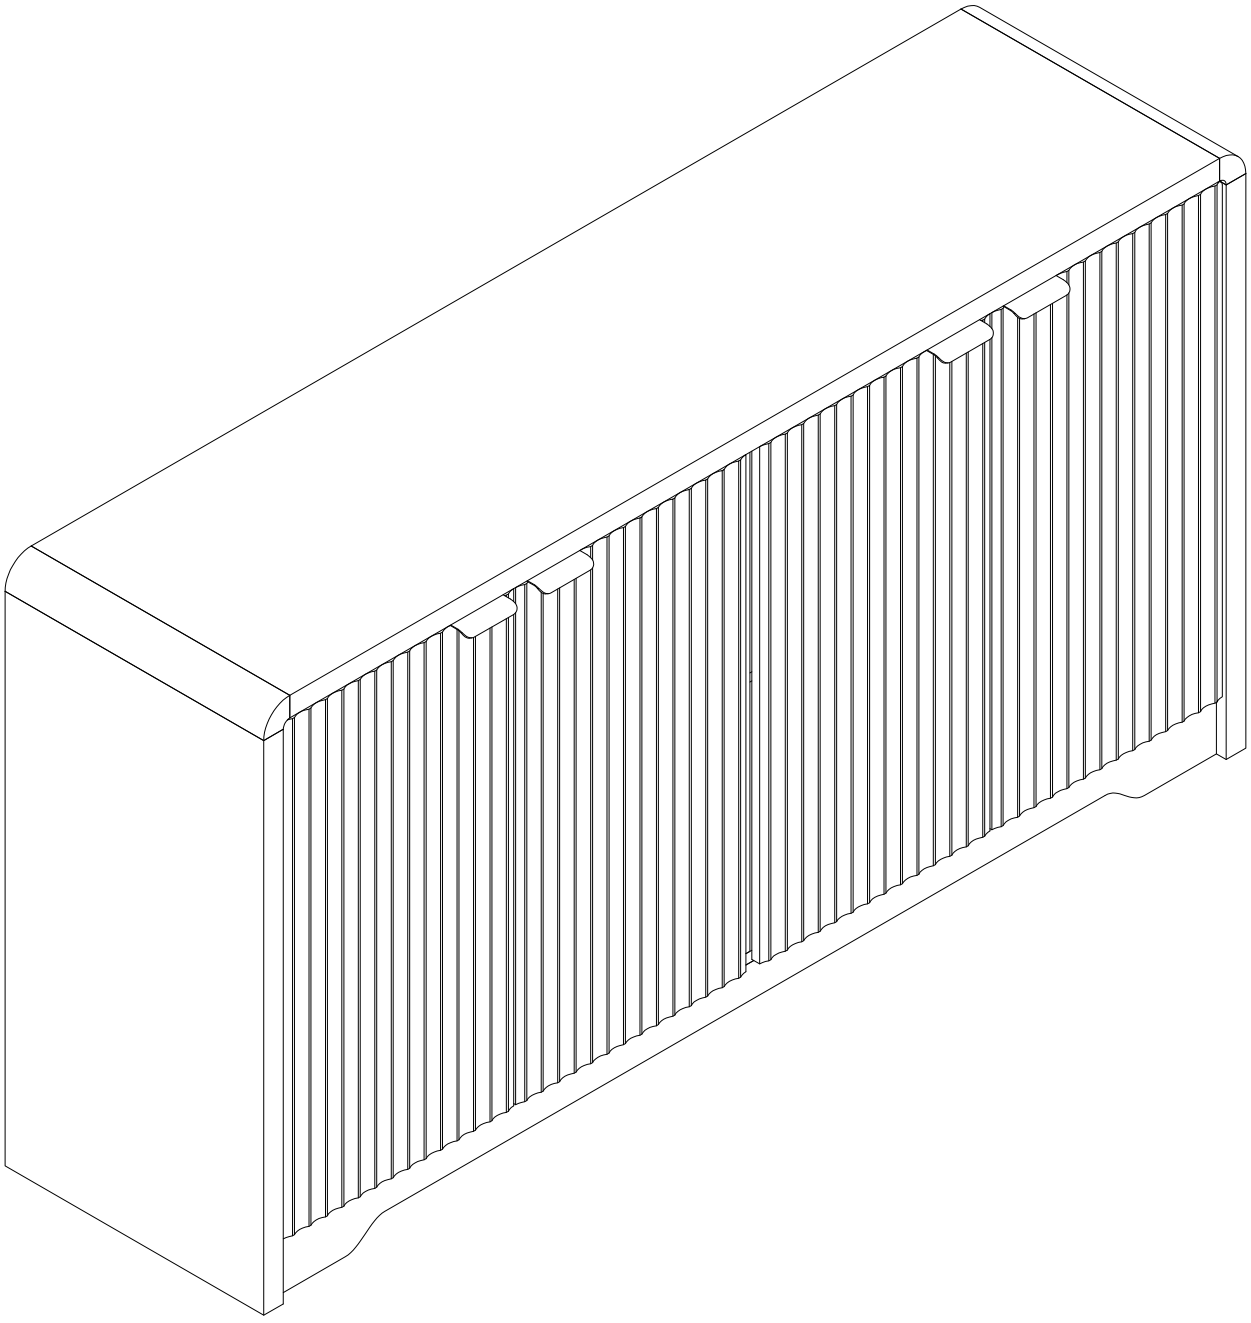


Disassemble Diagram

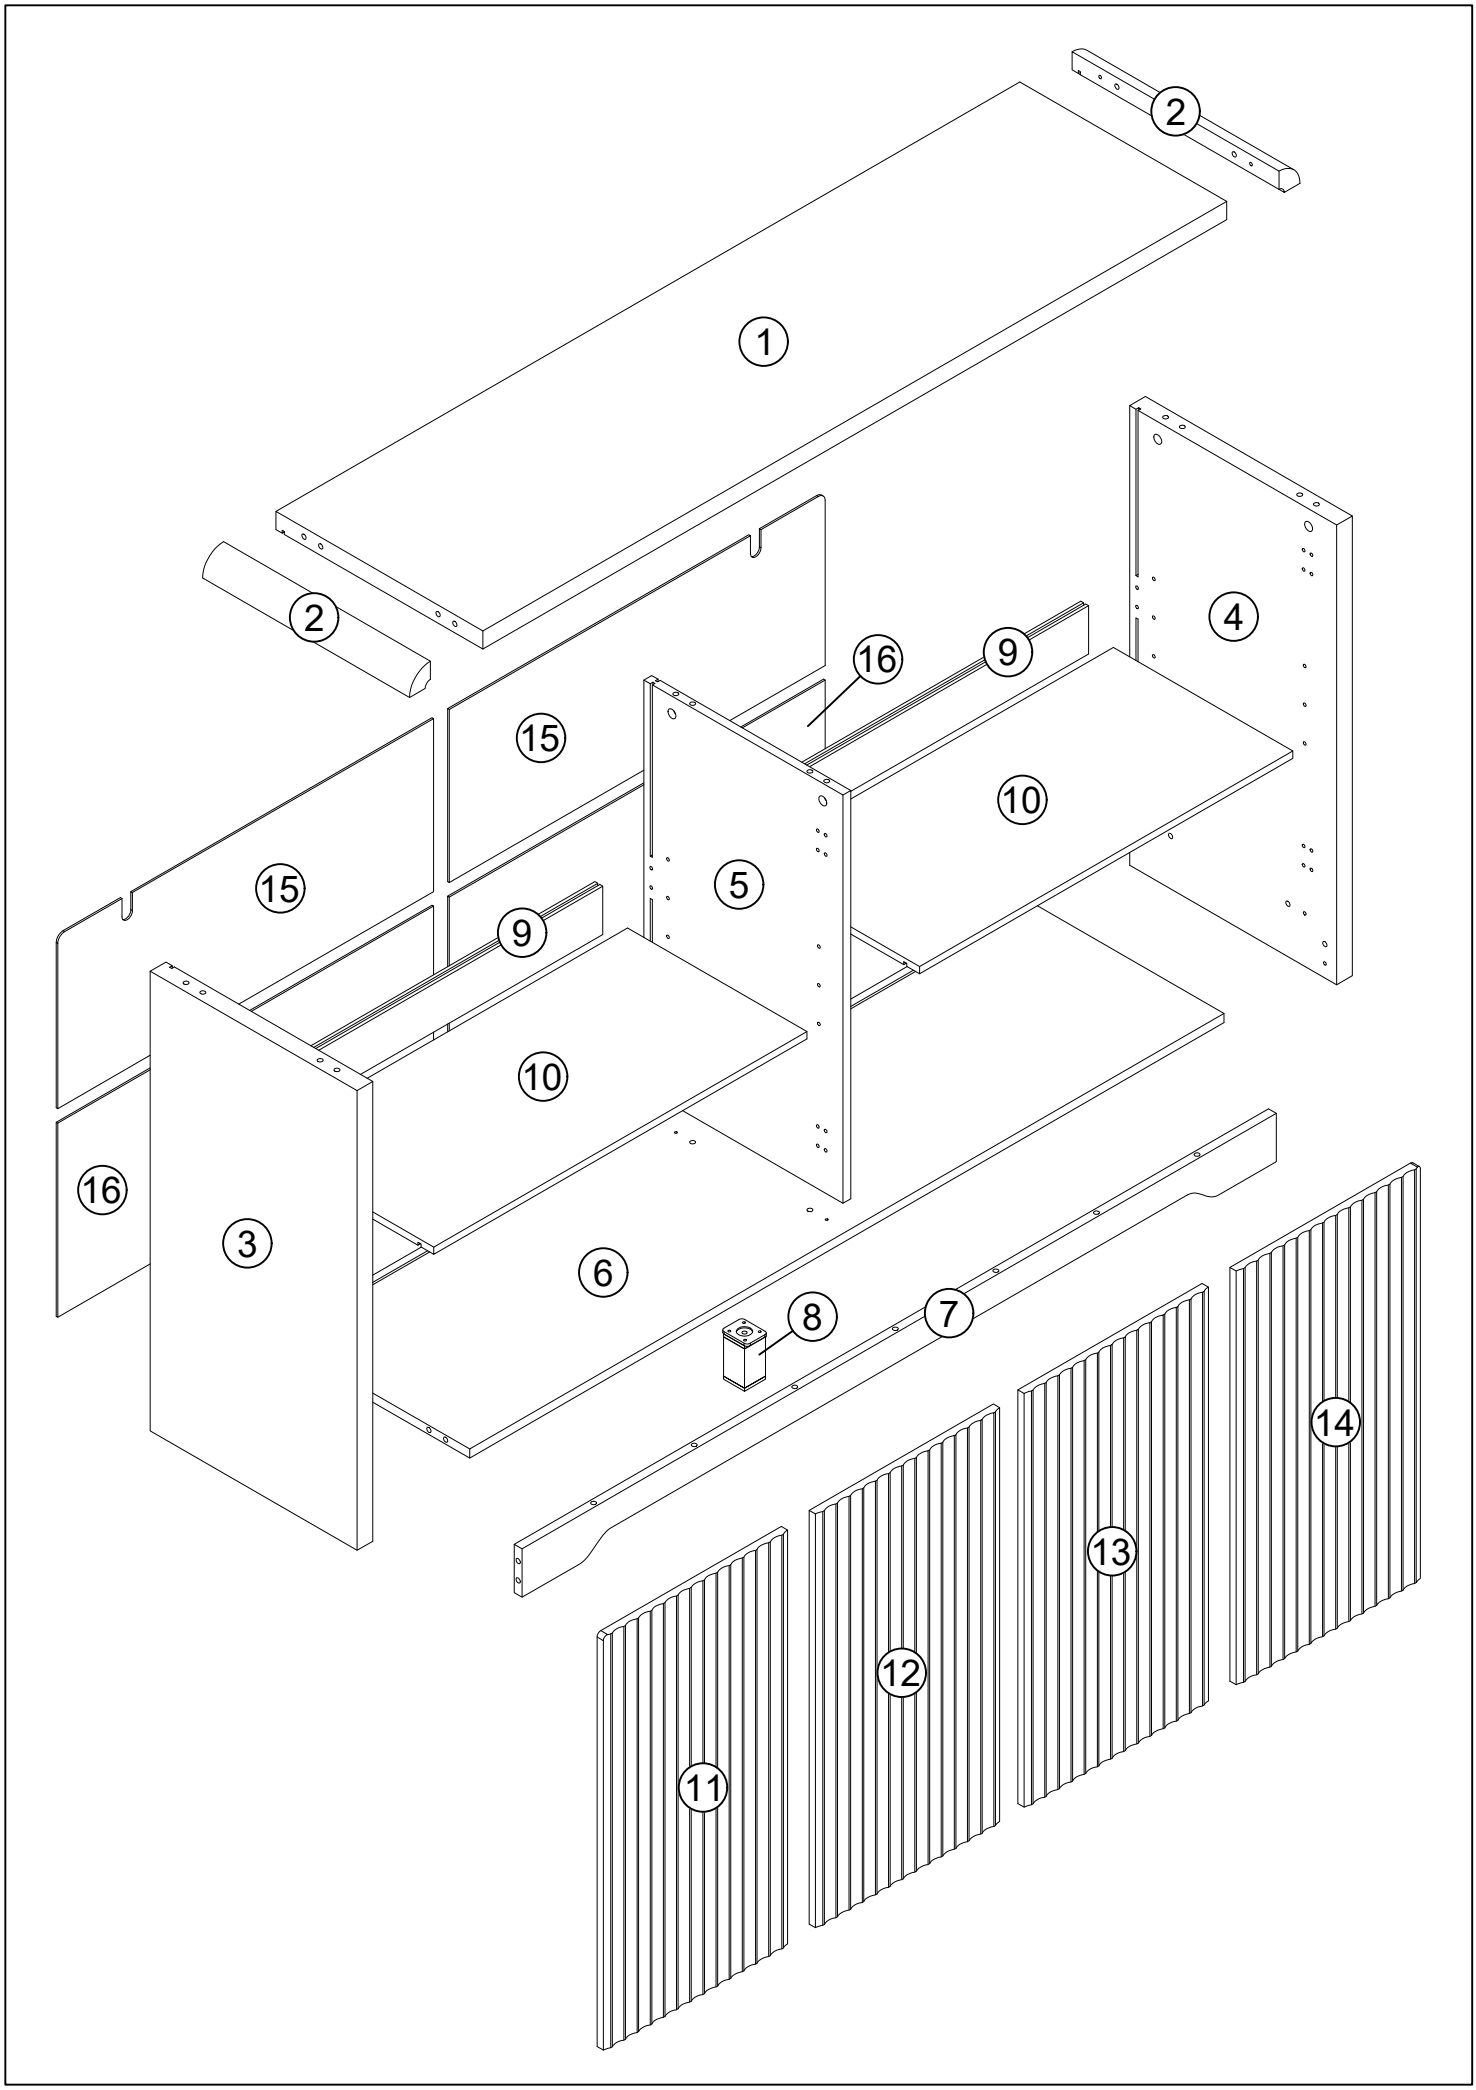


Components Part List

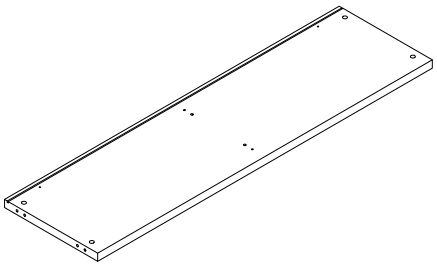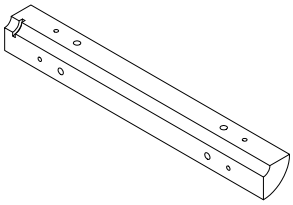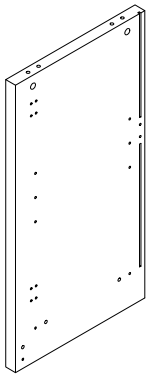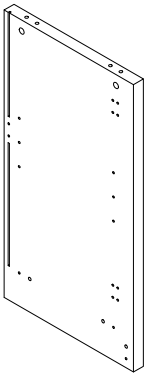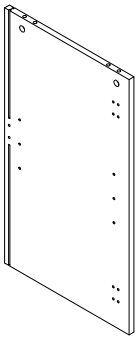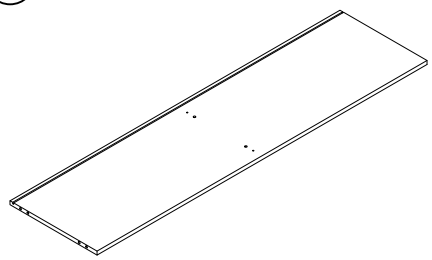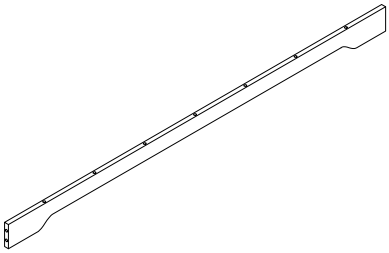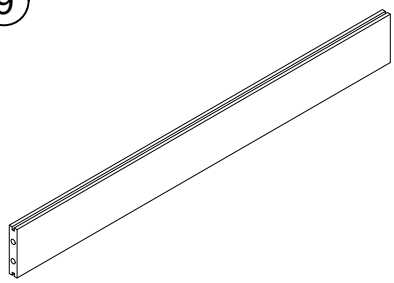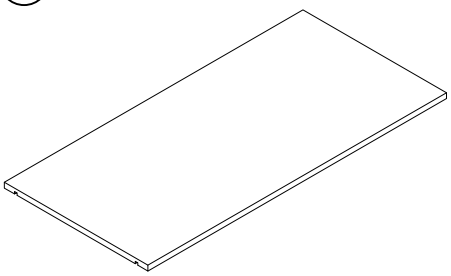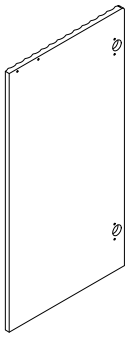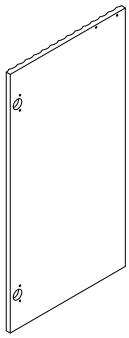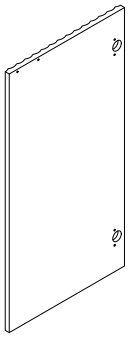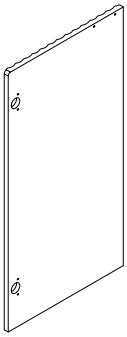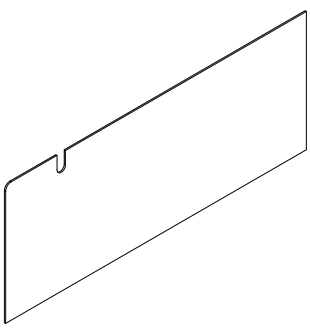①  x1	②  x2	③  x1
④  x1	⑤  x1	⑥  x1
⑦  x1	⑧  x1	⑨  x2
⑩  x2	⑪  x1	⑫  x1
⑬  x1	⑭  x1	⑮  x2

Components Part List

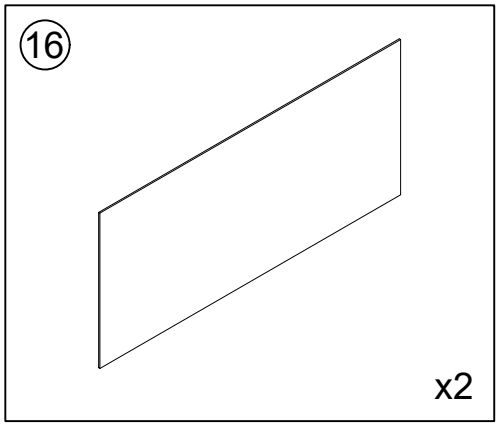



Installation Recommendations


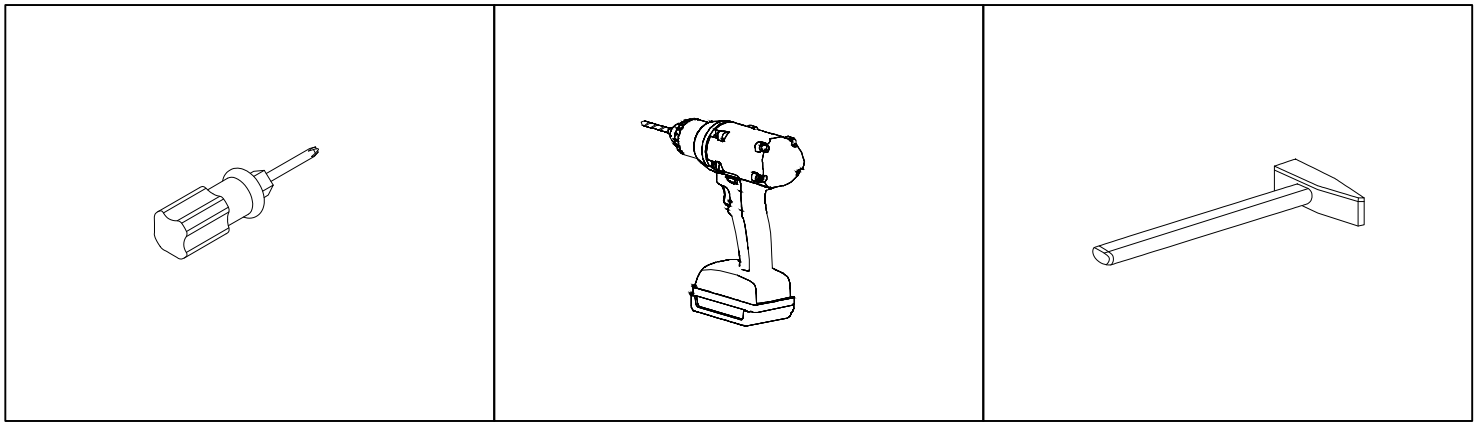




Note:


1.Recommend using tools such as a screwdriver, electric drill, and small hammer for the installation.
2.Recommend that two people collaborate to complete the installation.



Hardware Part List

A	x28+2	B	x28+2	C	x21+2	D	x4
							
M6x35mm		M15x10mm		M8x30mm			

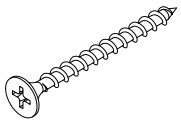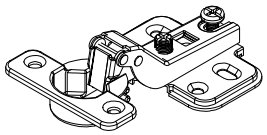
E	x4	F	x4	G	x8	H	x4
							
M3.5x14mm		M4x40mm					

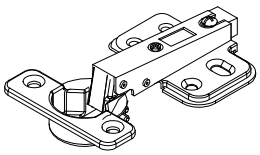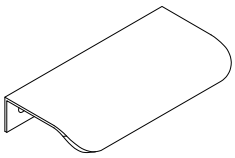
I	x4	J	x48+2	K	x4	L	x8+1
							
		M4x14mm				M3x12mm	


M	x6+1	N	x16+1	O	x16+1	P	x2
							
				M3x16mm			


Q	x2	R	x2
			

STEP 1

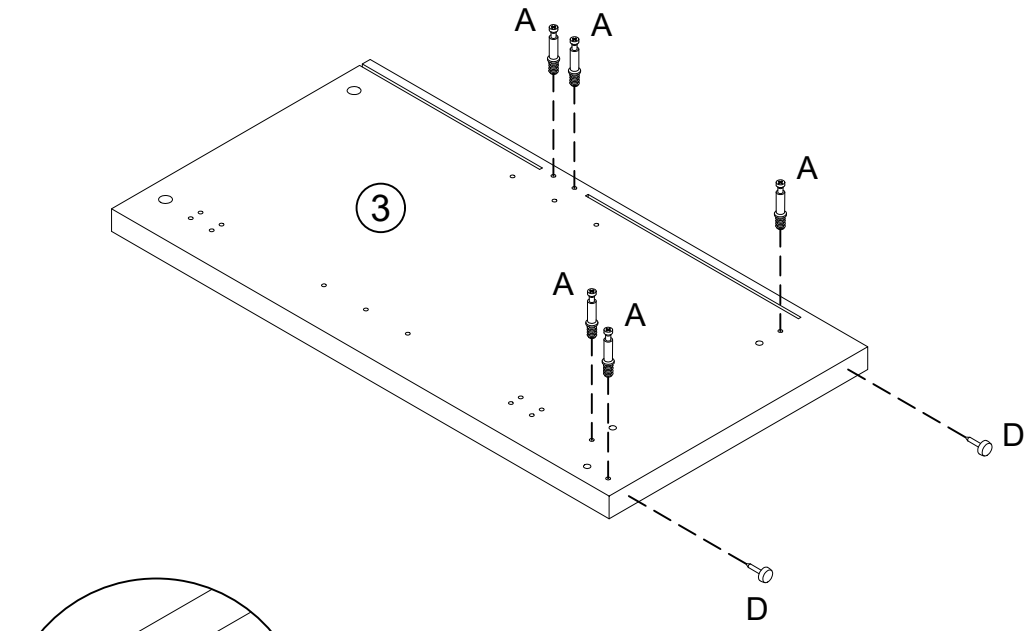

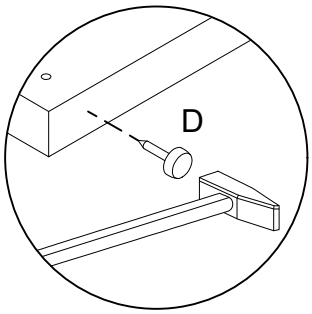


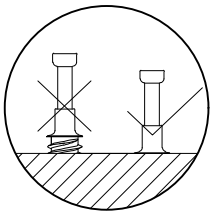

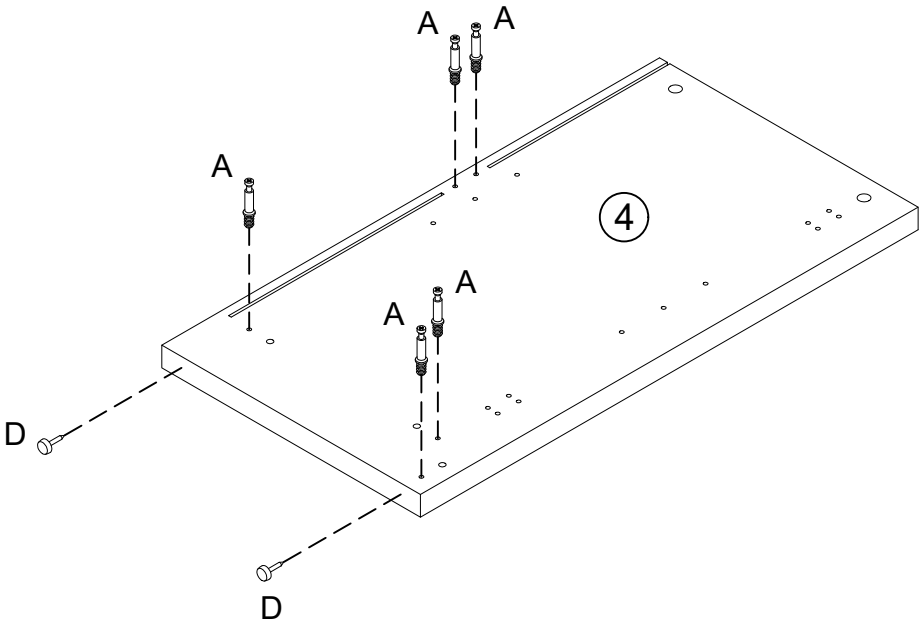

	Ax10
	Dx4


STEP 2

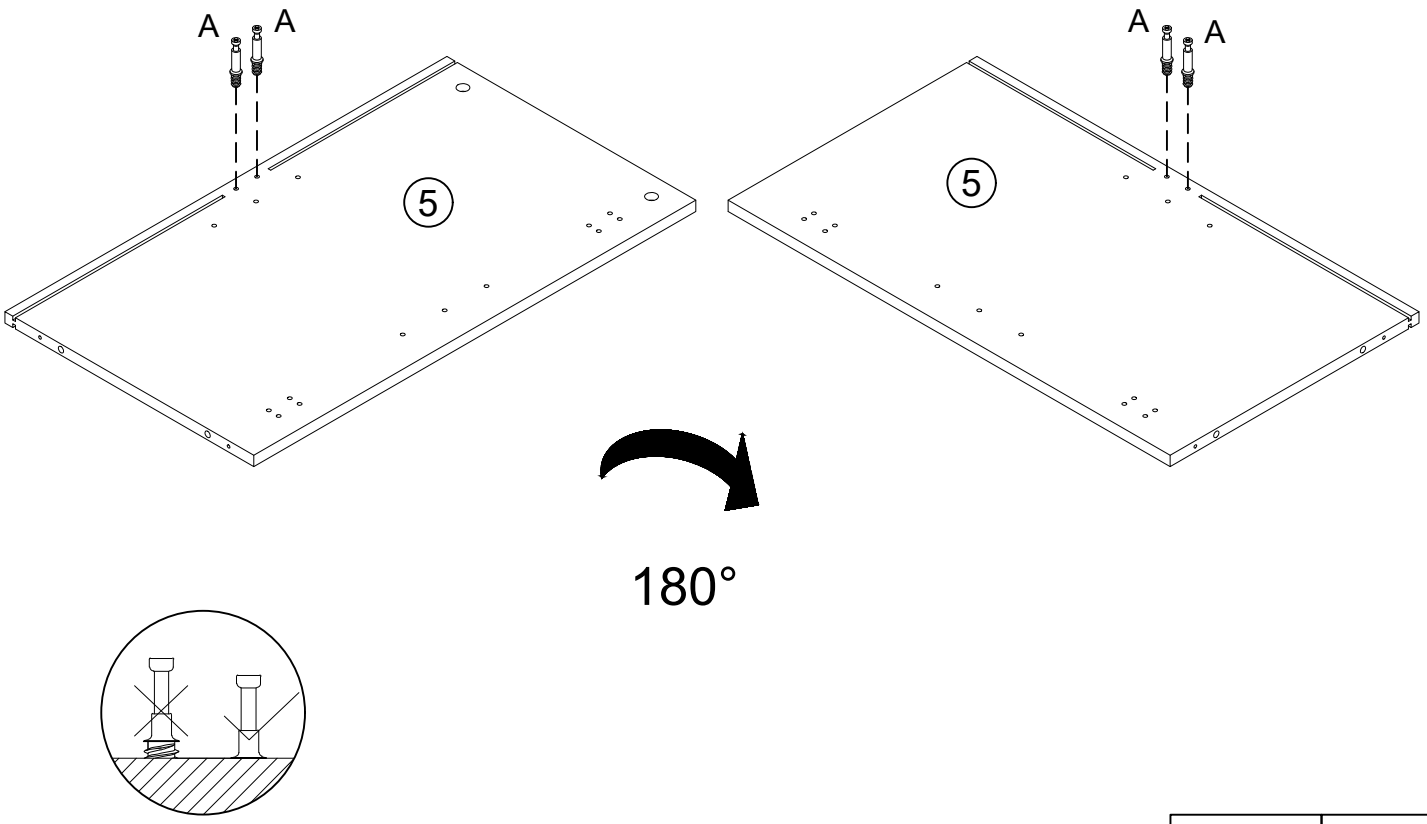



Ax4


STEP 3

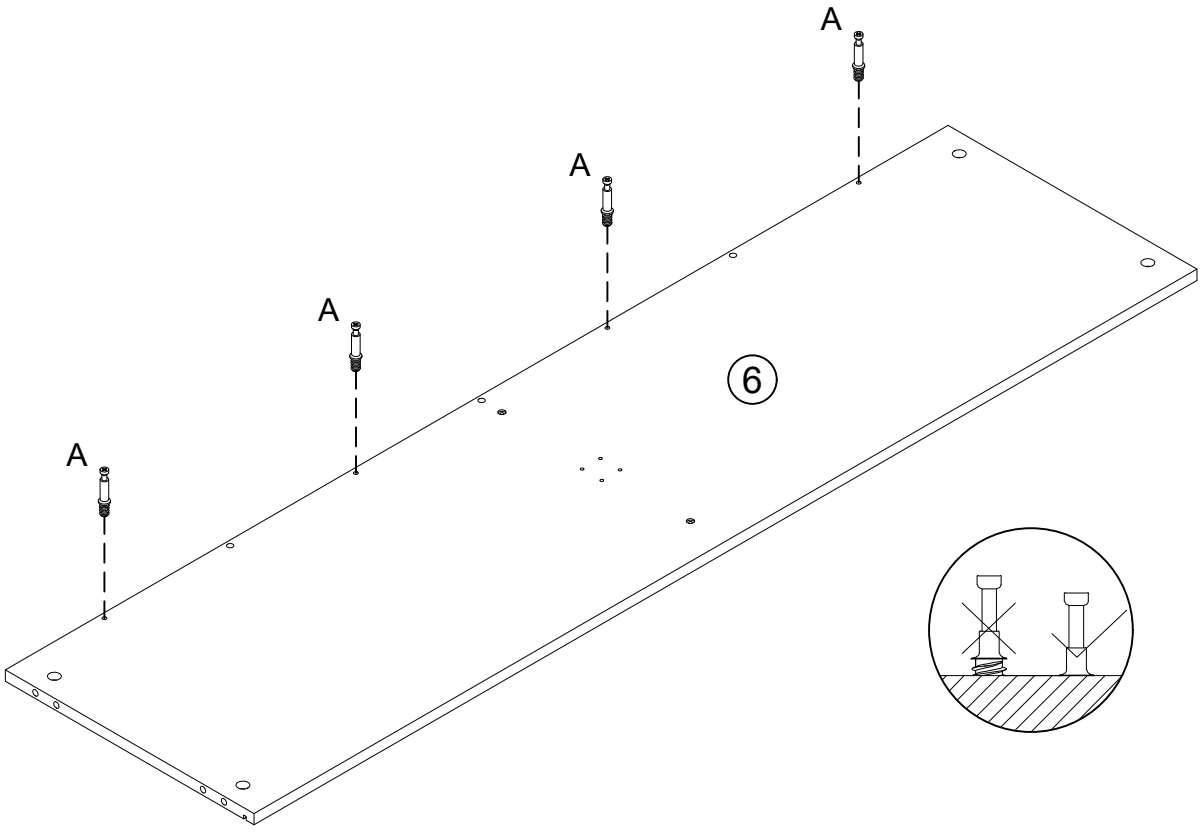




Ax4


STEP 4

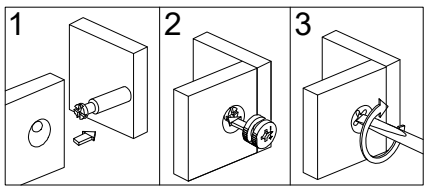

	Bx4
	Cx3


STEP 5

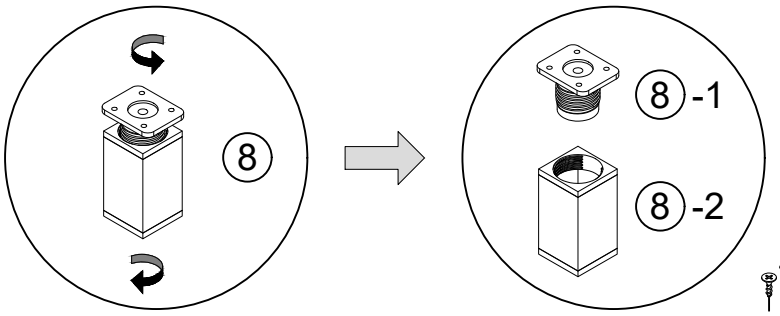

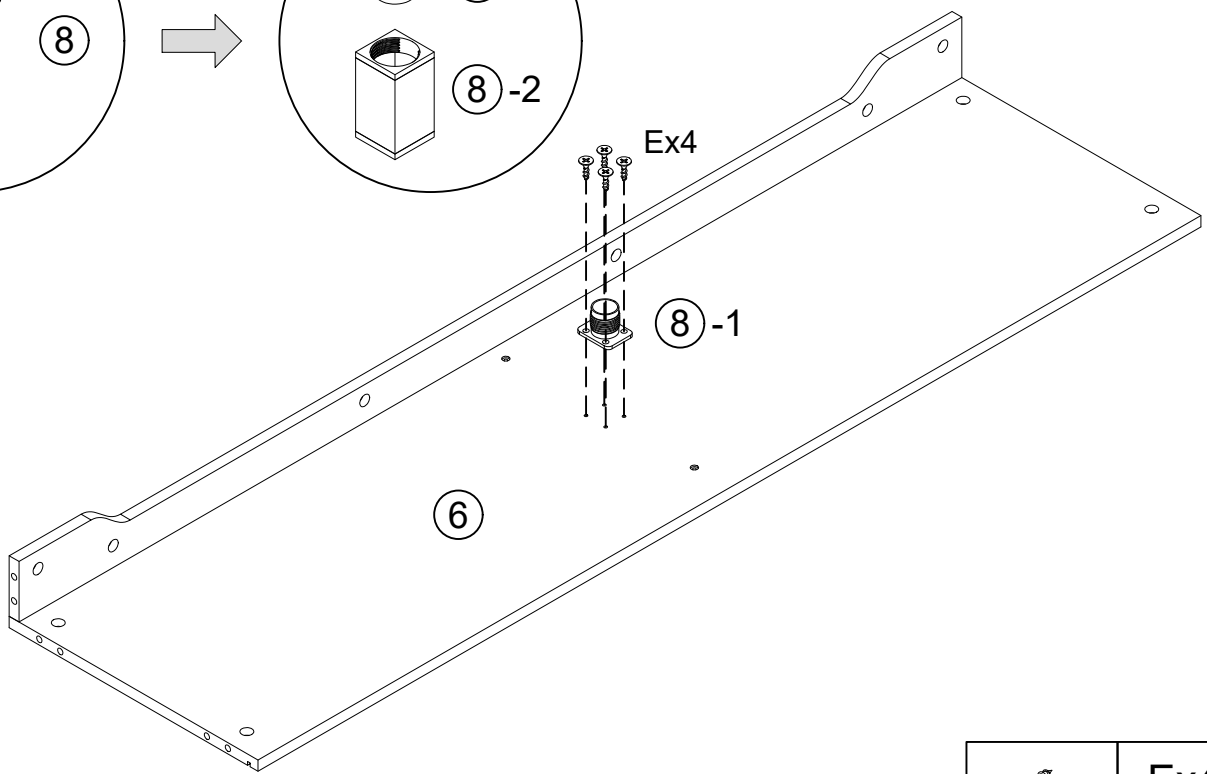



	Ex4

STEP 6

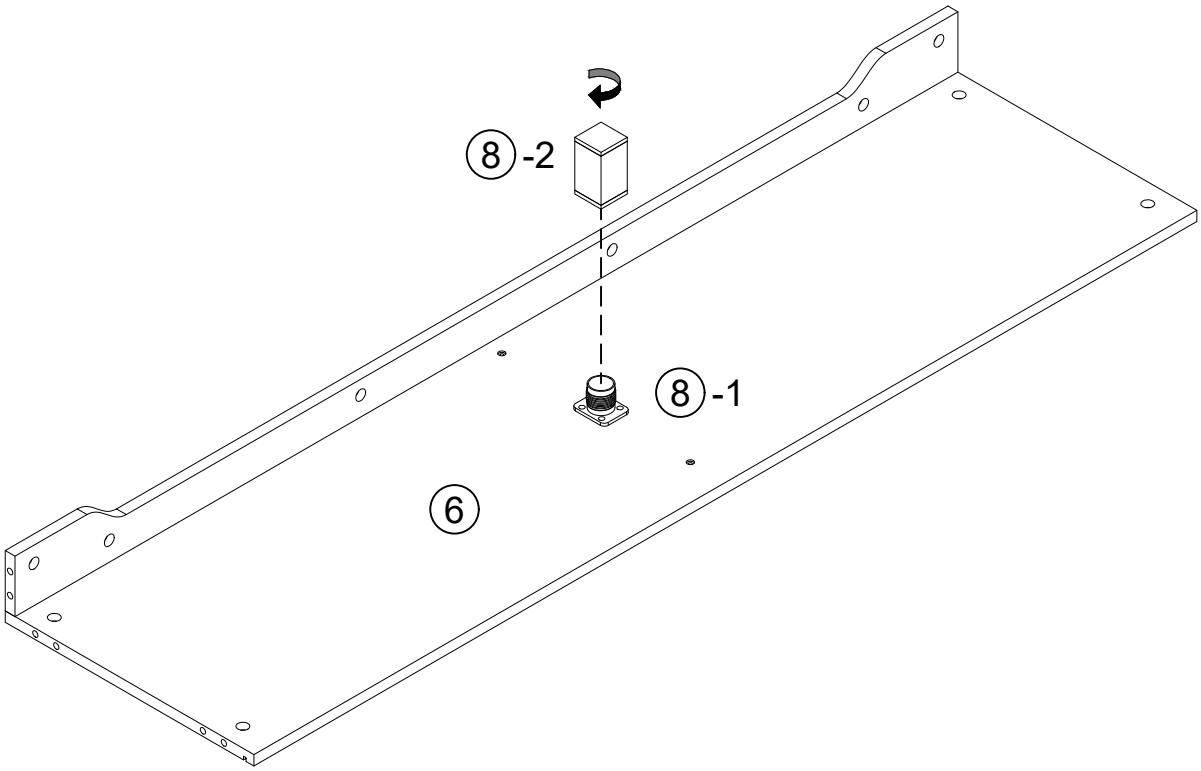


STEP 7

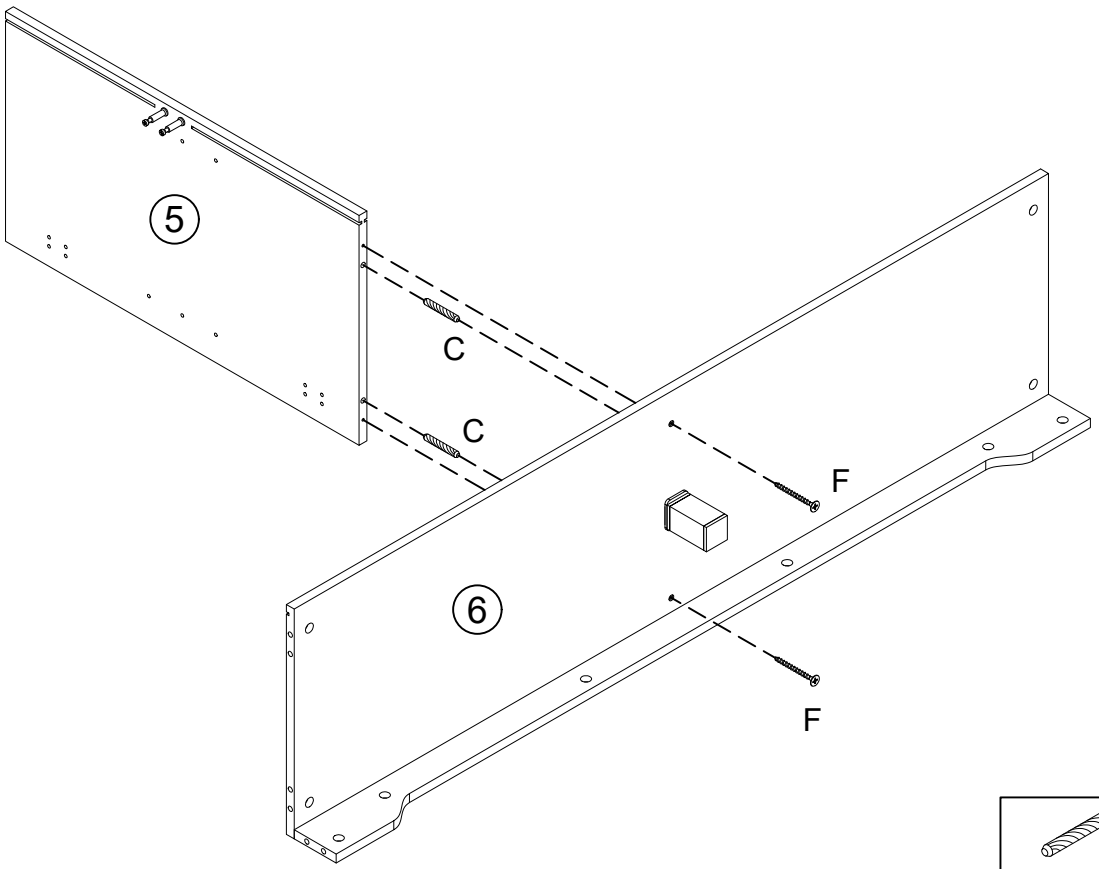


	Cx2
	Fx2

STEP 8

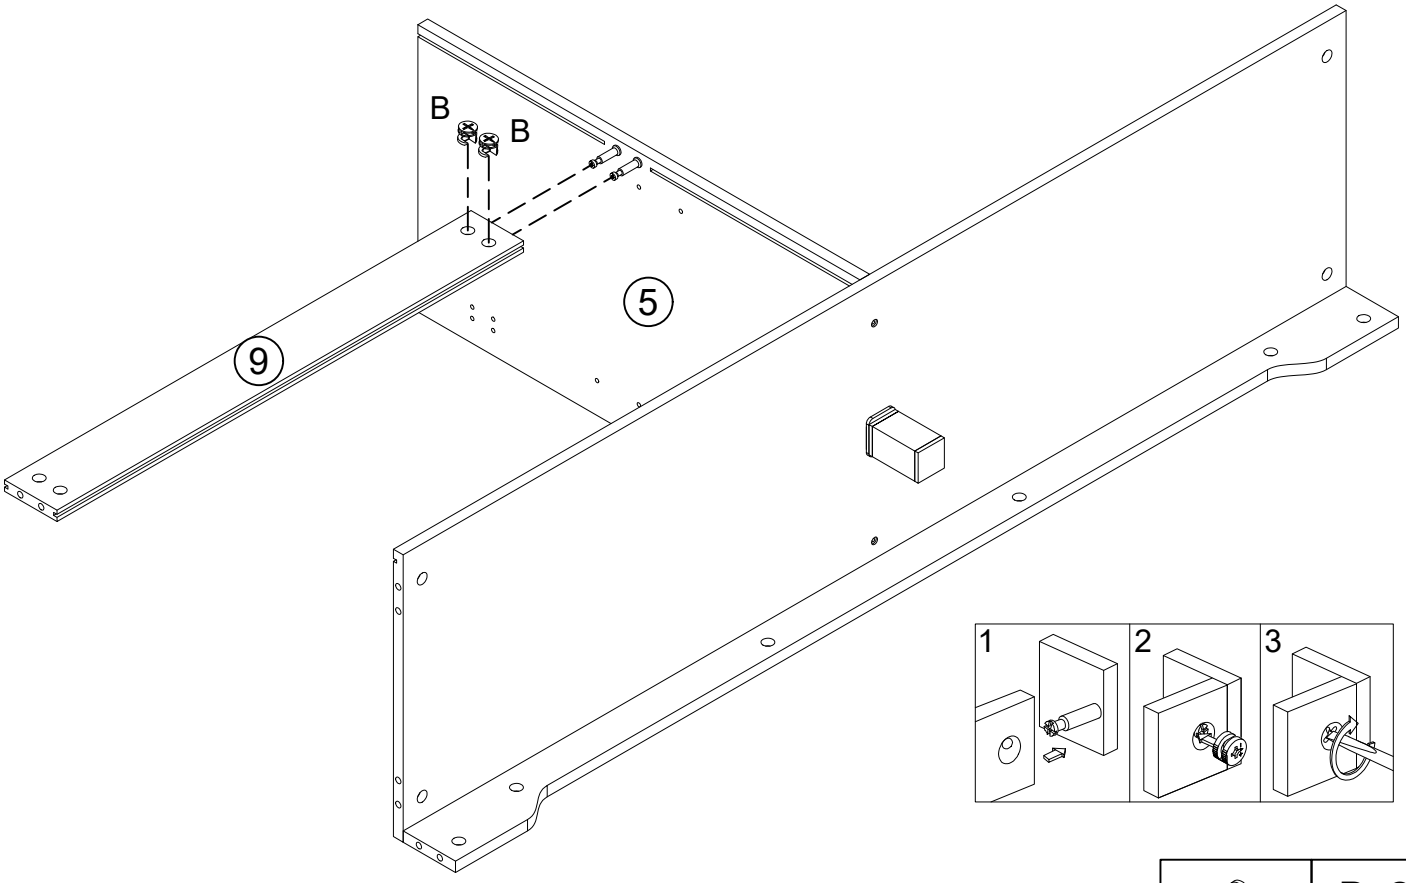


	Bx2

STEP 9

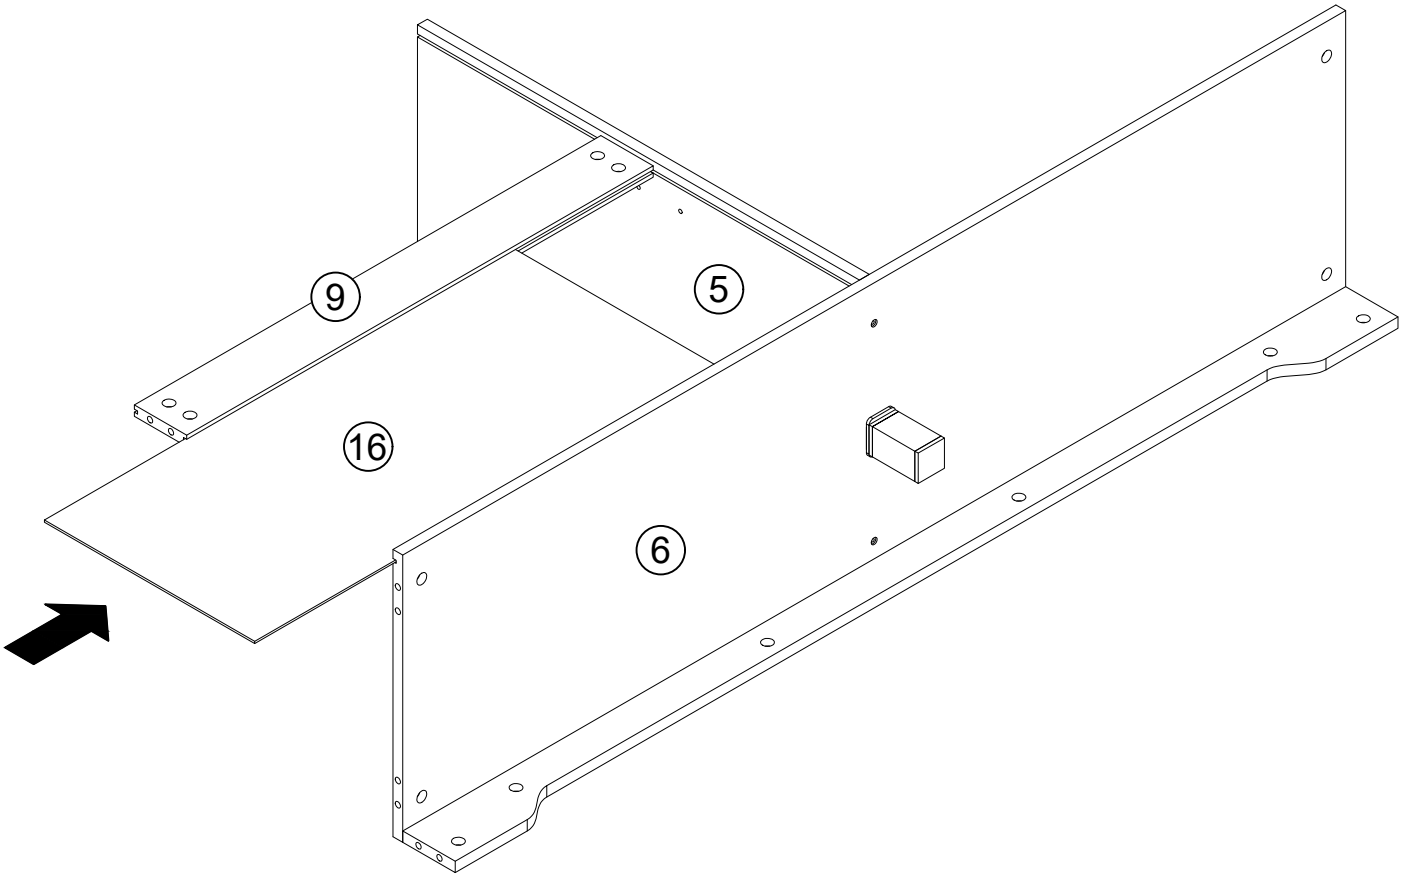


STEP 10

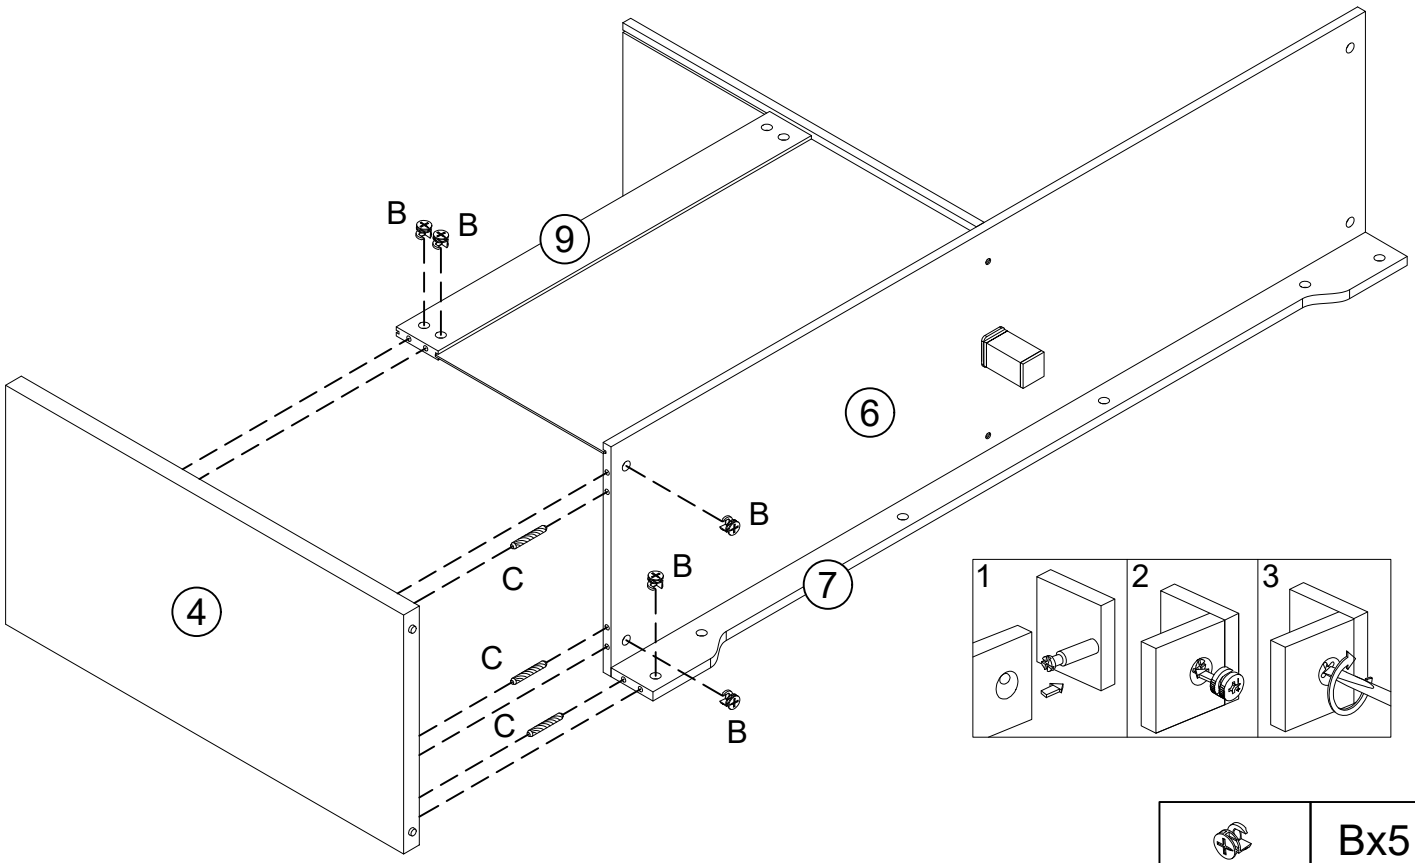


	Bx5
	Cx3

STEP 11

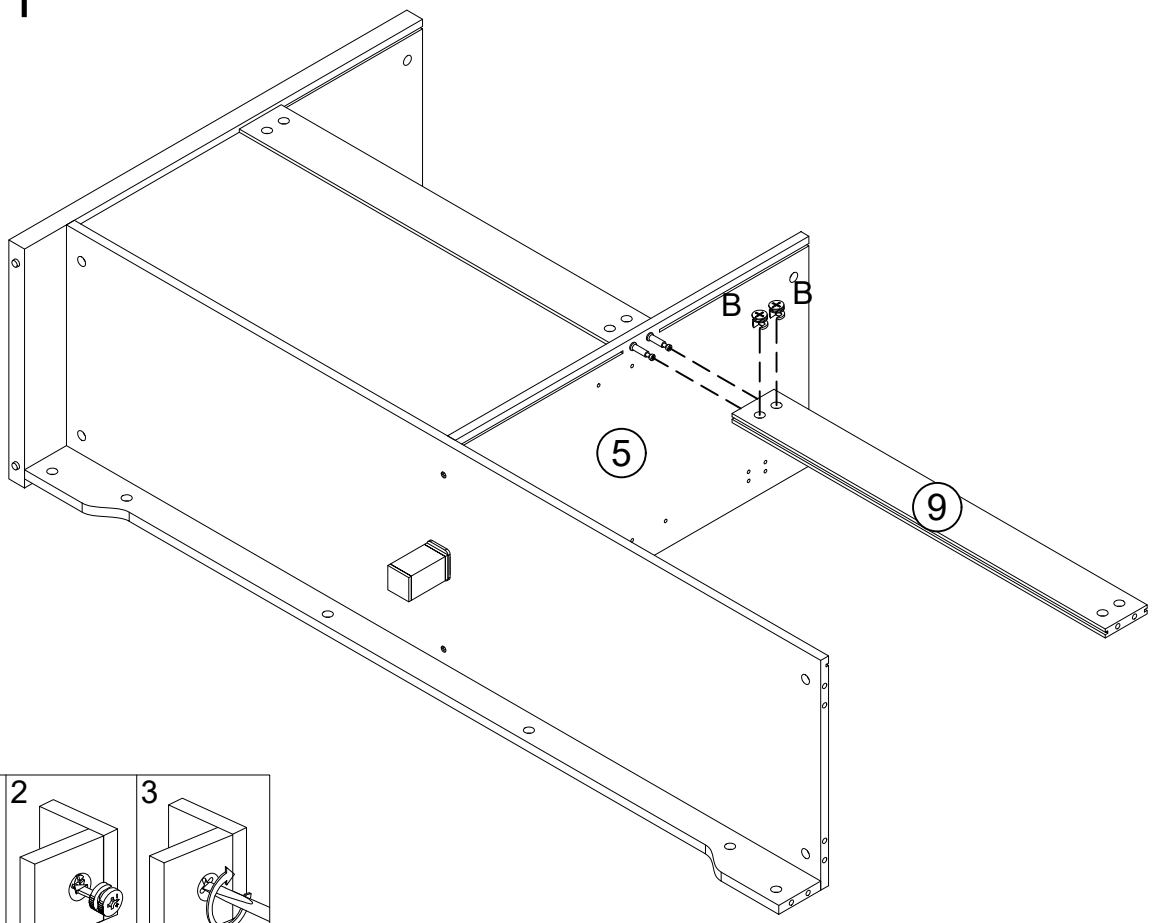


	Bx2

STEP 12

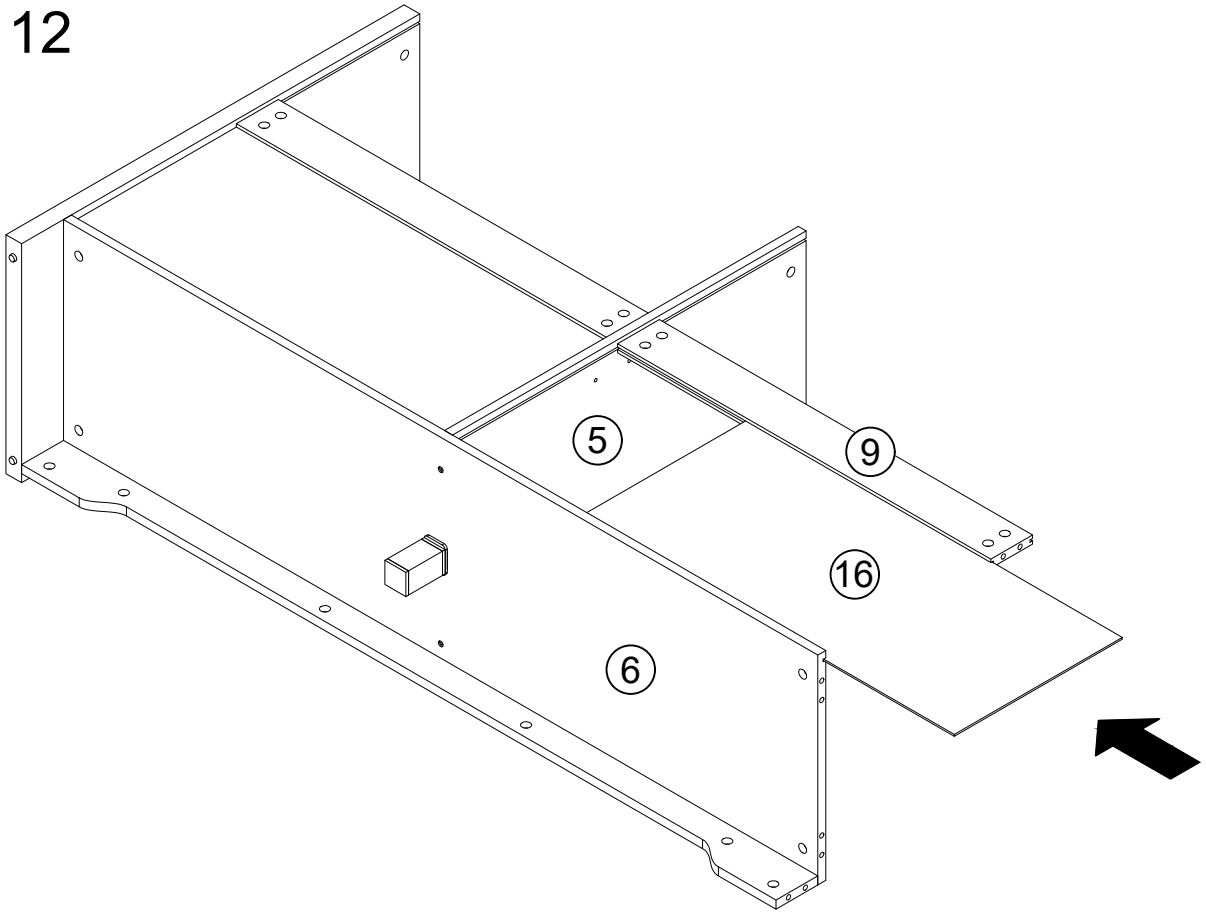


STEP 13

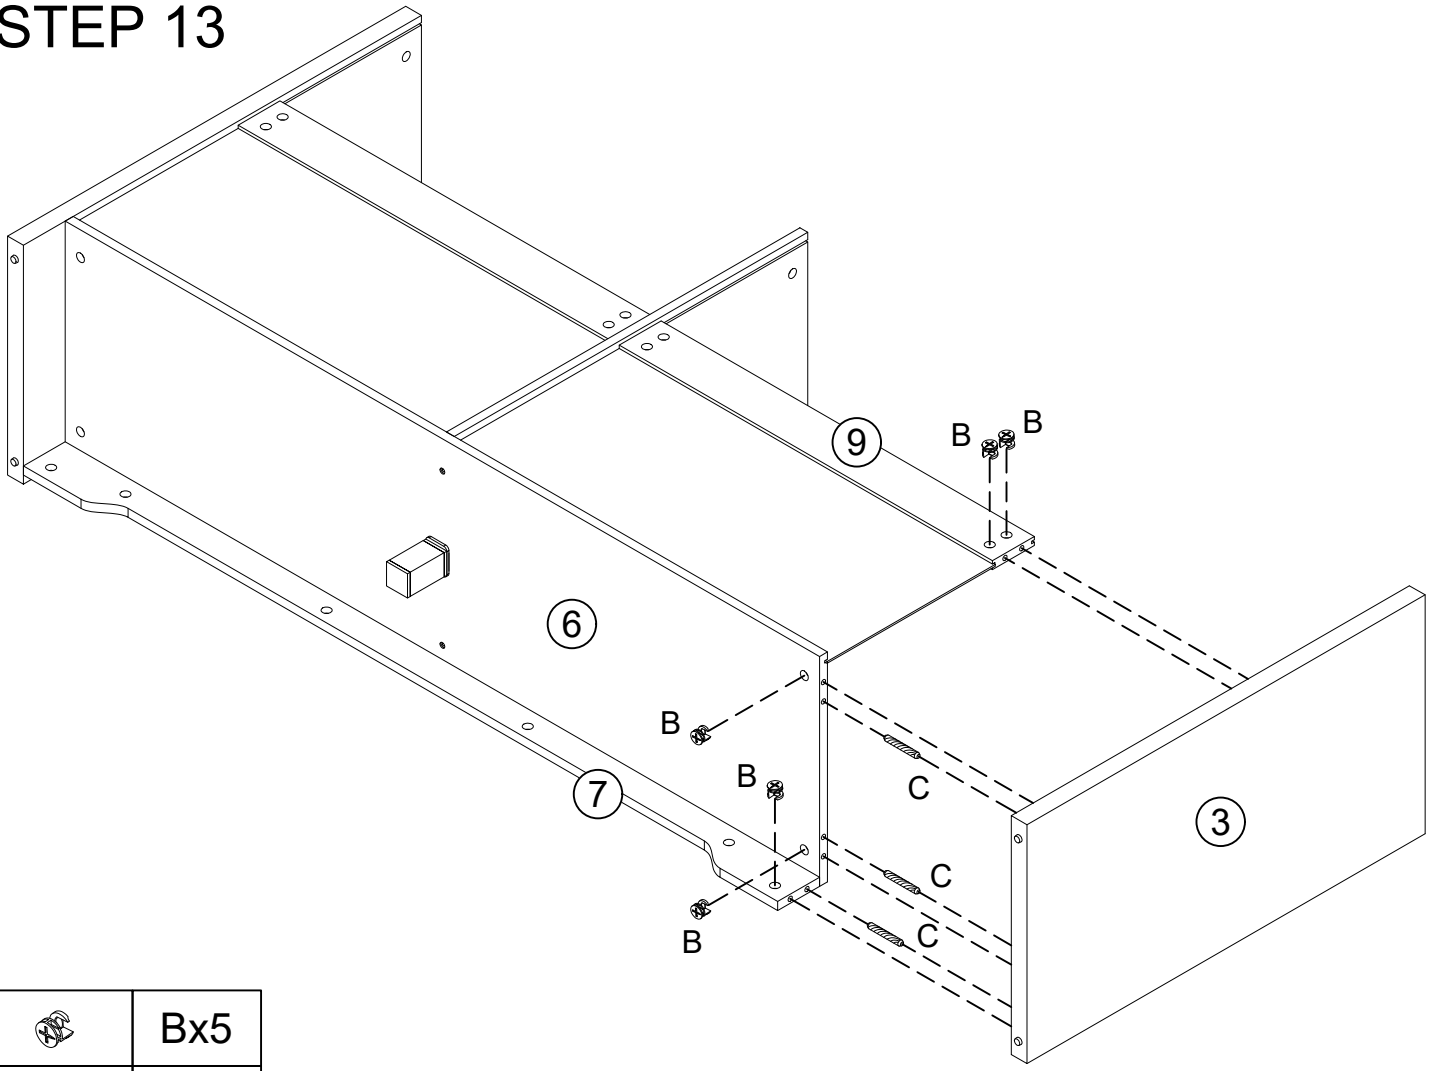


	Bx5
	Cx3

STEP 14

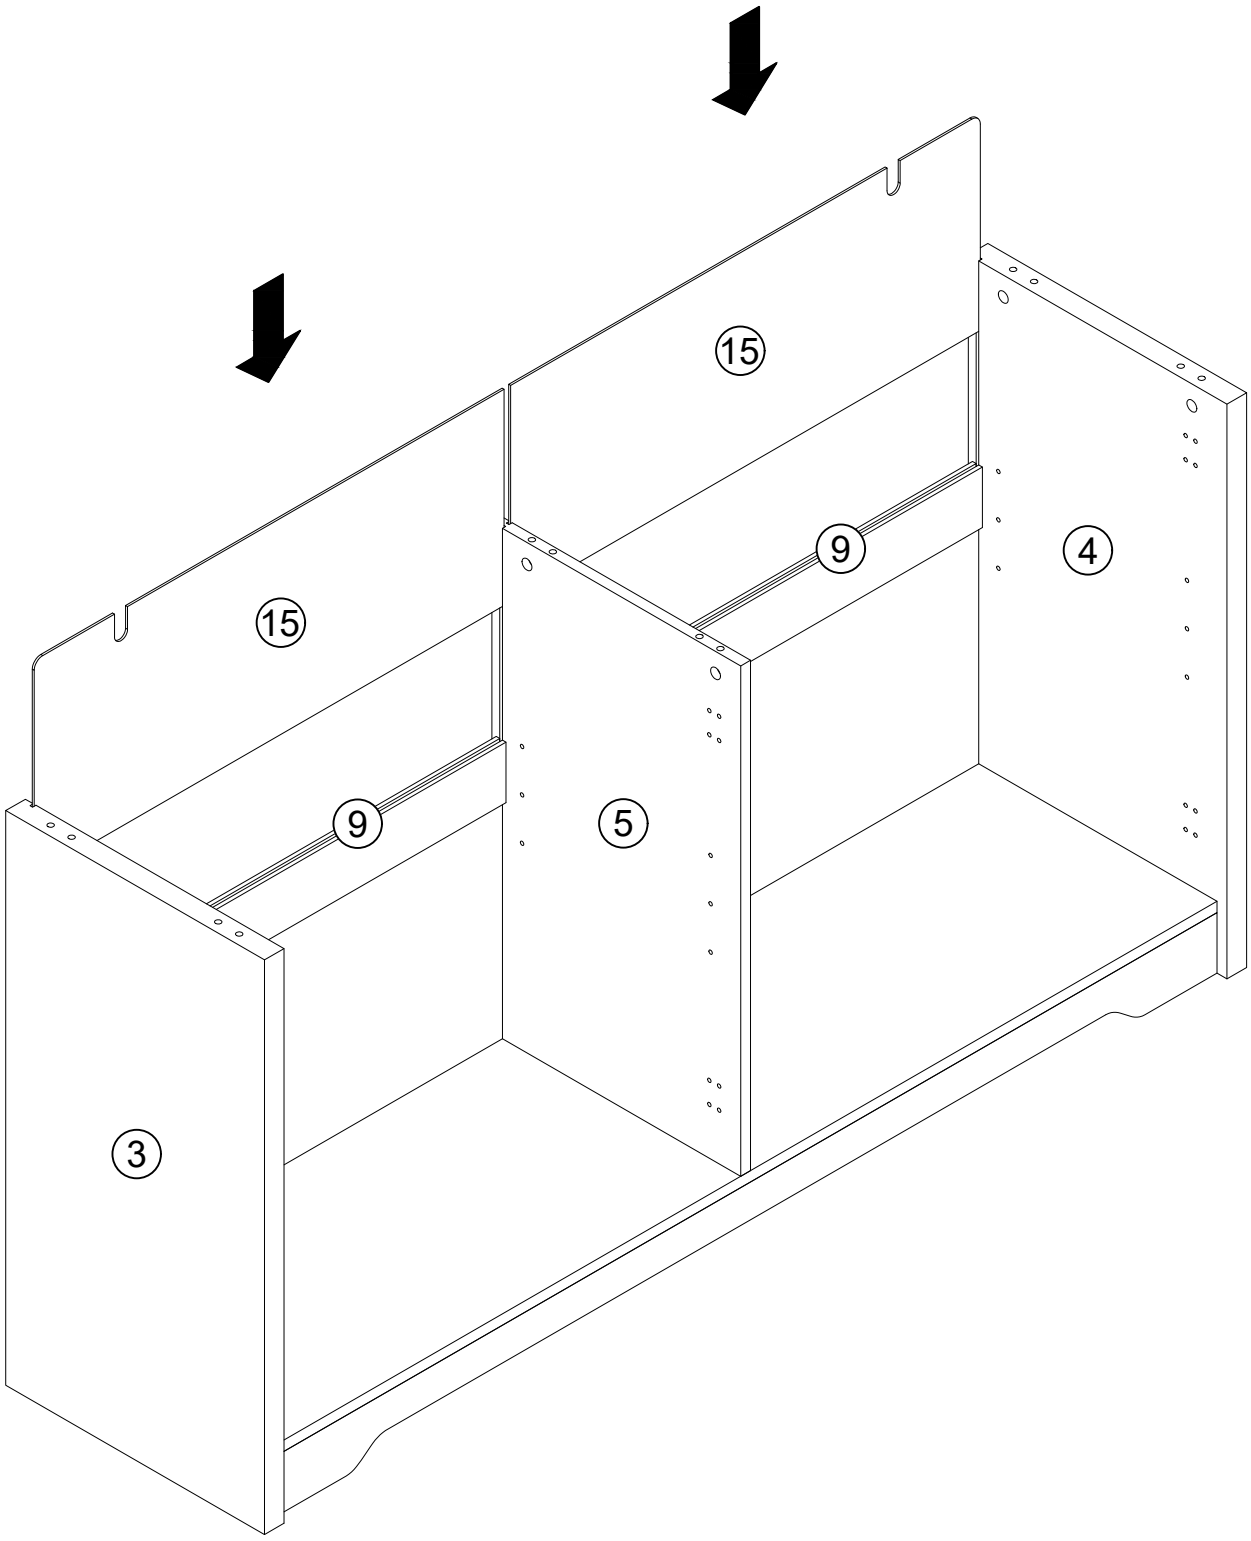


STEP 15

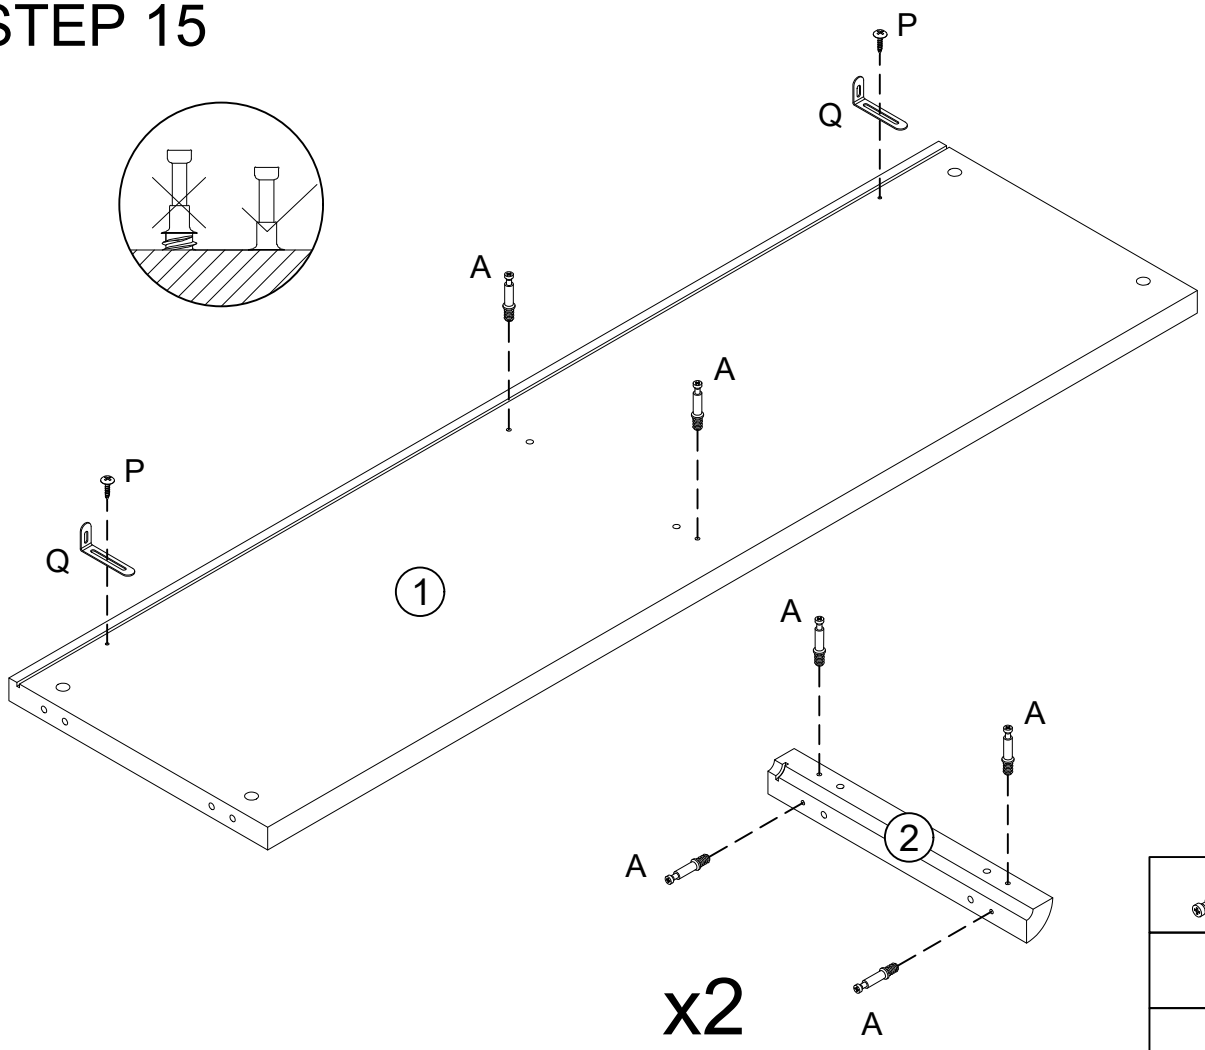


	Ax10
	Px2
	Qx2


STEP 16

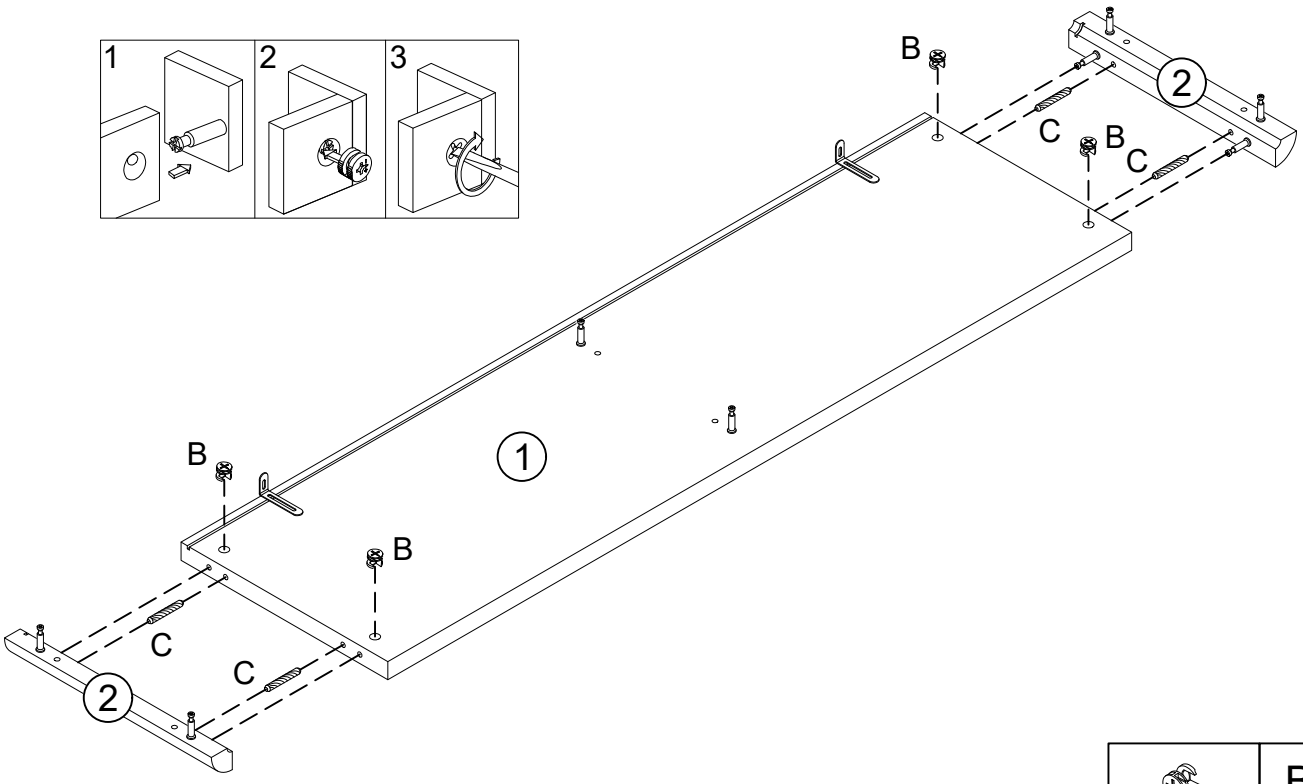

	Bx4
	Cx4


STEP 17

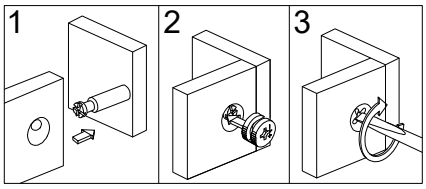

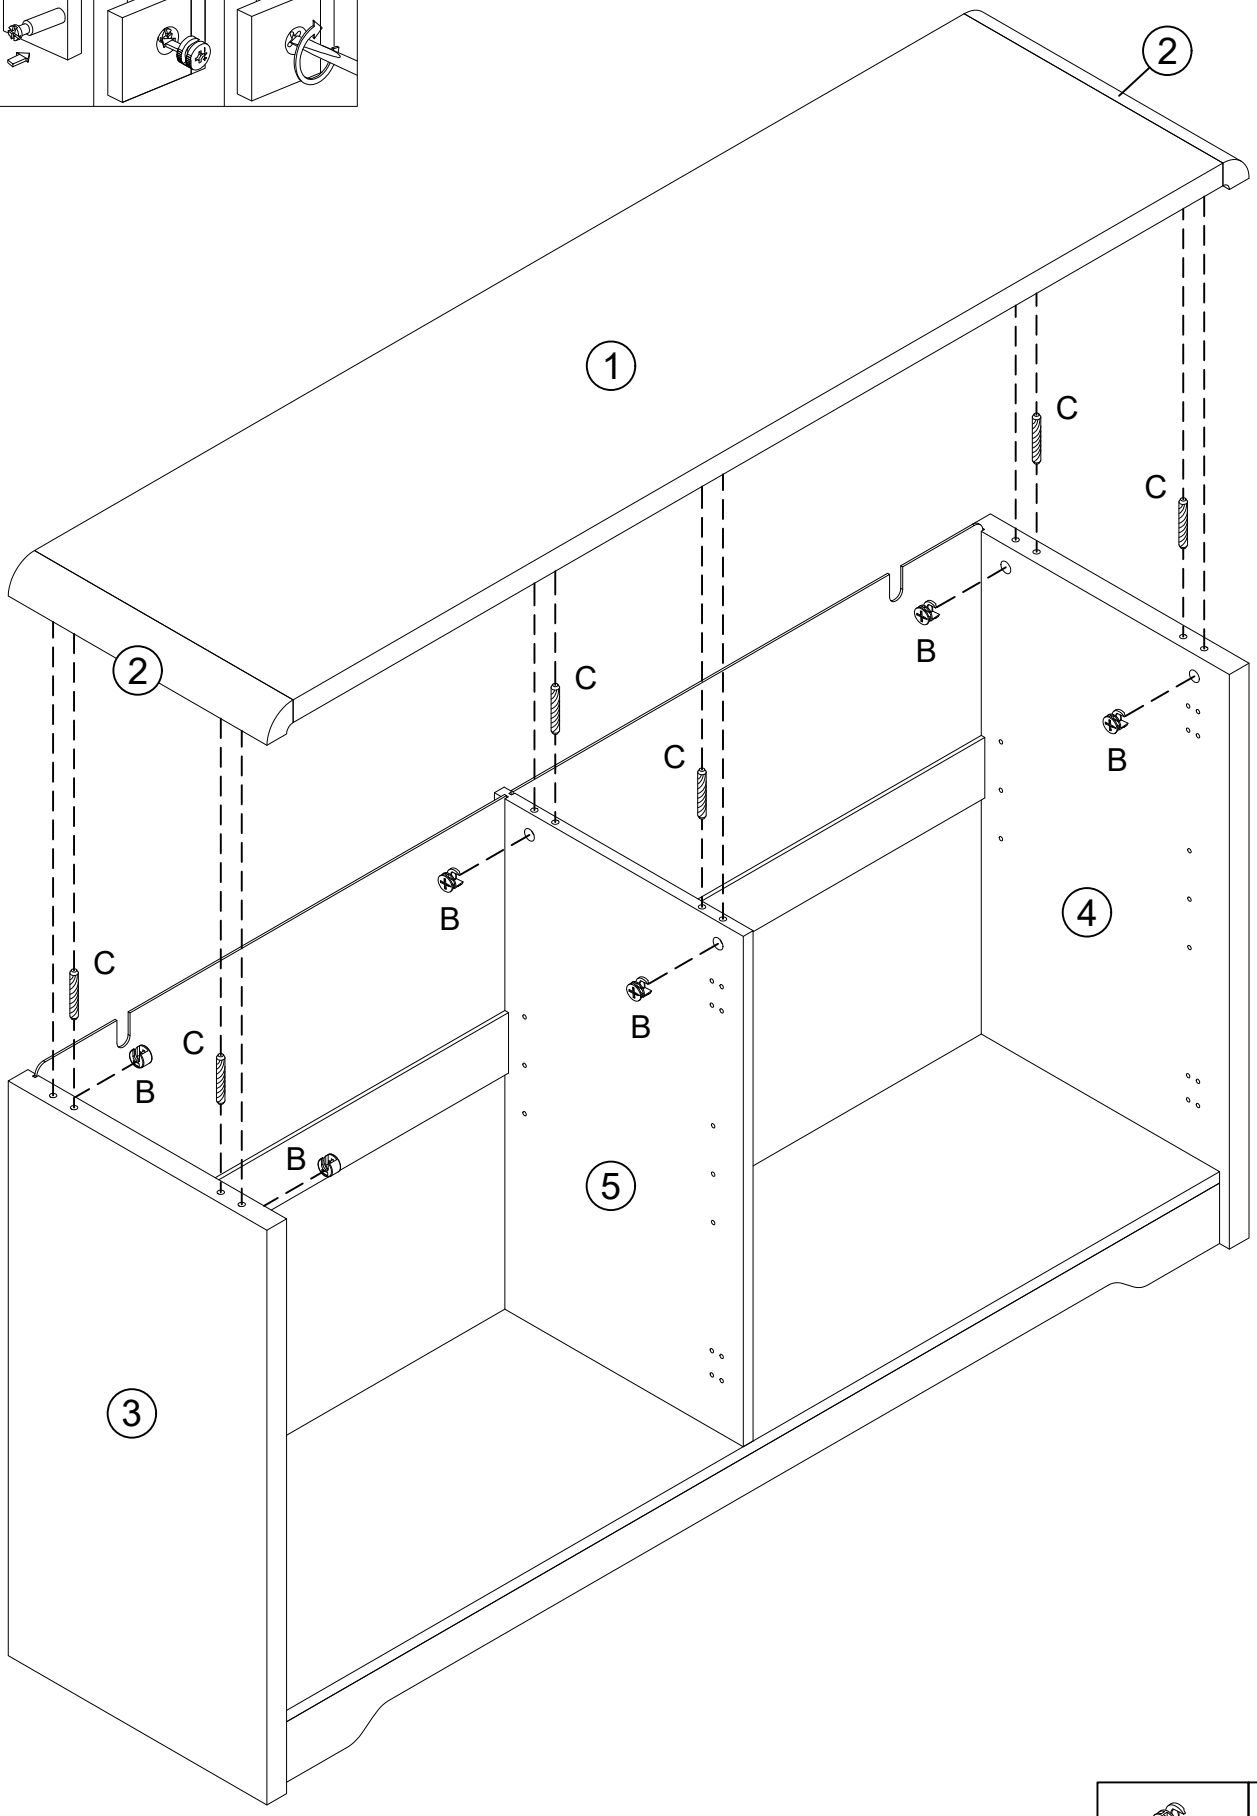


	Bx6
	Cx6


STEP 18

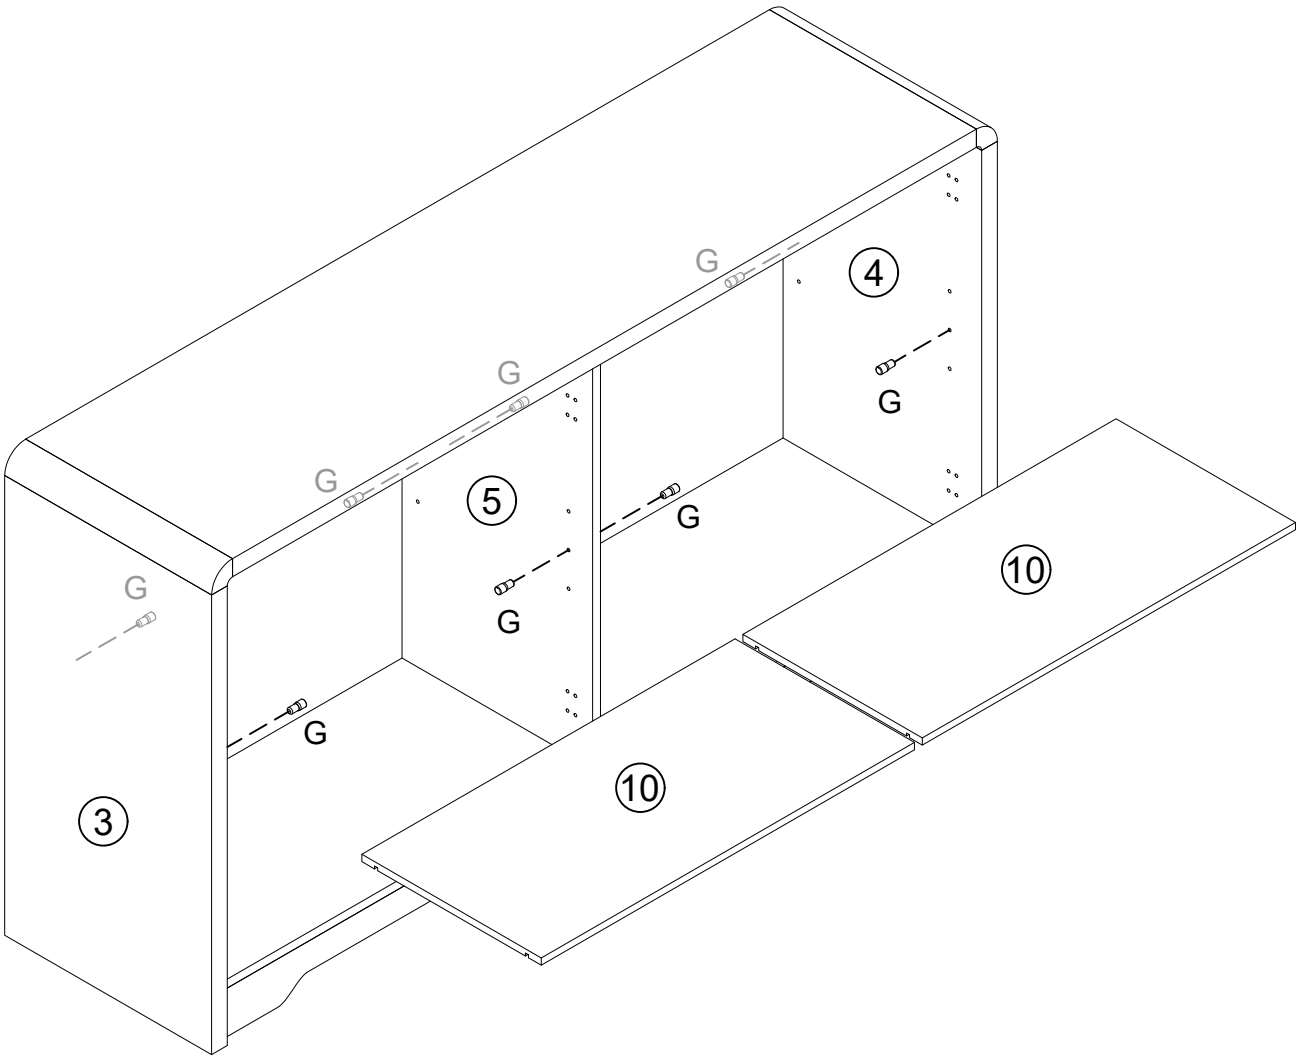



	Gx8


STEP 19

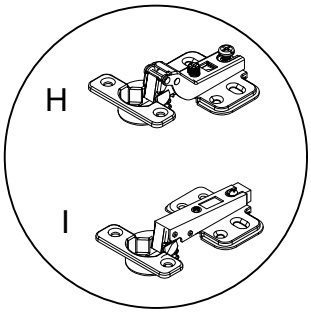


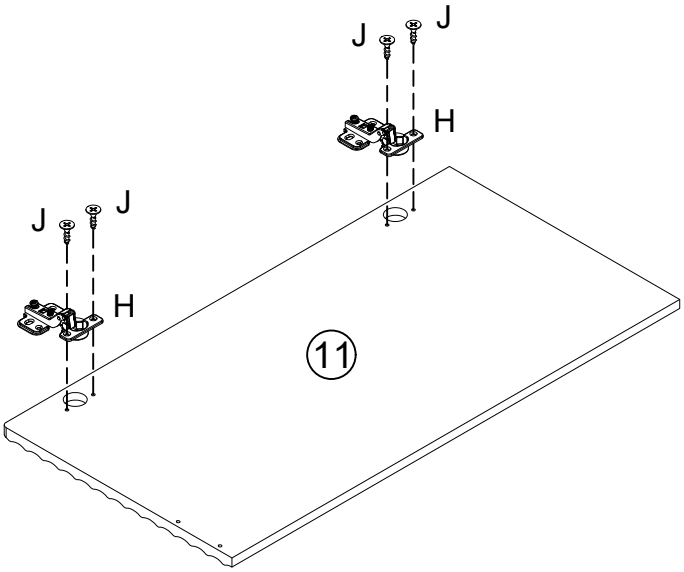

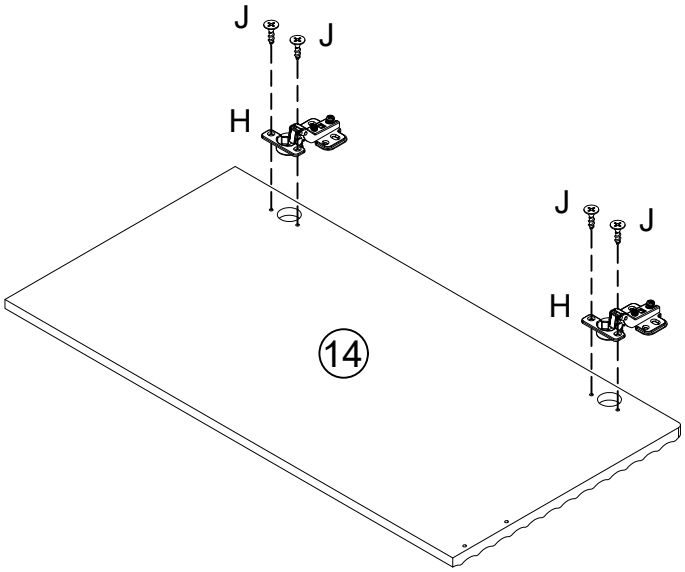


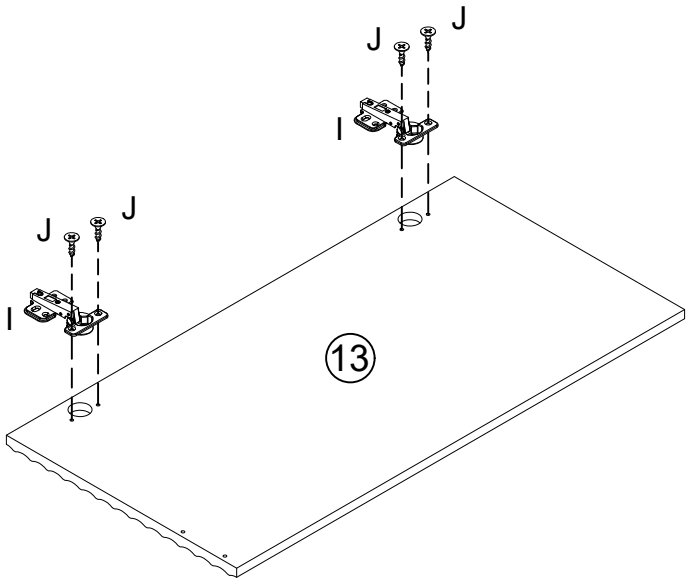


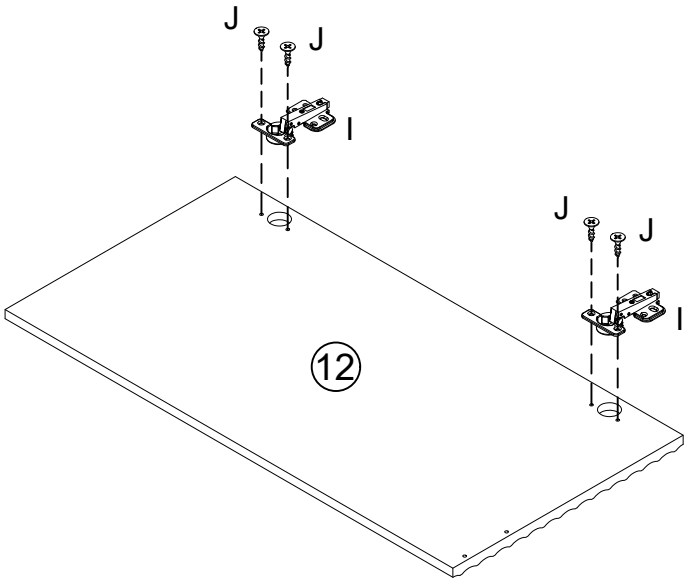



	Hx4
	Ix4
	Jx16


STEP 20

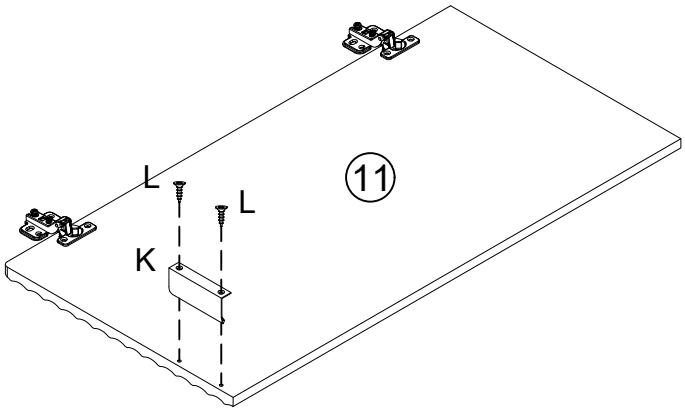

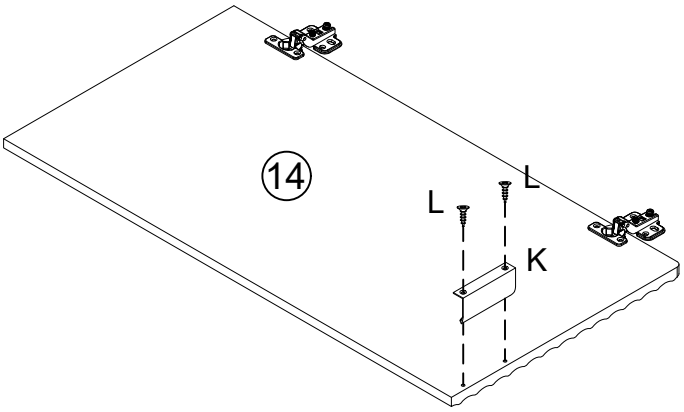


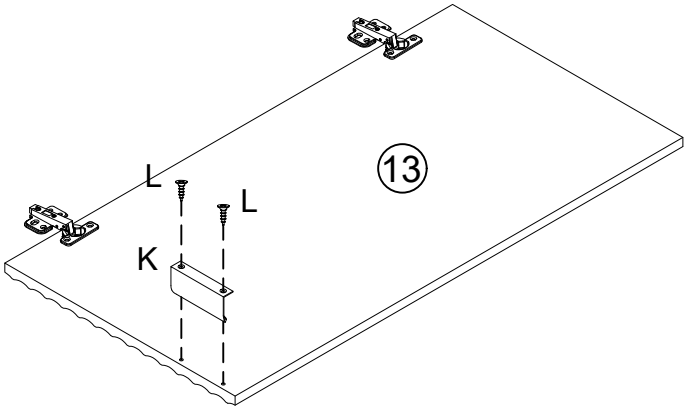

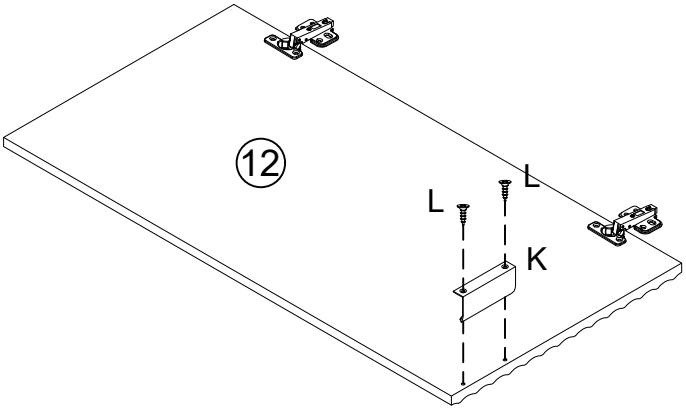


	Kx4
	Lx8


STEP 21

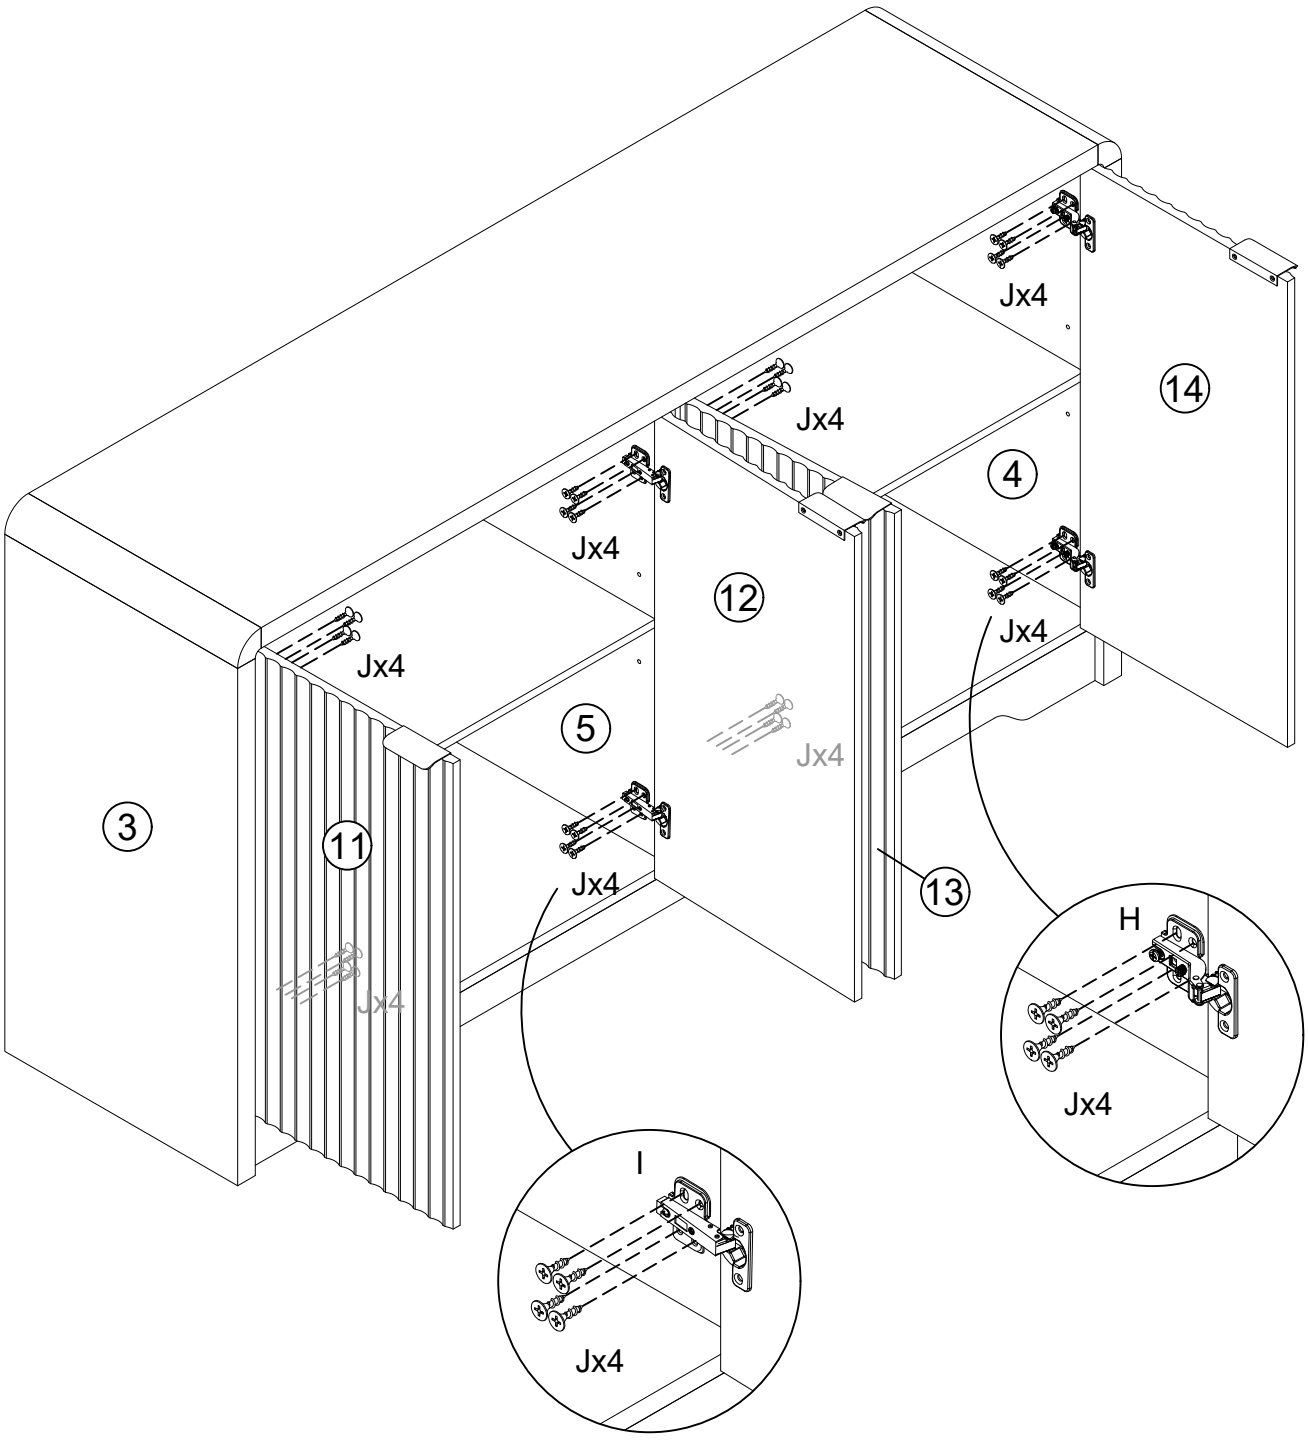


	Jx32

1. First adjust the hinges to ensure the door panel gaps are evenly spaced before fitting the back panel clips.
2. Should hinge adjustment prove difficult, please refer to the installation video via the provided link.

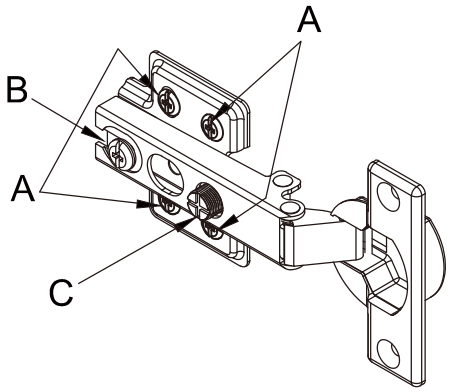


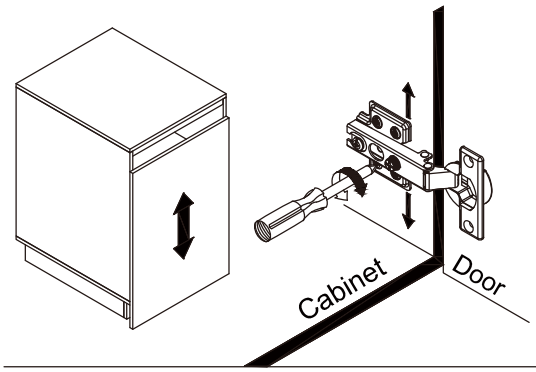

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

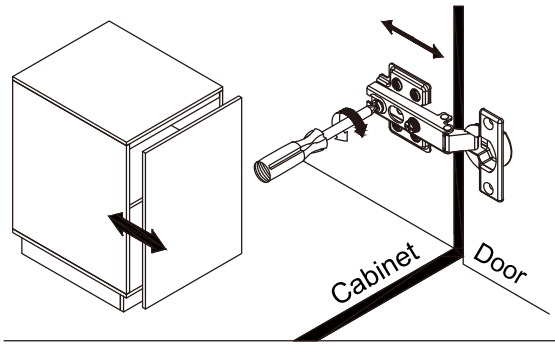


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

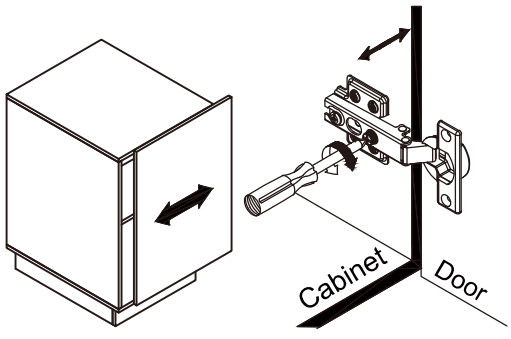


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.

STEP 22

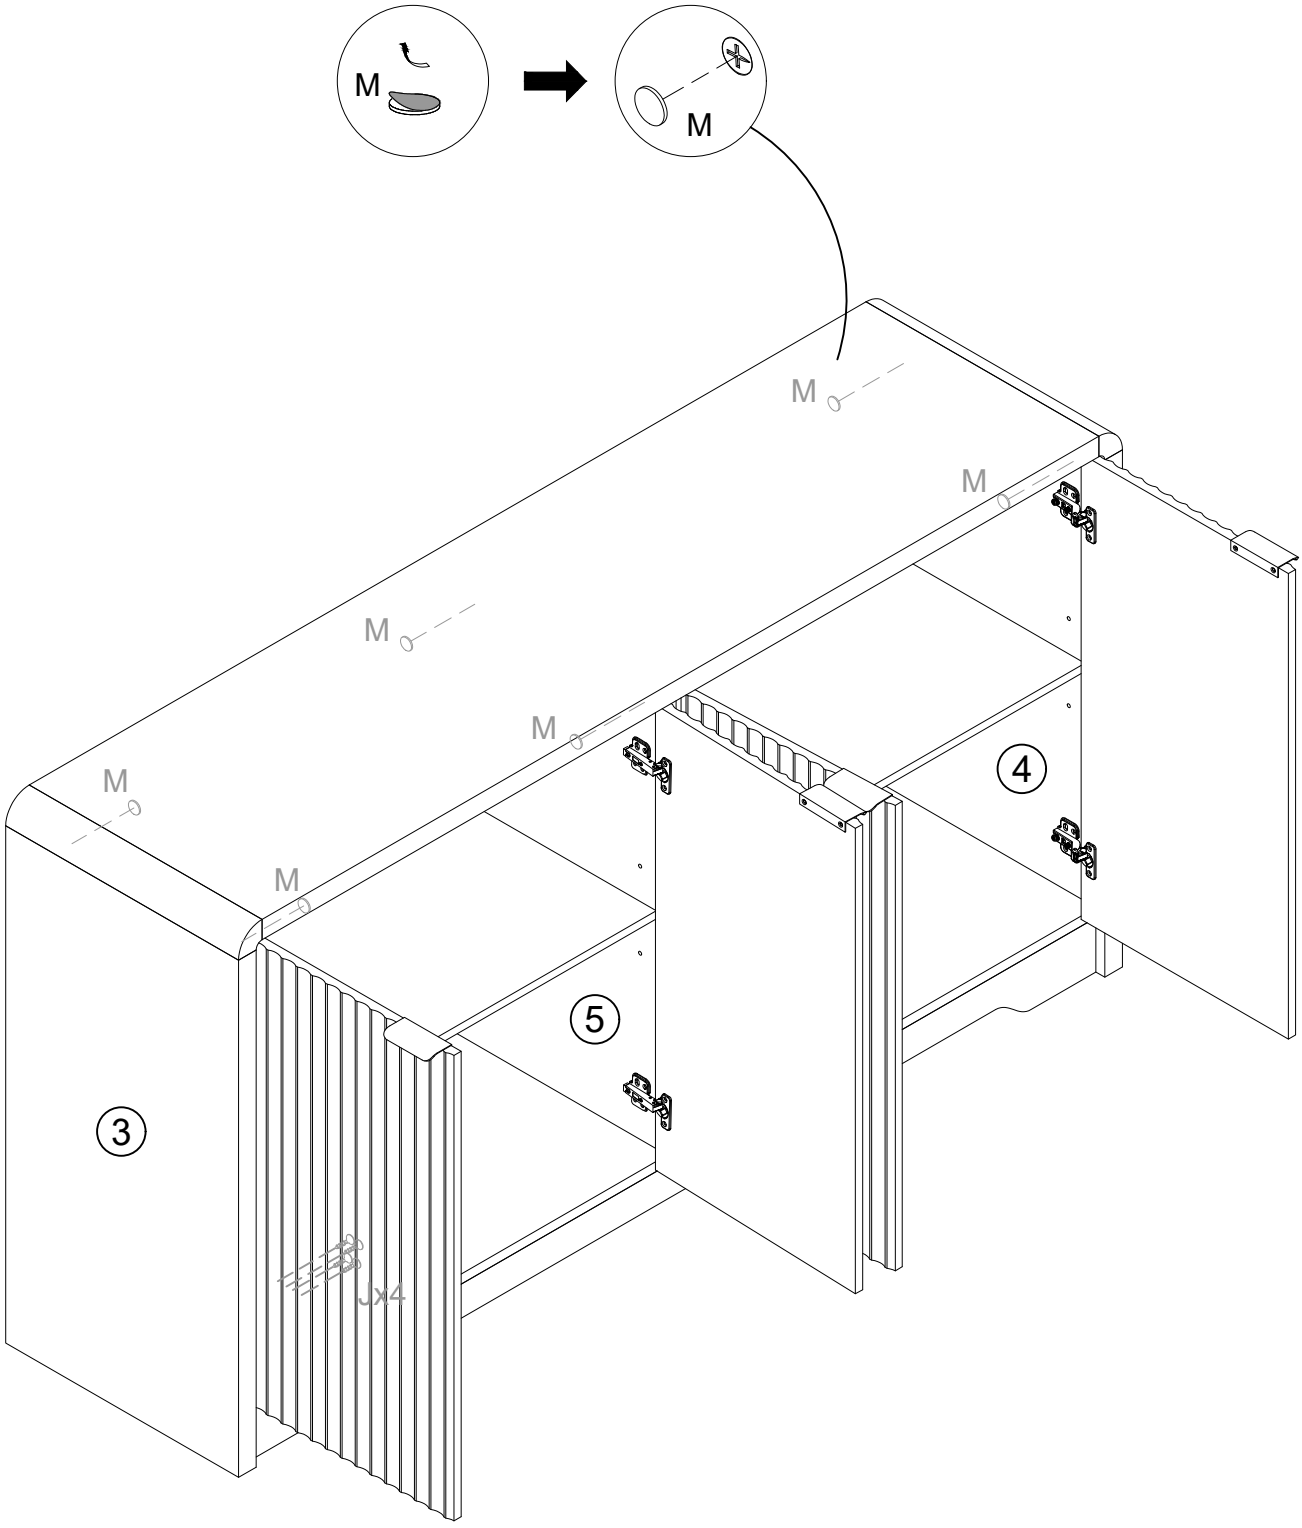


○	Mx6


STEP 23

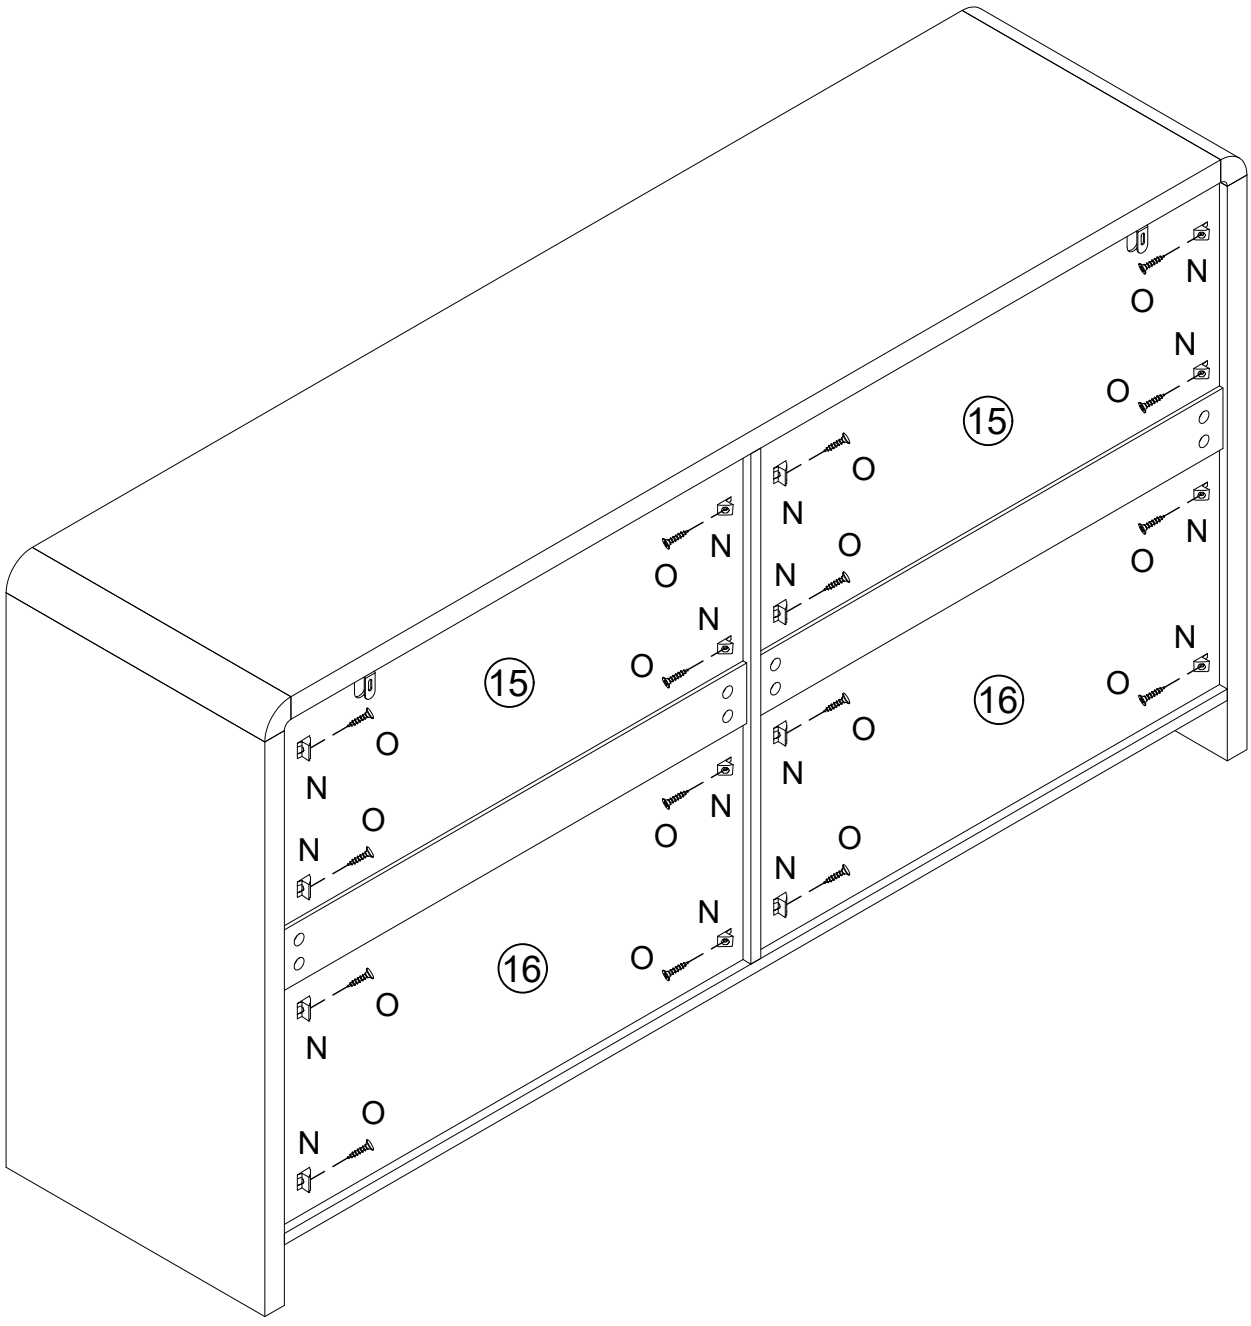


	Nx16
	Ox16

STEP 24

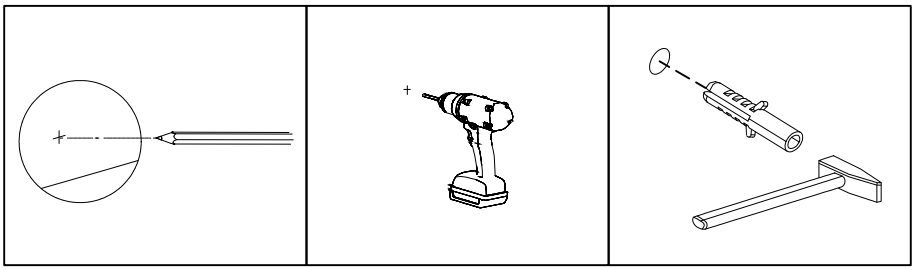


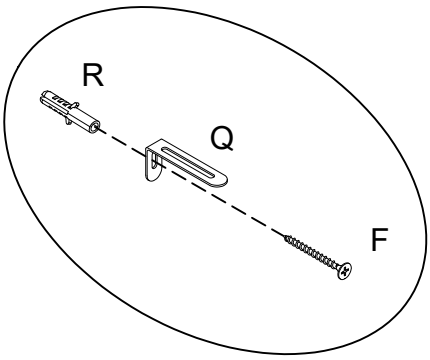

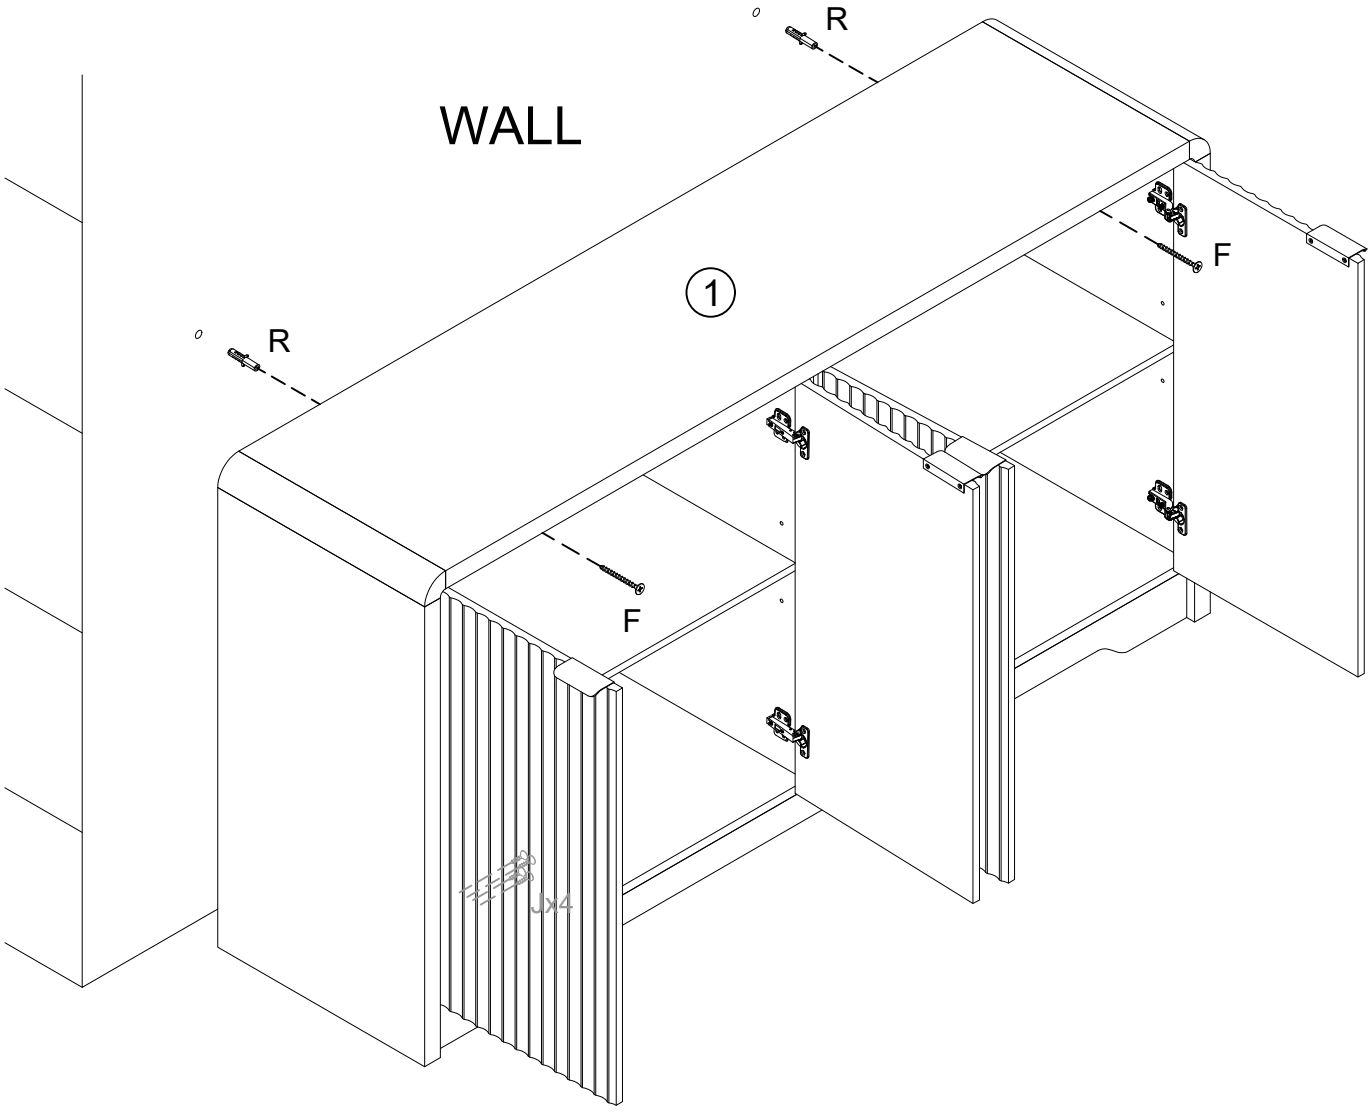

	Fx2
	Rx2

Buffets & Sideboards

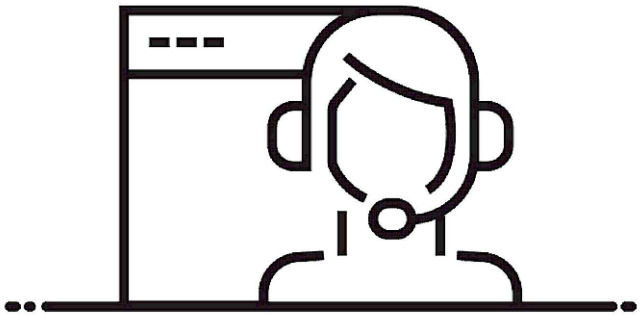

ONLINE SUPPORT

Please read the installation guide carefully before installation.
If you have any questions during the installation process,
you can contact us and we will provide you a detailed guidance.