


ASSEMBLY

Instructions


HBLJ-V1

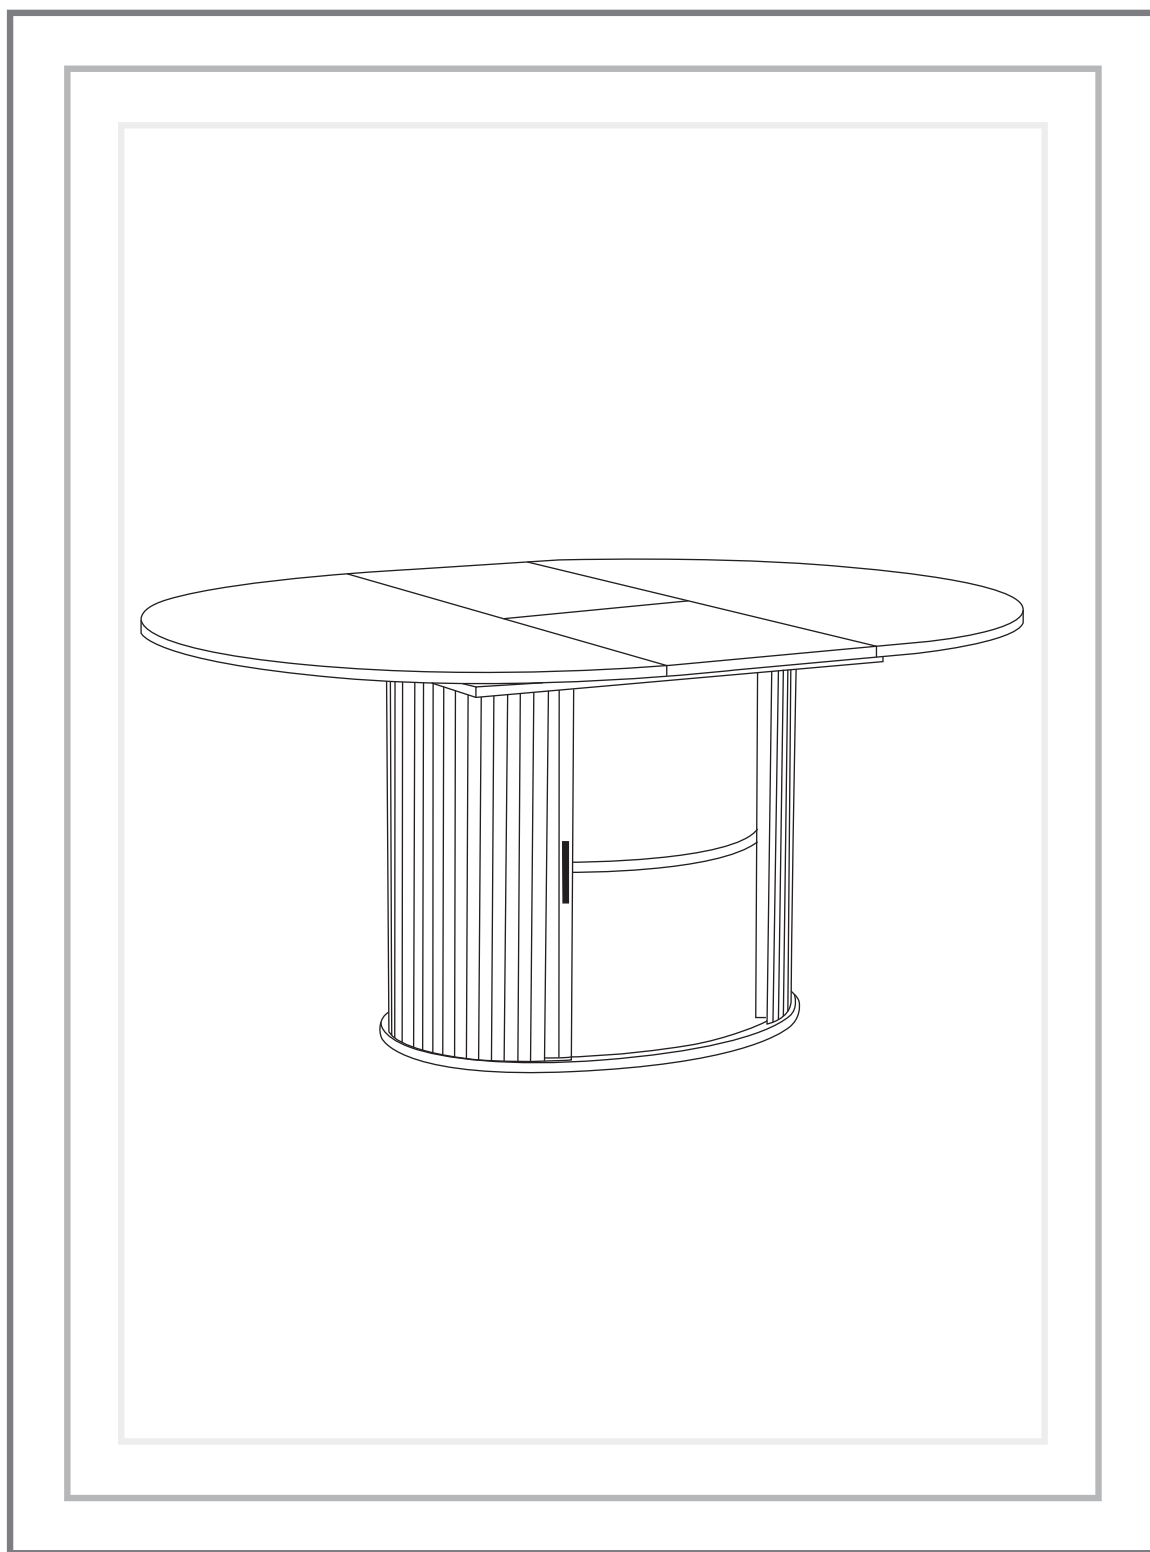













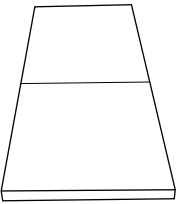
If you have any questions, please contact customer service email:

AfterSales9527@outlook.com

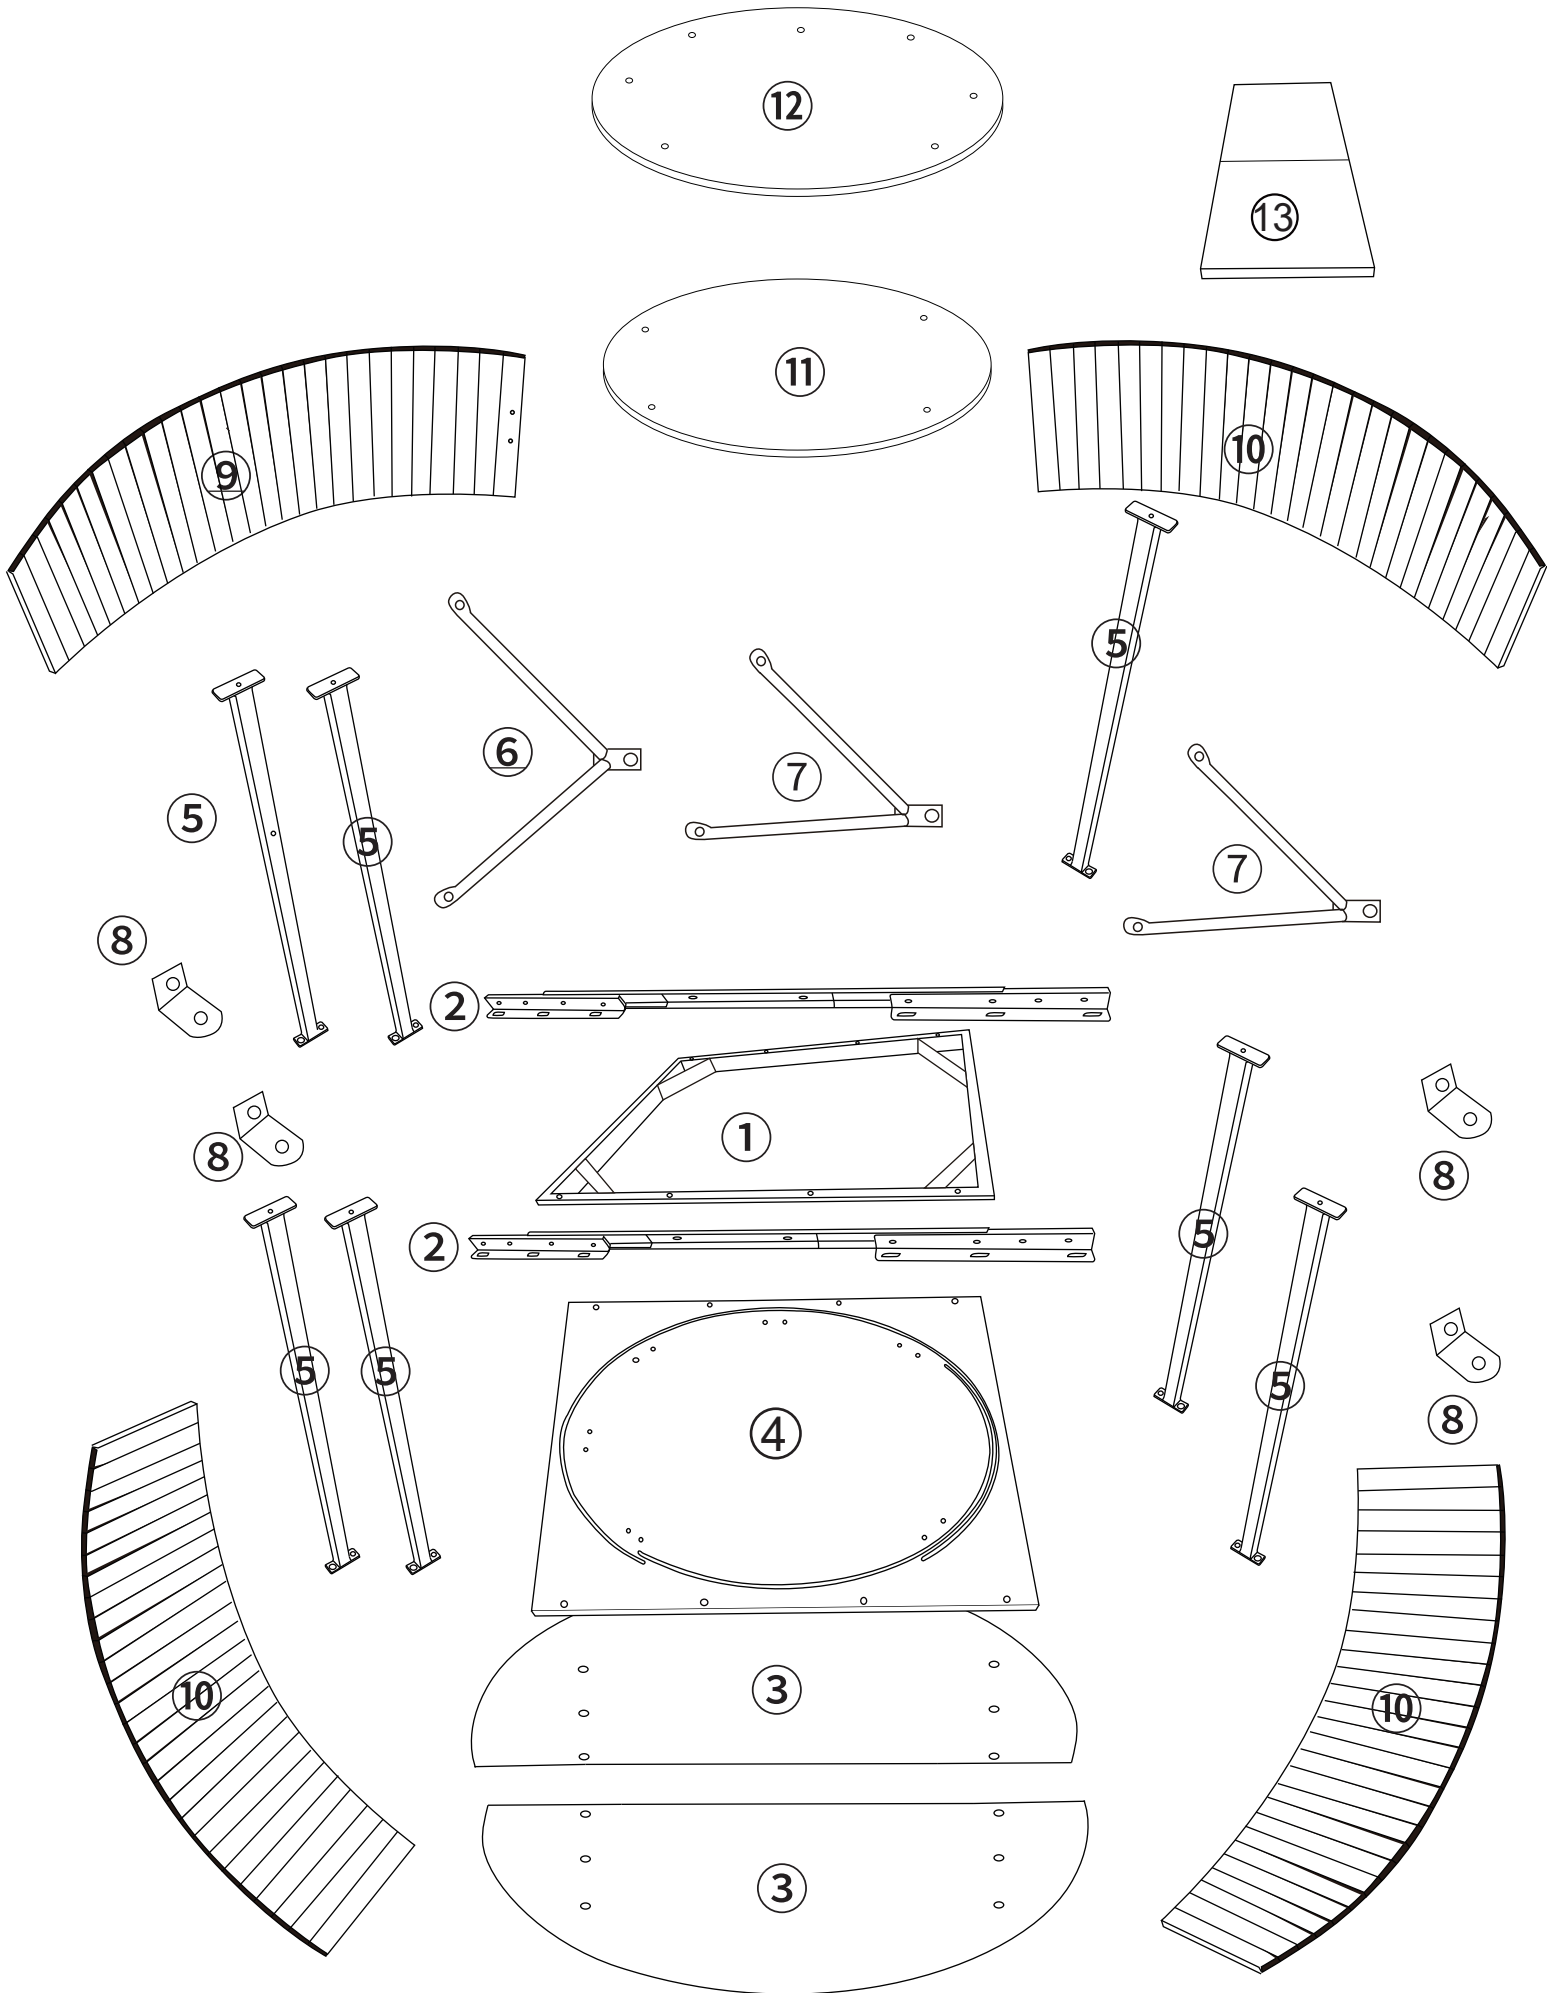








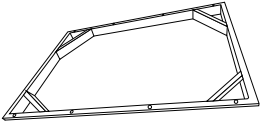
Disassembly Diagram

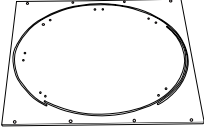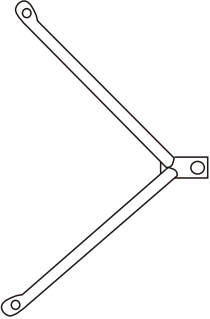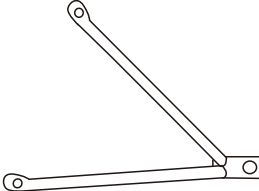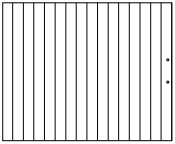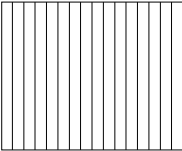

Accessories





<p>①</p> <p>x1</p> 	<p>②</p> <p>x2</p> 	<p>③</p> <p>x2</p> 	<p>④</p> <p>x1</p> 
<p>⑤</p> <p>x7</p> 	<p>⑥</p> <p>x1</p> 	<p>⑦</p> <p>x2</p> 	<p>⑧</p> <p>x4</p> 
<p>⑨</p> <p>x1</p> 	<p>⑩</p> <p>x3</p> 	<p>⑪</p> <p>x1</p> 	<p>⑫</p> <p>x1</p> 
<p>⑬</p> <p>x1</p> 			

Accessories

<p>A</p> <p>x8</p>  <p>M5x10mm</p> <p>1 Spare</p>	<p>B</p> <p>x1</p> 	<p>C</p> <p>x37</p>  <p>M6x16mm</p> <p>4 Spare</p>	<p>D</p> <p>x45</p>  <p>M6x16x1.5mm</p> <p>5 Spare</p>
<p>E</p> <p>x15</p>  <p>M6x35mm</p> <p>2 Spare</p>	<p>F</p> <p>x1</p>  <p>WAX</p>	<p>G</p> <p>x2</p>  <p>M4x8mm</p>	<p>H</p> <p>x4</p>  <p>M3x14mm</p>
<p>J</p> <p>x8</p>  <p>1 Spare</p>	<p>K</p> <p>x1</p> 		

Assembly Instructions






Step1

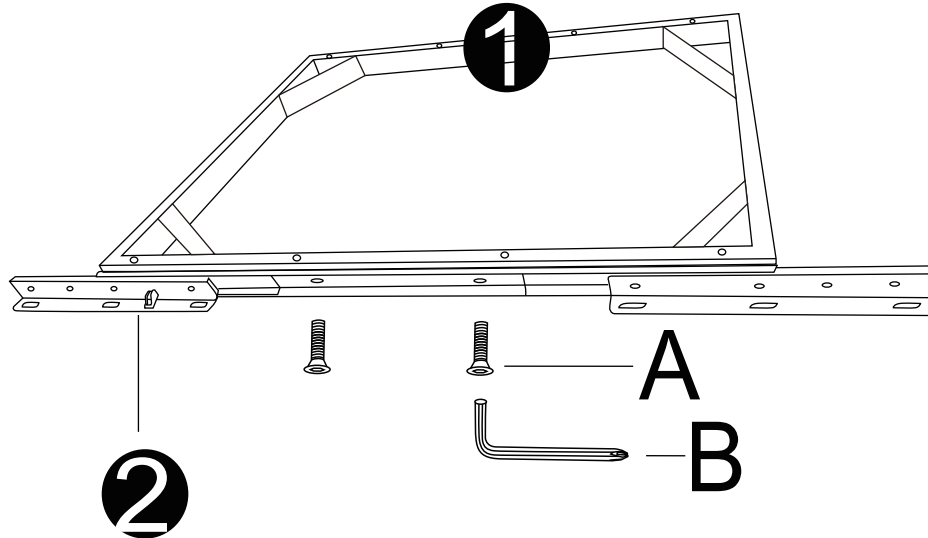

The sliding rails are assembled on both sides respectively.
Assembly screws when the slide rail is open

x2

Step2

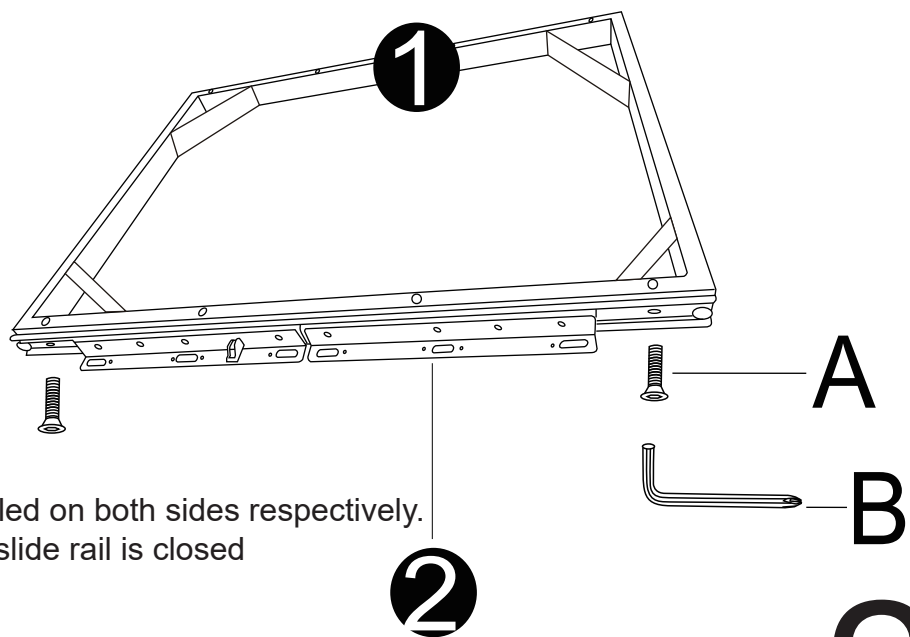





The sliding rails are assembled on both sides respectively.
Assembly screws when the slide rail is closed


x2

Assembly Instructions





Step3


Before screwing in the screws, ensure that the center of the control slide is aligned with the gap between the panel.

3 x2	
B x1	
C x12 M6x16mm	
D x12 M6x16x1.5mm	

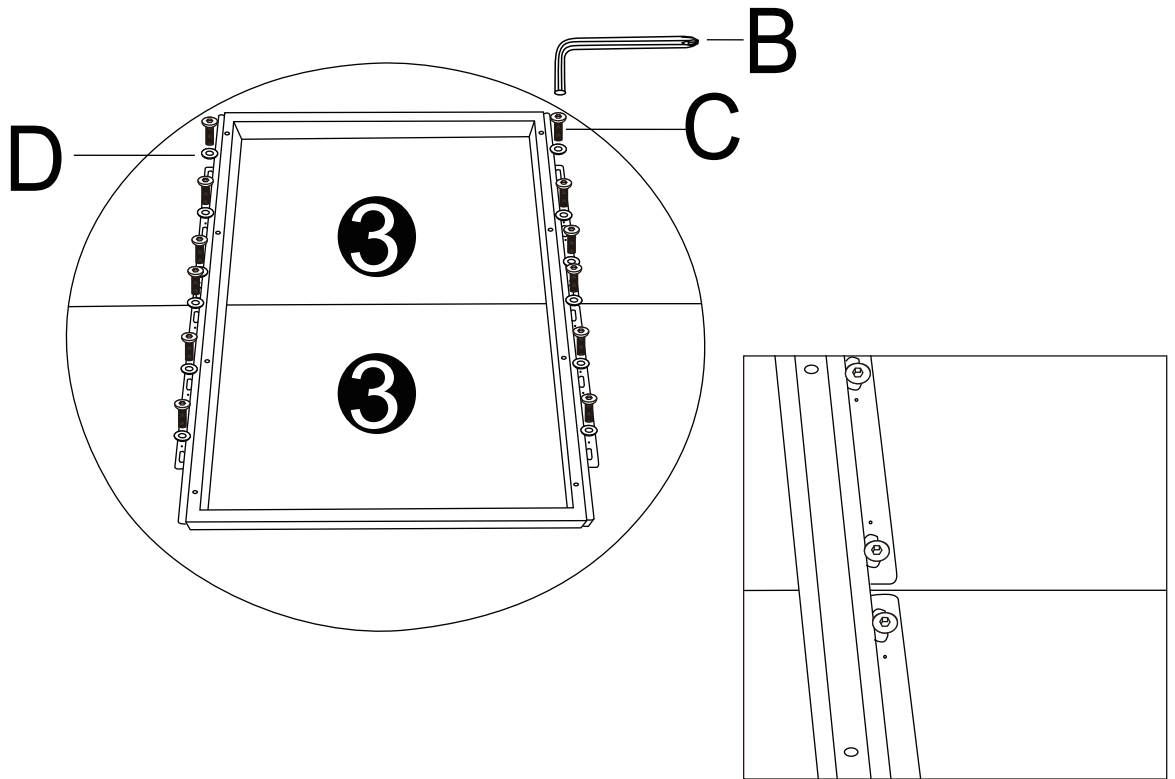





Step4

4 x1	
B x1	
D x8 M6x16x1.5mm	
E x8 M6x35mm	




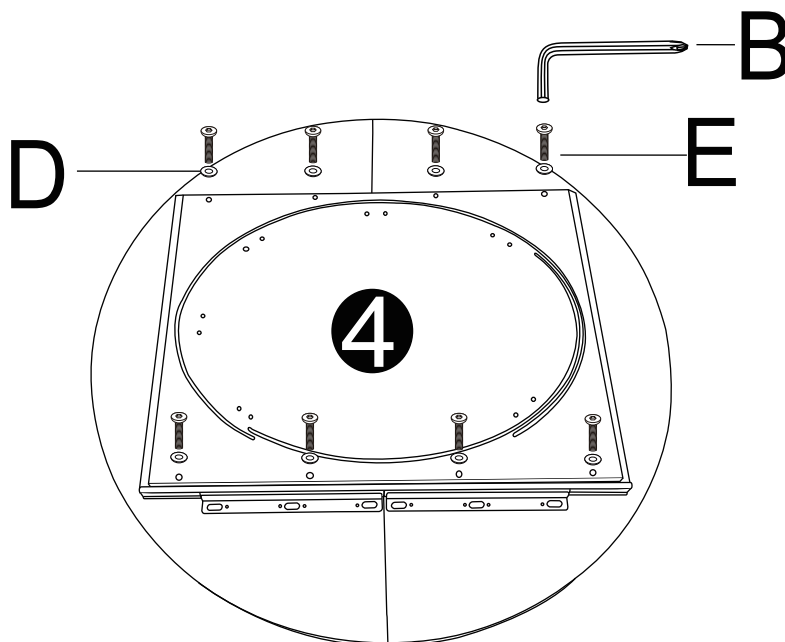


Assembly Instructions

Step 5

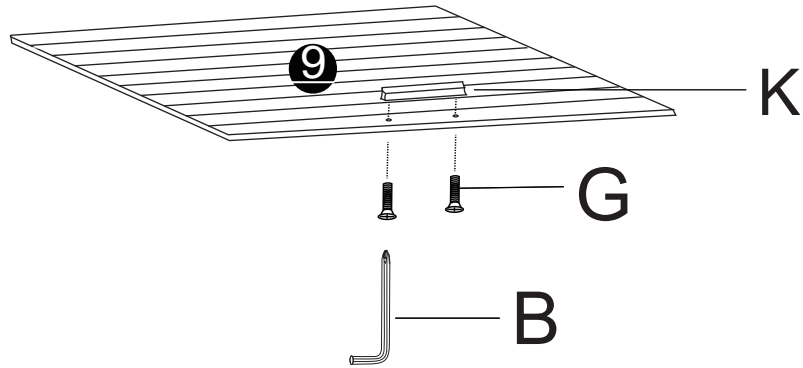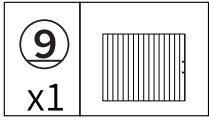


Step 6

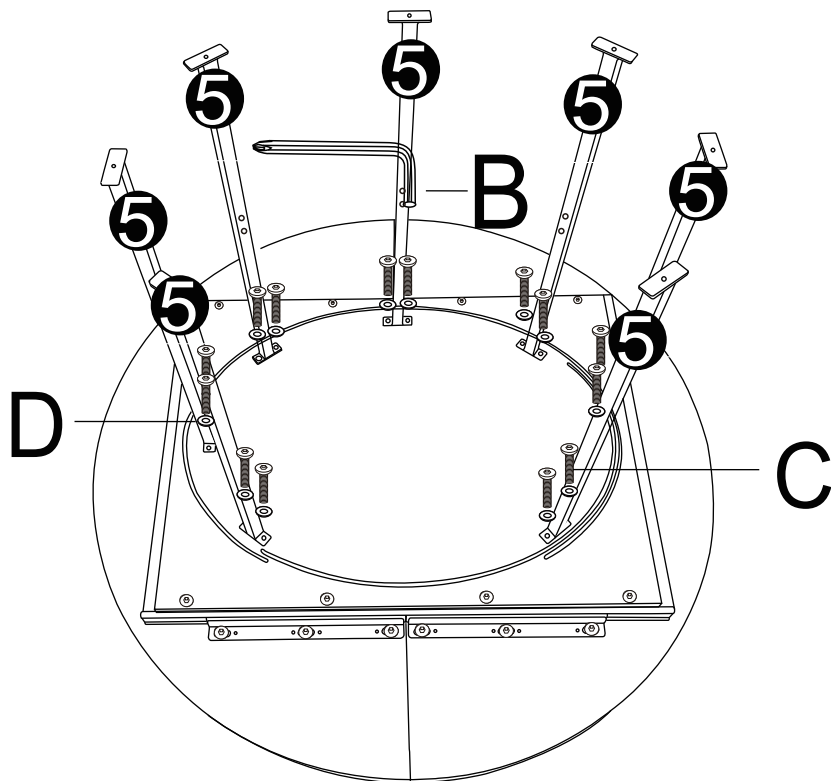

Assembly Instructions


Step 7

⑥ x1	
⑦ x2	
B x1	
C x7 M6x16mm	
D x7 M6x16x1.5mm	

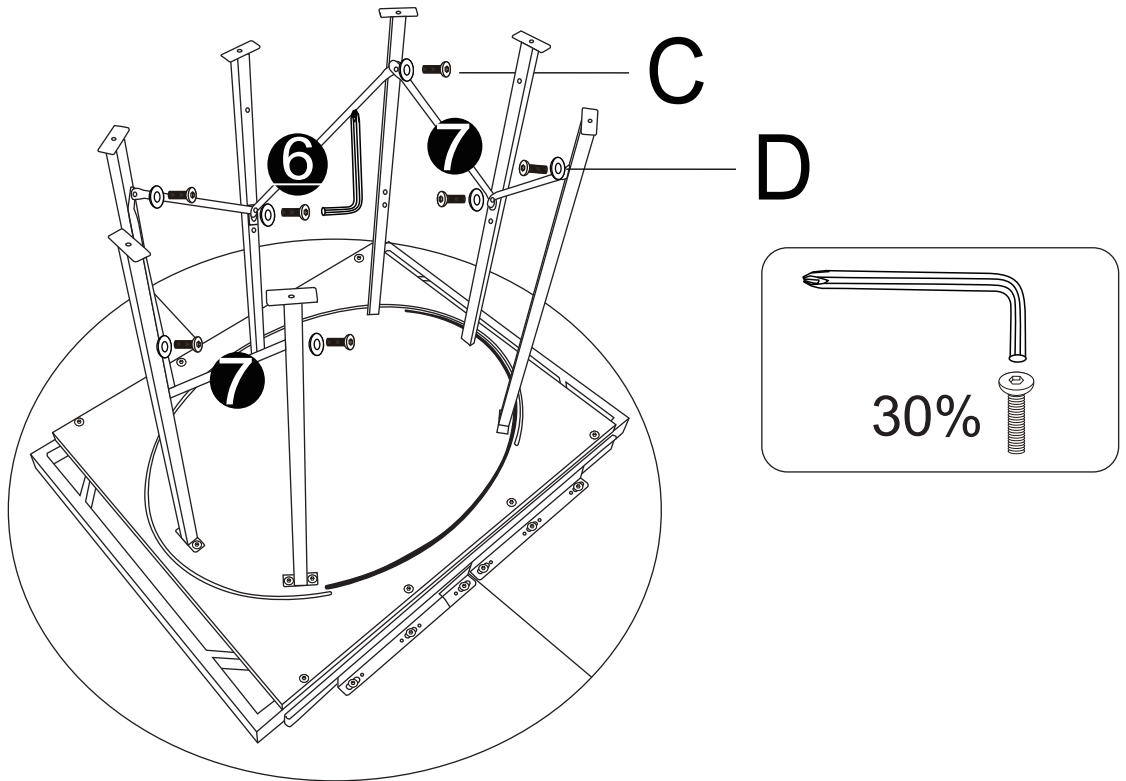

Step 8





⑧ x4	
B x1	
C x4 M6x16mm	
D x4 M6x16x1.5mm	
F x1	

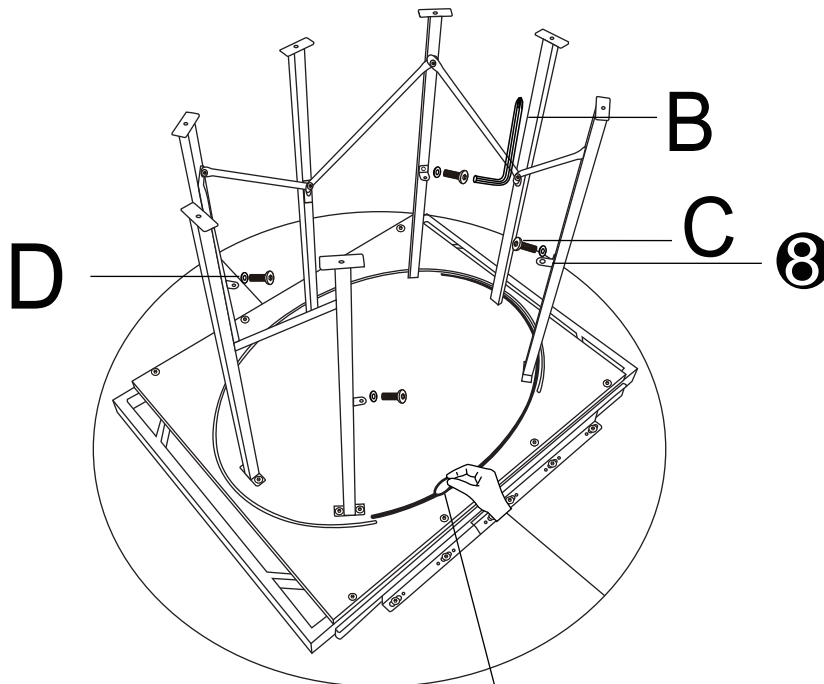

F After aligning the holes, lower it and lock it with C. Then, apply a circle of G wax blocks to the groove of the track






Assembly Instructions

Step9

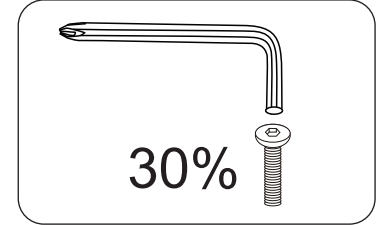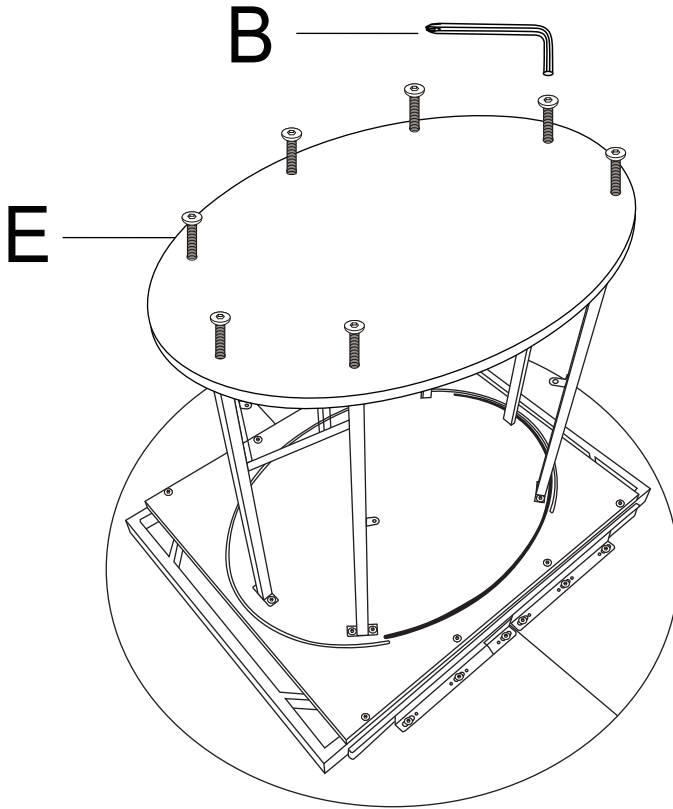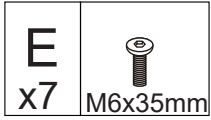



Tighten the screw only 30% and do not over-tighten.

Step10

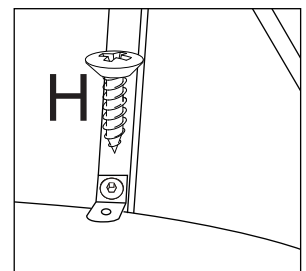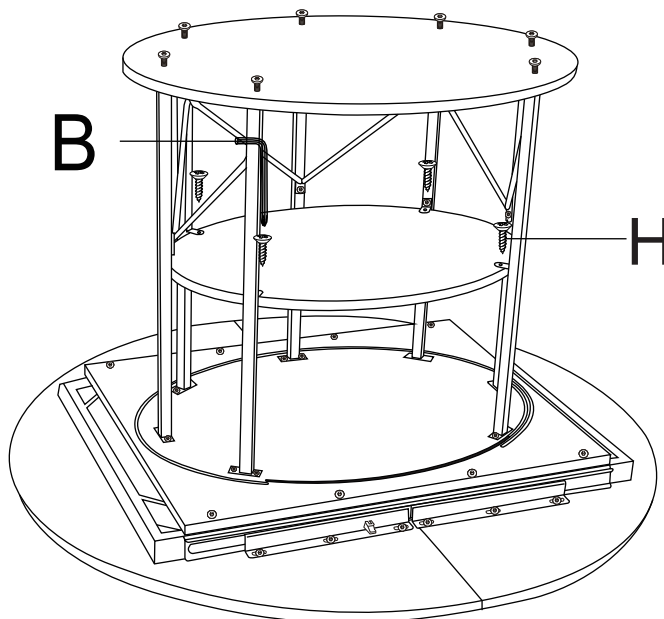


Assembly Instructions

Step11

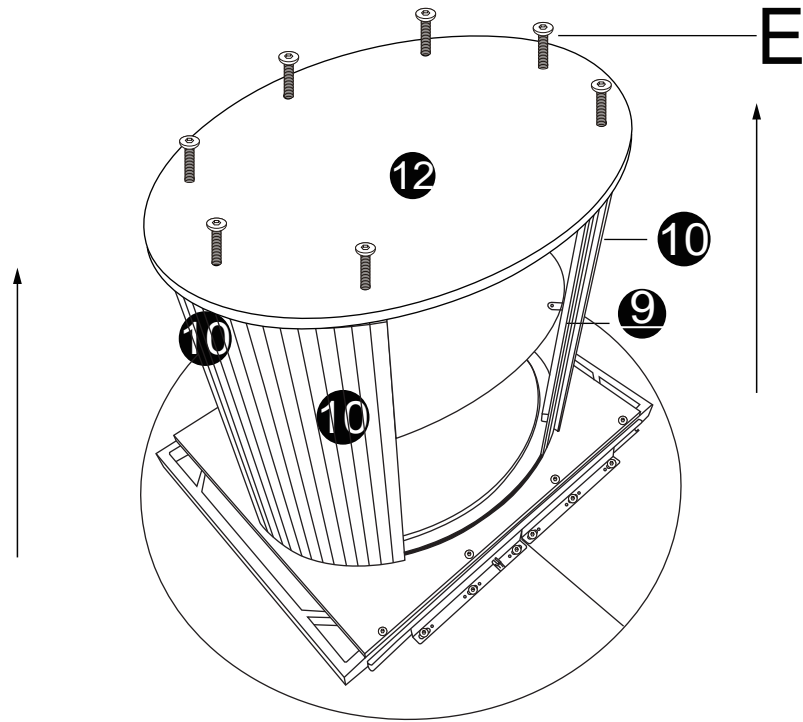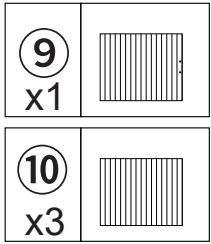



Step12

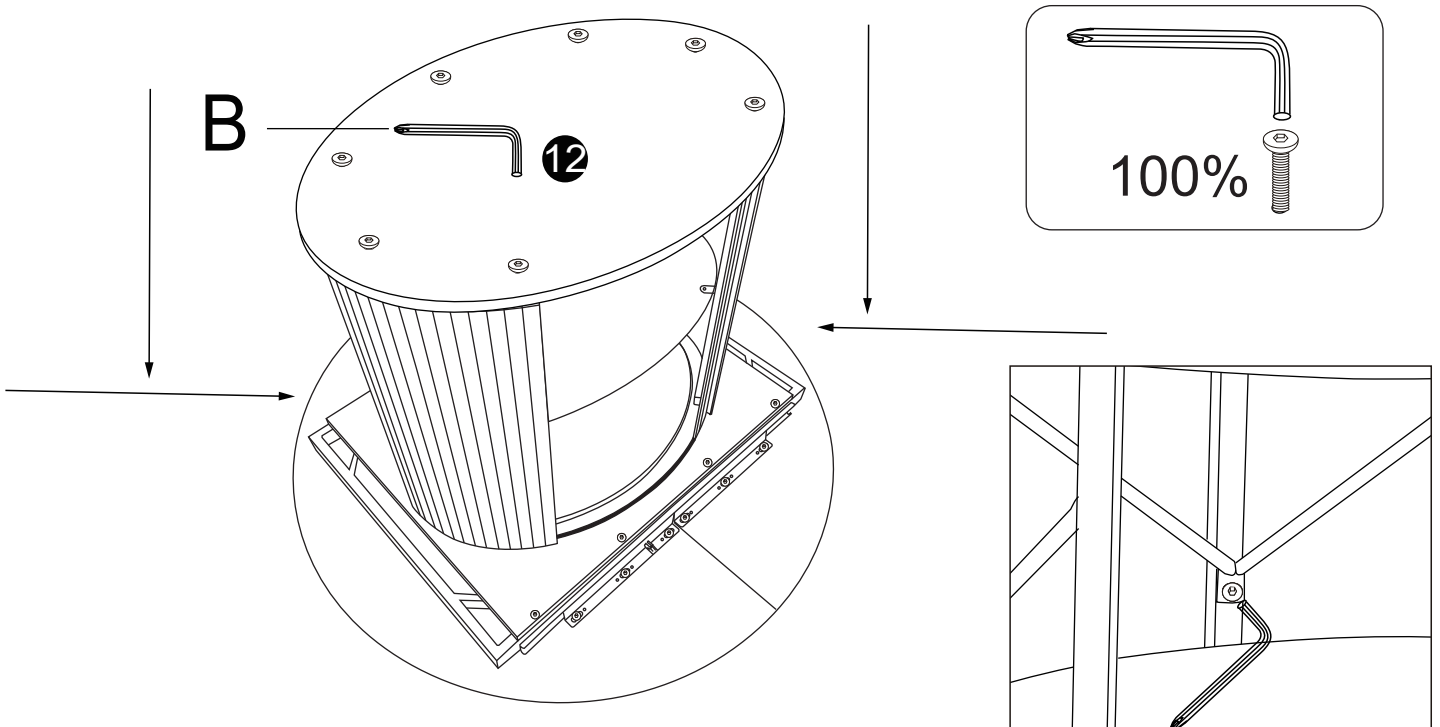




After adjusting the upright boards and inserting them into the slots, tighten the screws.

Assembly Instructions

Step13

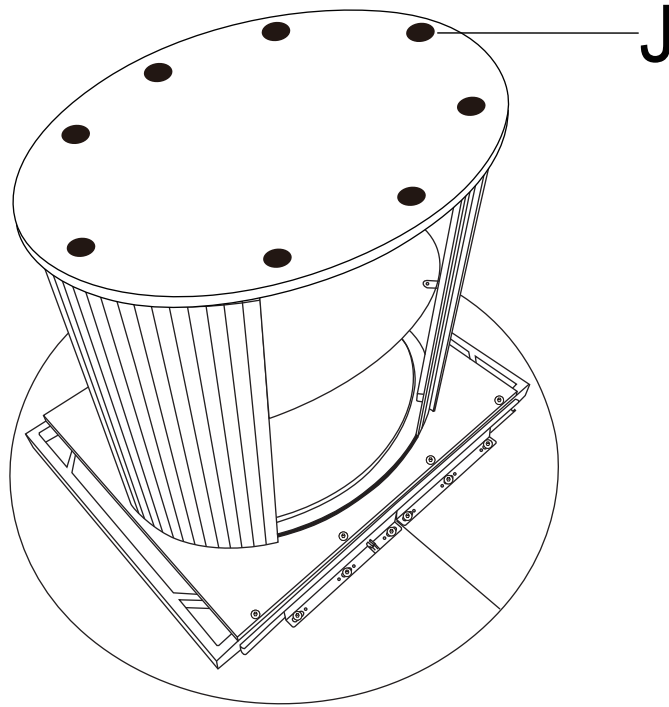

Step14

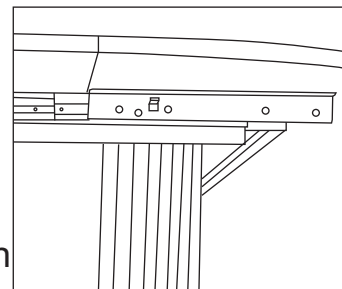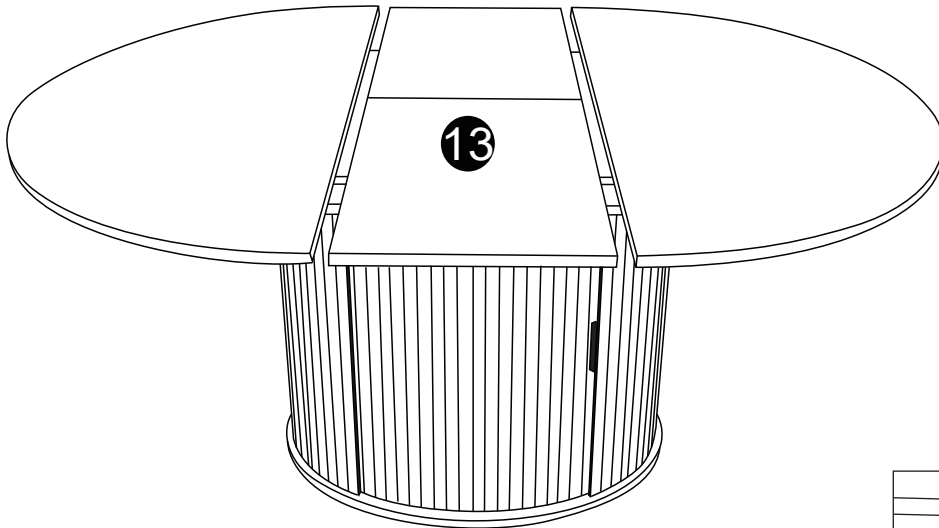


Slide rail lock, lock after pressing downward, unlock by raise the button

Assembly Instructions

Step15

The middle panel can be folded and stored

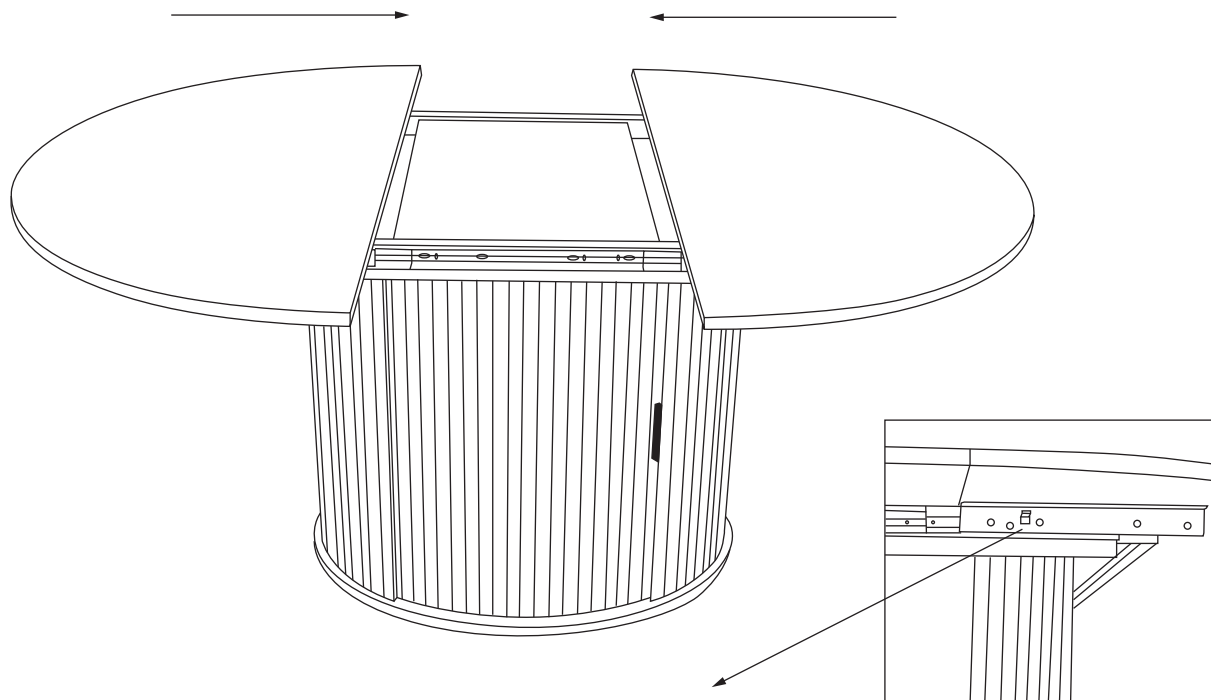

Slide rail lock, lock after pressing downward, unlock by raise the button