

## **Assembly Instruction**

INSTRUCTION DE MONTAGE MONTAGRANLEITUNG SAMLEVÆJLEDNING

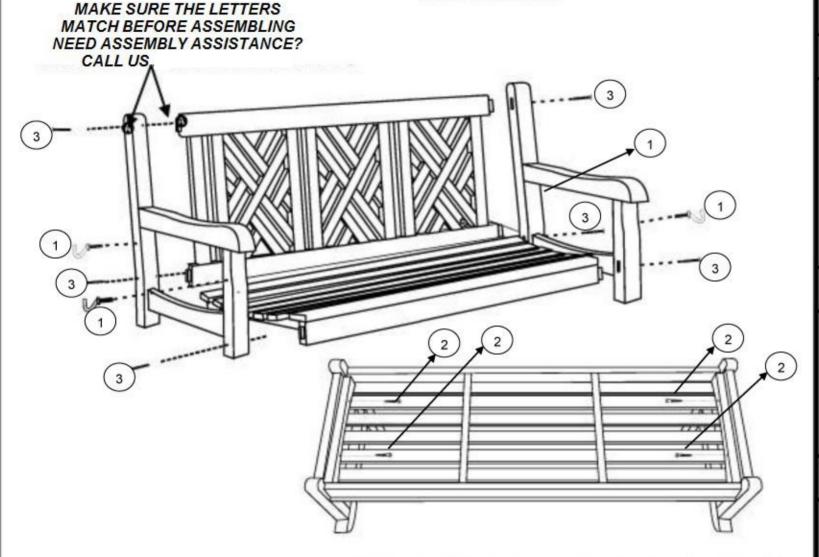


Make sure to use Gorilla Glue (Not Included) on all wood joints before assembly


## Hardware



2. Screw 40 mm (4 Pcs)



Tool



Socket Wrench 4m/m Ht

**Total Section** 

4 Section