


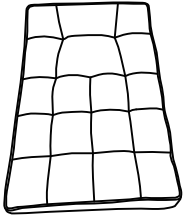












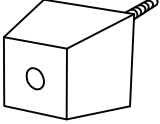


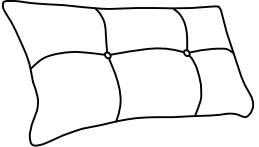

1. We highly value customer's user experience. Please contact us freely if there's any parts missing or damaged. We will provide professional advice or efficient customer support in 24 hours.
2. Item will come with 2 boxes, box A and box B. We suggest you install the whole item after receiving both boxes.
3. We recommend tighten all the bolts after you put all the bolts into the holes.

Assembly instructions

Box A Parts List

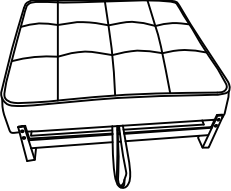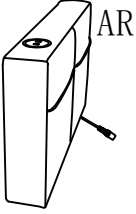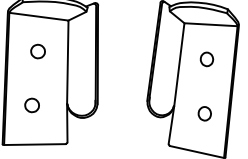

<div>A</div> <div>AL</div>  <div>1pc</div>	<div>B</div>  <div>1pc</div>	<div>C</div>  <div>4pcs</div>	<div>D</div>  <div>1pc</div>
---	---	---	---

Box B Parts List

<div>E</div>  <div>1pc</div>	<div>F</div> <div>AR</div>  <div>1pc</div>	<div>G</div>  <div>1pc</div>	<div>H</div>  <div>1pc</div>
<div>I</div>  <div>1pc</div>	<div>J</div>  <div>1pc</div>	<div>K</div>  <div>1pc</div>	<div>L1</div> <div>L2</div>  <div>1pc</div> <div>1pc</div>
<div>M</div>  <div>4pcs</div>	<div>N</div>  <div>4pcs M6*30mm</div>	<div>O</div>  <div>18pcs M6*20mm</div>	<div>P</div>  <div>6pcs M8*60mm</div>
<div>Q</div>  <div>22pcs M6</div>	<div>R</div>  <div>6pcs M8</div>	<div>S</div>  <div>1pc</div>	


Step 1 Please follow the accessories direction in the figure for installation. (The longest side is the side where screws need to be installed).

		2
L		2
O		4
Q		4
S		1

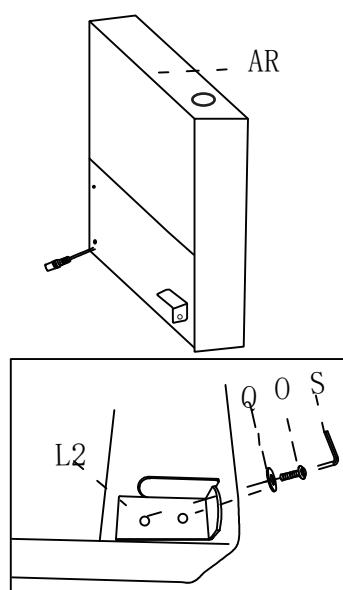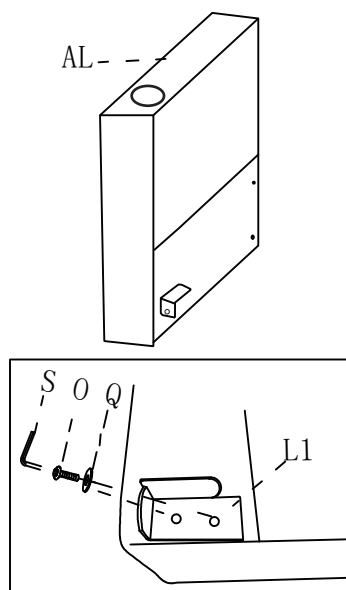



Step 2 Put the screws into the holes one by one. Please do not lock any one of the 3 screws before they are all aligned. After aligning them all and then tighten them with an electric screwdriver.

AL		1
B		1
P		3
R		3
S		1

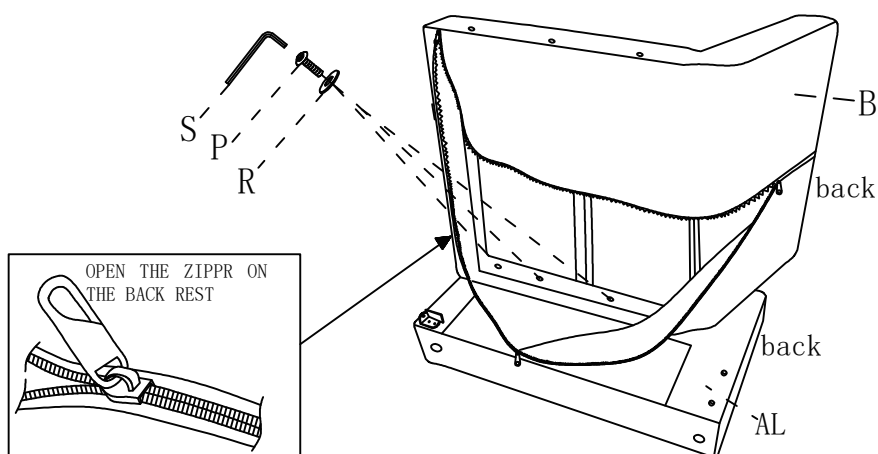




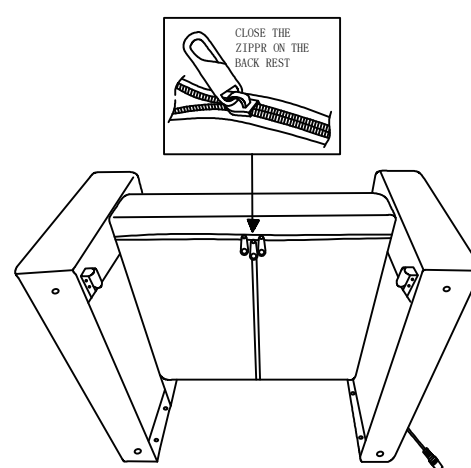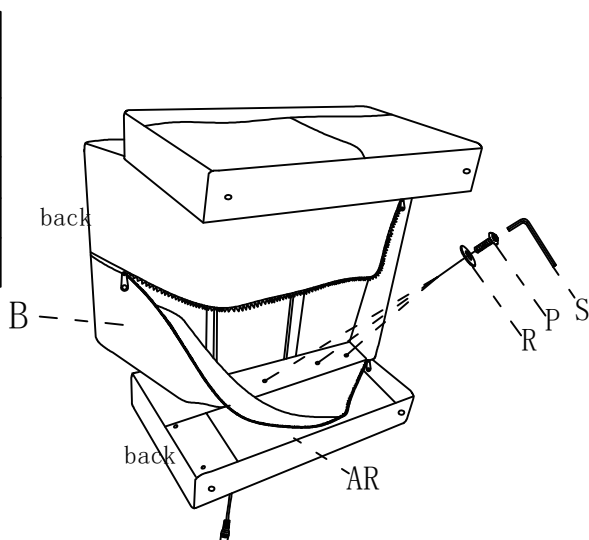


Step 3

AR		1
B		1
P		3
R		3
S		1






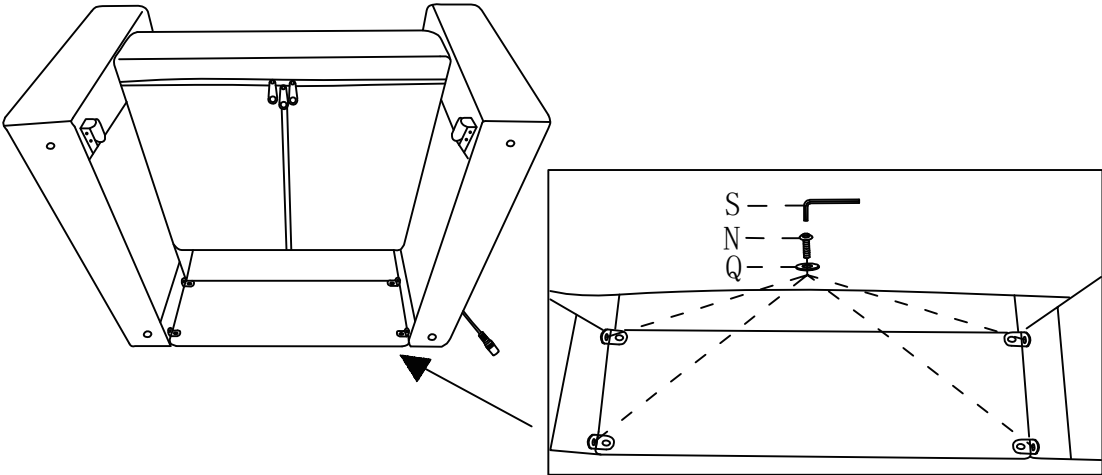
Step 4

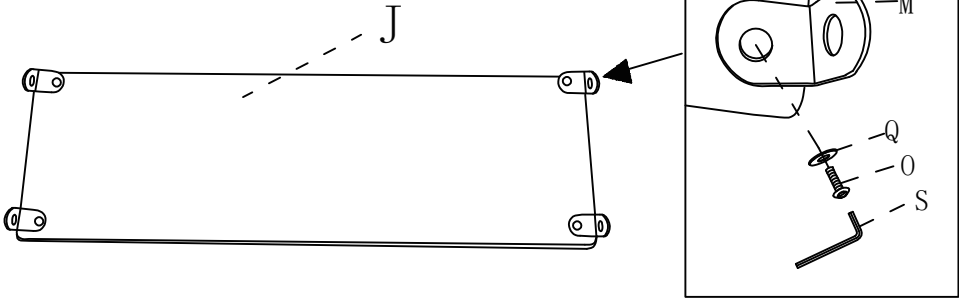J		1
M		4
O		4
Q		4
S		1





Step 5

N		4
Q		4
S		1










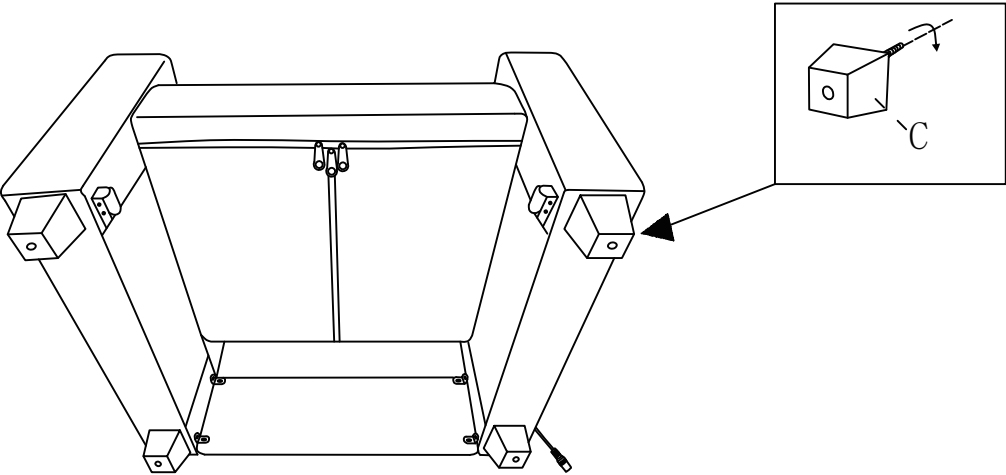
Step 6

C		4
---	---	---





Step 7

H		1
O		6
Q		6
S		1

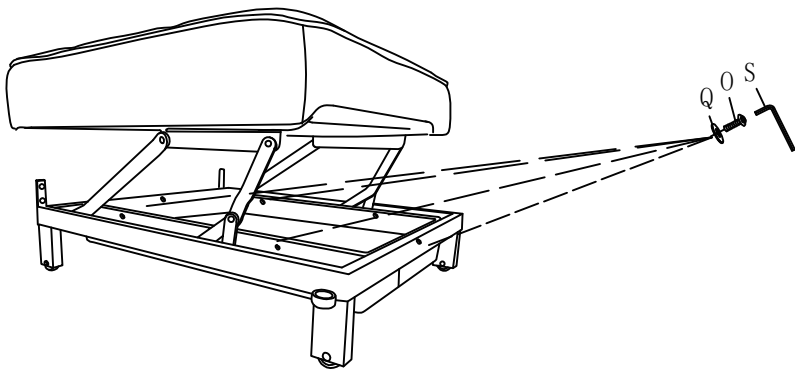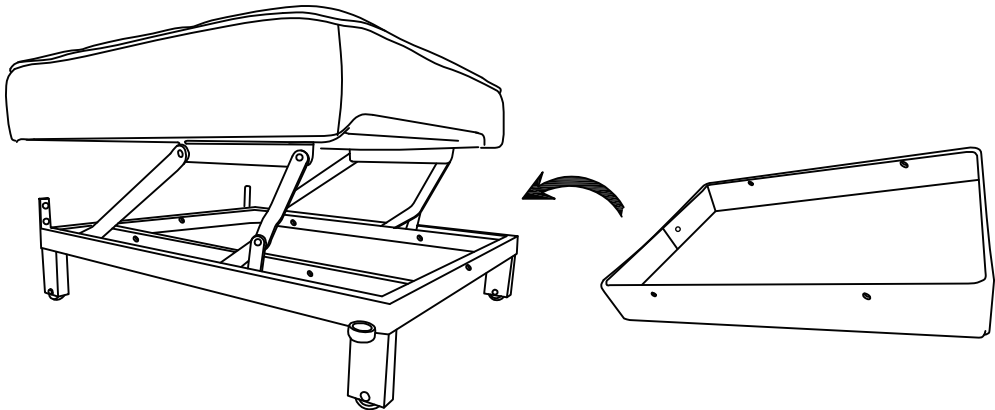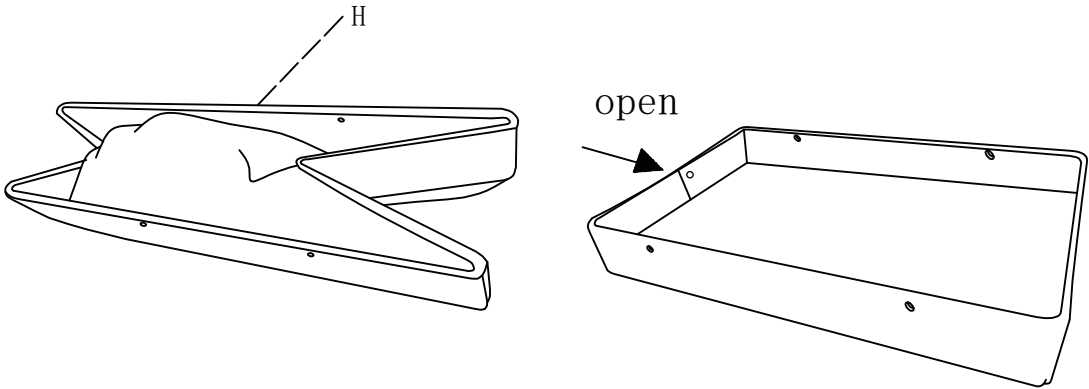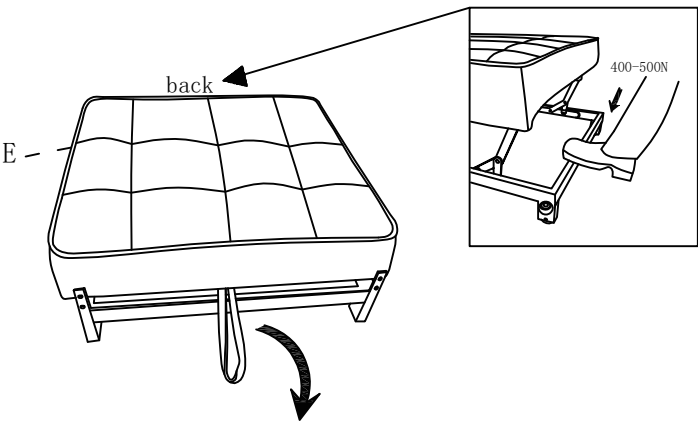


Step 8





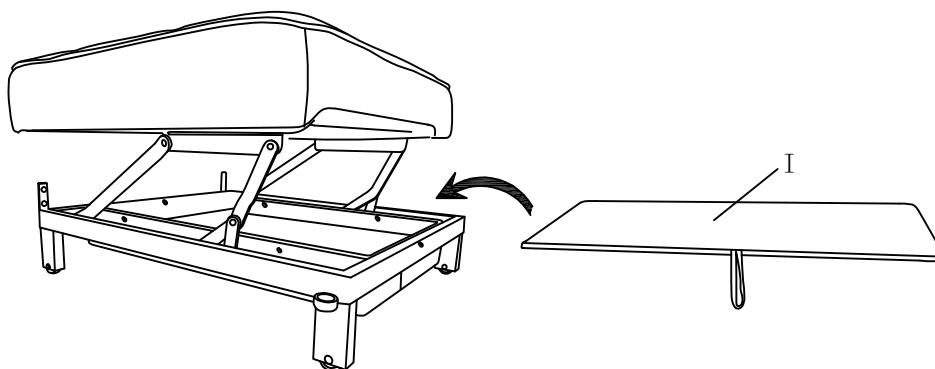
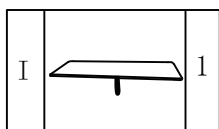


Step 9


E		1
K		1
O		4
Q		4
S		1

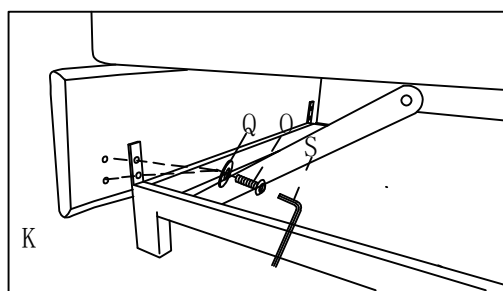



Step 10 Please pay attention to the part K installation direction, this part is not next to the bottom, but 3.9 " height from the ground.

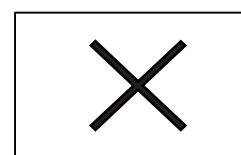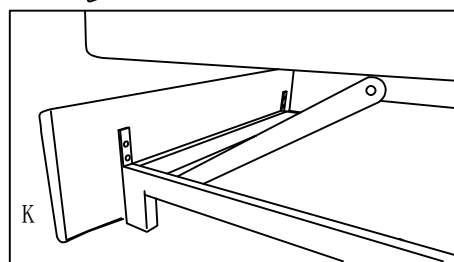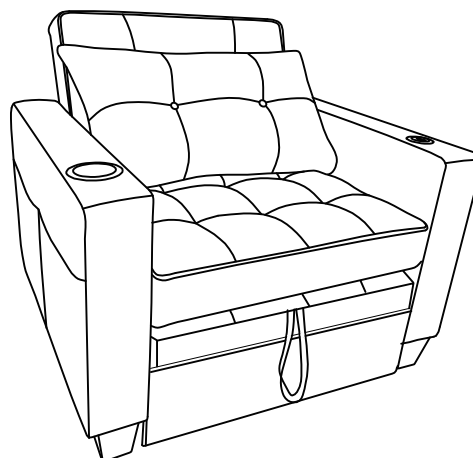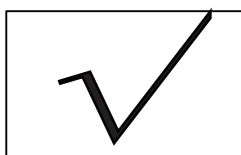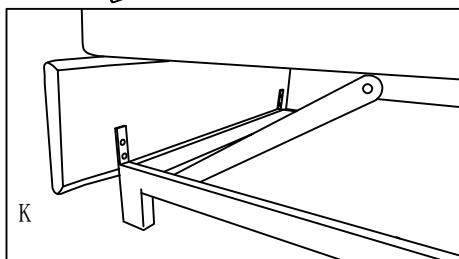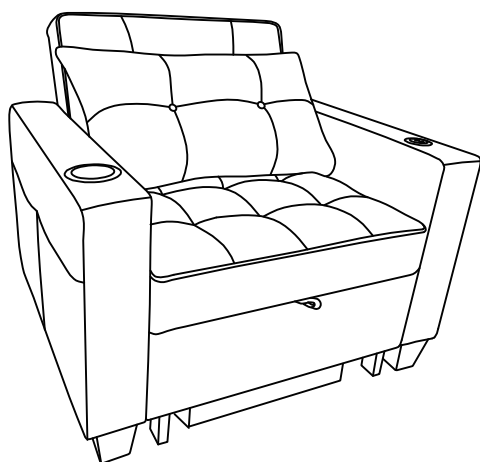

Step 11

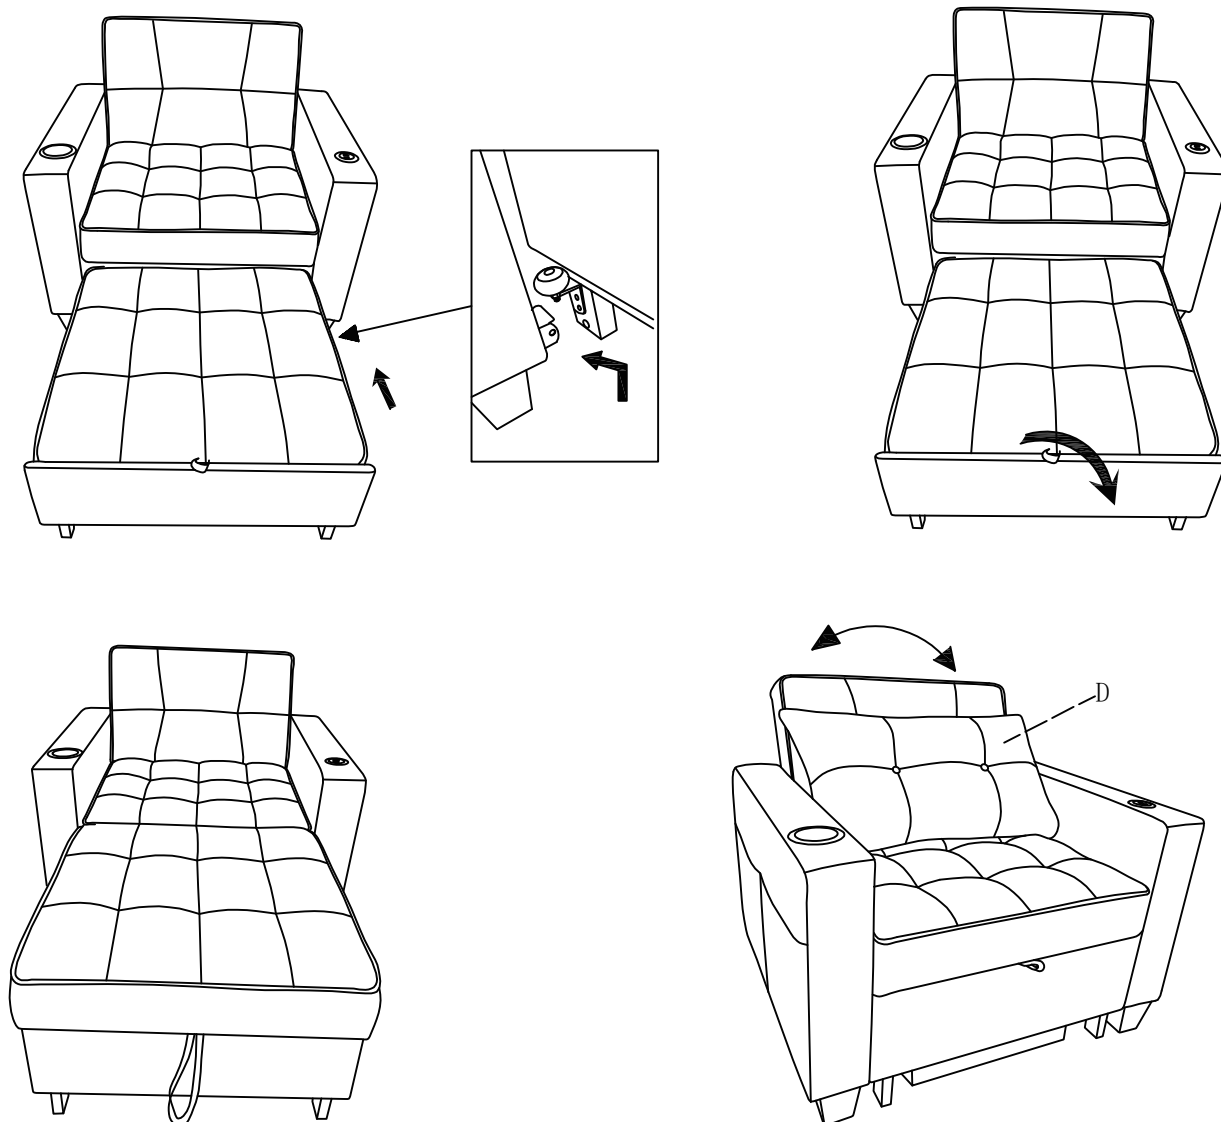


Step 12

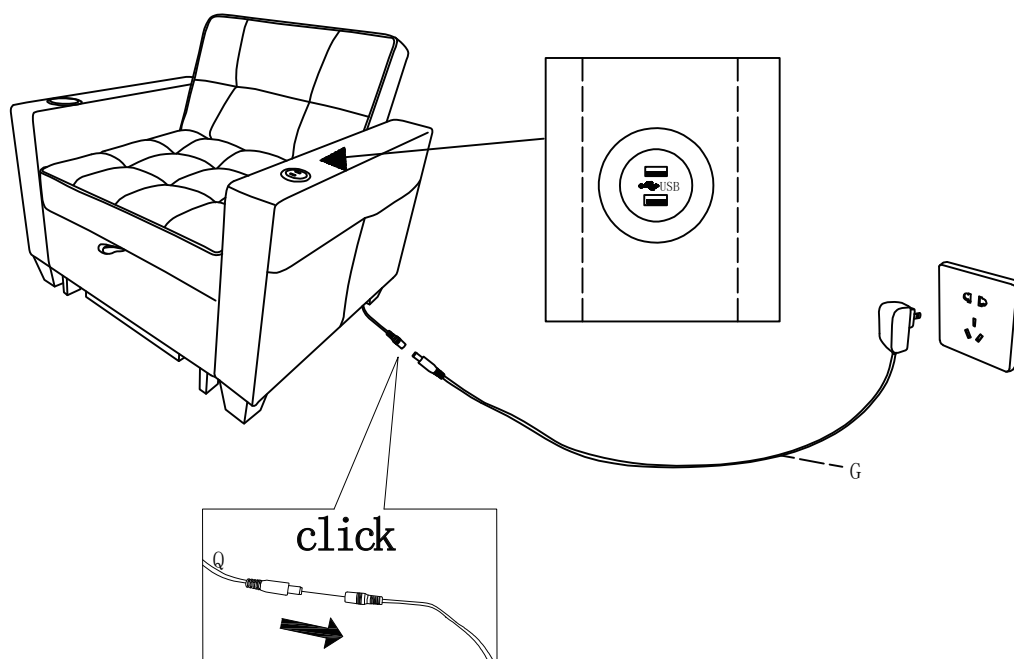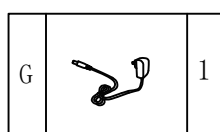


HOW TO REPLACE USB ?


Step 1

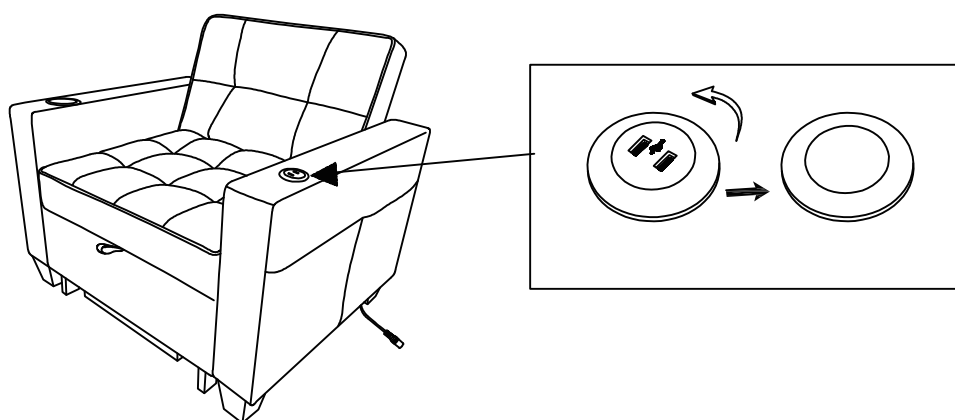


Step 2

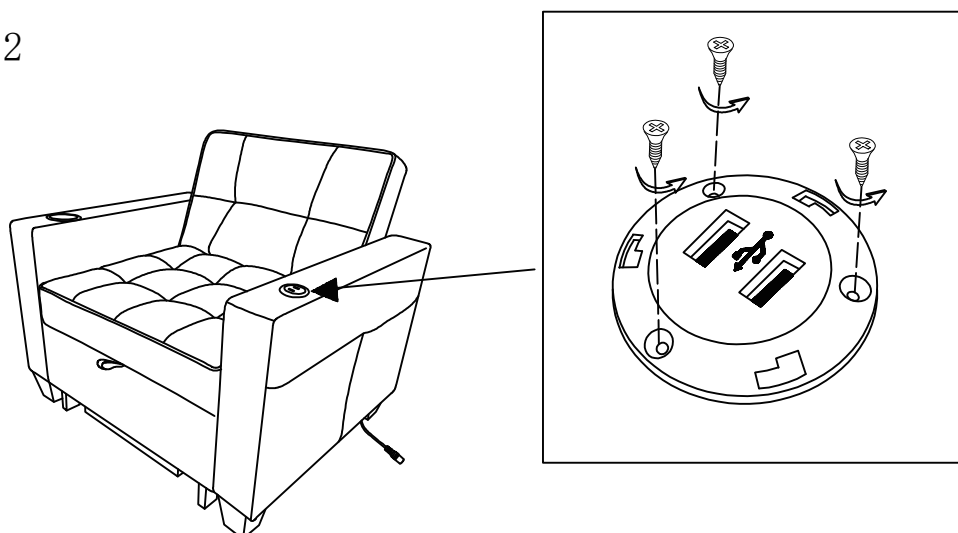


Step 3

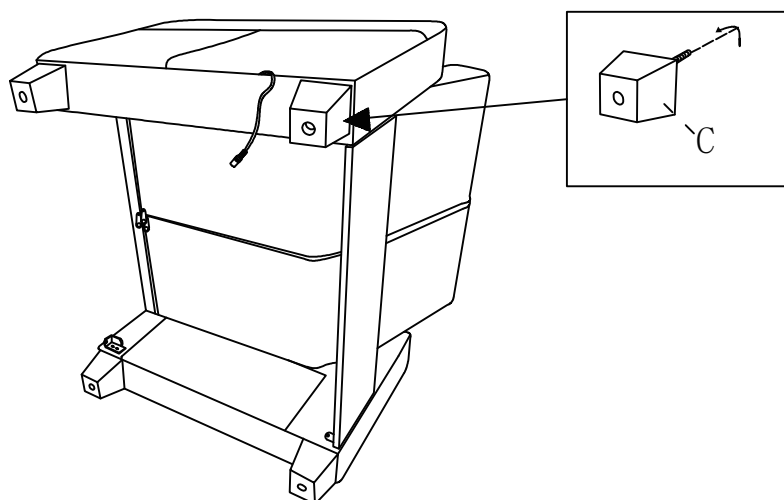


Step 4

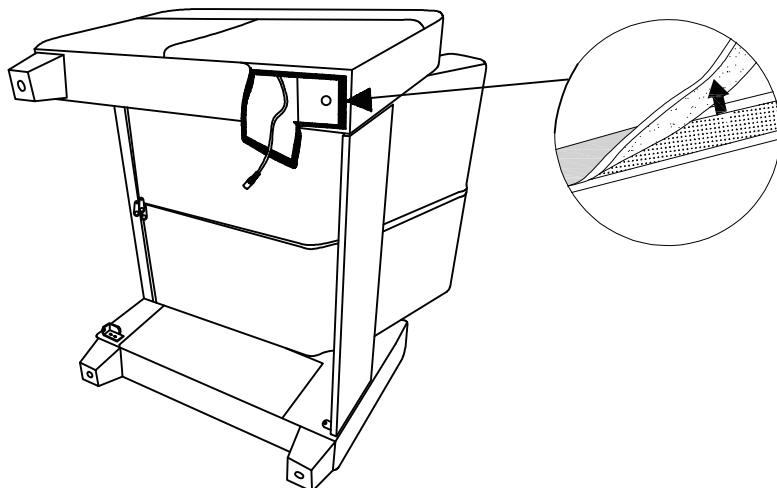


Step 5

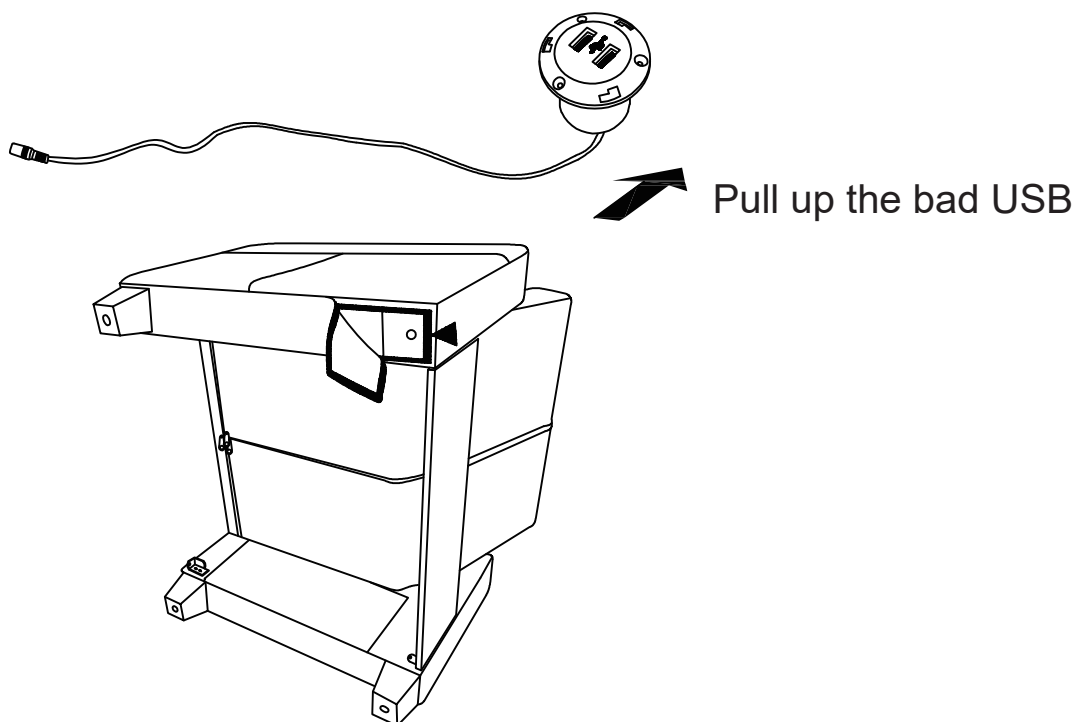


Step 6

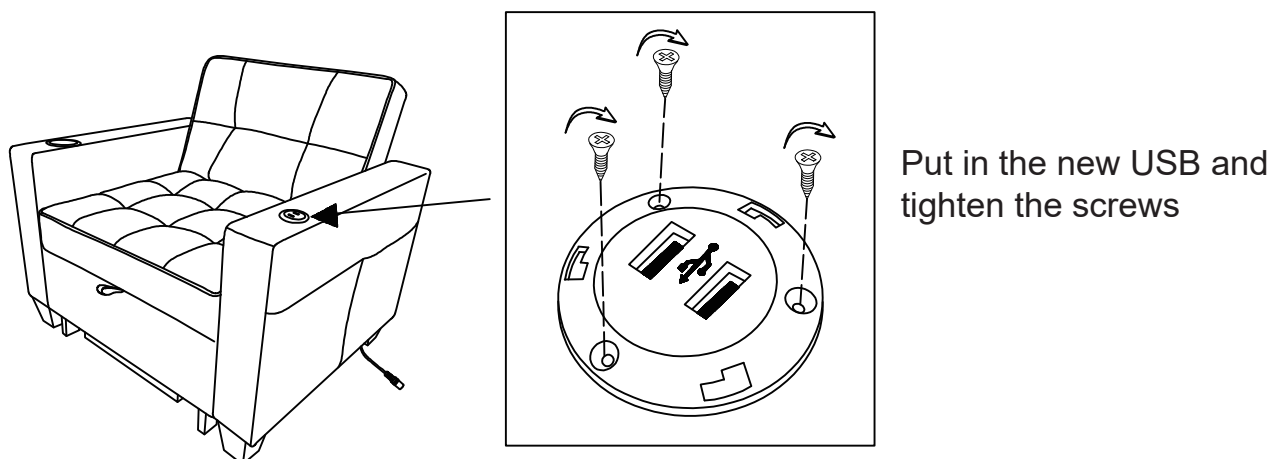


Step 7

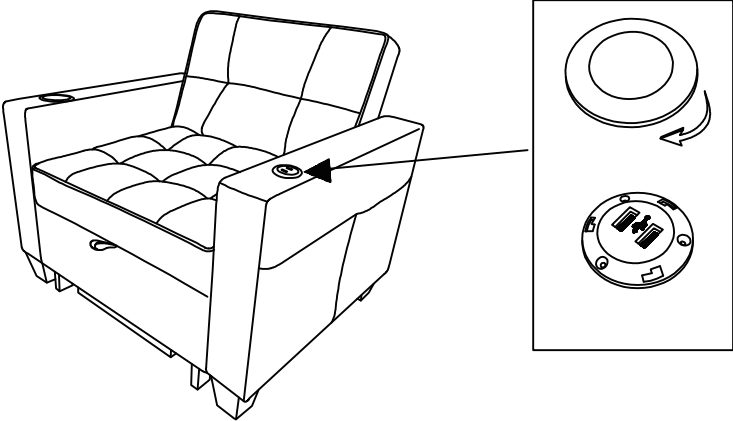


Step 8

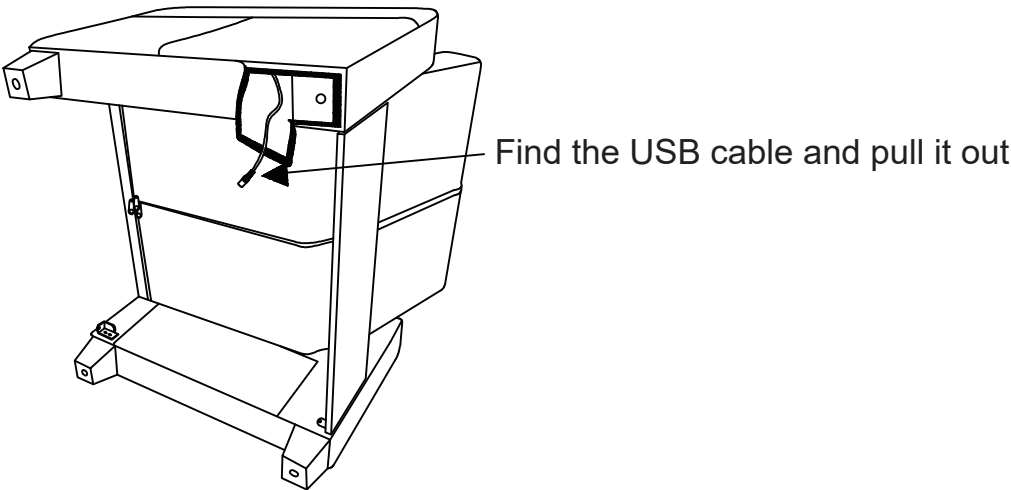

Step 9

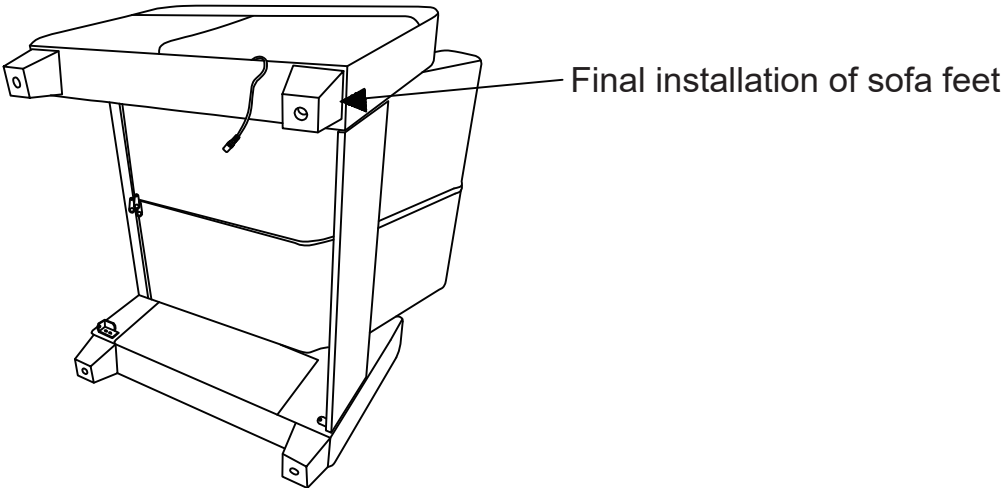

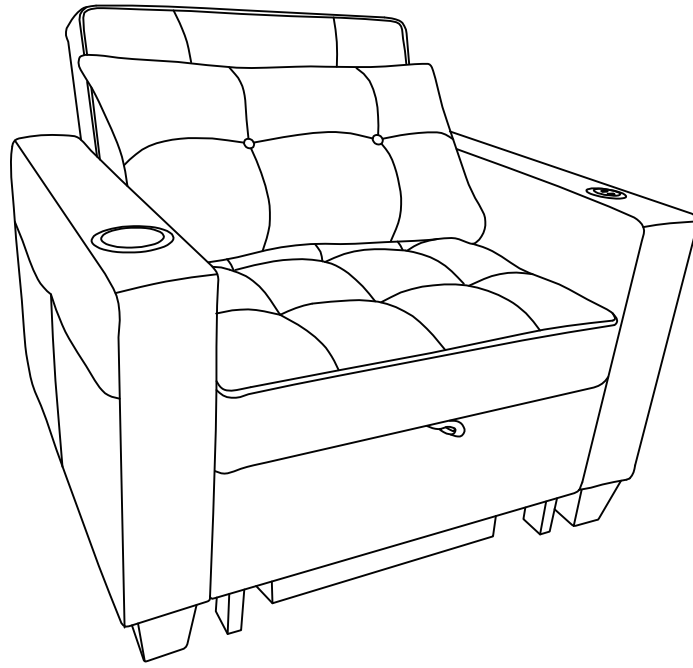

GUARANTEE

This sofa chair is backed by 12 MONTHS product warranty.