
Installation Manual

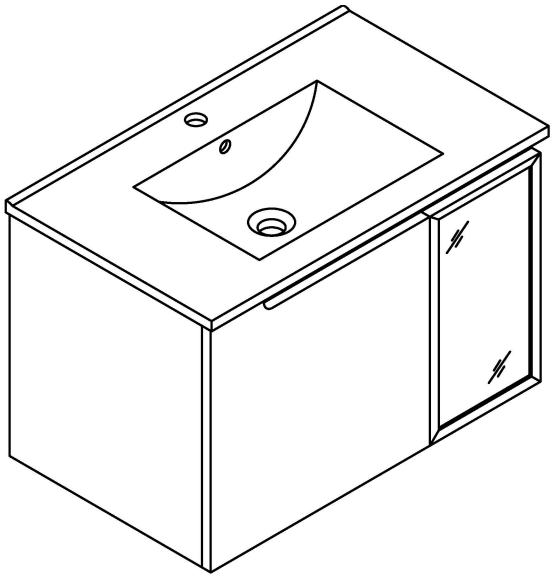


Thank you for shopping with us!


We encourage you to take a few minutes to go through this booklet. It contains important information on installation and care tips to keep your furniture looking as good as new.

Hardware


NO.	Draw	QTY
A	 Screws Ø4x14mm	40
B	 Two-in-one connector	17
C	 Two-in-one connector	17
D	Wood plug	4
E	 Plastic anchor(Ø10mm)	2
F	 Screws for fix on the wall	2
G	 Bracket (53x70x44mm)	2
H	 Bracket (19x19x35mm)	2

NO.	Draw	QTY
I	 Screws M4x8mm	4
J	 Aluminum door hinges (Full cover)	2
K	 Hinges (Full cover)	2
L	 Anti-collision gasket (0.5mm)	2
M	 Anti-collision gasket (2mm)	2
N	 Screwdriver	1


Recommended tools

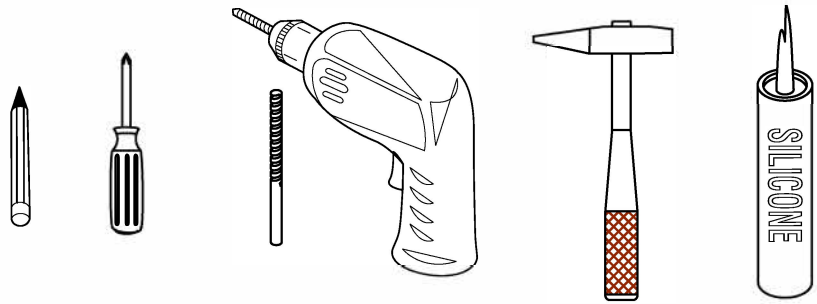


Dimensions

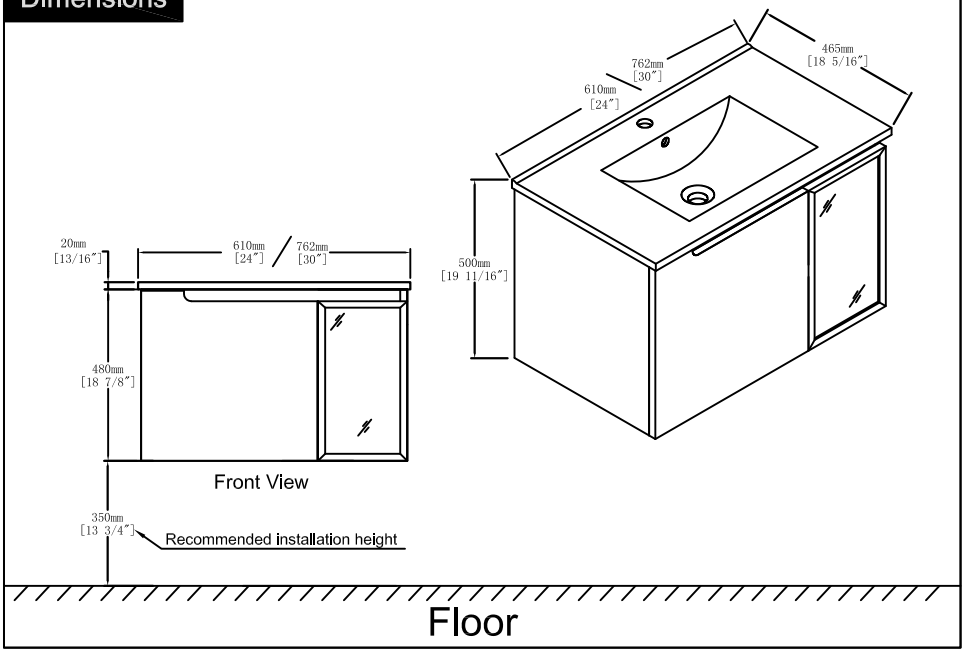


Components

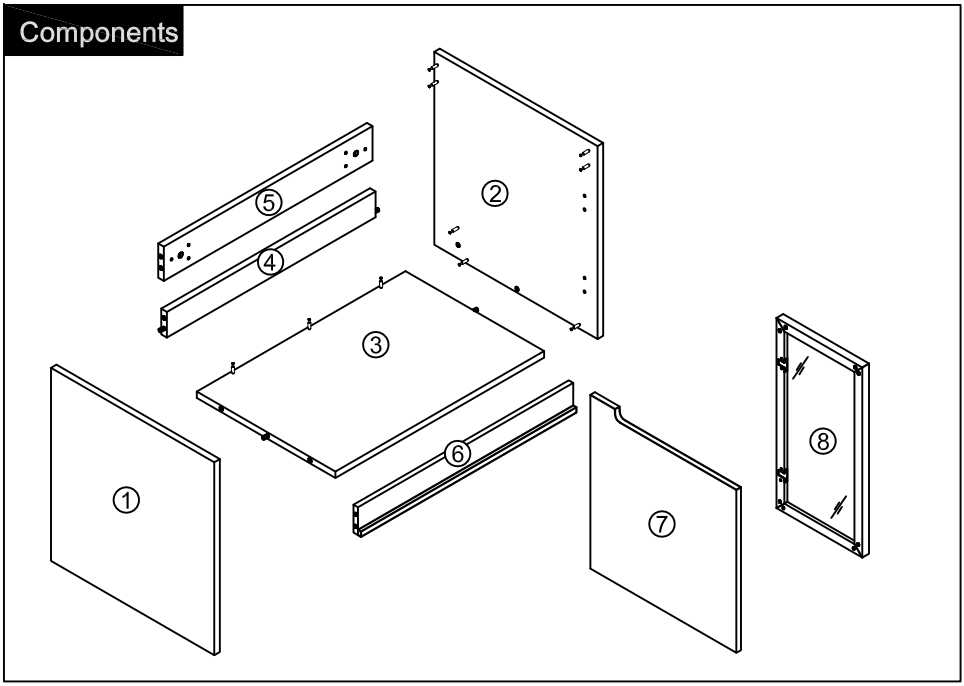


Step 1

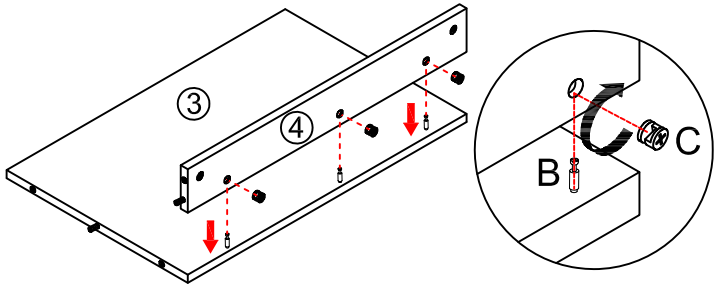


x3
B
x3
C
N

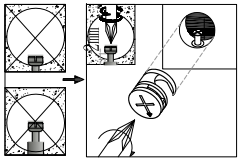

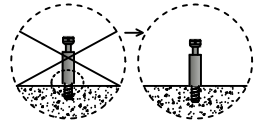



Notes: Screw installation depth as shown

Attention:Cam lock arrow point to the steel rod.

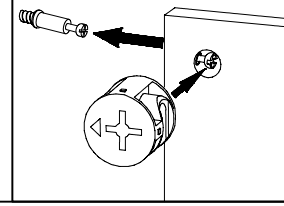


Step 2

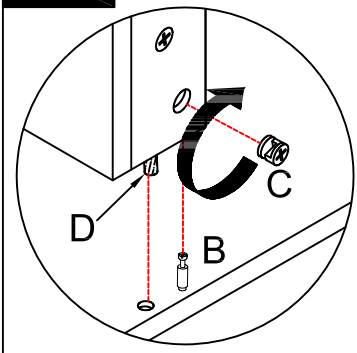


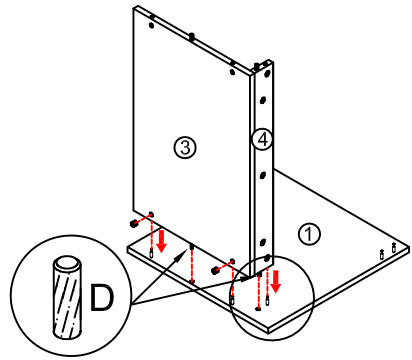


Note:The D parts are used for these two holes

x3
B
x3
C
x2
D
N

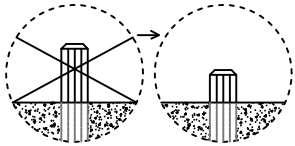

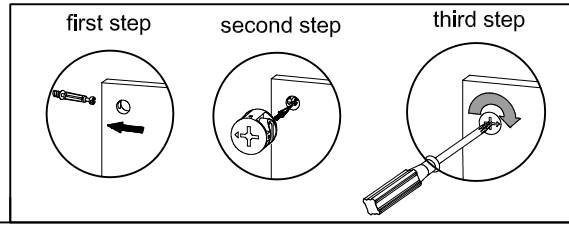


Step 3

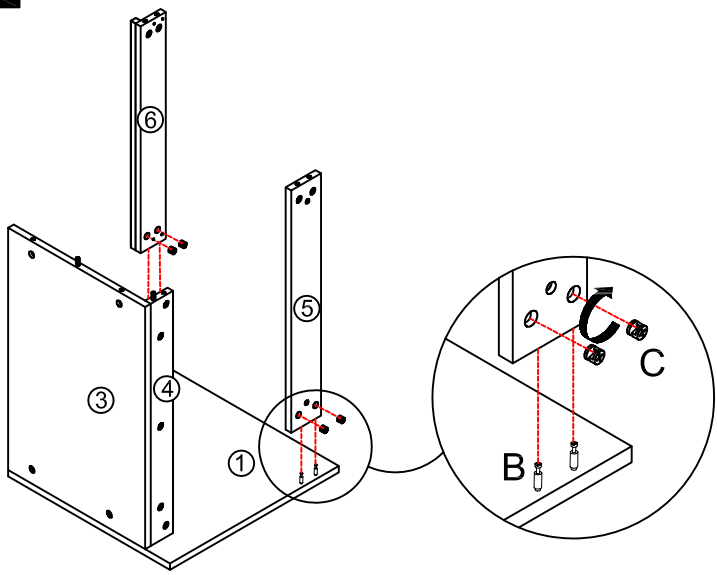

x4
B
x4
C
N


Step 4

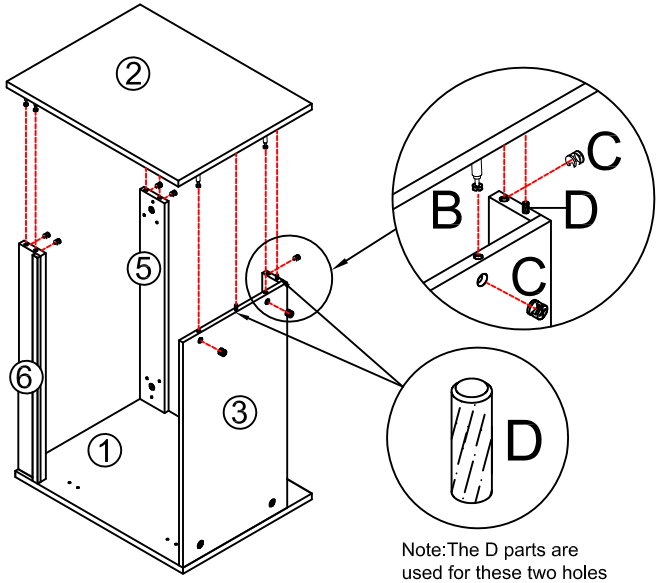

Note:The D parts are used for these two holes


x7
B
x7
C
x2
D
N

Step 5

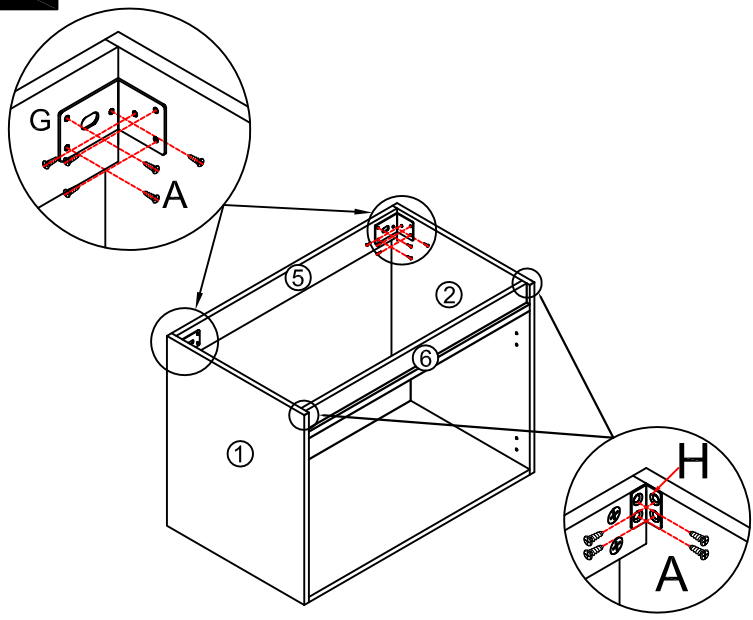


x2
G
x2
H
(∅4 x 14mm)
x20
A
Tool

Step 6

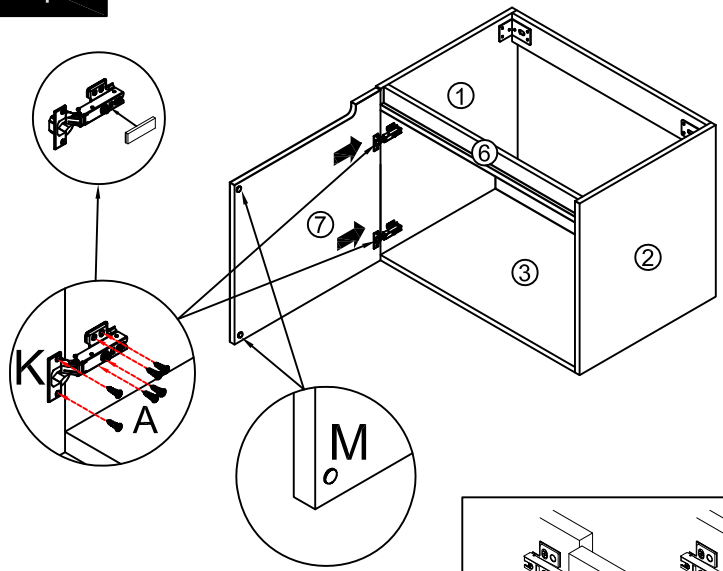


x2
K
(∅4 x 14mm)
x12
A
x2
M
Tool

You can adjust the doors by tightening or loosening the screws on the hinge.

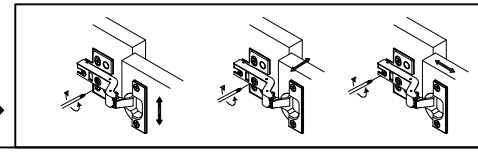

Step 7




J


M4 x 8mm




I

First step: Insert the aluminum frame door hinge J into the hinge groove of the door frame as shown in the diagram.

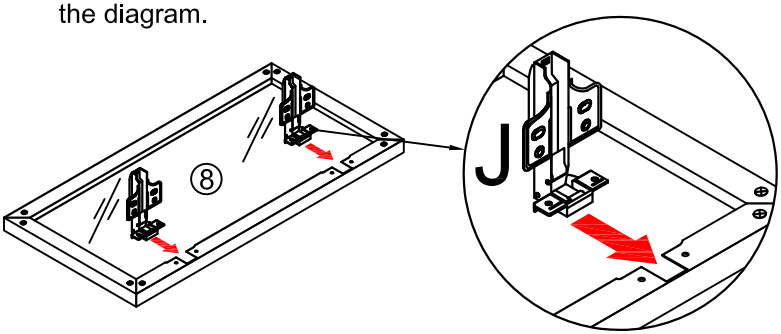


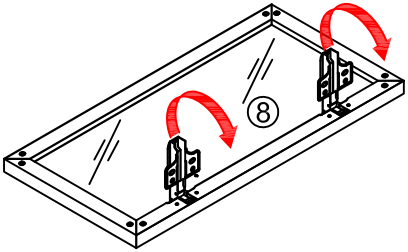

Second step: Flatten the door hinge according to the diagram.

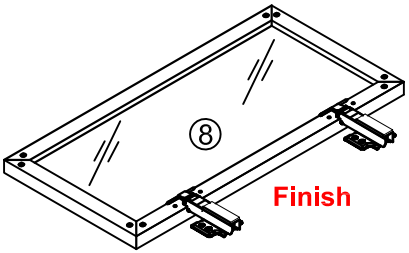


Finish

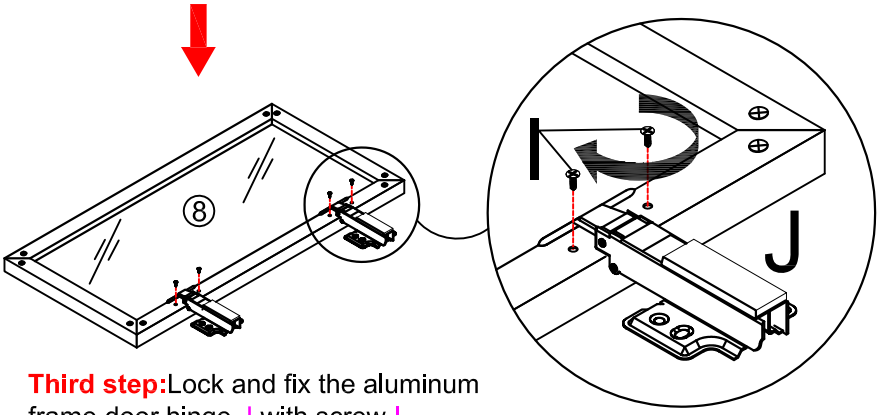


Third step: Lock and fix the aluminum frame door hinge J with screw I.


Step 8

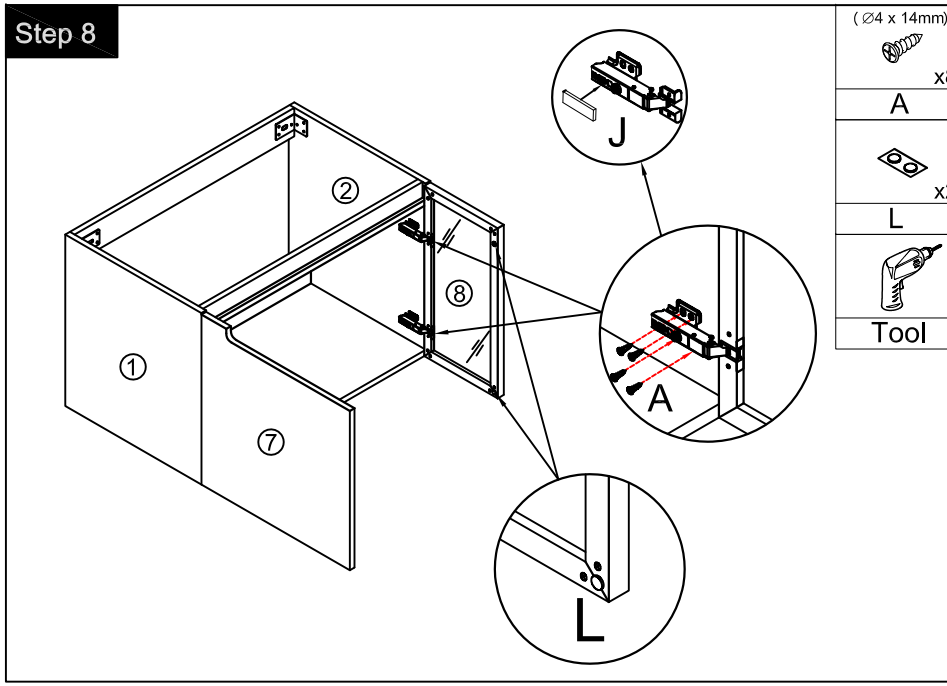


Step 9

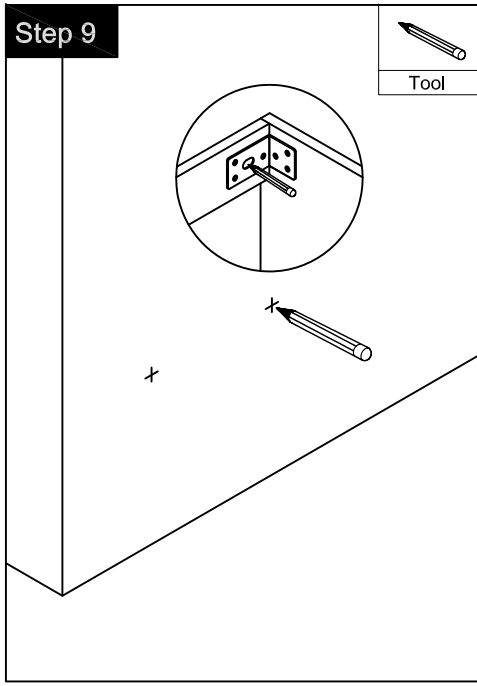


Step 10

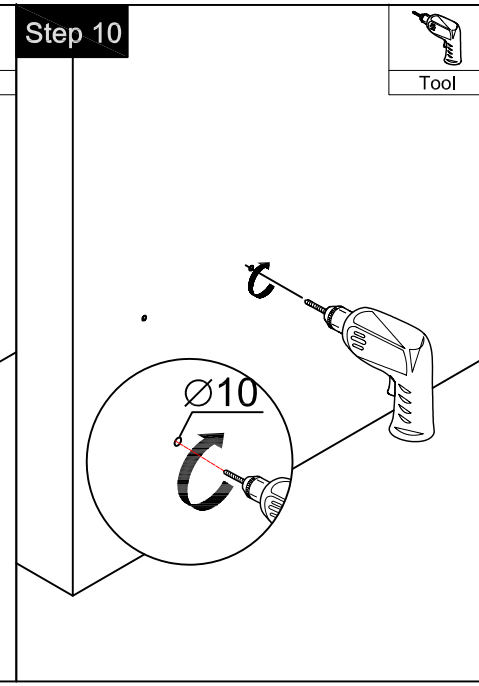


Step 11

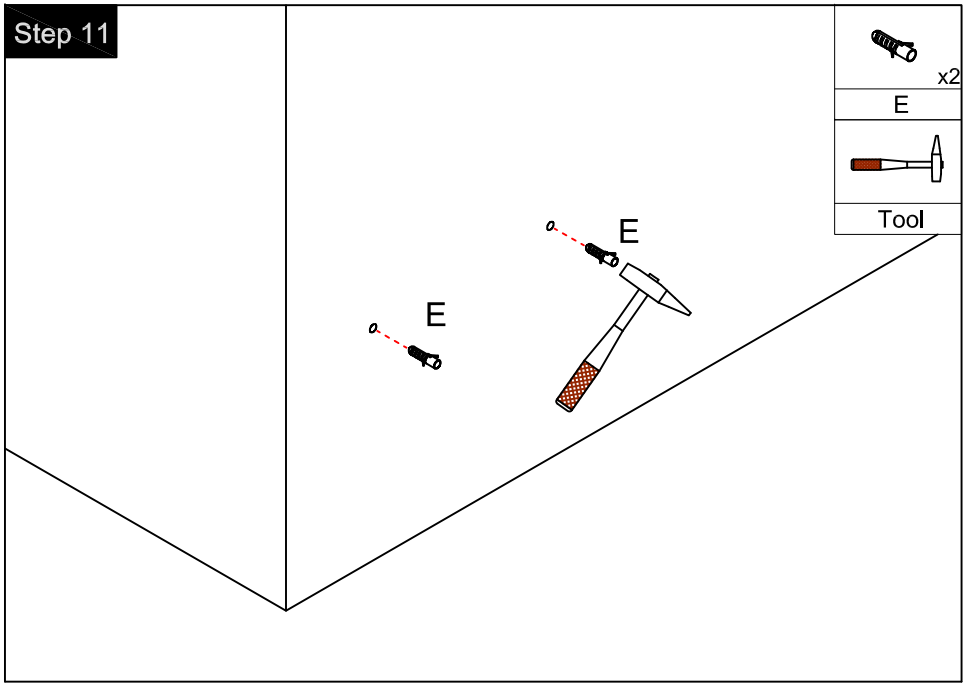


Step 12

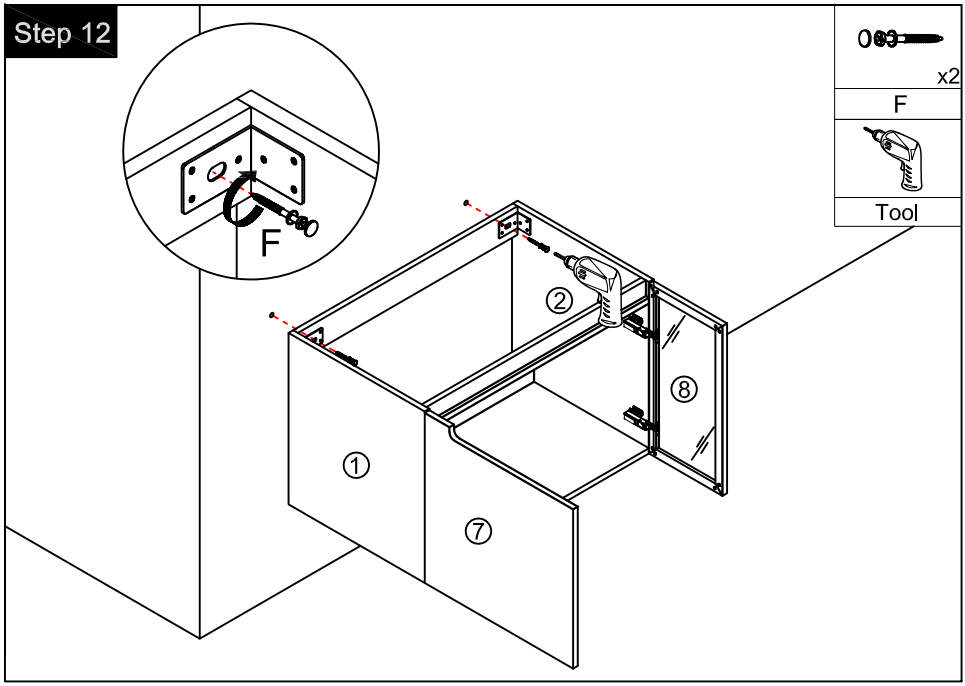


Step 13

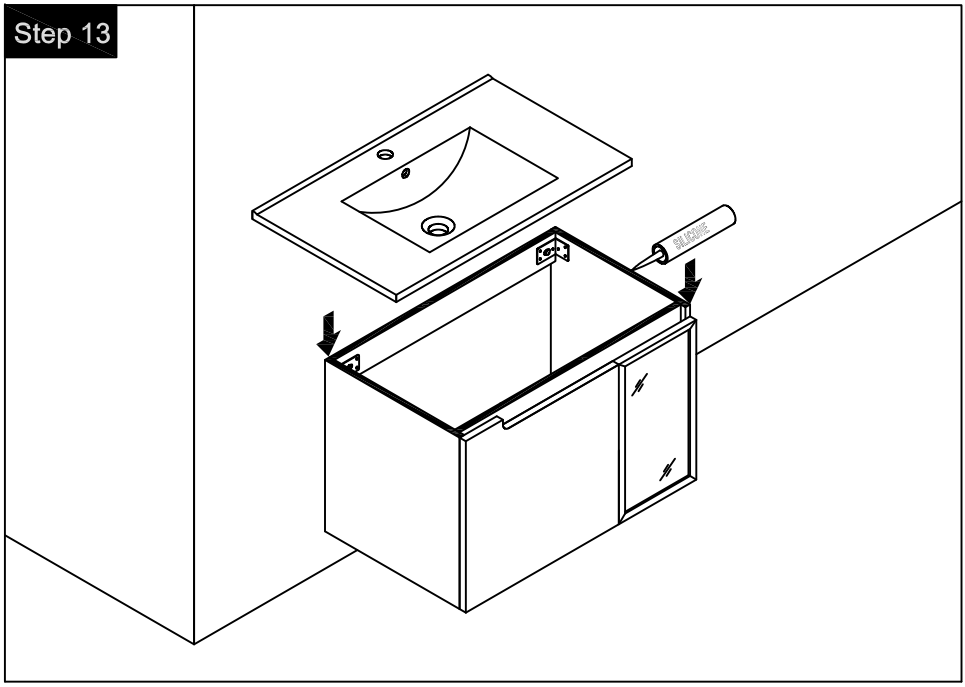

Finished

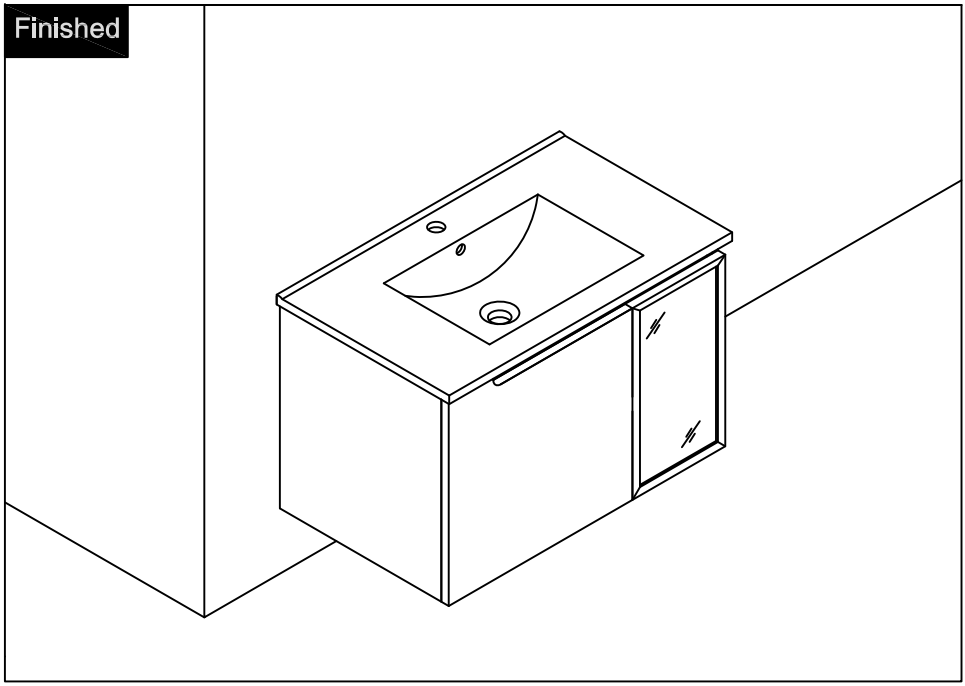

Dimensions

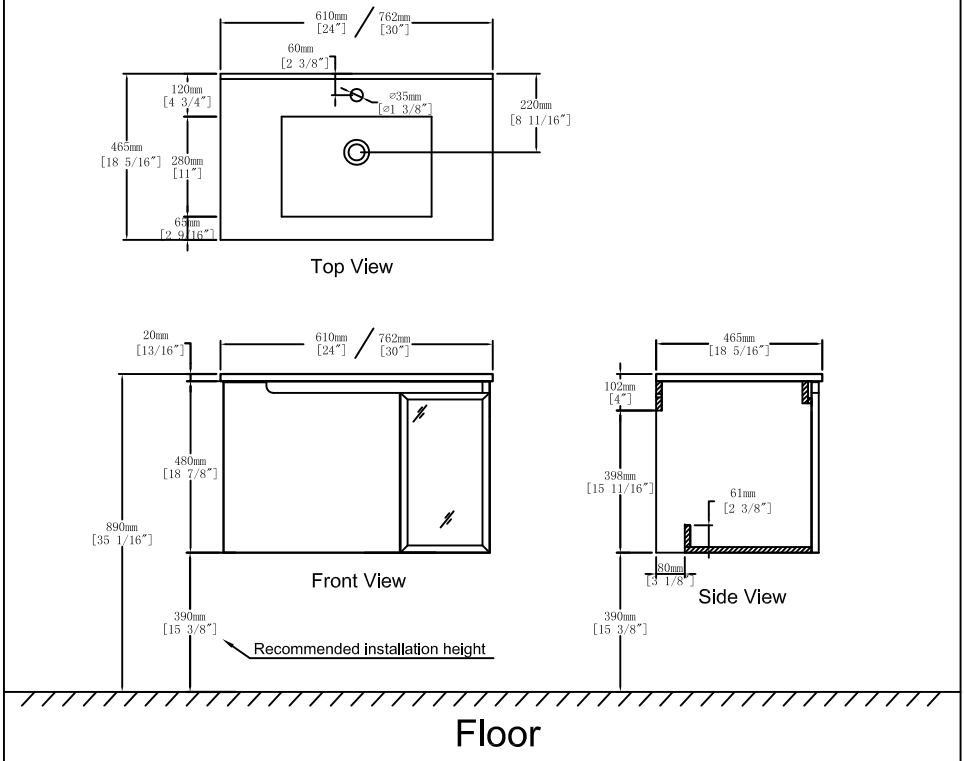

CARE CLEANING AND MAINTENANCE

1.Dust regularly with a soft , dry cloth.

2.Avoid the use of all chemicals household cleaners, abrasives, or cleaners that contain lemon, vinegar, or other acids that may damage the finish.

3.Excessive exposure to sunlight and extreme changes in temperature and moisture can damage wood furniture.

4. The sink is fragile, please pay attention to maintaining its appearance.

5.Do not place hot appliances, such as curling irons and hot hair dryers directly on the countertop. Wipe spills immediately.