



Product Instruction

N704P490439

N704P490440


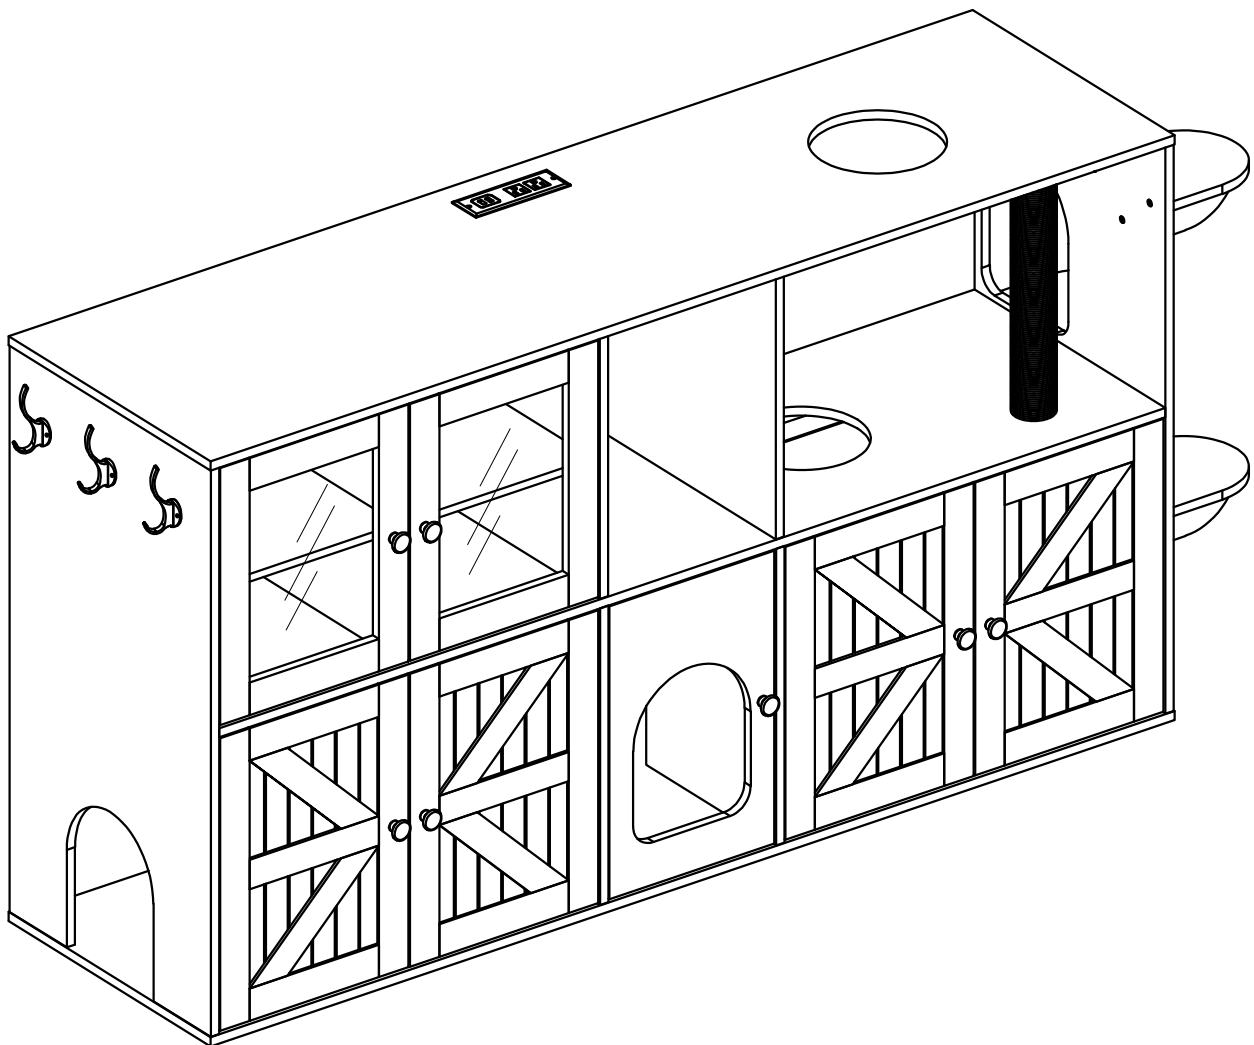


 WARNING	
	This product is NOT a Clothing Storage Unit (CSU).
	DO NOT use it for clothing storage.
	Improper use may cause furniture tipover.

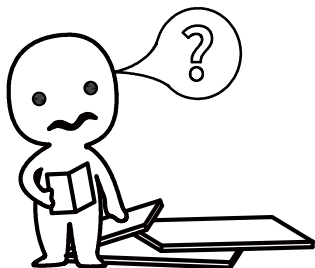


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

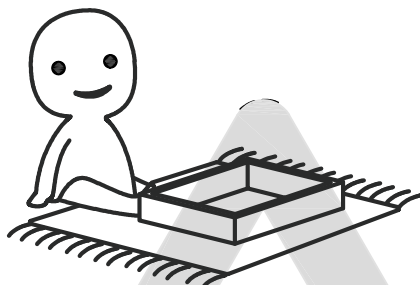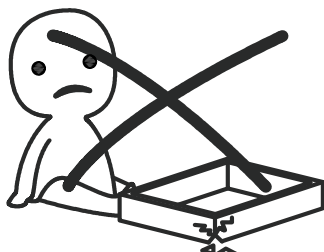



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

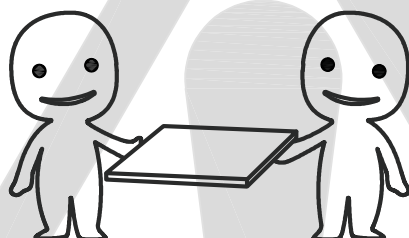

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

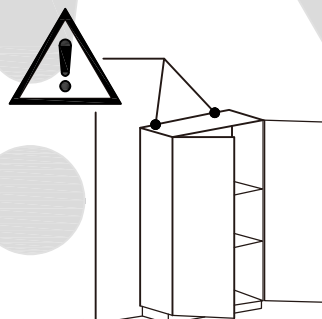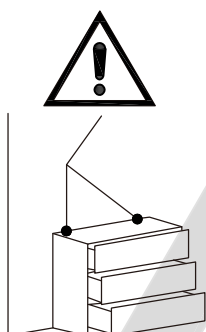

ANTI-TOPPLE WARNING !


Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

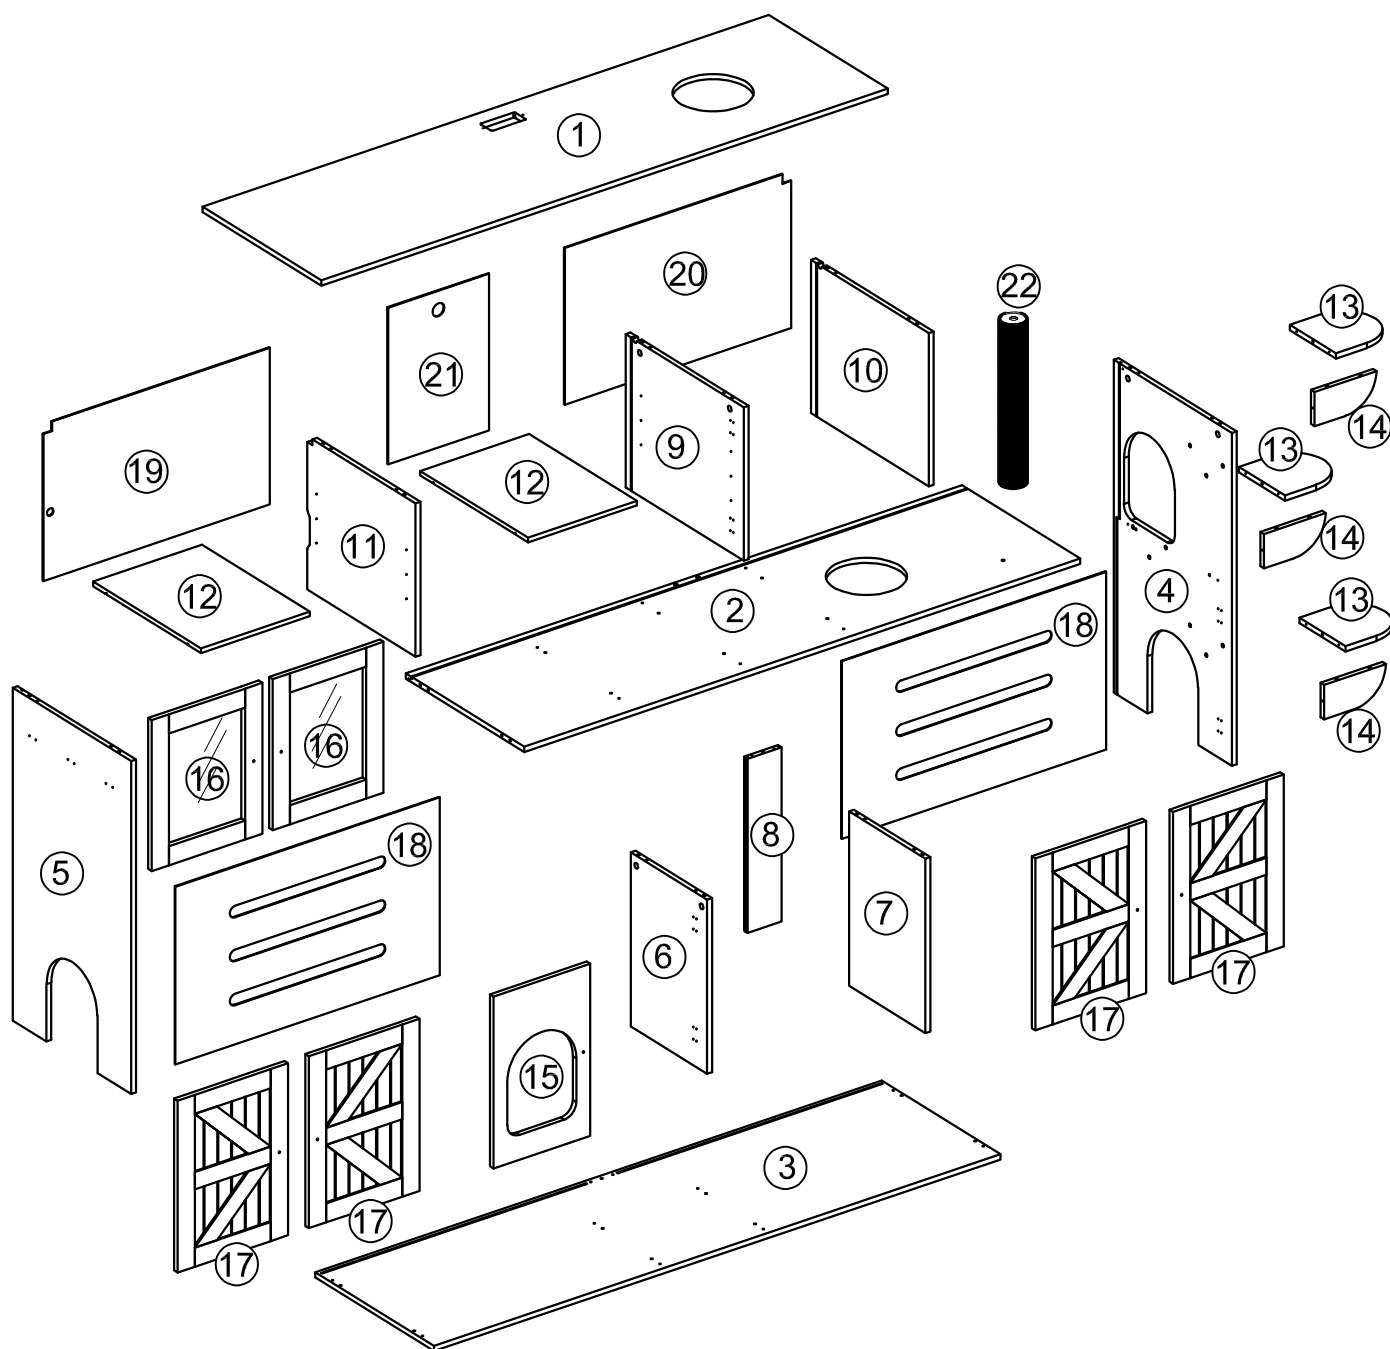


Note:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

CARTON CONTENT:


N704P490439

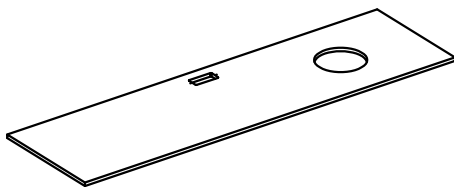


① x 1

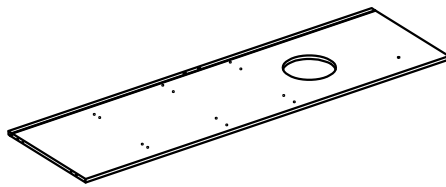


② x 1

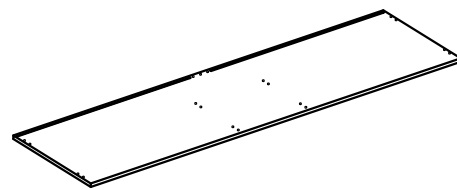


③ x 1

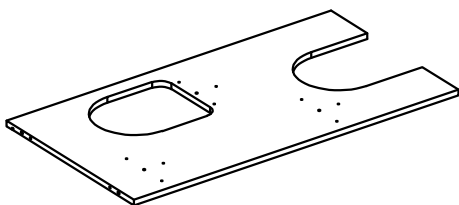


④ x 1

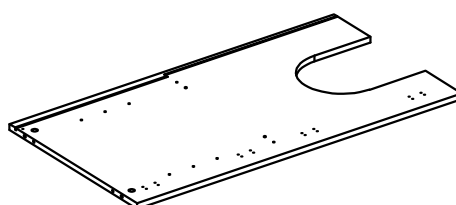


⑤ x 1

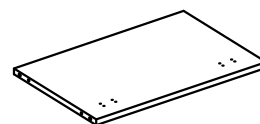


⑥ x 1

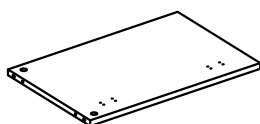


⑦ x 1

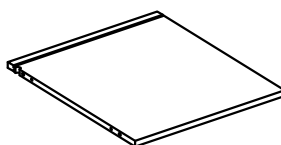


⑨ x 1

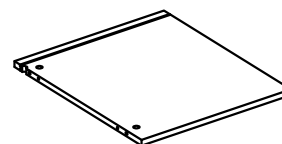

⑩ x 1



⑬ x 3

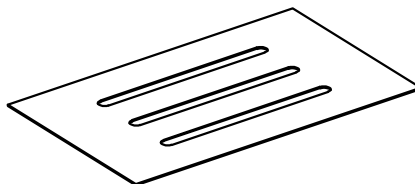


⑱ x 2

CARTON CONTENT:


N704P490440




⑧ x 1

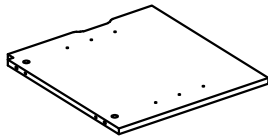


⑪ x 1

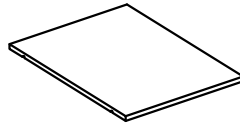


⑫ x 2




⑭ x 3

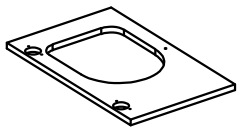


⑮ x 1

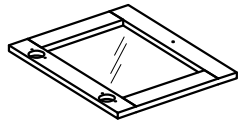


⑯ x 2

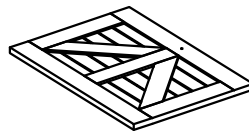


⑰ x 4

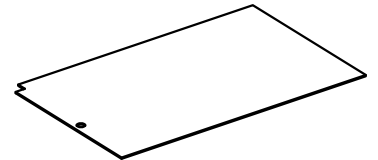

⑲ x 1

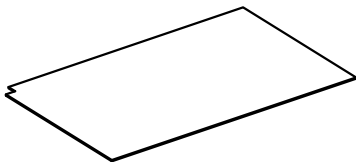


⑳ x 1




㉑ x 1




㉒ x 1

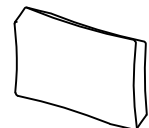



HARDWARE

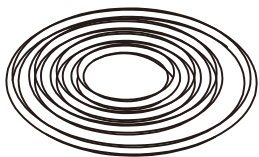

㉓ x 1

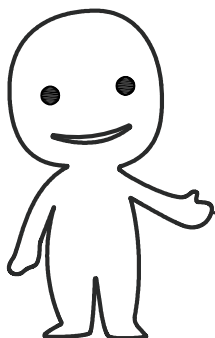


Please prepare the following tools

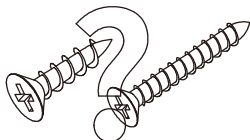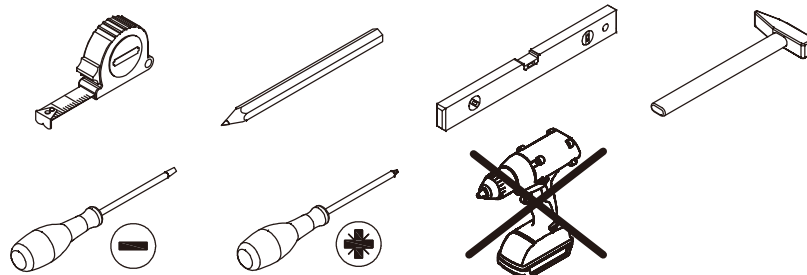

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

Ax21+2




Ø6 x 33 mm

Bx21+2



Ø15 x 9.5 mm

Cx27+2



M5X45 mm

Dx40+2




Ø6X30 mm

Ex92+3



M3.5 x 14 mm

Fx14



Gx6+1



M3 x 14 mm

Hx3



Ix28+2




Jx28+2




M3 x 16 mm


Kx8+4



Lx2

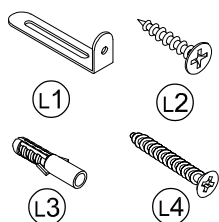

Mx23



Nx7




M4 x 18 mm

Ox7




Px1



M3

Qx1




Wx8+1




Sx1



Rx3



Xx1



Yx1




Zx1



1


Note: The plastic trim strip is pre-installed on the product, but if it peels off during use, we recommend that you replace it with the spare plastic trim strip included !

As shown in the figure, please tear one end of No.23 with adhesive and place it in the molding place of No. 01, No.02, No.04, No. 05 and No.15 plates. From here on, stick it evenly in the molding place for a week, and remove the excess part.

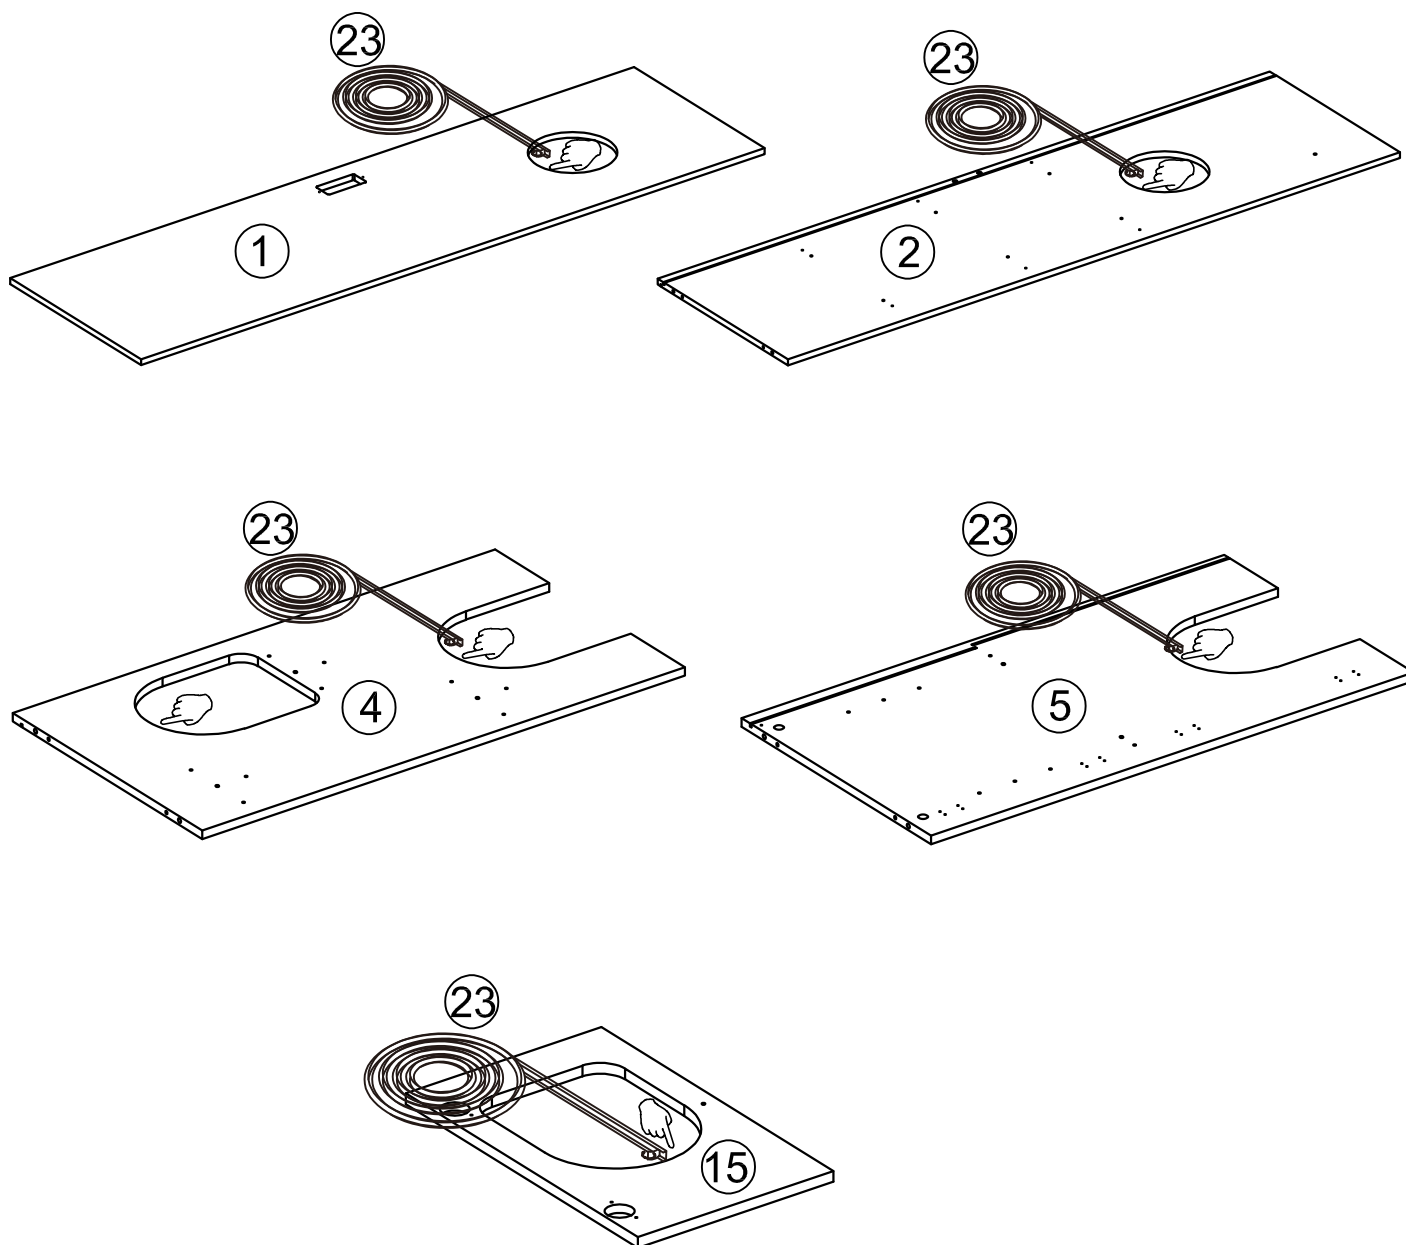


2

Cx6	Dx6	P
		
Ø5X45 mm	Ø6 x 30 mm	

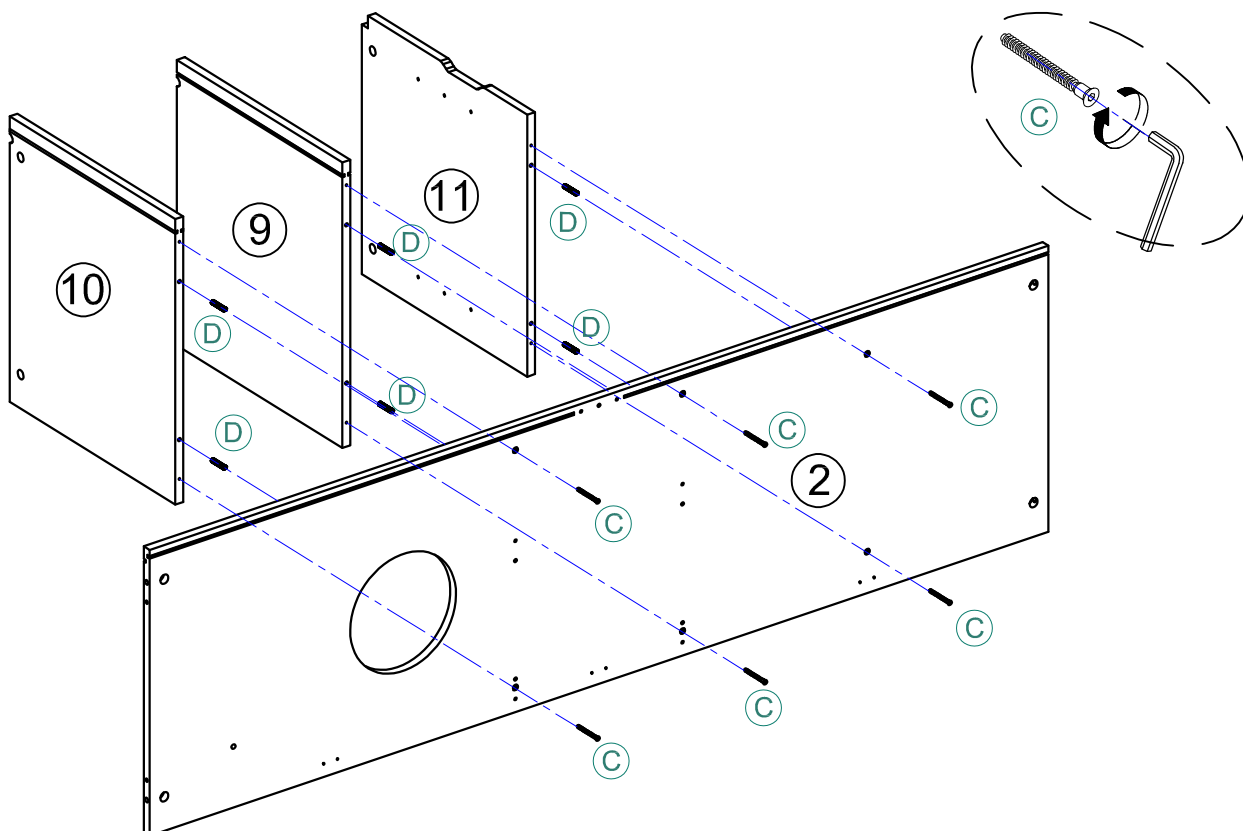

3




Cx2	Dx1	P
		
Ø5X45 mm	Ø6 x 30 mm	

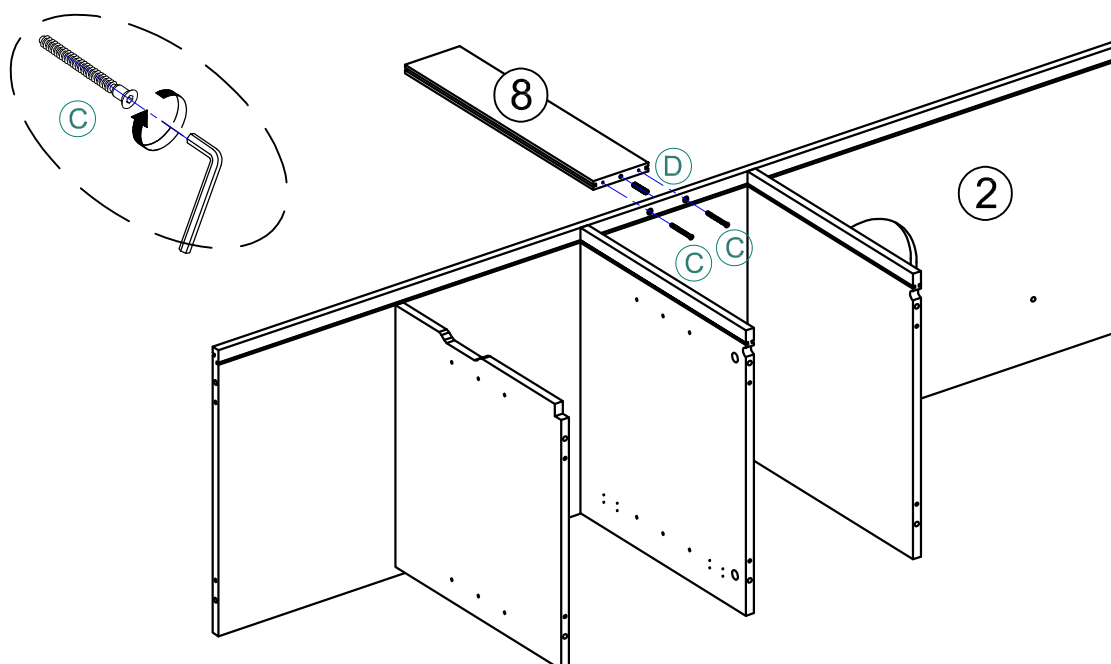

4

A x 2
Ø6 x 33 mm

Q

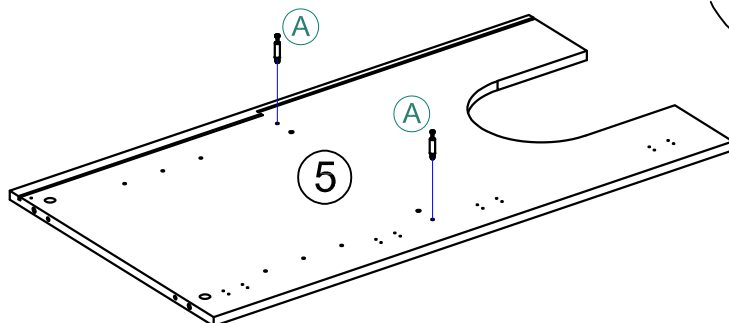
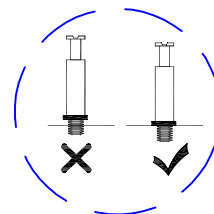
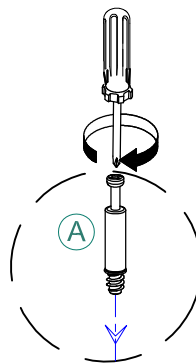




5

B x 2
Ø15 x 9,5 mm

Dx2
Ø6 x 30 mm

Q

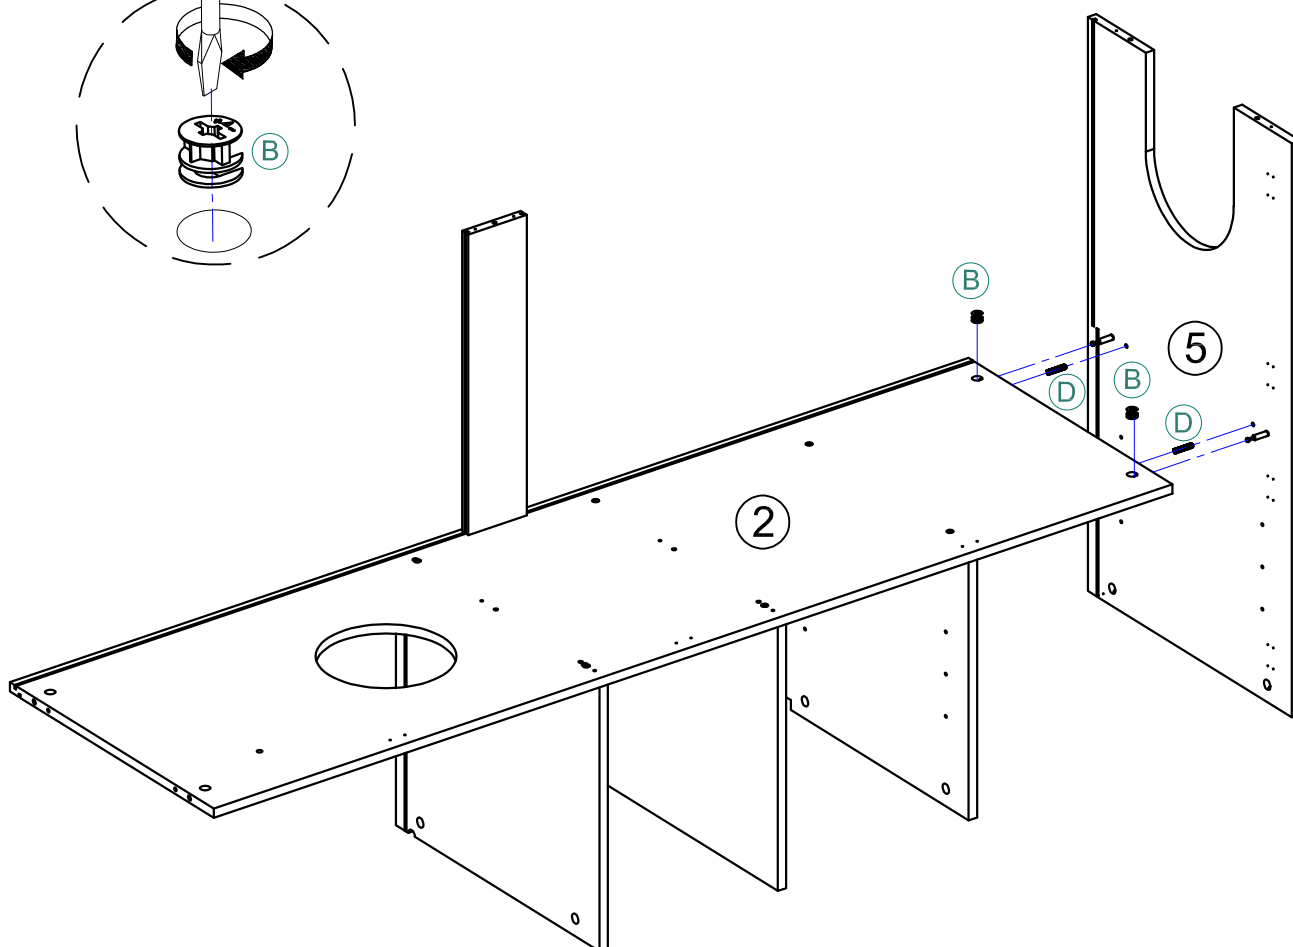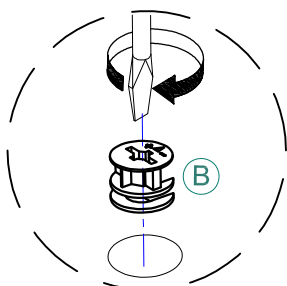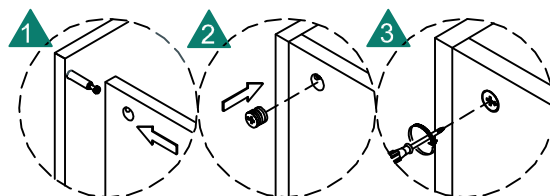

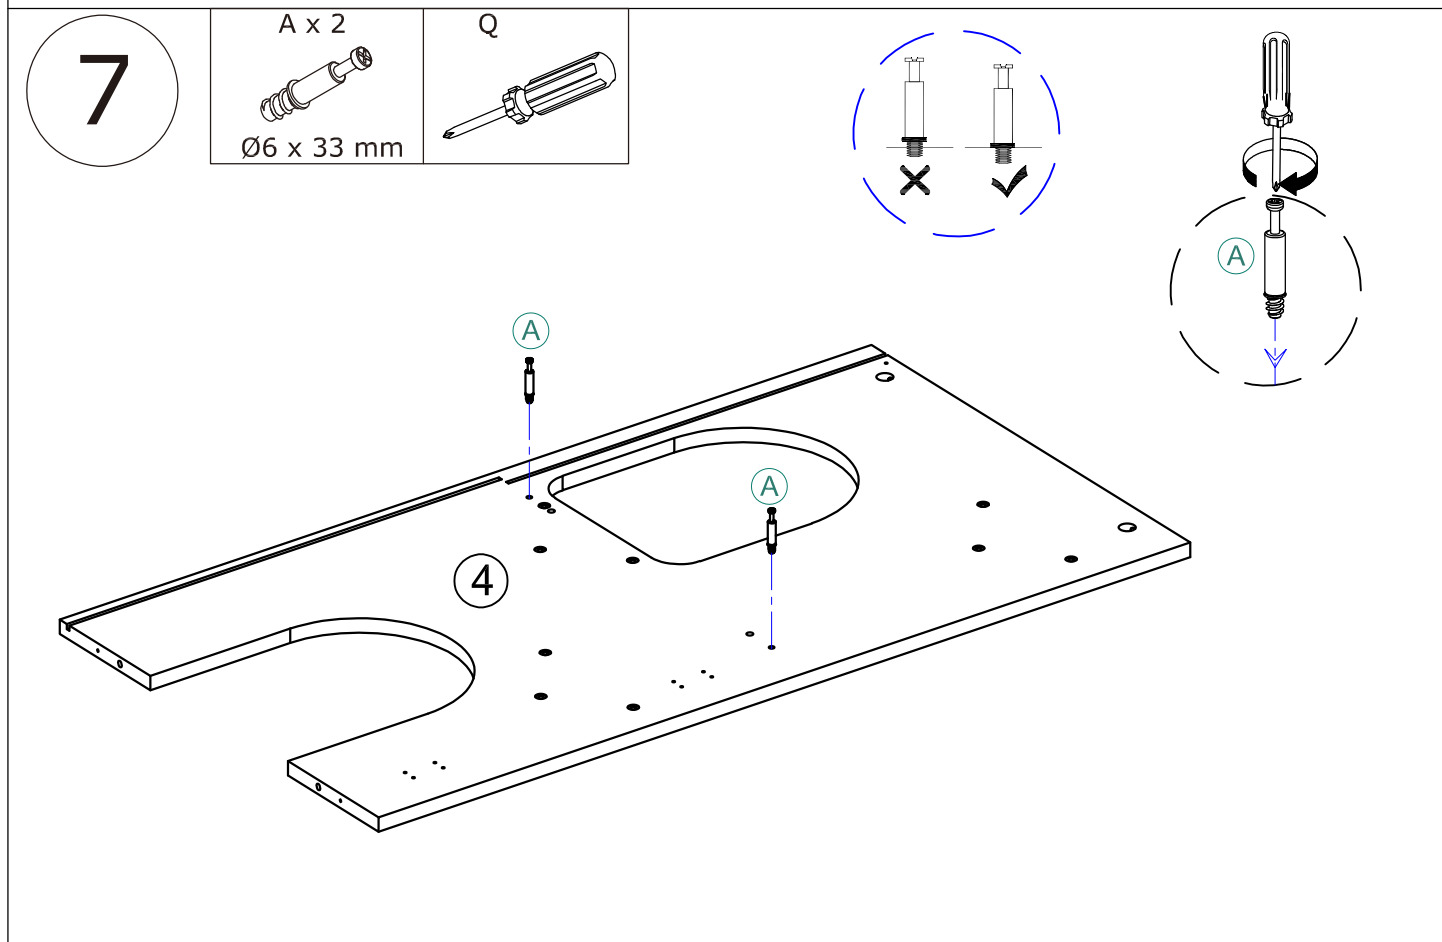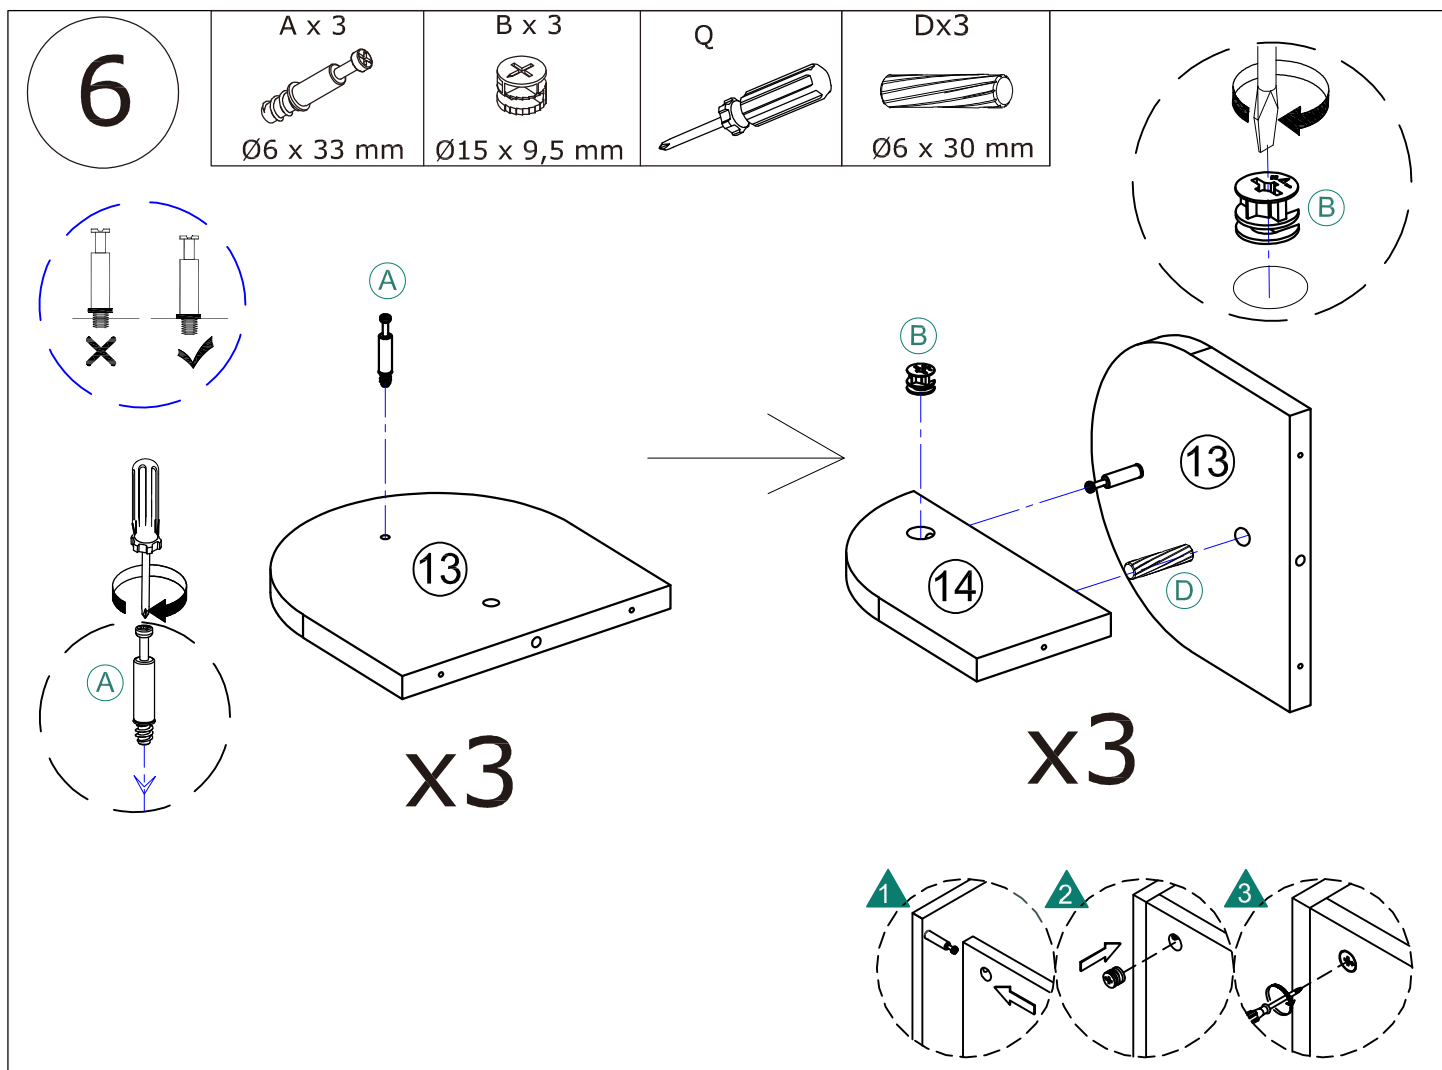


8


Cx9



Dx3



P

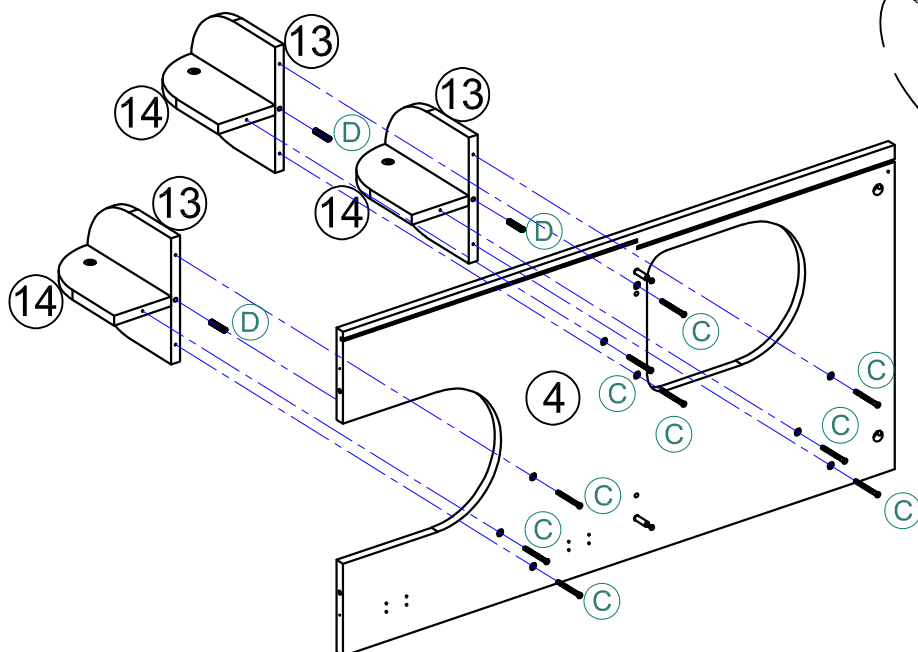

9



B x 2



Dx2



Q



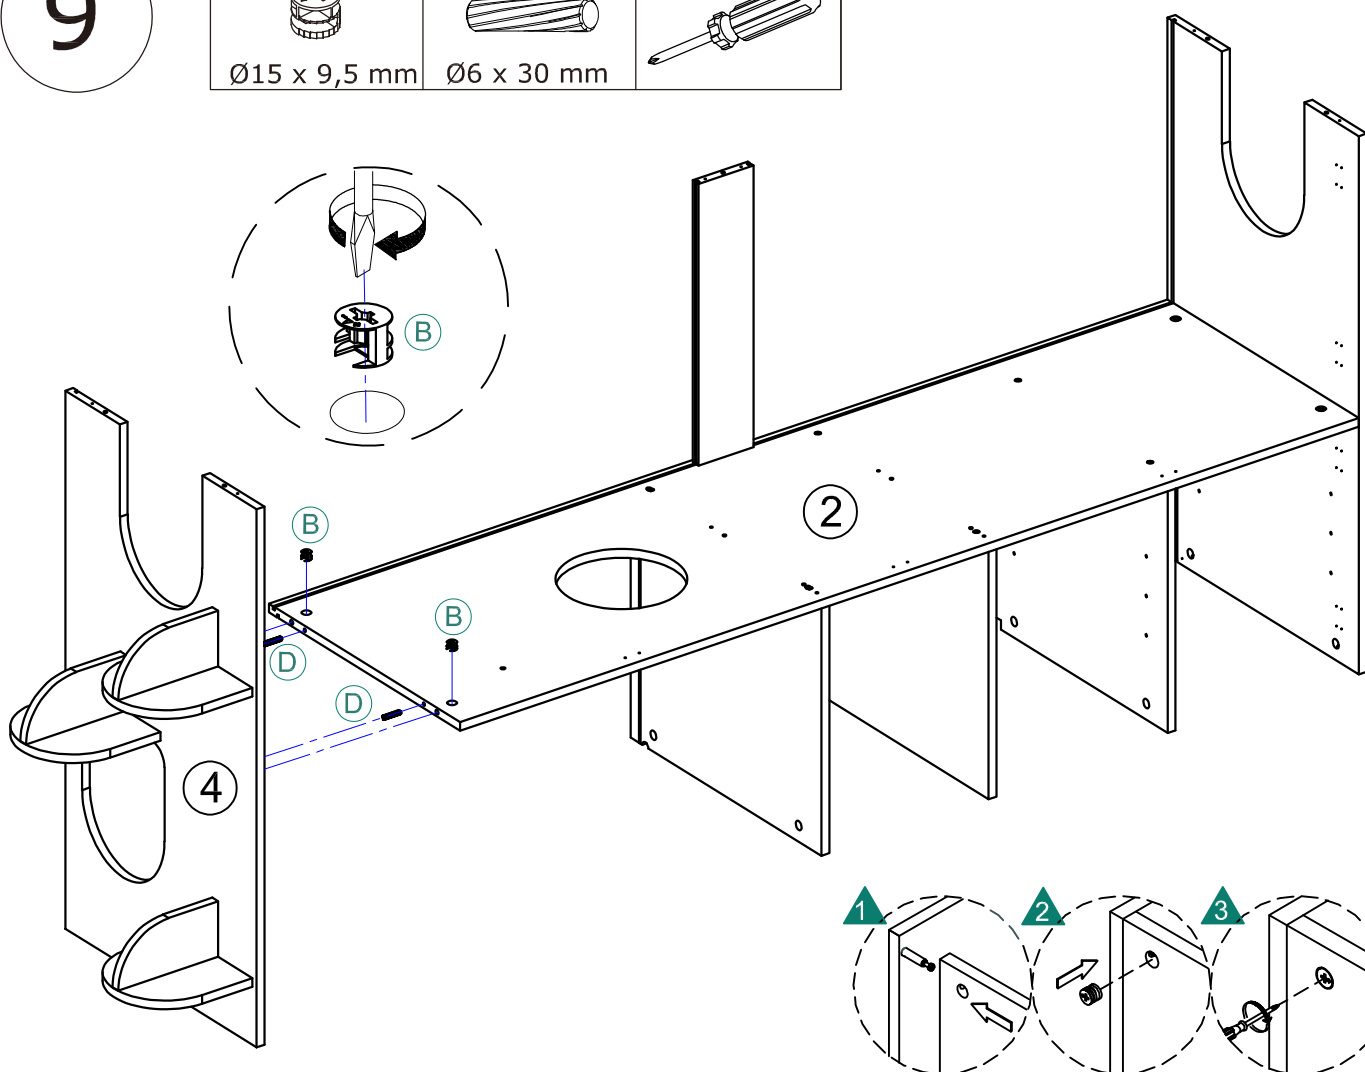



10

A x 4



Q

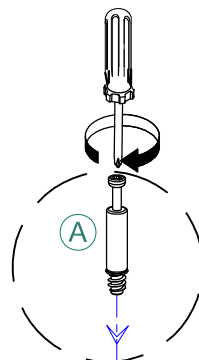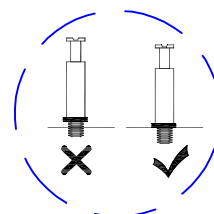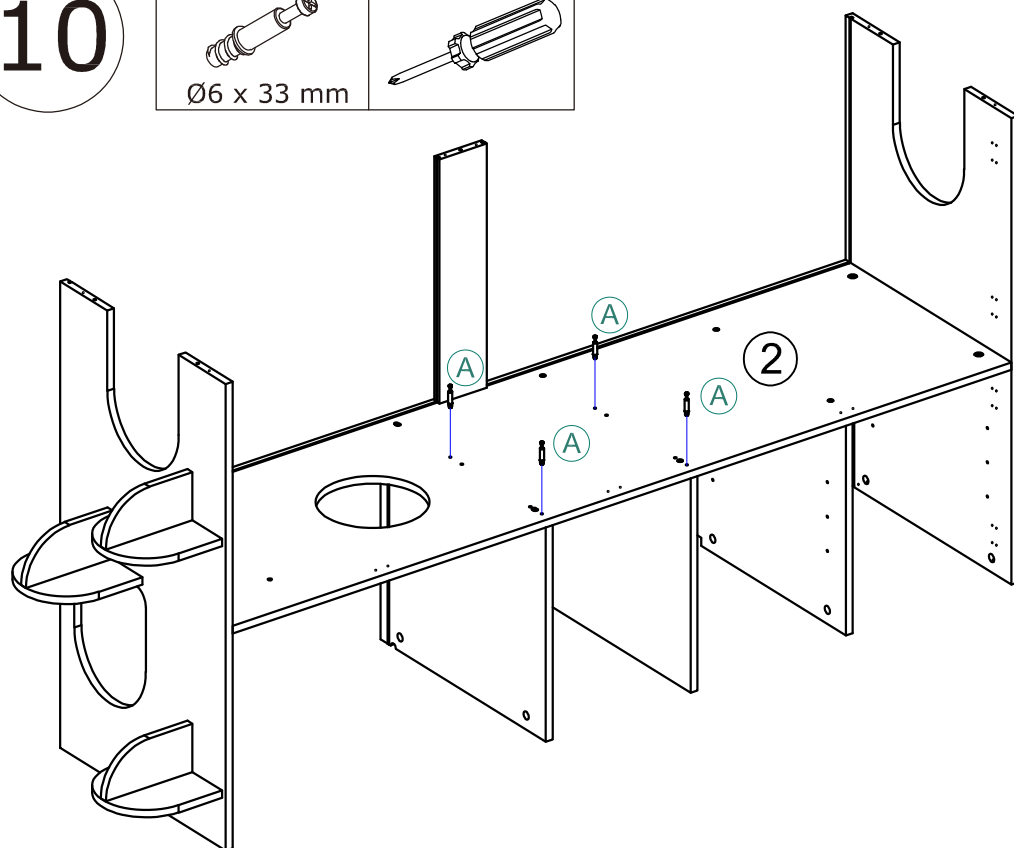

11

B x 2







Ø15 x 9,5 mm

Dx2



Ø6 x 30 mm

Q

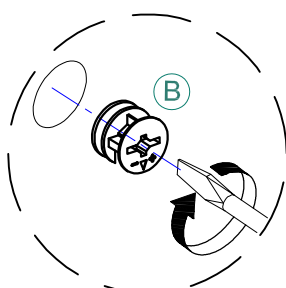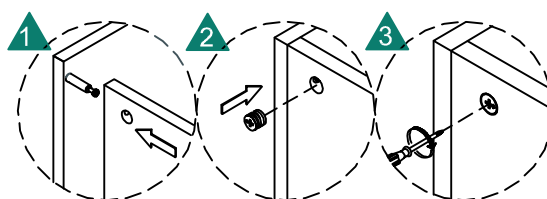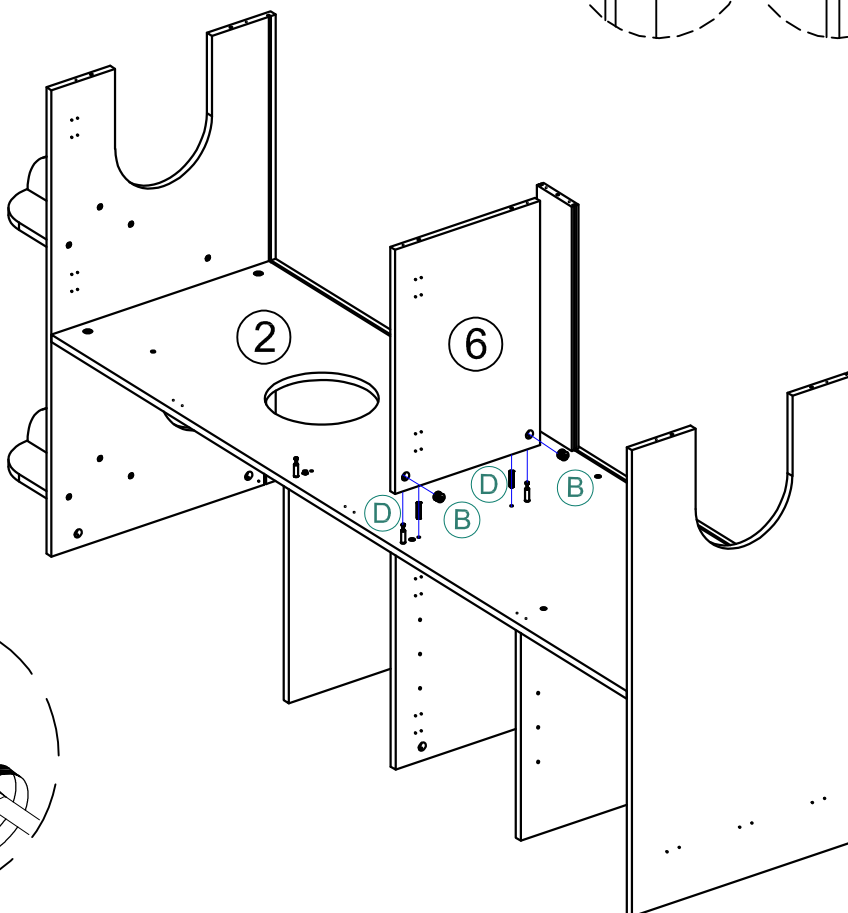

12

B x 2







Ø15 x 9,5 mm

Dx2



Ø6 x 30 mm

Q

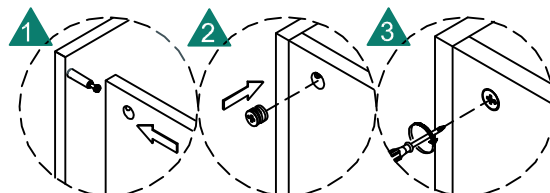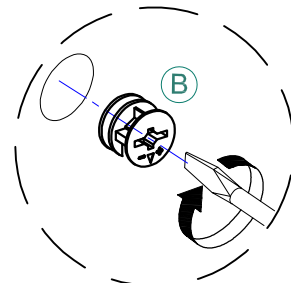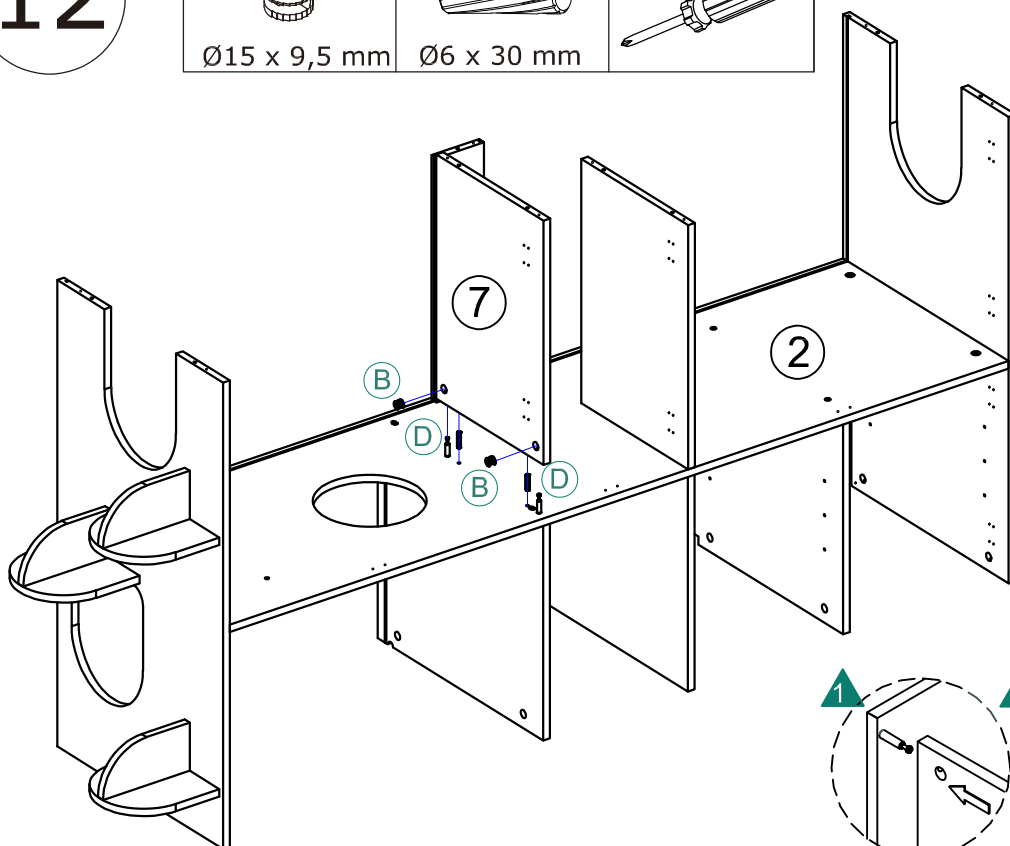

13

Dx9



Ø6 x 30 mm



Rx3



Ex6



M3.5 x 14 mm

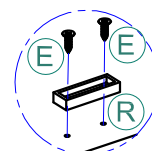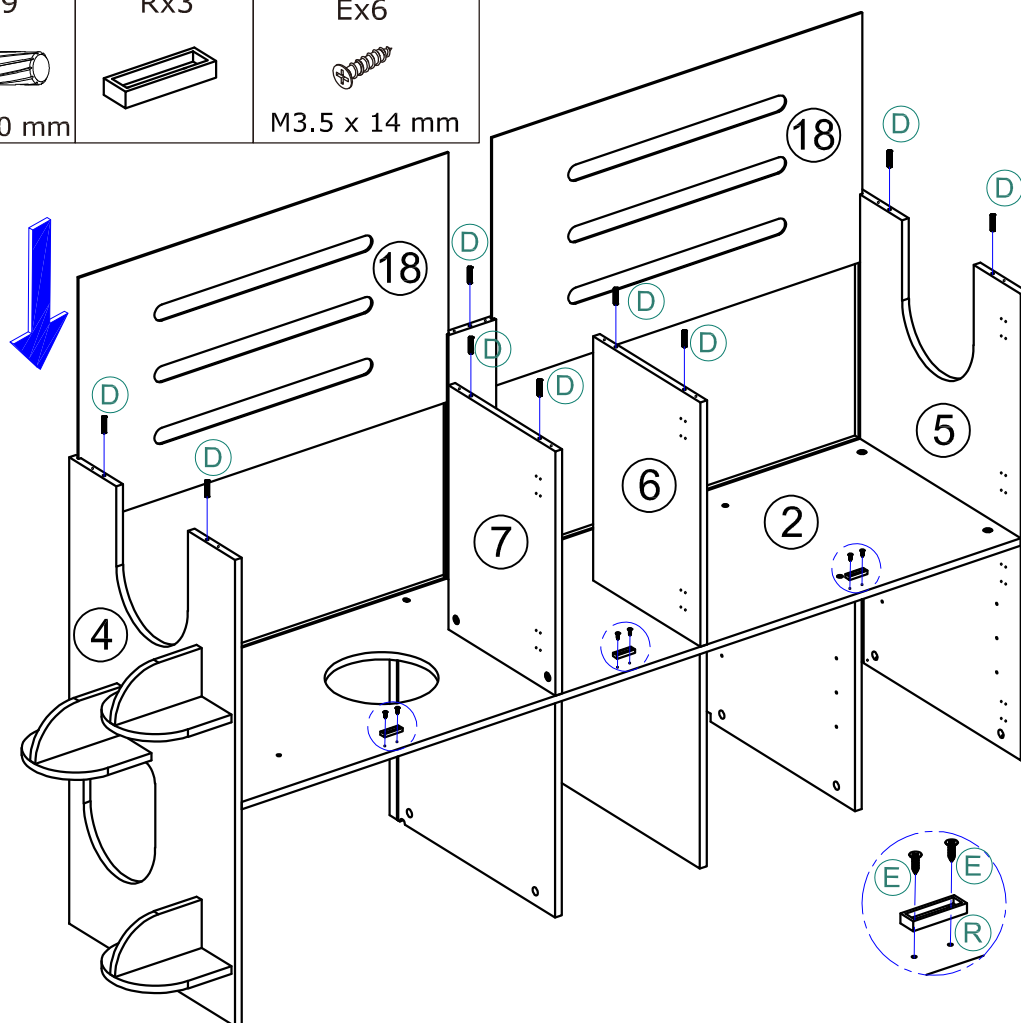


14


Cx10





Kx8



P


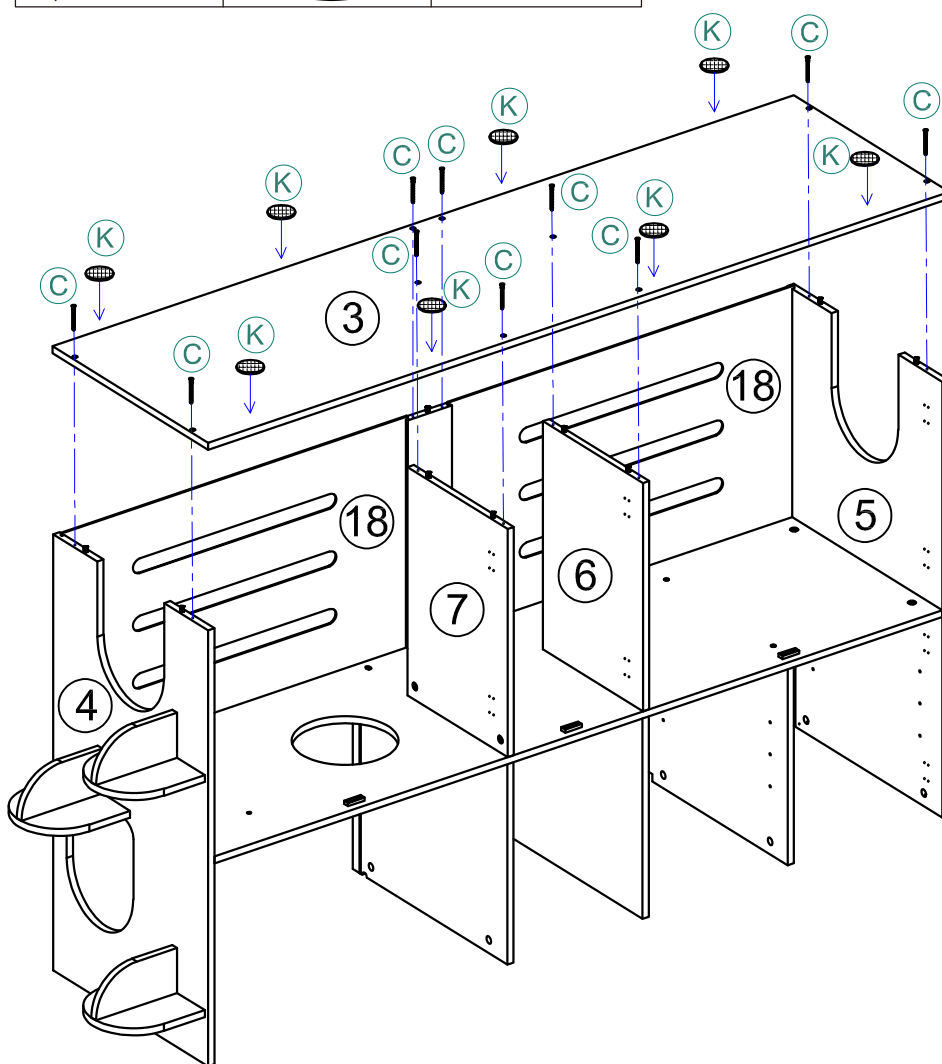


Turn over 180°


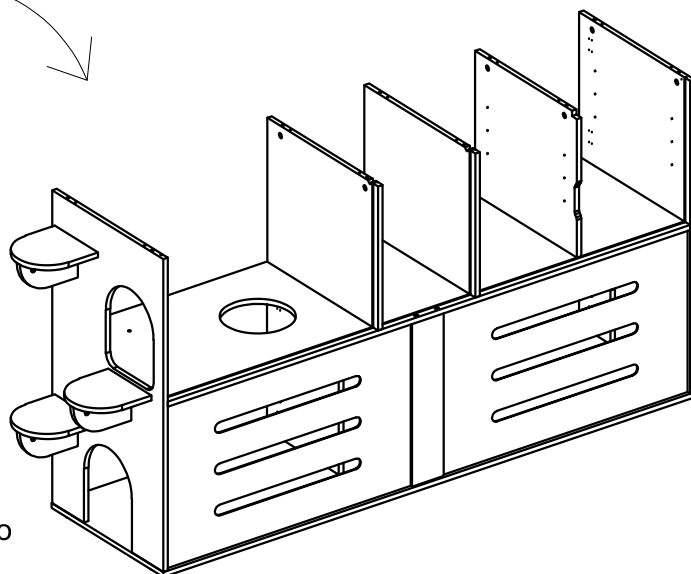
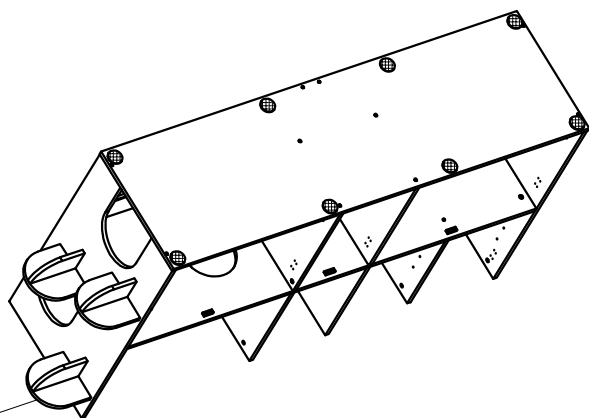


Note: This assembly step requires two peoples to perform it simultaneously !

15

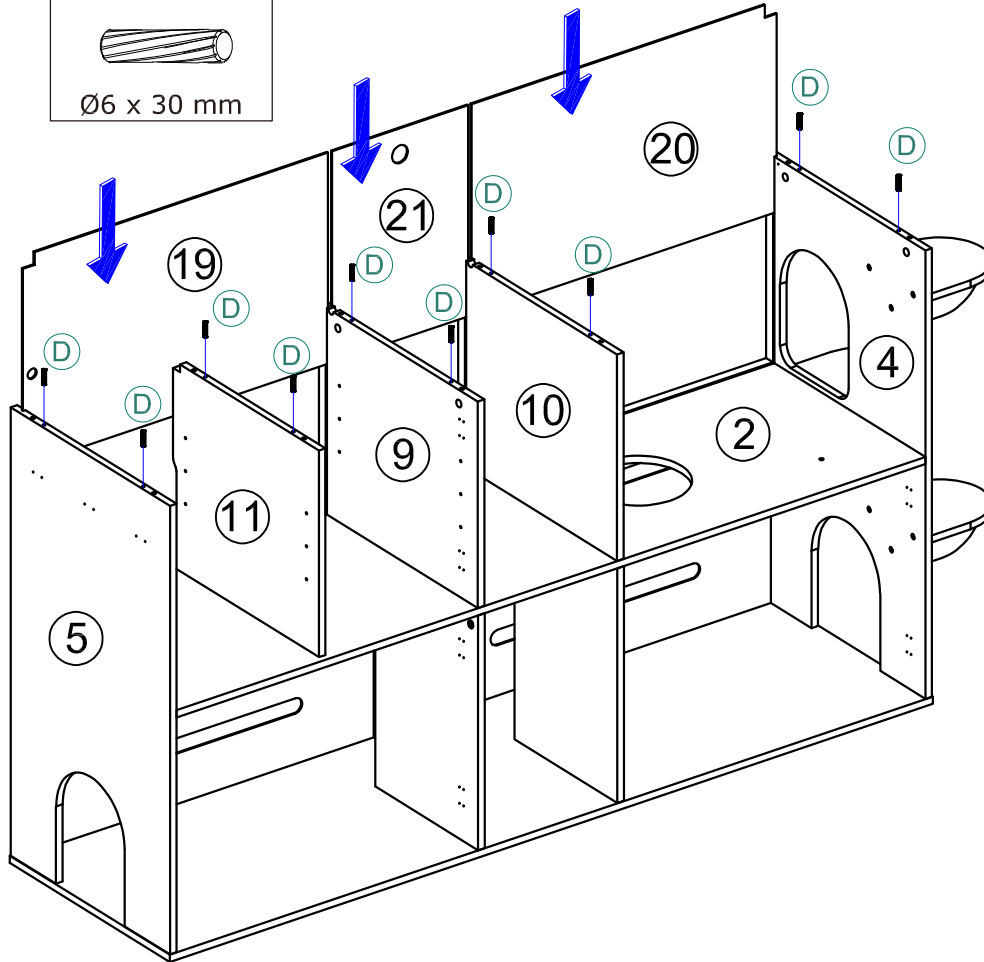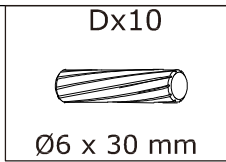

16

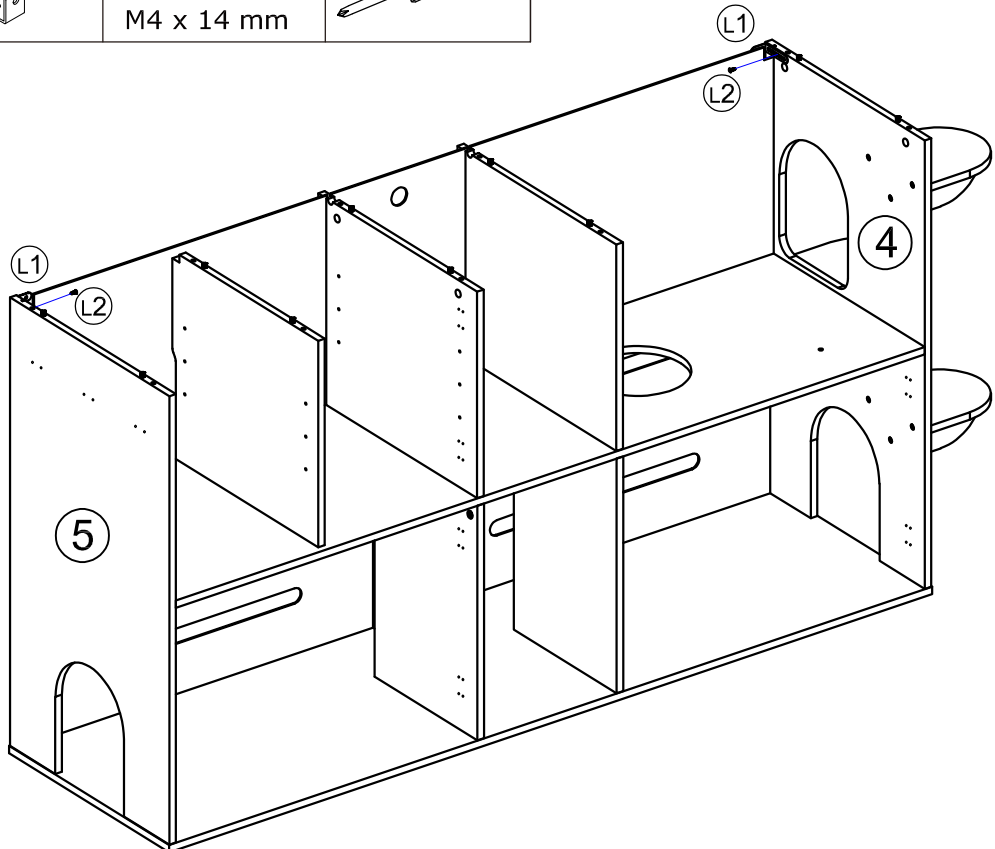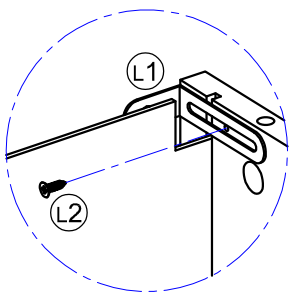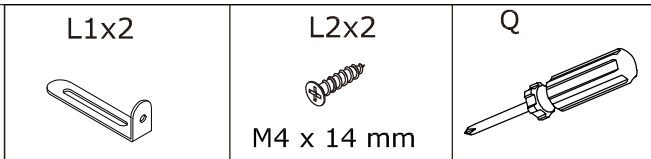

17

Sx1





L=1600MM




M3 x 12 mm

Q

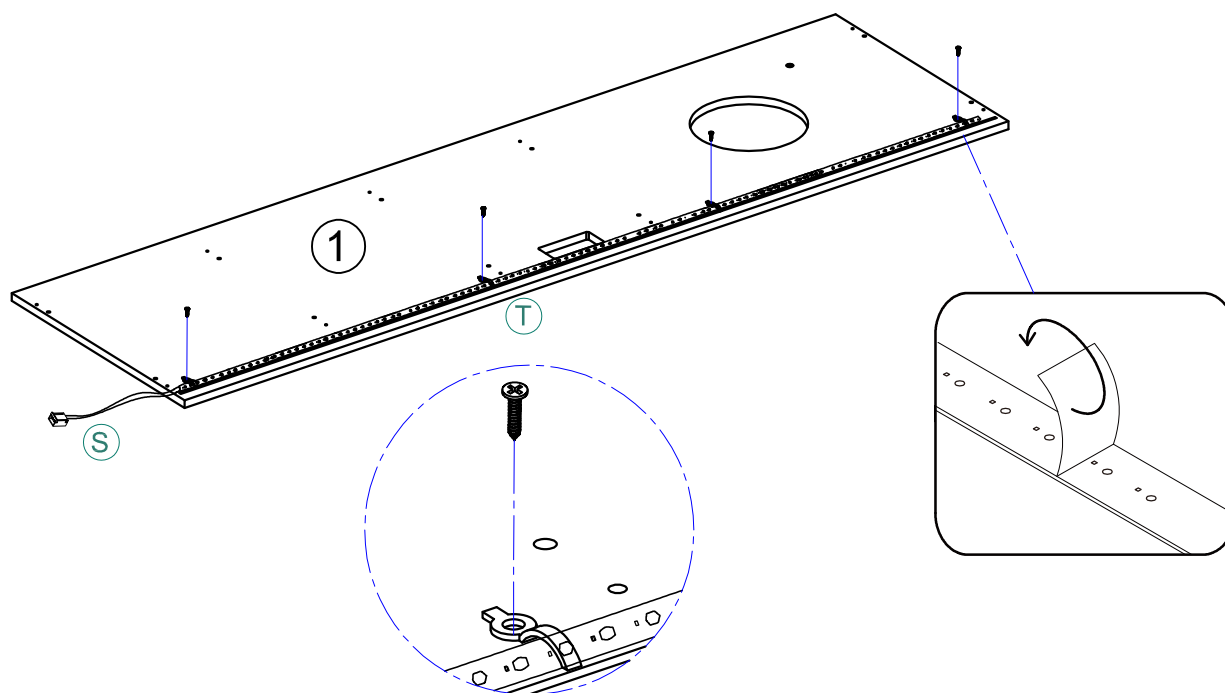

18

A x 10







Ø6 x 33 mm


Z x 1



Q

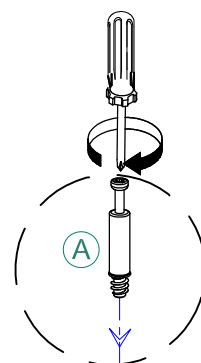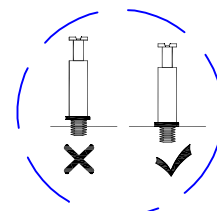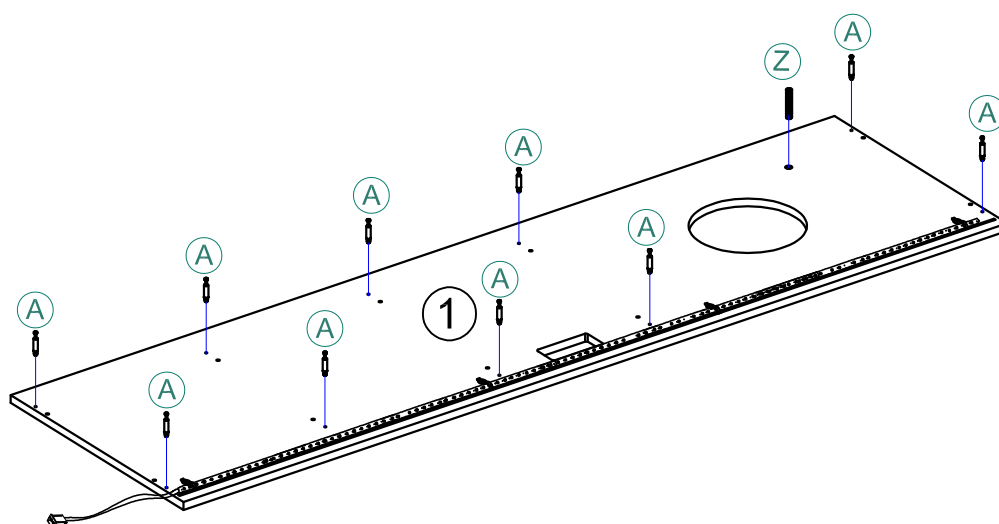

19

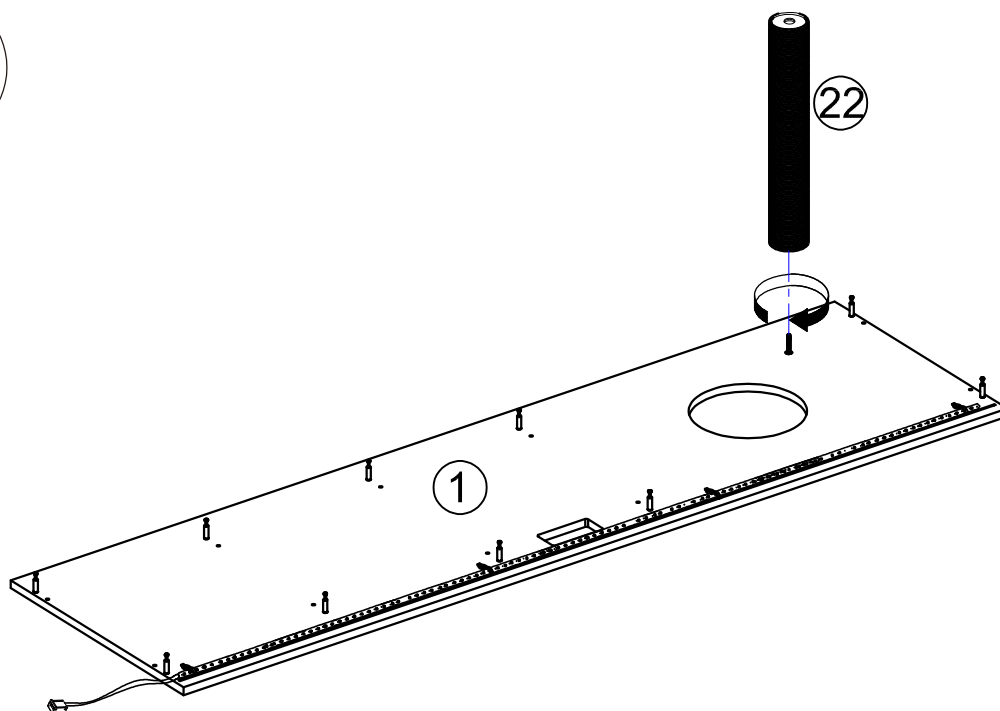

20

B x 10






Ø15 x 9,5 mm

Yx1



Q

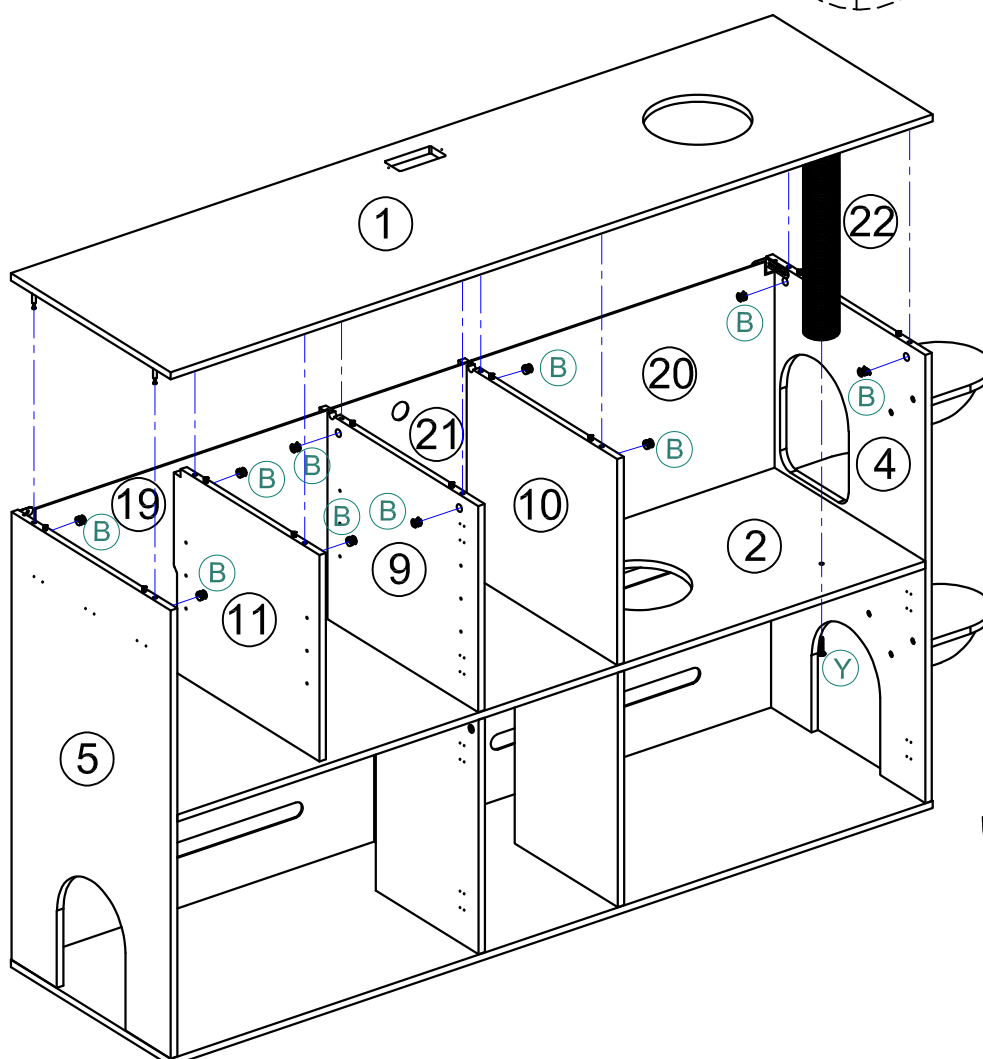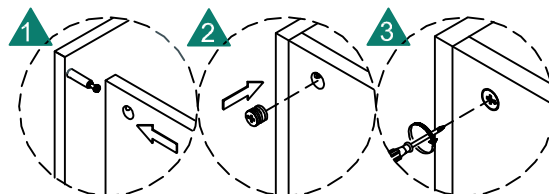

21

Ix28





Jx28




M3 x 16 mm

Q

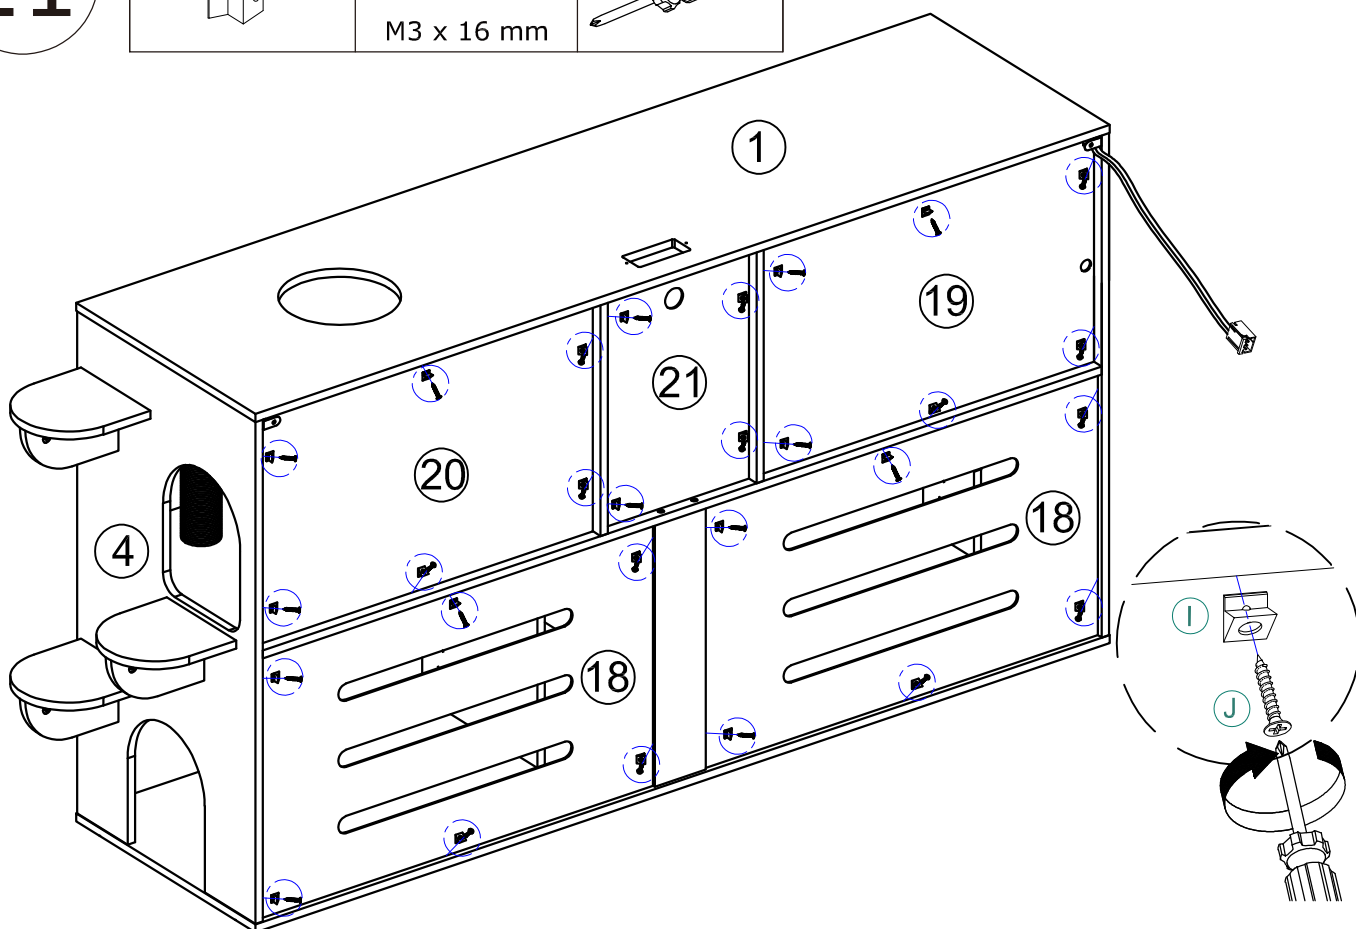

22

Fx2





Ex4



M3.5 x 14 mm

Q

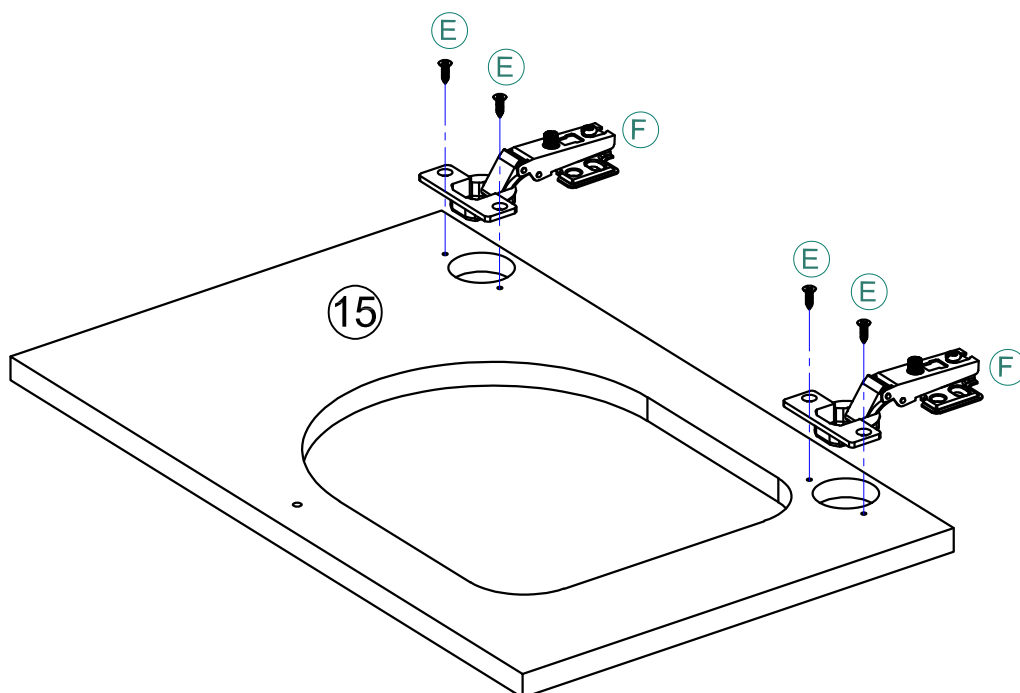


23

Ox1



Nx1









M4 x 18 mm

Ex8




M3.5 x 14 mm

Q

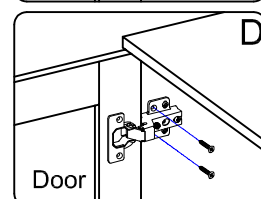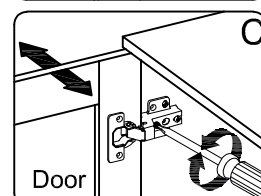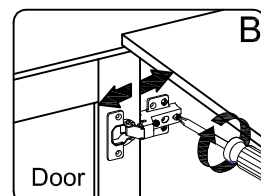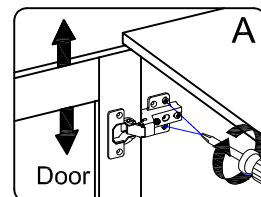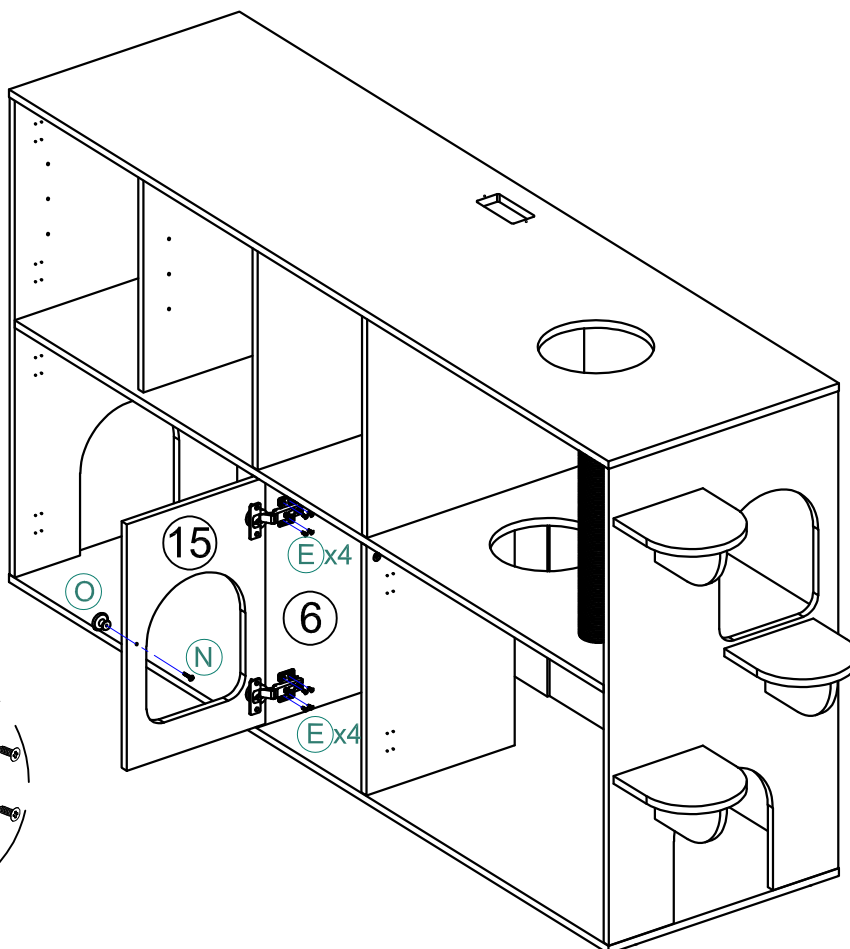

24

Fx8




Ex16




M3.5 x 14 mm

Q




X4

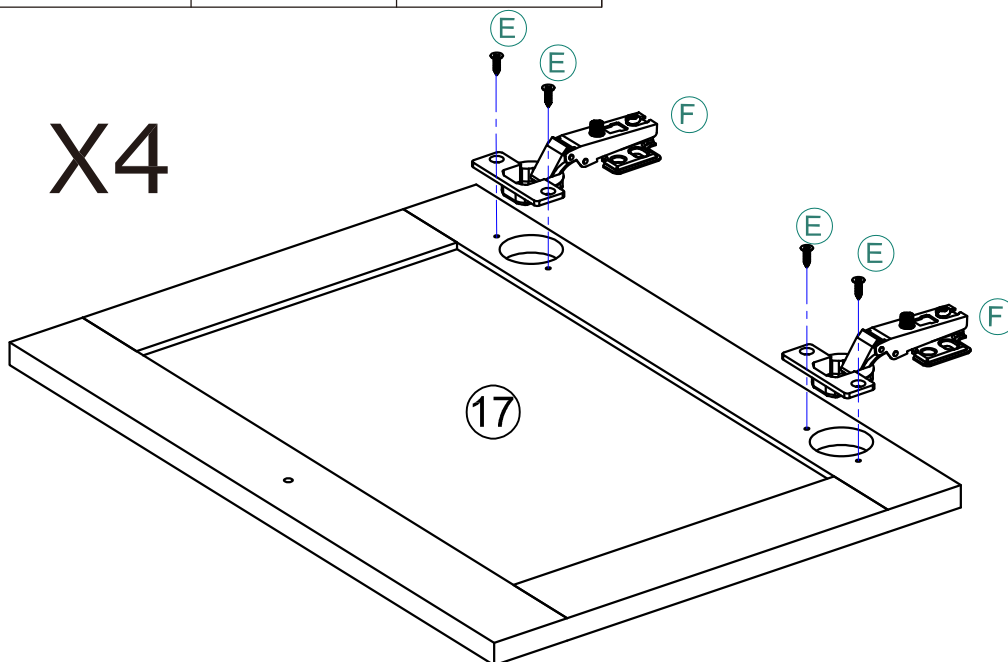


25

Ox4



Nx4











M4 x 18 mm

Ex32




M3.5 x 14 mm

Q

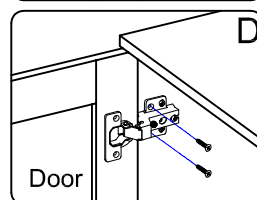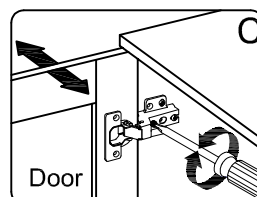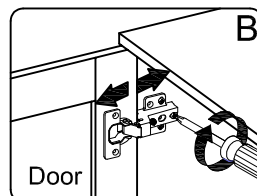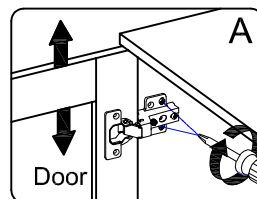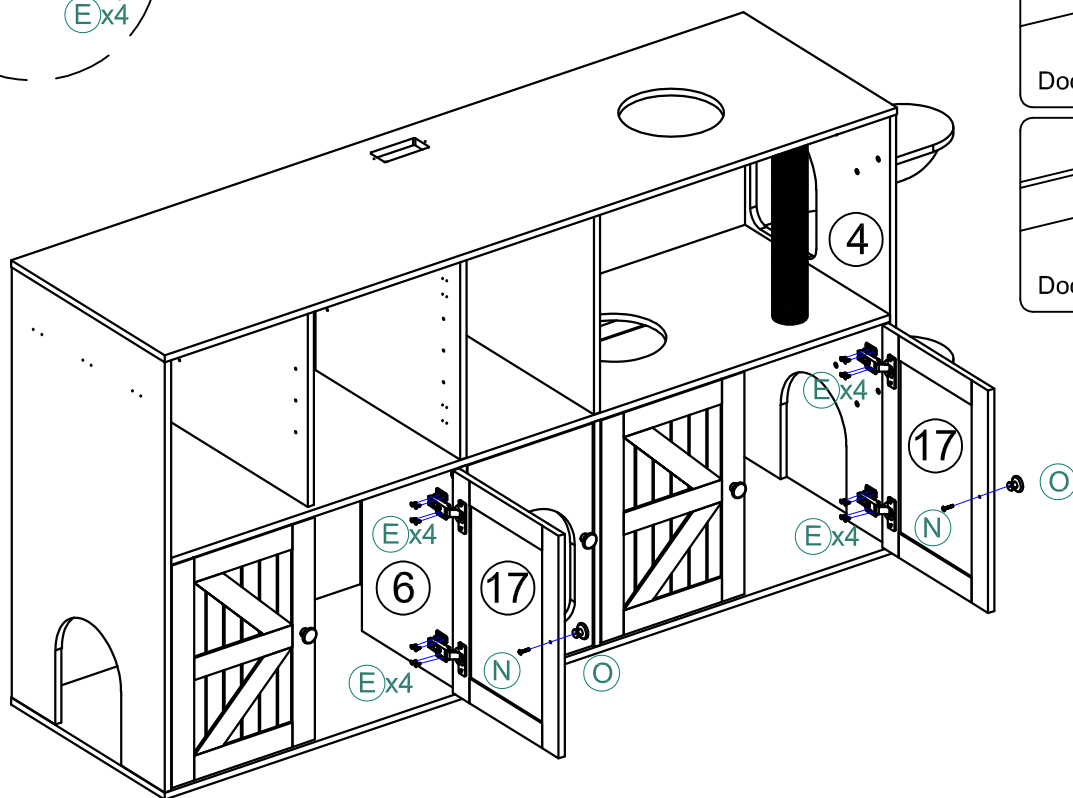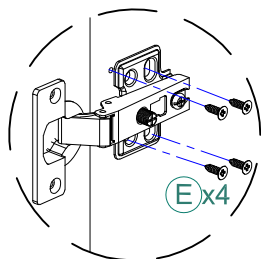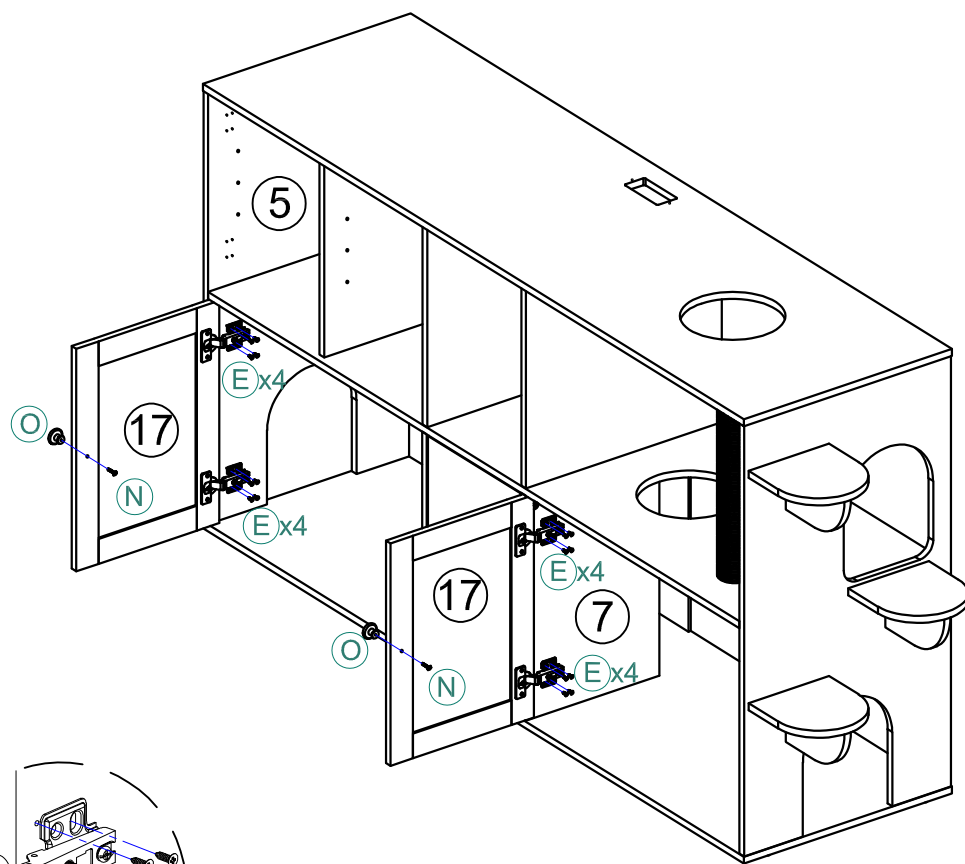

26

Sx1

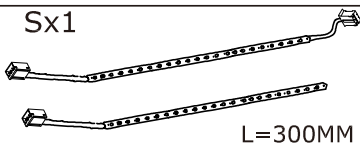



L=300MM



M3 x 12 mm





Q

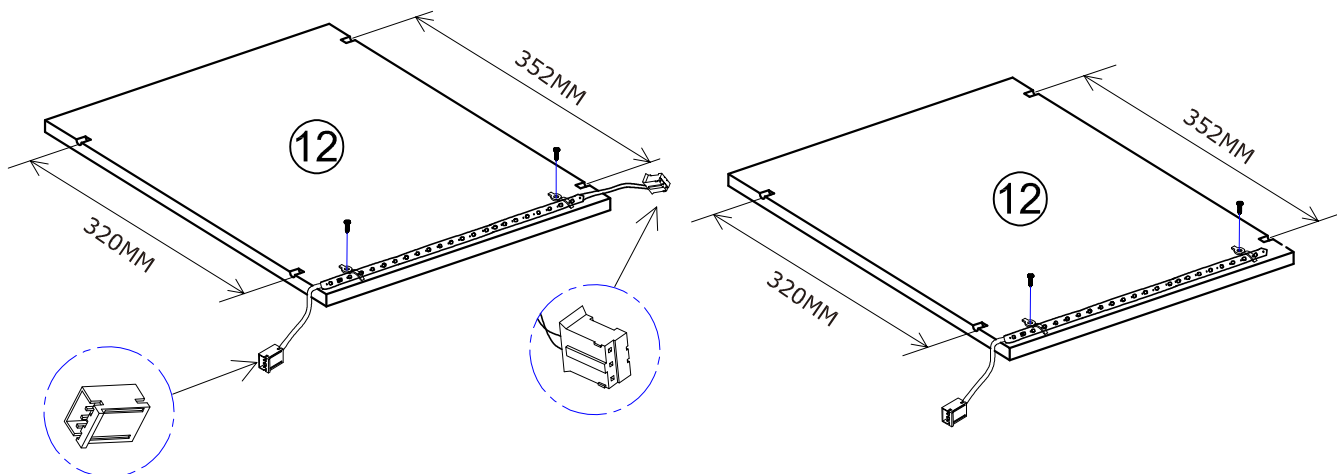


27



Rx8

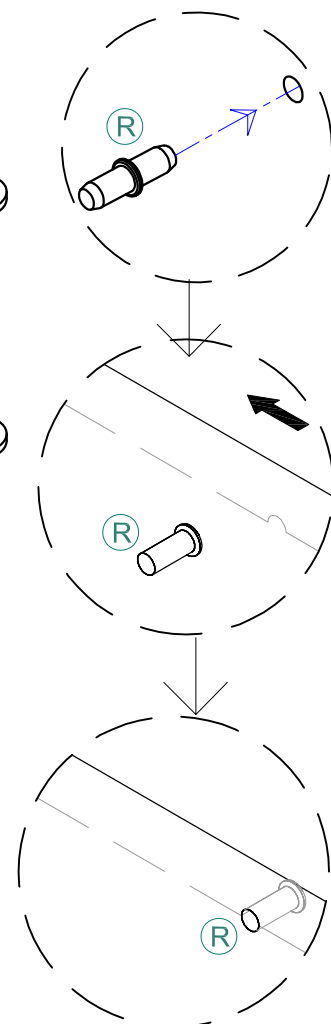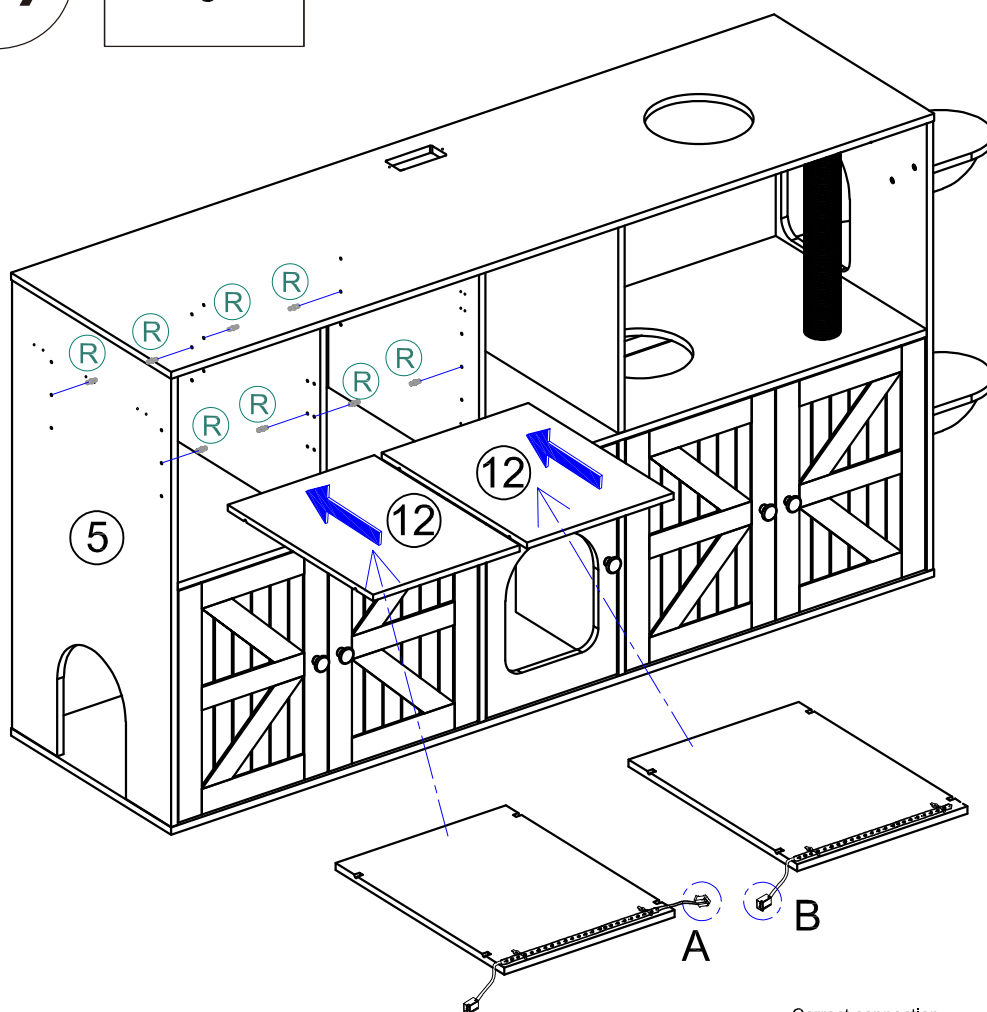


After assembling movable shelf panel No. 18 in the correct position, feed connector A through the gap behind part No. 11 to connect it with connector B (connecting the two LED light wires together)

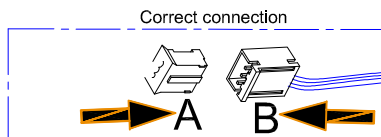




28

Fx4 	Ex8  M3.5 x 14 mm	Q 
--	--	--

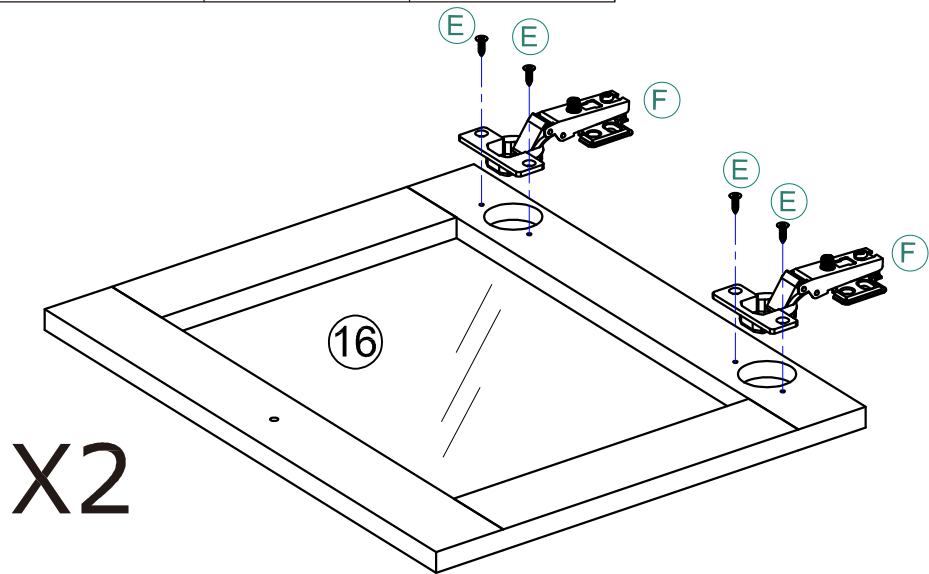

29

Ox1 	Nx1  M4 x 18 mm	Ex8  M3.5 x 14 mm	Q 
---	--	--	--

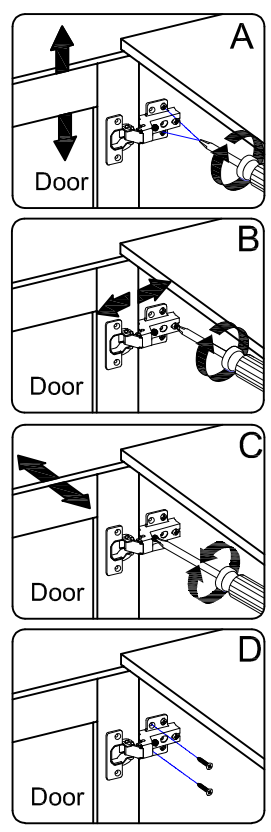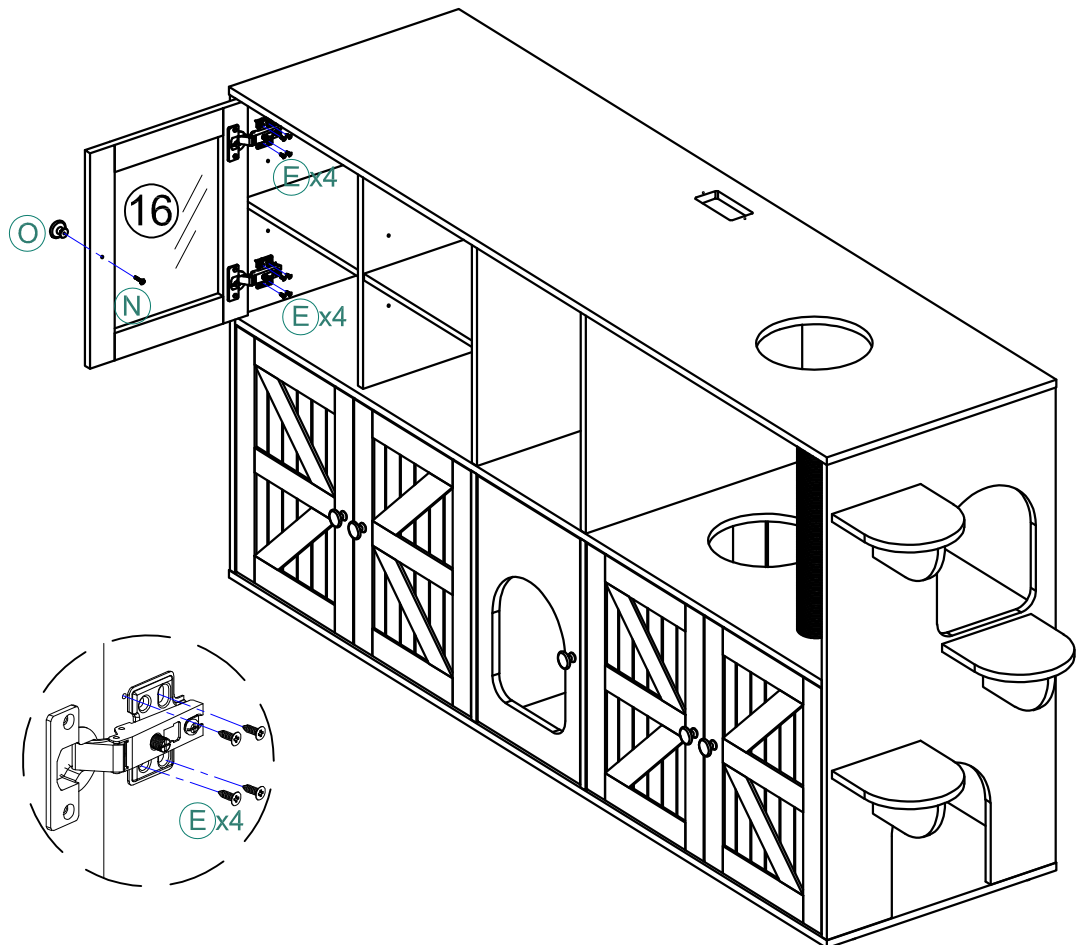

30

Ox1



Nx1









M8 x 18 mm

Ex8



M3.5 x 14 mm

Q

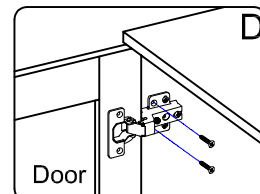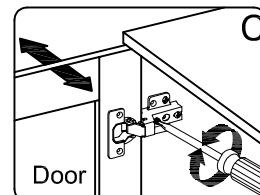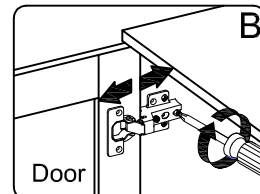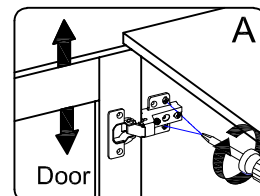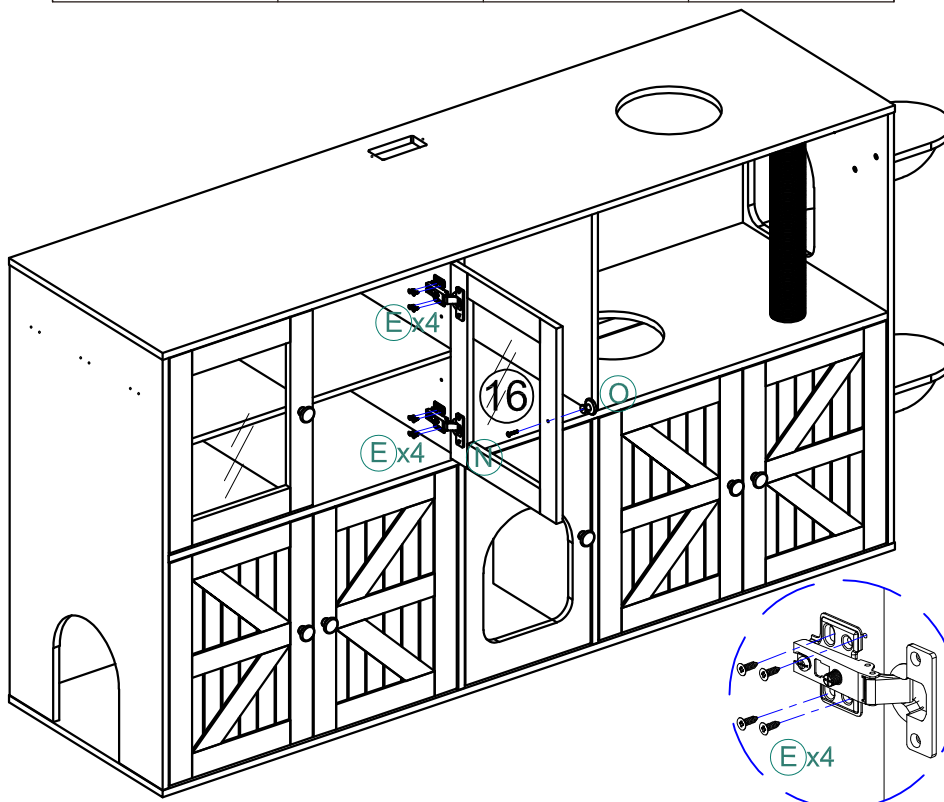

31

Hx3




Gx6



M3 x 14 mm

Xx1







Ex2




M3.5 x 14 mm

Q

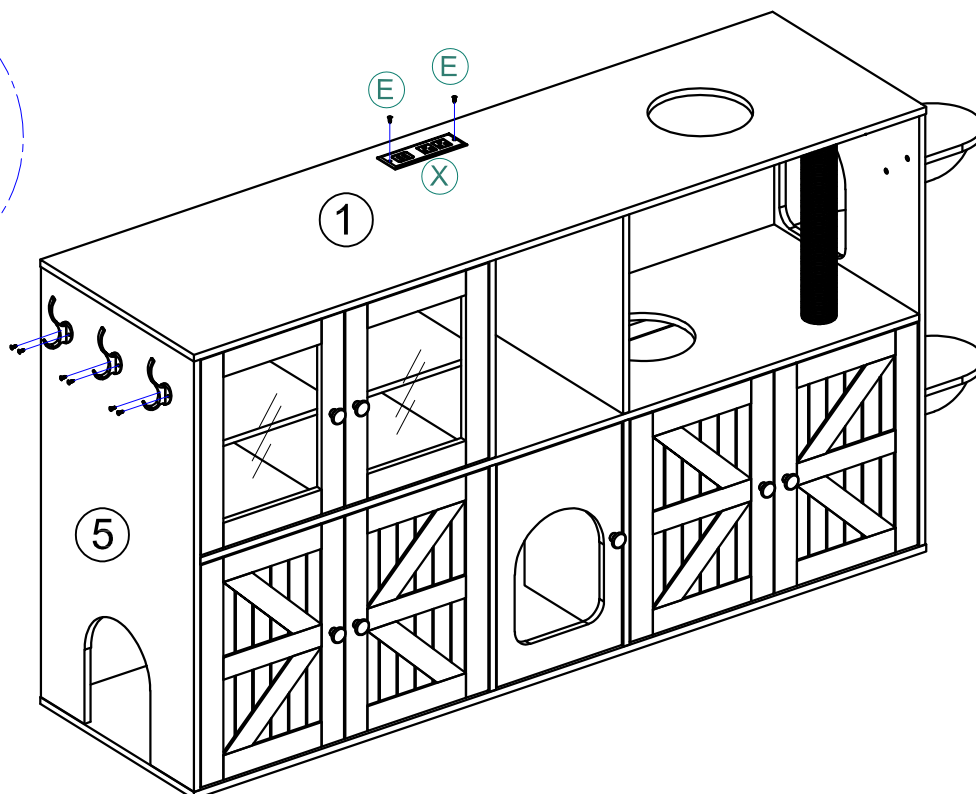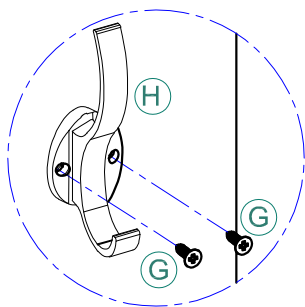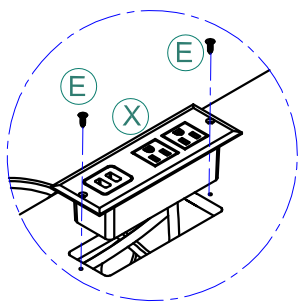



32

Sx1

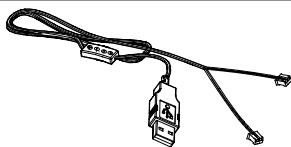


NOTE: The connectors of the LED light strip and the power plug are fed through the corresponding holes at the back of the back panel !

Correct connection

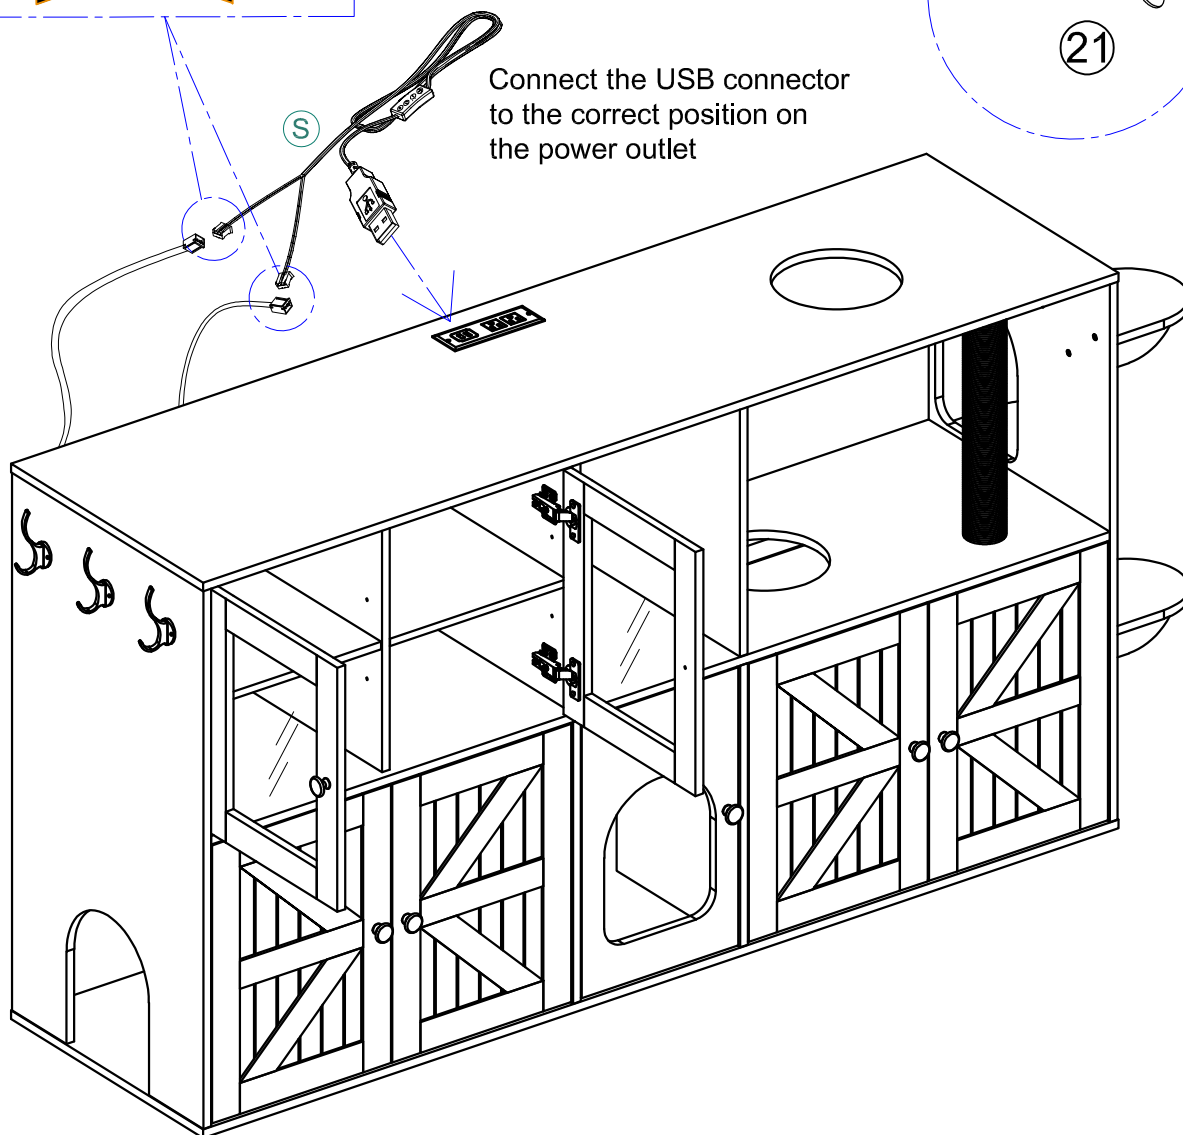

Connect the USB connector to the correct position on the power outlet

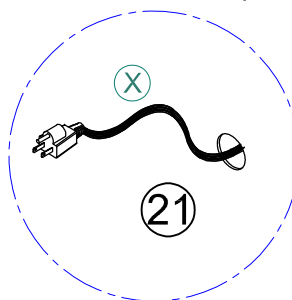

33

L3x2




L4x2








M4 x 35 mm

Q



Mx23

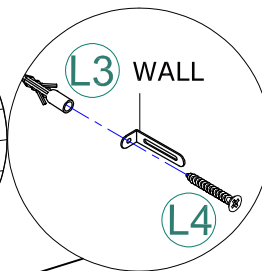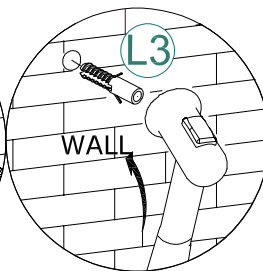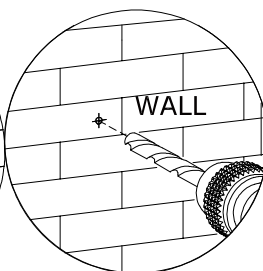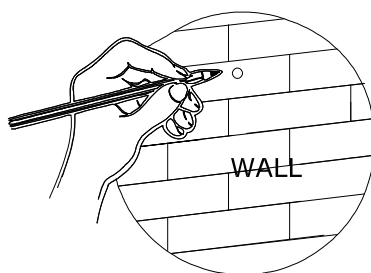



Wall

Wall


Wall

Wall

Wall

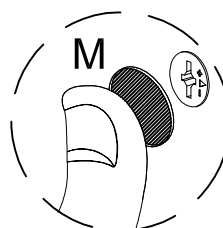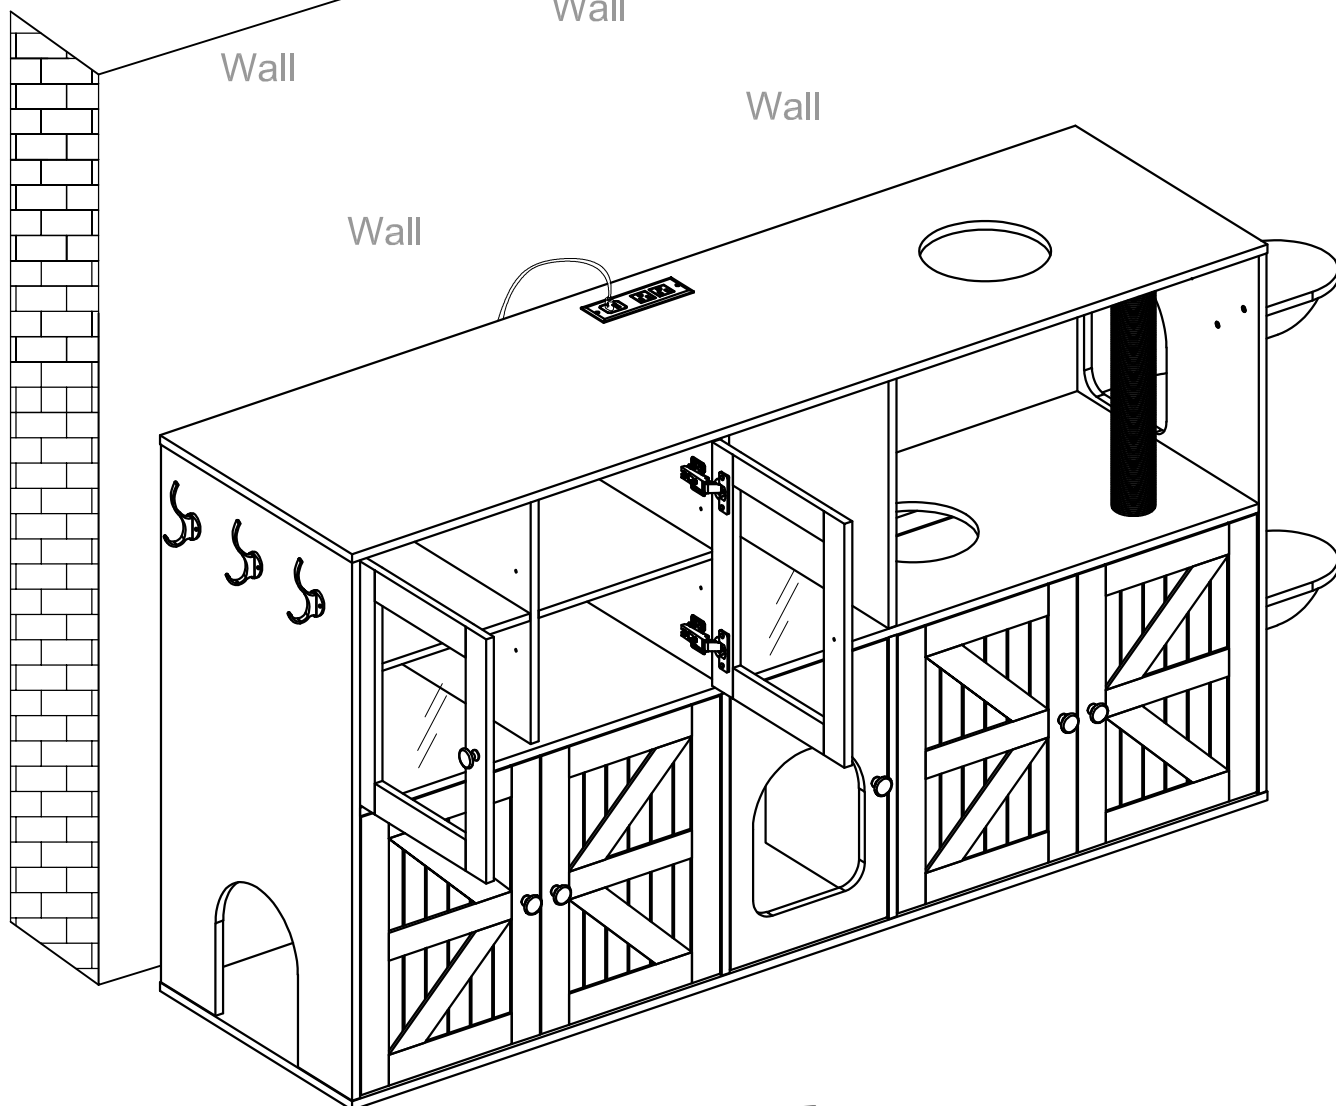

Use Perfect Sticker (M) to cover the Camlock's holes on the All side you can see!

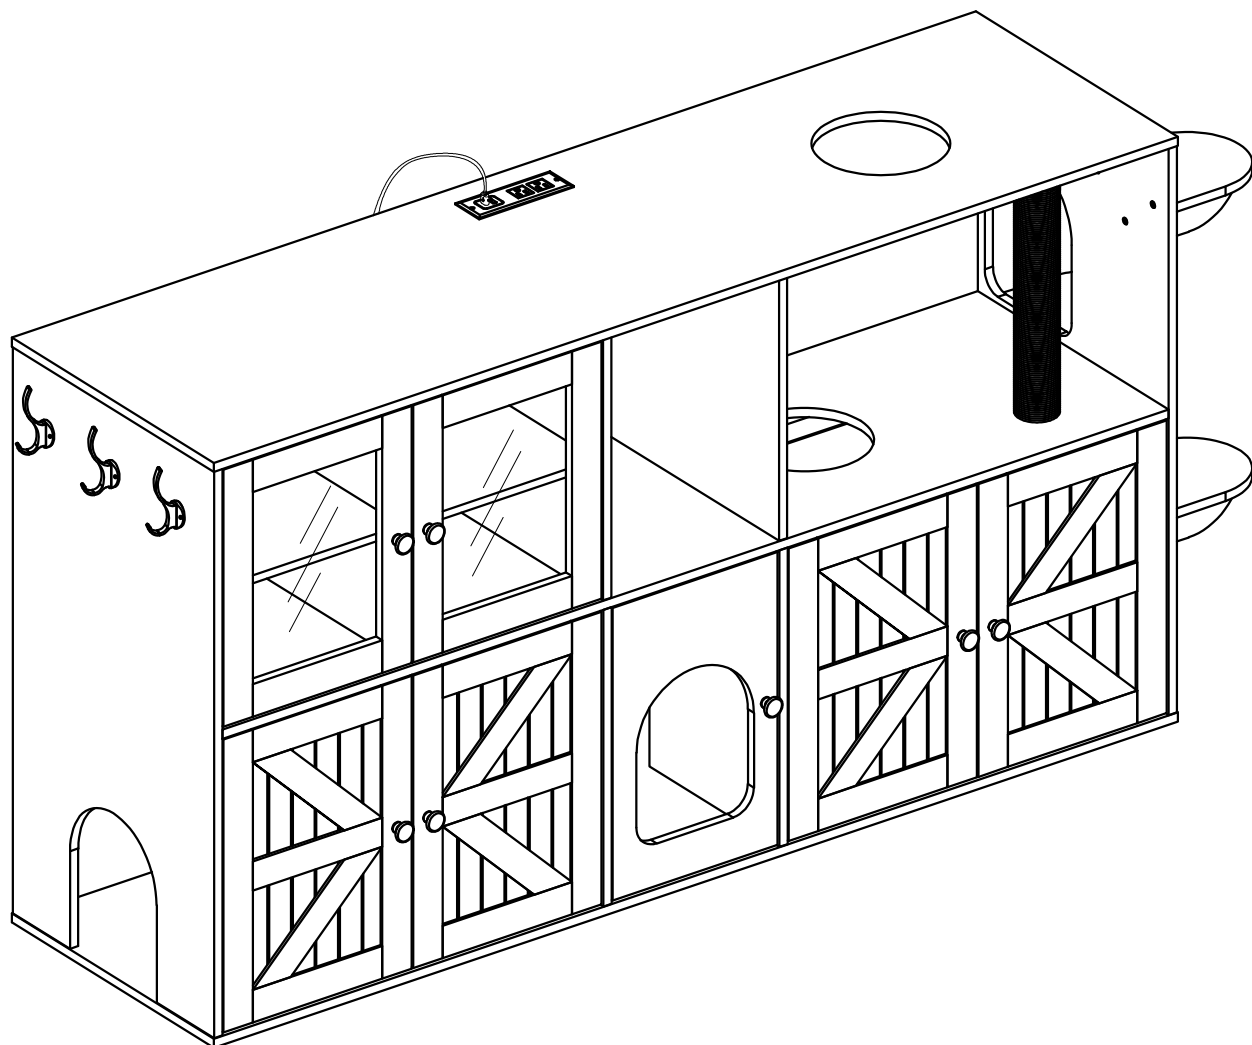

FINISH

Made in VIETNAM

