



INSTALLATION GUIDE

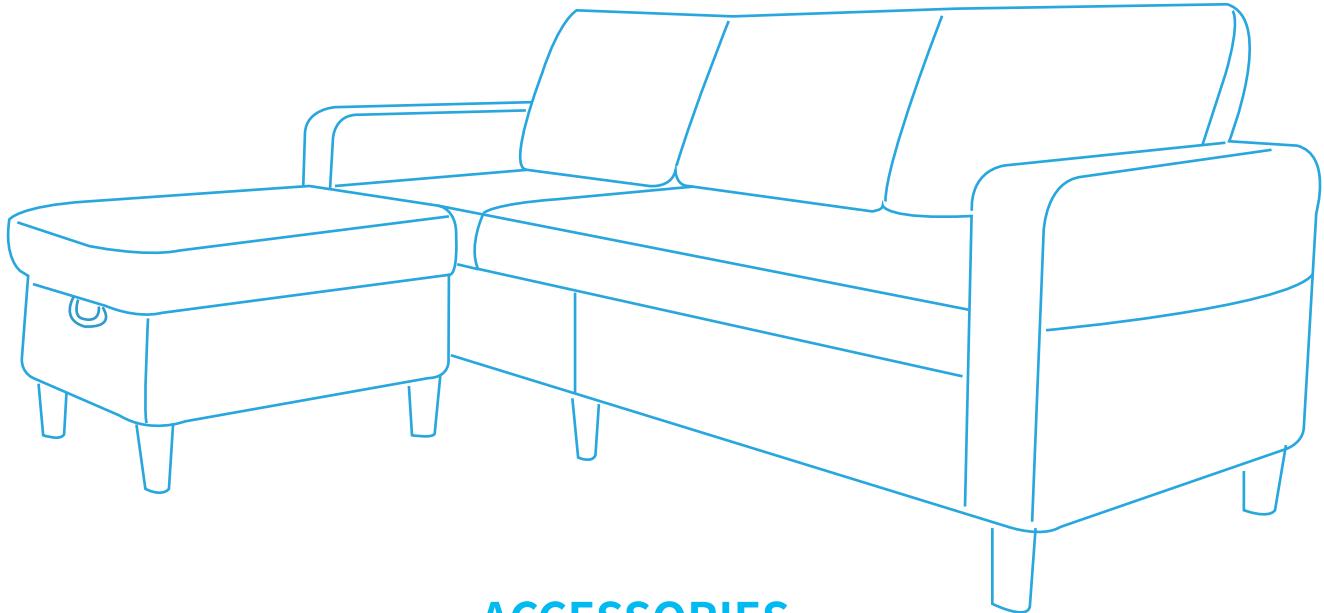

ACCESSORIES




A | 1PC




A1 | 1PC



R | 2PCS







R1 | 4PCS



C | 3PCS



D | 4PCS

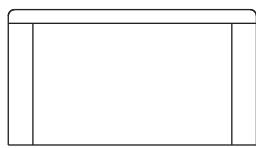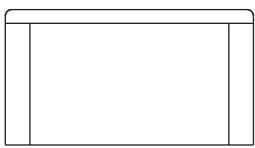

B | 2PC




E | 1PC

E1 | 1PC

K | 1PCS

G | 1PC

F | 4PCS

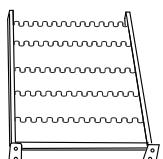

Q | 2PCS

M | 2PCS

N | 4PCS



V | 1PC

O | 1PC

S | 1PC

T | 8PCS

U | 8PCS

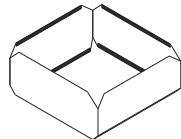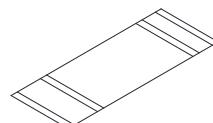

Y | 8PCS

X | 8PCS

V1 | 8PCS

V3 | 18PCS

V4 | 6PCS

Z | 1PC

Z1 | 1PC


Z2 | 1PC

I | 2PC




I3 | 4PC



1

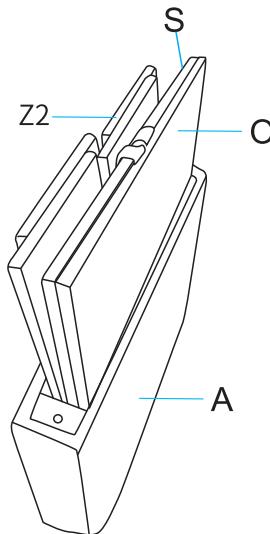


2

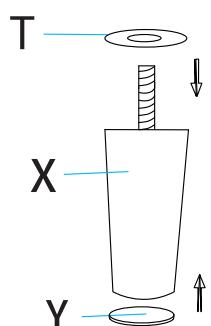

3

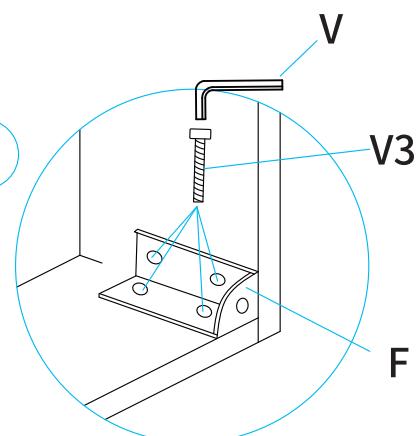
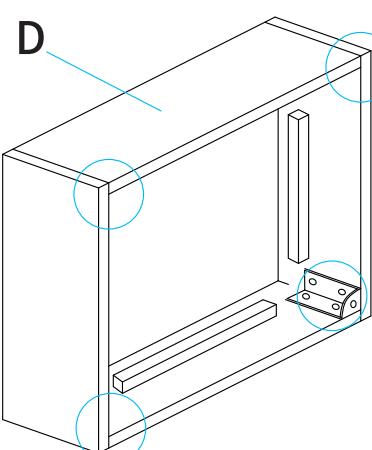


4

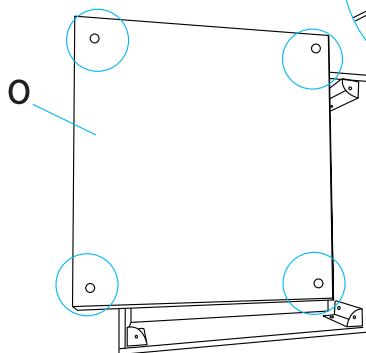


Cover from top to bottom
and align the screw holes


5

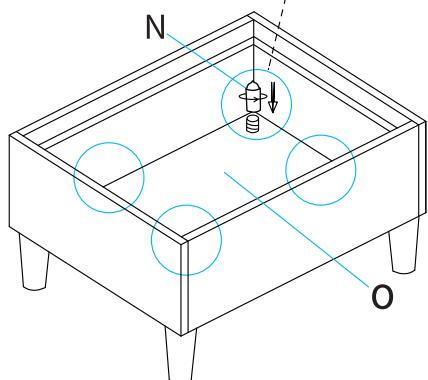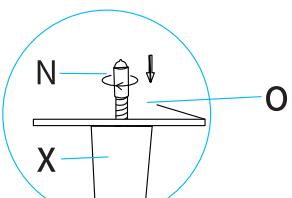


6

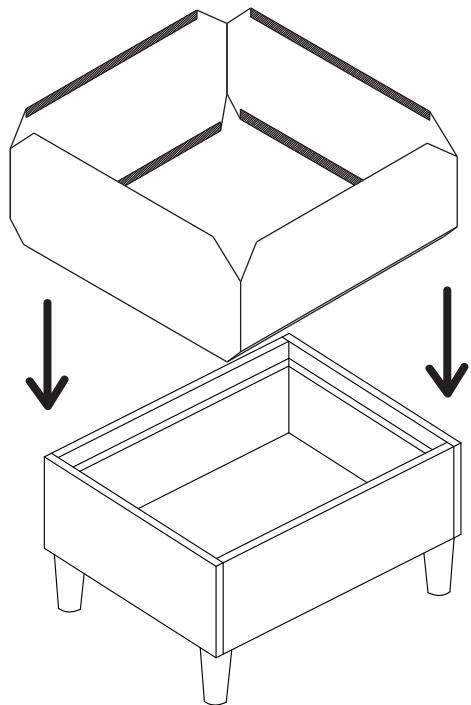


7

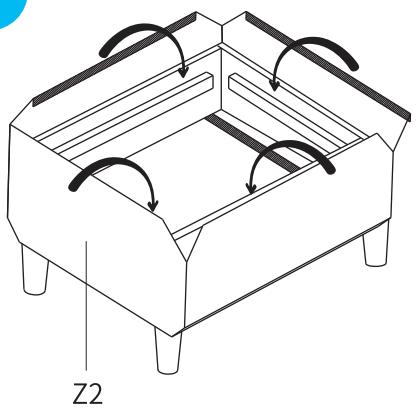


8

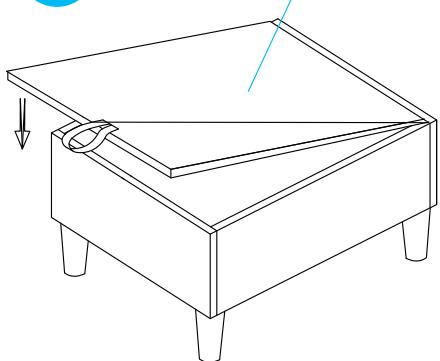


9

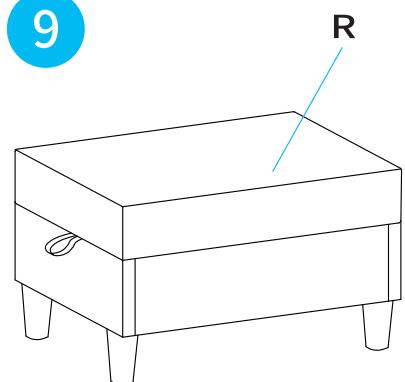


10

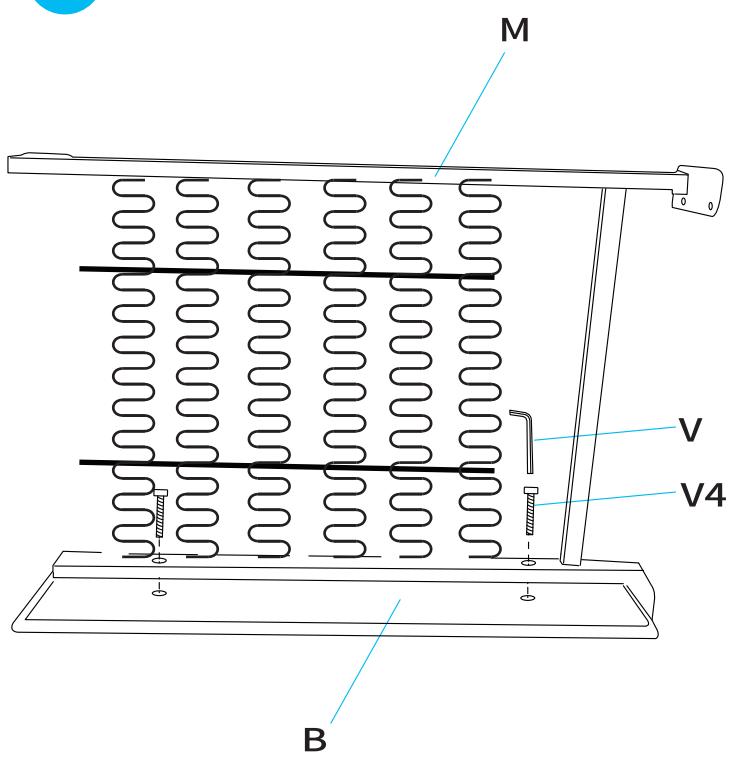

11

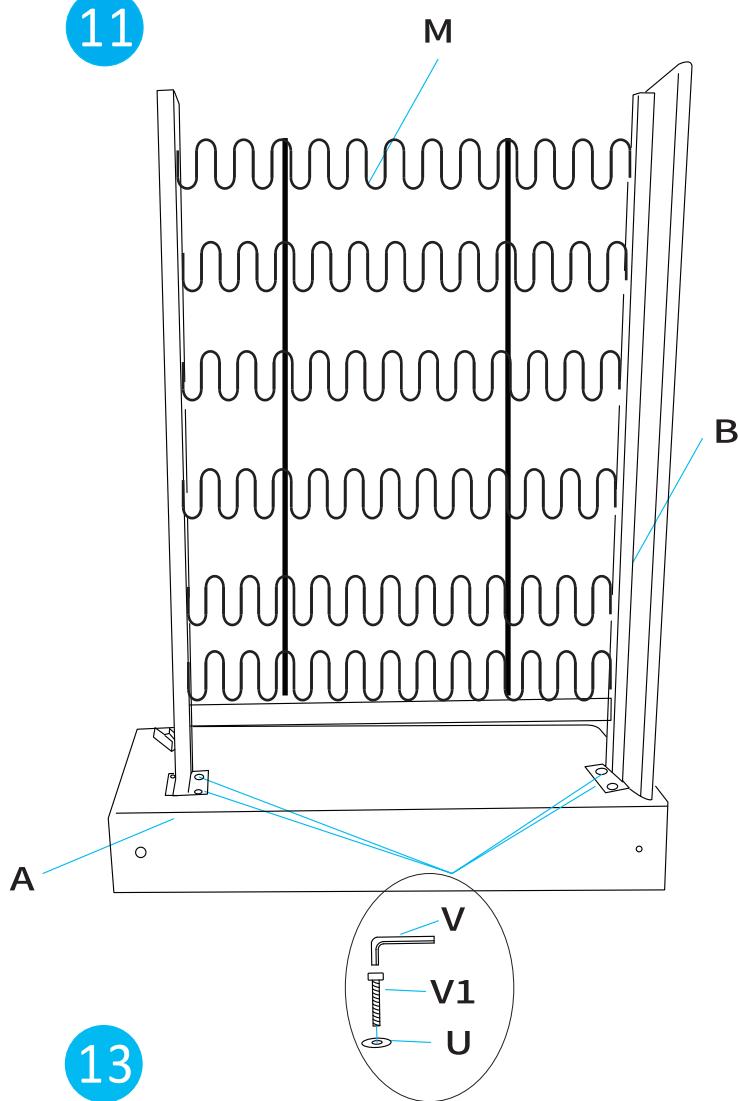


12


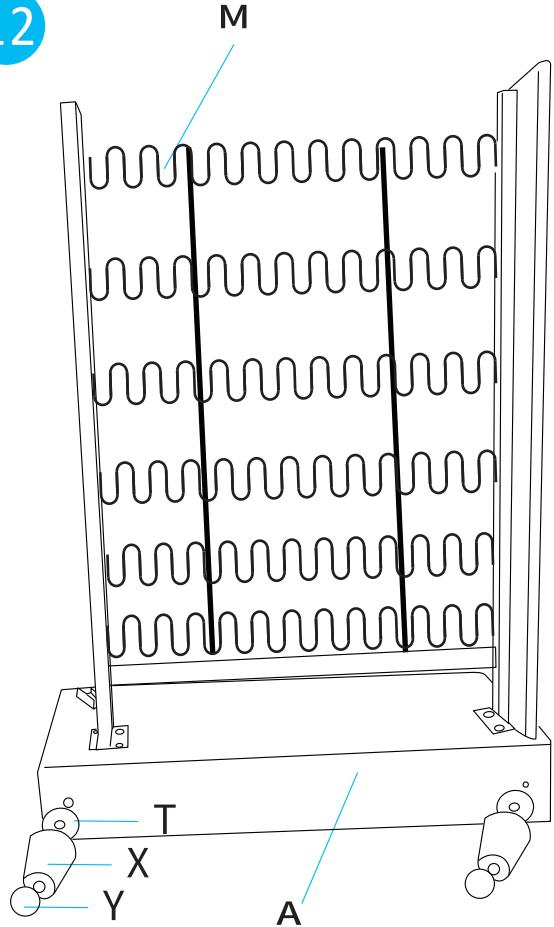


13


Knock the iron frame with
a small hammer

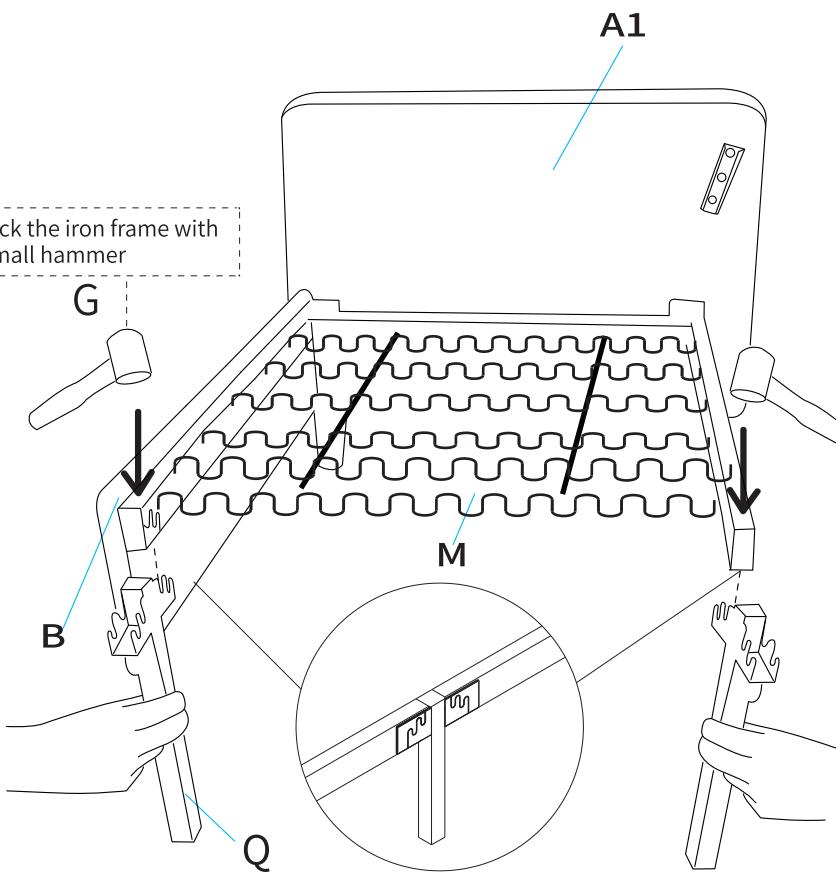


14

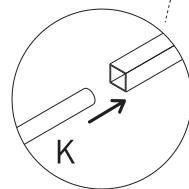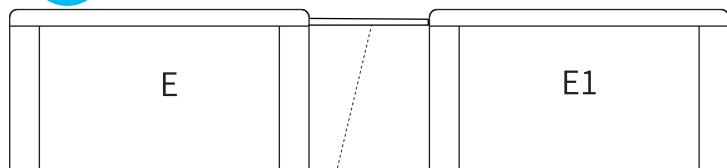


15

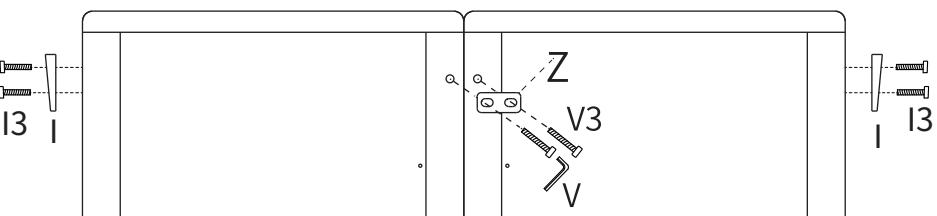


16

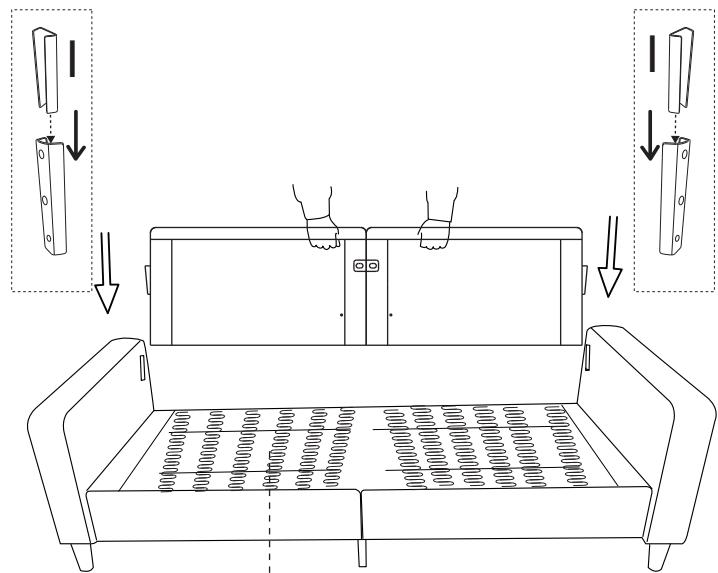

17

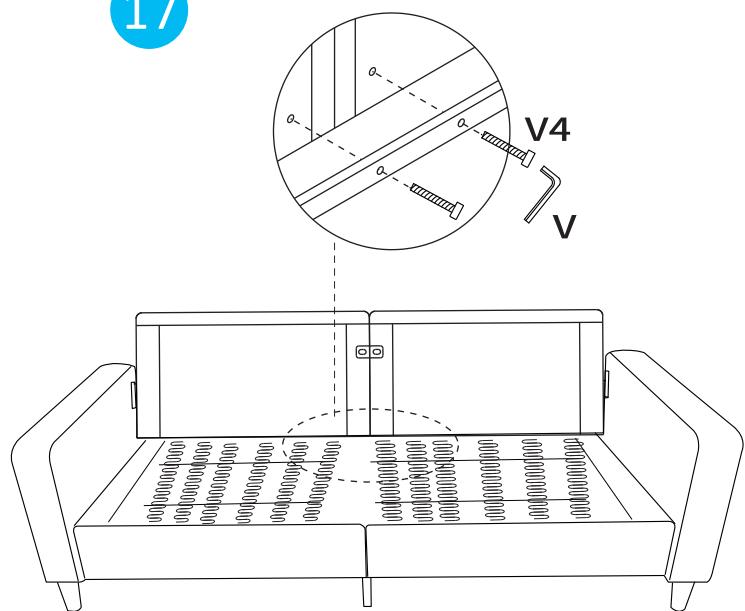

Put the cloth on the spring, and fold and stick the Velcro from the edge of the spring down.

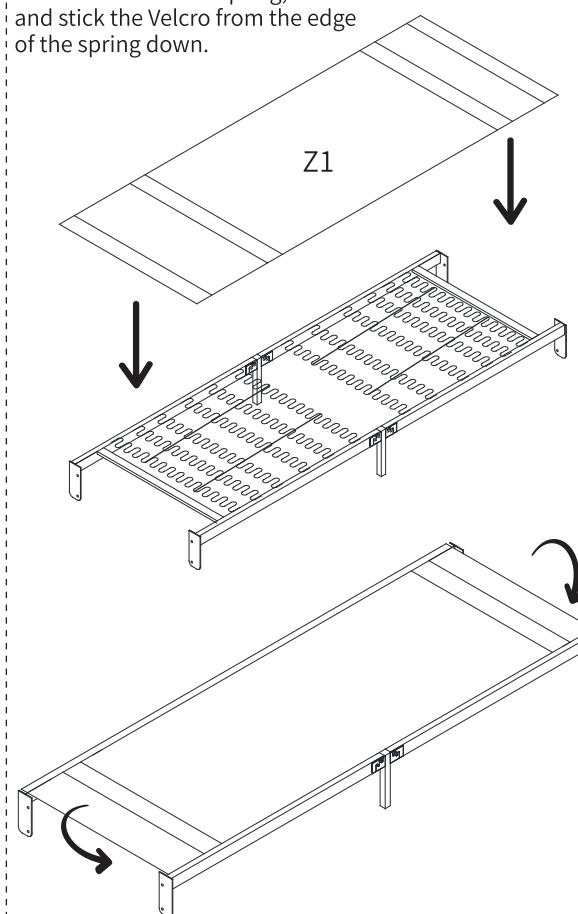

18

