
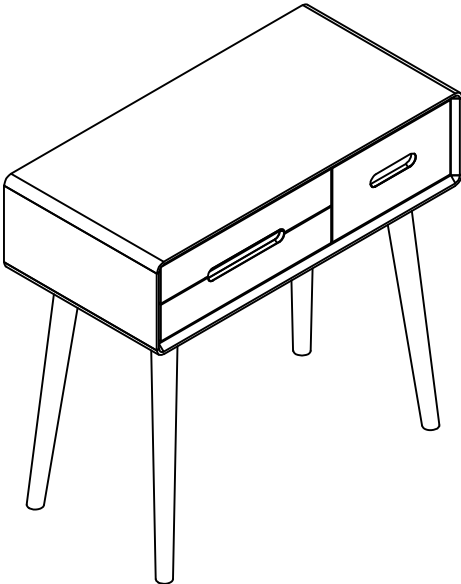






ASSEMBLY INSTRUCTIONS		Part List					Hardware List						
		No.	Description	Pic	Dimension	Qty	No.	Description	Pic	Dimension	Qty		
3 Drawer Vanity Desk IMPORTANT: Before starting assembly, check that all parts and hardware match the list in the instructions. If any parts are missing or damaged upon arrival, contact us immediately. We'll respond within 24 hours to assist you. 		1	Cabinet		1000*400*210MM	1	A	Hexagon socket head screw		M6*25MM	16		
		2	Foot column		Ø50*549MM	4	B	Flat shims		M6*13MM	16		
		3	Upper left drawer		555*315*86MM	1	C	Hexagon wrench		M4*57MM	1		
		4	Lower left drawer		555*315*86MM	1							
		5	Right drawer		400*315*168MM	1							
This product has passed rigorous wood and paint inspections to meet national standards. It leaves the factory only after verifying the packaging is intact. We value your feedback on our after-sales support. Please share your thoughts to help us improve!		Name:		Wood Furniture		Standard	Required Workers		Inspector				
		Qualification:		Pass					QC 02				
		Grade:		Class 1									

Model: Vanity Desk with Lighted Mirror



Step 1

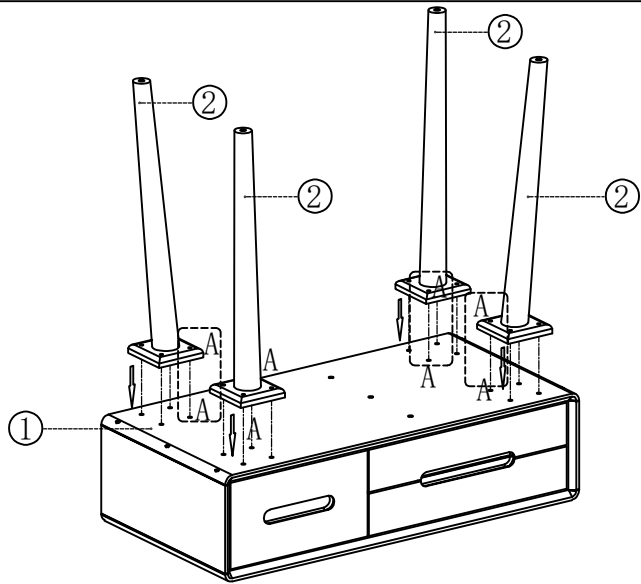

Caution: After unpacking, check the correct number of accessories against the instructions.


Align A of part #2 with A on part #1

Step 2

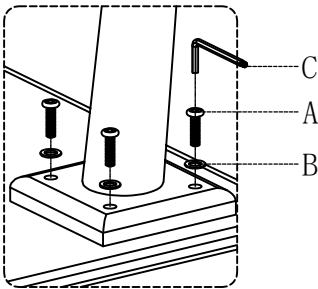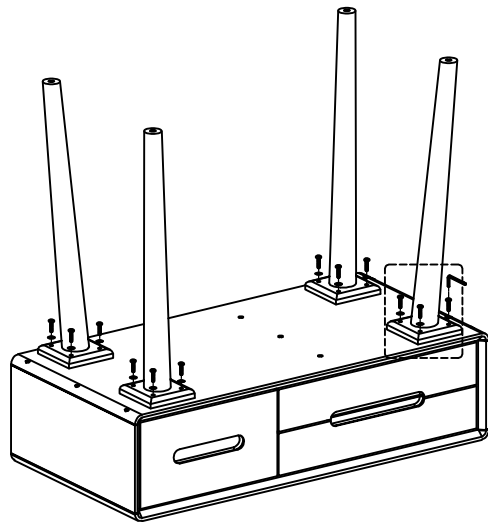

Assemble part 1/2 using hardware A/B/C as shown.

Step 3

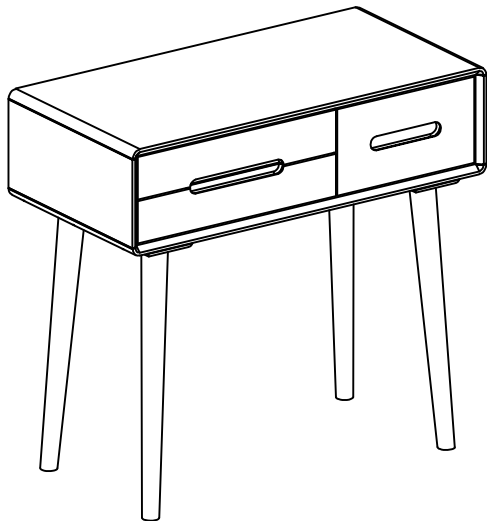

Assembly complete.