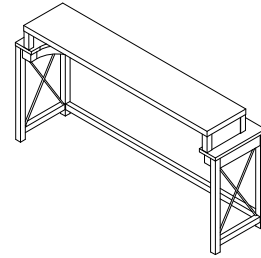


ASSEMBLY INSTRUCTIONS



042-585

TOOLS REQUIRED:

Allen Wrench (Provided, Part E)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

Figure 1

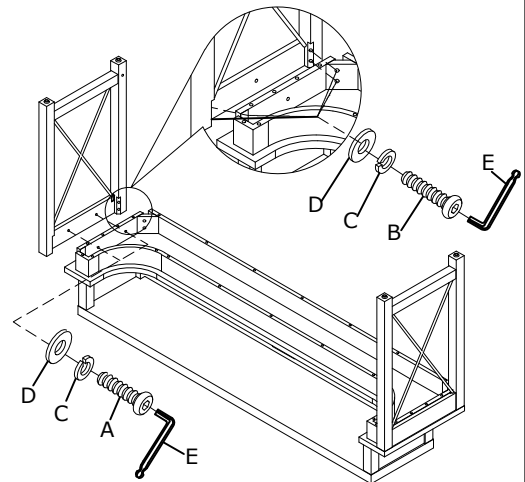
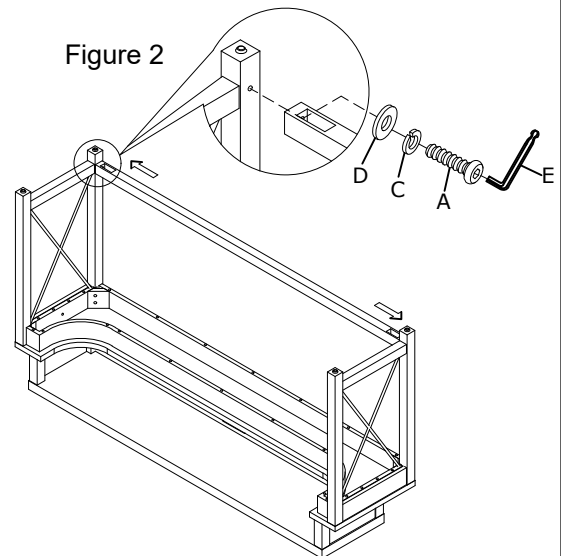





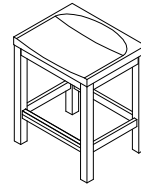


Figure 2



No.	Hardware List		Q'ty
A		Bolt Ø1/4 "x1-3/8 "	6pcs
B		Bolt Ø1/4 "x2 "	8pcs
C		Lock Washer Ø1/4"	14pcs
D		Flat Washer Ø1/4"*16mm	14pcs
E		Allen Wrench 4MM	1pc

ASSEMBLY INSTRUCTIONS



042-690

TOOLS REQUIRED:

Allen Wrench (Provided, Part F)

BEFORE YOU START:

1. Check the parts against the parts list to make sure all items are present.
2. Assemble your furniture on a soft, flat surface to avoid scratching the finish.
3. **CAUTION:** Do not over tighten screws, nuts or bolts during assembly.
4. Your furniture may require occasional tightening.

INSTRUCTIONS:

Figure 1

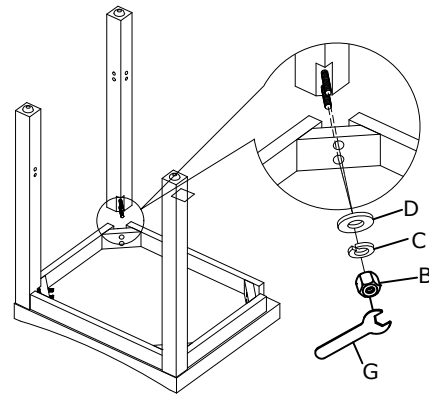
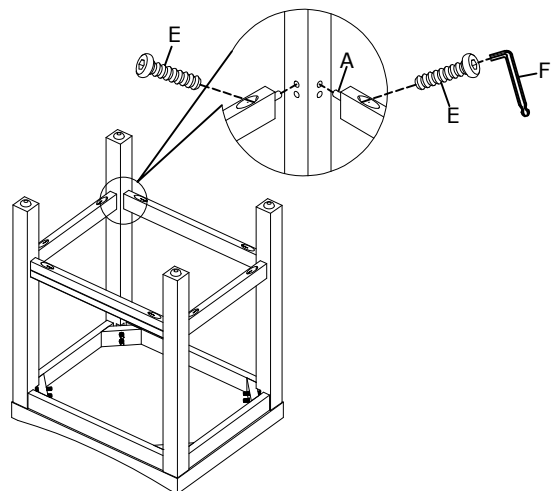







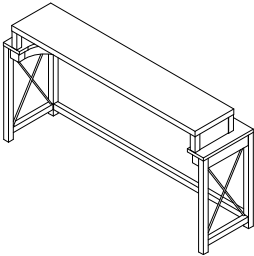


Figure 2



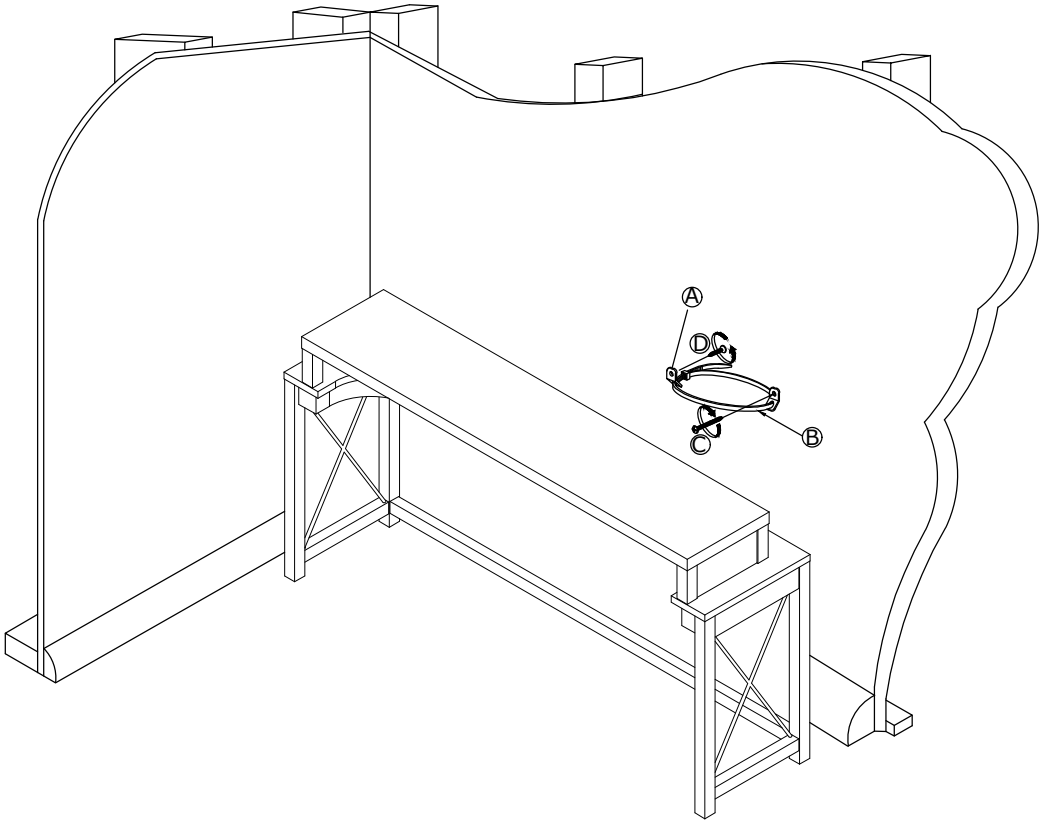
No.		Hardware List	Q'ty
A		Dowel Ø8*30mmL	8pcs
B		Hex nut Ø5/16"	8pcs
C		Lock Washer Ø5/16"	8pcs
D		Flat Washer Ø5/16"*16mm	8pcs
E		Bolt Ø1/4 "x1-3/4 "	8pcs
F		Allen Wrench 4MM	1pc
G		Open Wrench Ø5/16"	1pc





ASSEMBLY INSTRUCTIONS



042-585

NOTE: ANTI-TIPPING KIT INSTRUCTIONS:
REFER TO KIT'S BAG



No.	Hardware List		Q'ty
A		Mounting Bracket	2pcs
B		Nylon Restraint	1pc
C		Long screw	1pc
D		Short screw	1pc