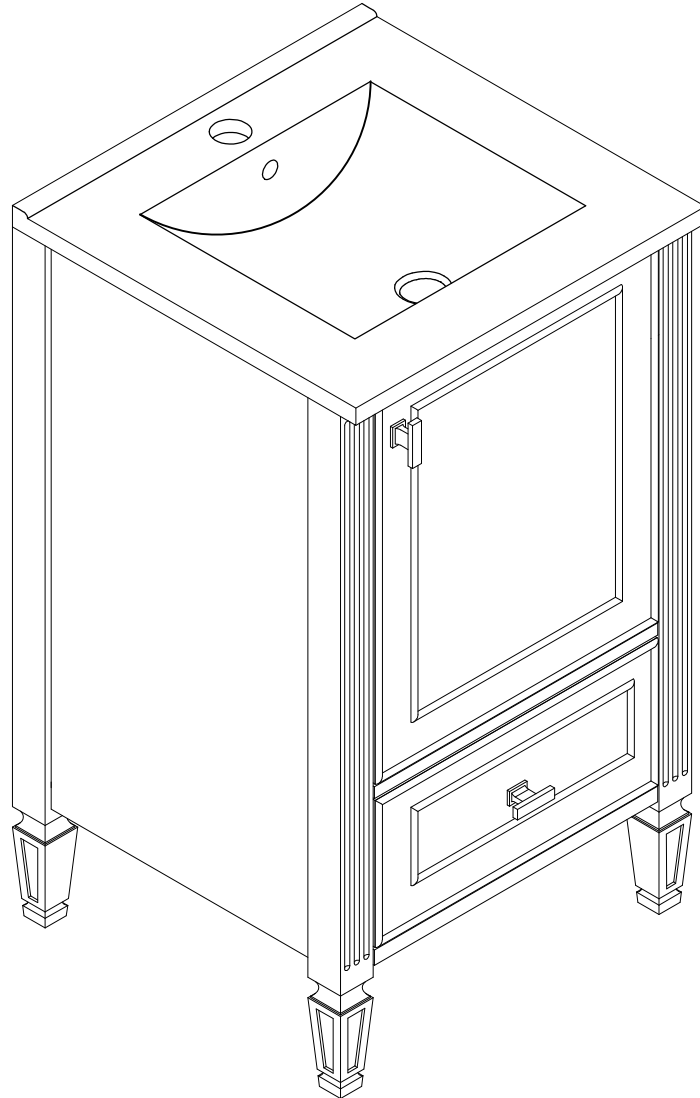


ASSEMBLY INSTRUCTIONS

20 INCH BATH VANITY (COMBO)

SKU: N759P448333

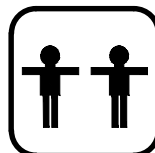
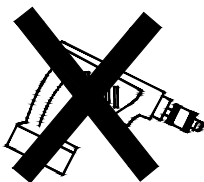


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.




+

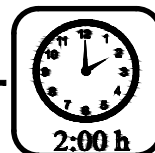

Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Before Installation






Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions







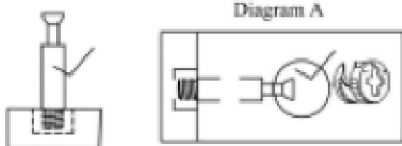
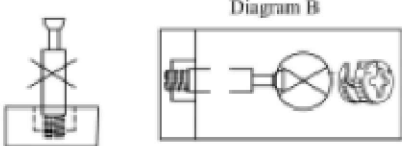
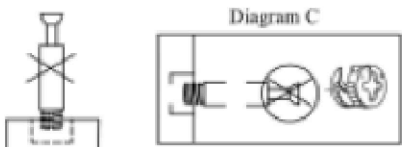

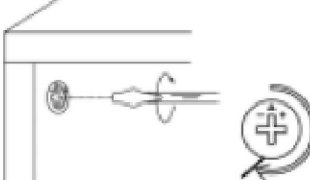
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

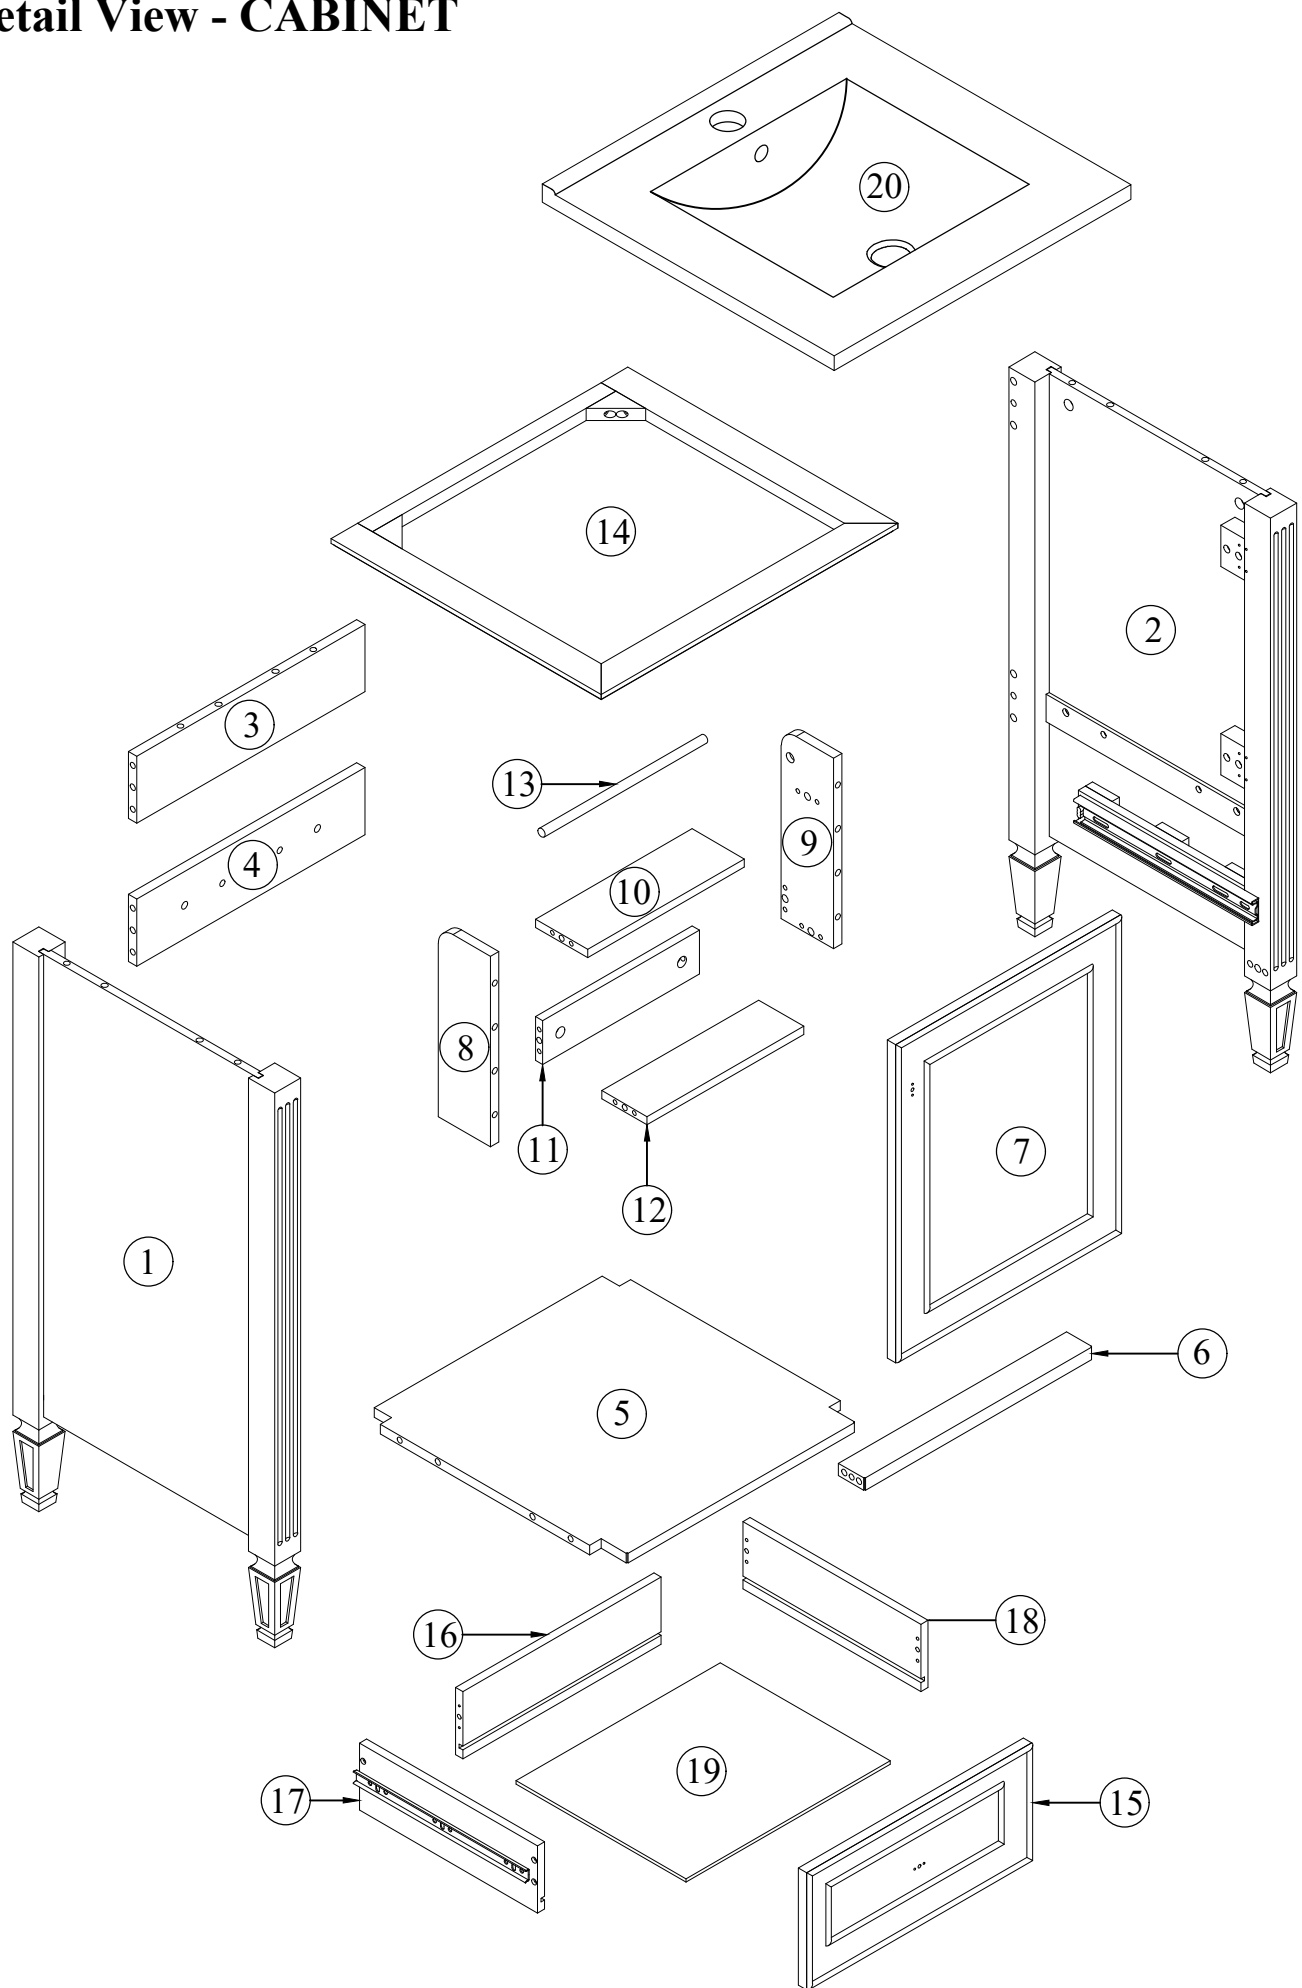Detail View - CABINET











Identifying the Hardware-Identify the hardware using the illustrations below.

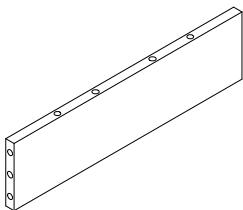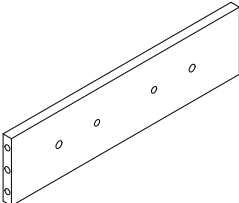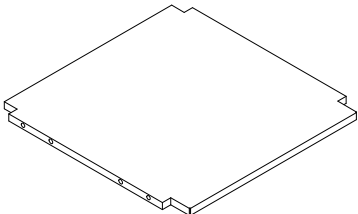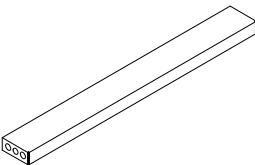
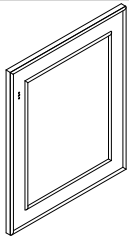

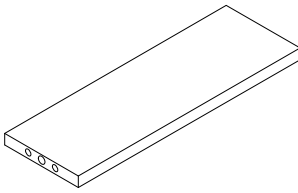
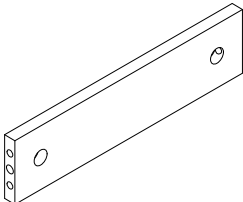
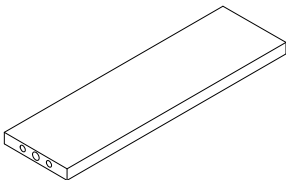
Part List

1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Top Panel Rear - 1pc		Bottom Panel Rear - 1pc
5		6	
	Middle partition panel - 1pc		Bottom rail - 1pc
7		8	
	Door - 1pc		Door Side Panel (L) - 1pc
9		10	
	Door Side Panel (R) - 1pc		Door Mid Panel - 1pc
11		12	
	Door Back Panel - 1pc		Door Bottom Panel - 1pc

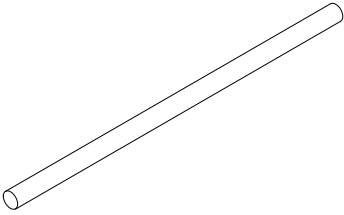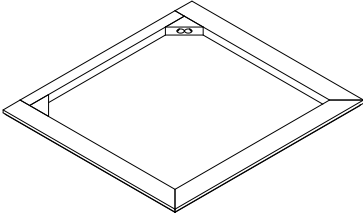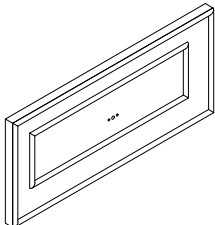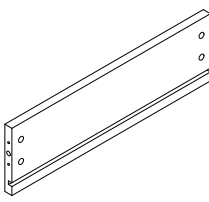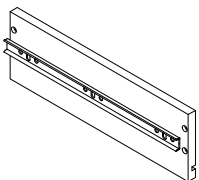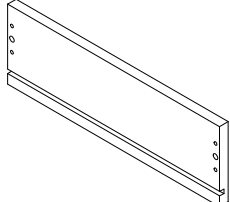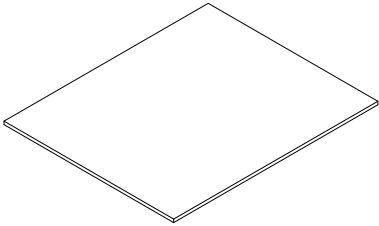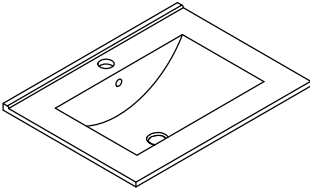Part List


13	 Round Bar - 1pc	14	 Top Frame - 1pc
15	 Drawer Front - 1pc	16	 Drawer Back Panel - 1pc
17	 Drawer Side Panel (L) - 1pc	18	 Drawer Side Panel (R) - 1pc
19	 Bottom Drawer Panel - 1pc	20	 Sink - 1pc

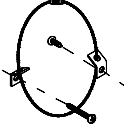Hardware List





A  ø6x35mm	B  ø14.5x9mm	C  ø8x30mm
Three in one bolts(32+1pcs)	Three in one lock(32+1pcs)	Wood dowel(36+1pcs)
D  Damping hinge (2pcs)	E  ø7xø3.5x15mm Flat head screw(12+1pcs)	F  Handle(2pcs)
Damping hinge (2pcs)	Flat head screw(12+1pcs)	Handle(2pcs)
G  ø5/32"x20mm Handle screw(1+1pc)	H  ø5/32"x32mm Handle screw(1+1pc)	I  ø8xø4x32mm Round head screw (8+1pcs)
Handle screw(1+1pc)	Handle screw(1+1pc)	Round head screw (8+1pcs)
J  ø6x30mm Wood dowel(4+1pcs)	K  Anti fall hardware (2sets)	
Wood dowel(4+1pcs)	Anti fall hardware (2sets)	

STEP: 1

A




20PCS

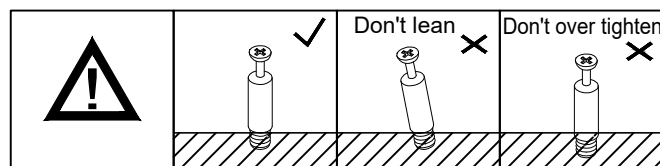
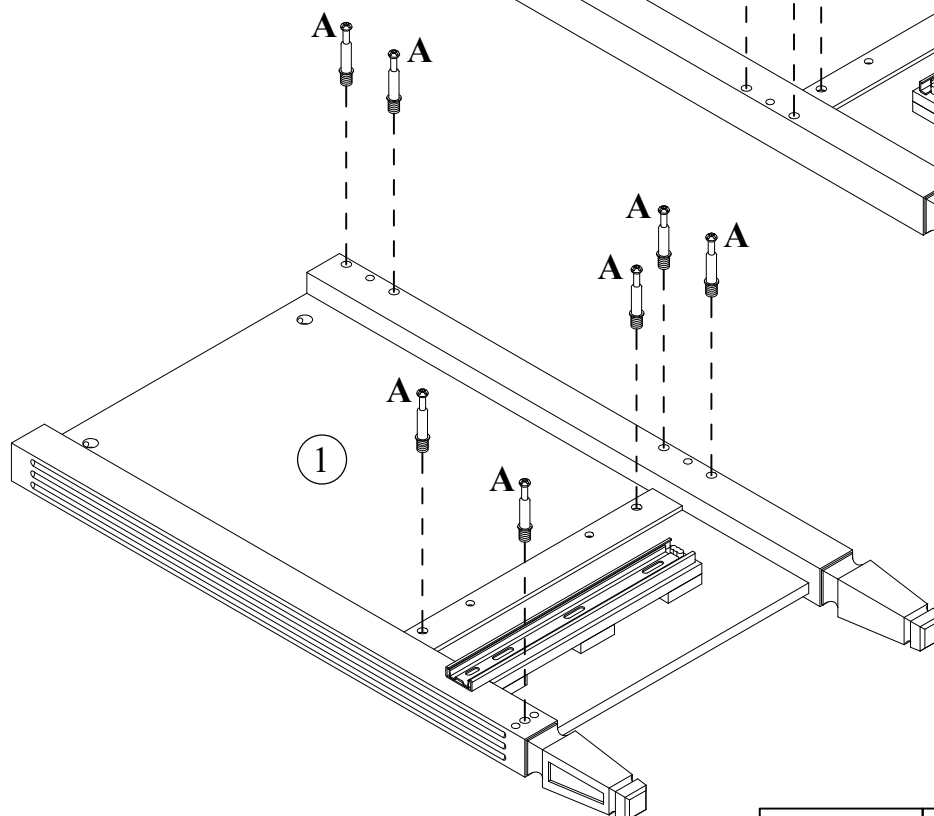
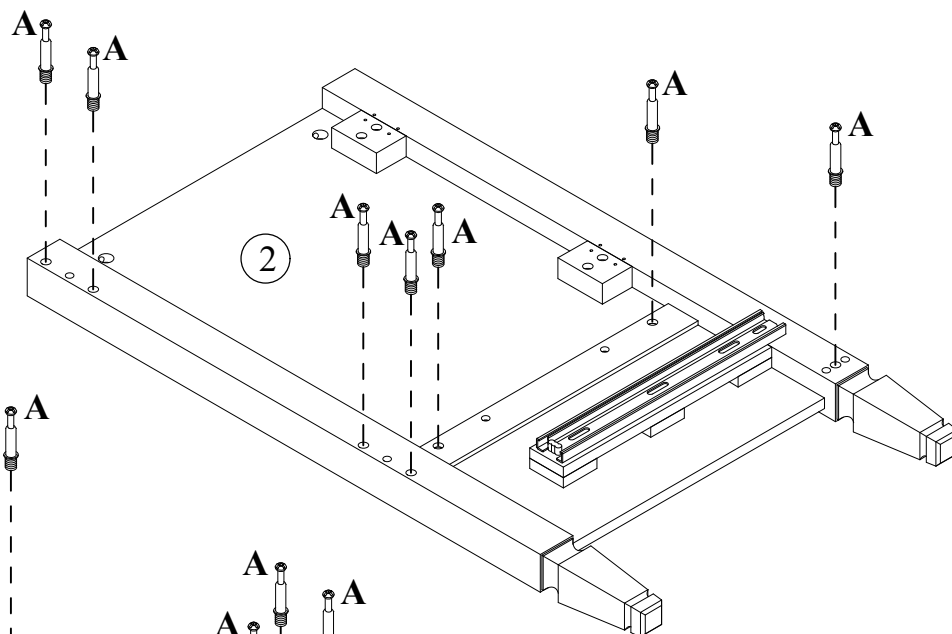
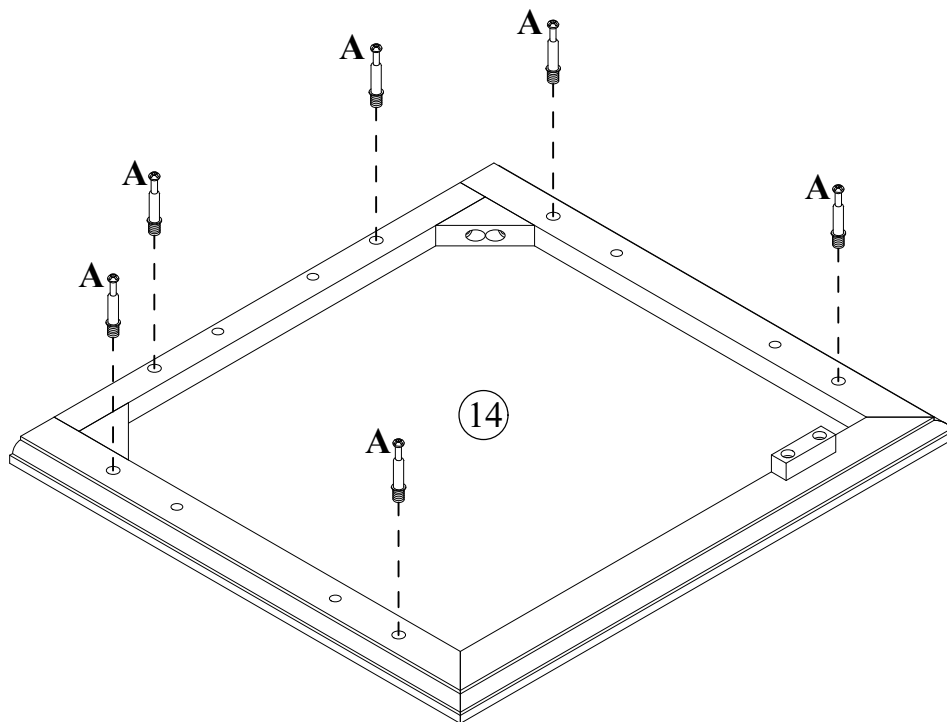


STEP: 2


A





12PCS

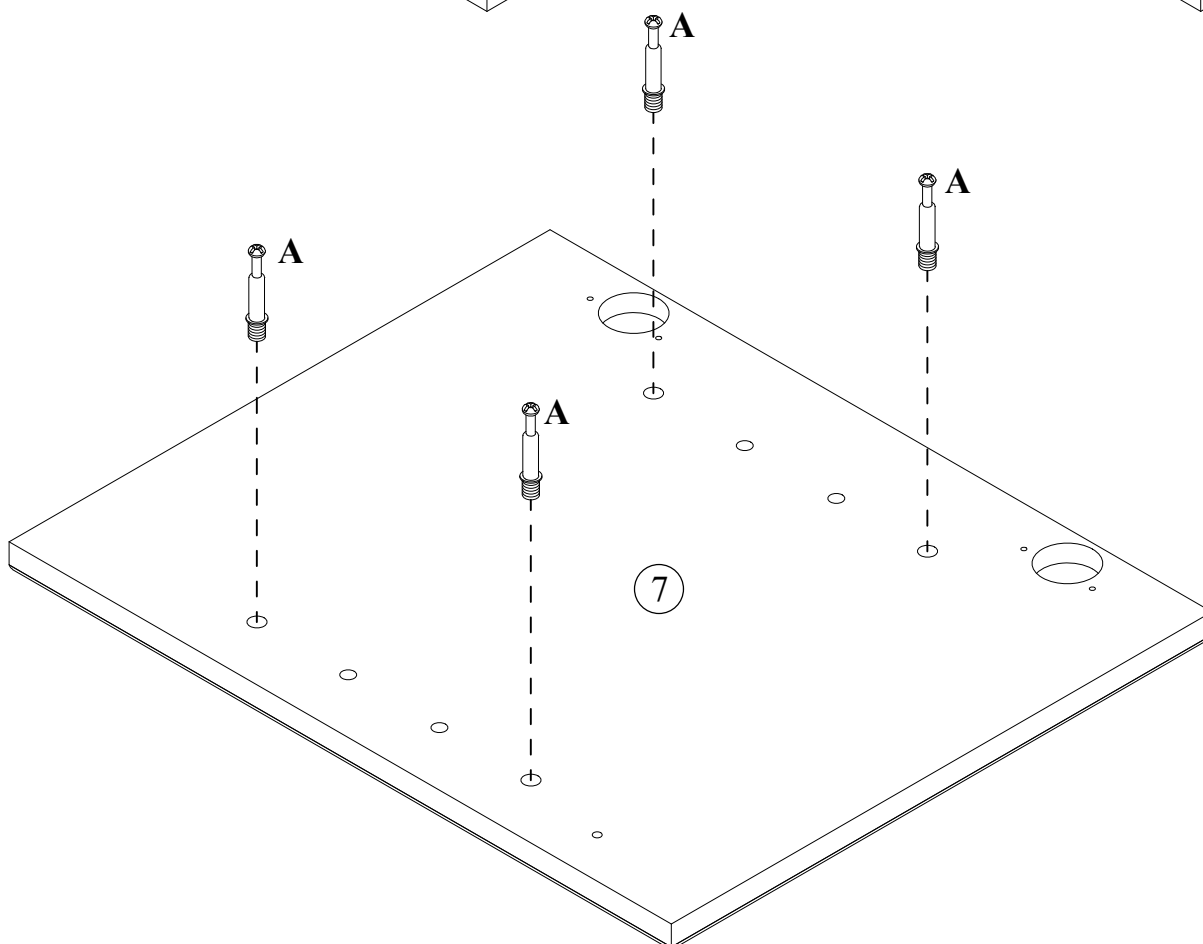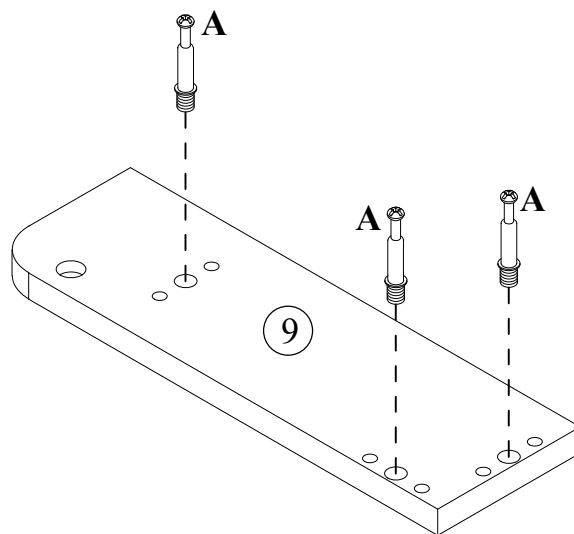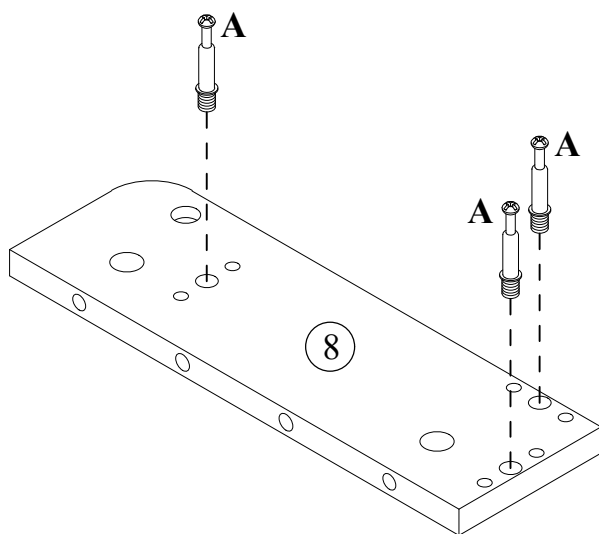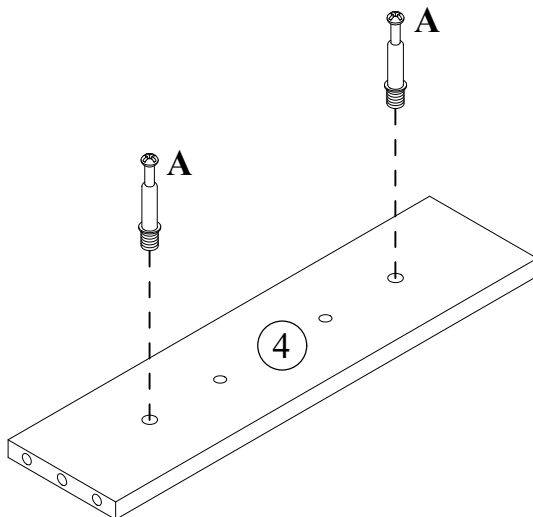


STEP: 3

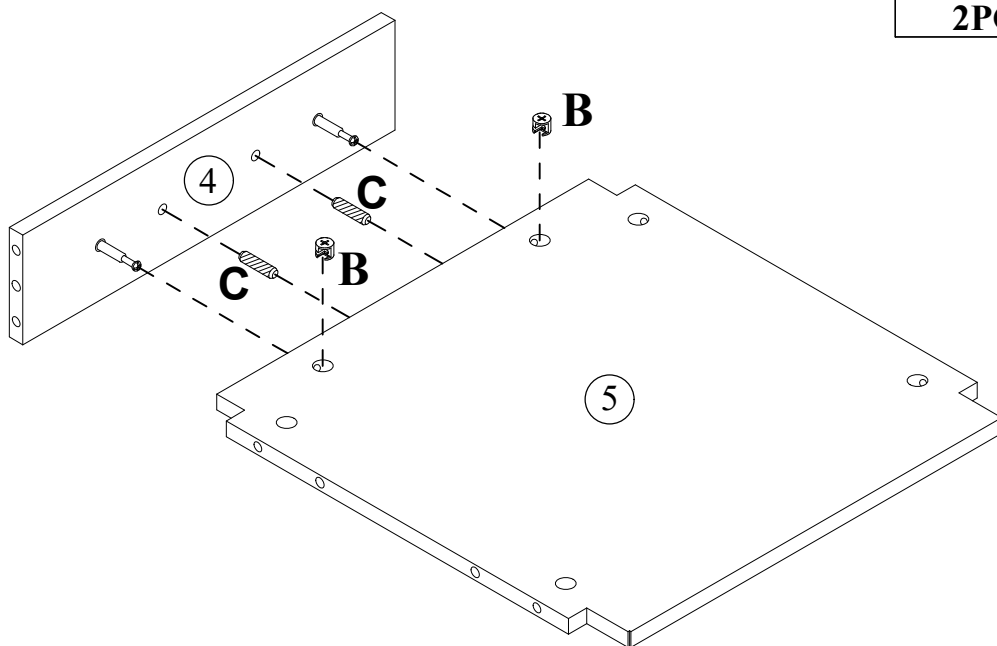


B	C
	
2PCS	2PCS

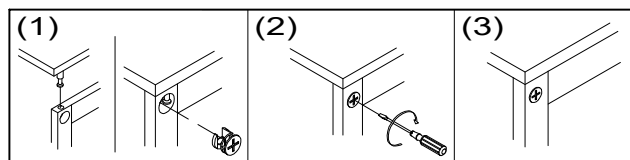


STEP: 4

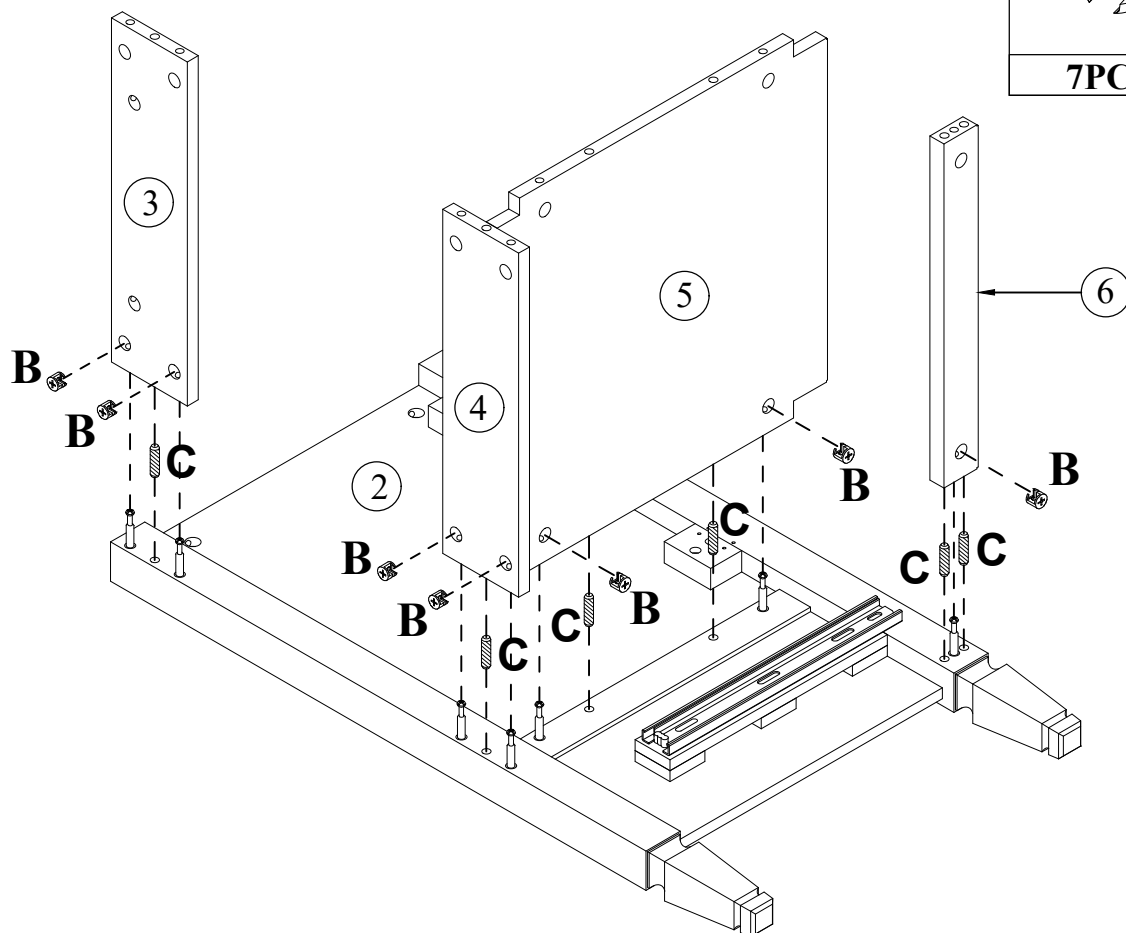



B	C
	
7PCS	6PCS

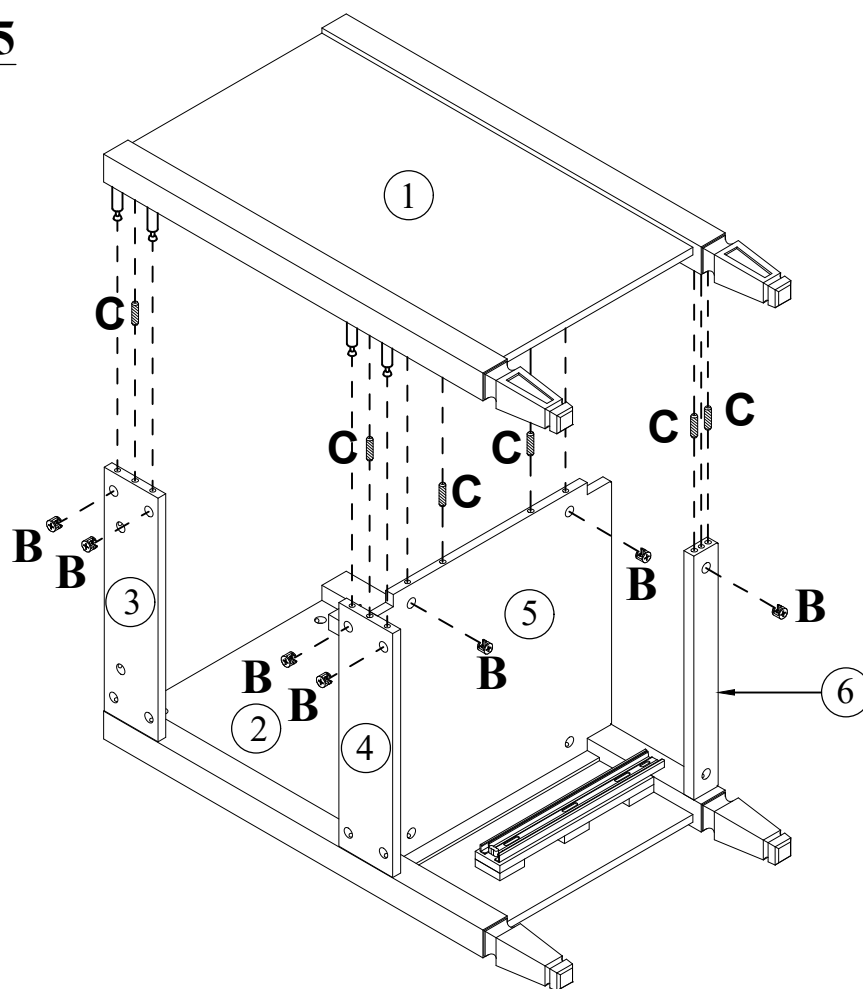STEP: 5




B	C
	
7PCS	6PCS

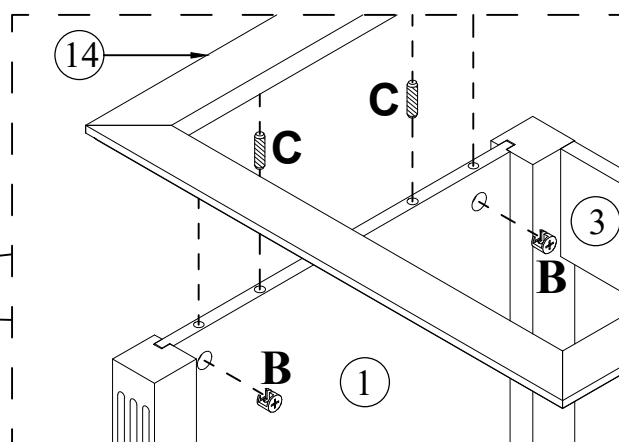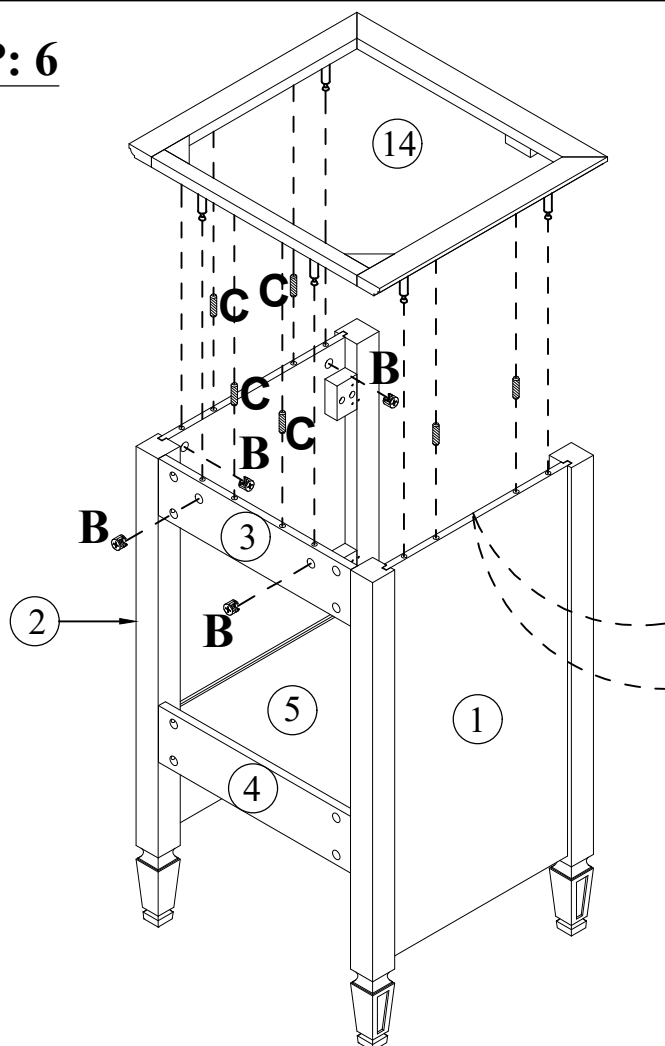STEP: 6




B	C
	
6PCS	6PCS

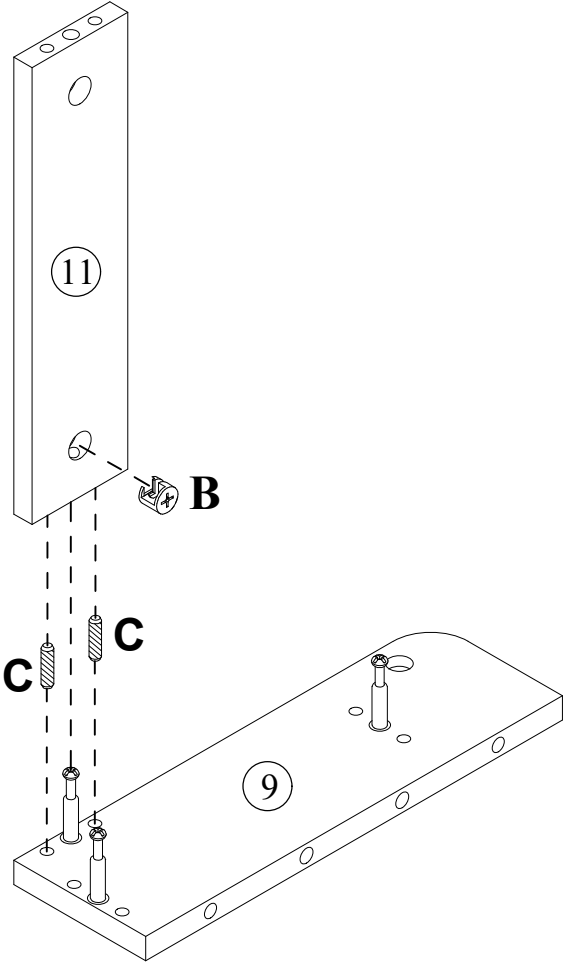STEP: 7




B	C
	
1PC	2PCS

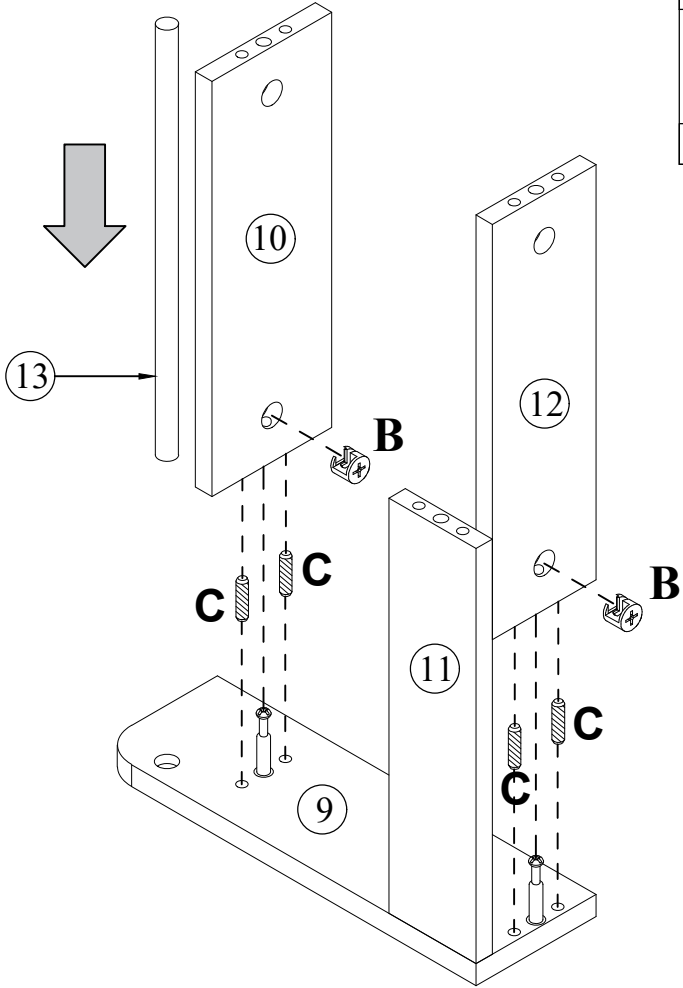STEP: 8




B	C
	
2PCS	4PCS

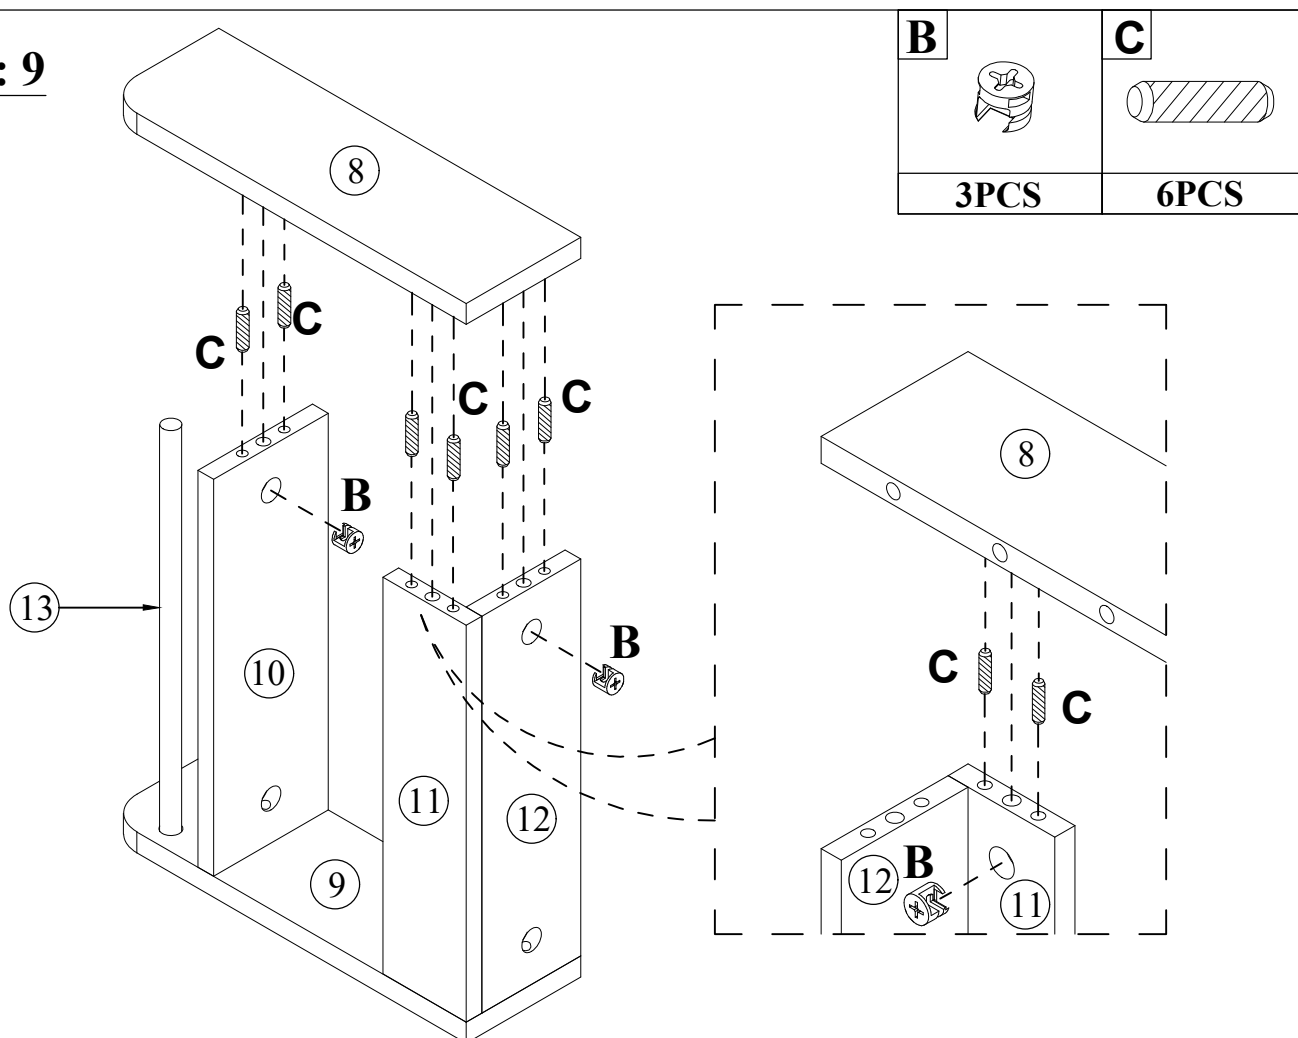
STEP: 9



STEP: 10

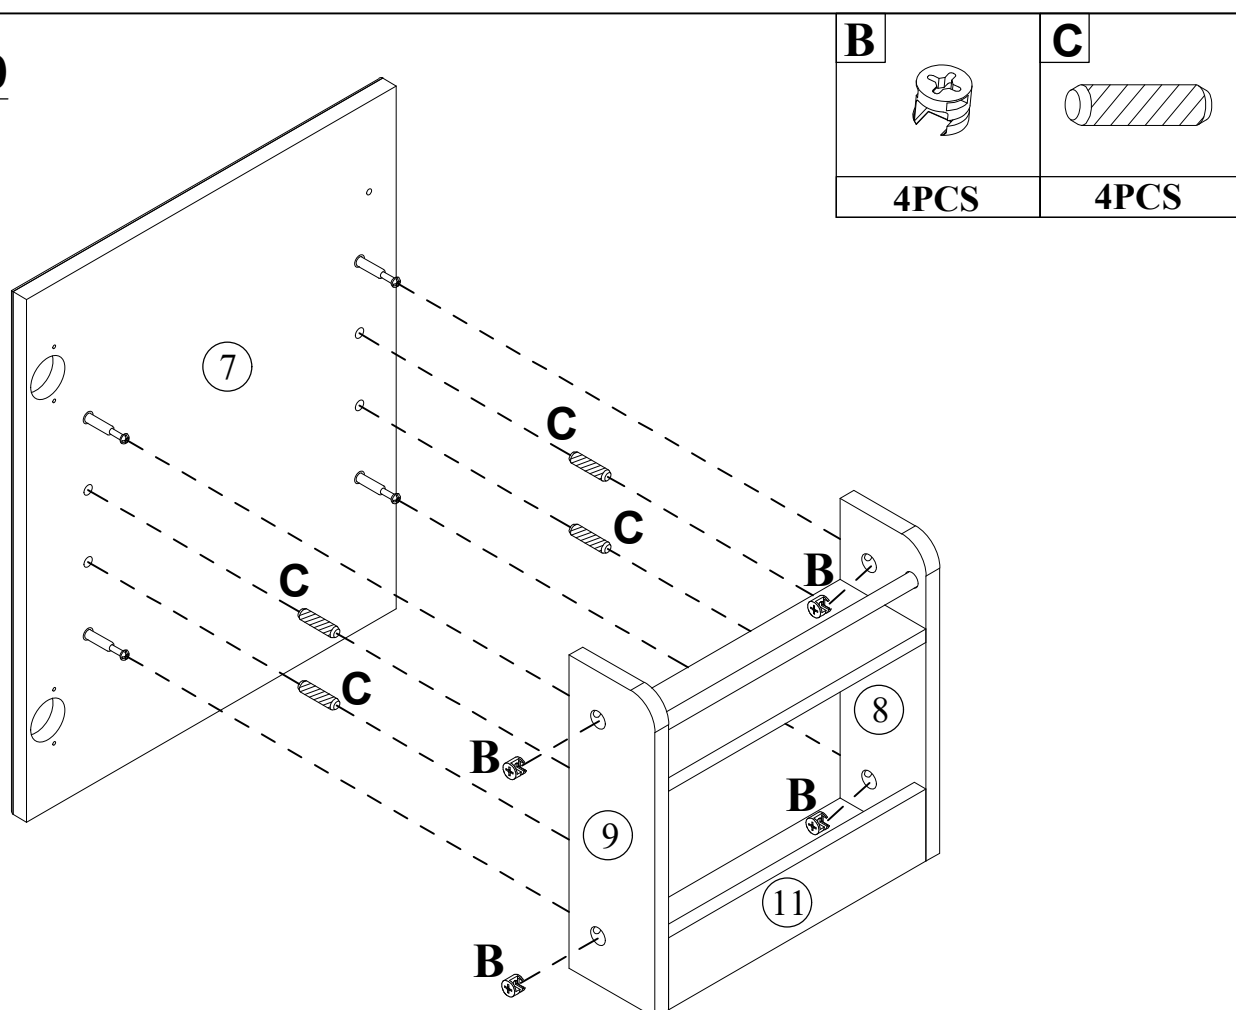




STEP: 11

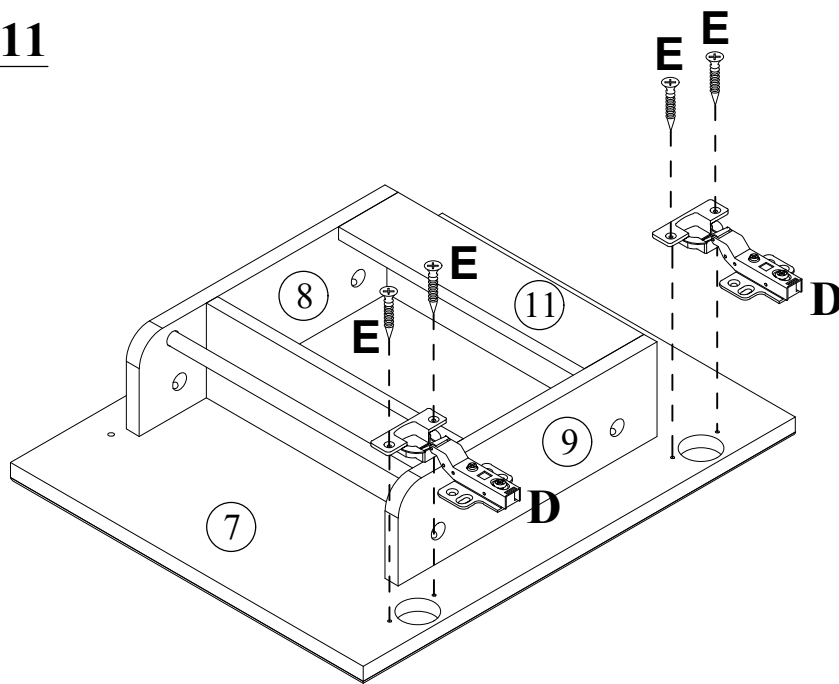


D	E
	
2PCS	4PCS

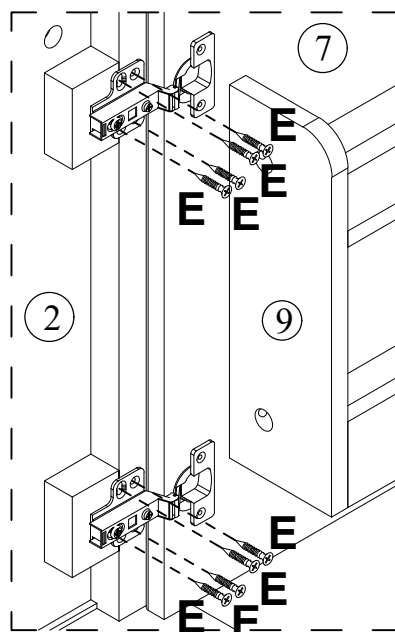STEP: 12





F	G	E
		
1PC	1PC	8PCS

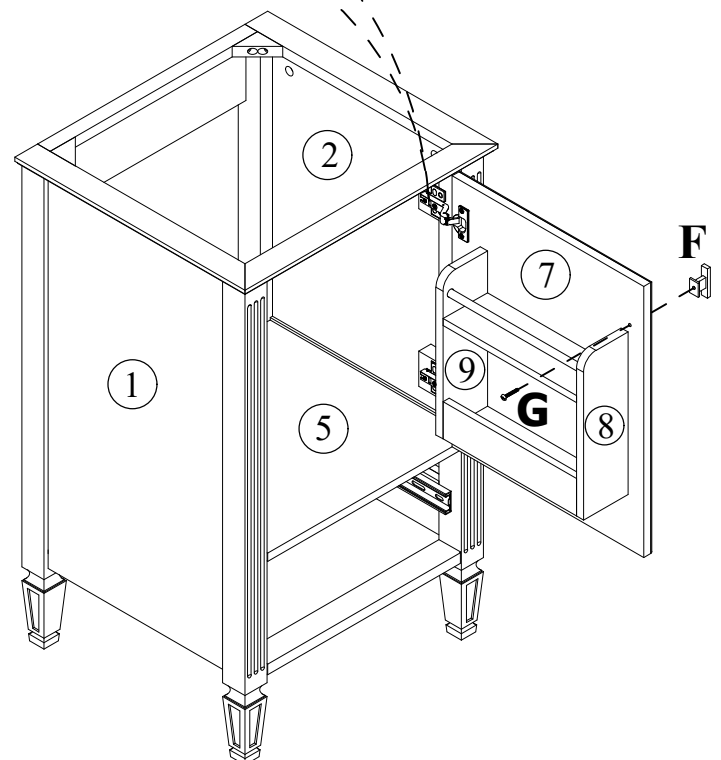



Use the screws to adjust up or down

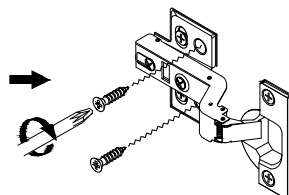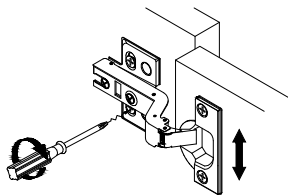Use the screws to permanent







Use the screws to adjust left or right

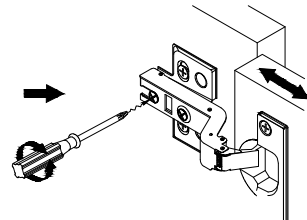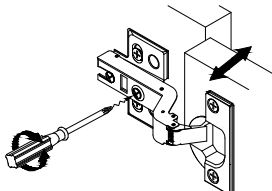Use the screws to adjust in or out




STEP: 13



F		H		I		J	
1PC		1PC		8PCS		4PCS	

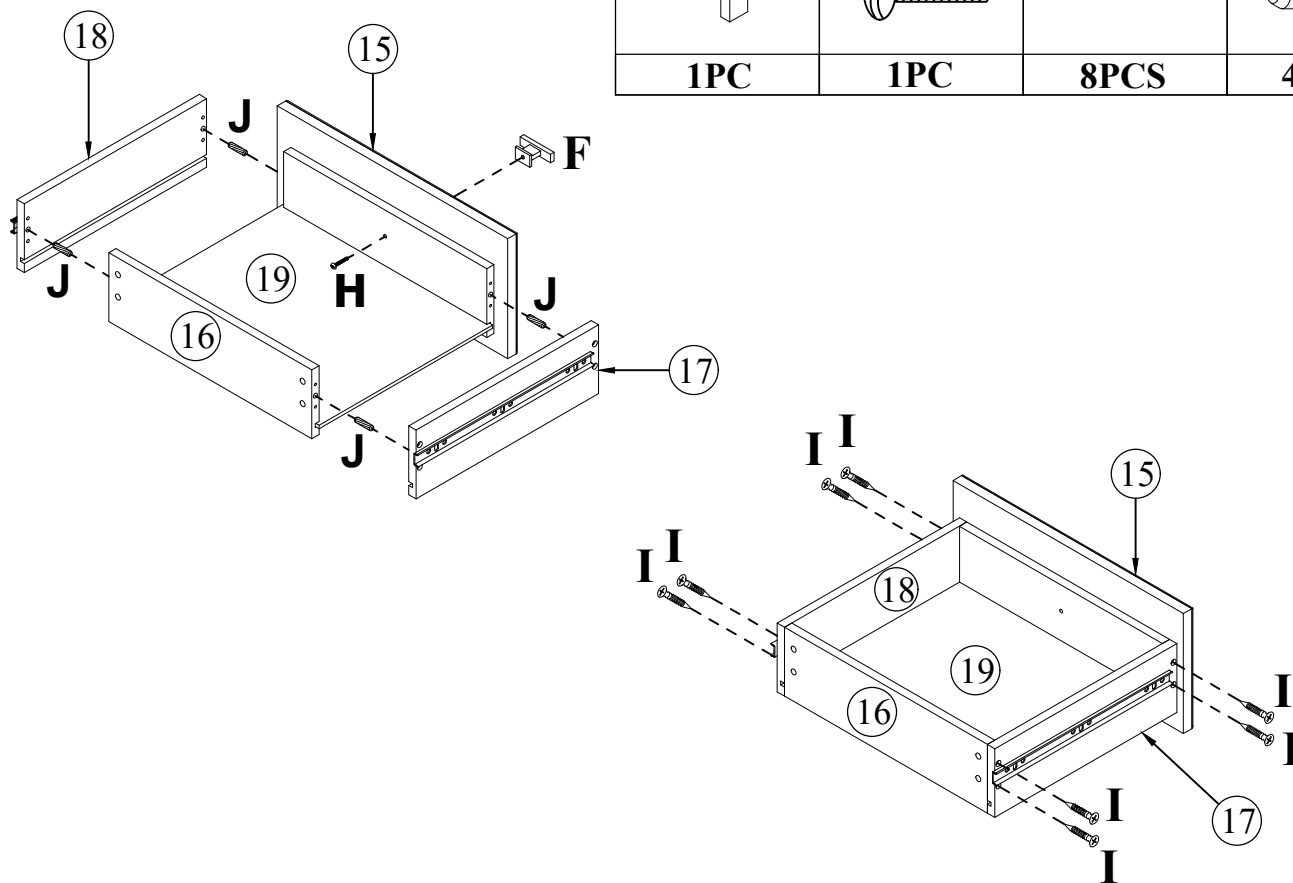

STEP: 14

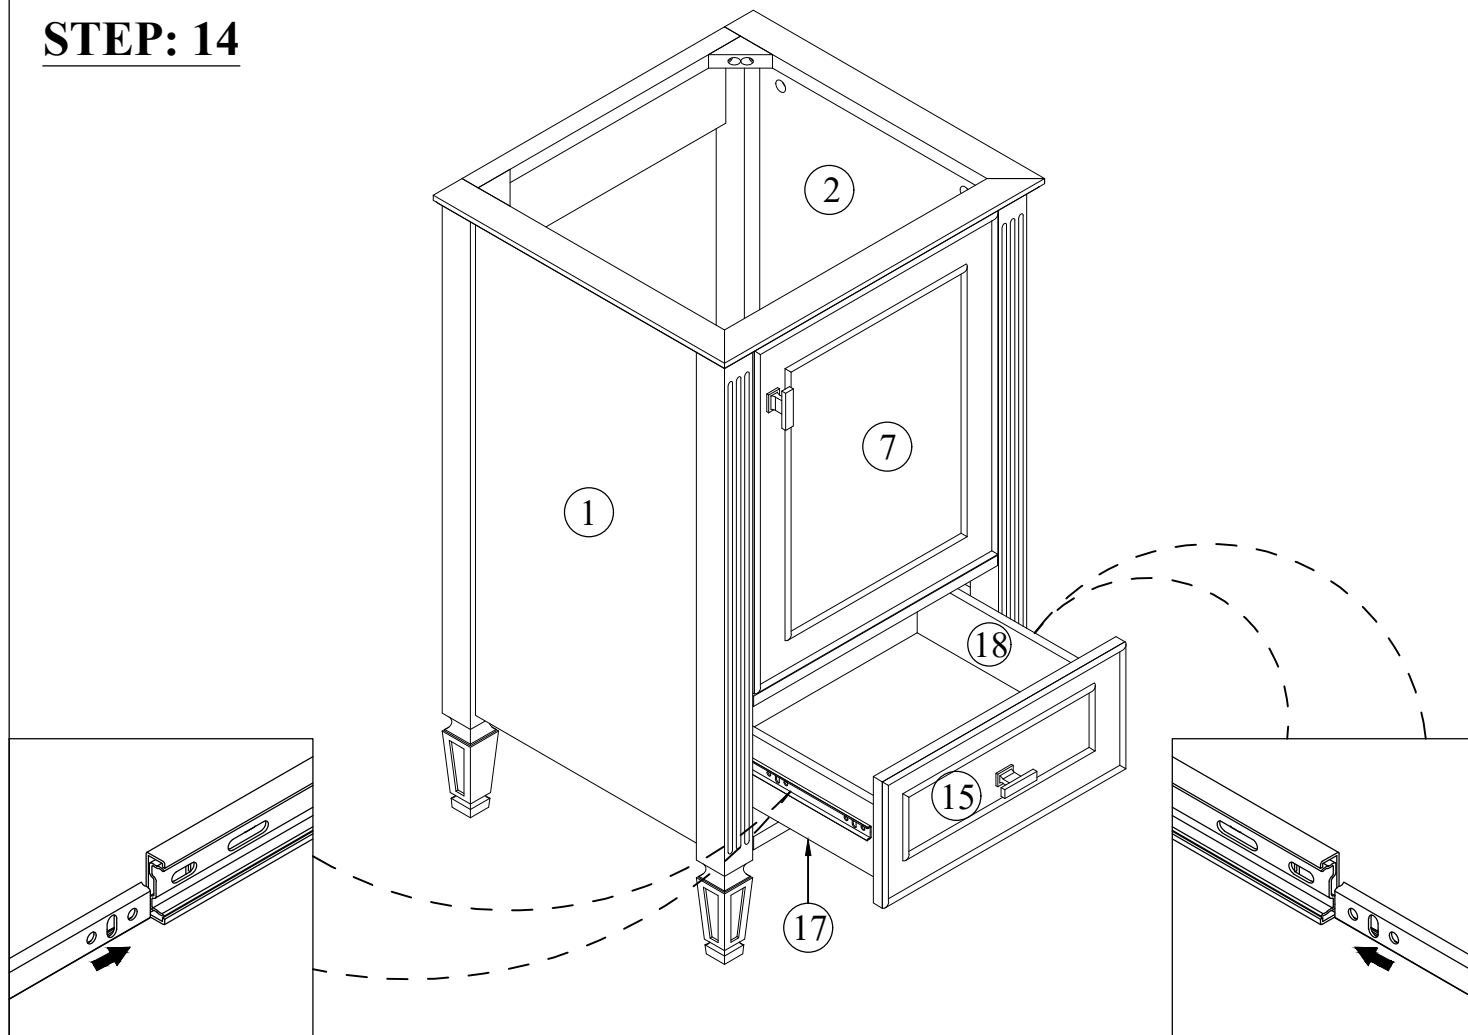


STEP: 15

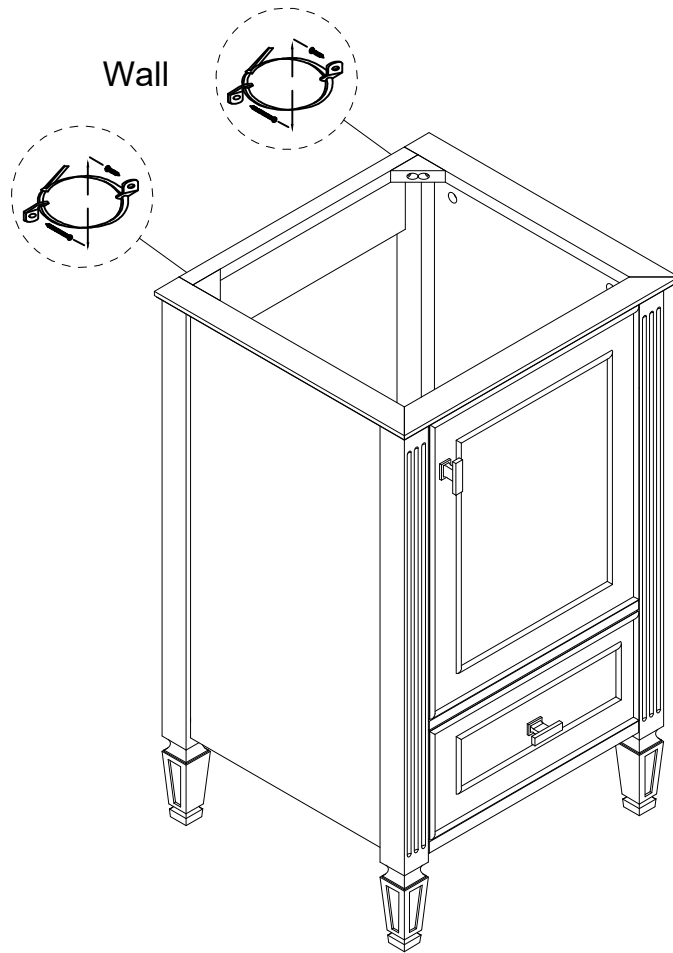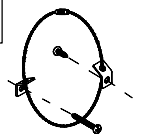**K****2PCS**

STEP: 16

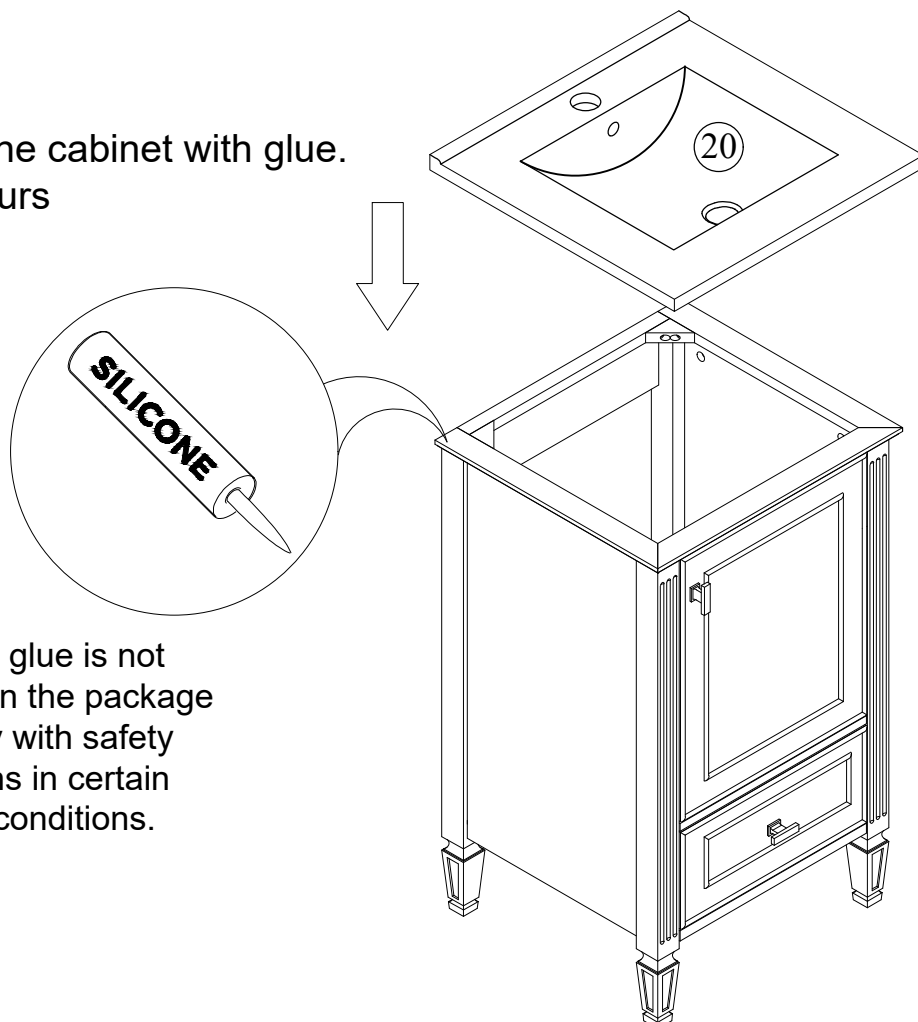Install the sink on the cabinet with glue.
Let stand for 24 hours



*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 17

