

END TABLE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




Warning !!

1. Don't attempt to repair or modify parts that are broken or defective .Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.


PARTS IDENTIFICATION

(A) TOP PANEL

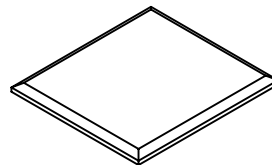

1 PC

(B) BASE

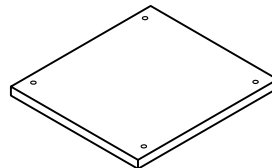

1 PC

(C) REAR-RIGHT ARC LEG/ FRONT-LEFT ARC LEG




2 PCS

(D) FRONT-RIGHT ARC LEG/ REAR-LEFT ARC LEG














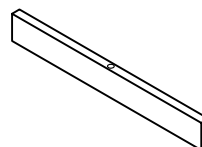
2 PCS


(E) CROSS BAR



2 PCS


Z	HARDWARE PACKAGE		
NO	DESCRIPTION	FIGURE	Q'TY
1	FLAT-HEAD SCREW M6x40mm		4pcs
2	WOOD SCREW Ø7×58mm		2pcs
3	PLASTIC PAD WITH SCREW Ø55×25mm		4pcs
4	CAMLOCK SCREW L29		4pcs
5	CAMLOCK Ø15		4pcs
6	DOWEL Ø8×25mm		6pcs
7	SELF-TAPPING SCREW Ø4×50mm		4pcs
8	HAMMER BOLT Ø6×55mm		4pcs
9	HAMMER NUT Ø10×15mm		4pcs
10	ALLEN WRENCH M4		1pc
11	STICKER Ø18		6pcs
12	GLUE 10g		1pc

Align and attach rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left arc leg (D), by using wood screw, tighten with a screw driver (NOT INCLUDED). Repeat the process.

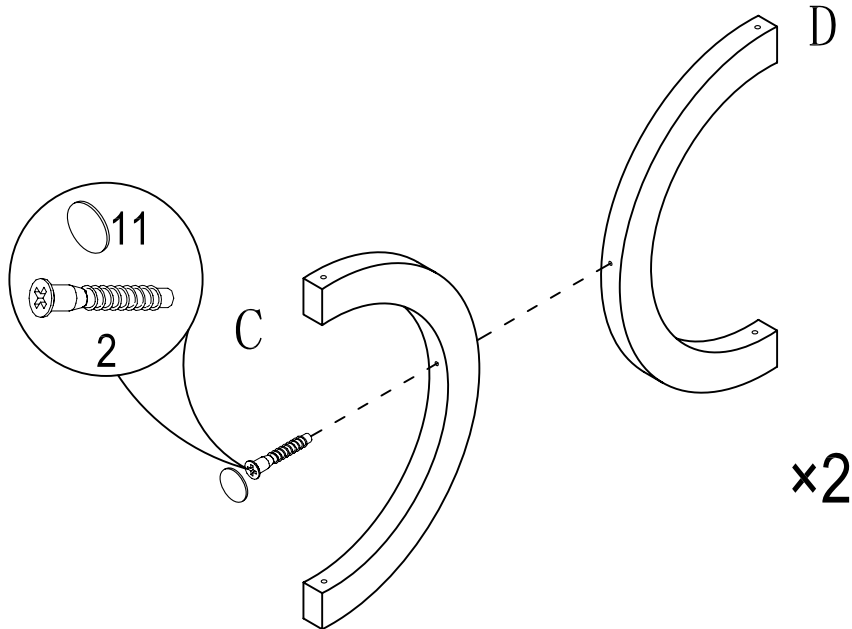


STEP 1

STEP 2

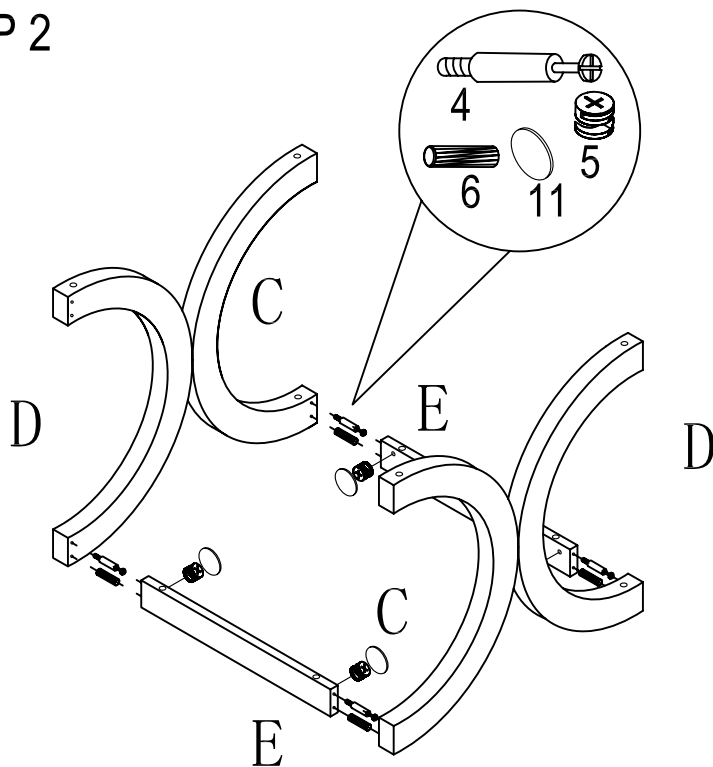


Attach the cam lock screw (4) to the rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left leg (D), then add glue to the dowel, before attach them to the rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left leg (D). Align and attach cross bar (E) to the rear-right arc leg/front-left arc leg (C) and the front-right arc leg/rear-left leg (D), using the cam locks, tighten with a screw driver (NOT INCLUDED). Place the sticker on the cam locks.

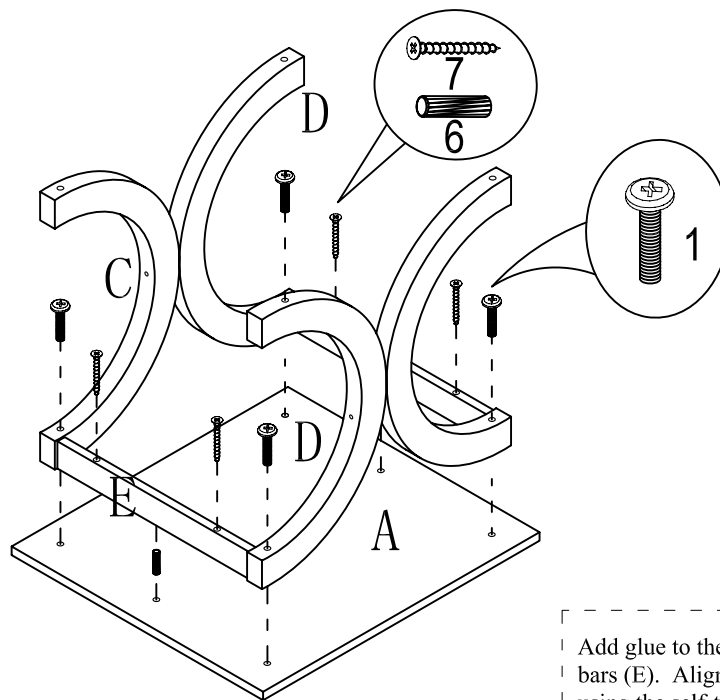


STEP 3

Add glue to the dowel, then attach them to the cross bars (E). Align and attach the legs to the top panel (A), using the self-tapping screws and flat-head screw, tighten with a screw driver. (NOT INCLUDED).

STEP 4

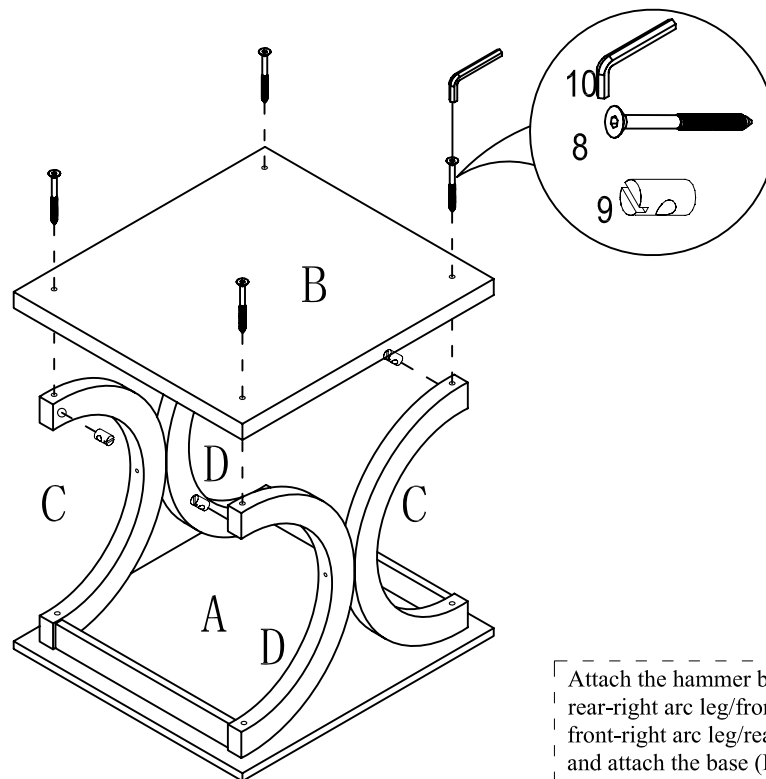

Attach the hammer bolt to the lower portion of the rear-right arc leg/front-left arc leg (C) and front-right arc leg/rear-left arc leg (D). Then align and attach the base (B) to the legs, using the hammer bolts and hammer nut, tighten with the allen wrench.

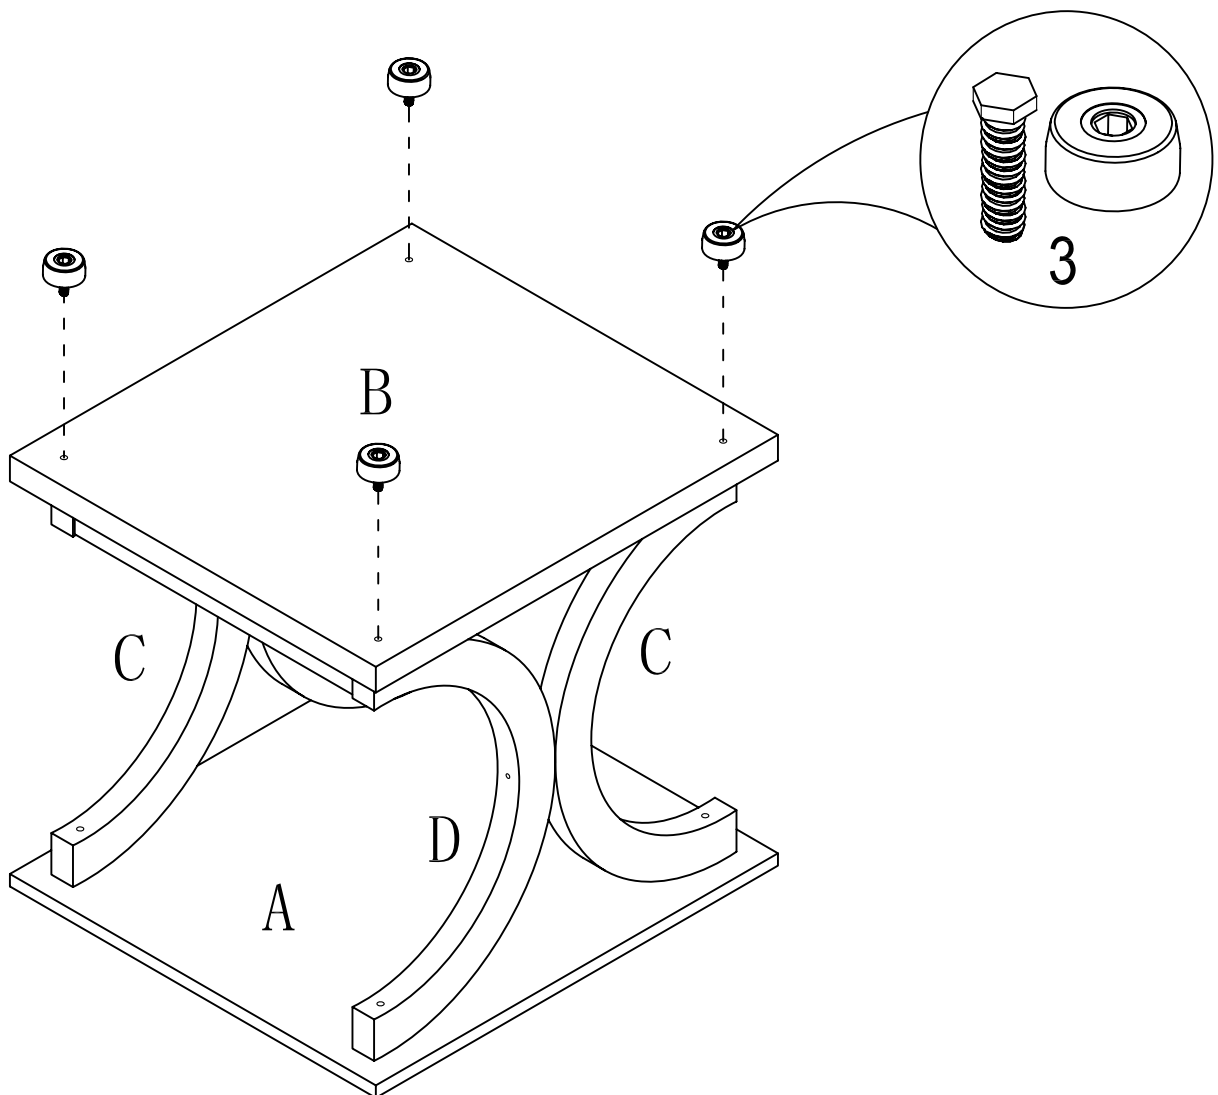

STEP 5

Then attach the plastic pad with screw (3) to the base (B).