


# Eosprim Overbed Table


## List of accessories



Bend \* 4



Straight pipe \* 2

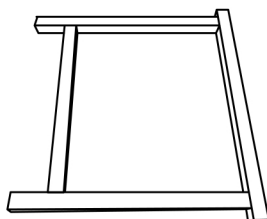

Square frame \* 2



Roller \* 4




Plum blossom knob \* 8




12-13 screws \* 6    4\*30 screws \* 10



Side baffle \* 2

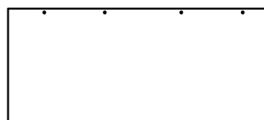


Desktop board \* 1




Rear baffle \* 2




Screwdriver \* 1  
Fixed roller wrench \* 1

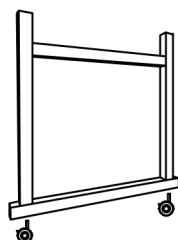


1. Fix the roller on the square frame

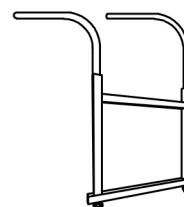


2. Insert the bent pipe into the installed square frame

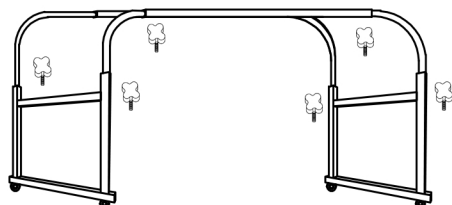


3. Insert the straight pipe into the installed square frame and fix it with a plum blossom button

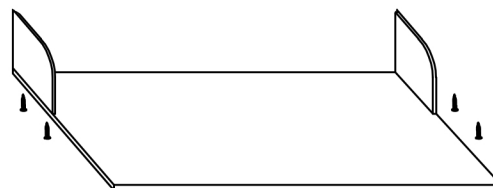

4. Use 4 \* 30 to secure the fixed side board to the side  
The board is fixed on the desktop version

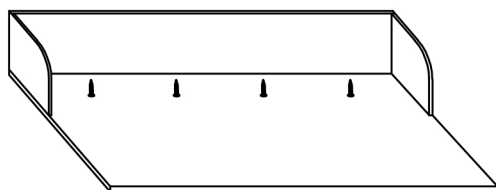

5. Fix the back panel side pannel with 4 \* 30 screws

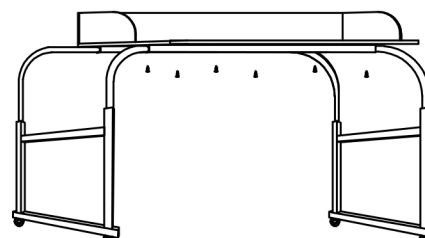

6. Secure the installed desktop board with 12-13 screws  
Set it on the shelf

### Attention:

1. Read the instructions and check the parts before use.
2. Use the correct screws to avoid damaging the desk.
3. Make sure all 4 legs of the table have the same length and width to ensure stability and prevent damage. You can use a ruler to measure it
- 4. Once the screws are installed, they cannot be removed and reinstalled on the composite board tabletop.**
- 5. Be careful not to damage the panel during installation, as we do not accept returns or exchanges for customer-inflicted damages.**