



1

Shape the box along this crease.



2

Bend the bottom of the box.



3


Snap the buckle into the bottom holes.

INSTALLATION STEPS



4

Fold the 3 tabs.

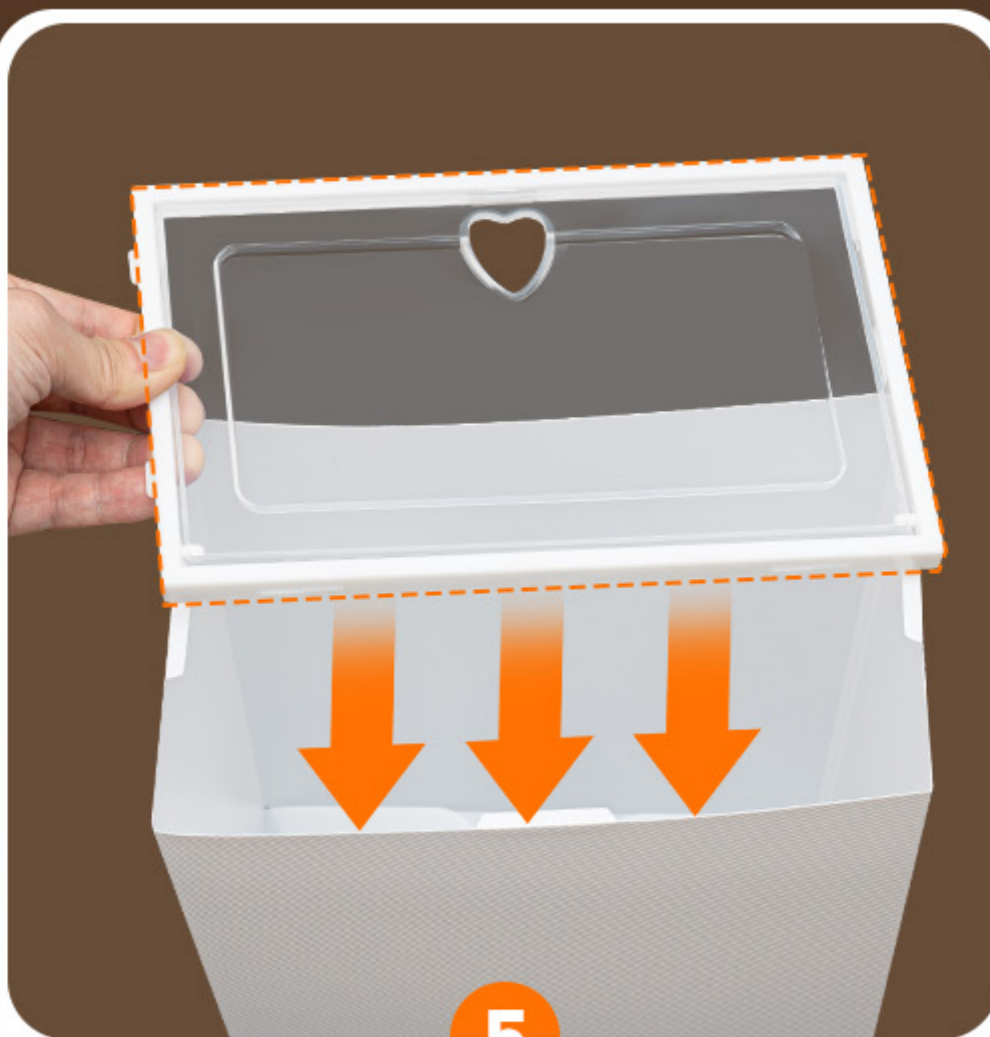

5

Snap the tabs into the frame of the box.



6

Installation is complete.