

## 8\*10 Storage Shed Installation\_SS16306BK\_1

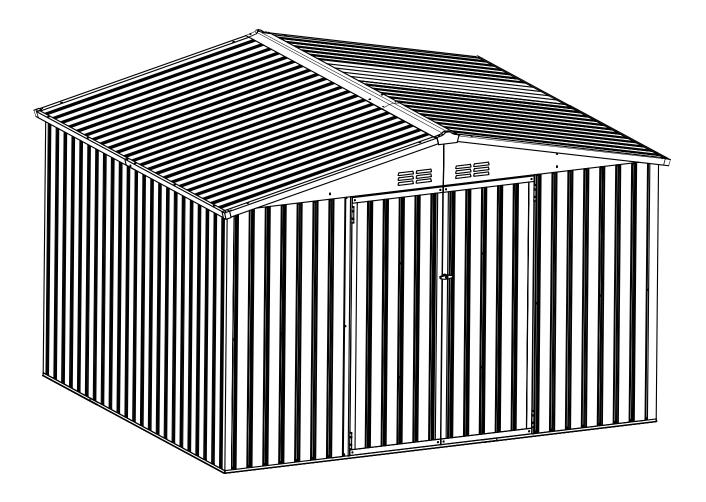



The product comes in three packages. Please install after receiving all packages.

#### Please prepare below tools before installation. (Not Included)

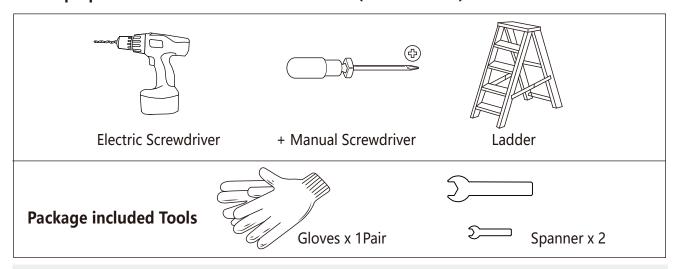

#### **ATTENTION:**

Please read this instruction carefully before installation and follow it strictly during installation. Ensure that there are no problems later due to installation errors.

### **Installation Notes**

Please check the quantity of all parts before installation (Please refer to the Parts Lists) and the appearance of the products. Please make sure the product is correct before installation. If there is any problem, please contact us directly.

Make sure the colored panels are facing outwards and all the holes match. The panels are textured, please install the panels in the order specified in the instructions. All lines and holes must be accurately matched to make the storage shed more stable. Please ensure that all screws are tightened to prevent the product from falling apart.

There is a protective film on the surface to protect the product, please tear it off after installation to get the final presentation. If you do not damage the film during installation, it can also remain on the product to protect the product.

Please place the product on a flat ground to prevent leaning and collapse. If the ground is uneven, the door may can't be closed.

### Safety Precautions

We recommend two adults to complete the installation. Two adults installed together will make the installation process easier and safer.

The gloves must be carried to prevent hand cuts during installation.

Take care when using power tools near water the use of a residual current device (RCD) is advised. Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand. (We recommend that beginners use a manual screwdriver for installation.) Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

#### PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

## 8 x 10parts list (A)

PART	NO.	QTY.
	W5-K	2
}	W5	17


## 8 x 10parts list (B)

PART	NO.	QTY.
	K810-7L	2
	K810-7M	8
	K810-7R	2
}	W3	2
}	W5-C	4
}	W2-HL	1
}	W2-HR	1

# 8 x 10parts list (C)


DADE MO	
PART NO.	QTY.
K810-1	2
K810-1R	2
K810-2	2
K810-2R	2
K810-3	2
K810-3L	2
K810-4	2
K810-4R	2
K810-5L	2
K810-5R	2
K810-6	4
K810-6R	4
K810-8	4
K810-9L	2
K810-9R	2
K810-10	1
K810-10R	1
UA UA	2
<b>C3</b>	4
C4	4
DA	2
DLA	1
DRA	1

PART	NO.	QTY.
	DDA	4
	DBA	4
	ST	1
日	GC	4
	GE	2
	T-F	4
( e	DC	2
	C2	4
	DH	4
	F1	440
<b>9</b>	F2	42
	F3	32
0	<b>V2</b>	148
	F4	4
	GL	1
	SL	70
	M20	1

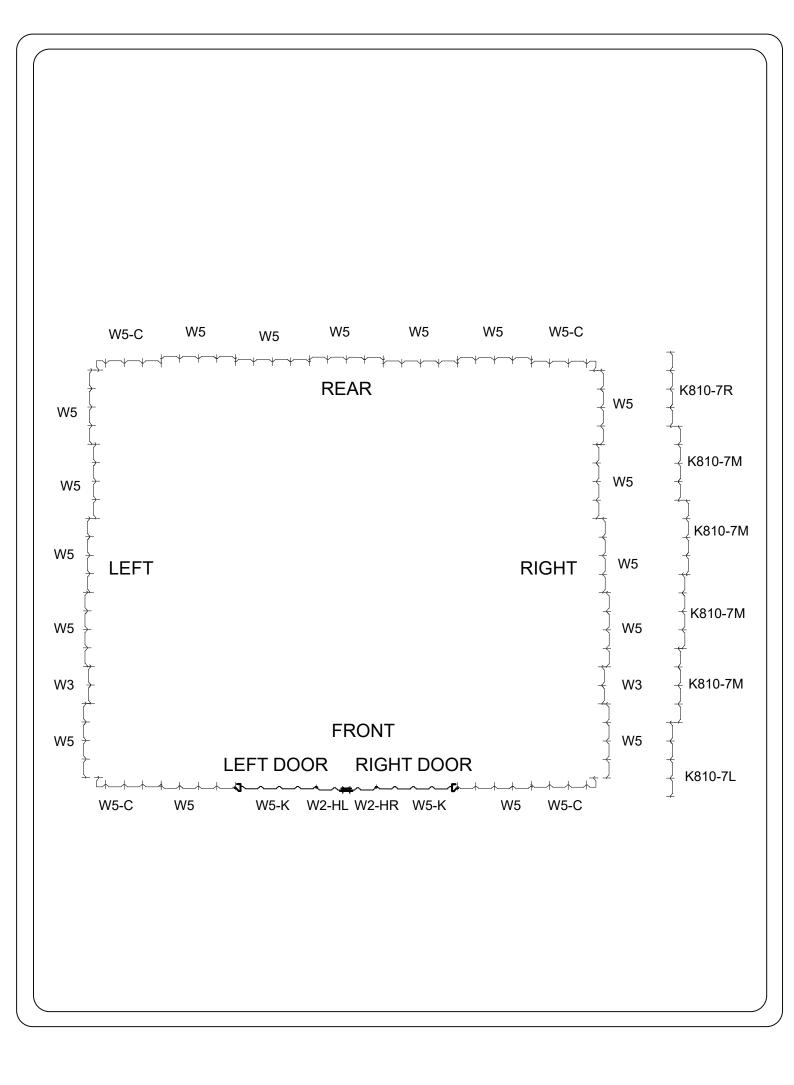

## Part List

Shed top panels		
NO.	QTY.	
K810-7L	2	
K810-7M	8	
K810-7R	2	
K810-8	4	
K810-9L	2	
K810-9R	2	
K810-10	1	
K810-10R	1	
GC	4	
GE	2	

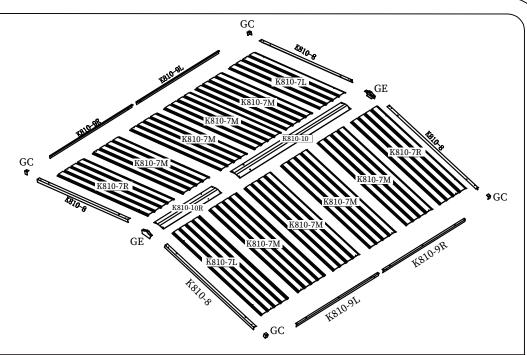


Shed top frame		
NO.	QTY.	
K810-3	2	K810-6R
K810-3L	2	C2
K810-4	2	C3
K810-4R	2	C4
K810-5L	2	
K810-5R	2	
K810-6	4	


Door

4


Shed base

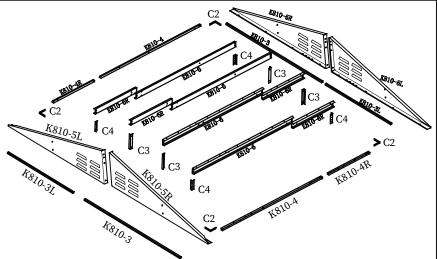


NO.	QTY.	NO.	QTY.
UA	2	K810-1	2
DH	4	K810-1R	2
DA	2	T-F	4
W5-K	2	K810-2	2
DDA	4	K810-2R	2
W2-HL	1	Shed side	
DLA	1	NO.	QTY.
DRA	1	W3	2
DBA	4	W5	17
W2-HR	1	W5-C	4

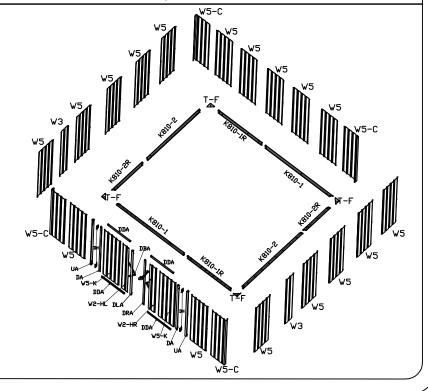

## **Shed Base Frame Assemble**

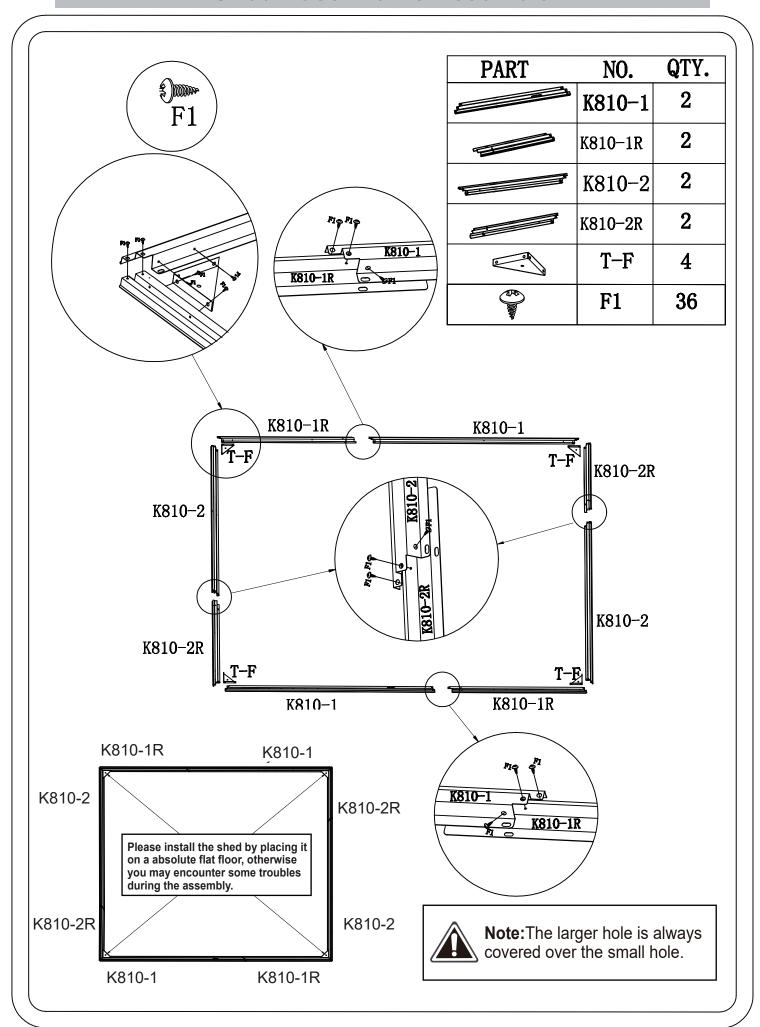


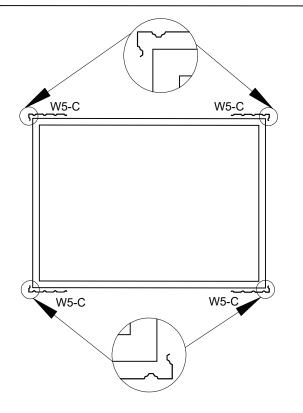



PART	NO.	QTY.
	₩5-C	4
<b>E</b> )	F1	12




**Note:** The colored side should be facing out. The left and the right panel should under the back panel.

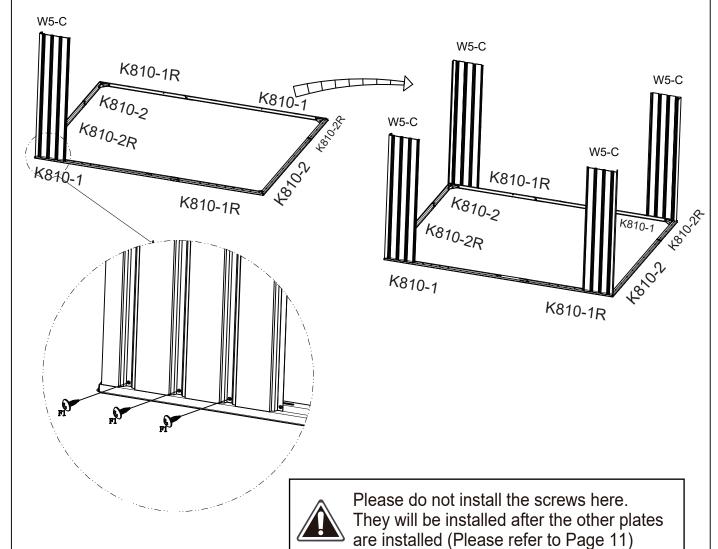


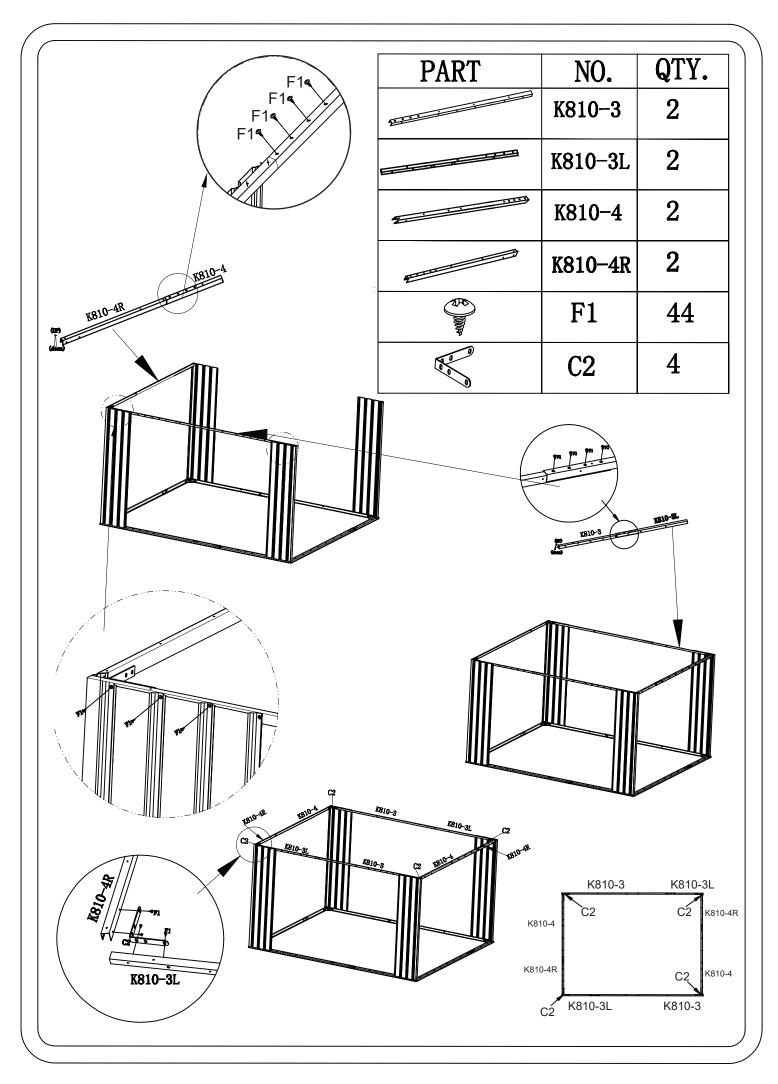


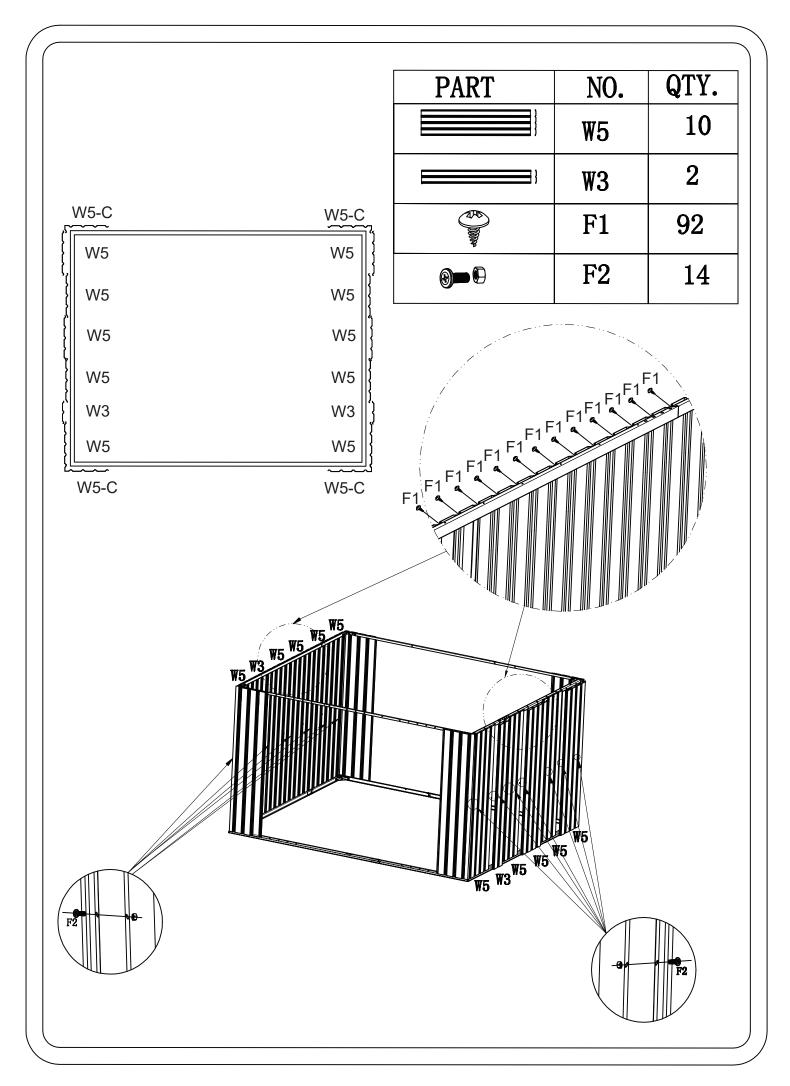

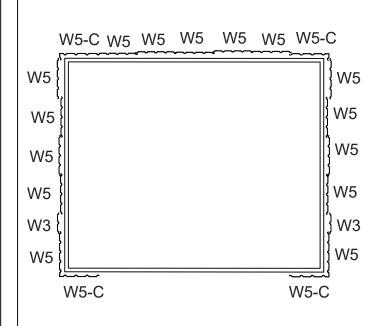



PART	NO.	QTY.
	₩5	5
E DOOR	F1	42
<b>9</b>	F2	6

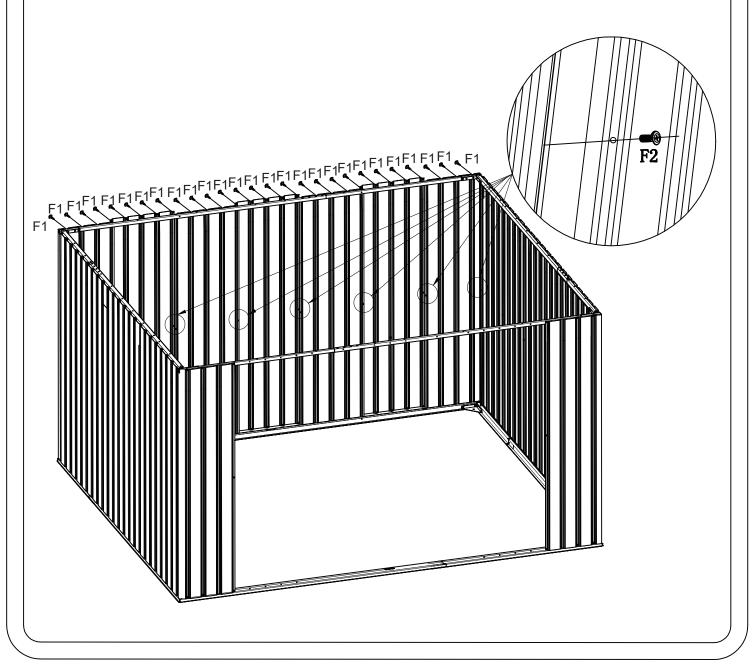


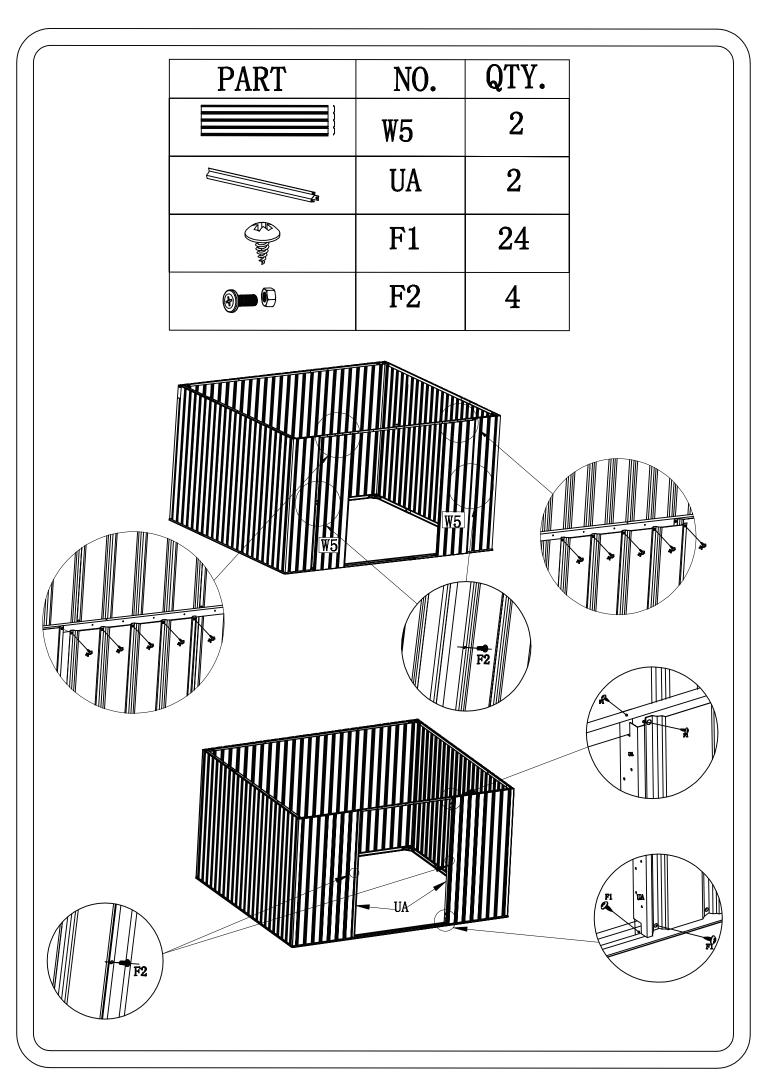



PART	NO.	QTY.
	K810-5L	2
	K810-5R	2
	C3	4
	C4	4
<b>9</b>	F2	4
	V2	8
	F1	8

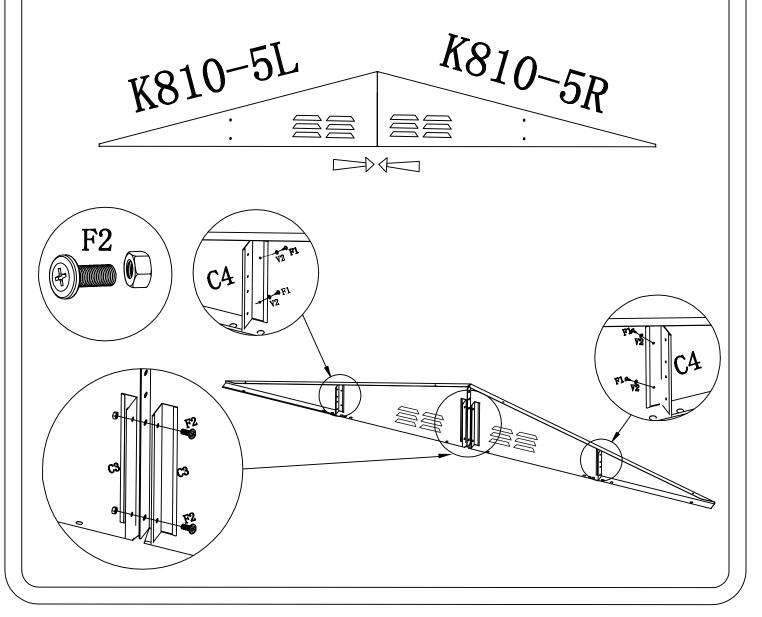

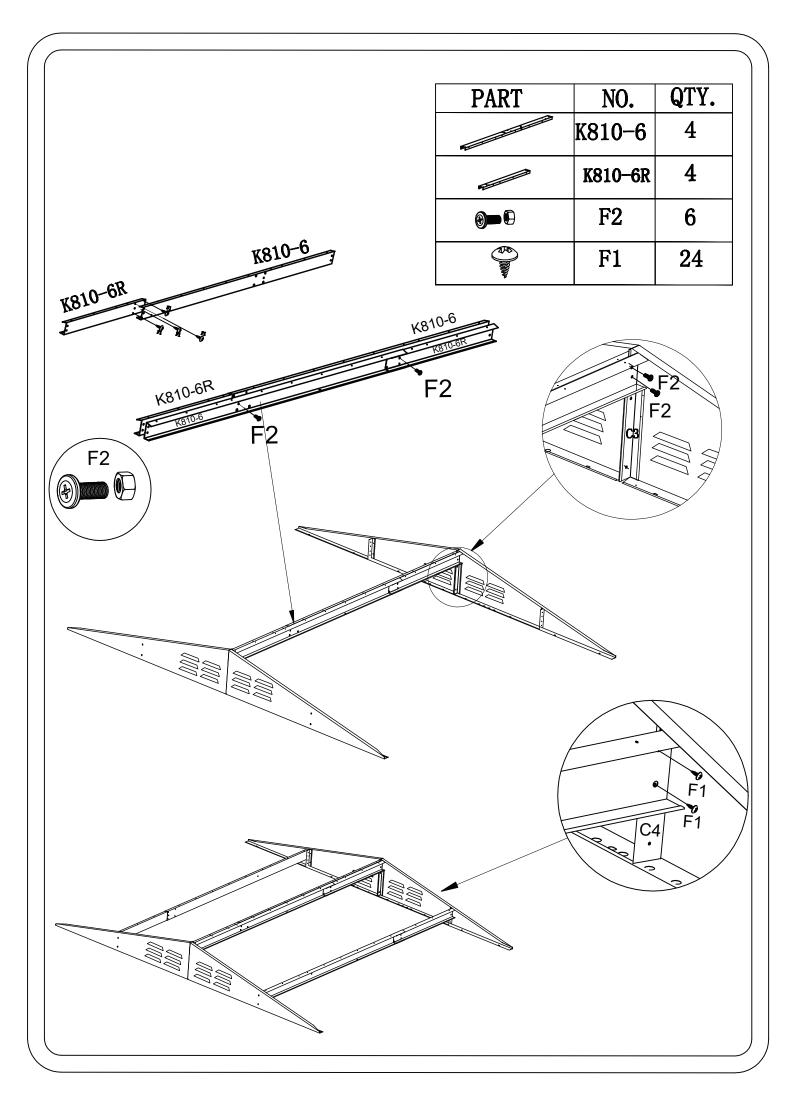


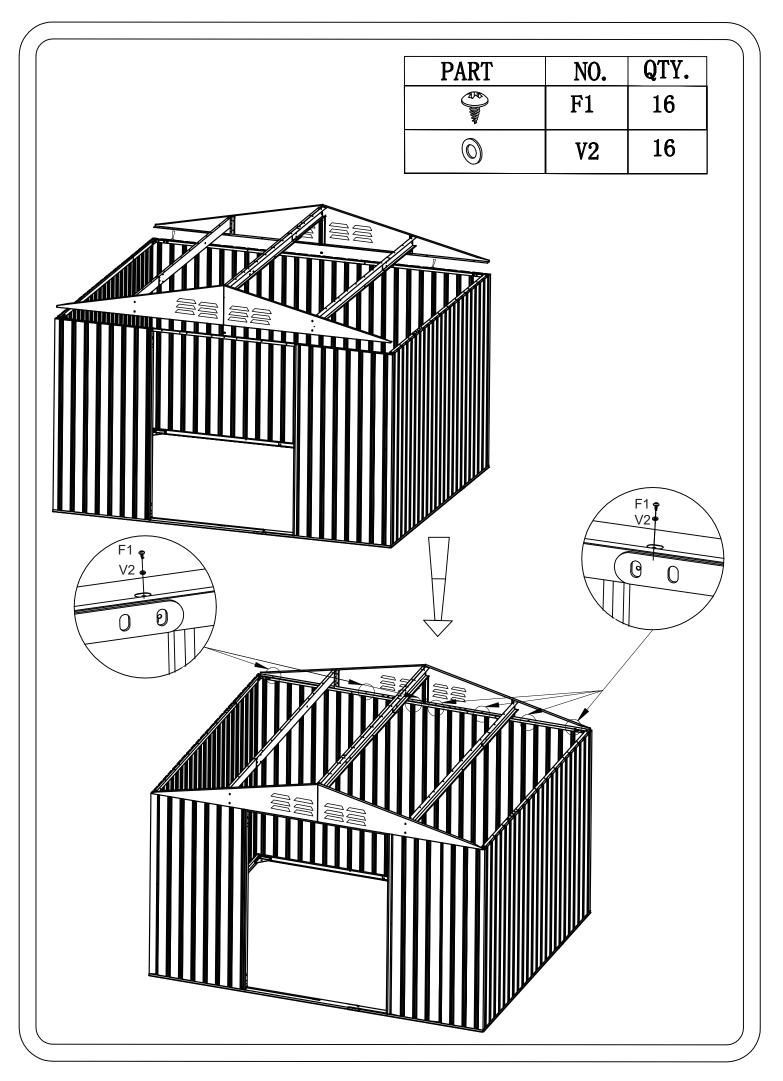

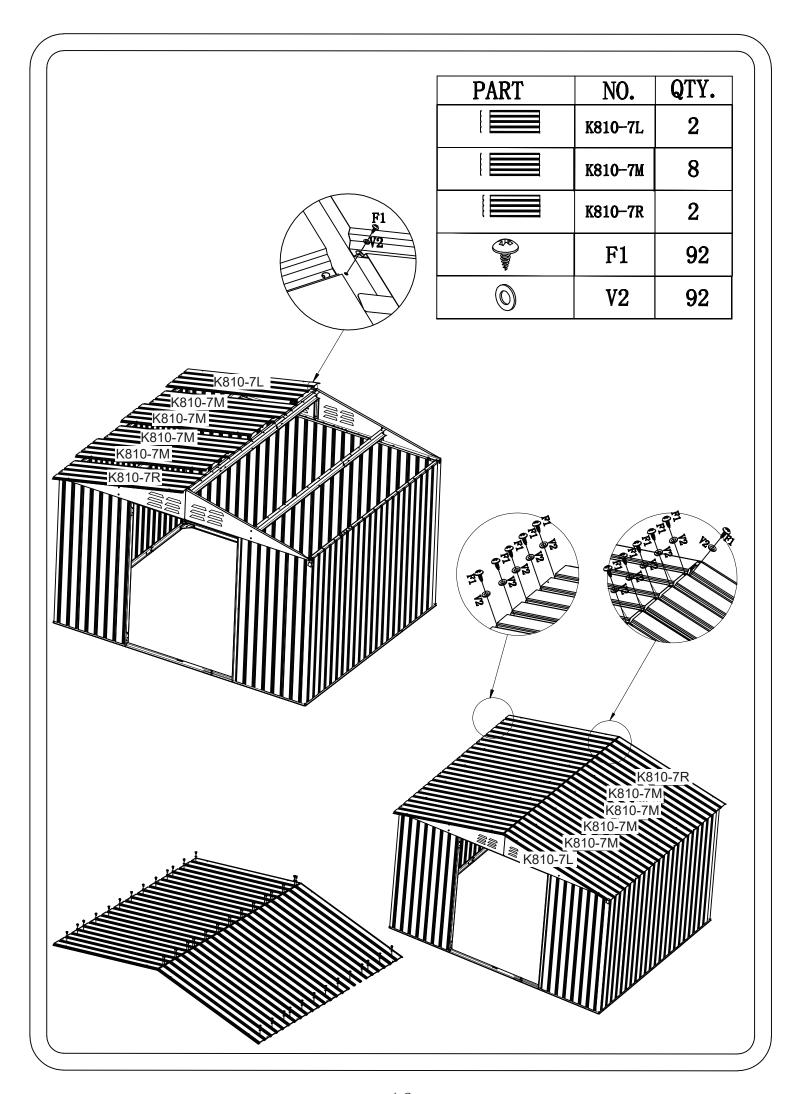


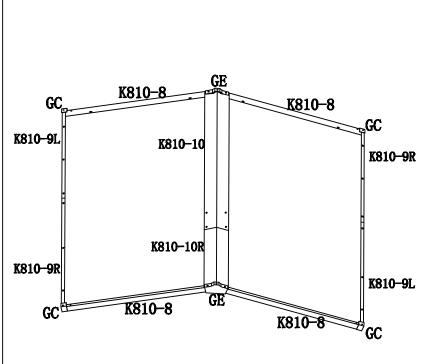


PART	NO.	QTY.
····	K810-8	4
	K810-9L	2
	K810-9R	2
	K810-10	1
	K810-10R	1
白	GC	4
	GE	2
	F1	28
0	V2	32
<b>E)</b>	F4	4

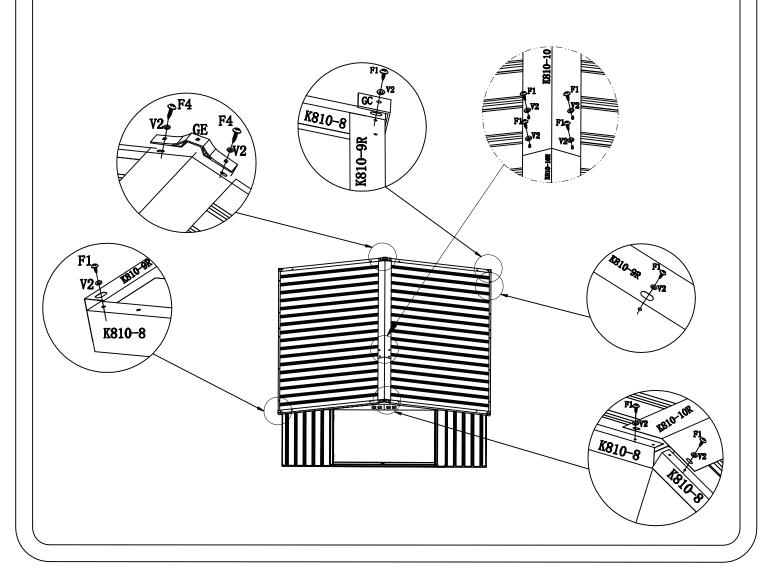

## **Door Assemble**

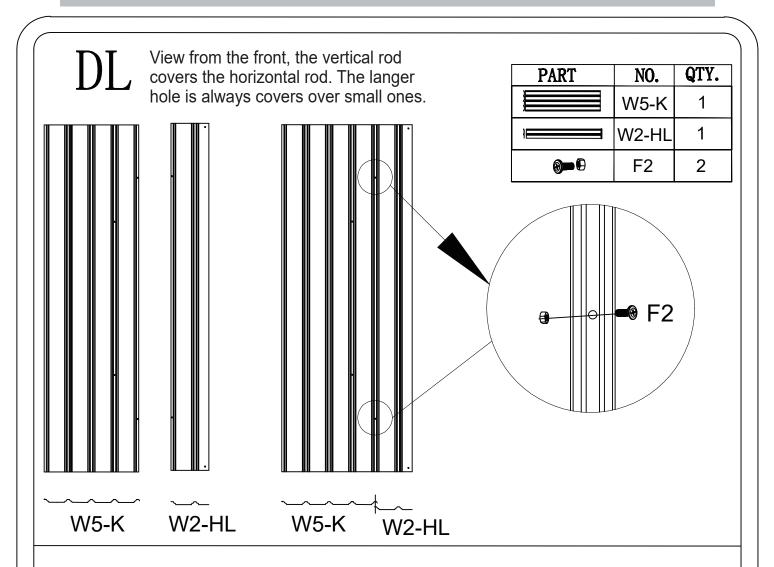

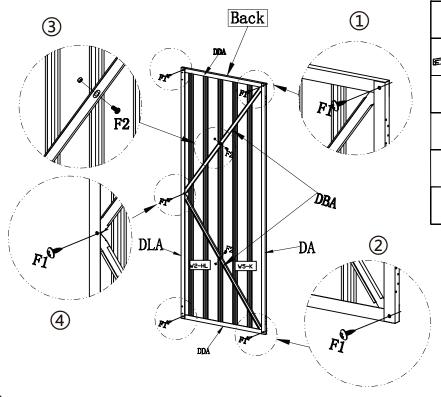


PART	NO.	QTY.
	DA	1
<b>6</b> :	DLA	1
	DDA	2
	DBA	2
	F1	9
<b>9</b>	F2	2

Please follow the steps of ①-②-③-④


The final fixation should be done after all parts are aligned


## **Door Assemble**

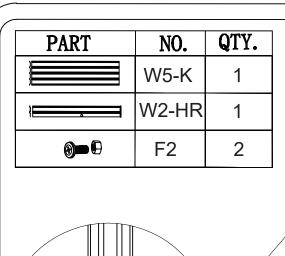


DR

View from the front, the vertical rod covers the horizontal rod. The langer hole is always covers over small ones.

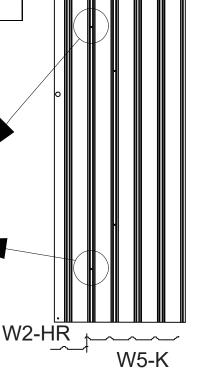

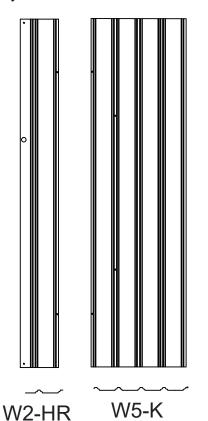

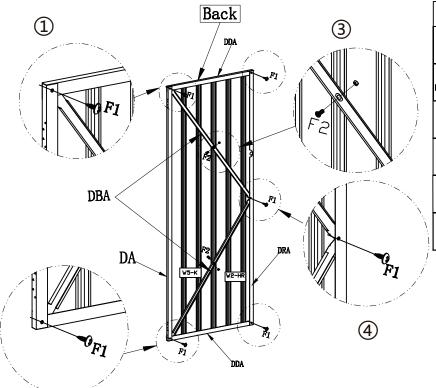

2


PART	NO.	QTY.
	DA	1
5	DRA	1
	DDA	2
	DBA	2
	F1	9
<b>9</b>	F2	2

Please follow the steps of ①-②-③-④

The final fixation should be done after all parts are aligned


The Left or Right is seen from the outside.


PART	NO.	QTY.
و و و	DH	4
(Te-e	DC	2
2 Dillion	F3	16
	GL	1
\$))))))a	F1	4

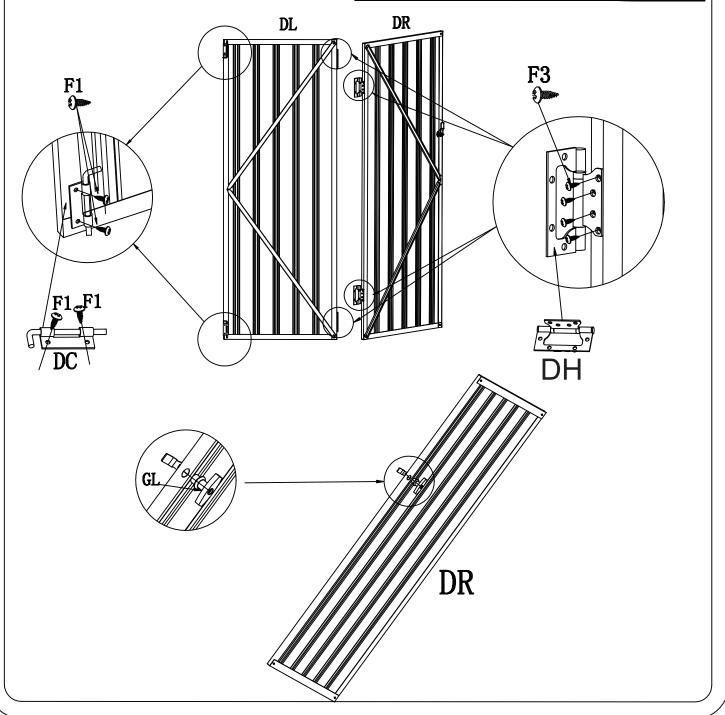

After assembled the doors, the two door panels are named as DR and DL

PART	NO.	QTY.
	DL	1
	DR	1
25 DOM	F3	16

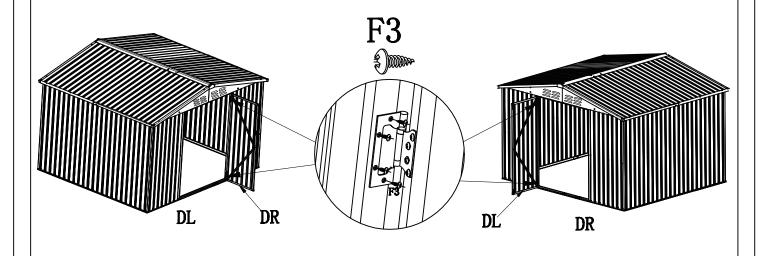

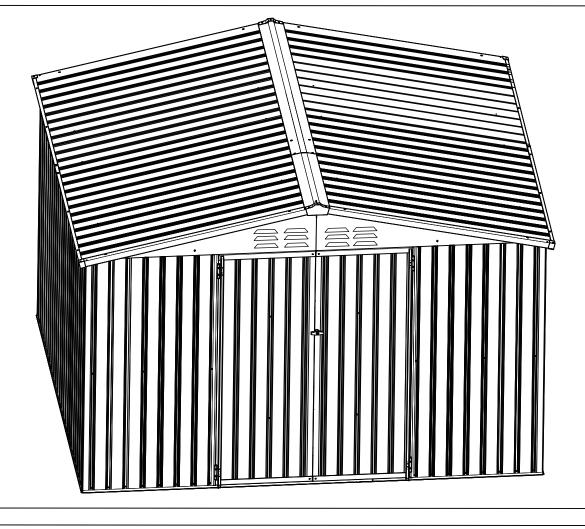

PART QTY. NO. 70 SL Install protective caps SL for those exposing screws on C4 K10-6 Install protective caps SL for those exposing screws on K810-6 and K810-6R Install protective caps SL for those exposing screws on K810-6 and K810-6R.