

















Platform Bed

Set-up Instruction


					
A*2 M8*40	B*12 M6*10	C*6 M6*35	D*1 M6*28	E*8 M8*35	F*12 M8
					
G*8 M8*32	H*4 φ 3*10	J*2	K*1	M*1	N*1
					
P*1	Q*1	H*1 spare part		J*1 spare part	




Size:Twin

If you have any questions about the product, please don't hesitate to contact us.


You can reach us through your order. Thanks for your support!

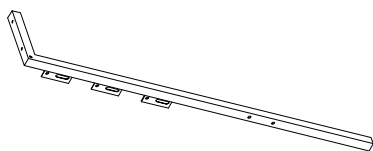


①*1

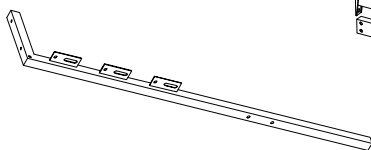

②*1

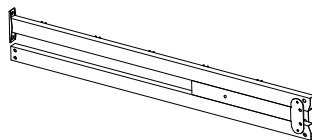


③*1

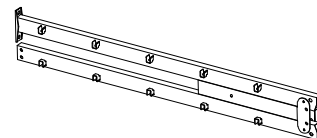


④*1




⑤*2



⑥*1




⑦*1




⑧*1



⑨*10

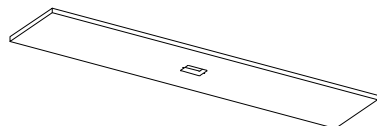


⑪*1

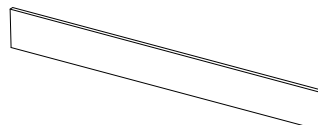




⑫*3







⑬*1

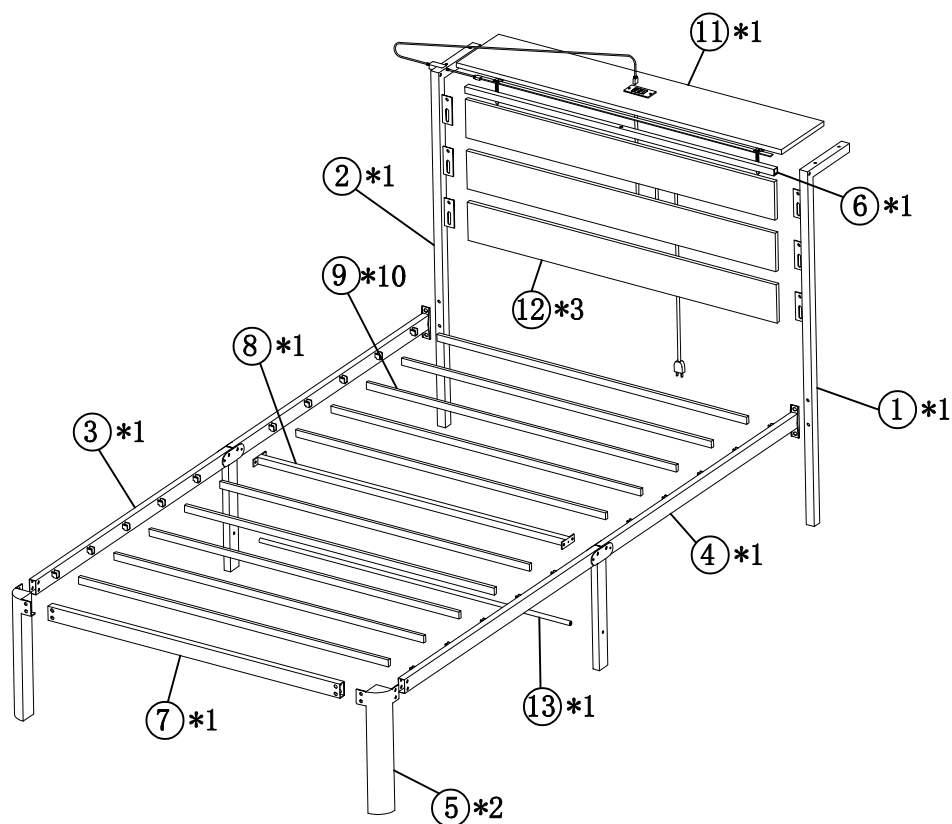




Step1

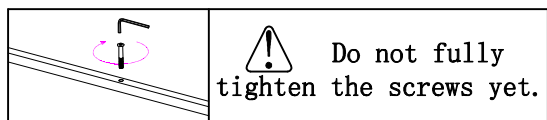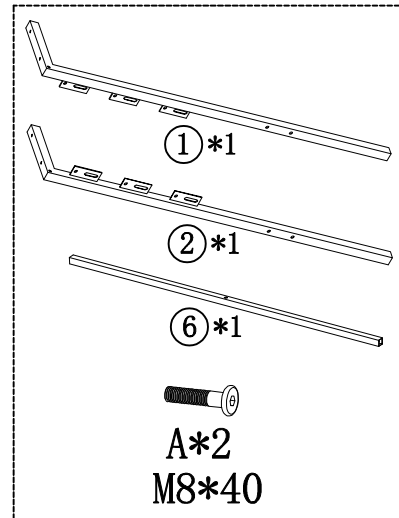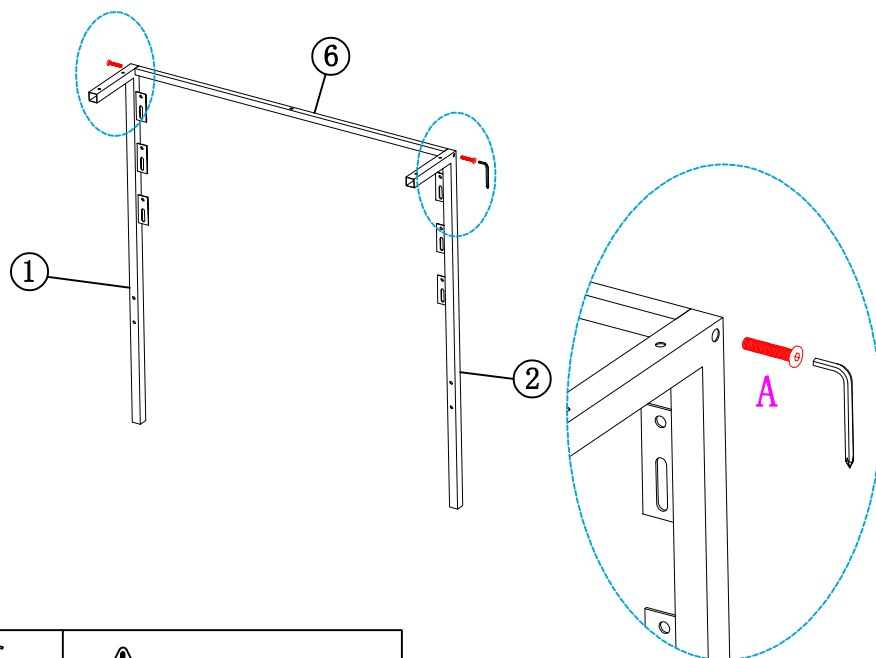

Step2

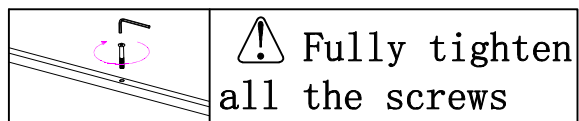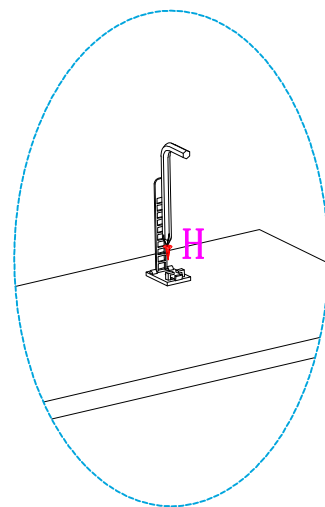
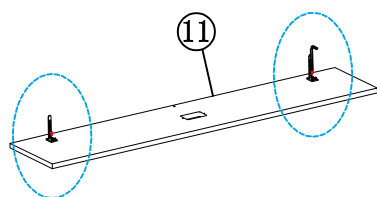
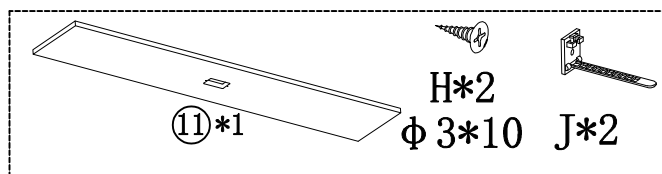


Step3

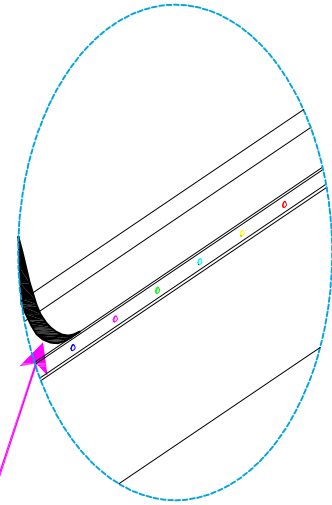
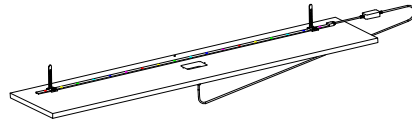
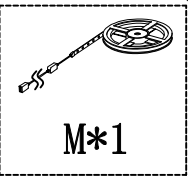


Tear and press the
tape firmly




Step4

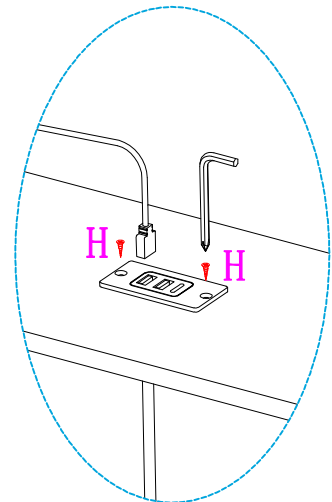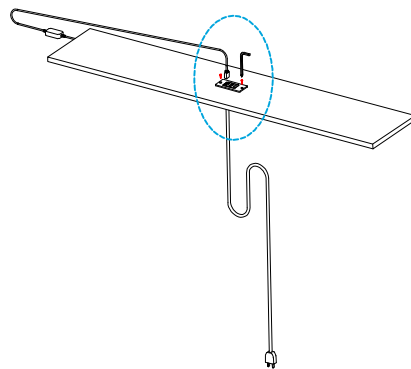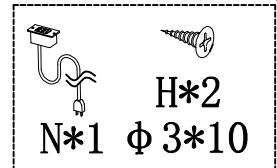



Step5

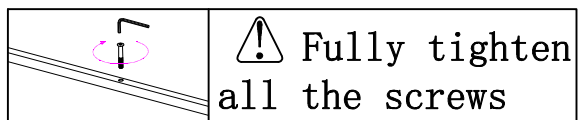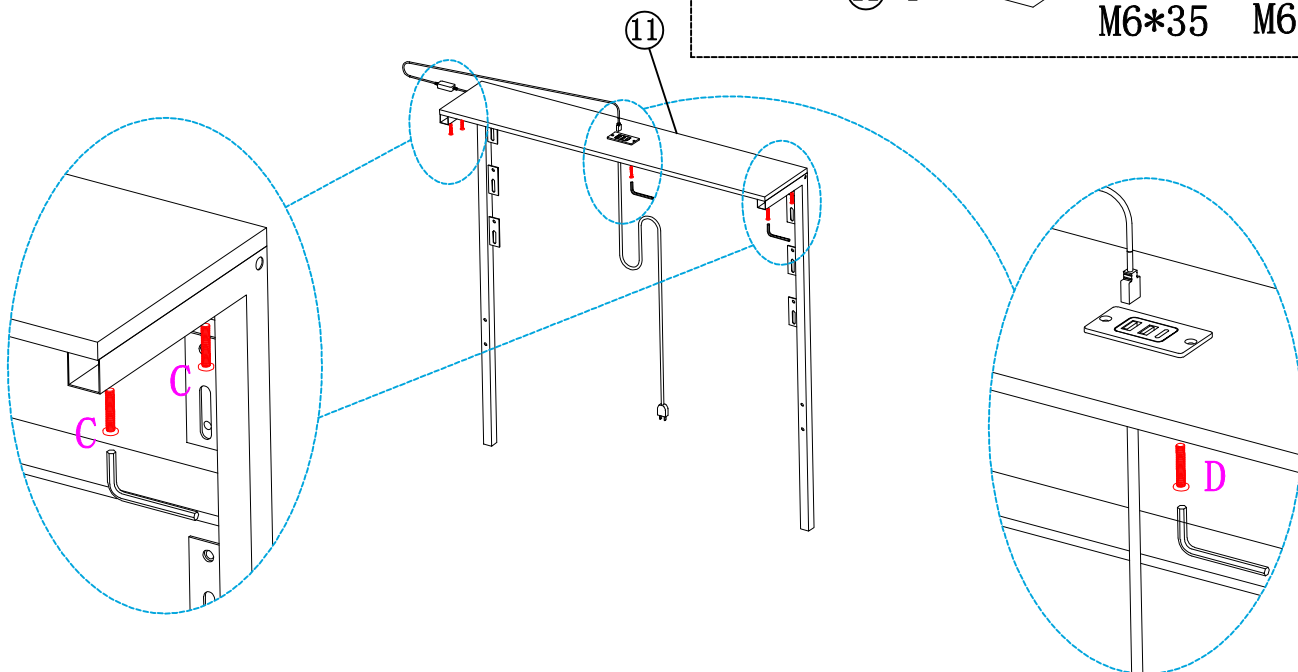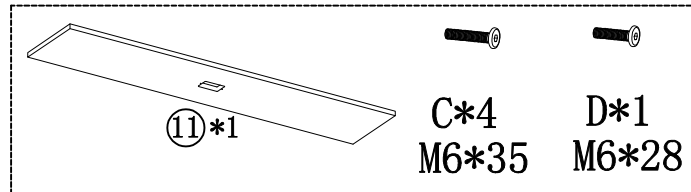


Step6

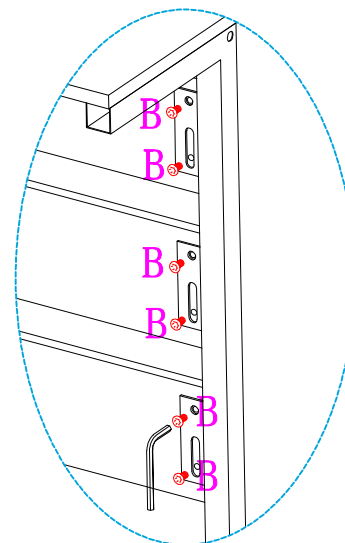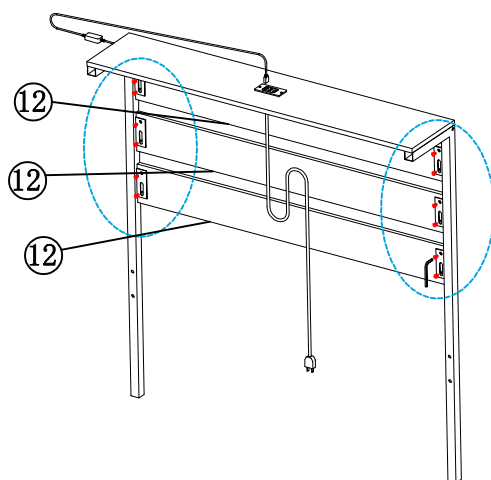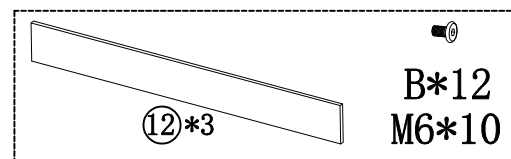

Step7

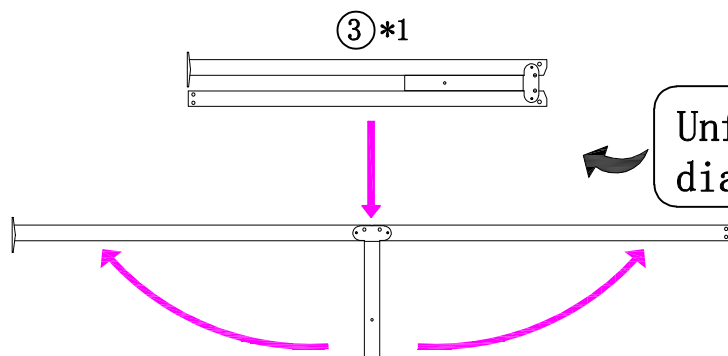
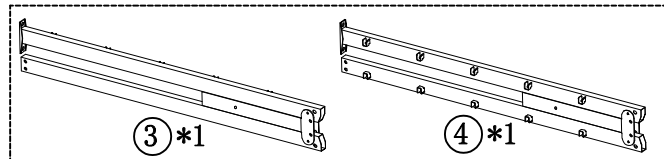


Unfold Part 3 as shown in the diagram.



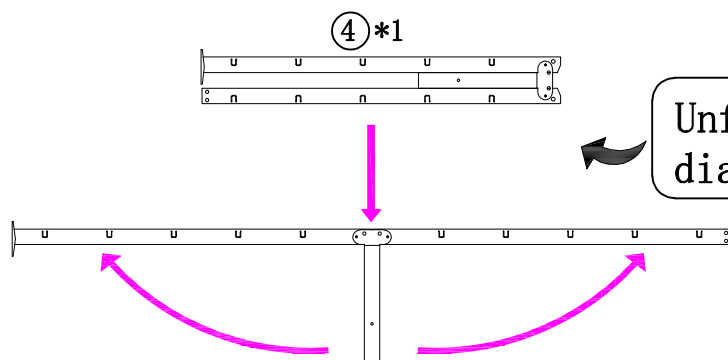


Unfold Part 4 as shown in the diagram.




Step8

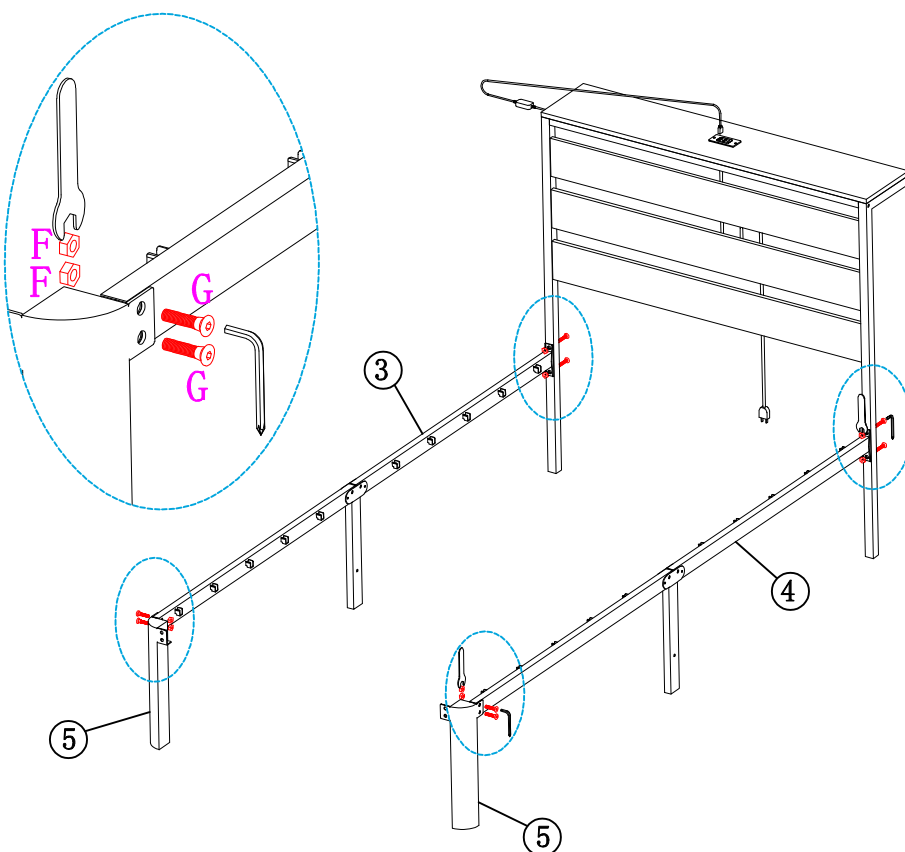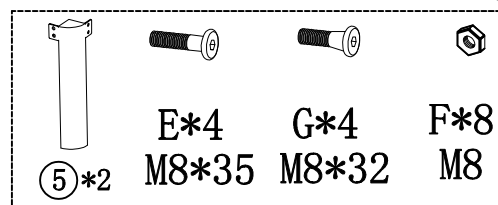




Step9

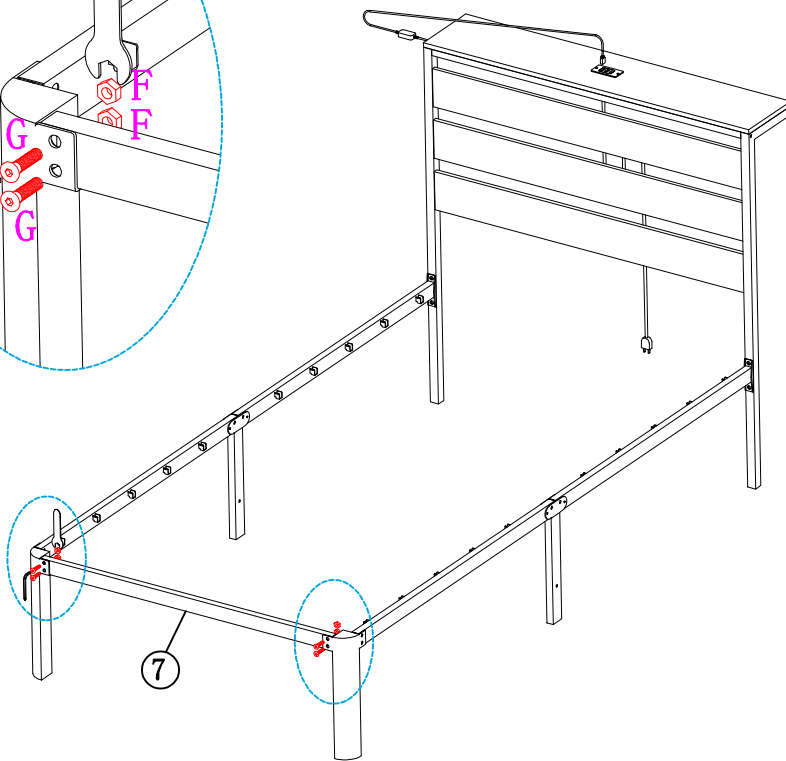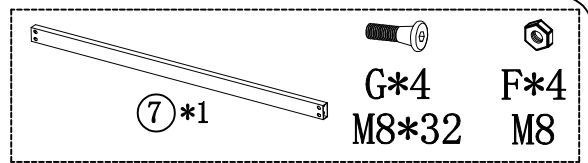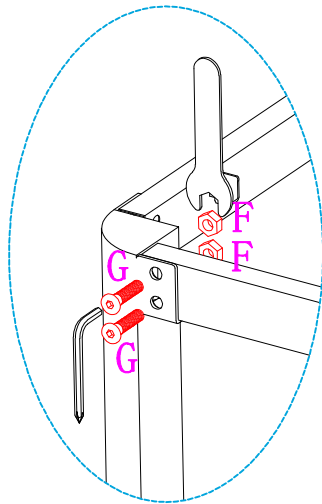



Step10

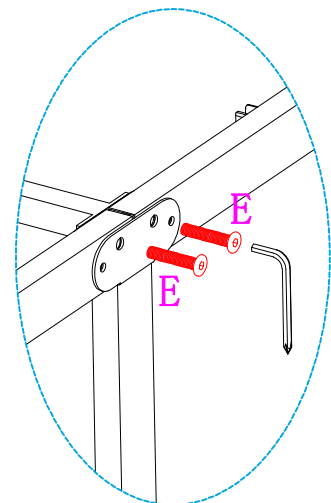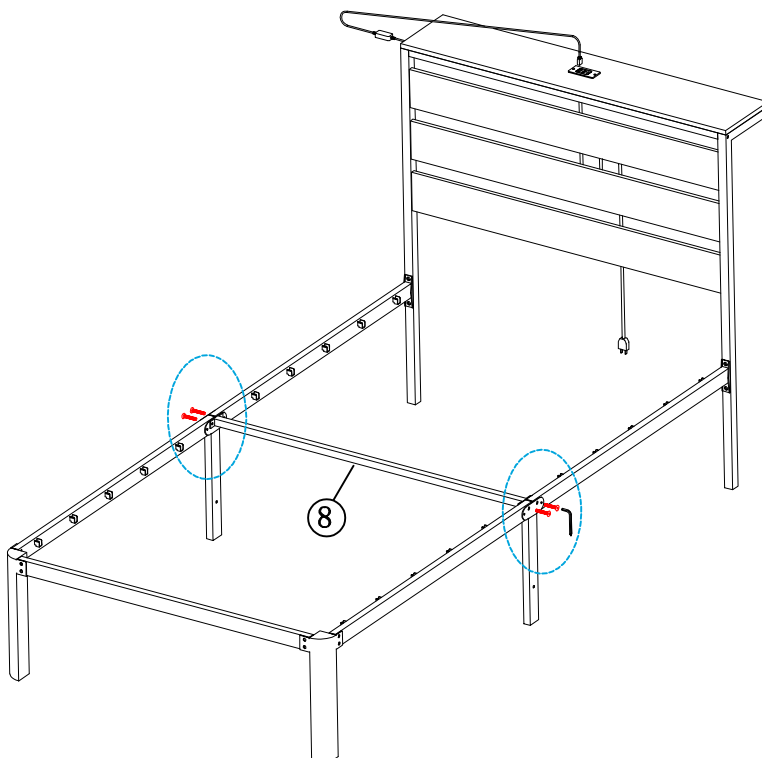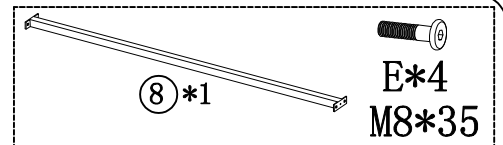

Step11

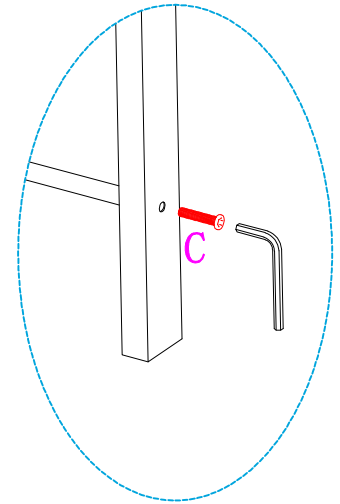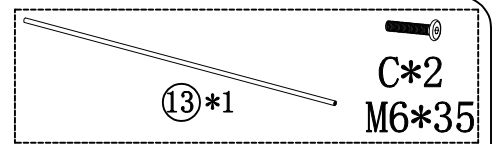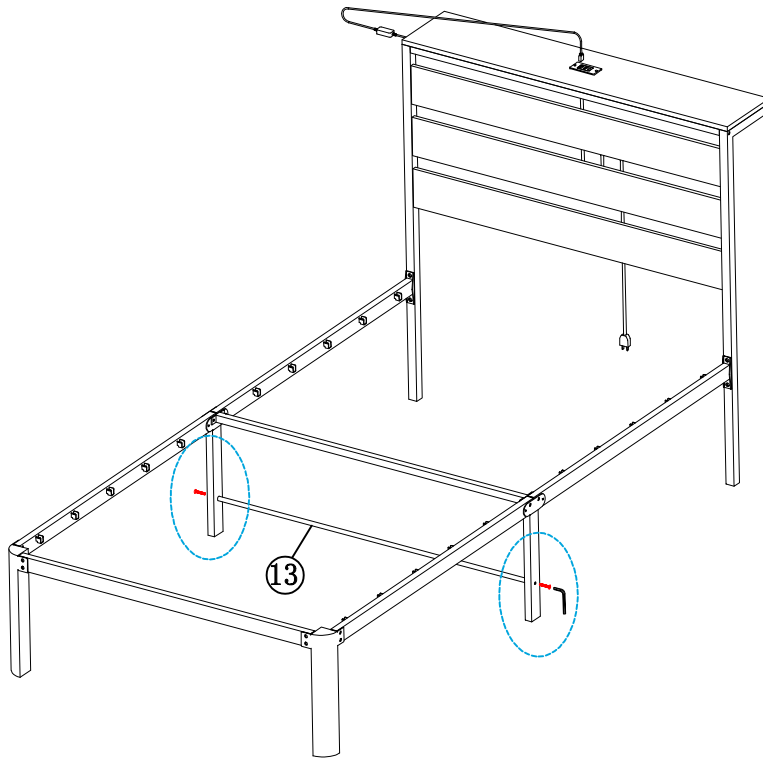

Step12

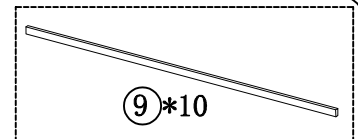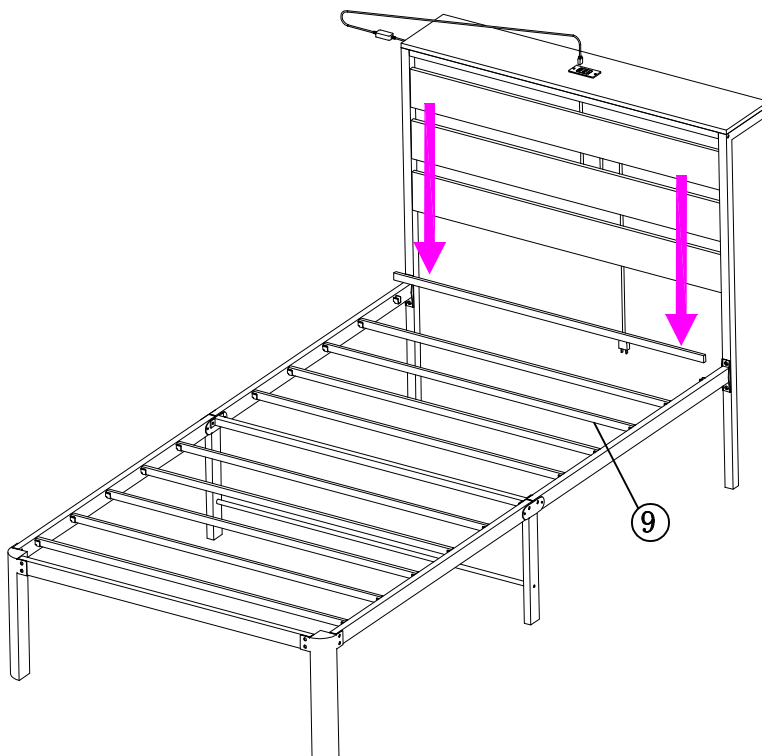

In the last step. please make sure all the screws are tightened.