CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Side Frame (Left)		1x
В	Side Frame (Right)		1x
С	Bottom frame	\diamondsuit	1x
D	Back Stretcher	/	1x
Е	Back cushion		1x
F	Seat cushion		1x
H1	Allen Bolt))))))))))))))))))))))))))))))))))))))	14x
H2	Allen Bolt	@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@@	8x
H3	Spring Washer	O 1/4"	8x
H4	Flat Washer	© ¢16*1.0	8x
H5	Allen Key	🥽 M4	1x

Product Dimensions: 30"Wx31"Dx32"H

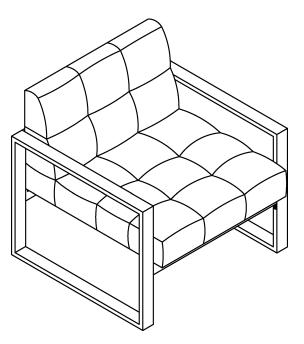


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 20 minutes.

Tools Required for Assembly (included): Allen Key

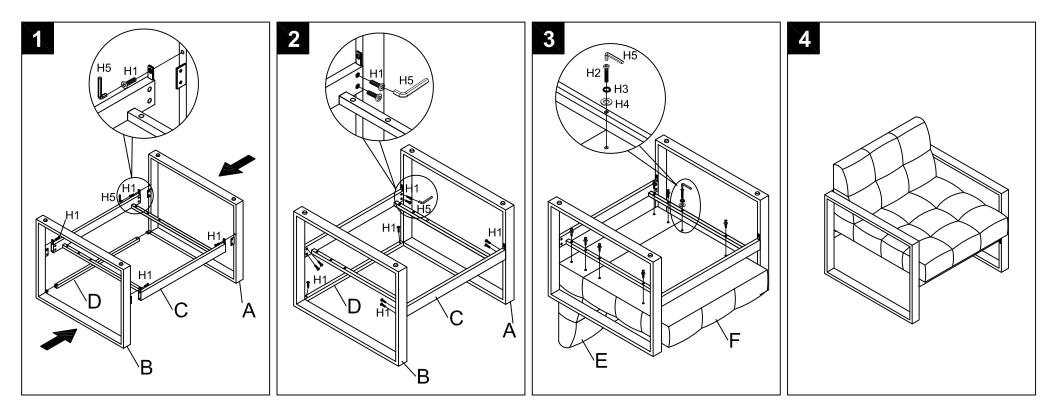

Step 1

as picture.

Attach the bottom frame (C) and back

stretcher (D) to side frames (Left) "A" and

(Right) "B", use Allen key (H5) to lock with

4*Allen bolt (H1) on the bottom frame (C),

Step 2

Then use Allen key (H5) to lock with 10*Allen bolt (H1) on the bottom frame (C) and back stretcher (D), as picture.

Step 3

Place the back cushion (E) and seat cushion (F) to the assembled side frame together, use Allen key (H5) to lock with 8*flat washer (H4), 8*spring washer (H3) and 8*Allen bolt (H2) on the bottom side of cushions, as picture.

Step 4

Assembly is completed.