

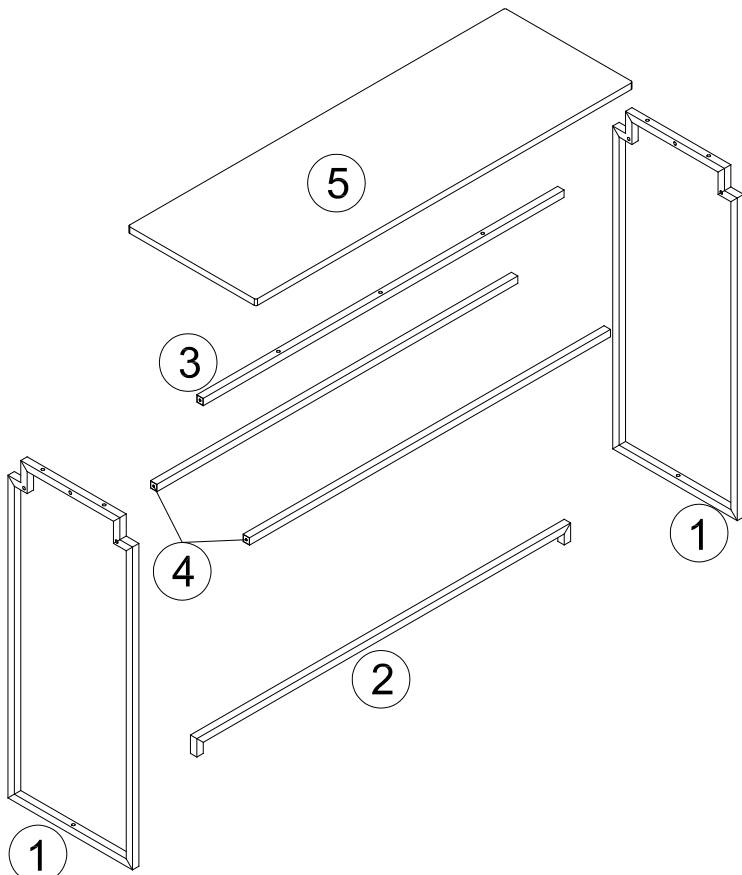
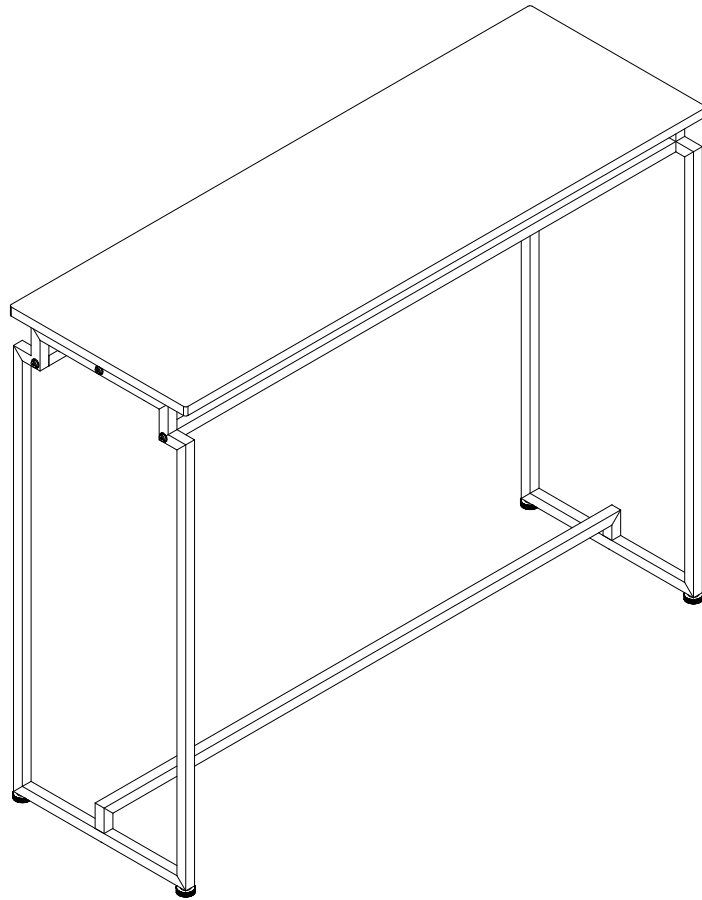





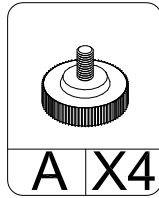
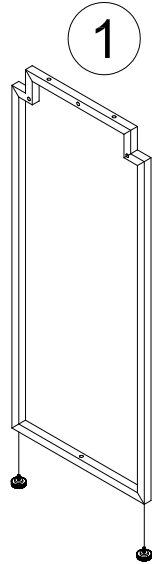
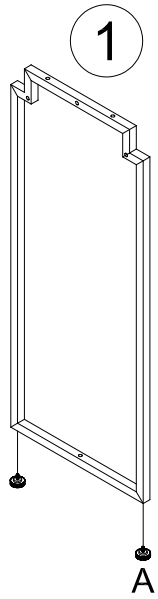
# Assembling Instruction

Attention: Do not tighten the screws until all of them are in right positions






<b>A</b>	X4		M6X17
<b>B</b>	X15		Φ8
<b>C</b>	X8		M6X35
<b>D</b>	X7		M6X30
			4MM




1



2

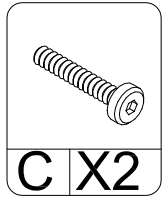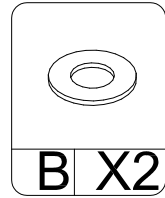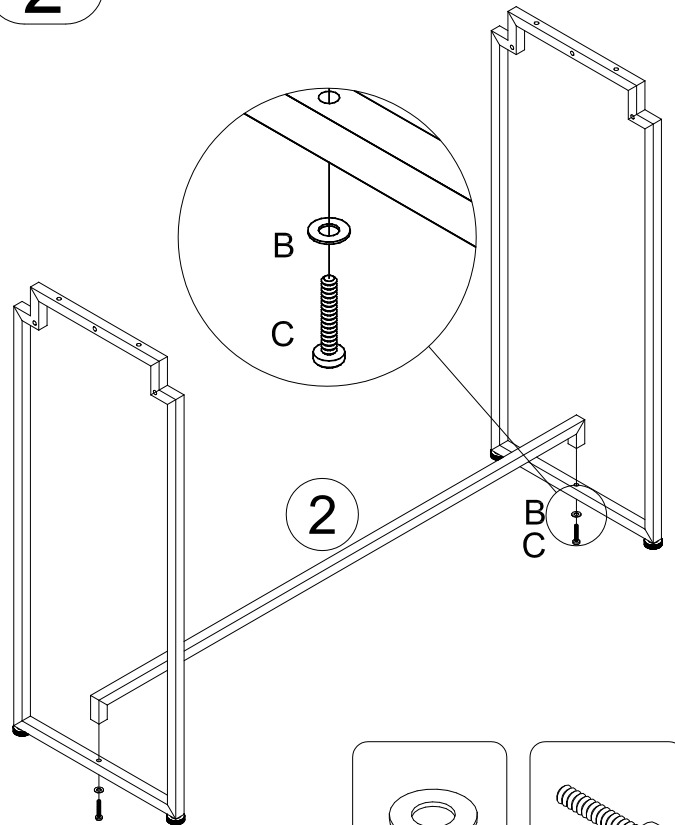

3

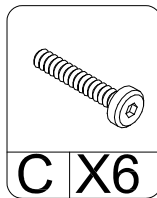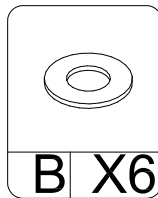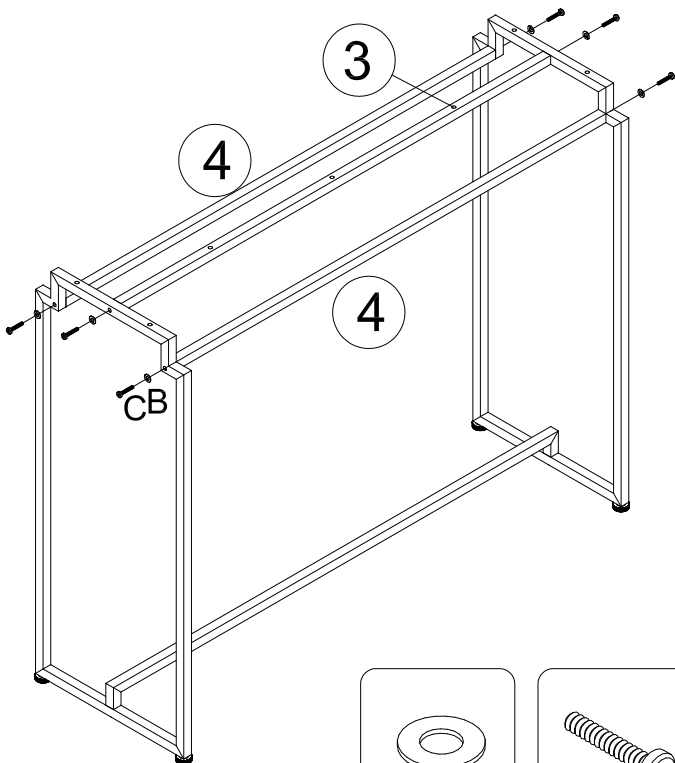

4

