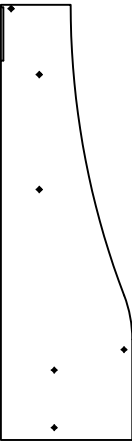
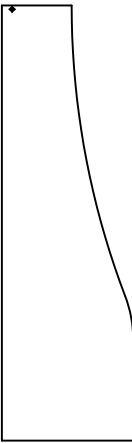
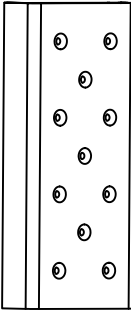










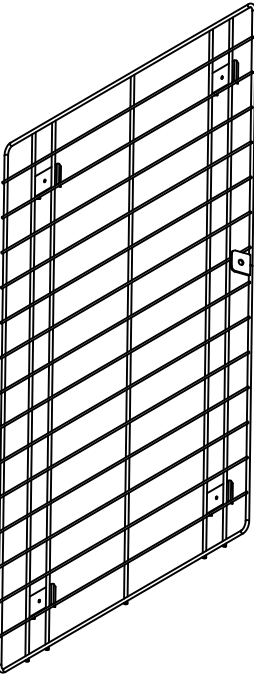















Parts List:

										
A11pcs	A21pcs	B11pcs	B21pcs	C11pcs	C31pcs	D21pcs	D11pcs	E2pcs	F2pcs	G2pcs

						
Z28pcs	Z34pcs	Z44pcs	Z516pcs	Q1x42	Z6x16	Z84pcs
					M4x6mm	M6x8mm


								
M4x15mm	M6x15mm	M6x30mm	M6x40mm	M6x45mm	M6x55mm	M8x15mm	M8x35mm	M8x55mm
V24pcs	T124pcs	T28pcs	T34pcs	T46pcs	T54pcs	Y32pcs	Y110pcs	Z96pcs

Parts List:


(H1)	1pcs	(H2)	1pcs	(H3)	1pcs	(I1)	1pcs	(I2)	1pcs	(I3)	1pcs	(J)	1pcs	(K)	1pcs	(L)	1pcs	(M)	12pcs	(N)	8pcs

(P)	2pcs	M8x30mm	KEY 4	Ø6xØ18mm	
(Z10)	2pcs	(W)	1pcs	(X)	8pcs
		(C2)	1pcs	(U3)	1pcs
				(U1)	1pcs


Step 1

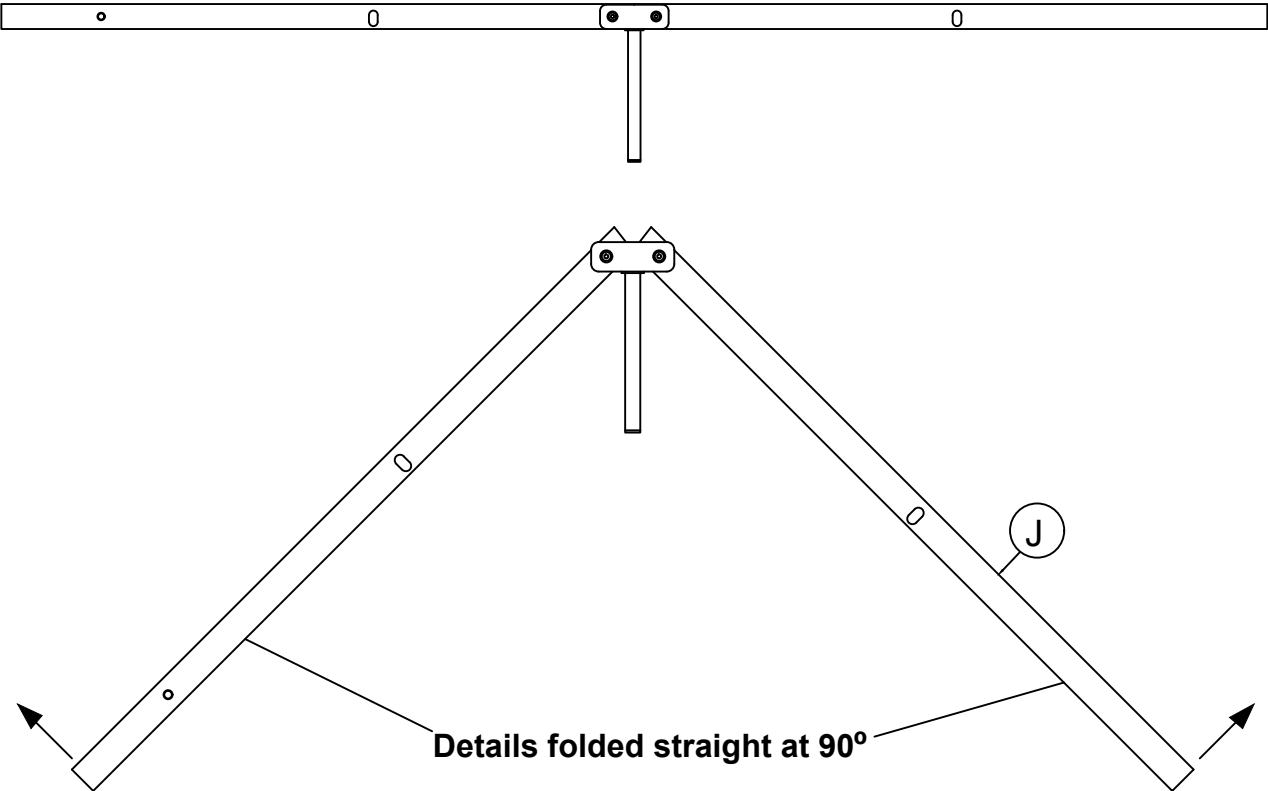


Step 2

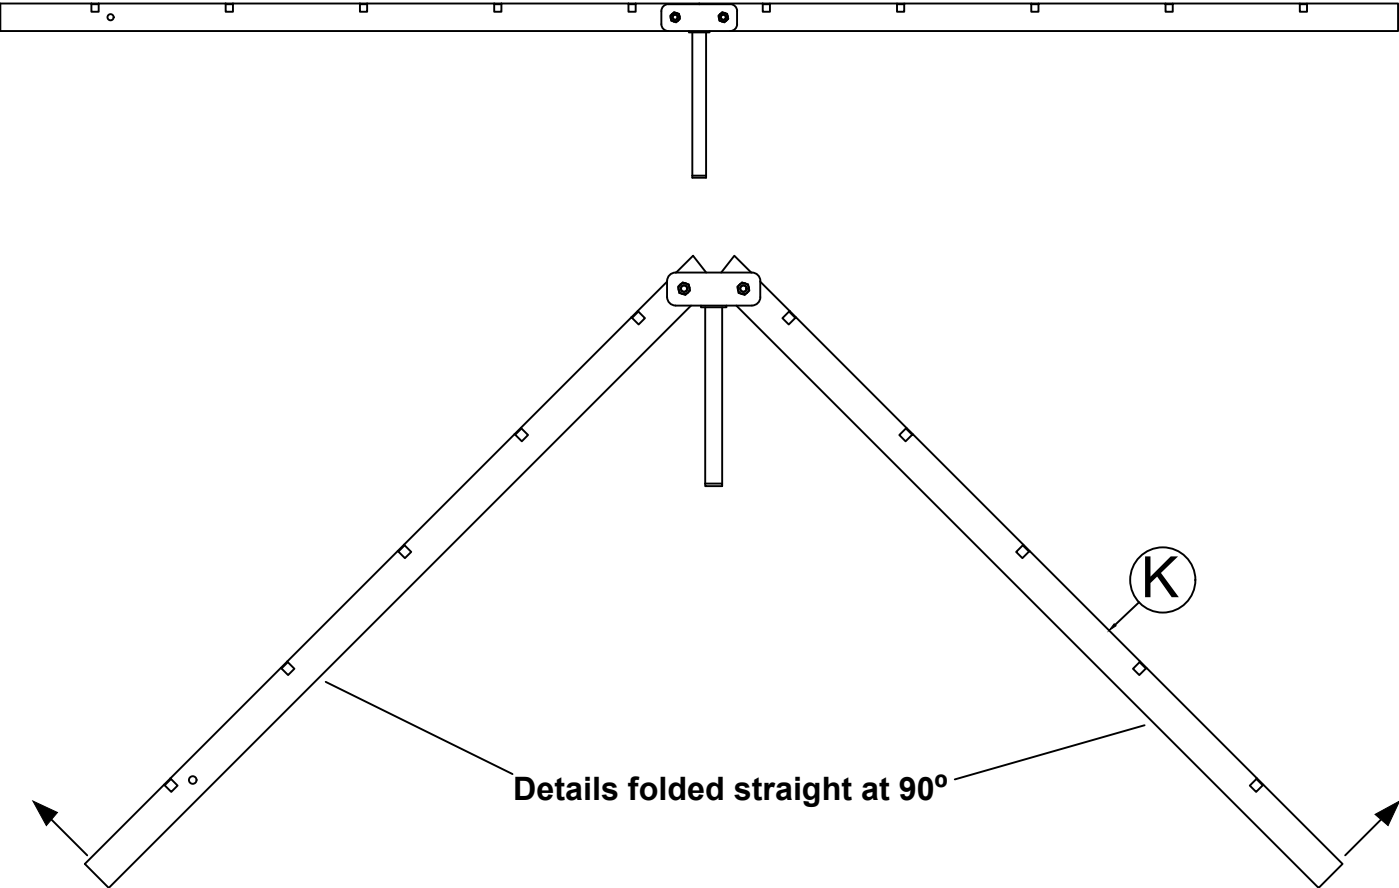


Step 3

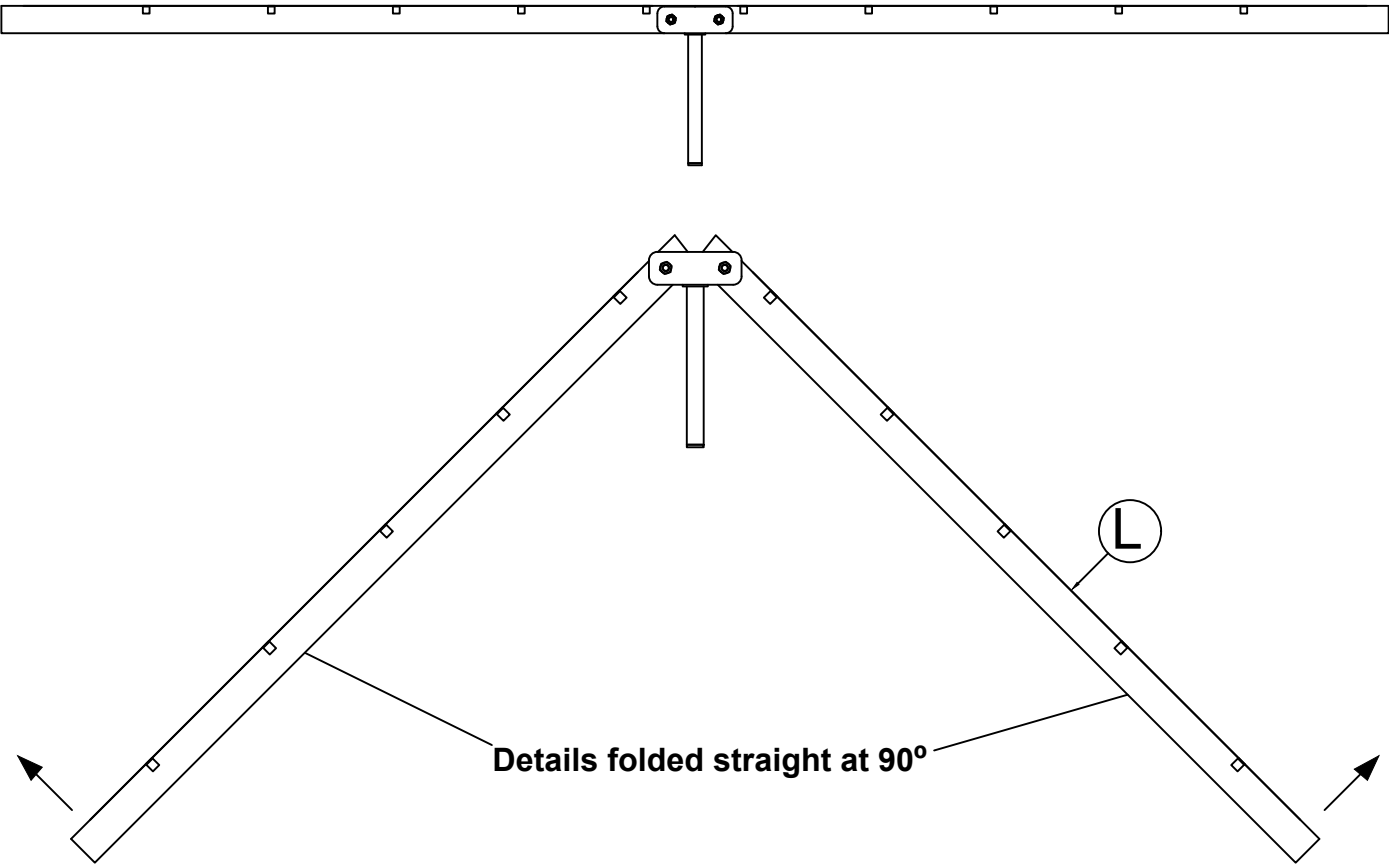


Step 4

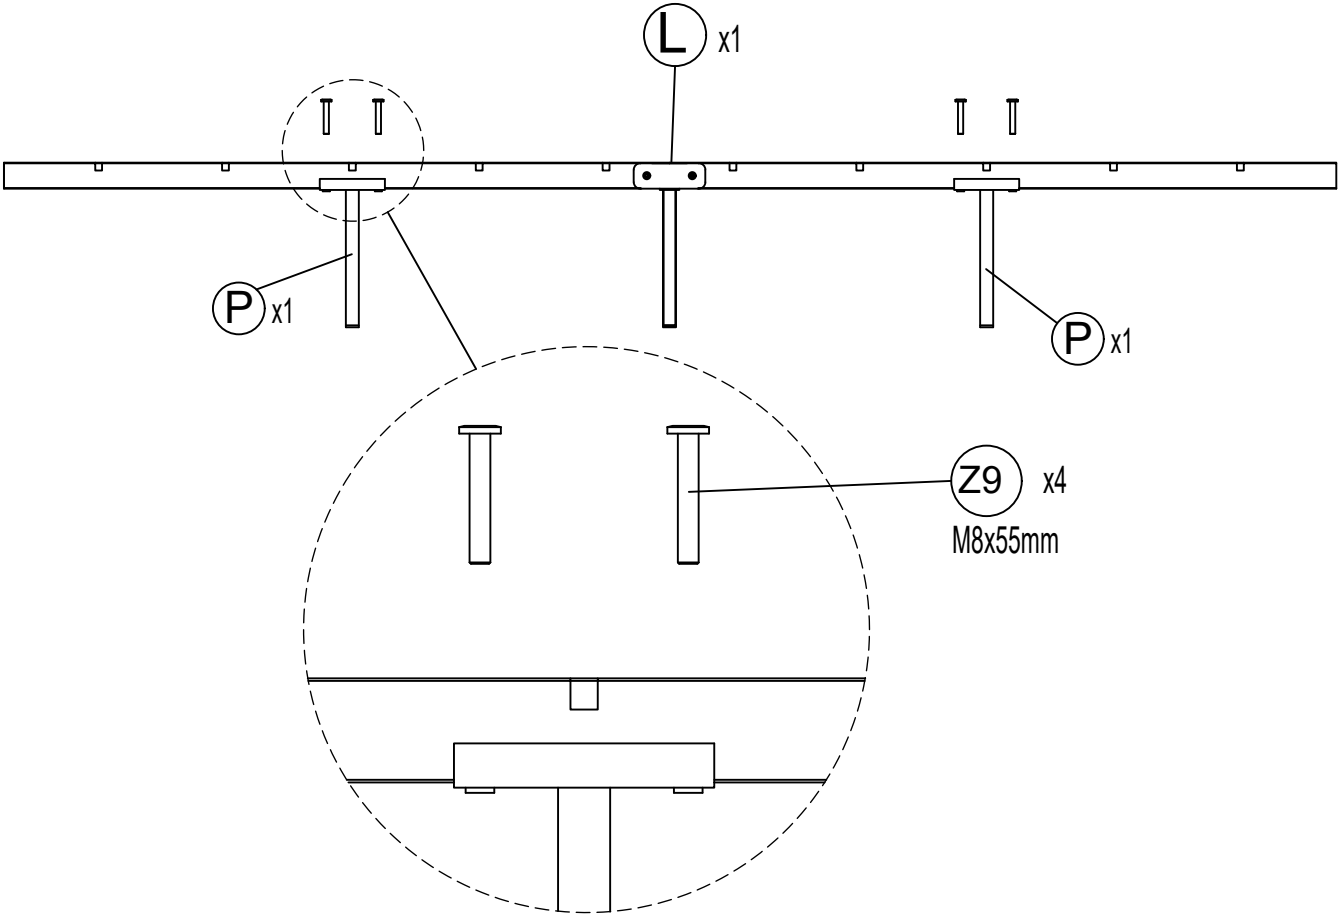


Step 5

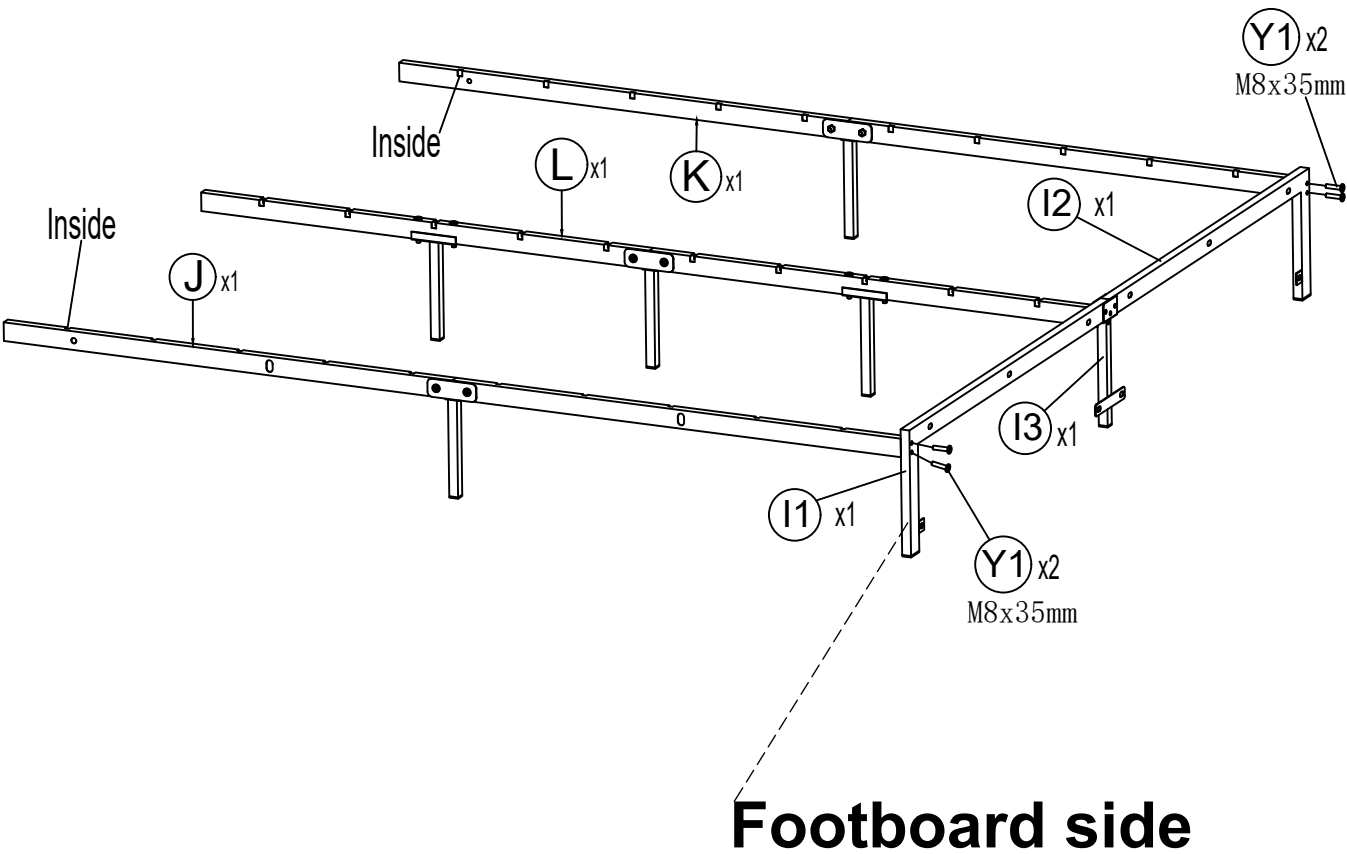

Step 6

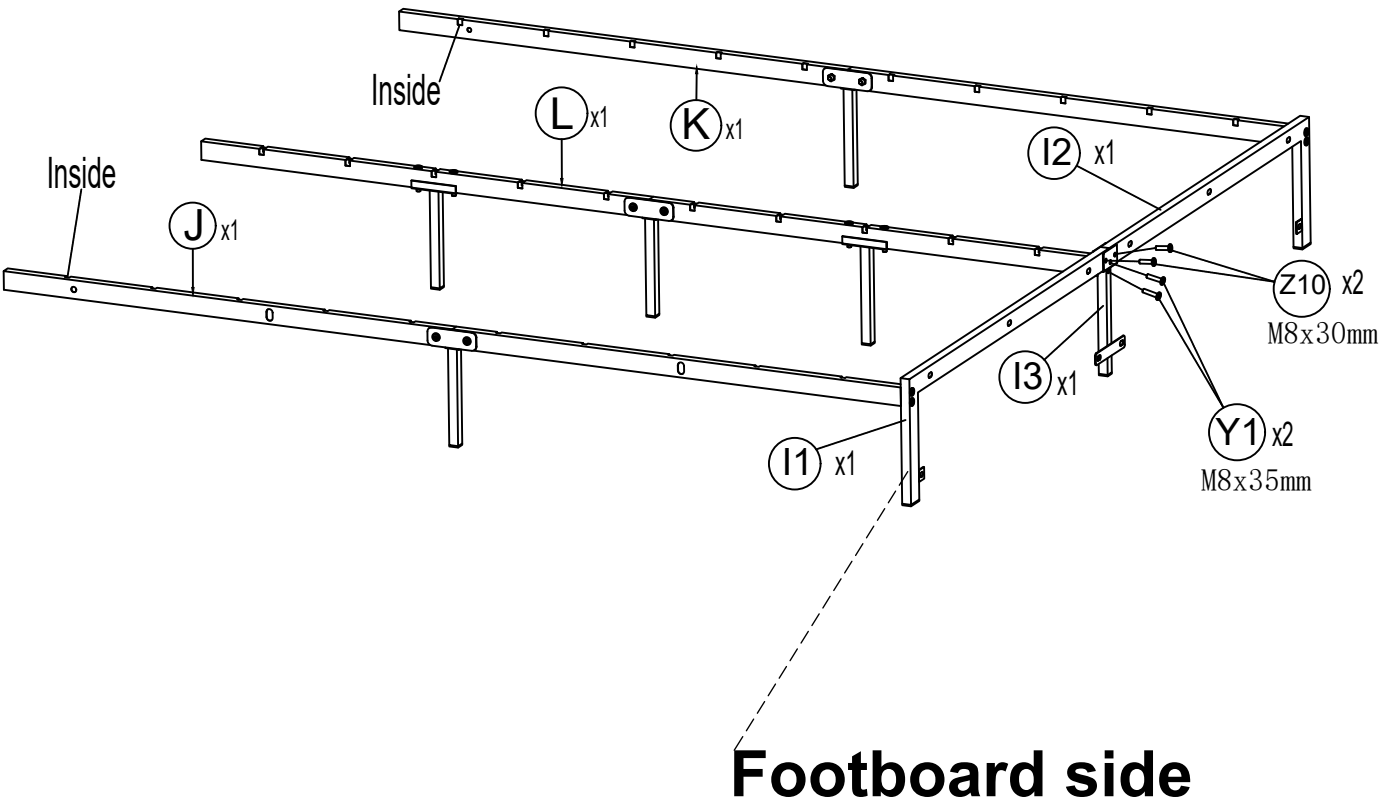


Step 7

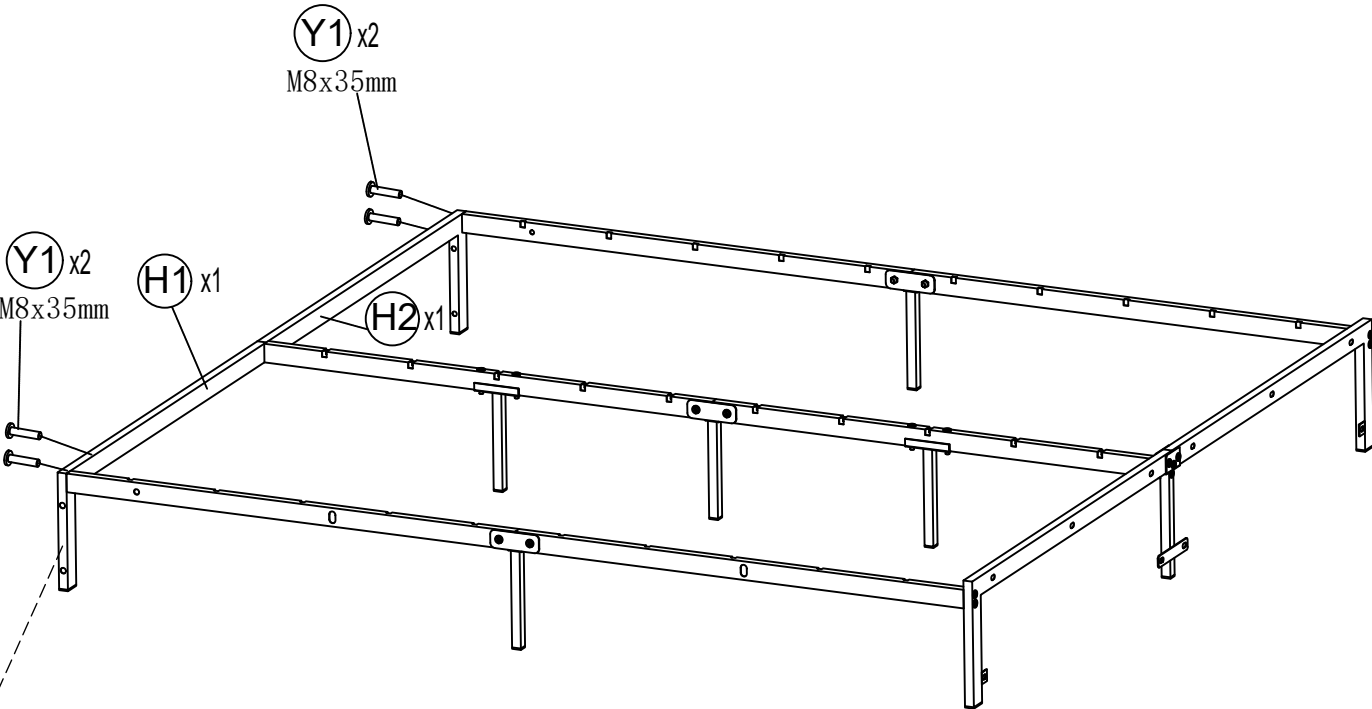


Headboard side


Step 8

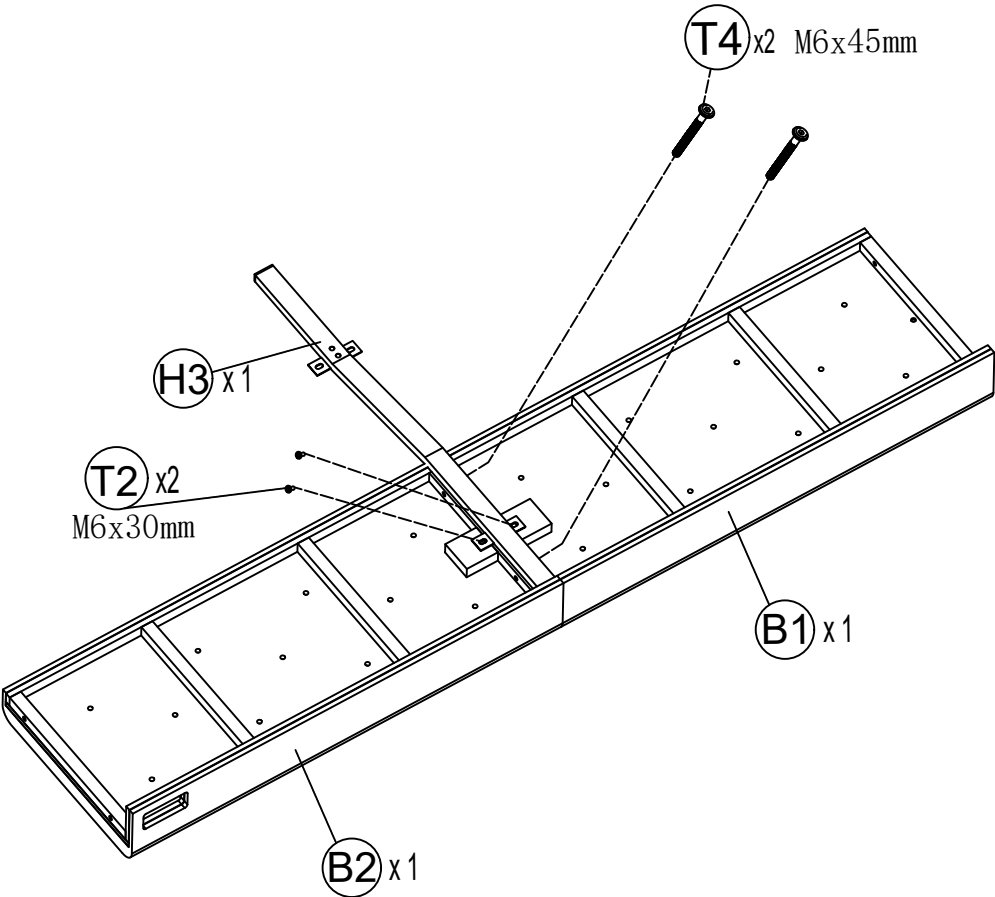


Step 9

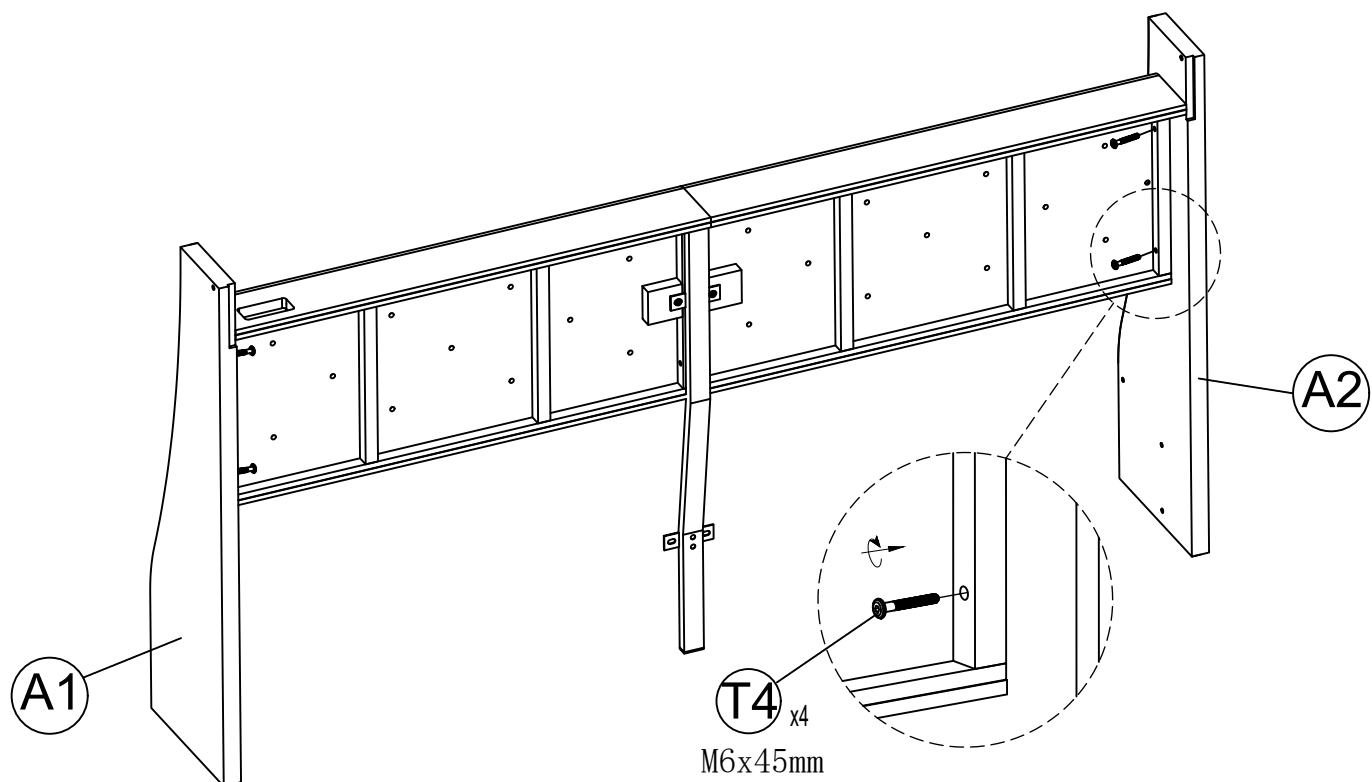


Step 10

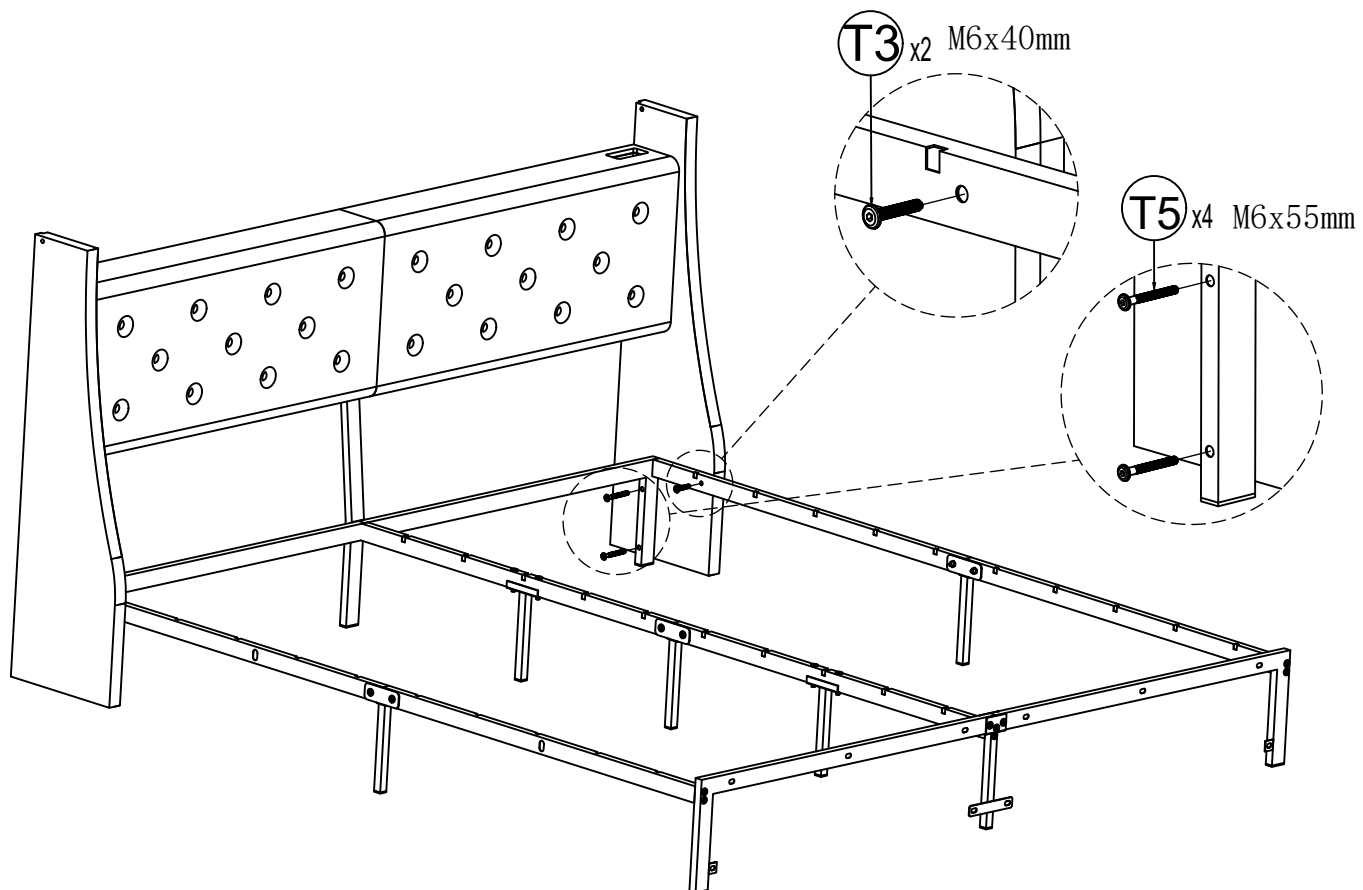


Step 11

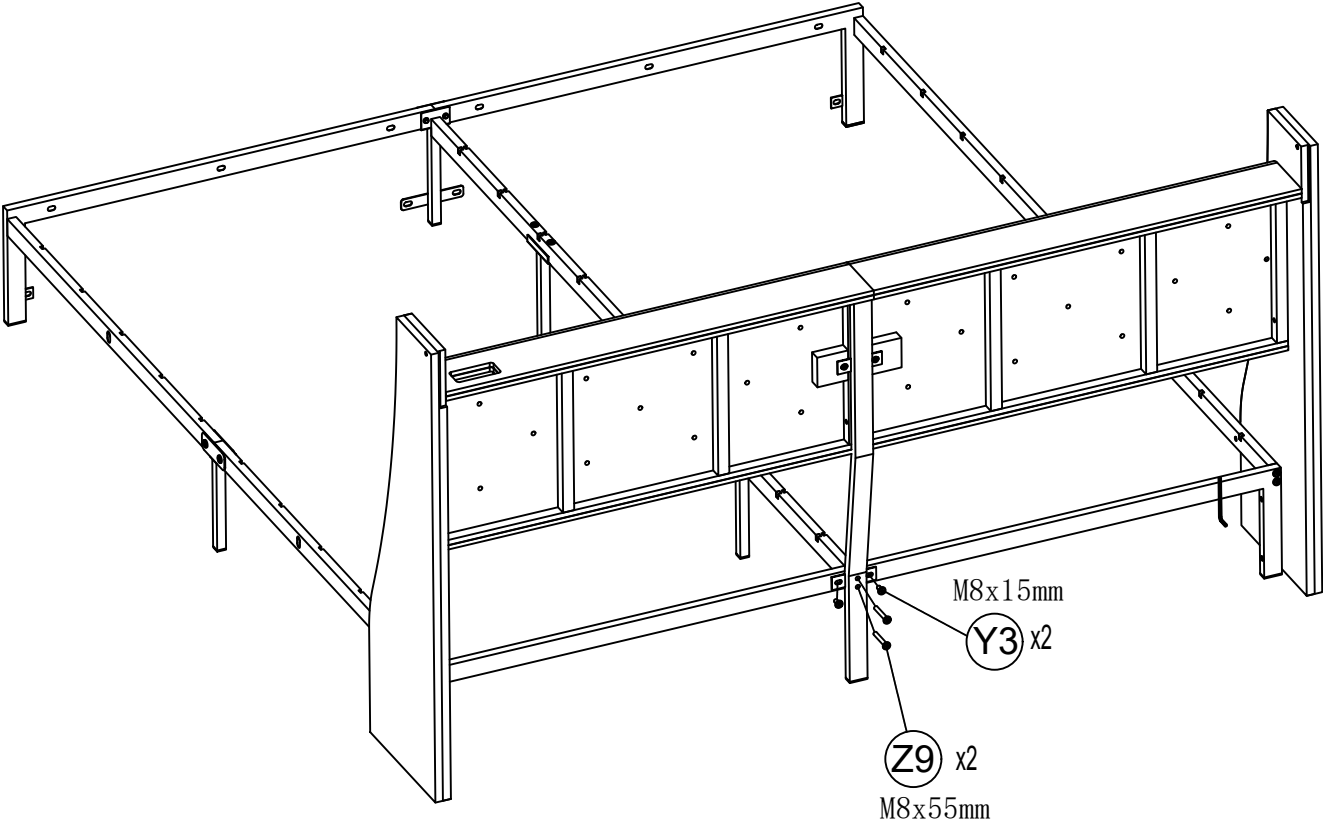

Step 12

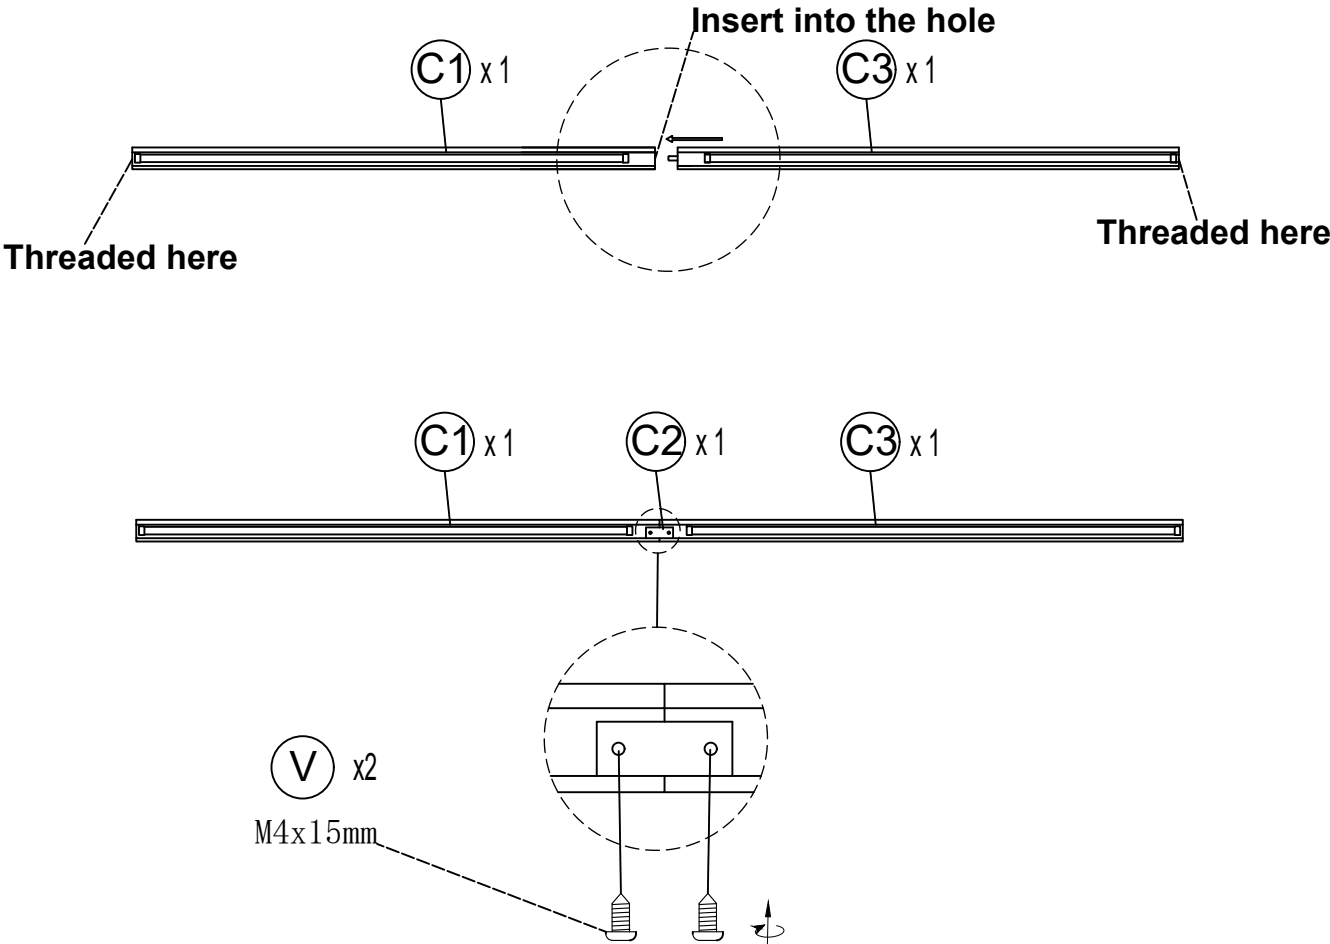


Step 13

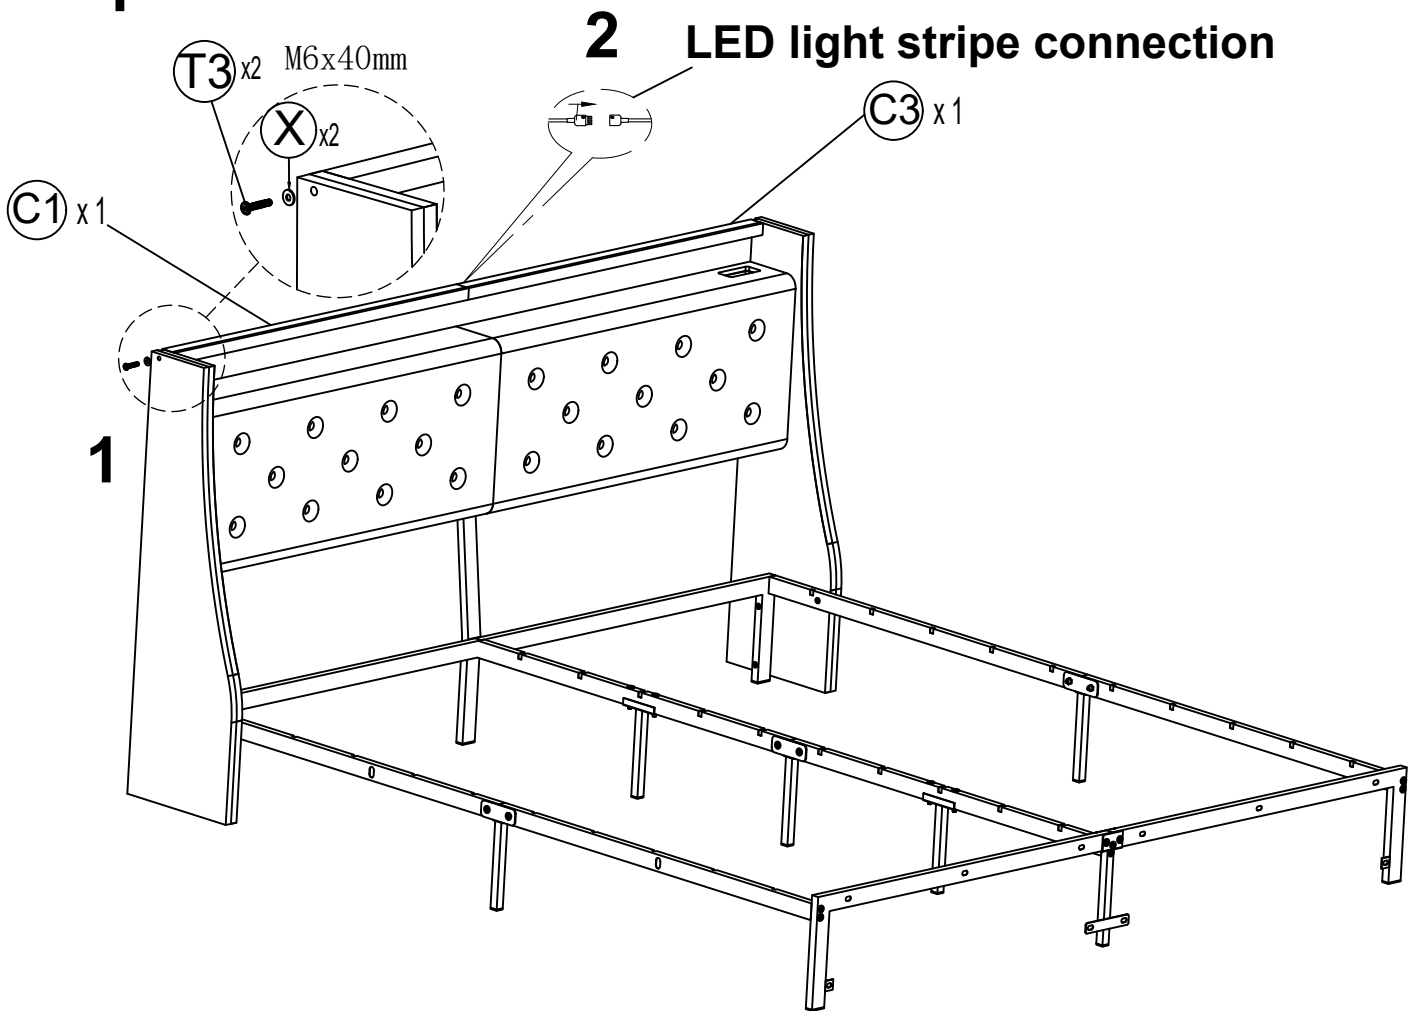


Step 14

We suggest using drill machine to install "V" screws

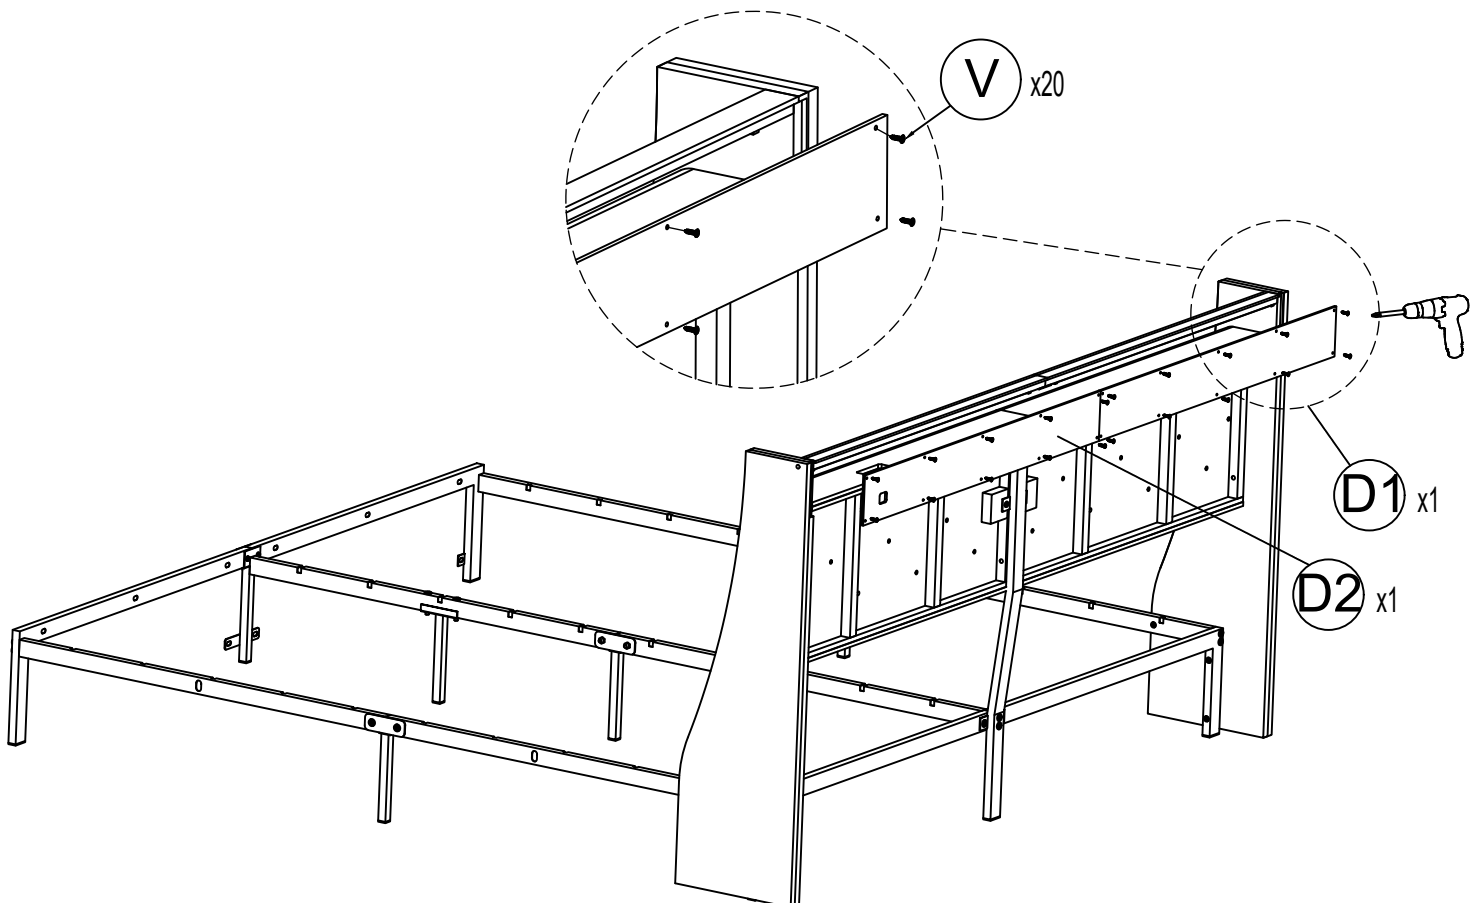


Step 15

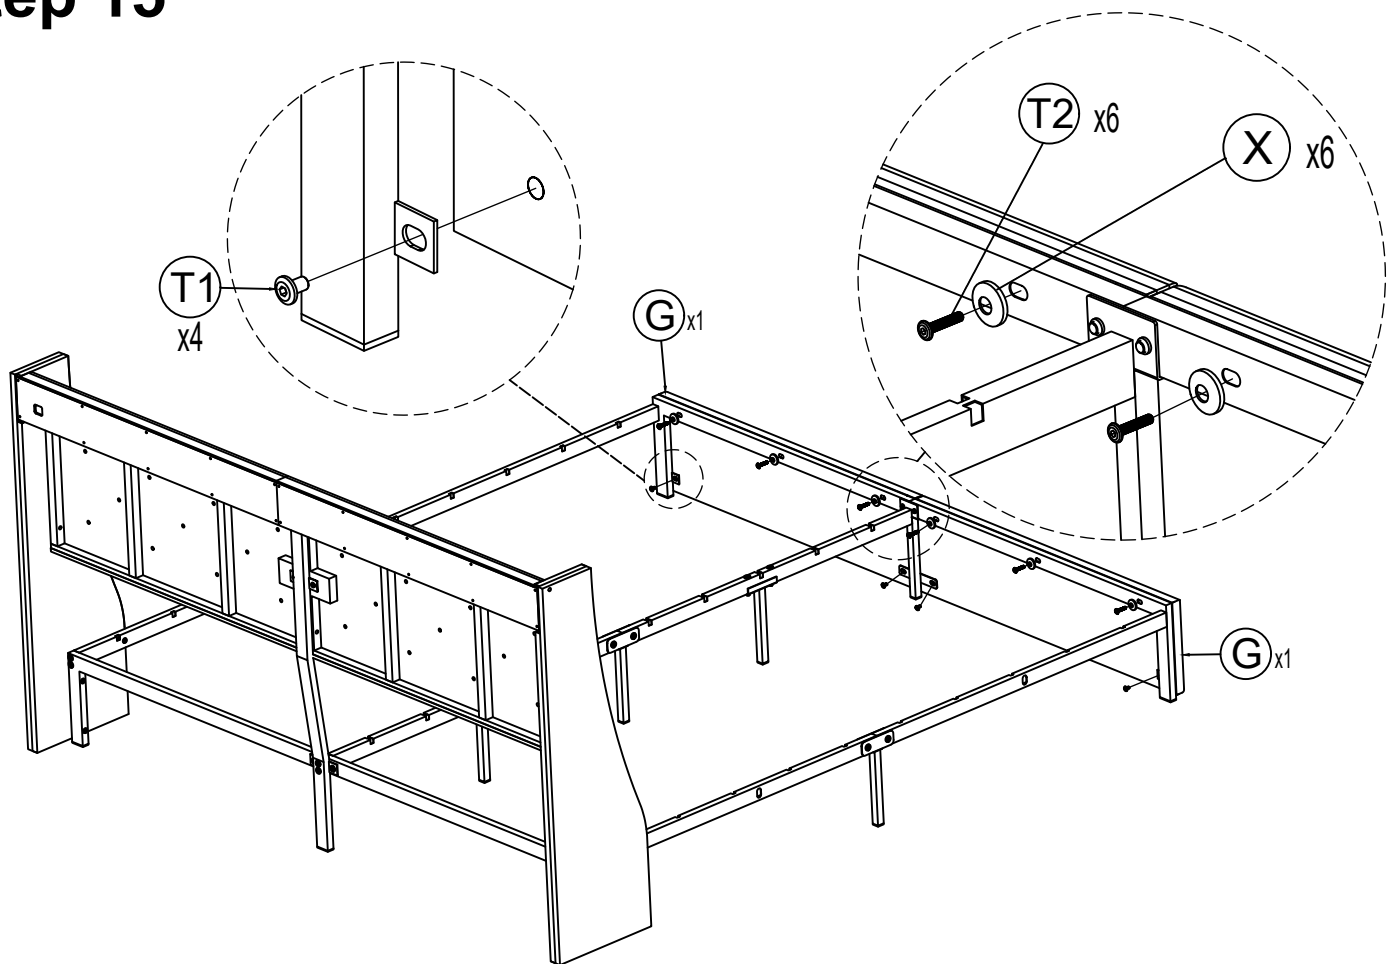

Step 16

Tear off the double-sided adhesive tape before place the mattress.

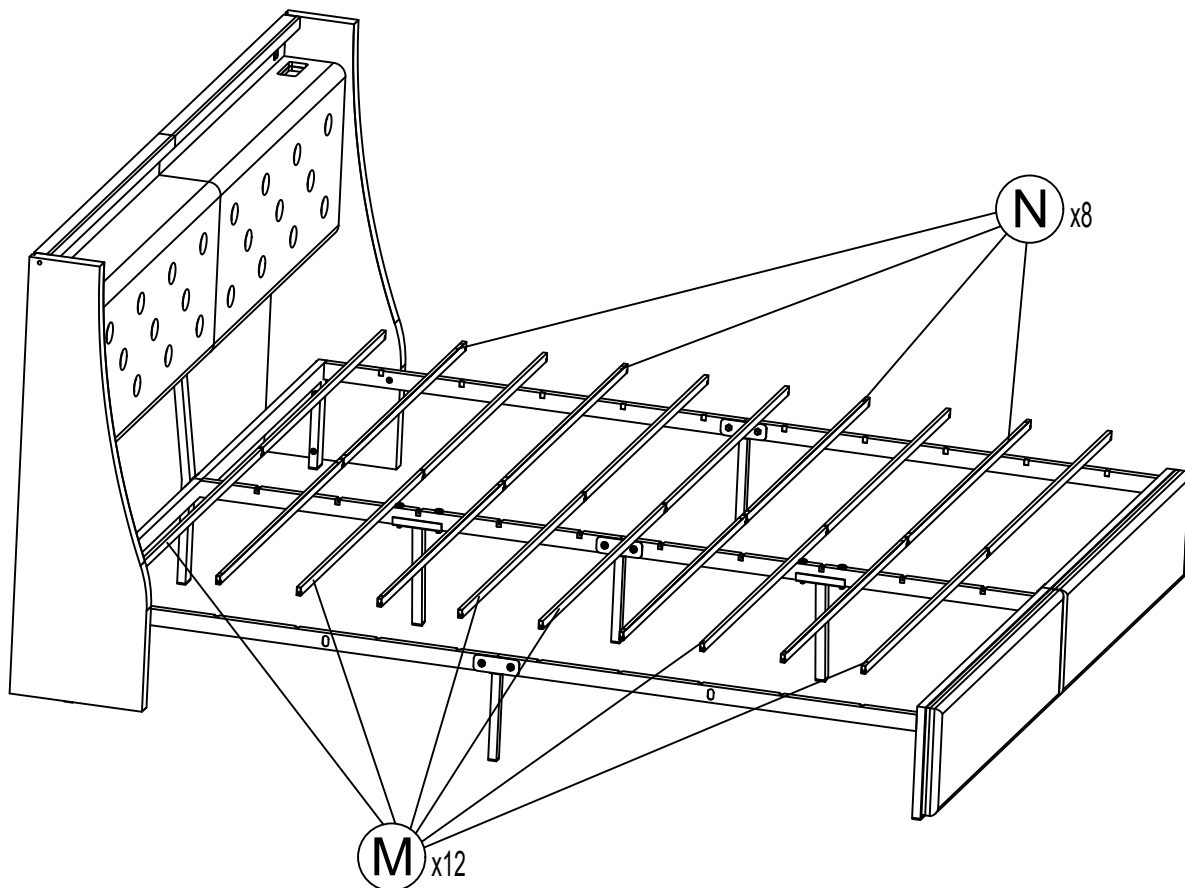


Step 17 We suggest using drill machine to install V screws

*Note: no holes on the board "B2" is normal


U1 X1

Tear off the double-sided adhesive tape.


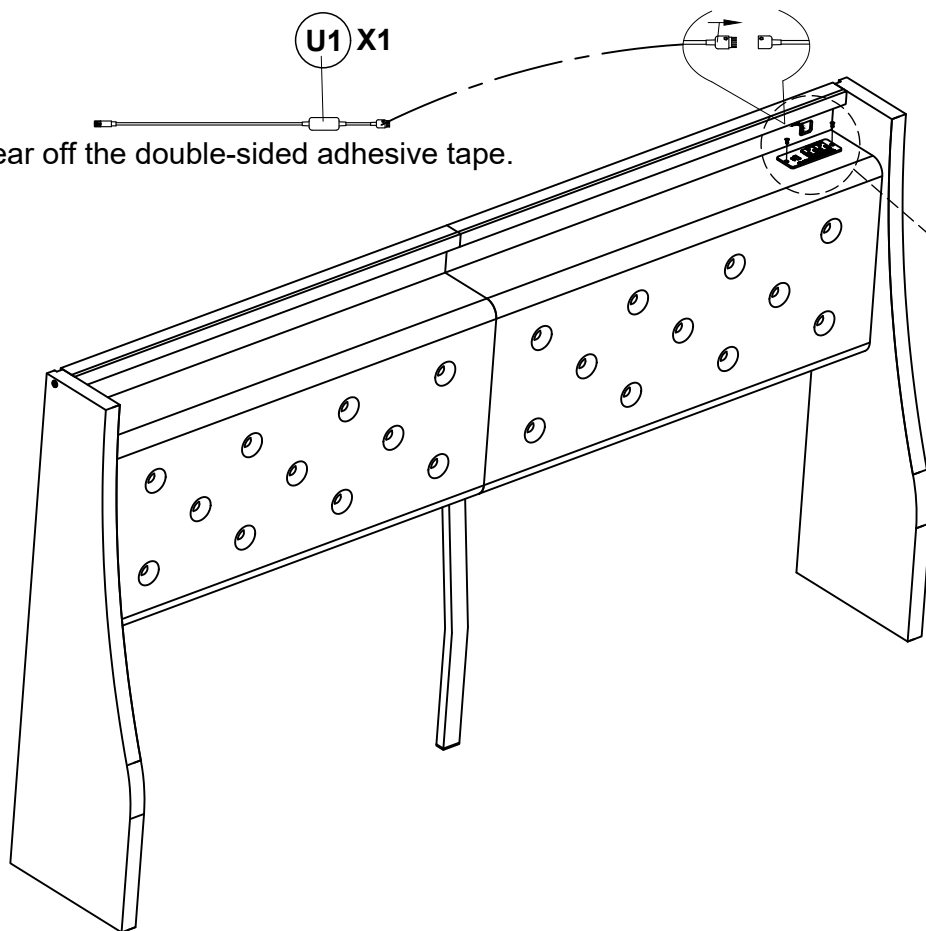


U3 x1


V x2

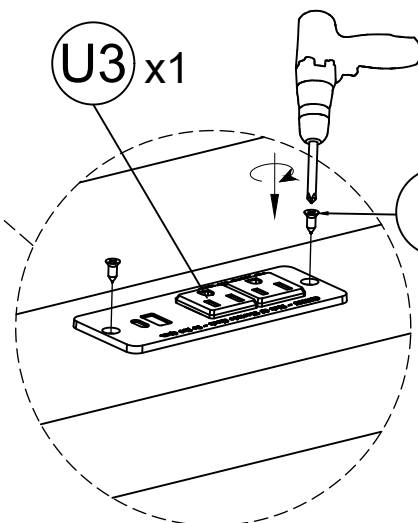

Put all the screw in but not tighten, don't let the screws get through all the wheel's holder

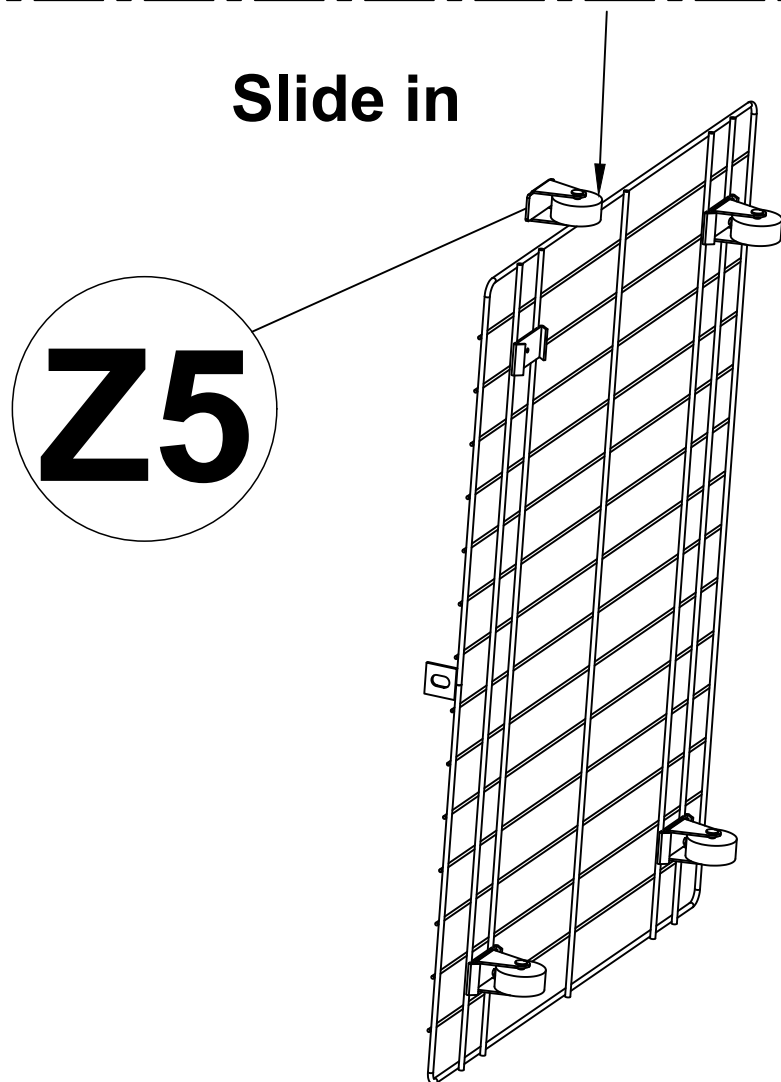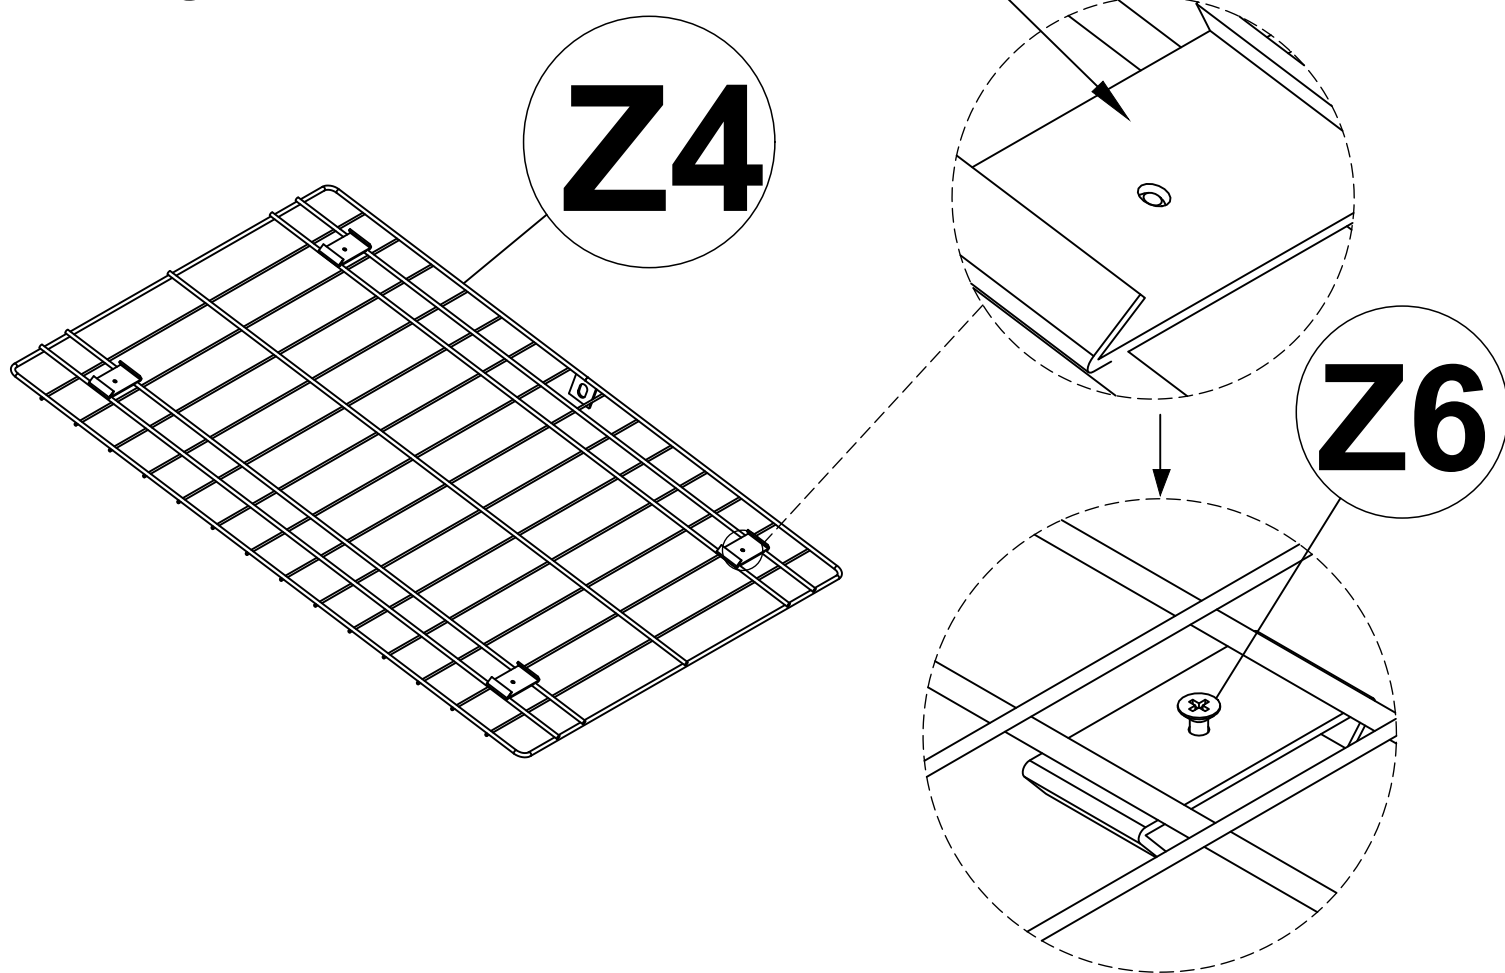



Re-tighten the screws

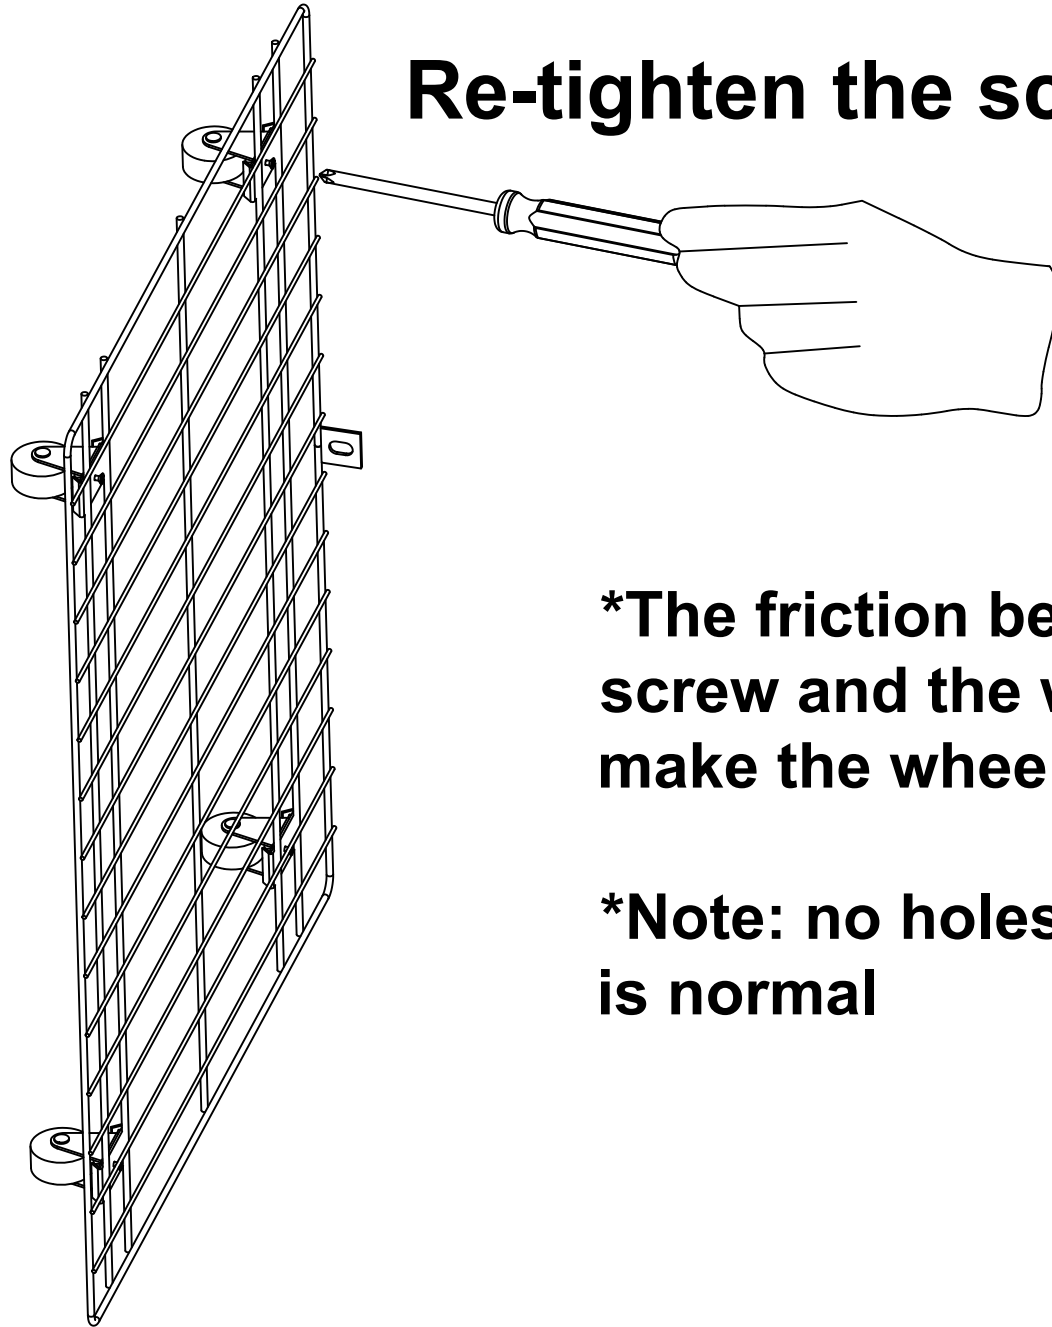



***The friction between the screw and the wheels will make the wheels can be holded**

***Note: no holes on the wheels is normal**


Detailed assembly instructions Q1

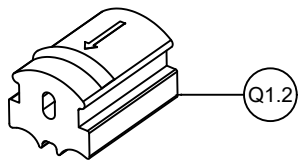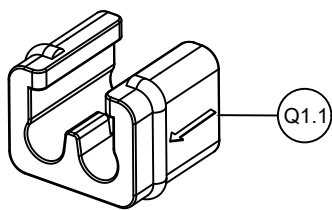


**these two
lines on Q1.1
and Q1.2 need
to be matched**

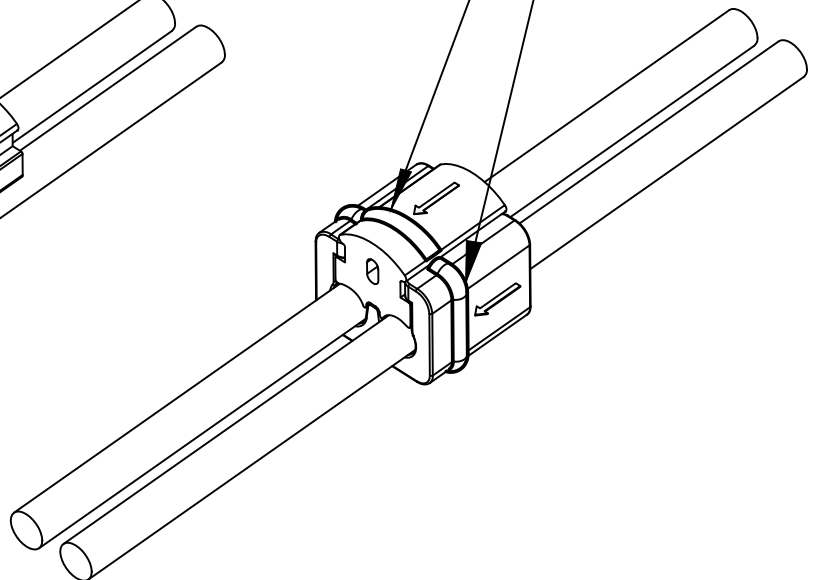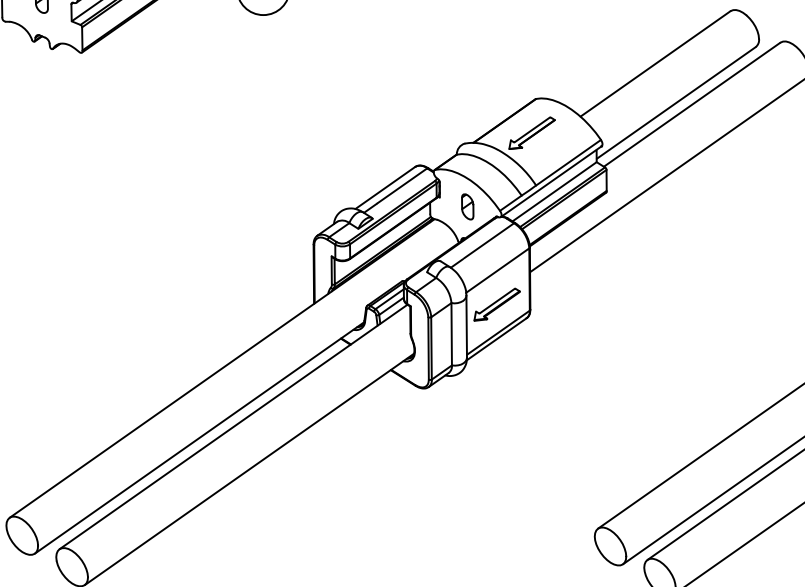


Step 18

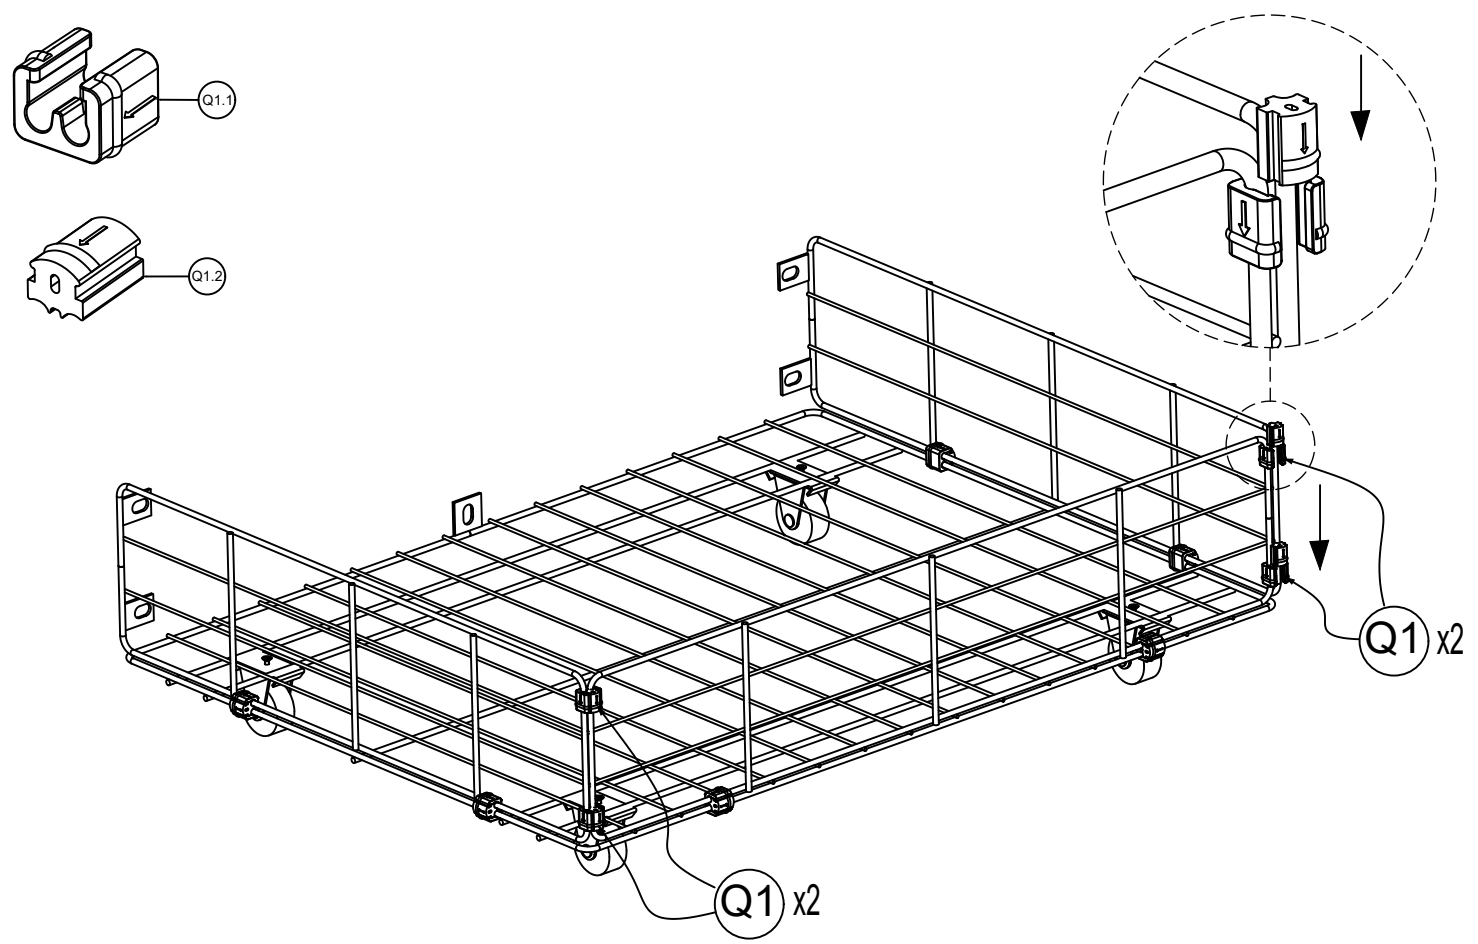


Step 19

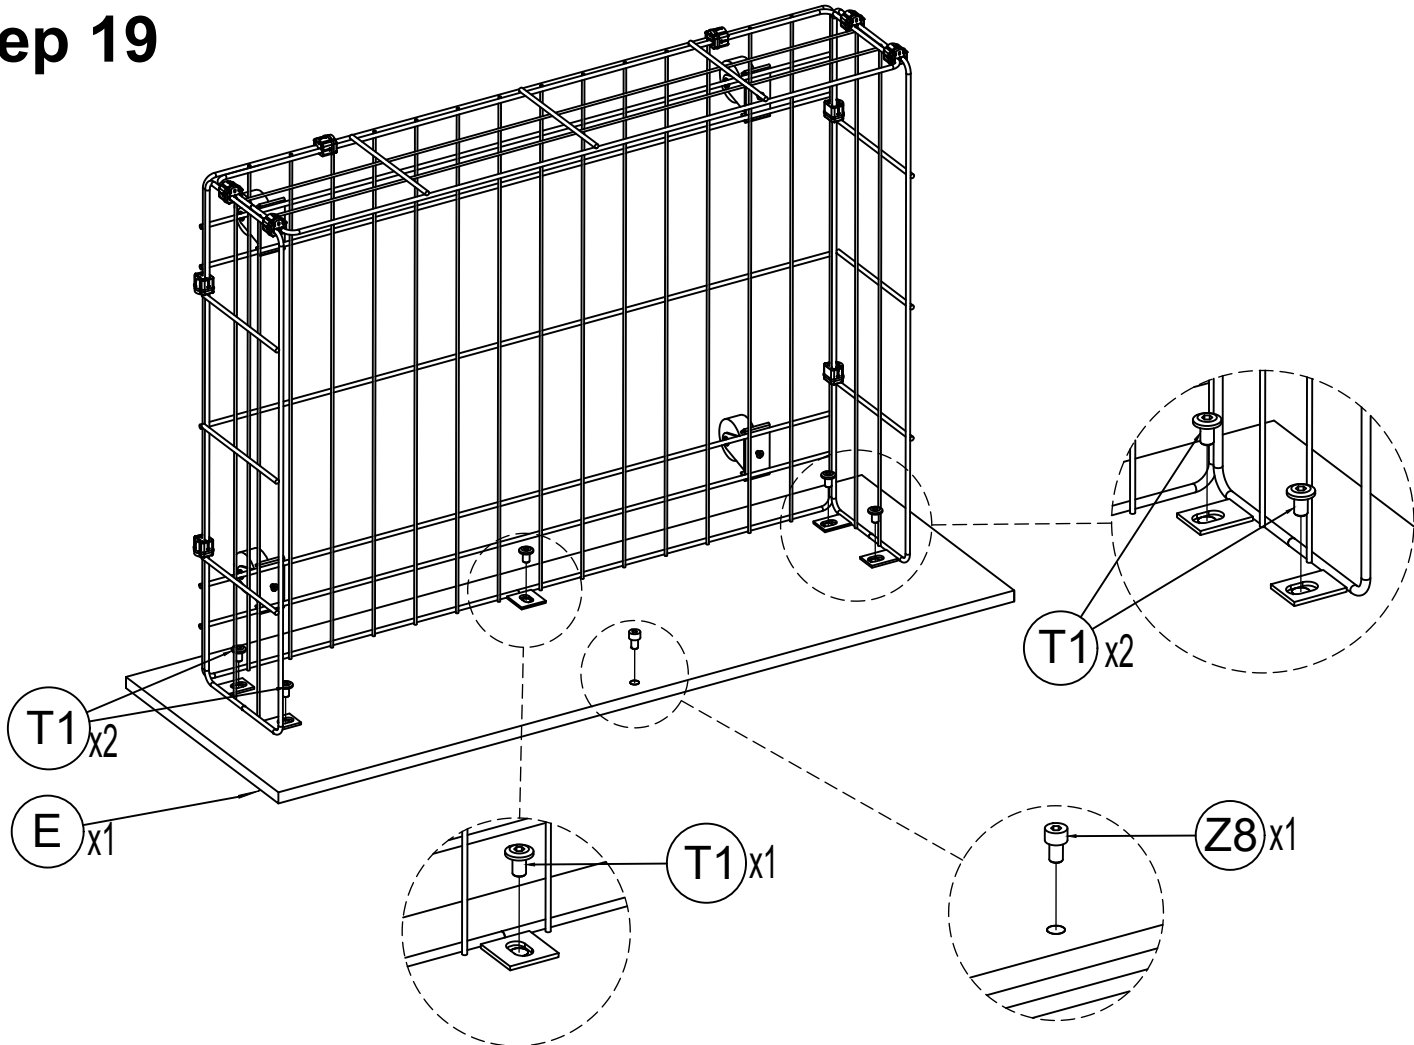


Step 20

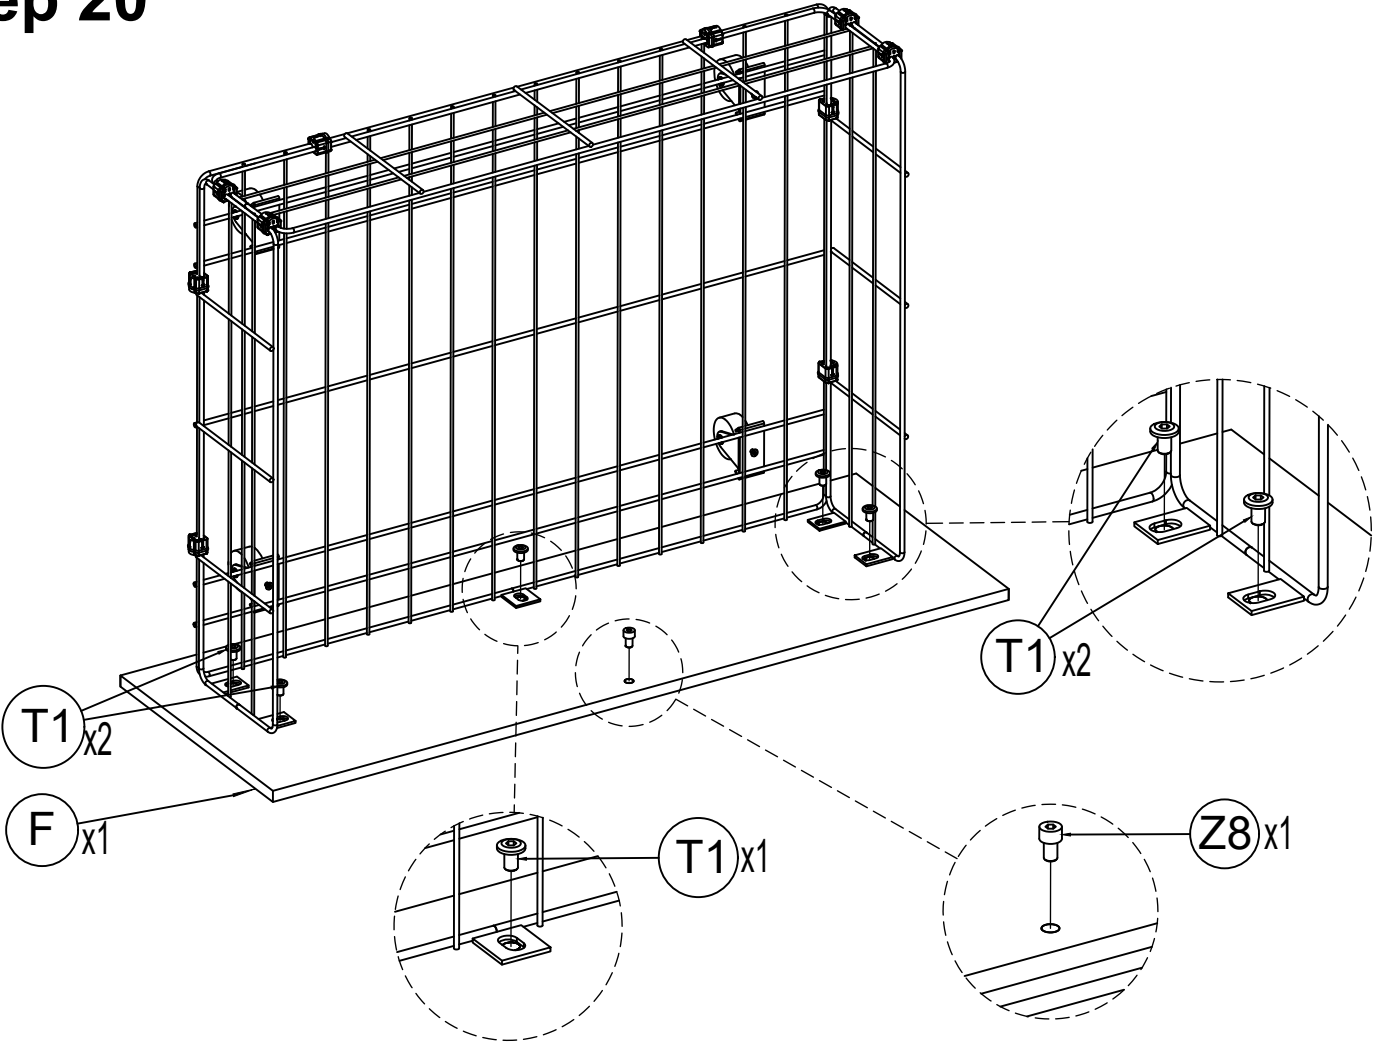

Step 21

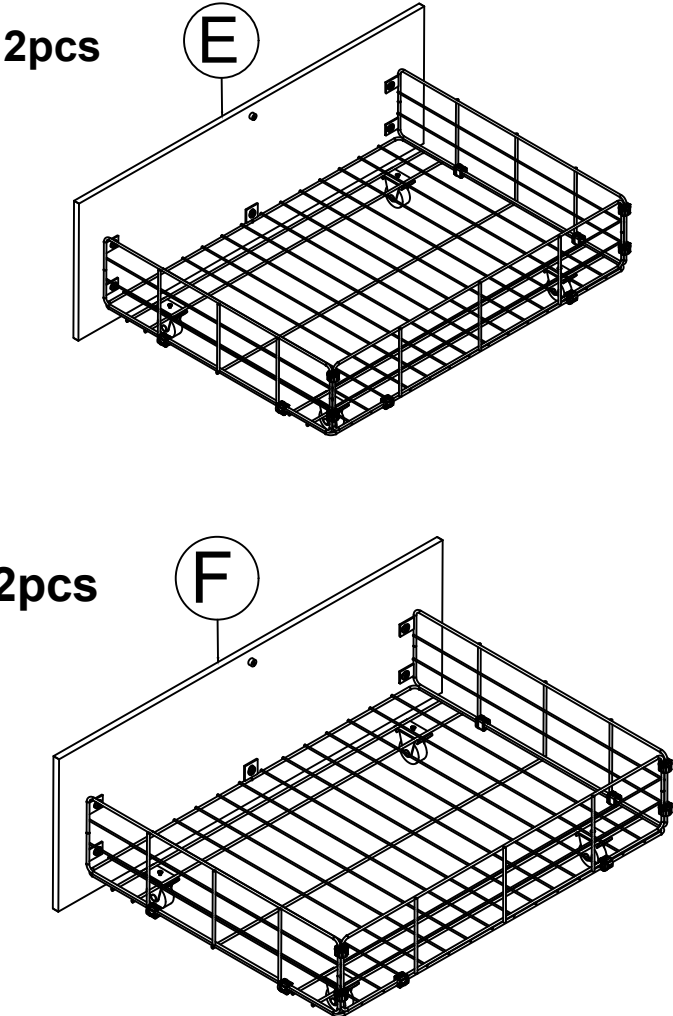

Step 22

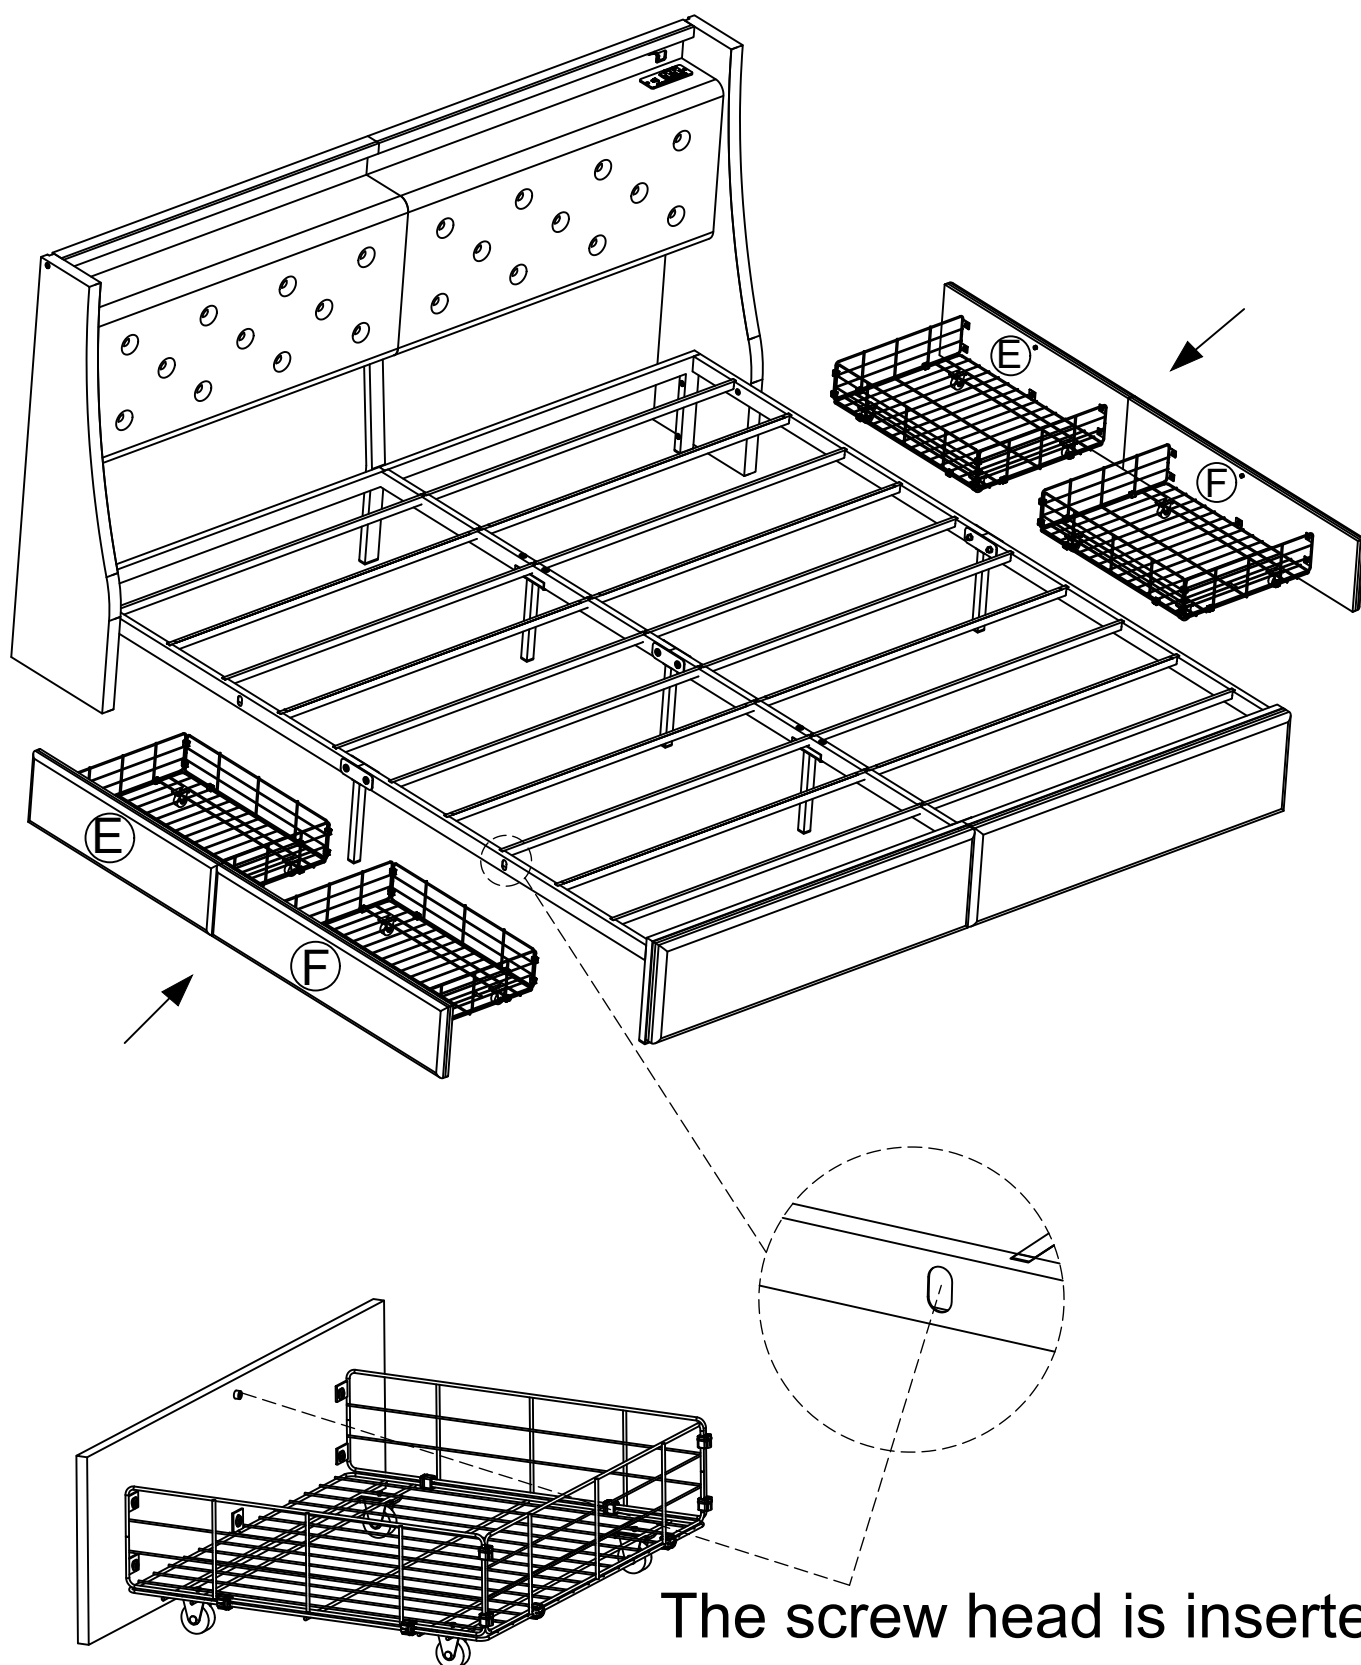

The screw head is inserted into this hole to help the drawer can be in the fixed position.

REMOTE CONTROL

