

Assembly Instructions						
Caution: You must read this before you proceed						
Care & Maintenance						
	 Not for commercial use. For residential use only. 					
	• Furniture may scratch floors. We recommend using furniture pads to protect your floors.					
	 Do not put hot items directly on furniture surface. 					
	 Do not clean furniture with harsh cleansers or polish. 					
0	 Do not place furniture under direct sunlight. 					
0	 Do not place furniture near heating or cooling vents. 					
ØL	 Do not write on furniture without a padded barrier to protect the surface. 					
Ø	 Do not place furniture outside . For indoor use only. 					
	• Stains may be removed with mild soap solution and damp cloth.					
0 🏌	 Children should not climb or jump on the furniture. 					
	• Dust and pick-up spills using a clean, non-colored, lint-free cloth.					
Please look in the magic tape pouch for hardware packs and legs.						
Sets often ship in multiple boxes and may arrive a day or two apart.						


SOFA							
Part List							
Label	Picture	Description	QTY				
A		Back Cushion	2				
В		Seat Cushion	2				
С		Arm / Backrest	2				
D		Seat Frame	2				
E		Seat Panel	2				
F	• •	Wood Batten	4				
G		Leg	8				

Hardwar	e List					
Label	Picture		Description		QTY	
1	Ø		Plastic Washer		9	
2	e)		Metal Hook		4	
3	Contraction of the second seco		Bolt(M6*35MM)		9	
4	Ø		Flat Washer(M6)		9	
5	Ø		Spring Washer(M6)		9	
6	(C)		Bolt(M6*20MM)		13	
7			Metal Connector		2	
8	(F)		Plastic Clip		2	
9	9		Allen Wrench(S4)		1	
<u>Assemb</u>	ly Preparat	tion				
Beginning Assembly:	A X2 E X2	B X2	C X2		D X2 D X2 G X8	
	¥9 ×9 ×13	الم X4 X2	X9 X1	Ø X9	© X9 X2	
∲ ₂х 1 • На	ad instructions, cover ve 2 adults on hand for not assemble on floori semble on a clean non- ve all packaging until f	assembly- ng or carpe -marring su		-		

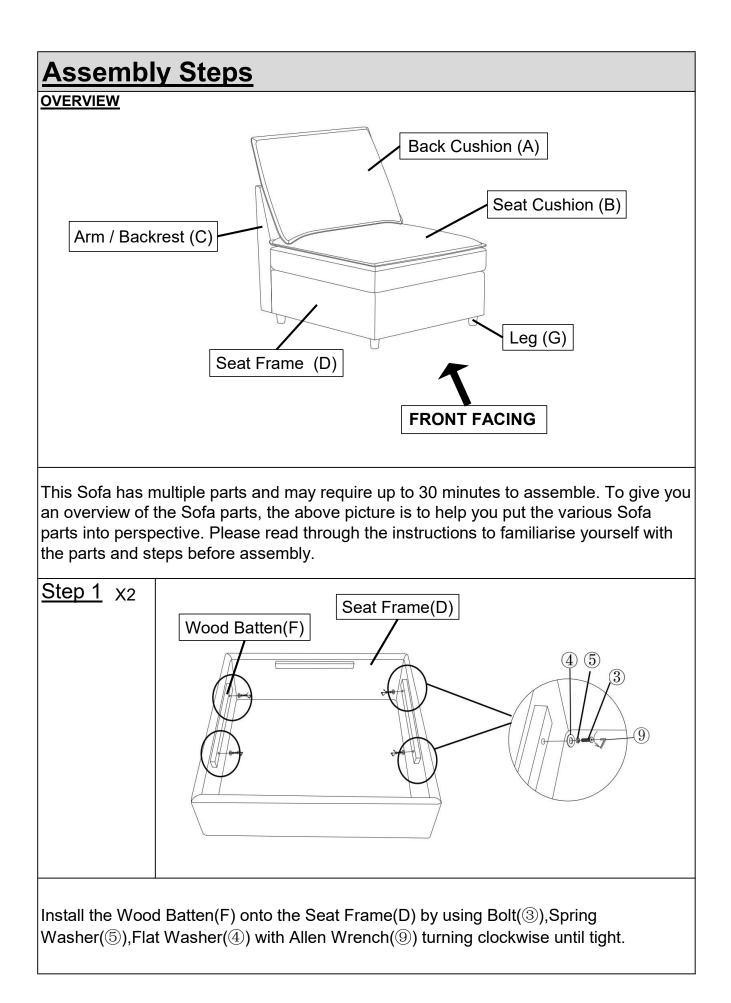


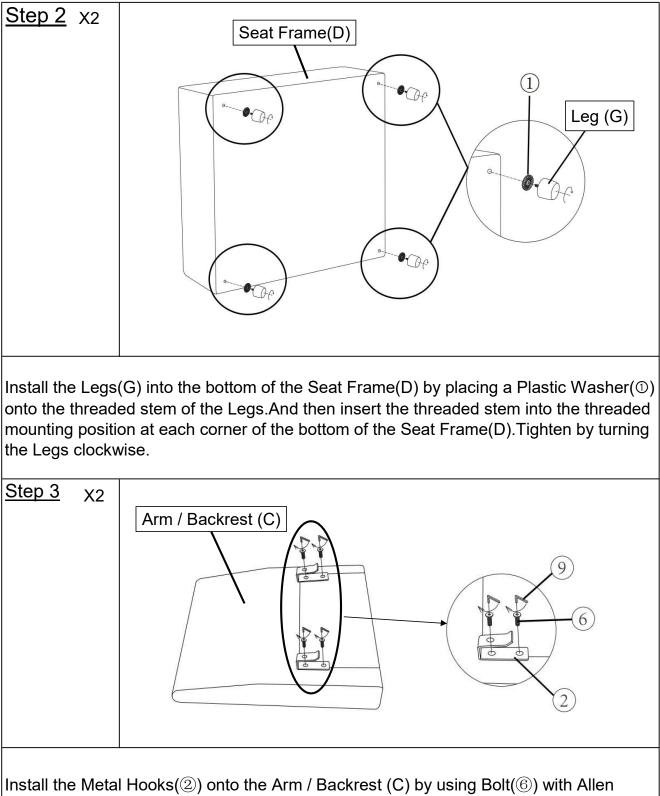



Wrench(9) turning clockwise until tight.

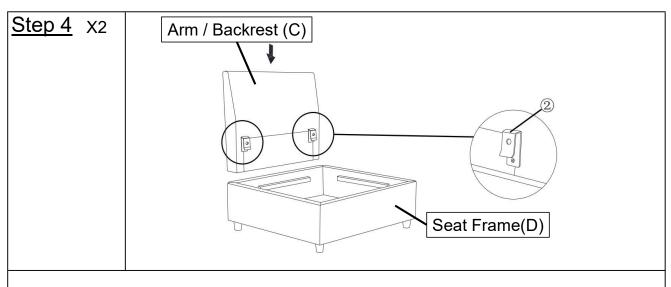

Hang the Metal Hooks(②) on the Arm / Backrest (C) onto the Seat Frame(D) and press it tightly.

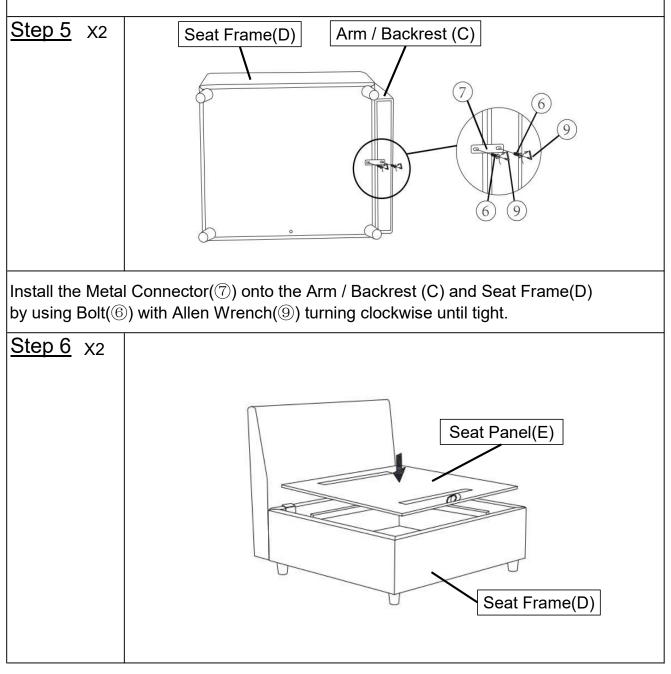

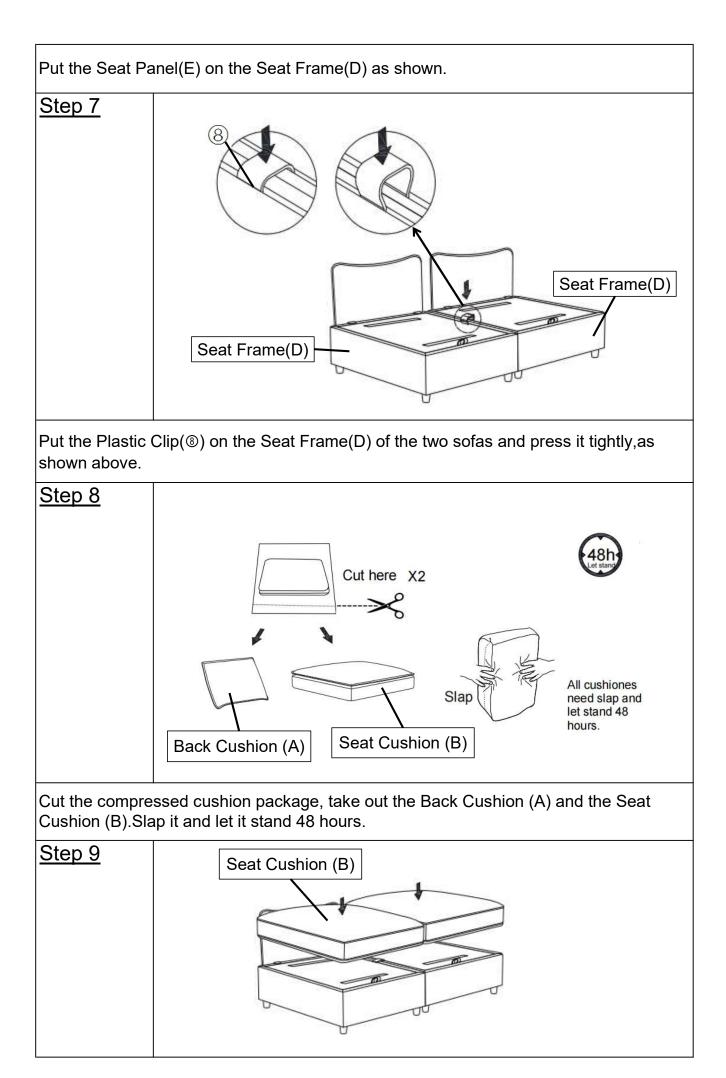

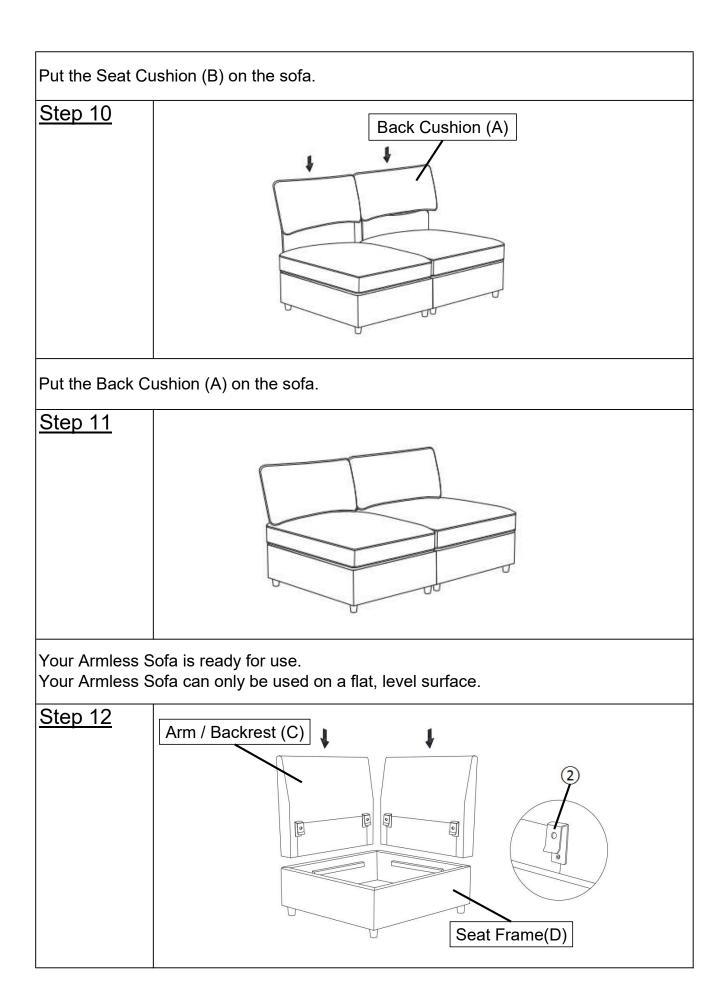

Hang the Metal Hooks(②) on the Arm / Backrest (C) onto the Seat Frame(D) and press it tightly.

