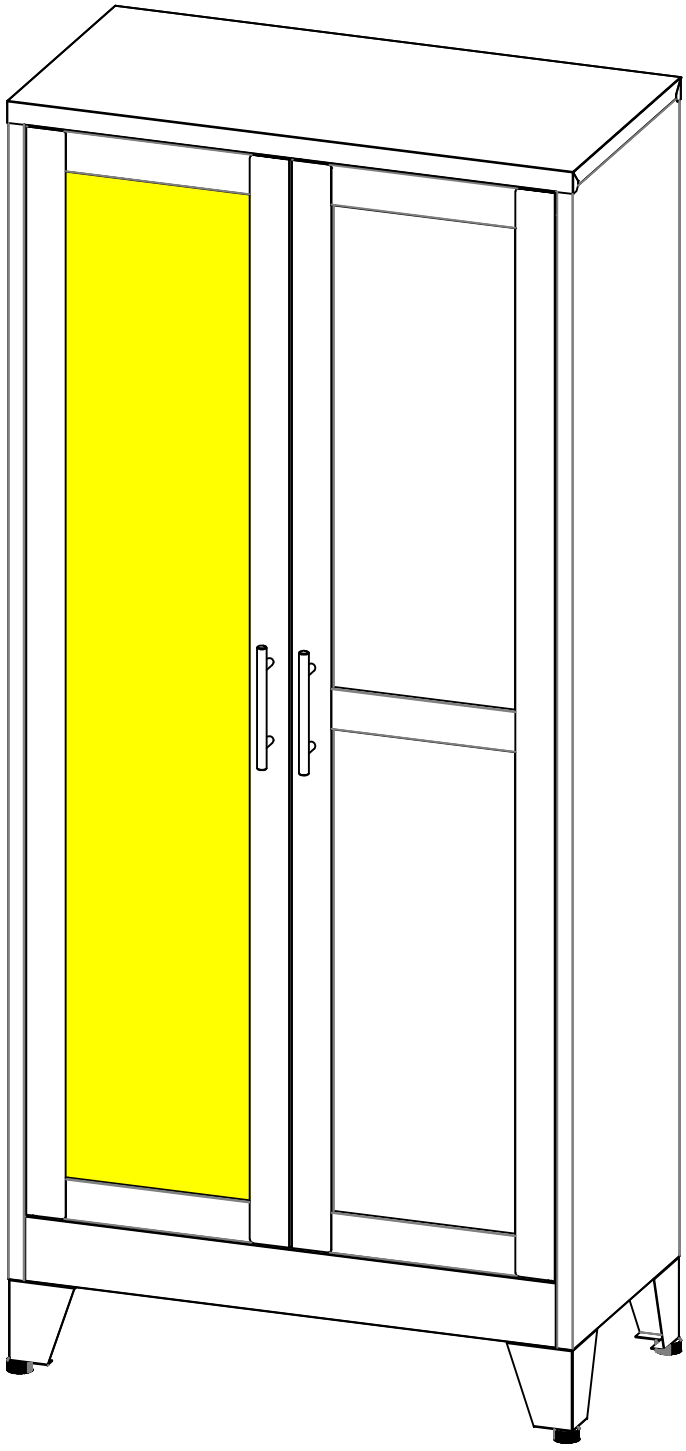
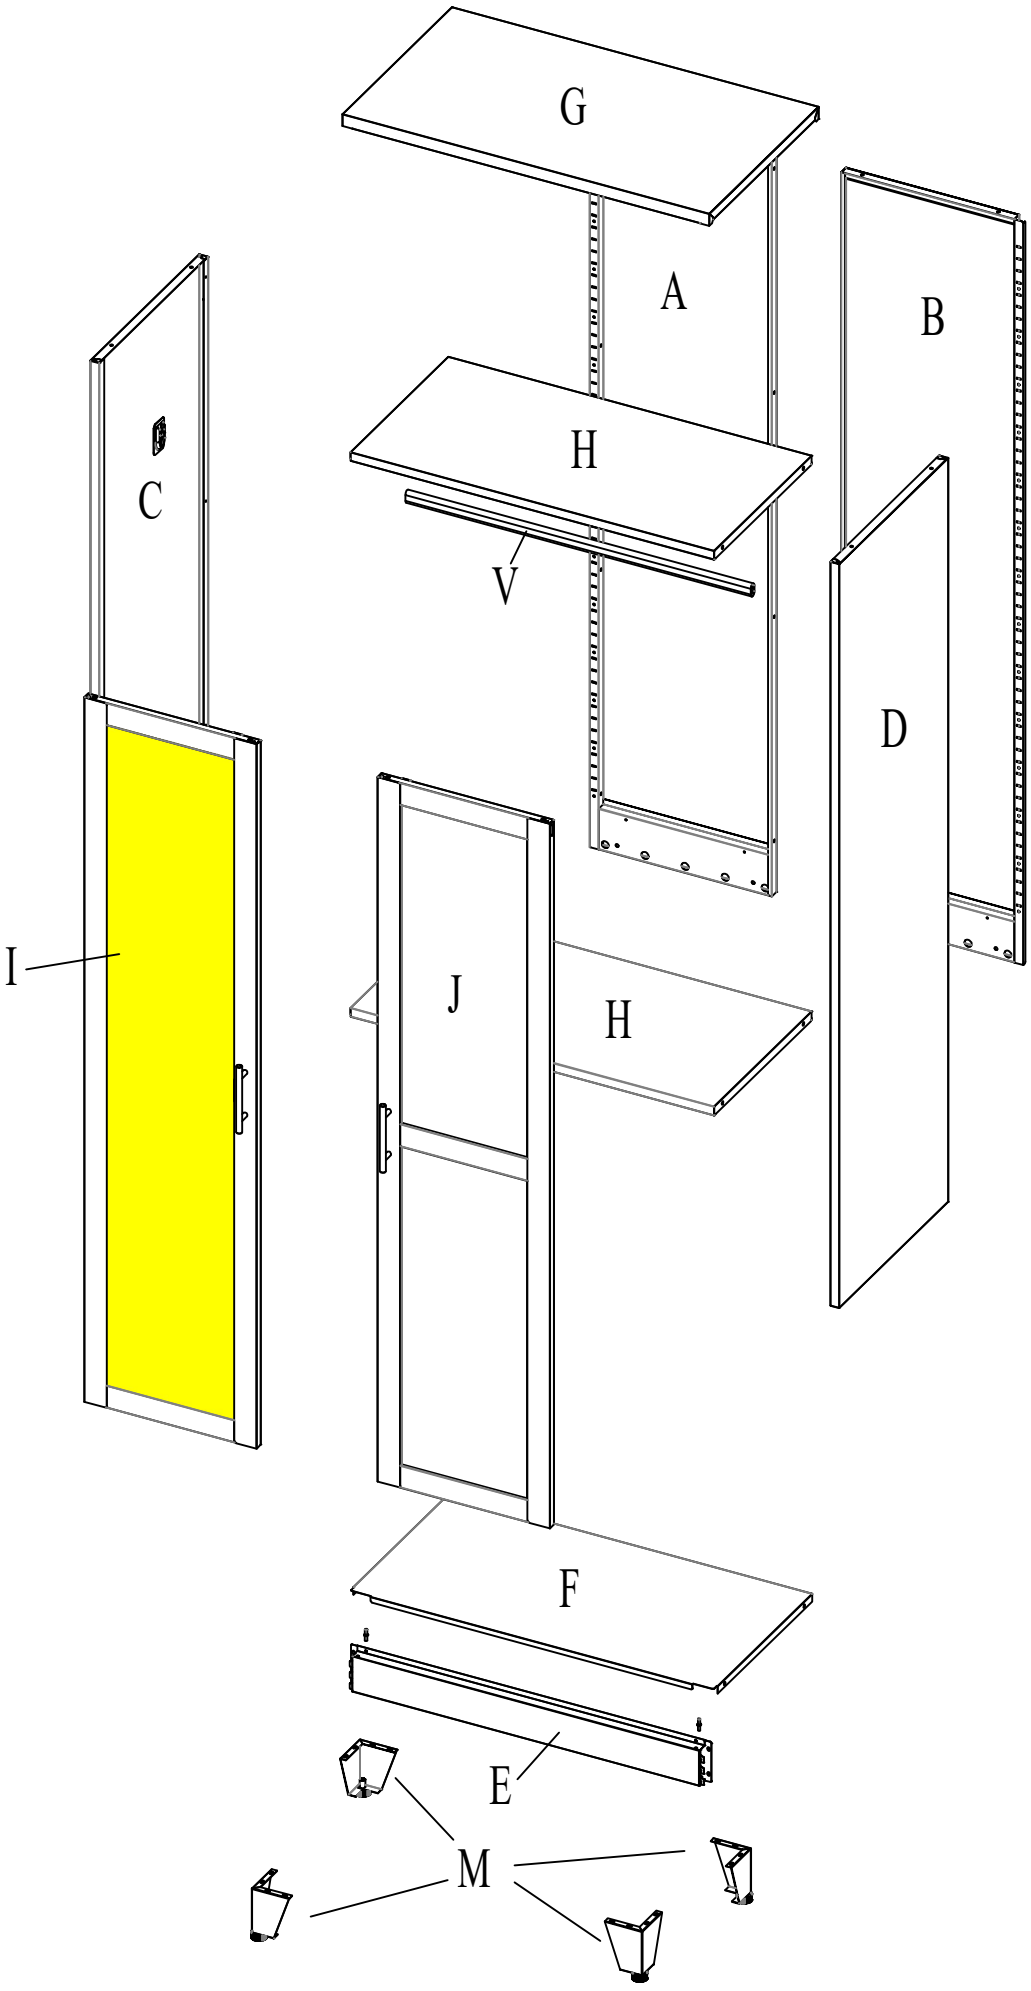


Important!









Thank you for your purchase. Please open it carefully.

If you encounter any problems, please contact us.


Service tenet - to enable customers to enjoy high-quality service.


G
A
B
C
H
V
D
I
J
H
F
E
M

# PARTS LIST LISTEDESPIECES LISTADEPIEZAS

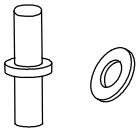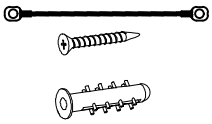
| Nom Nombre | | Part Piece Pieza | Qty Qte | Spare | Name Nom Nombre | | Part Piece Pieza | Qty Qte | Spare |
|---|---|---|---|---|---|---|---|---|---|
| A | Left Back Panel |  | 1 | | M | Standing leg |  | 4 | |
| B | Right Back Panel |  | 1 | | N | Adjustable foot |  | 4 | |
| C | Left Side |  | 1 | | O | Shelf Support |  | 8 | 2 |
| D | Right Side |  | 1 | | P | Laminate fastening buckle |  | 8 | 2 |
| E | Kick Plate |  | 1 | | Q | Door Pivot Pin Shim\ |  | 2 | 2 |
| F | Bottom Panel |  | 1 | | R | Haft |  | 2 | |
| G | Top Panel |  | 1 | | S | magnet |  | 4 | |
| H | Shelves |  | 2 | | T | Set screw |  | 1 | |
| I | Left Door |  | 1 | | V | Clothes rail |  | 1 | |
| J | Right Door |  | 1 | | | | | | |
| K | 13/32"Screw |  | 4 | | | | | | |
| L | 13/32"Screw |  | 41 | 2 | | | | | |

1

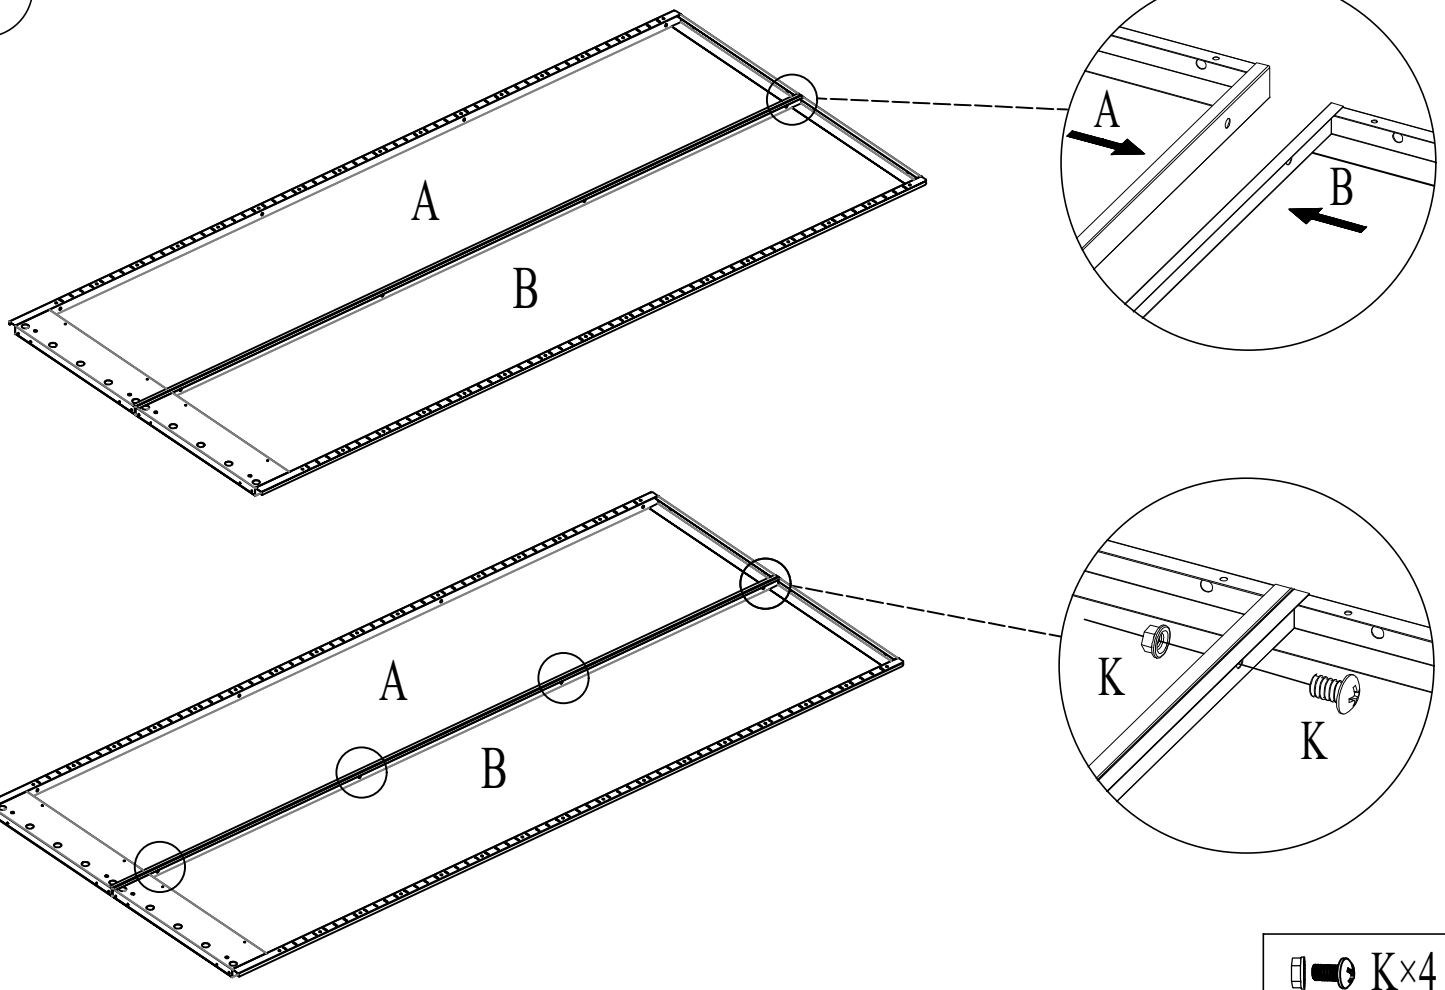



K×4


2

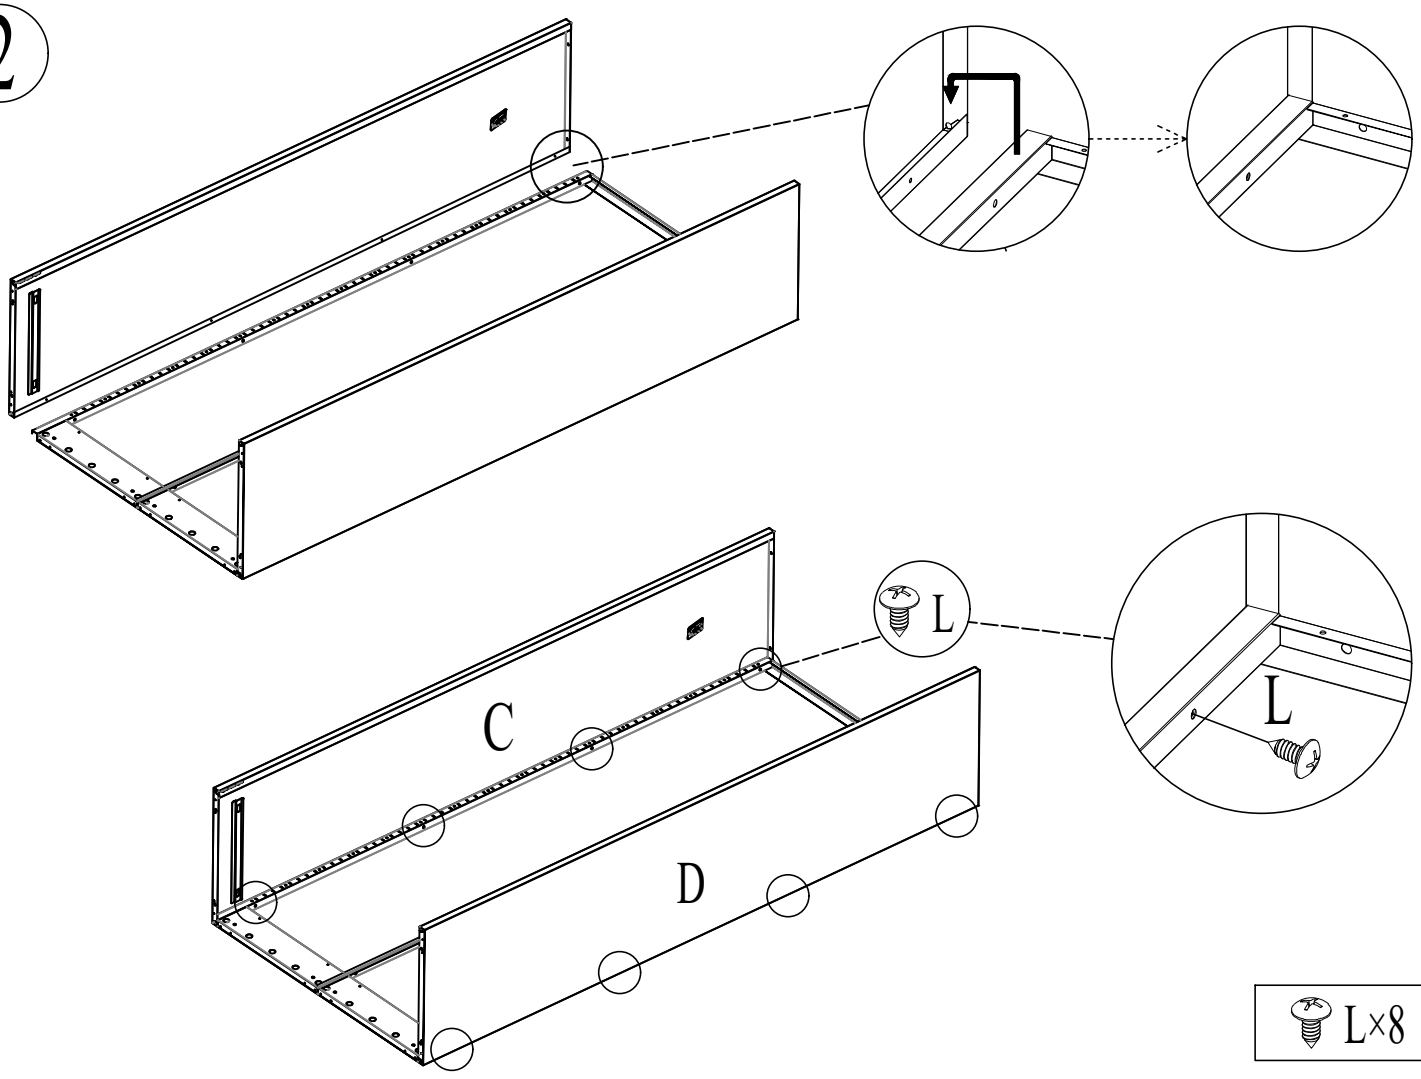


L×8


3

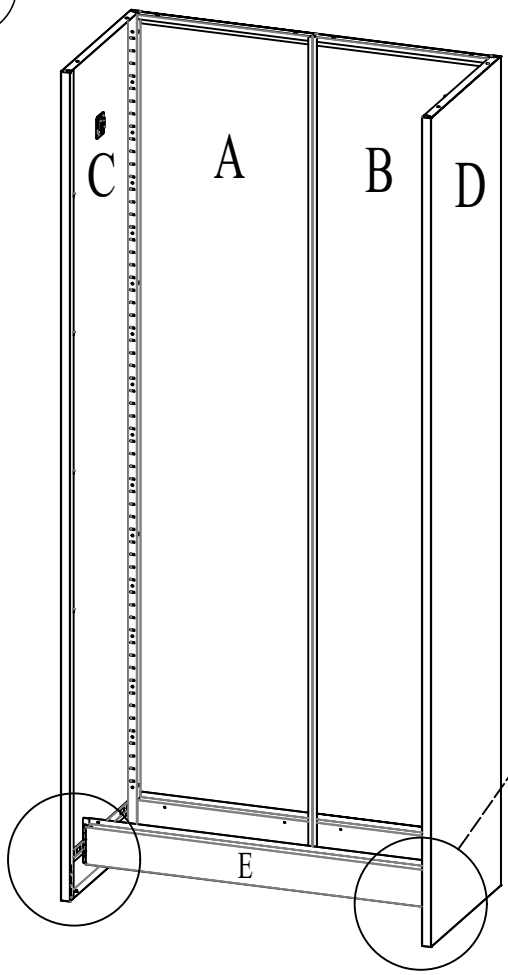


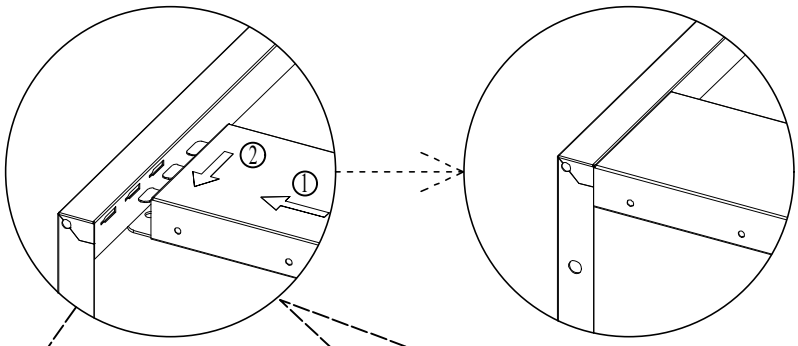
Snap the three buckles on either side of Part E into the three holes in both side panels and then push it down so that it snaps into the bottom of the cabinet.


4




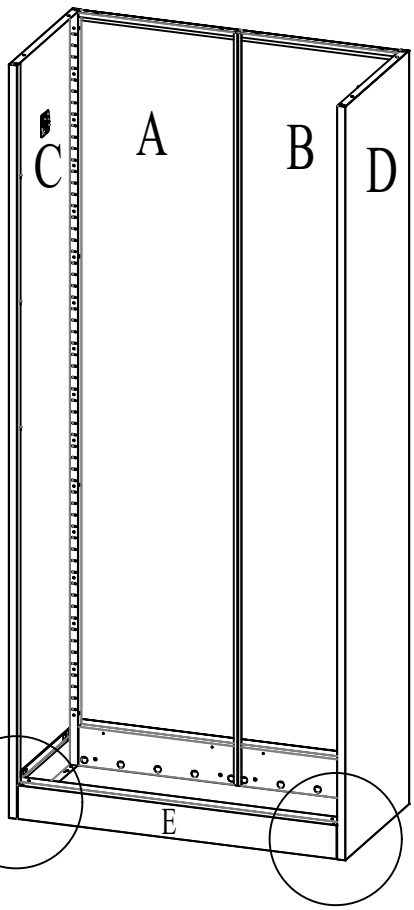


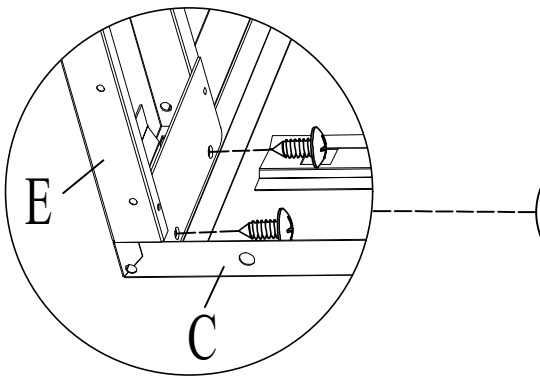

L×4

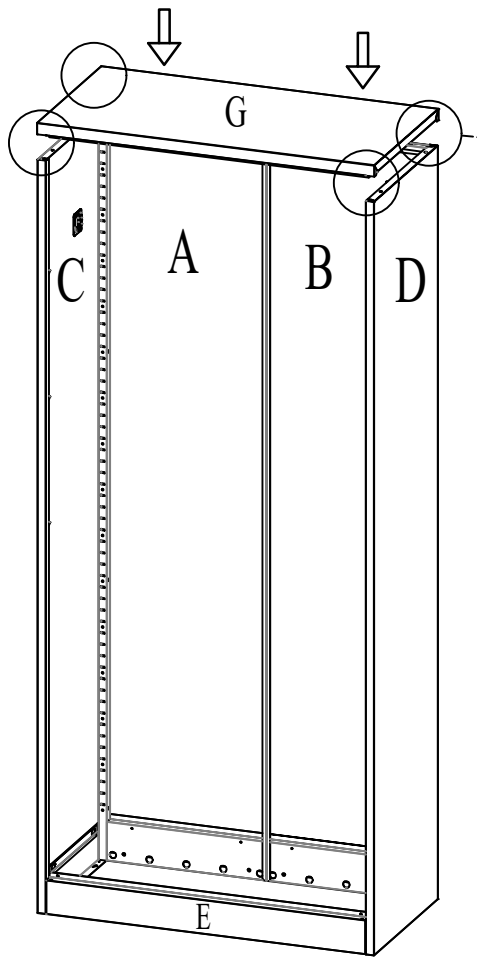5

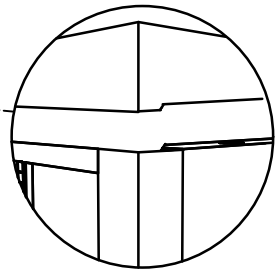


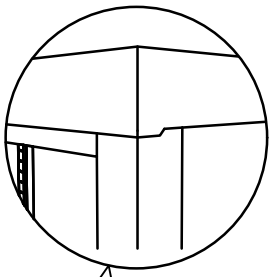





The four corners of the top need to include the four corners of the side panels


6

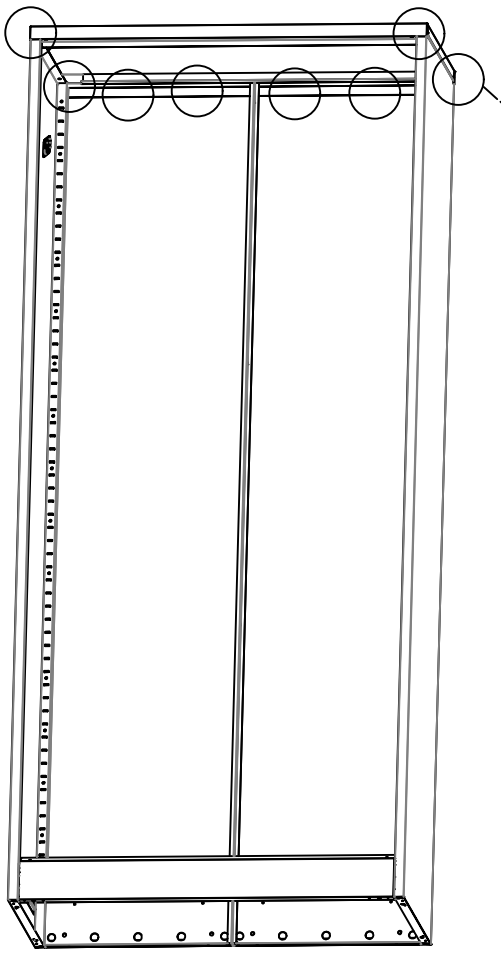

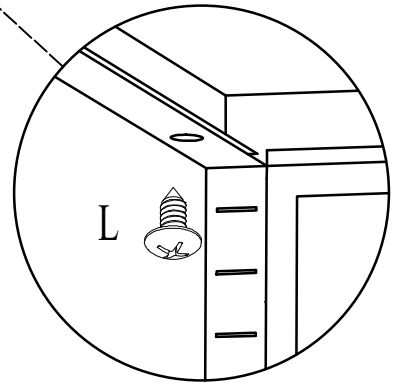



L×8

7

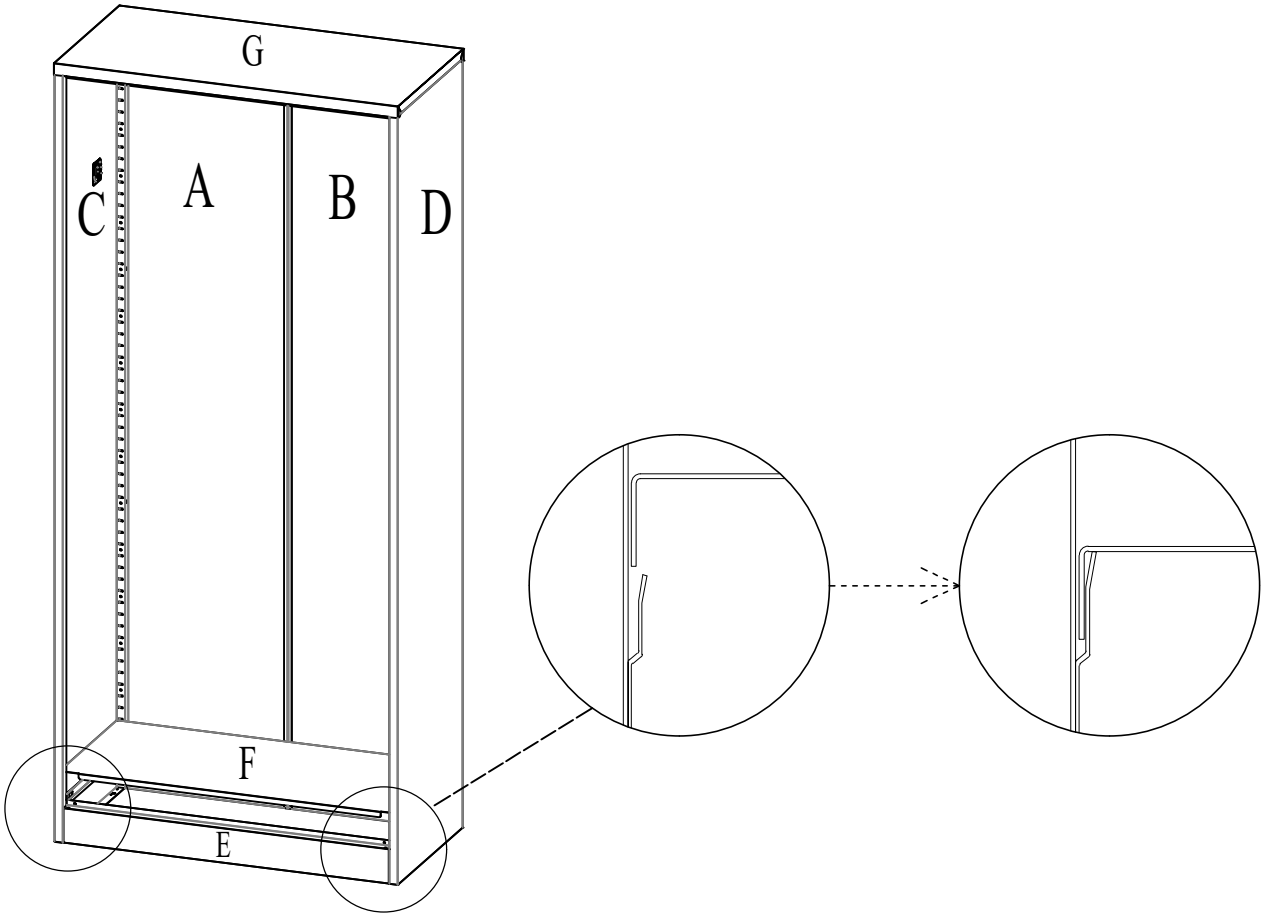



8

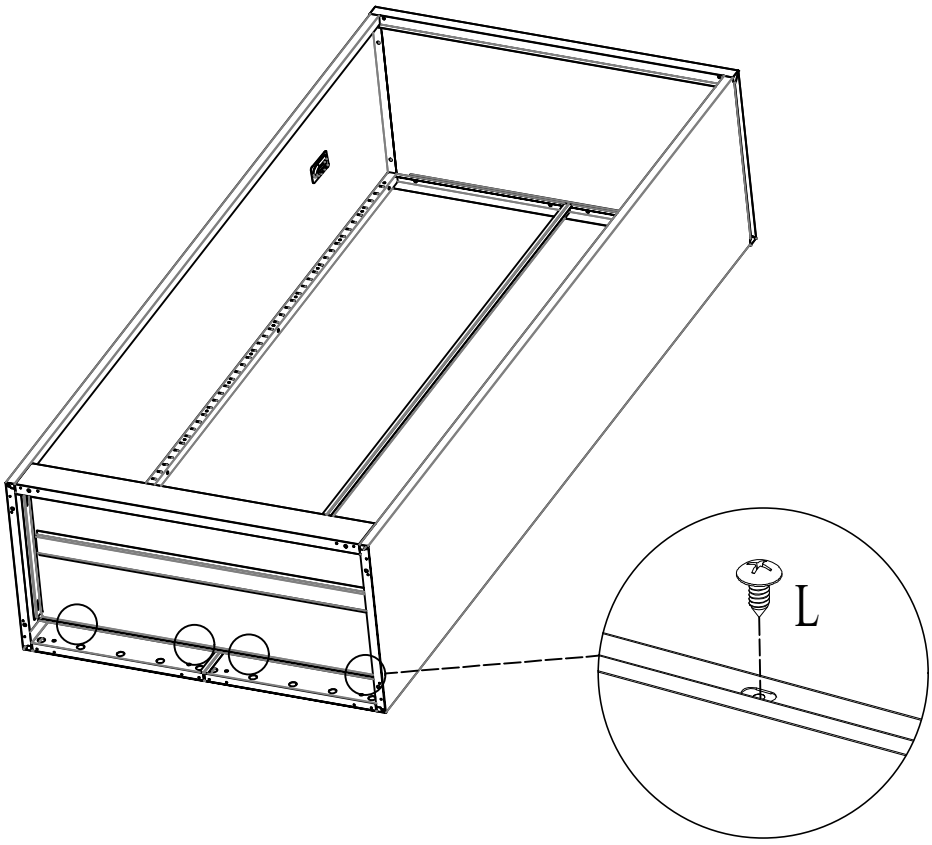




L×4


9

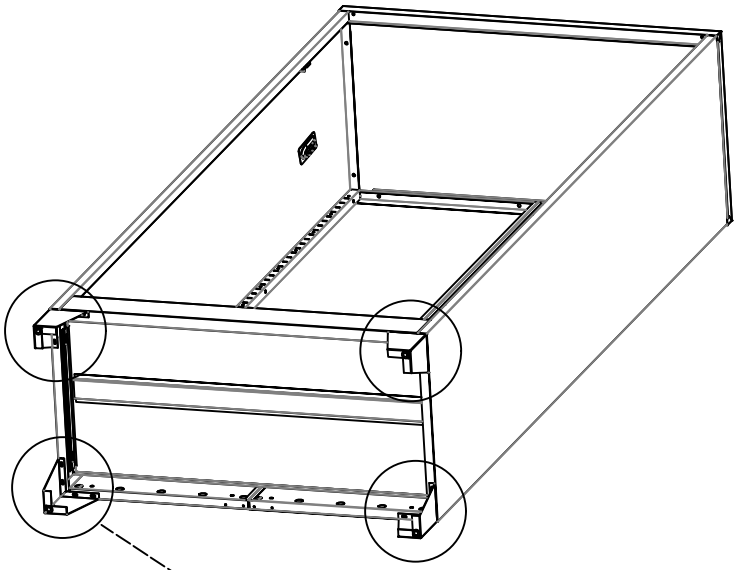

M

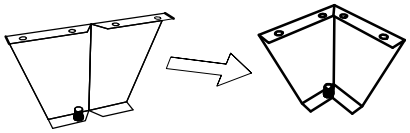

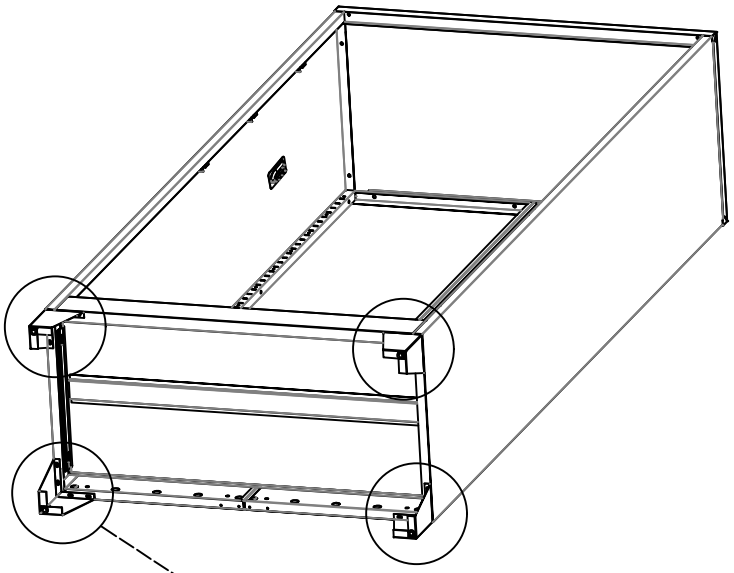

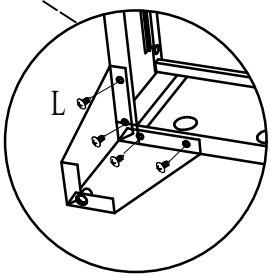



If you think it looks better without the standing corner，you can choose to skip this step (9) and the next step (10)



L×16

10

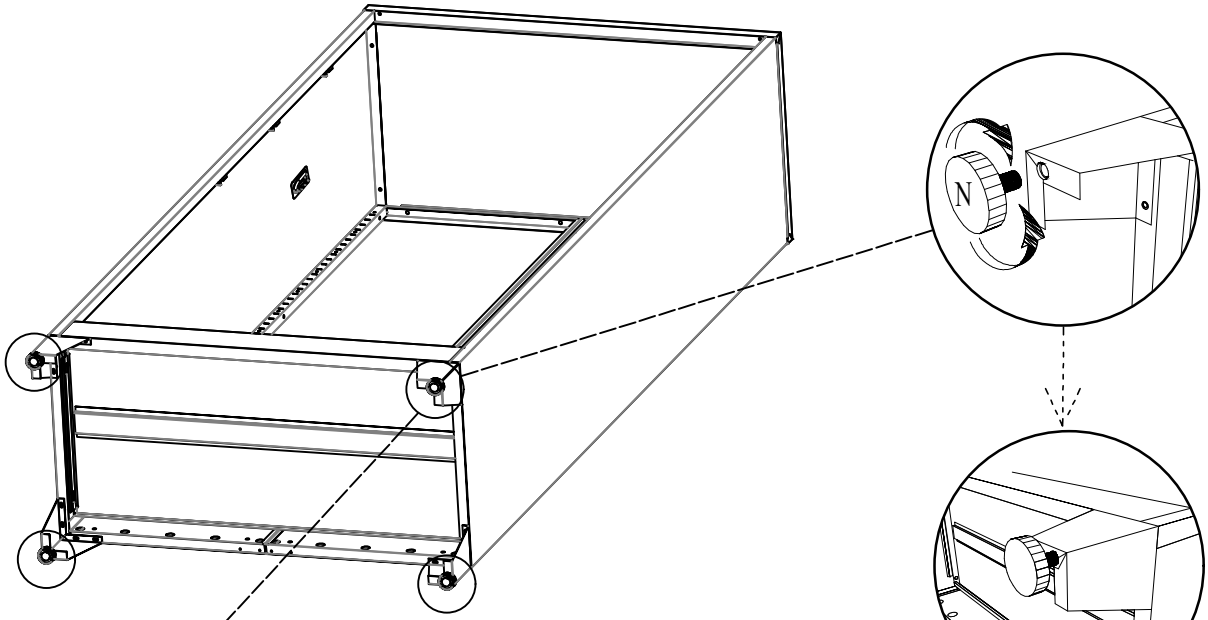



N




N×4


11


Adjust the height of the partition according to user needs

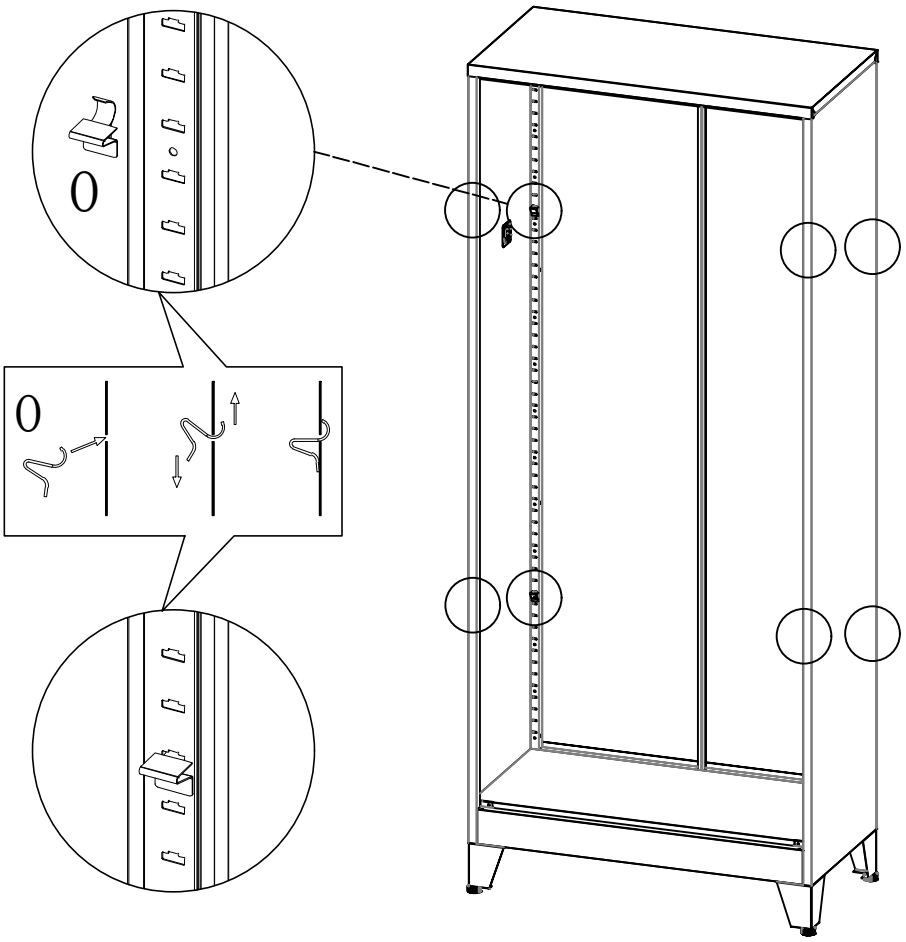




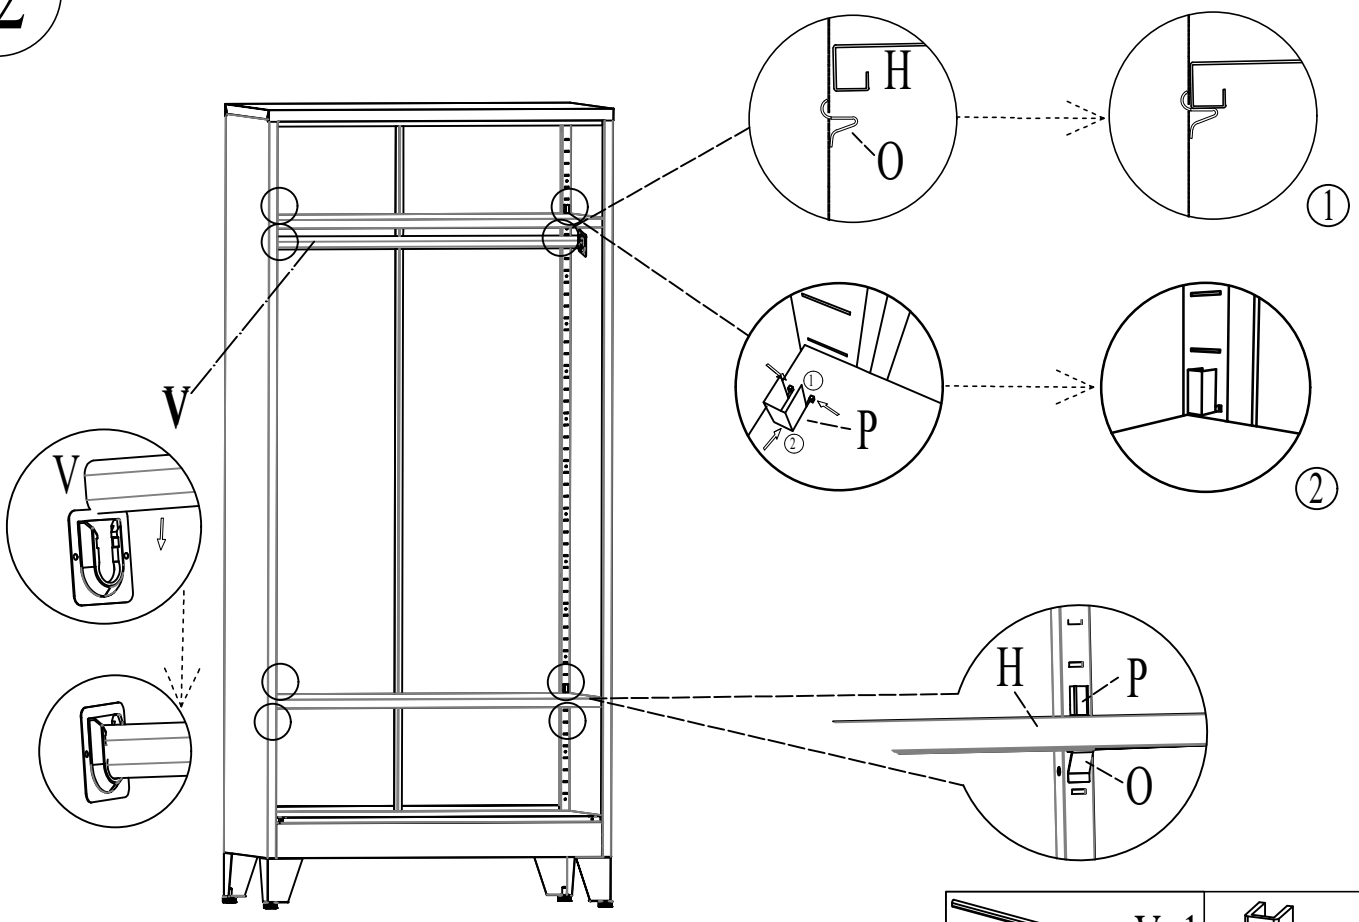

12

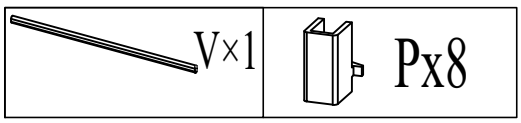


13

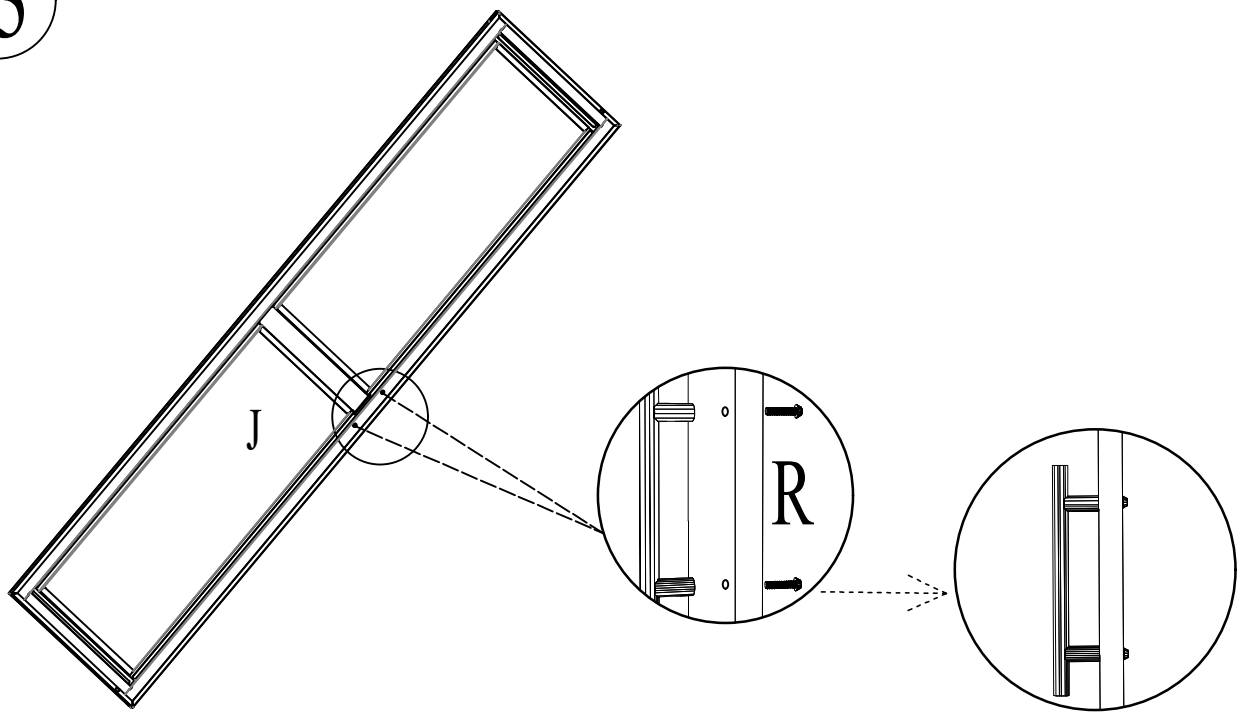



Follow this step to install other door panels R *2


R*2


14

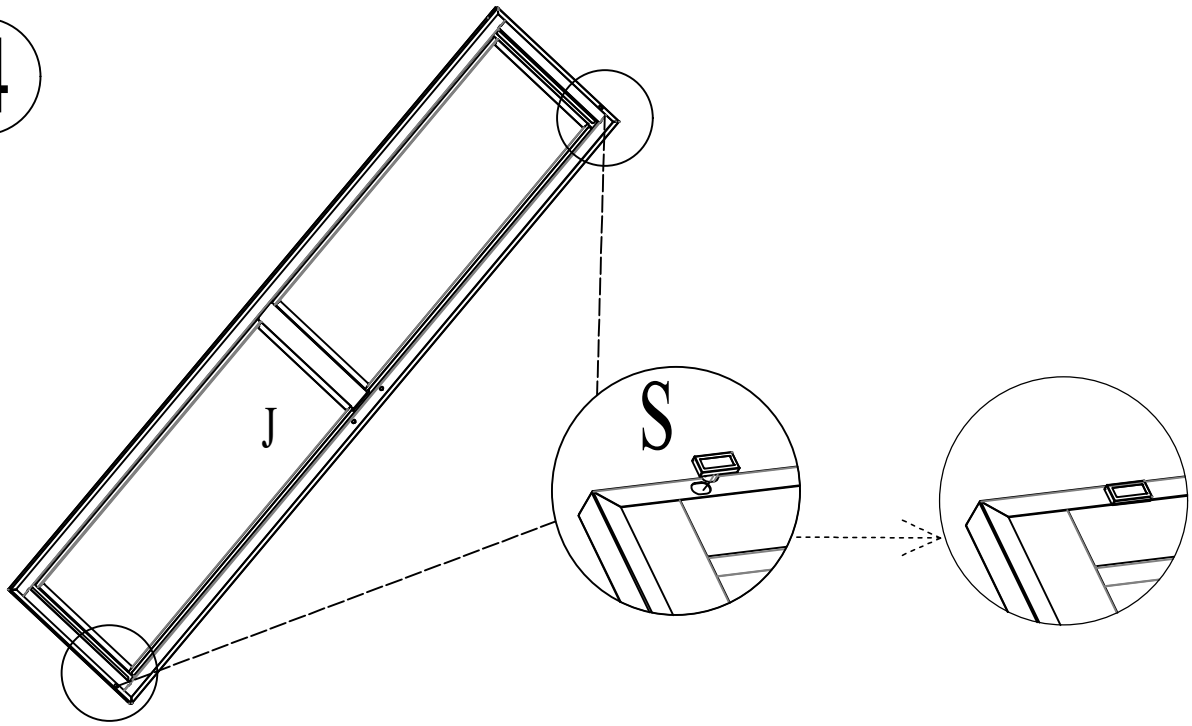


Follow this step to install other door panels S *4


S*4


15

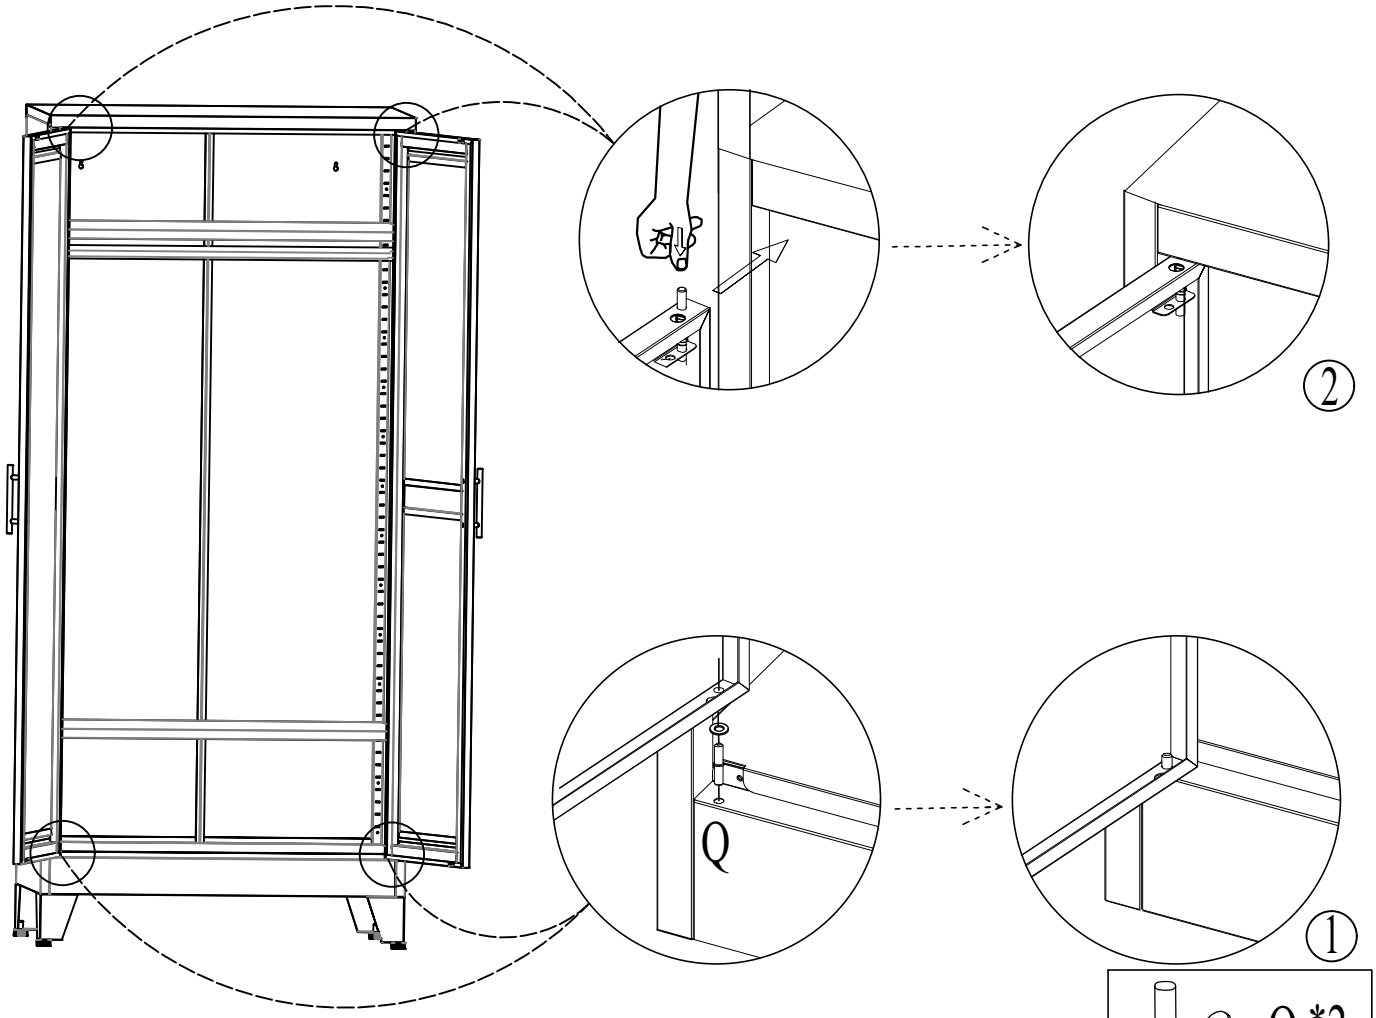


Q *2

16

The cabinet can be fixed to the wall as needed.

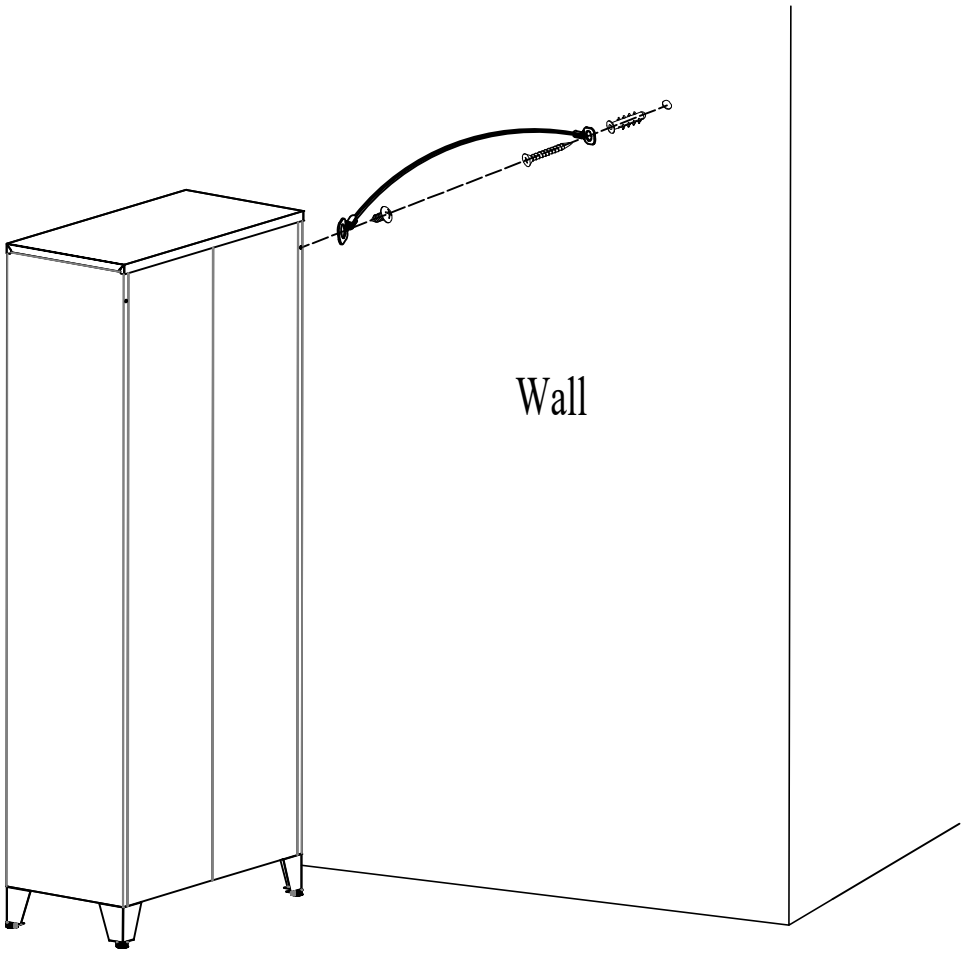



L × 1

T × 1

# Problems and Solutions

Question 1: when encountering uneven height of two door panels,
adjust the bottom adjustment foot to make it flat.

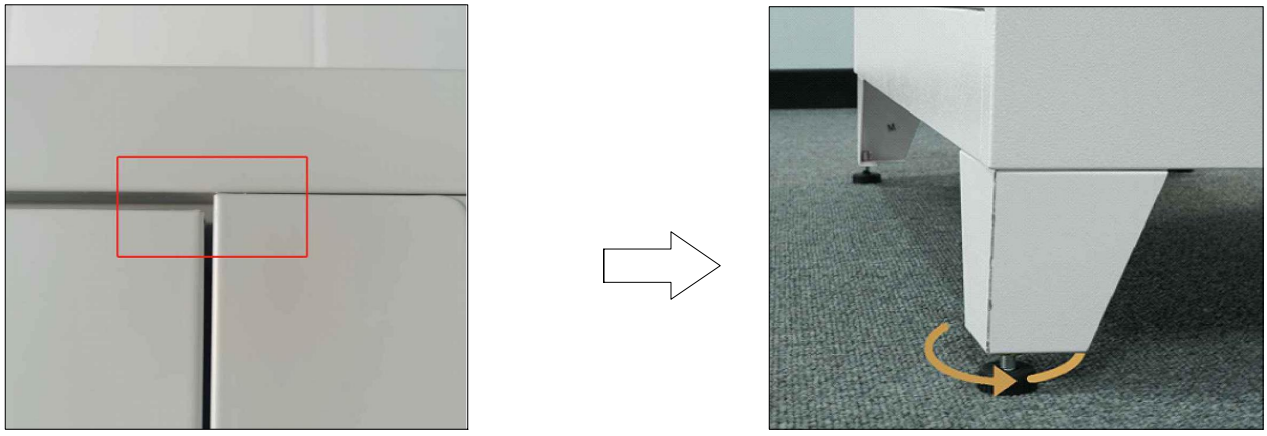

Question 2: When the door is closed, it still protrudes outward.
That's because the door is made of steel plate and has stretchability.
You can adjust it according to the method shown in the picture.

