

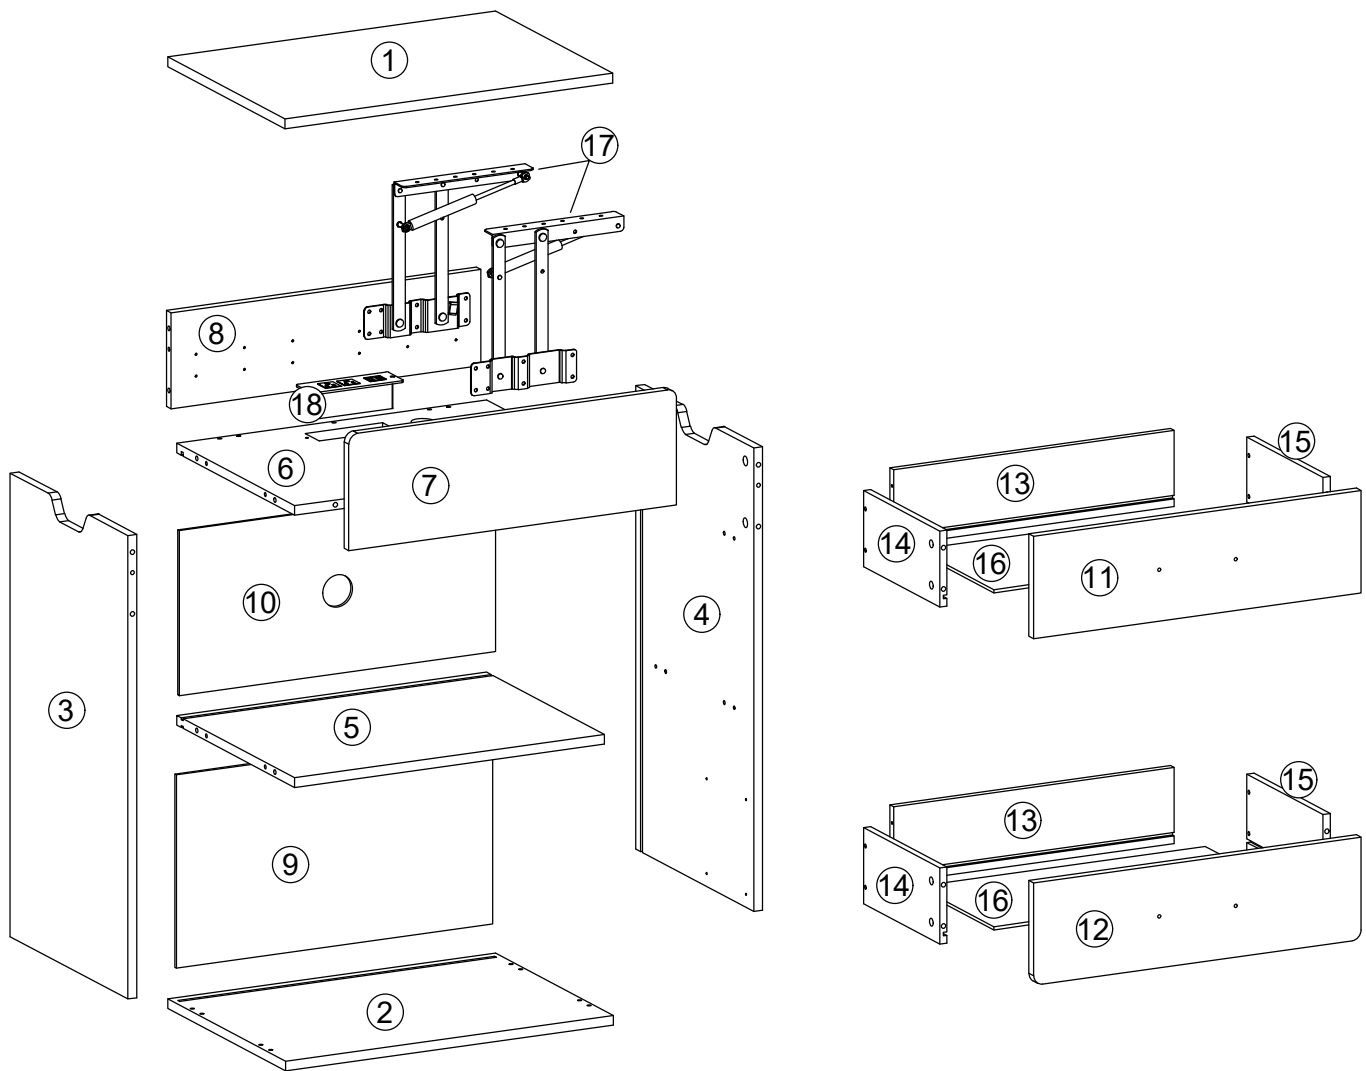
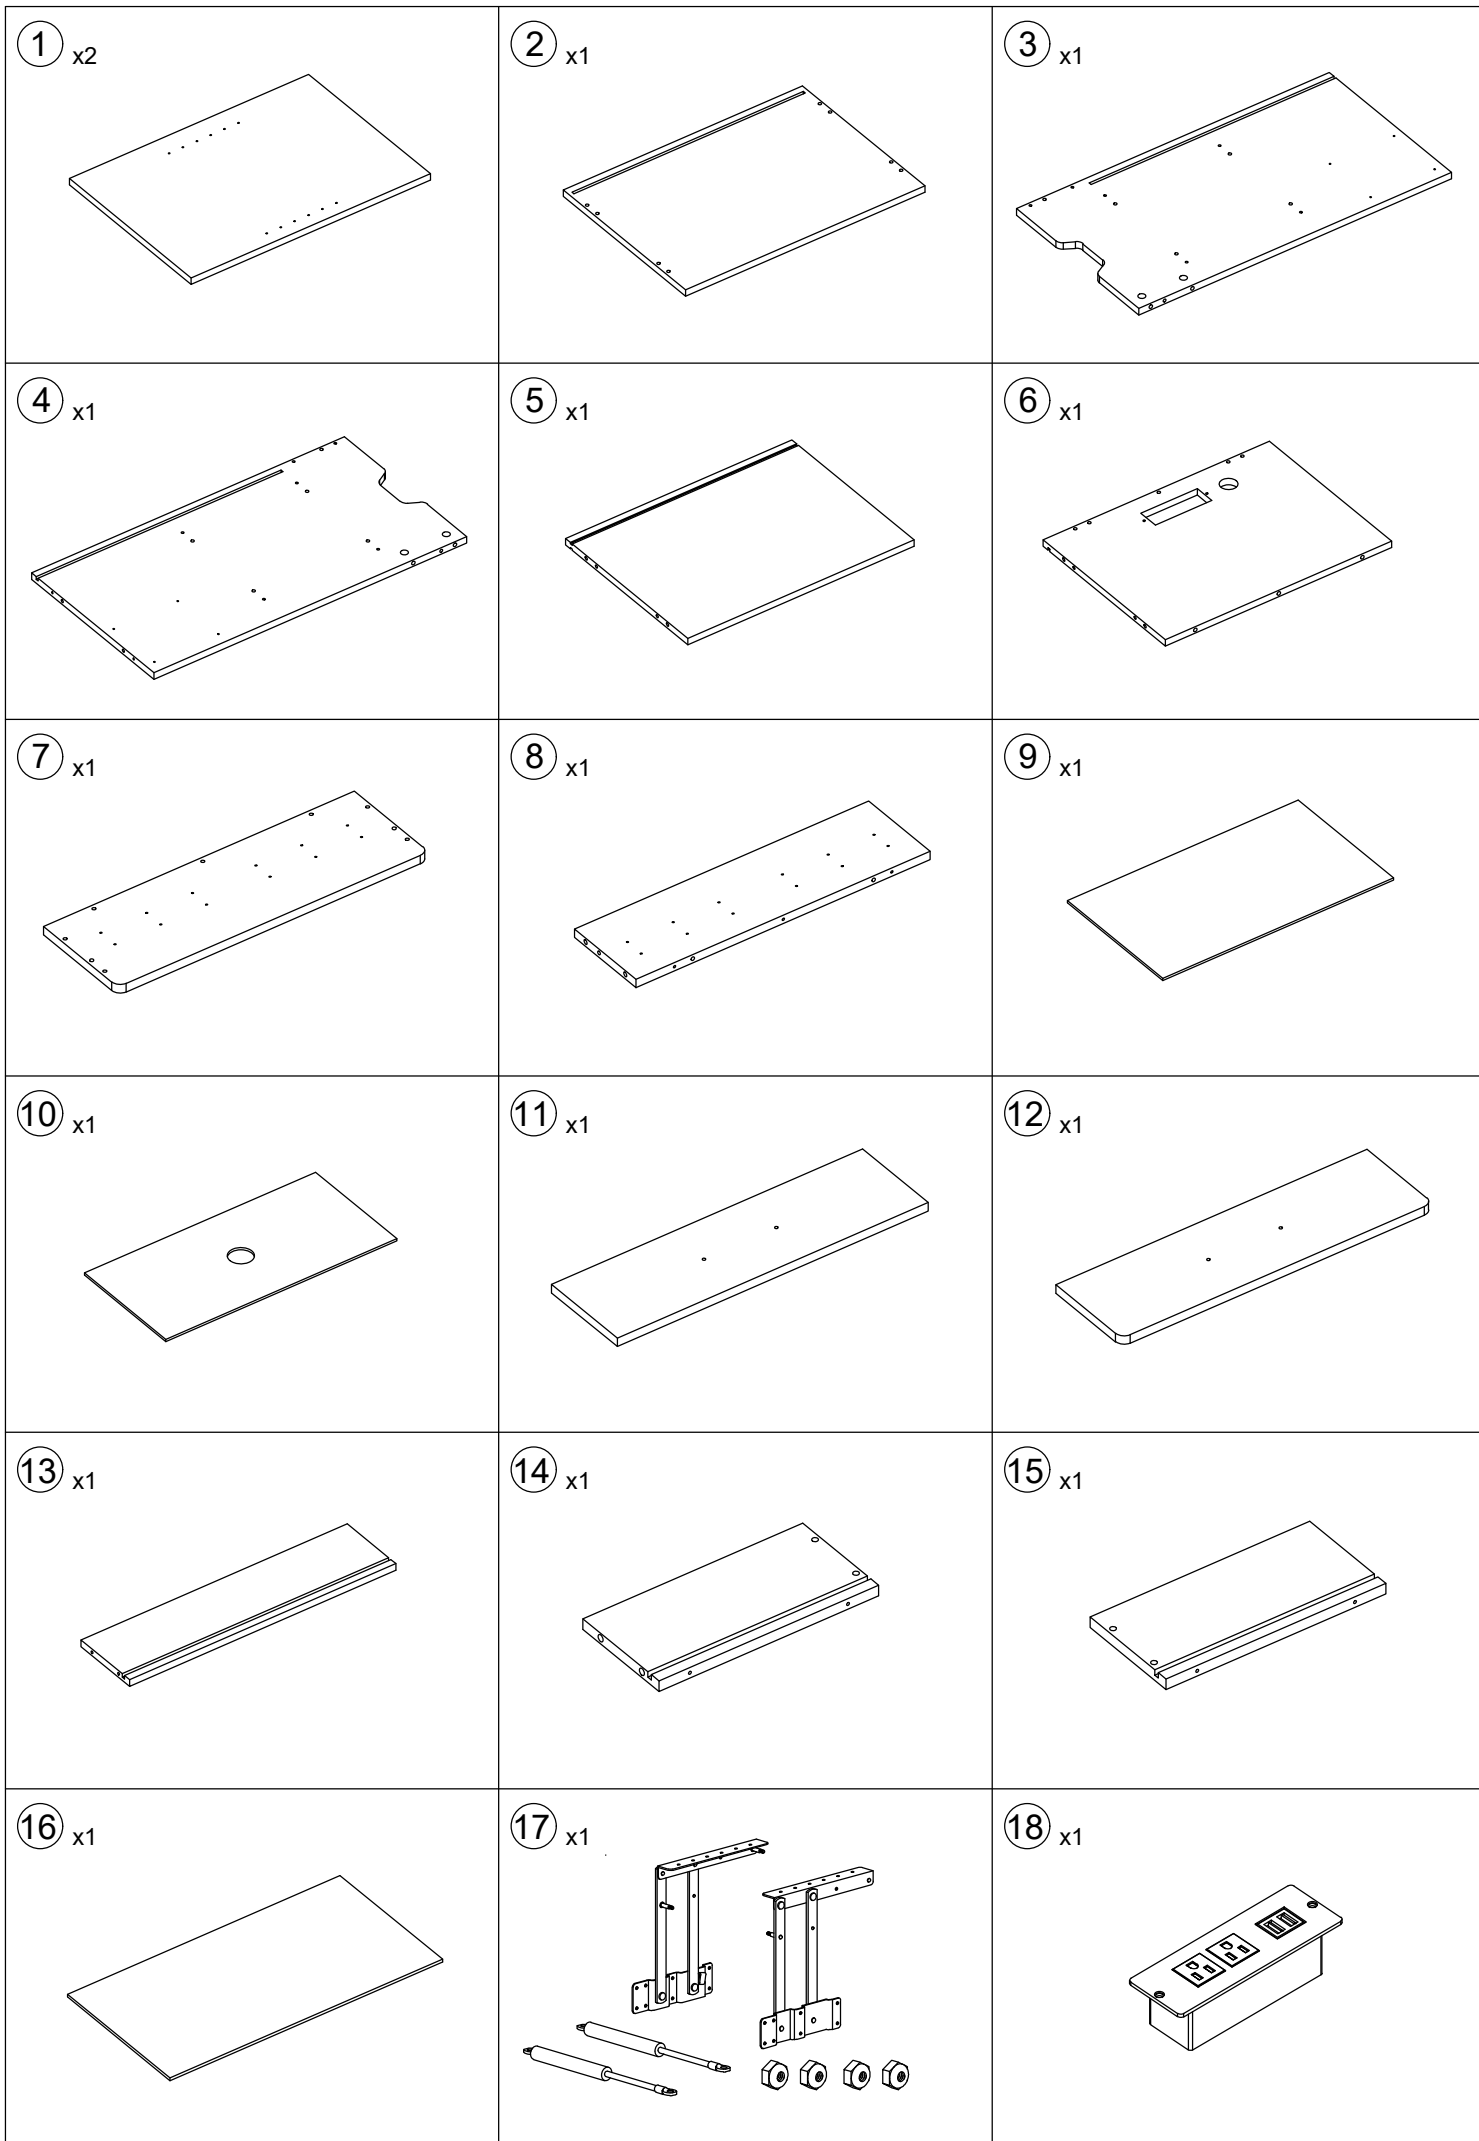


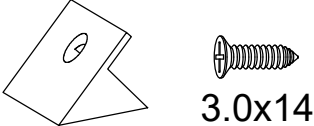

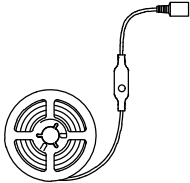
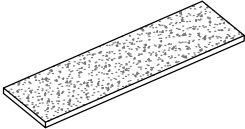
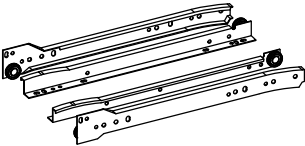


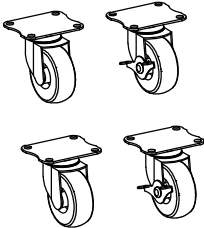


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

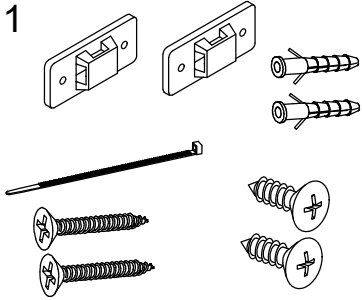


A x 15+1  Ø5x40	B x 18+1  Ø6x35	C x 27+2  Ø12 Ø6x35
D x 2  M4x10	E x 8+1  3.0x14	F x 2  M4x18
G x 1  6.4mm 3.5x12	H x 1 	I x 7+3 
J x 2  250mm	K x 16+1  3.0x12	L x 24+2  3.0x14
M x 1 	N x 16+1  3.5x12	O x 1  4*35 3.0*14

TOOL




STEP 1

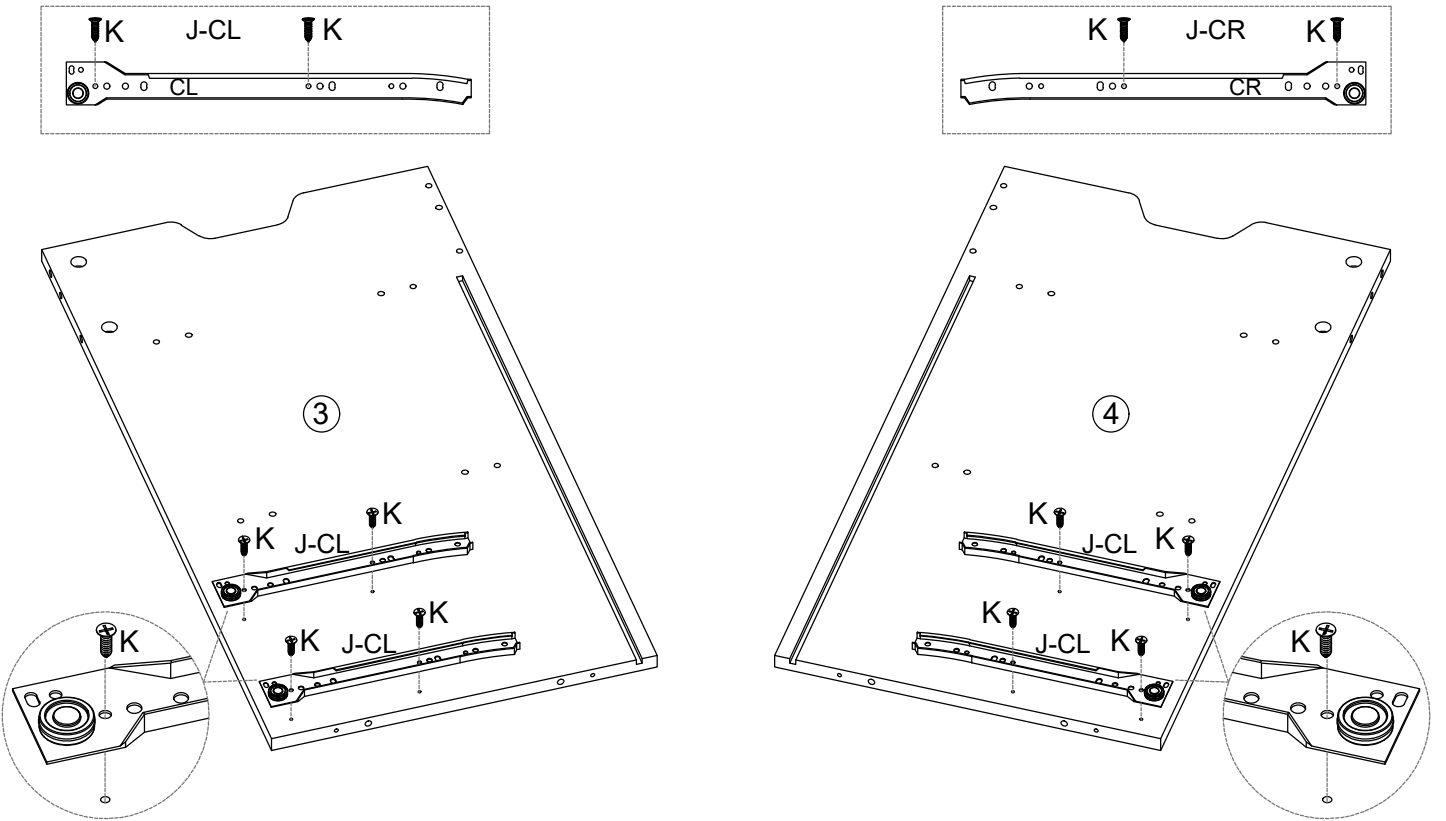



	J  x2	K  x8
---	--	--

STEP 2

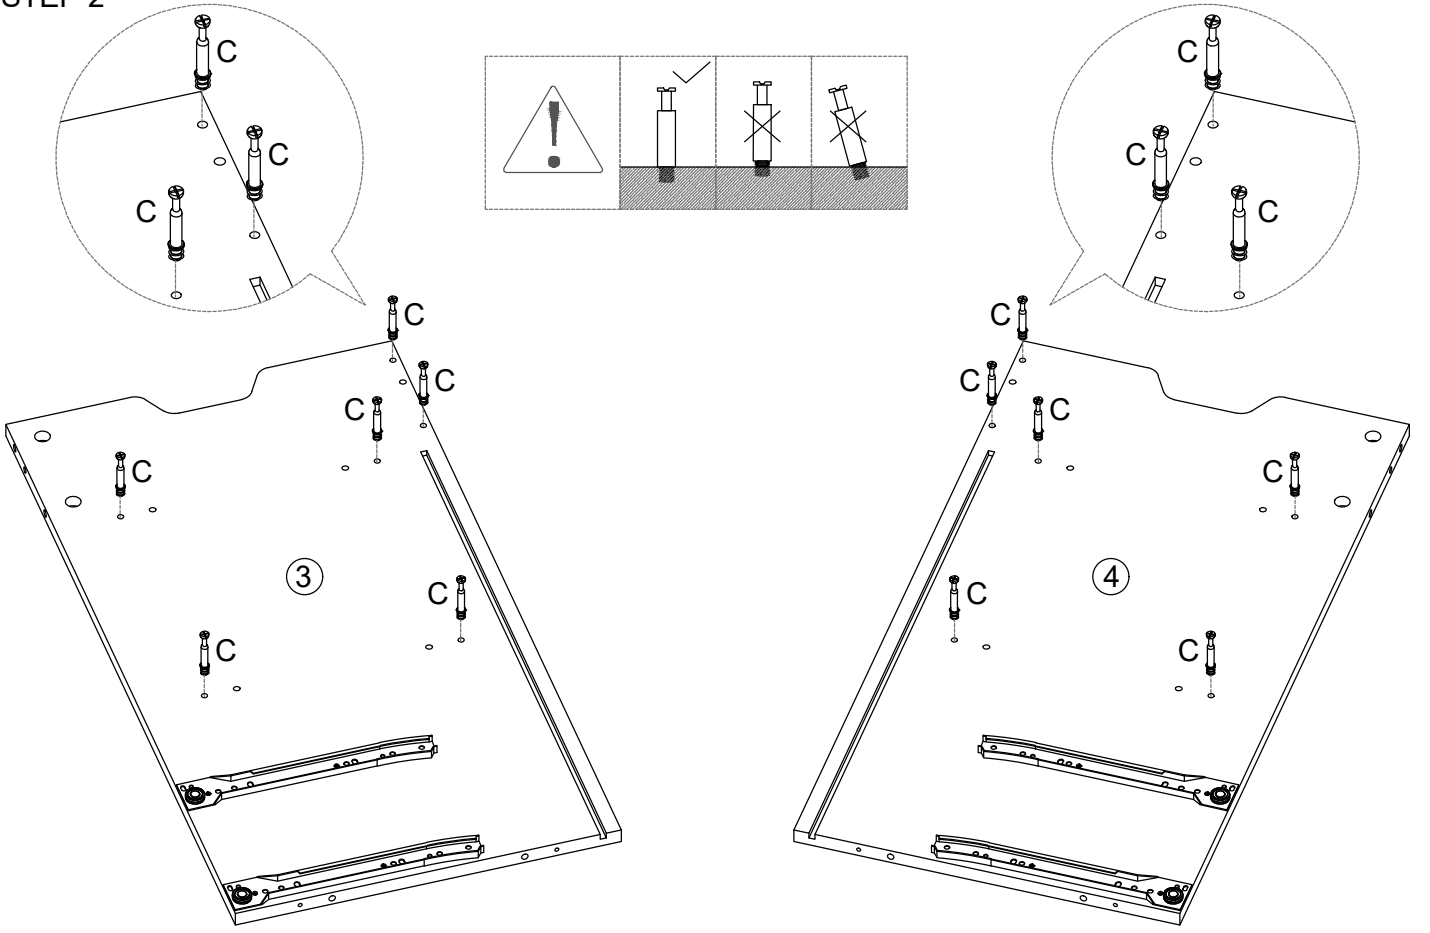

	C  x12
---	---


STEP 3

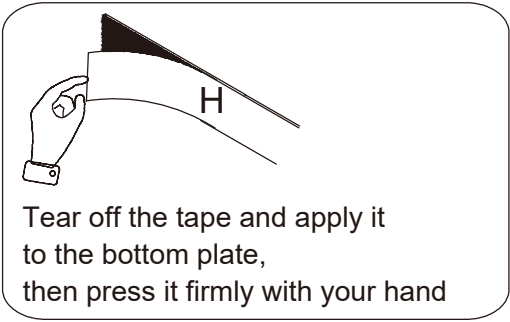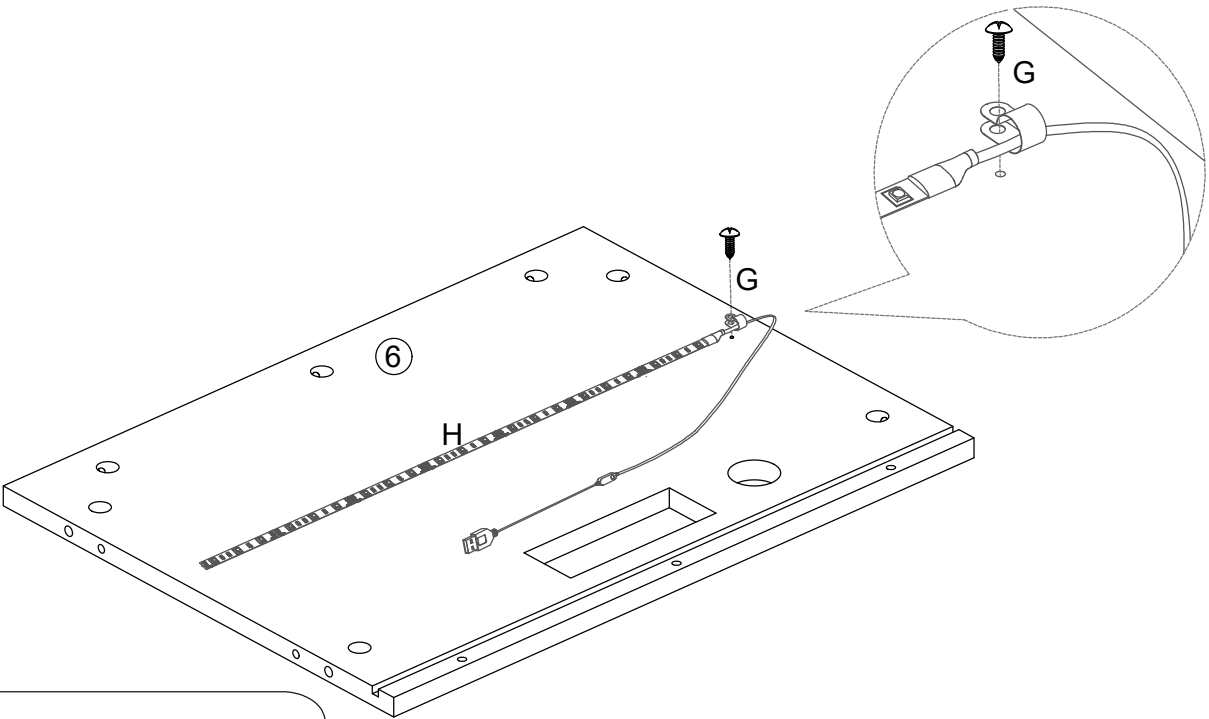

Tear off the tape and apply it to the bottom plate, then press it firmly with your hand


	G x1	H x1
--	--------------------	--------------------

STEP 4

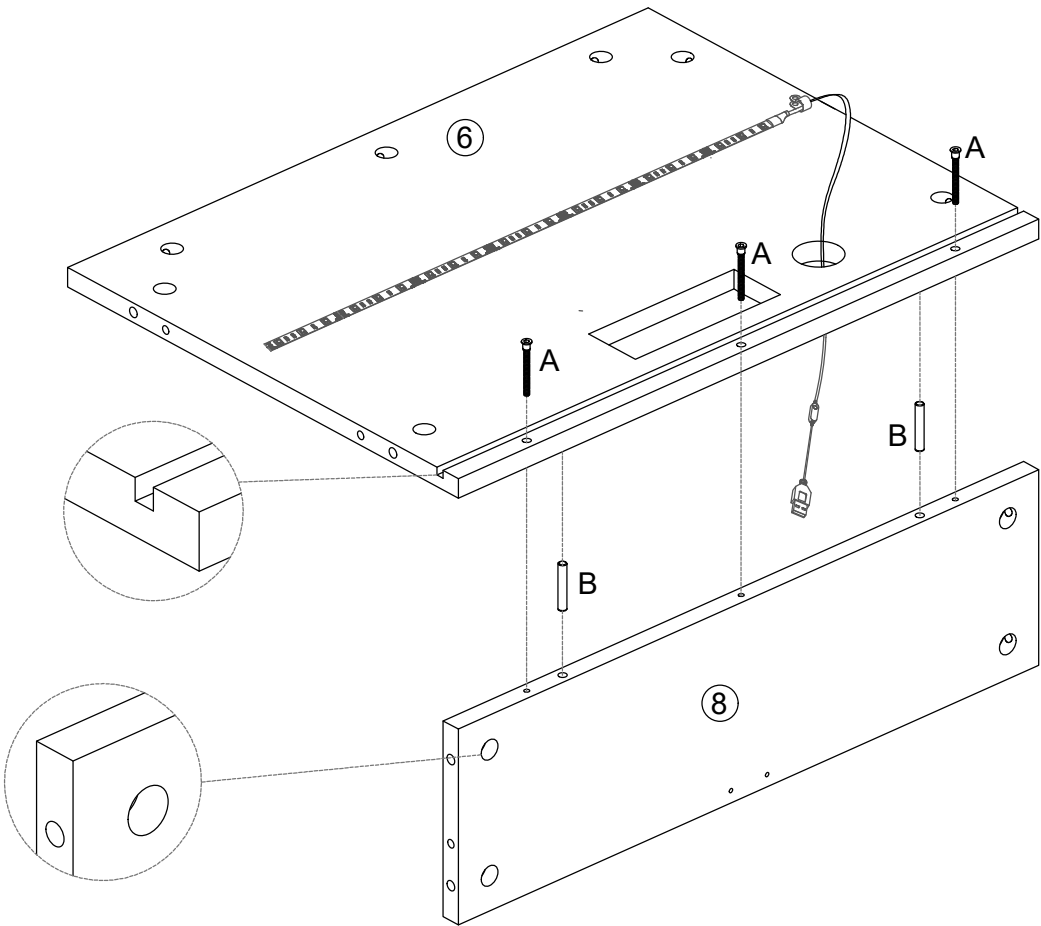


	3mm	B x2	A x3
--	------------	--------------------	--------------------


STEP 5

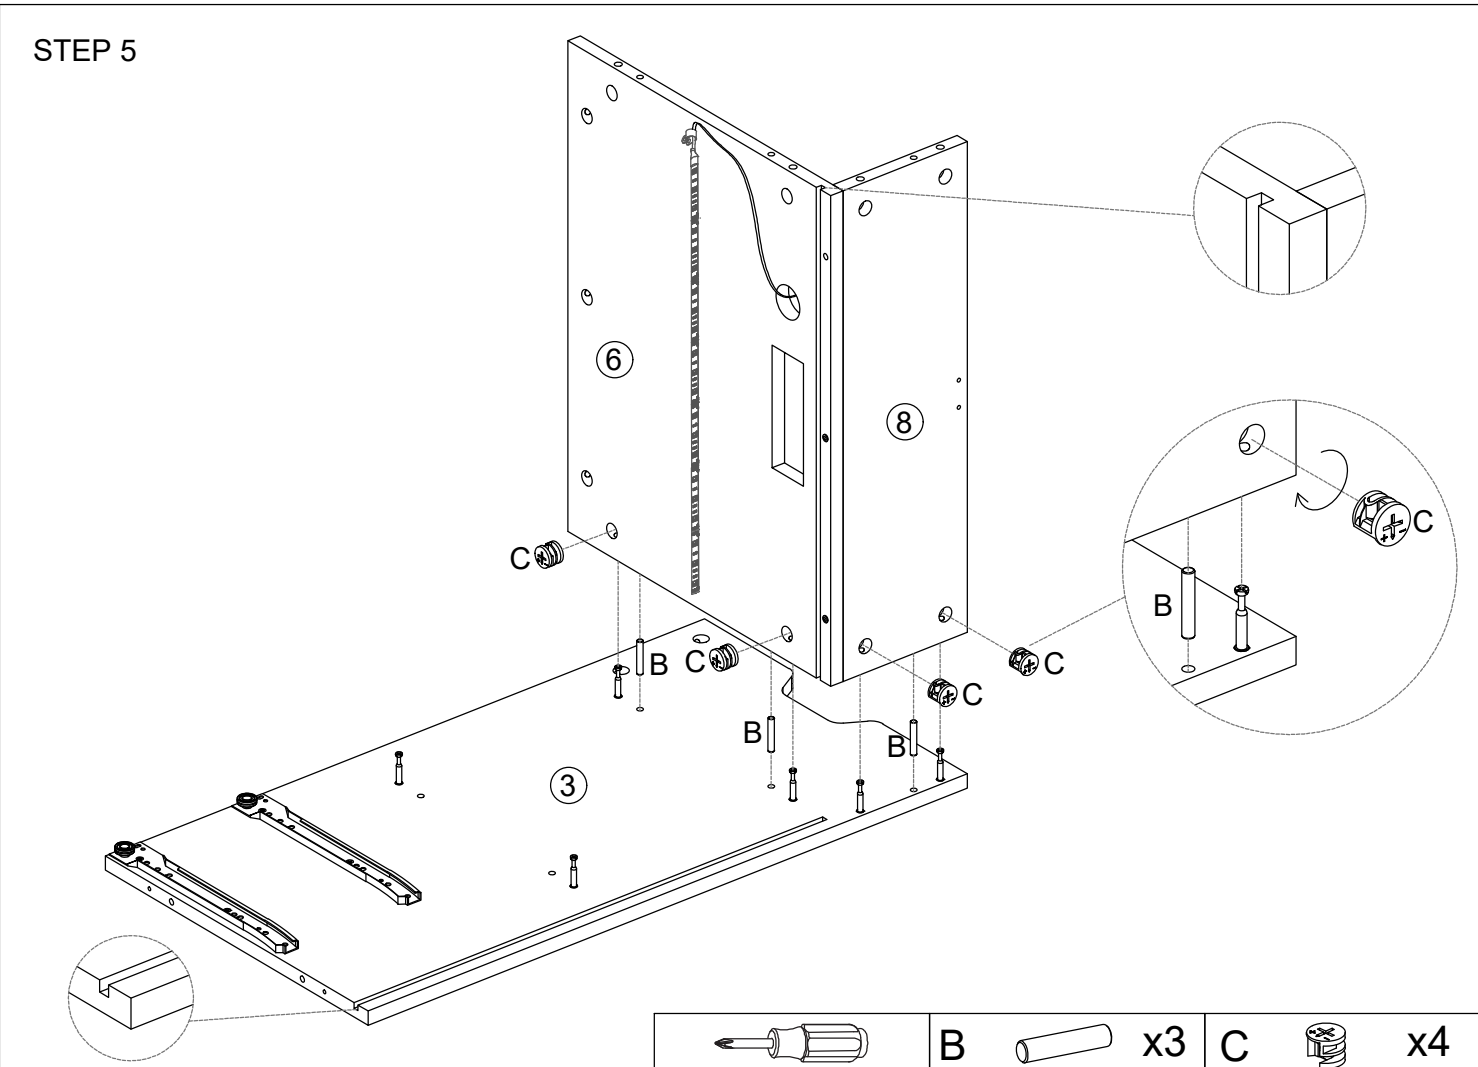

STEP 6

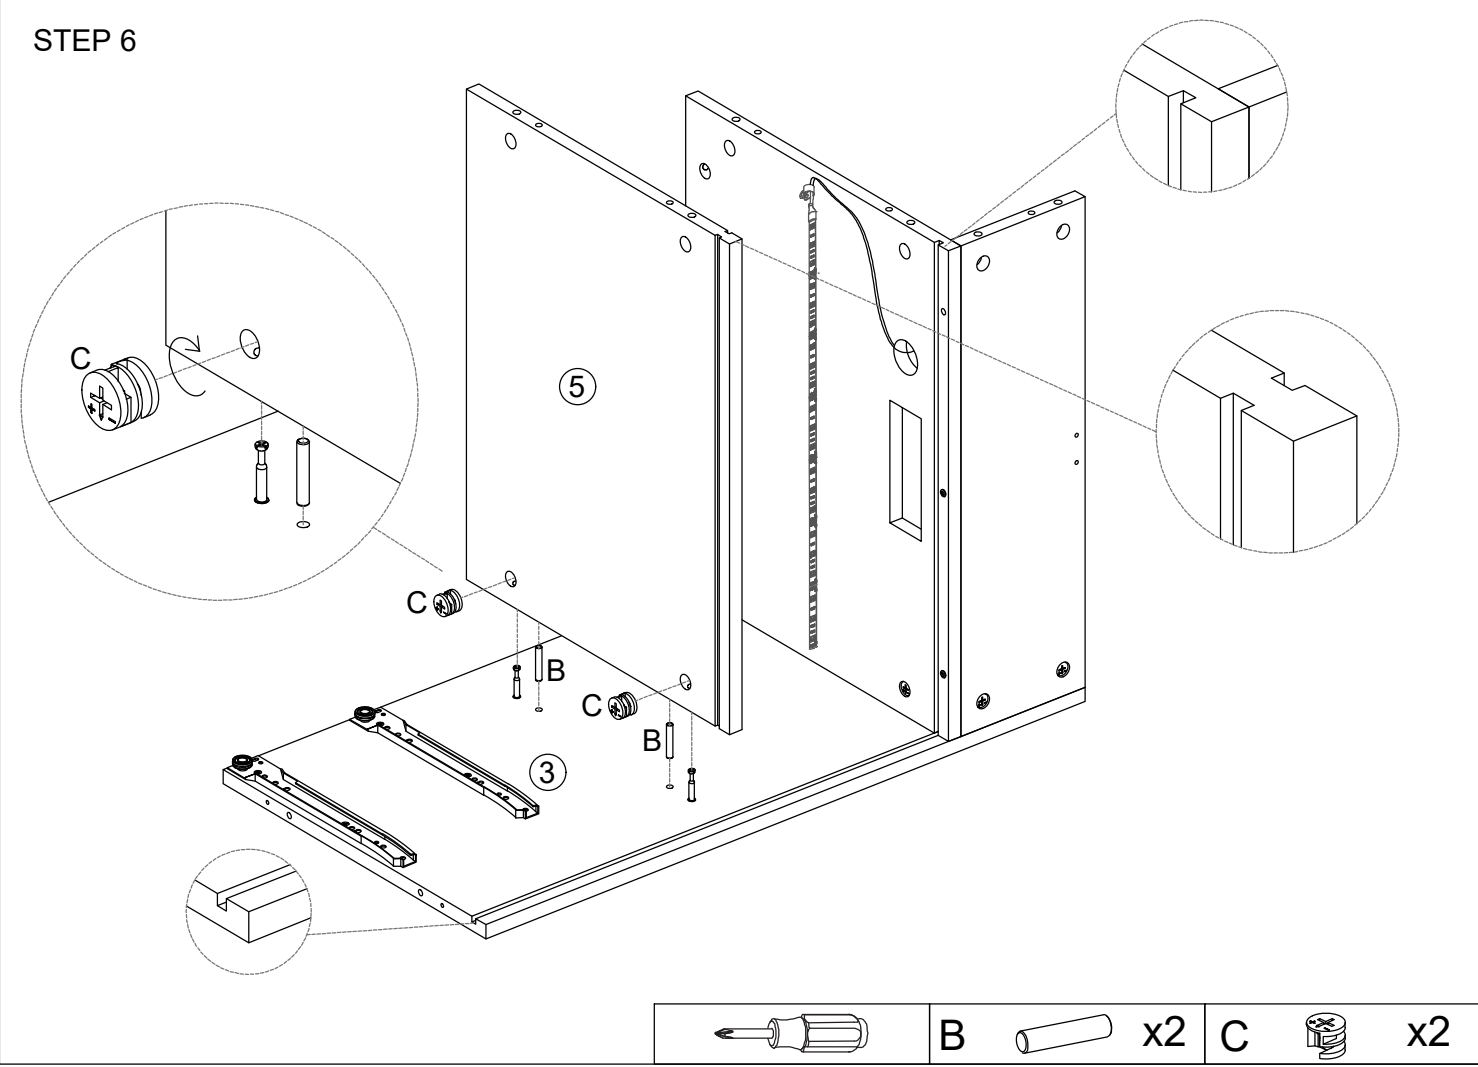


STEP 7

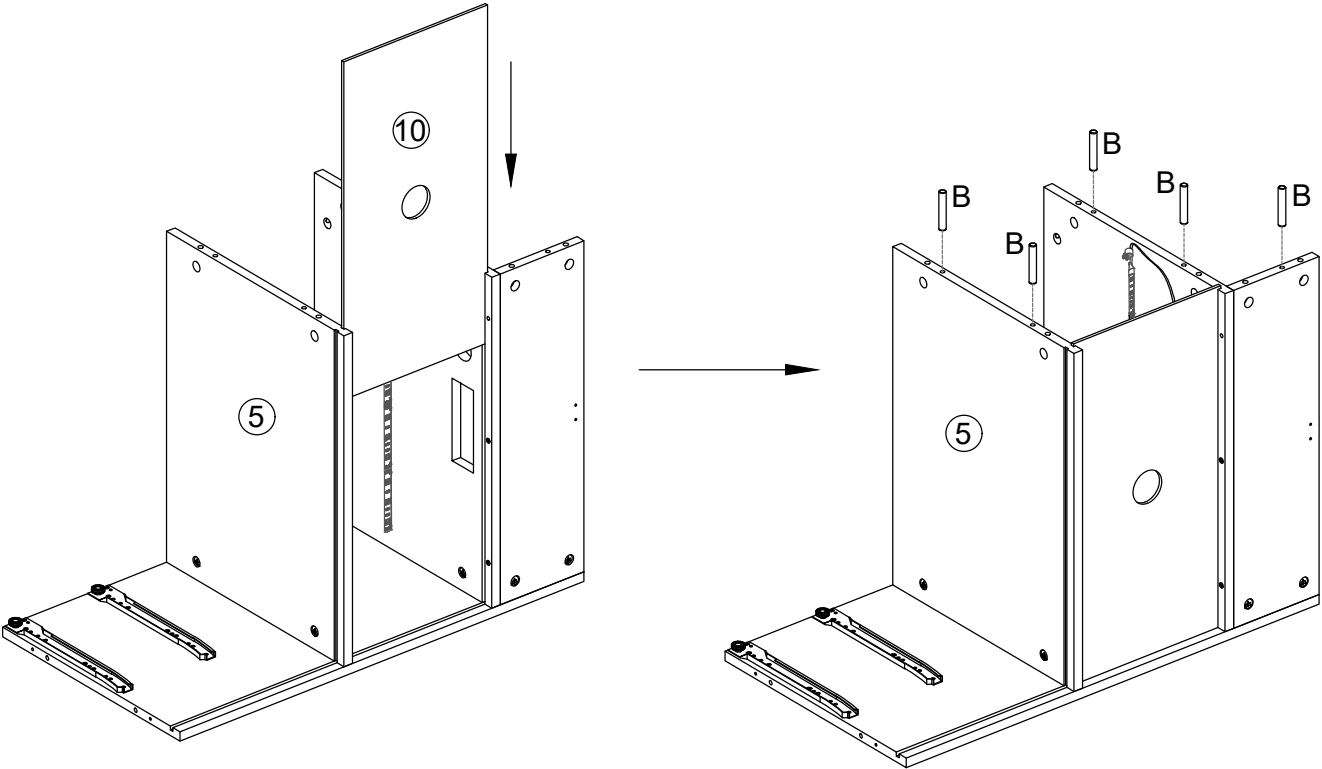


B  x5

STEP 8

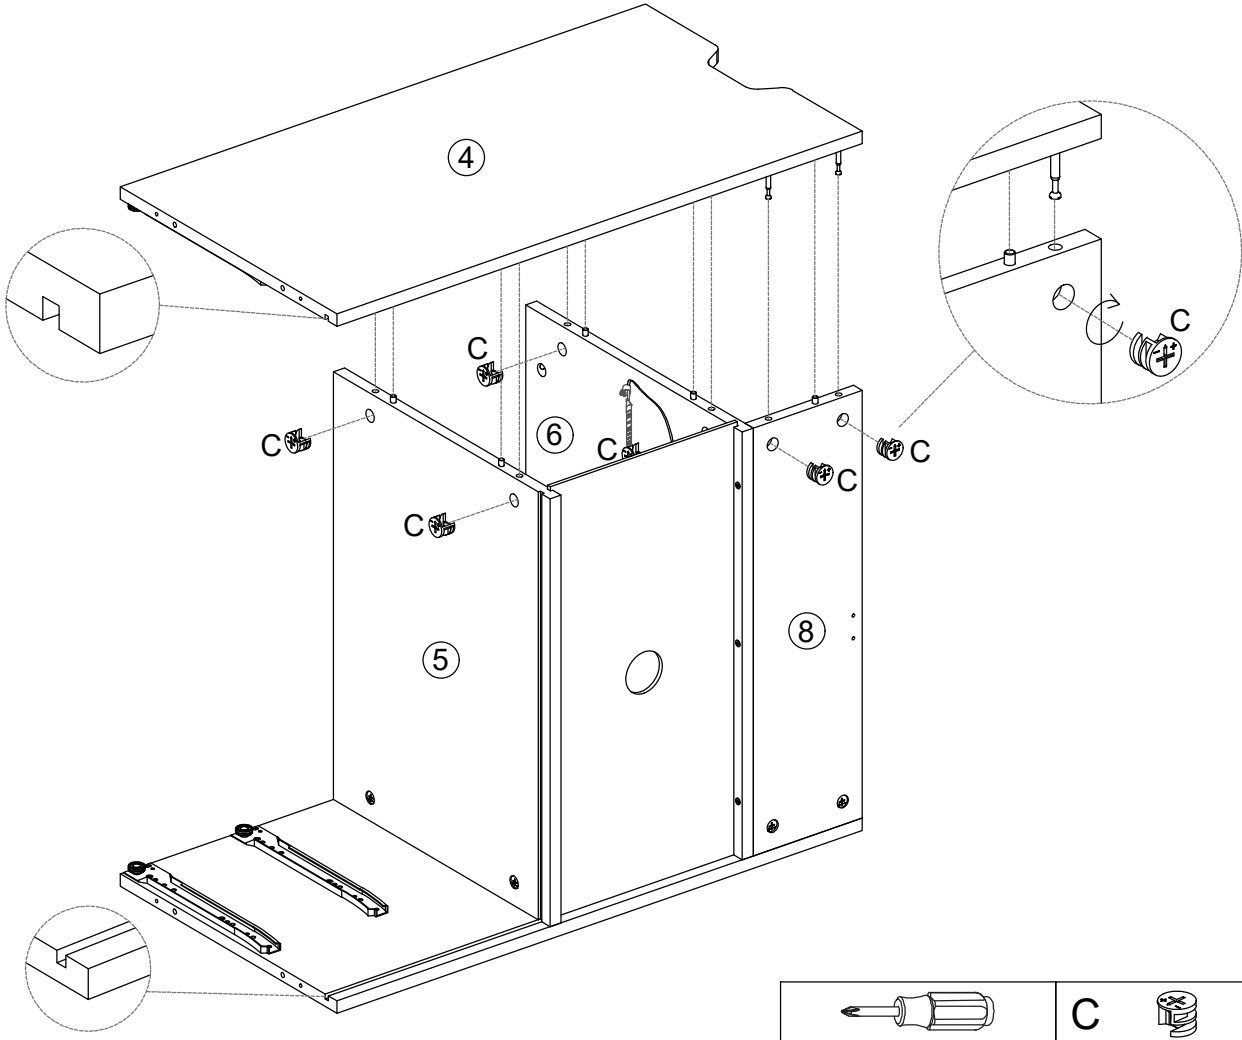


 C  x6

STEP 9

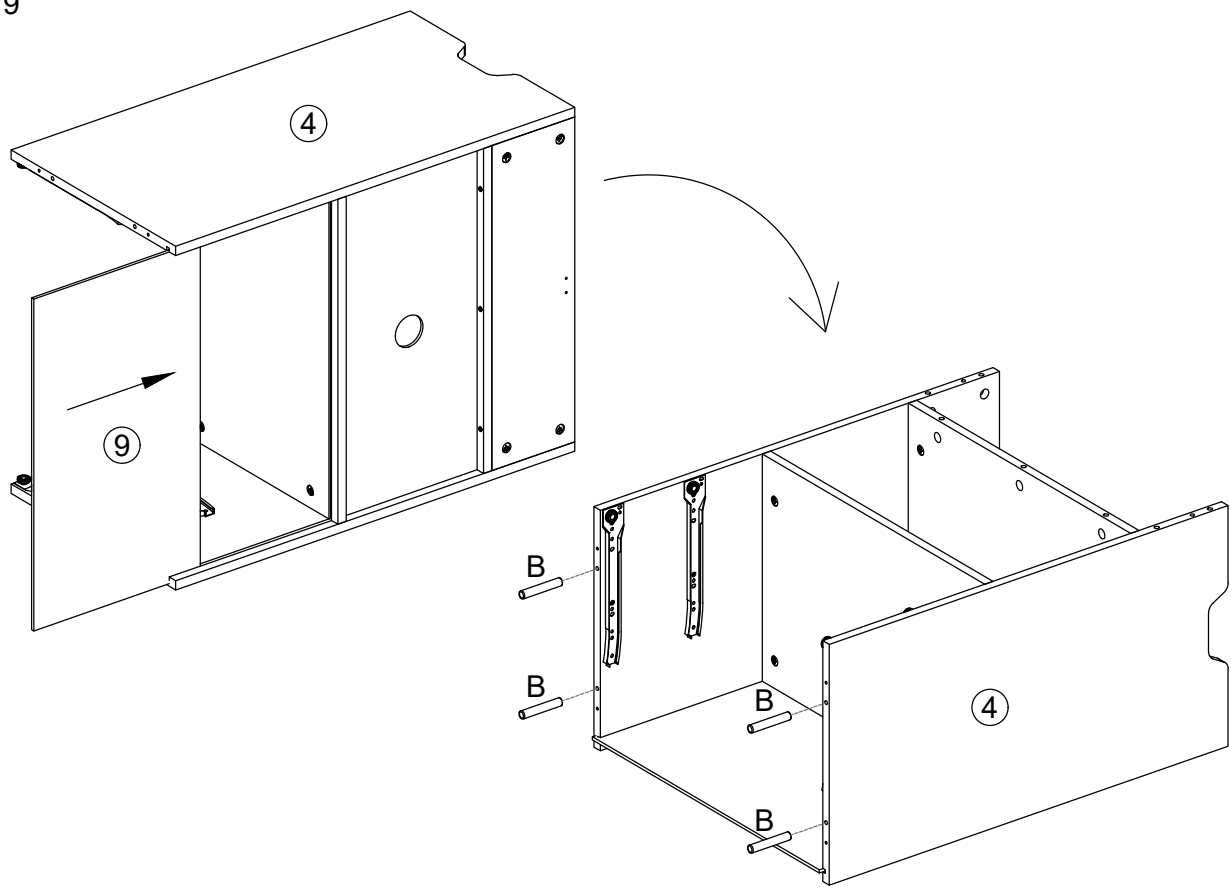


B  x4

STEP 10

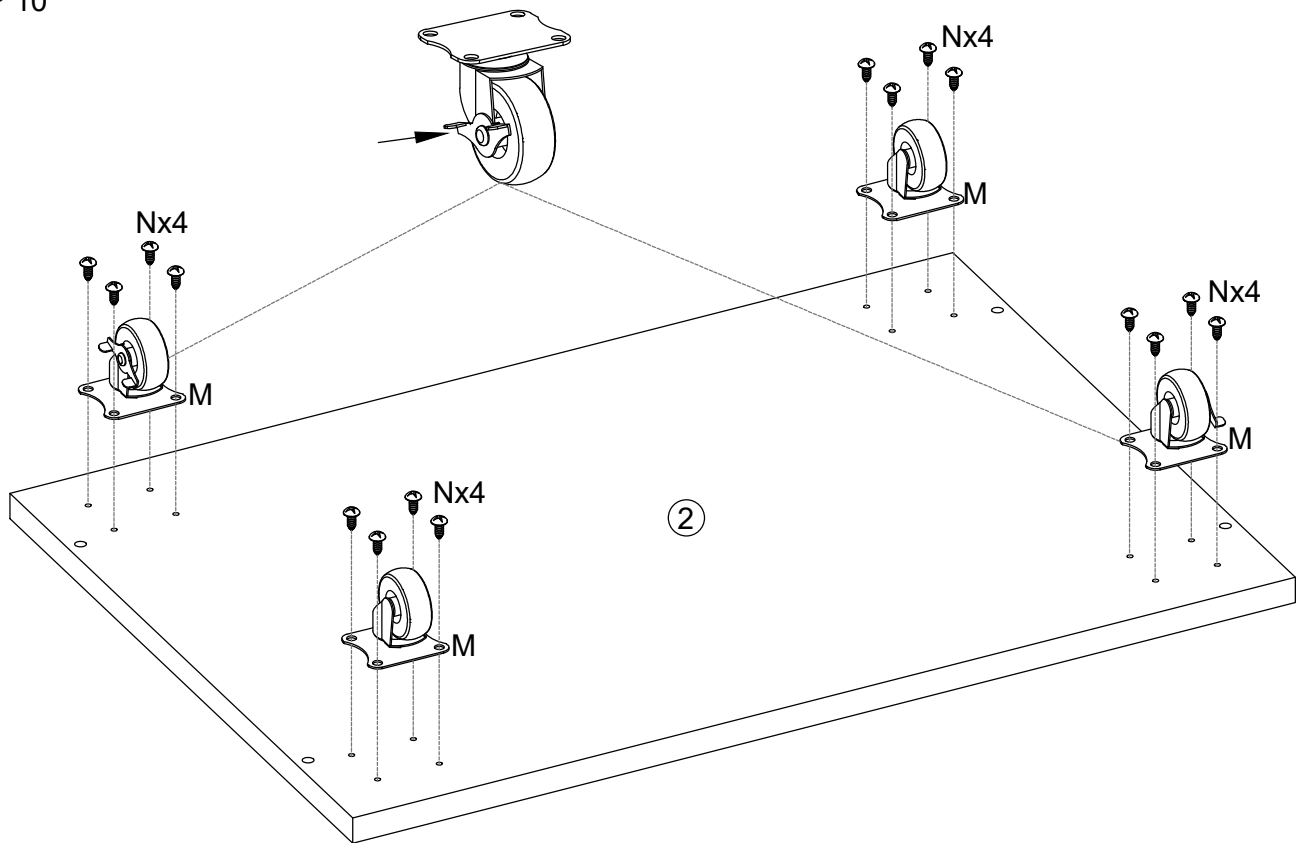


 M  x1 N  x16



STEP 11

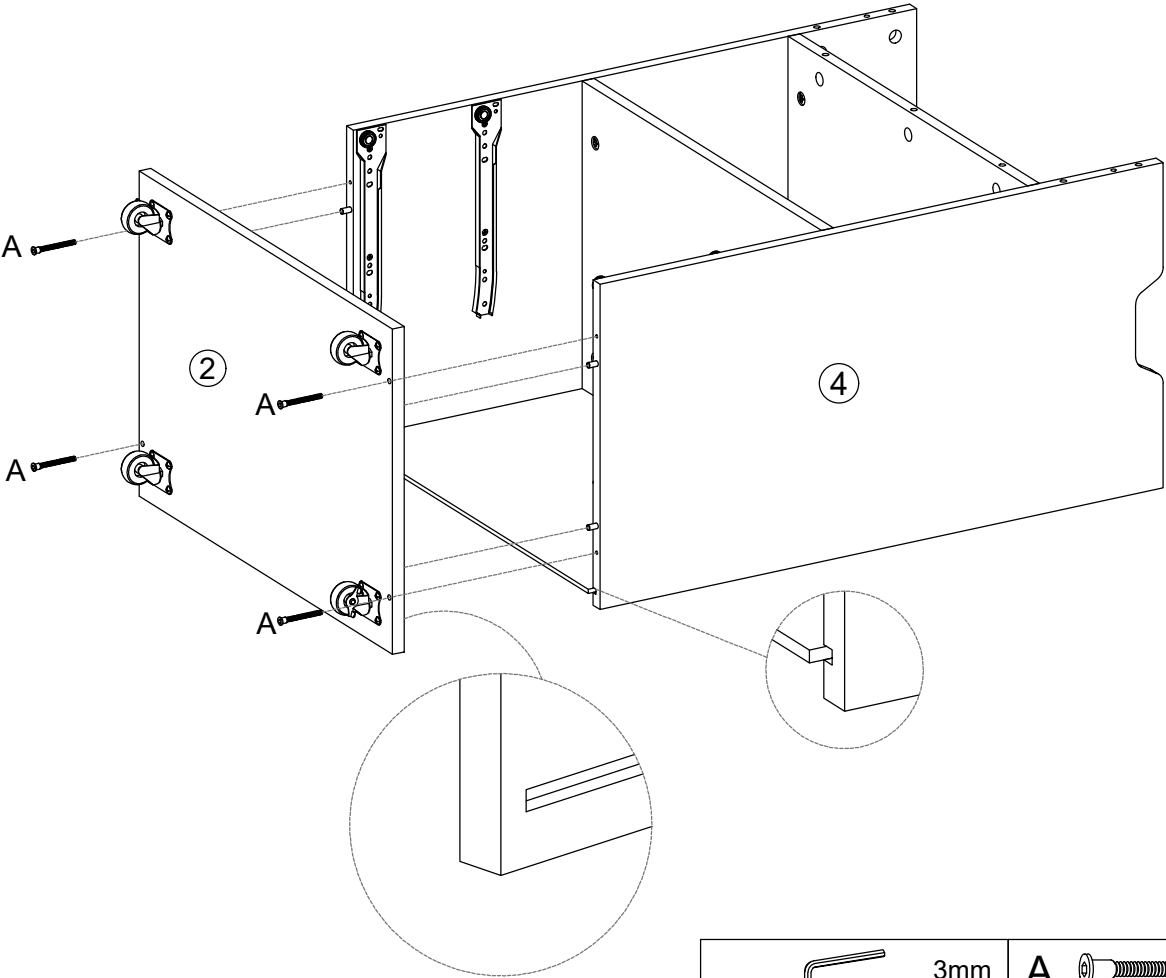


STEP 12

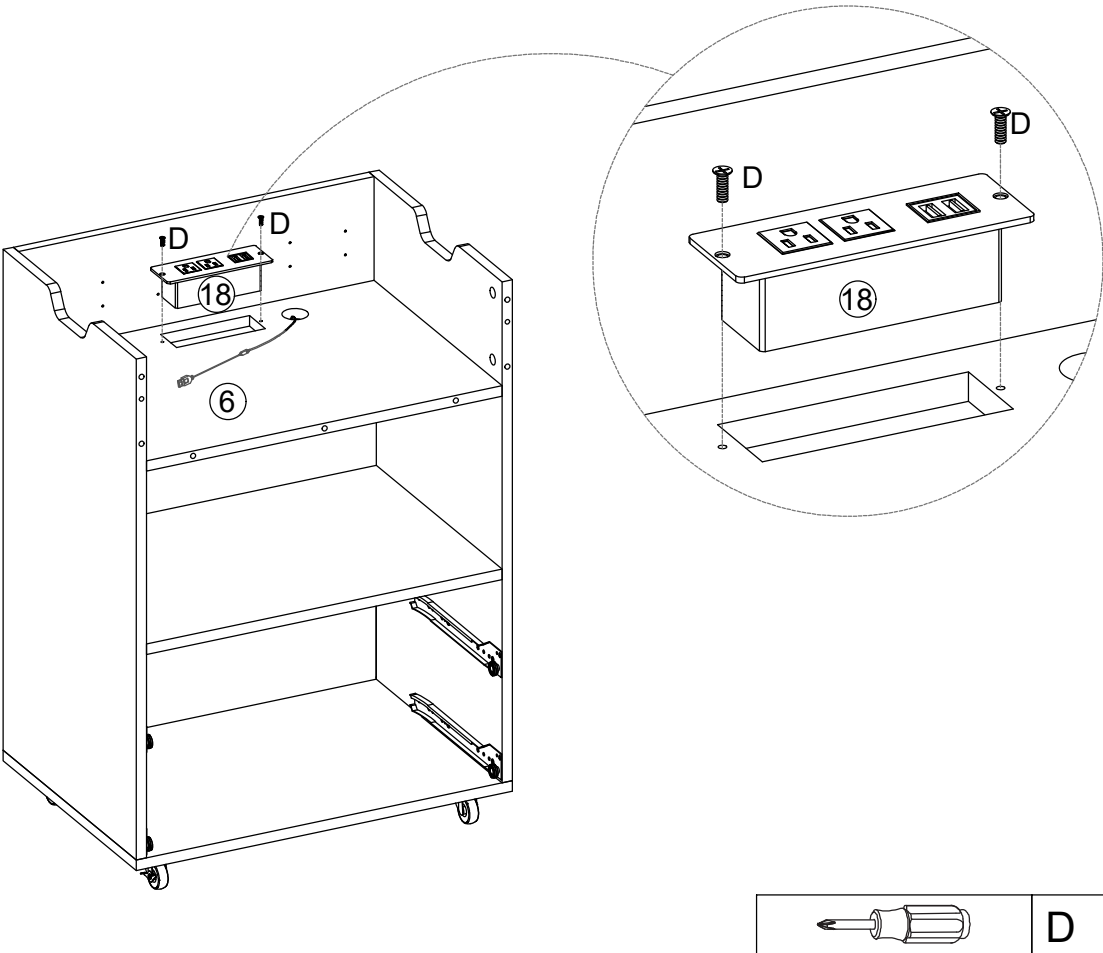


STEP 13

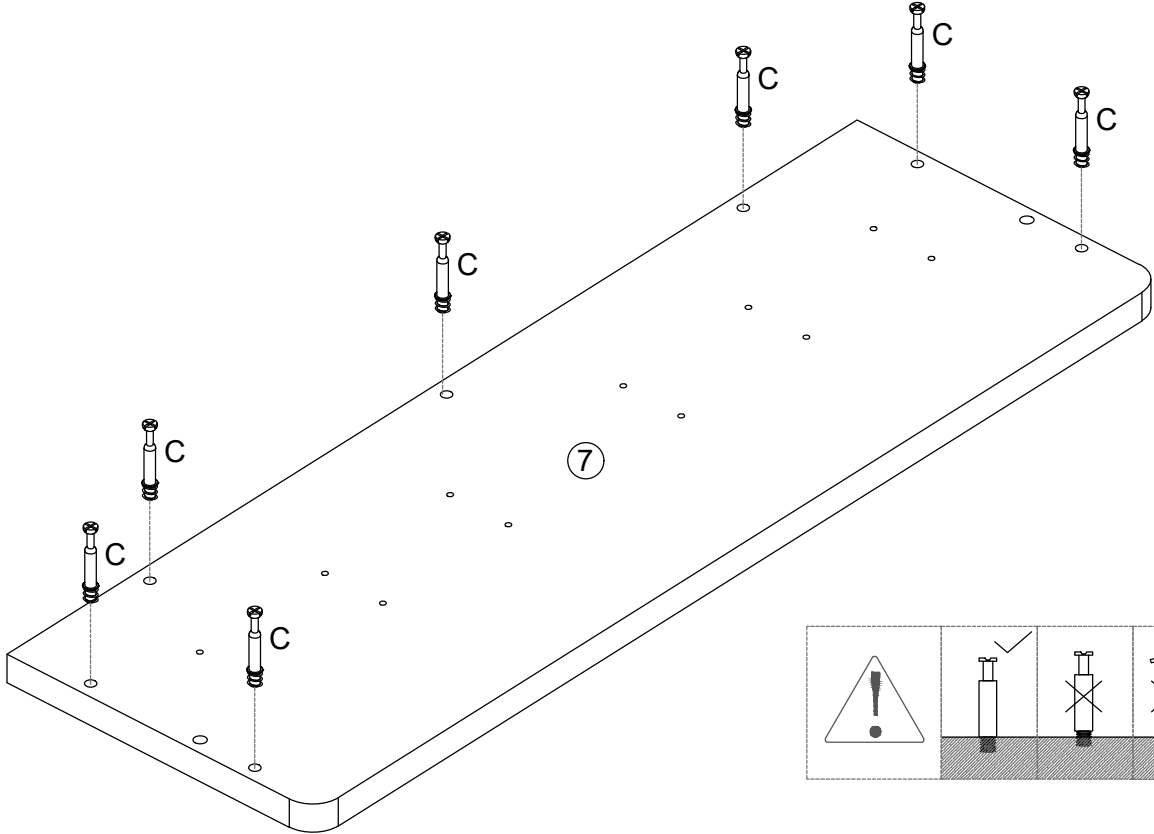

STEP 14

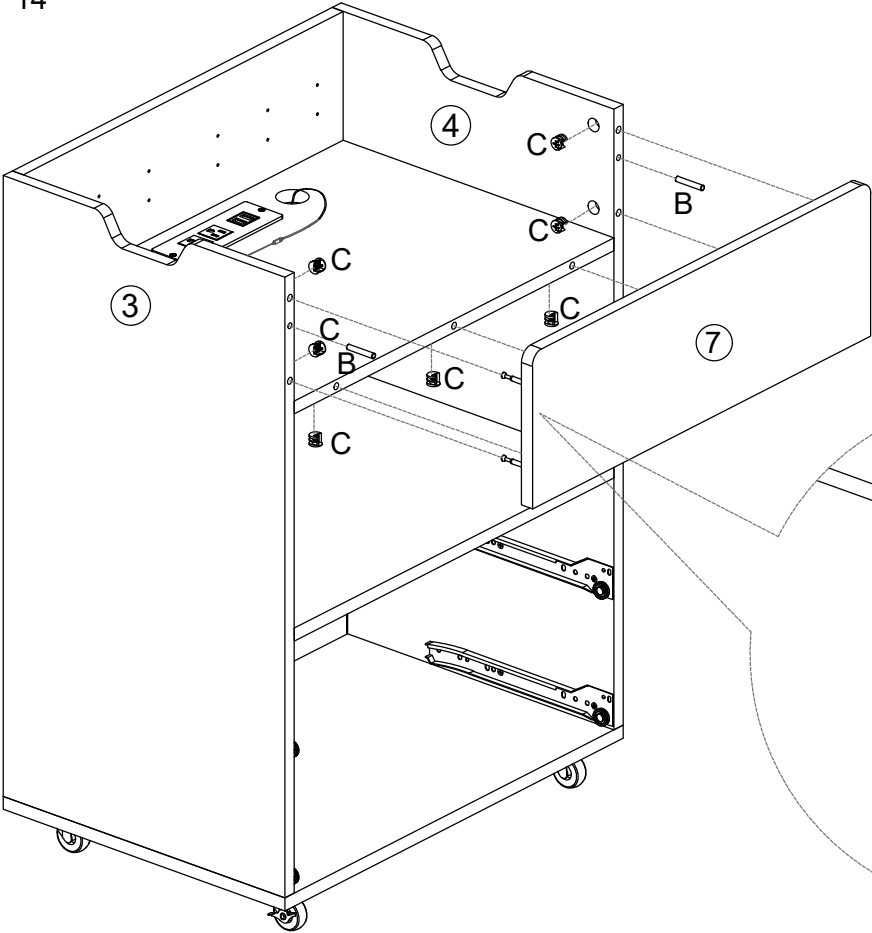


STEP 15

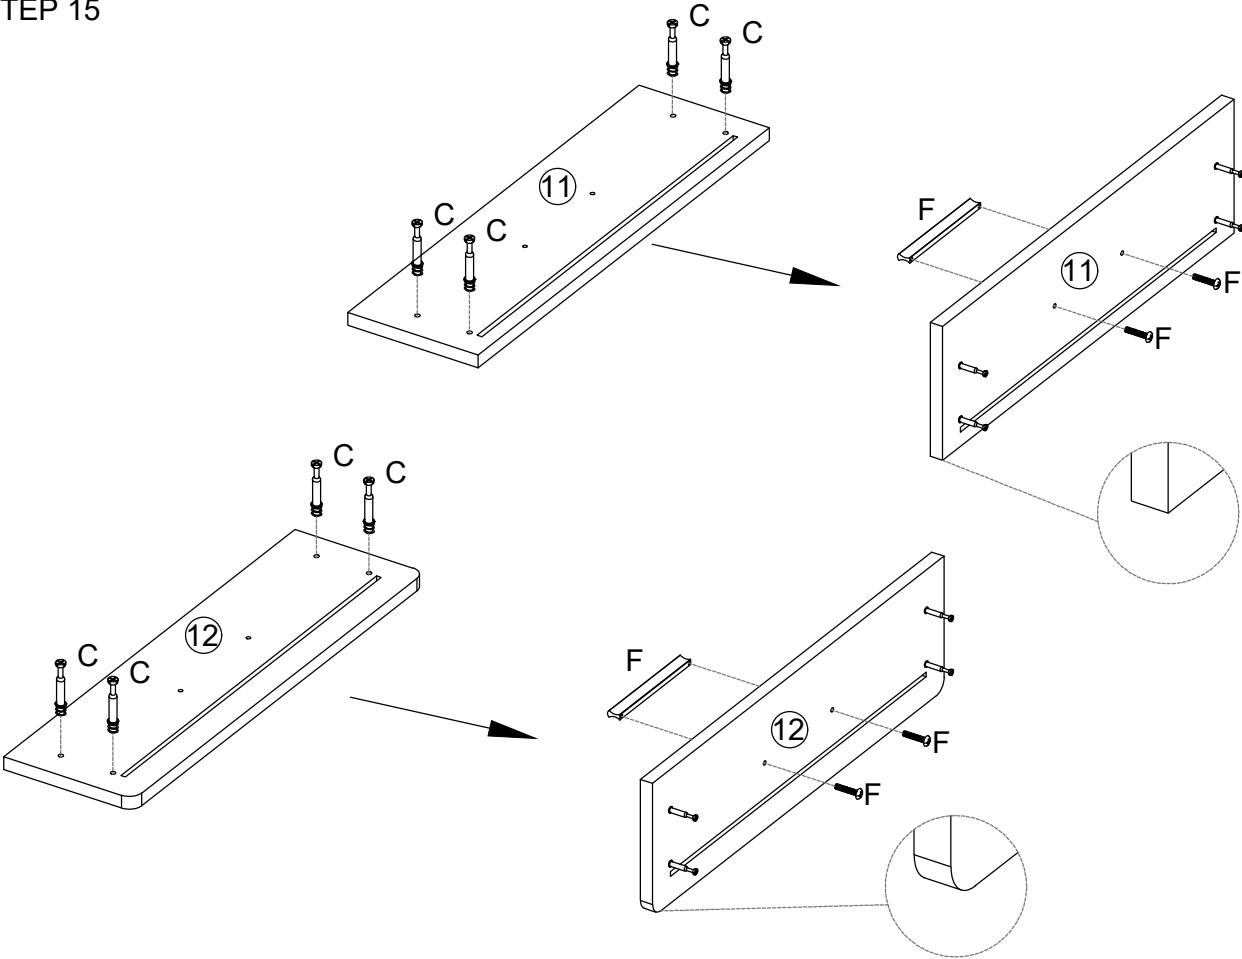


	C  x8	F  x2
---	--	--

STEP 16

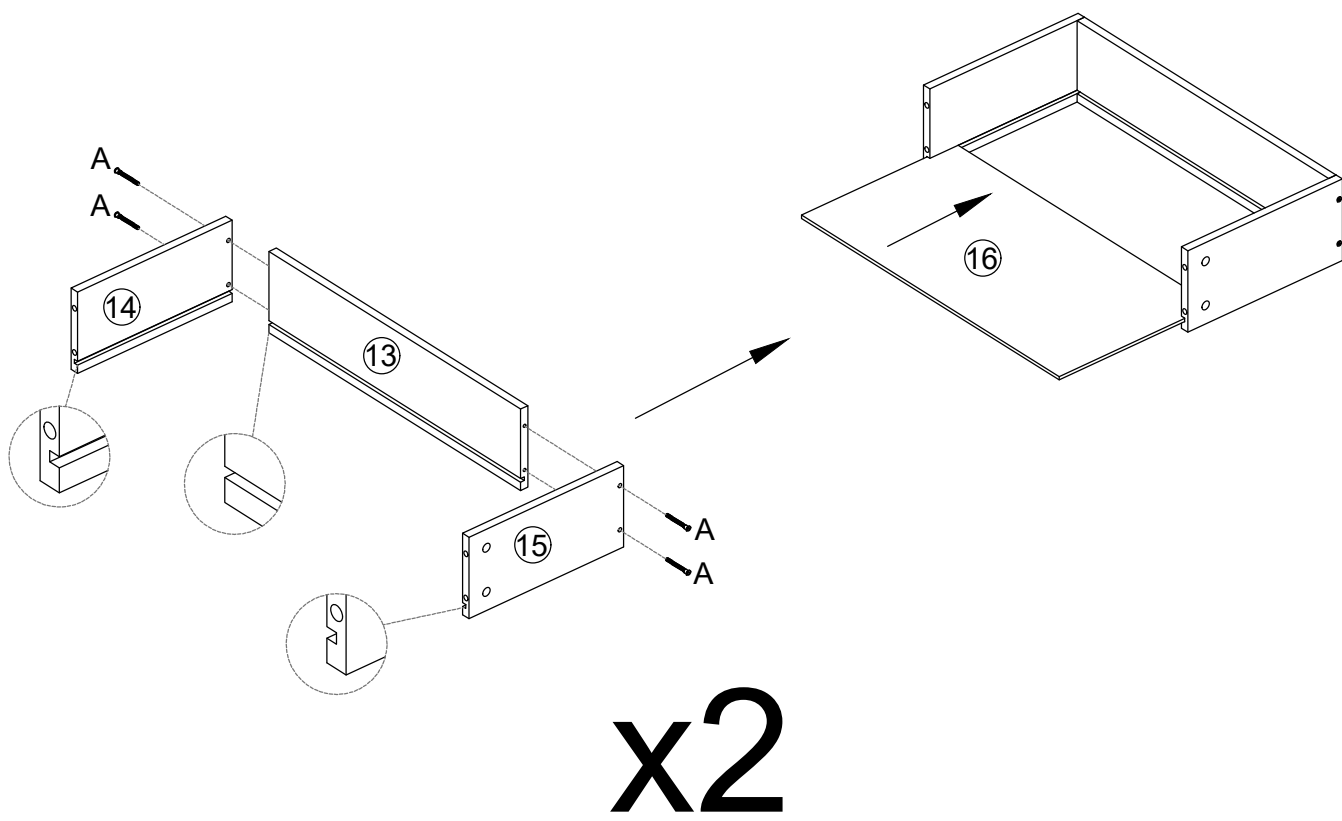


	3mm	A  x8
---	-----	--


STEP 17

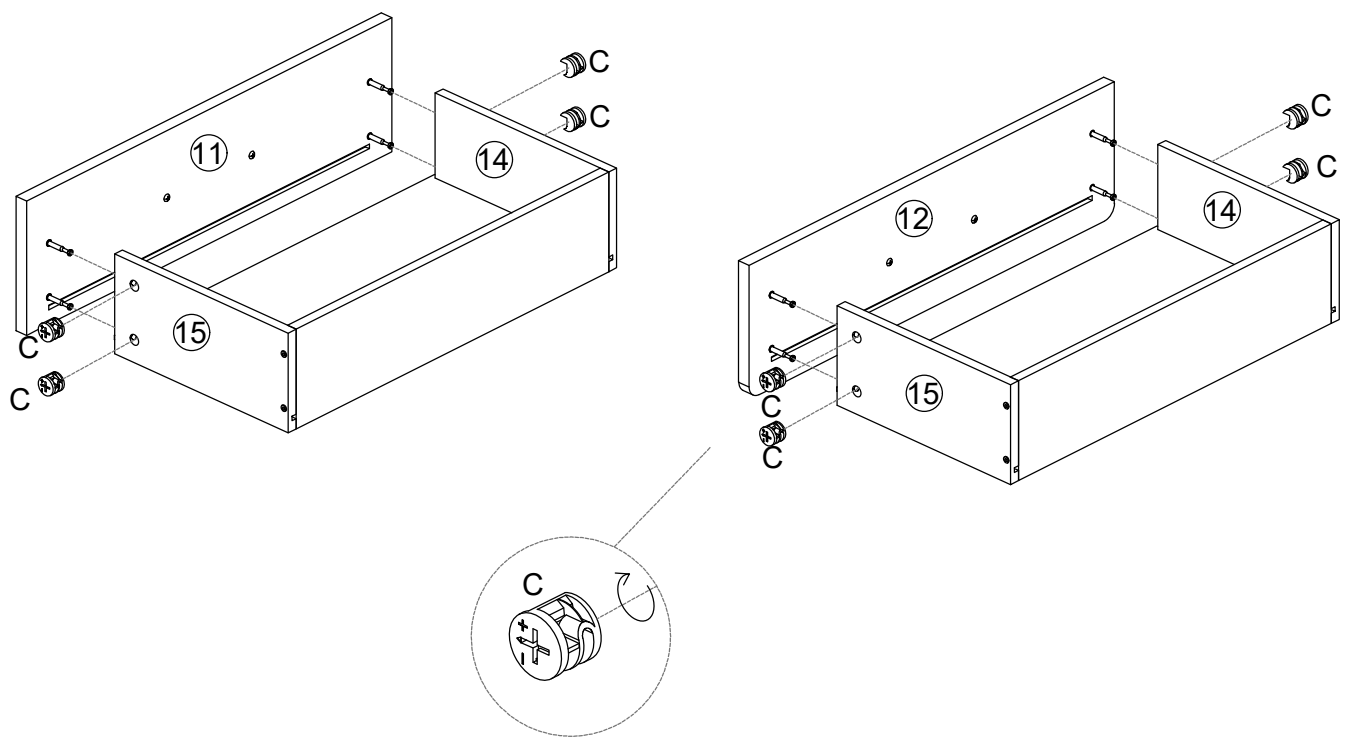


	C		x8
---	---	---	----

STEP 18

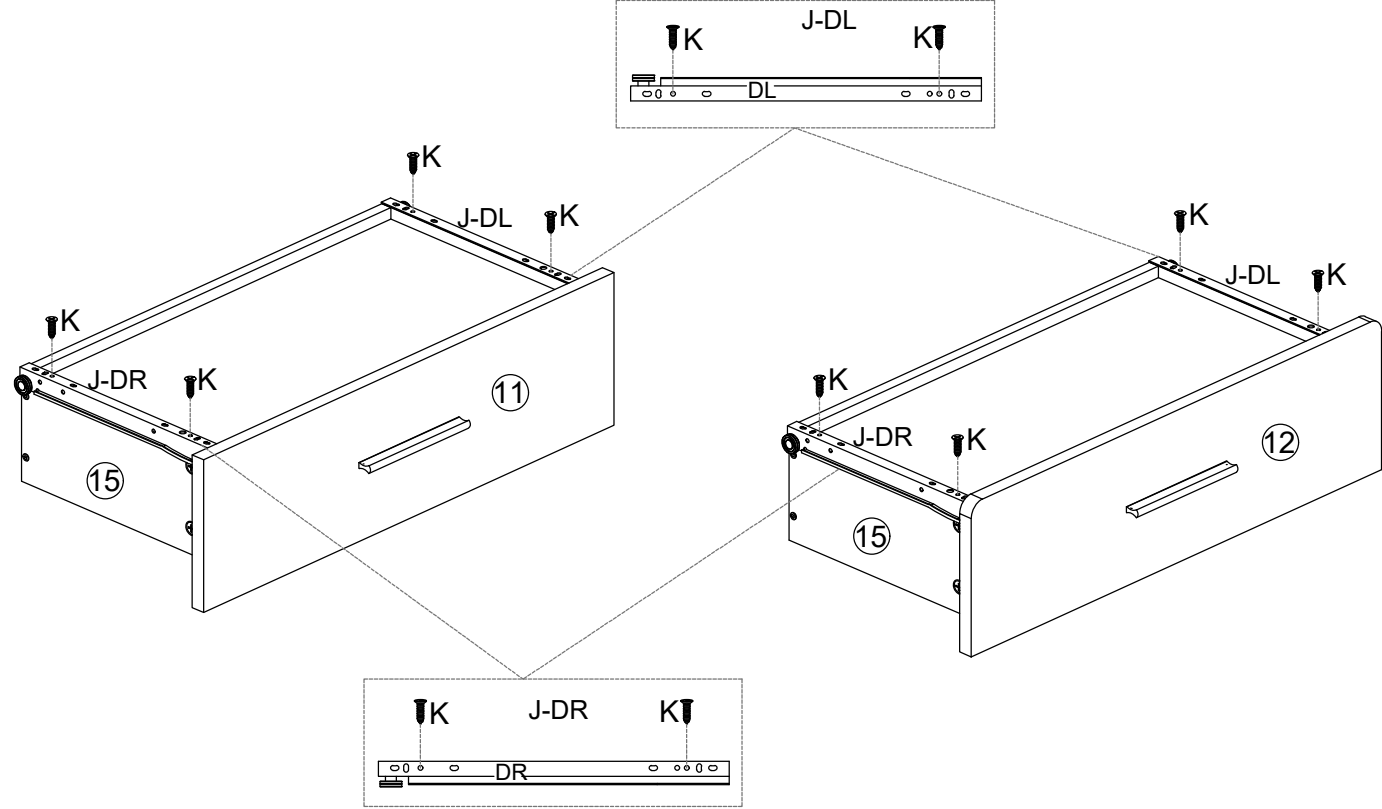

	J		x2	K		x8
---	---	---	----	---	---	----


STEP 19

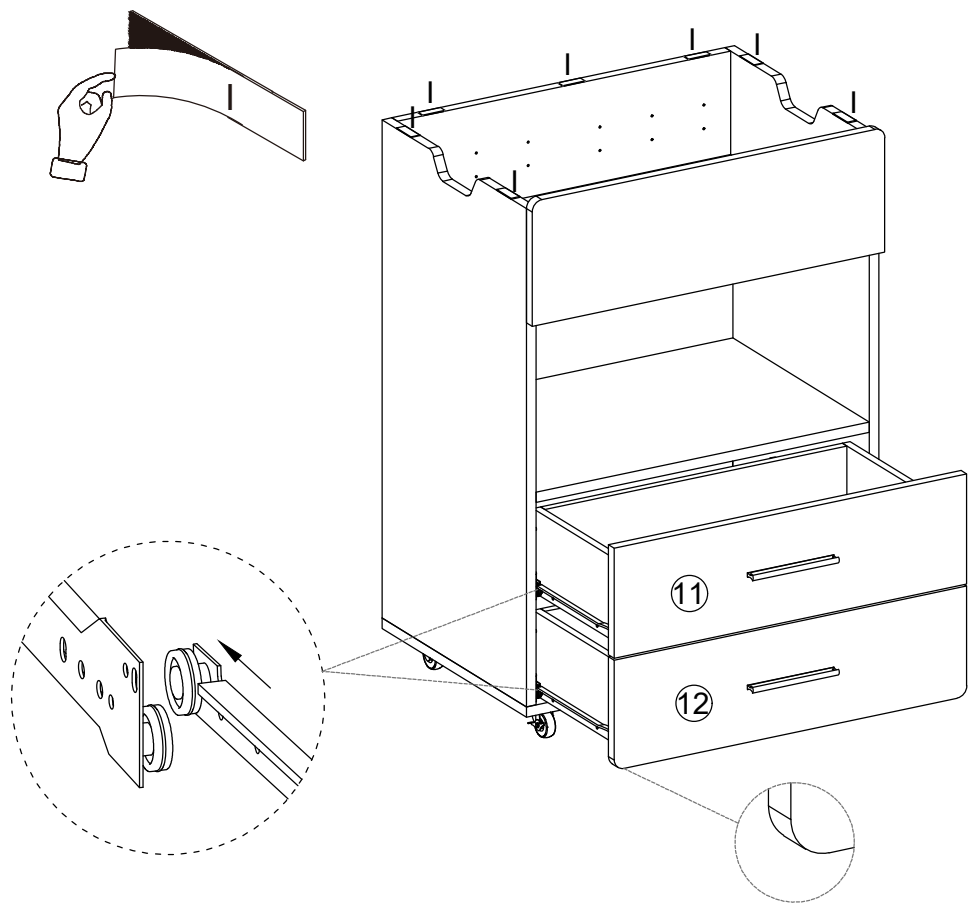

I  x7

STEP 20


Hardware 17 Enlarged view

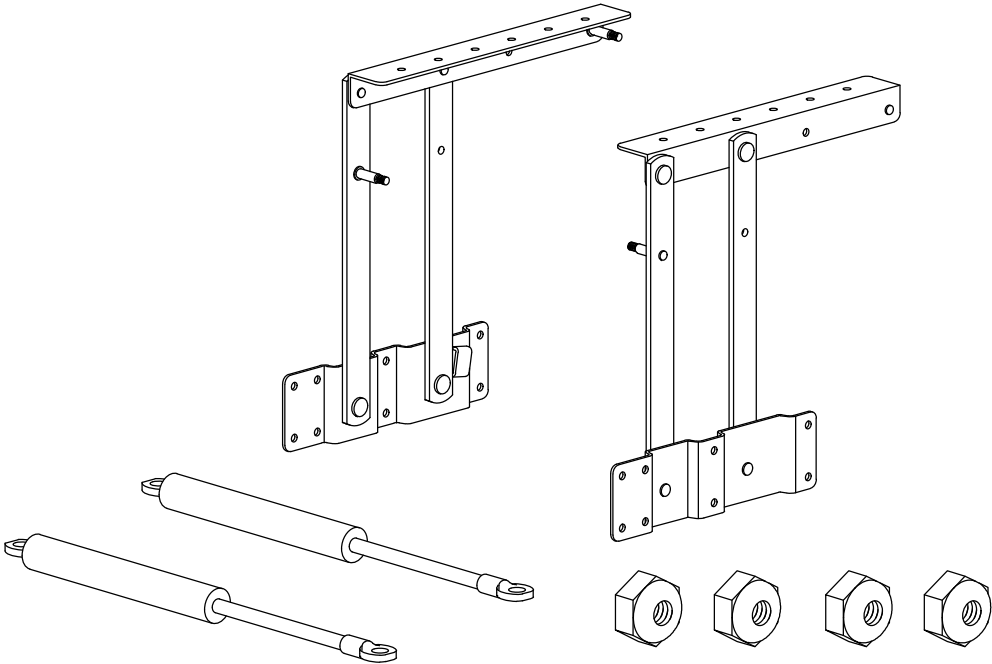




STEP 21



Direction 1



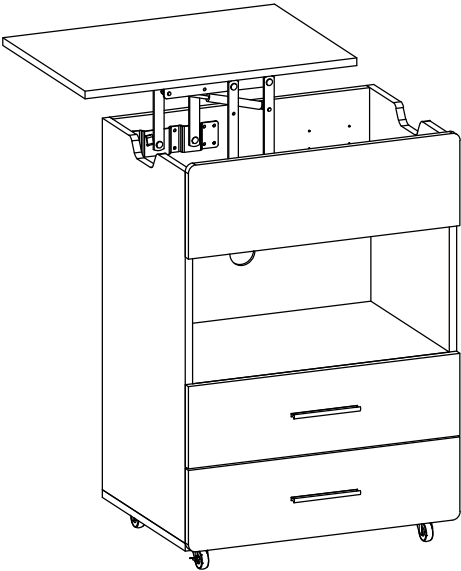


Direction 2

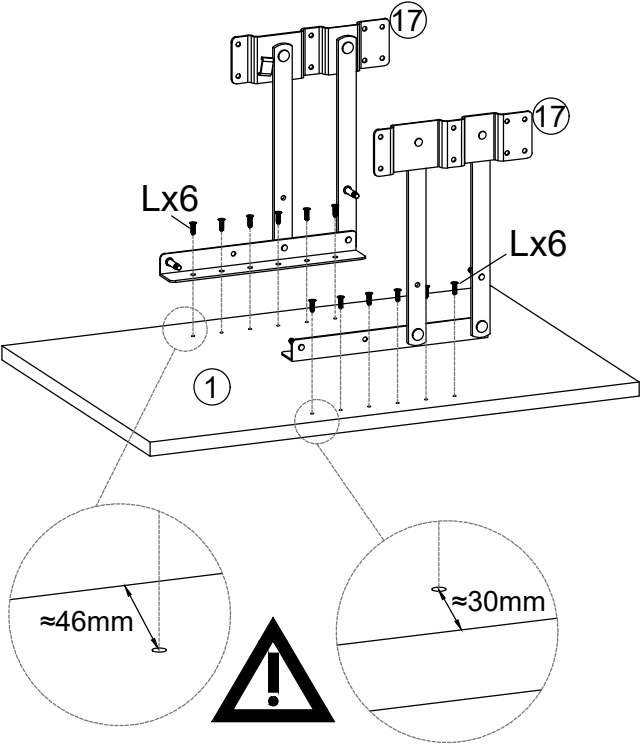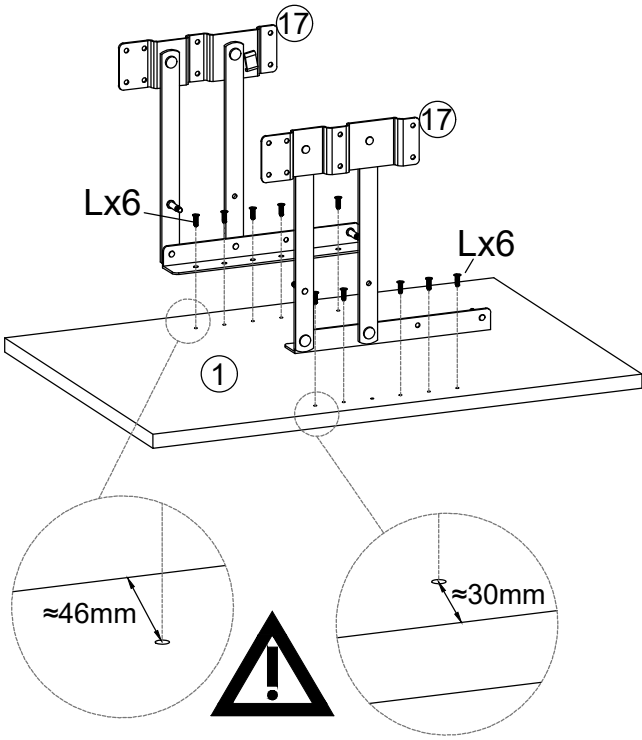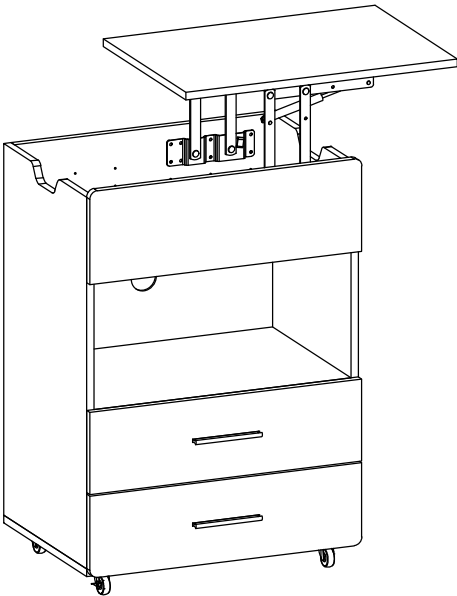

Choose the desired direction for installing this step

STEP 22

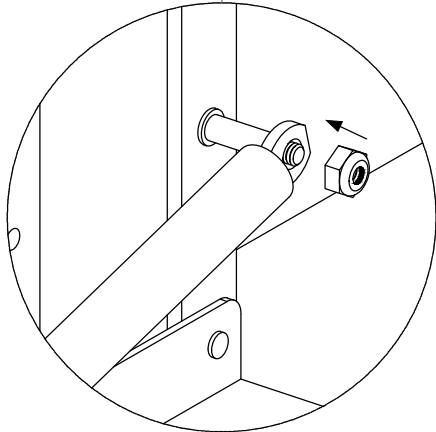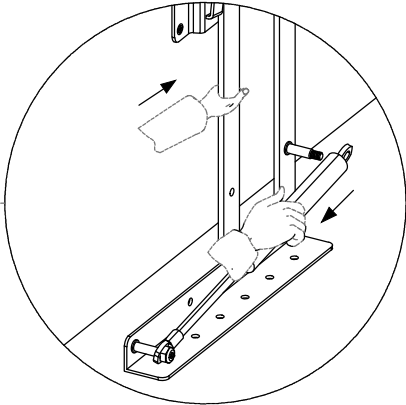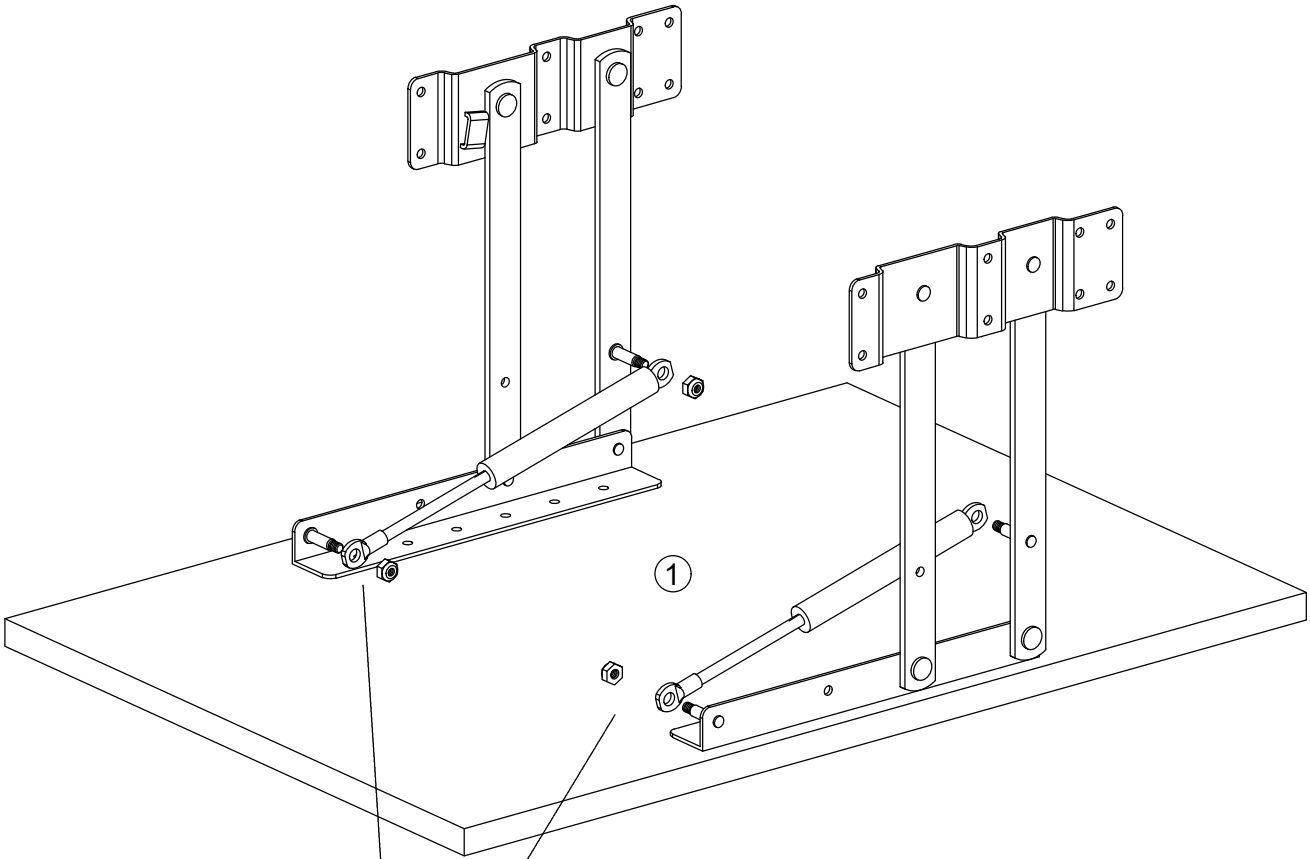

STEP 23




This step requires two people






Direction 2









Direction 1

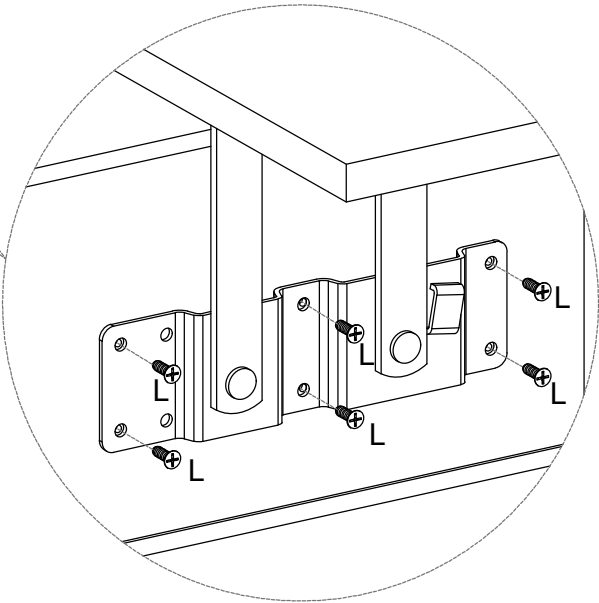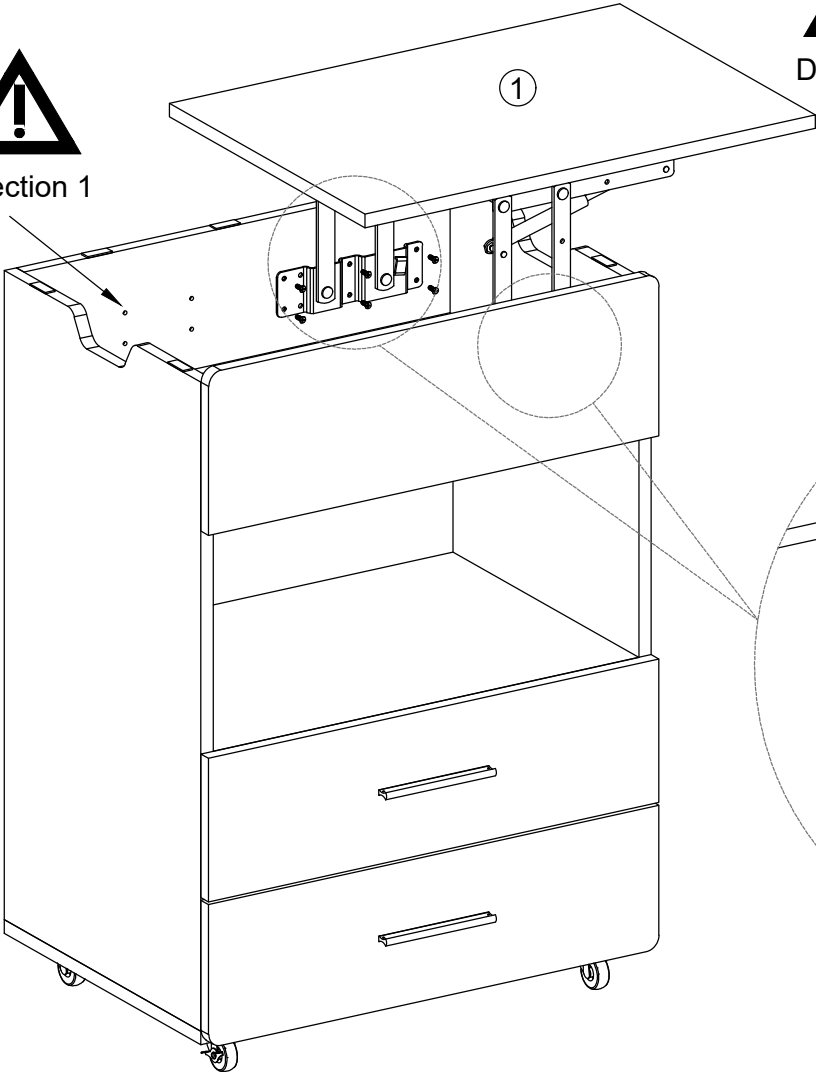

STEP 24

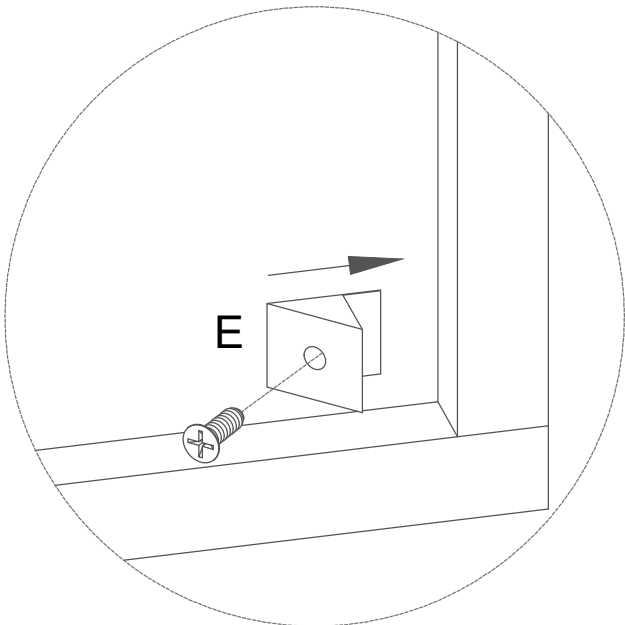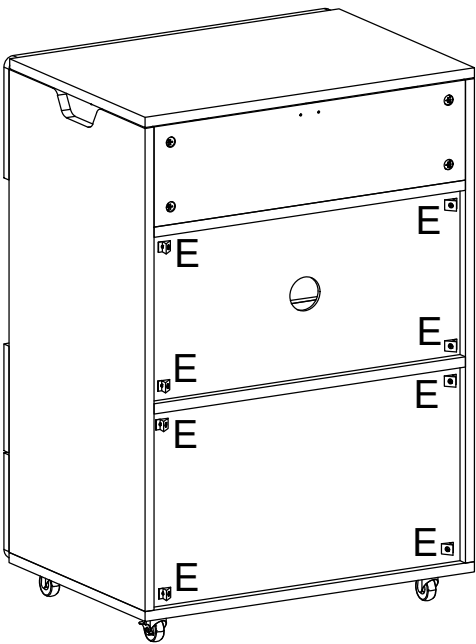

STEP 25

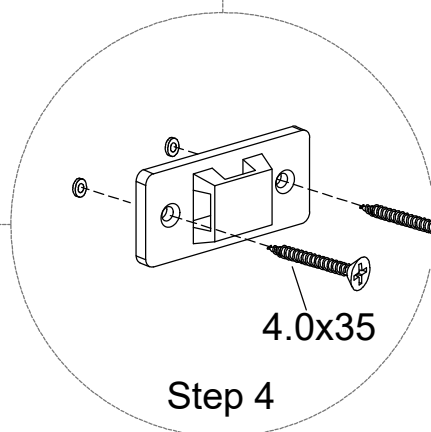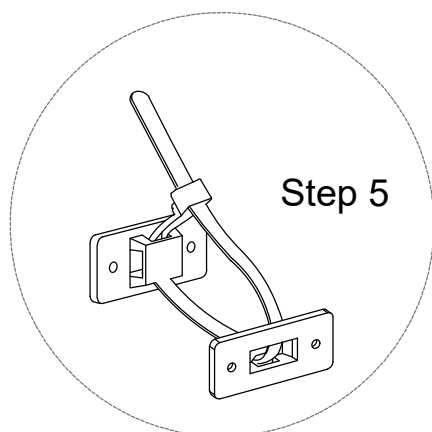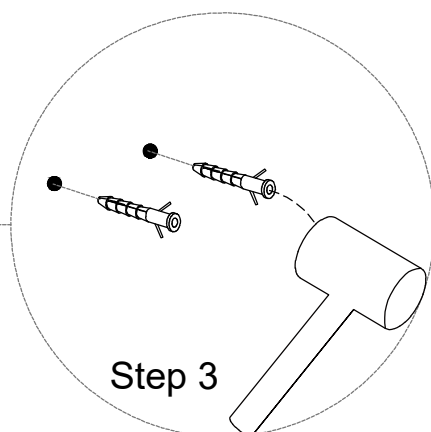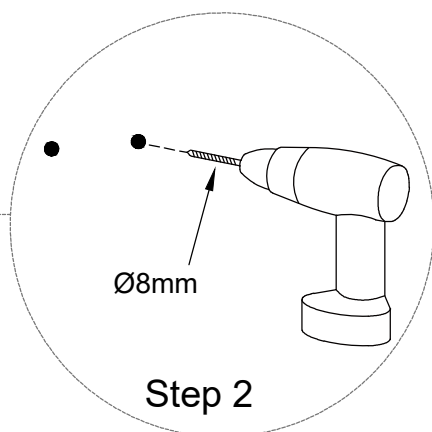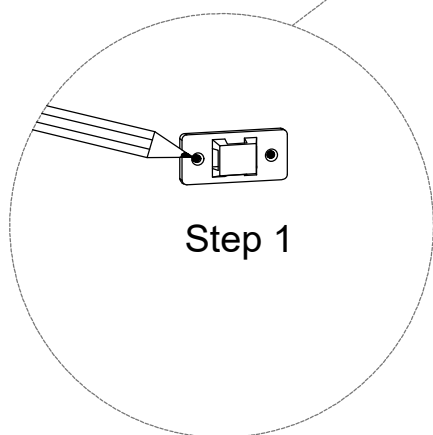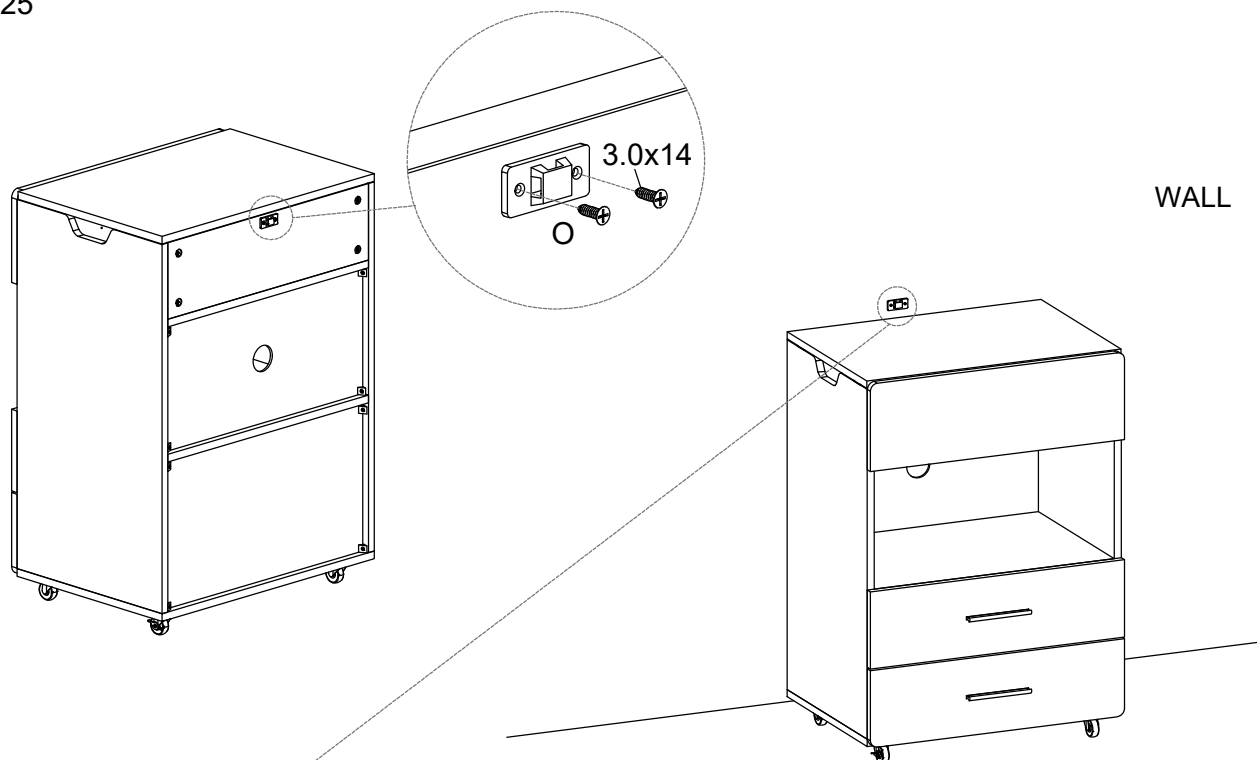

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

Installation Completed

